


M5A78L-M LX Repair Guide


04/07/2011

Leilei52_Chen

CSC-GRMA

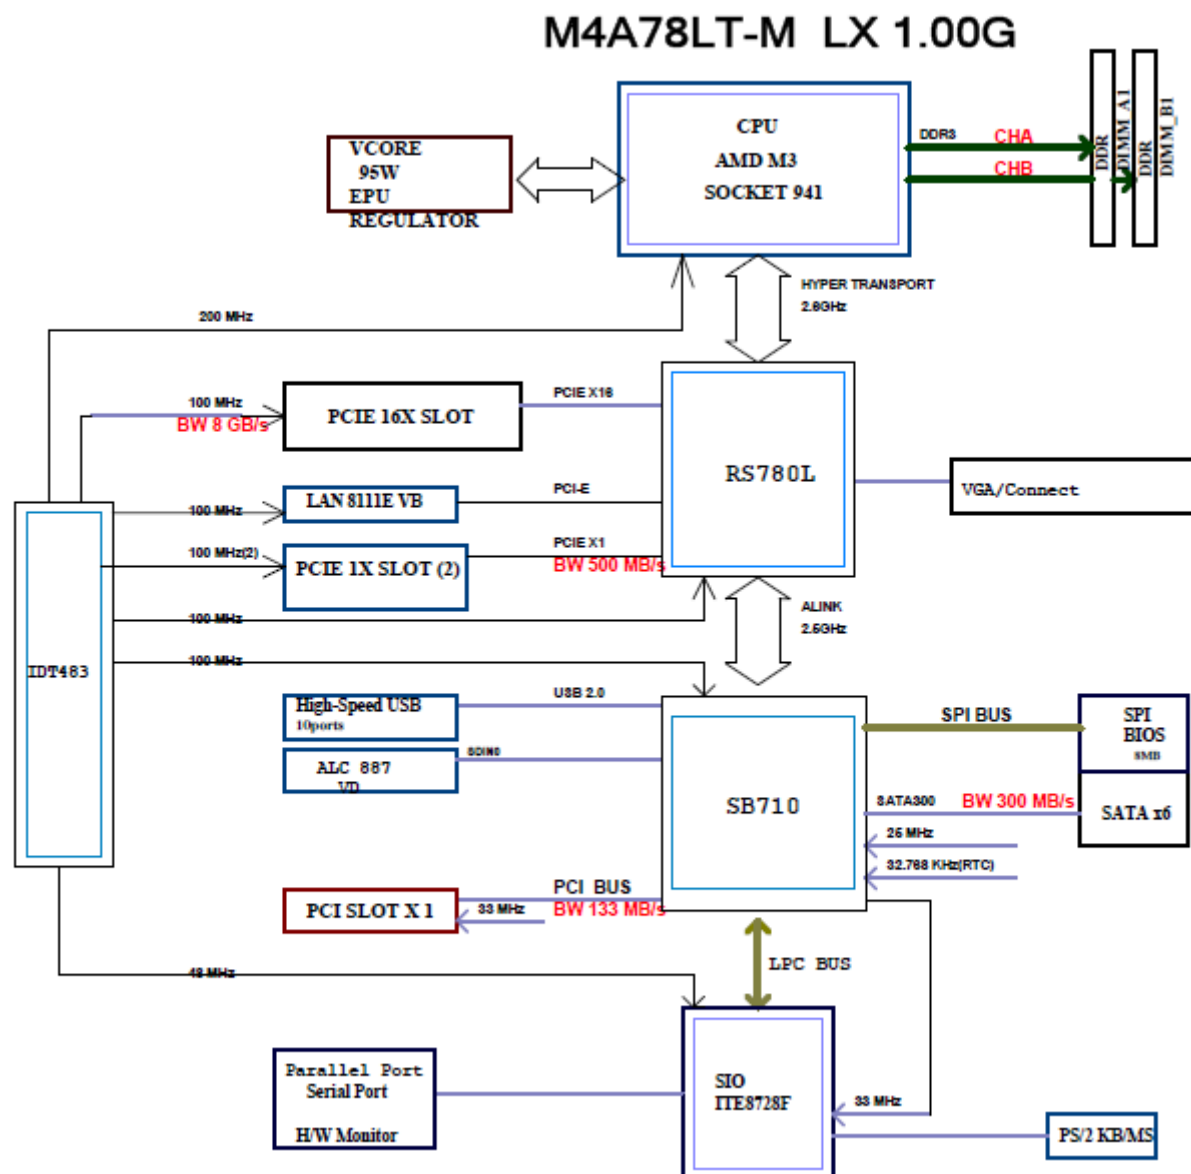


POWER FLOW

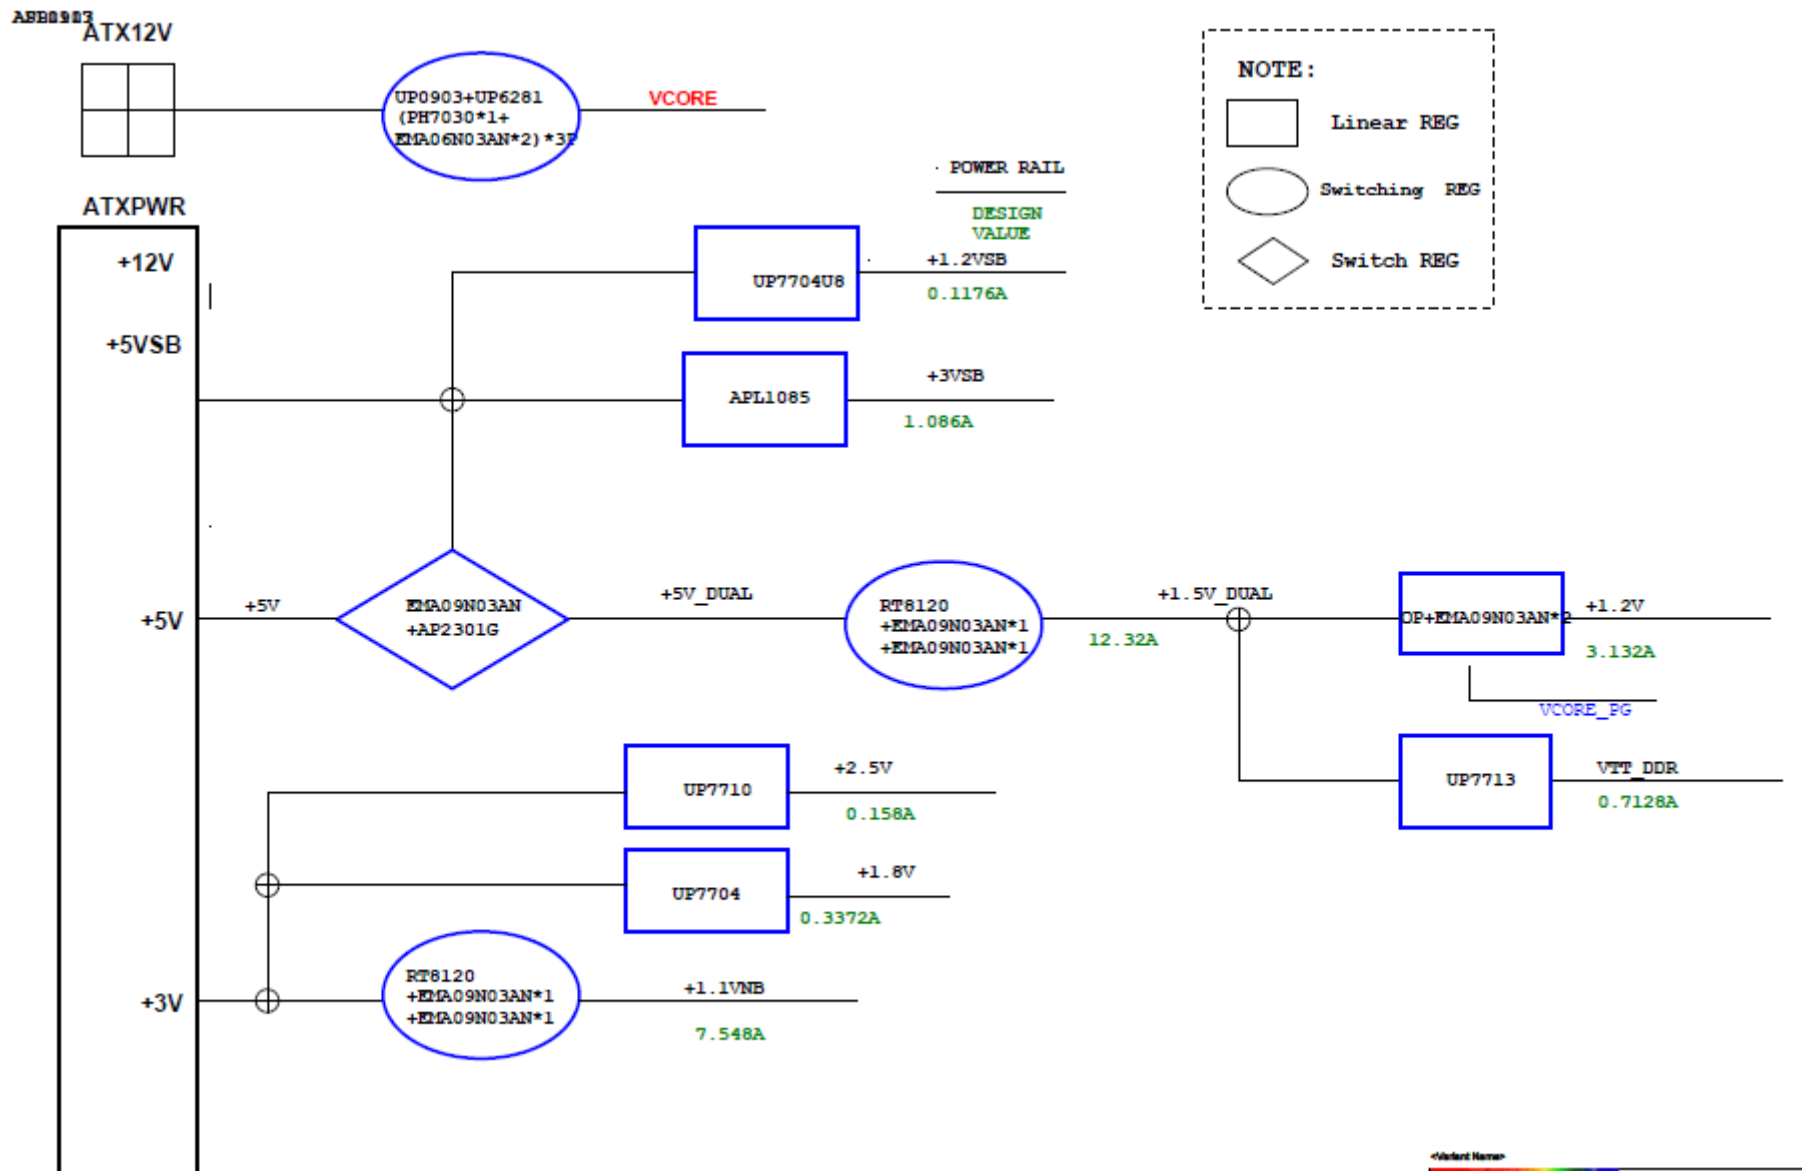


<Verdict Name>

POWER ON SEQUENCE

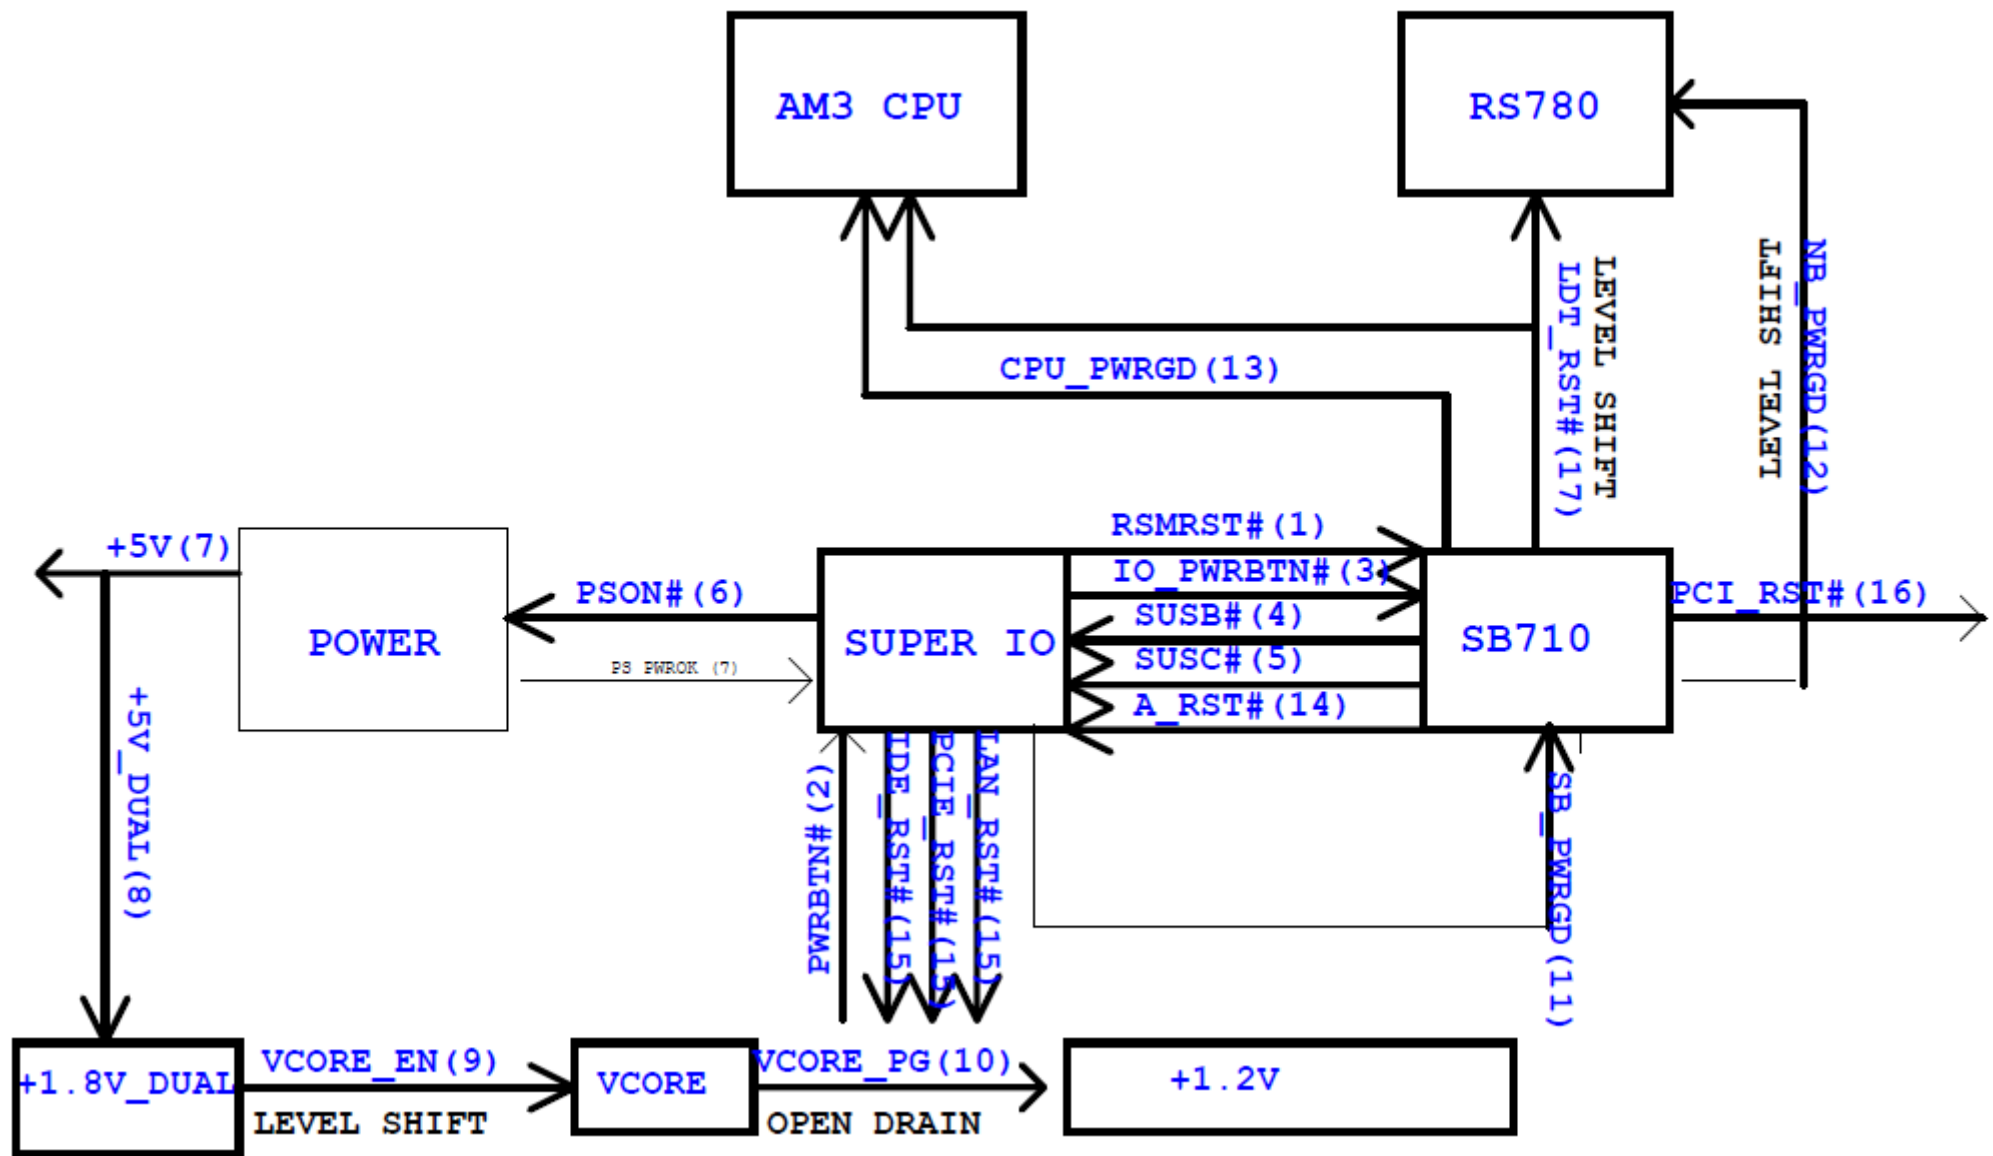


Frequency Flow

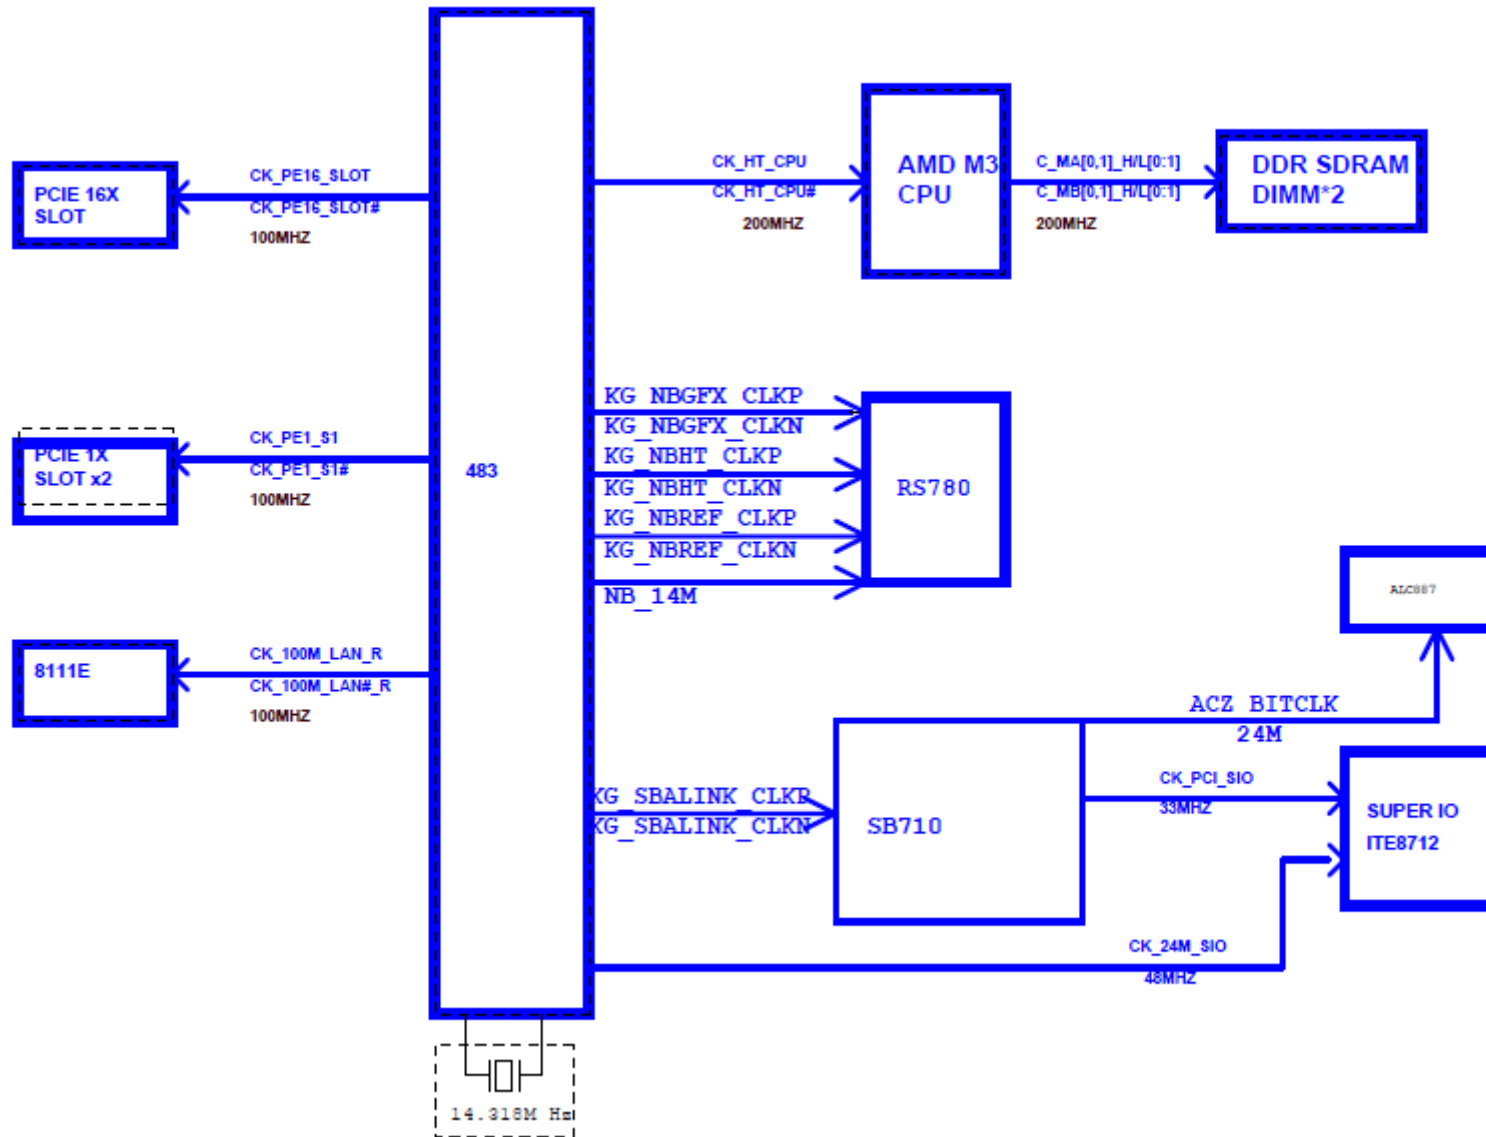

Voltage Measure Point

Pink number is the GND diode resistance (without any part on MB)multimeter type DH-1240

multi meter "VΩ mA" port touch here

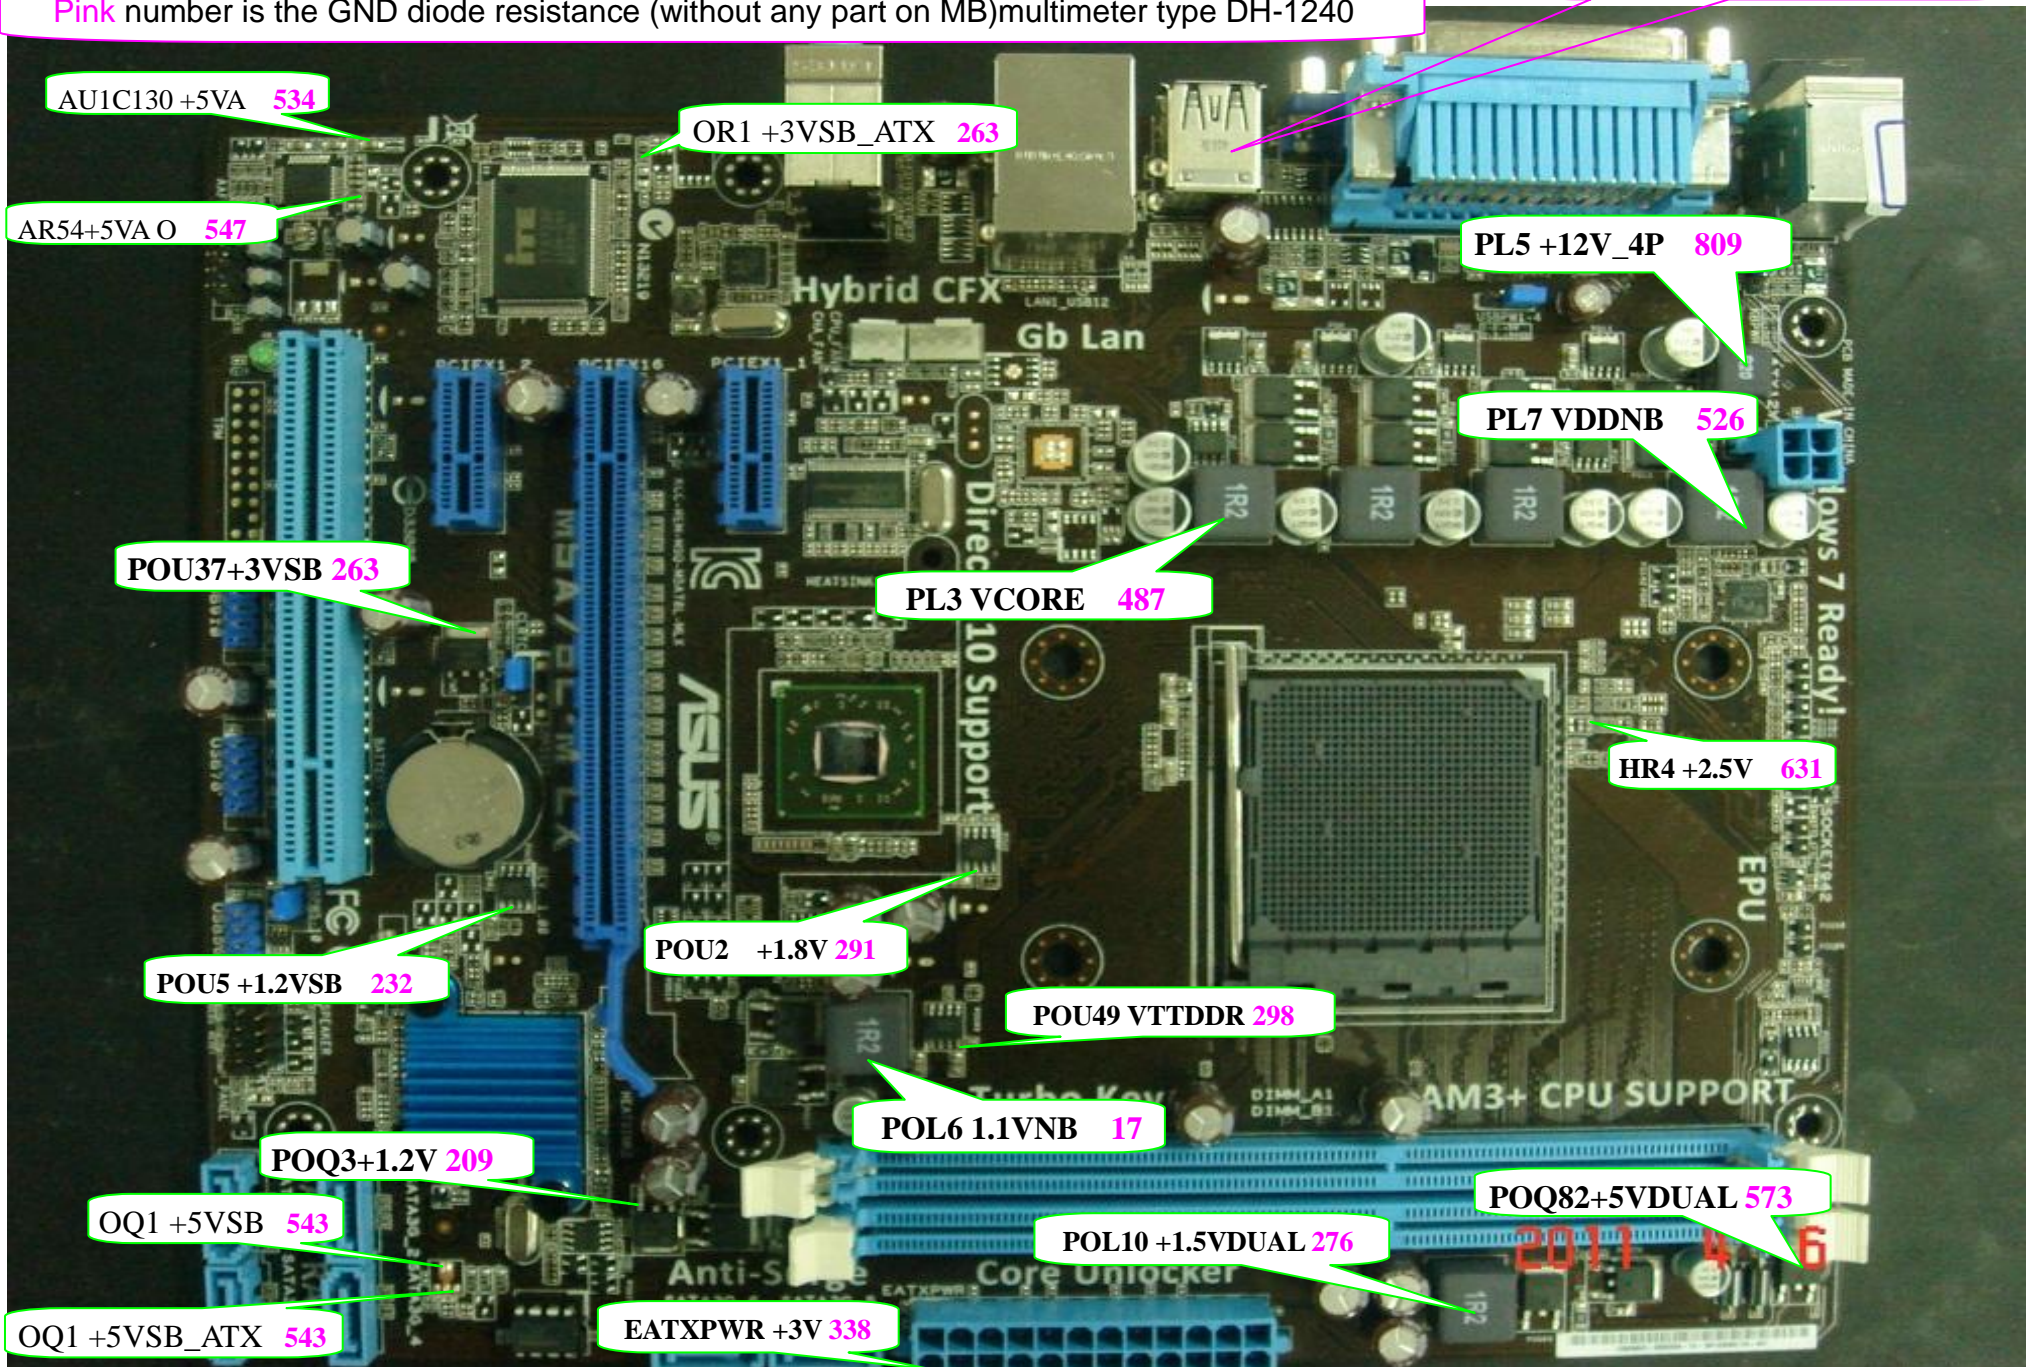

Signal Measure Point

