



N76VM Repair Guide

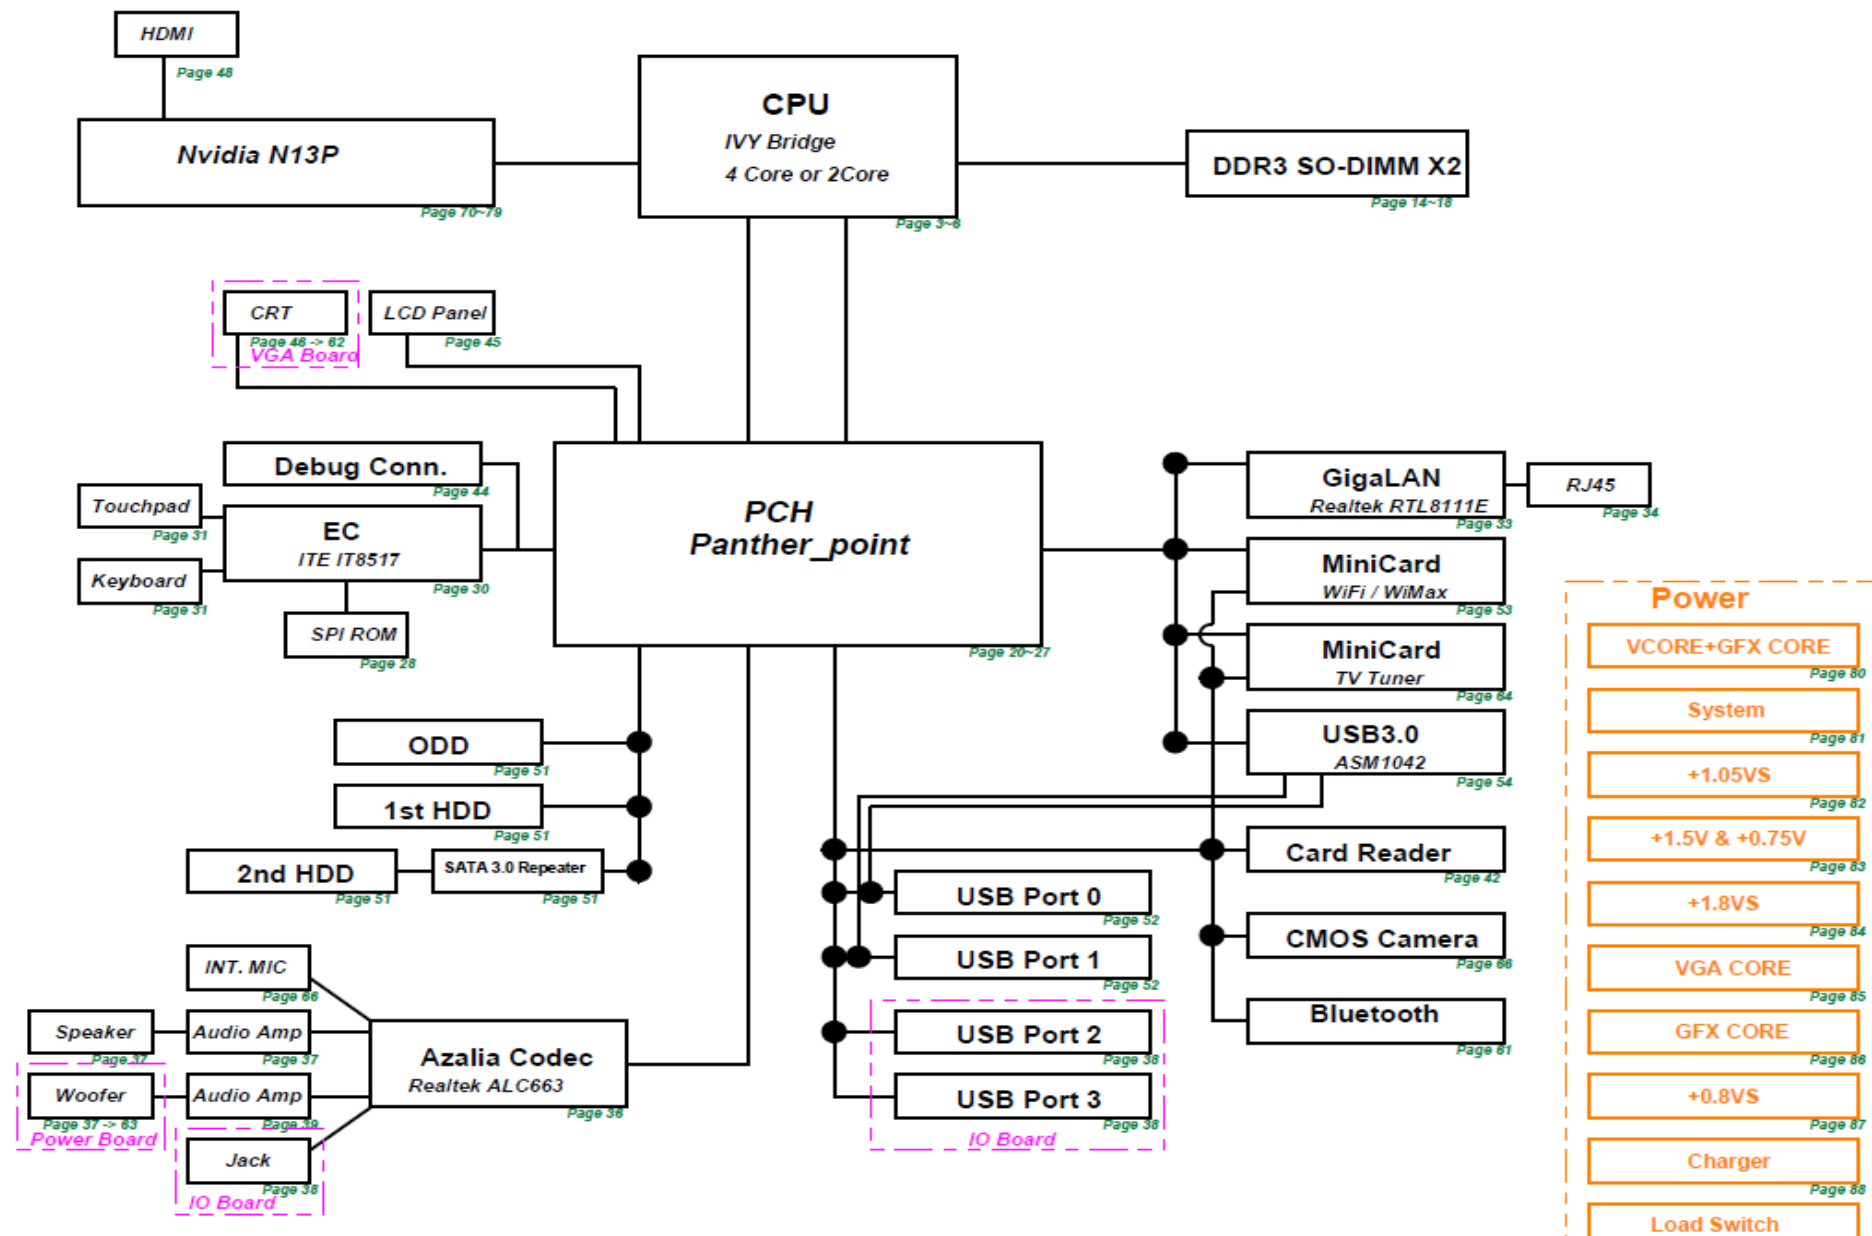

Voltage & Signal Measure Point TOP

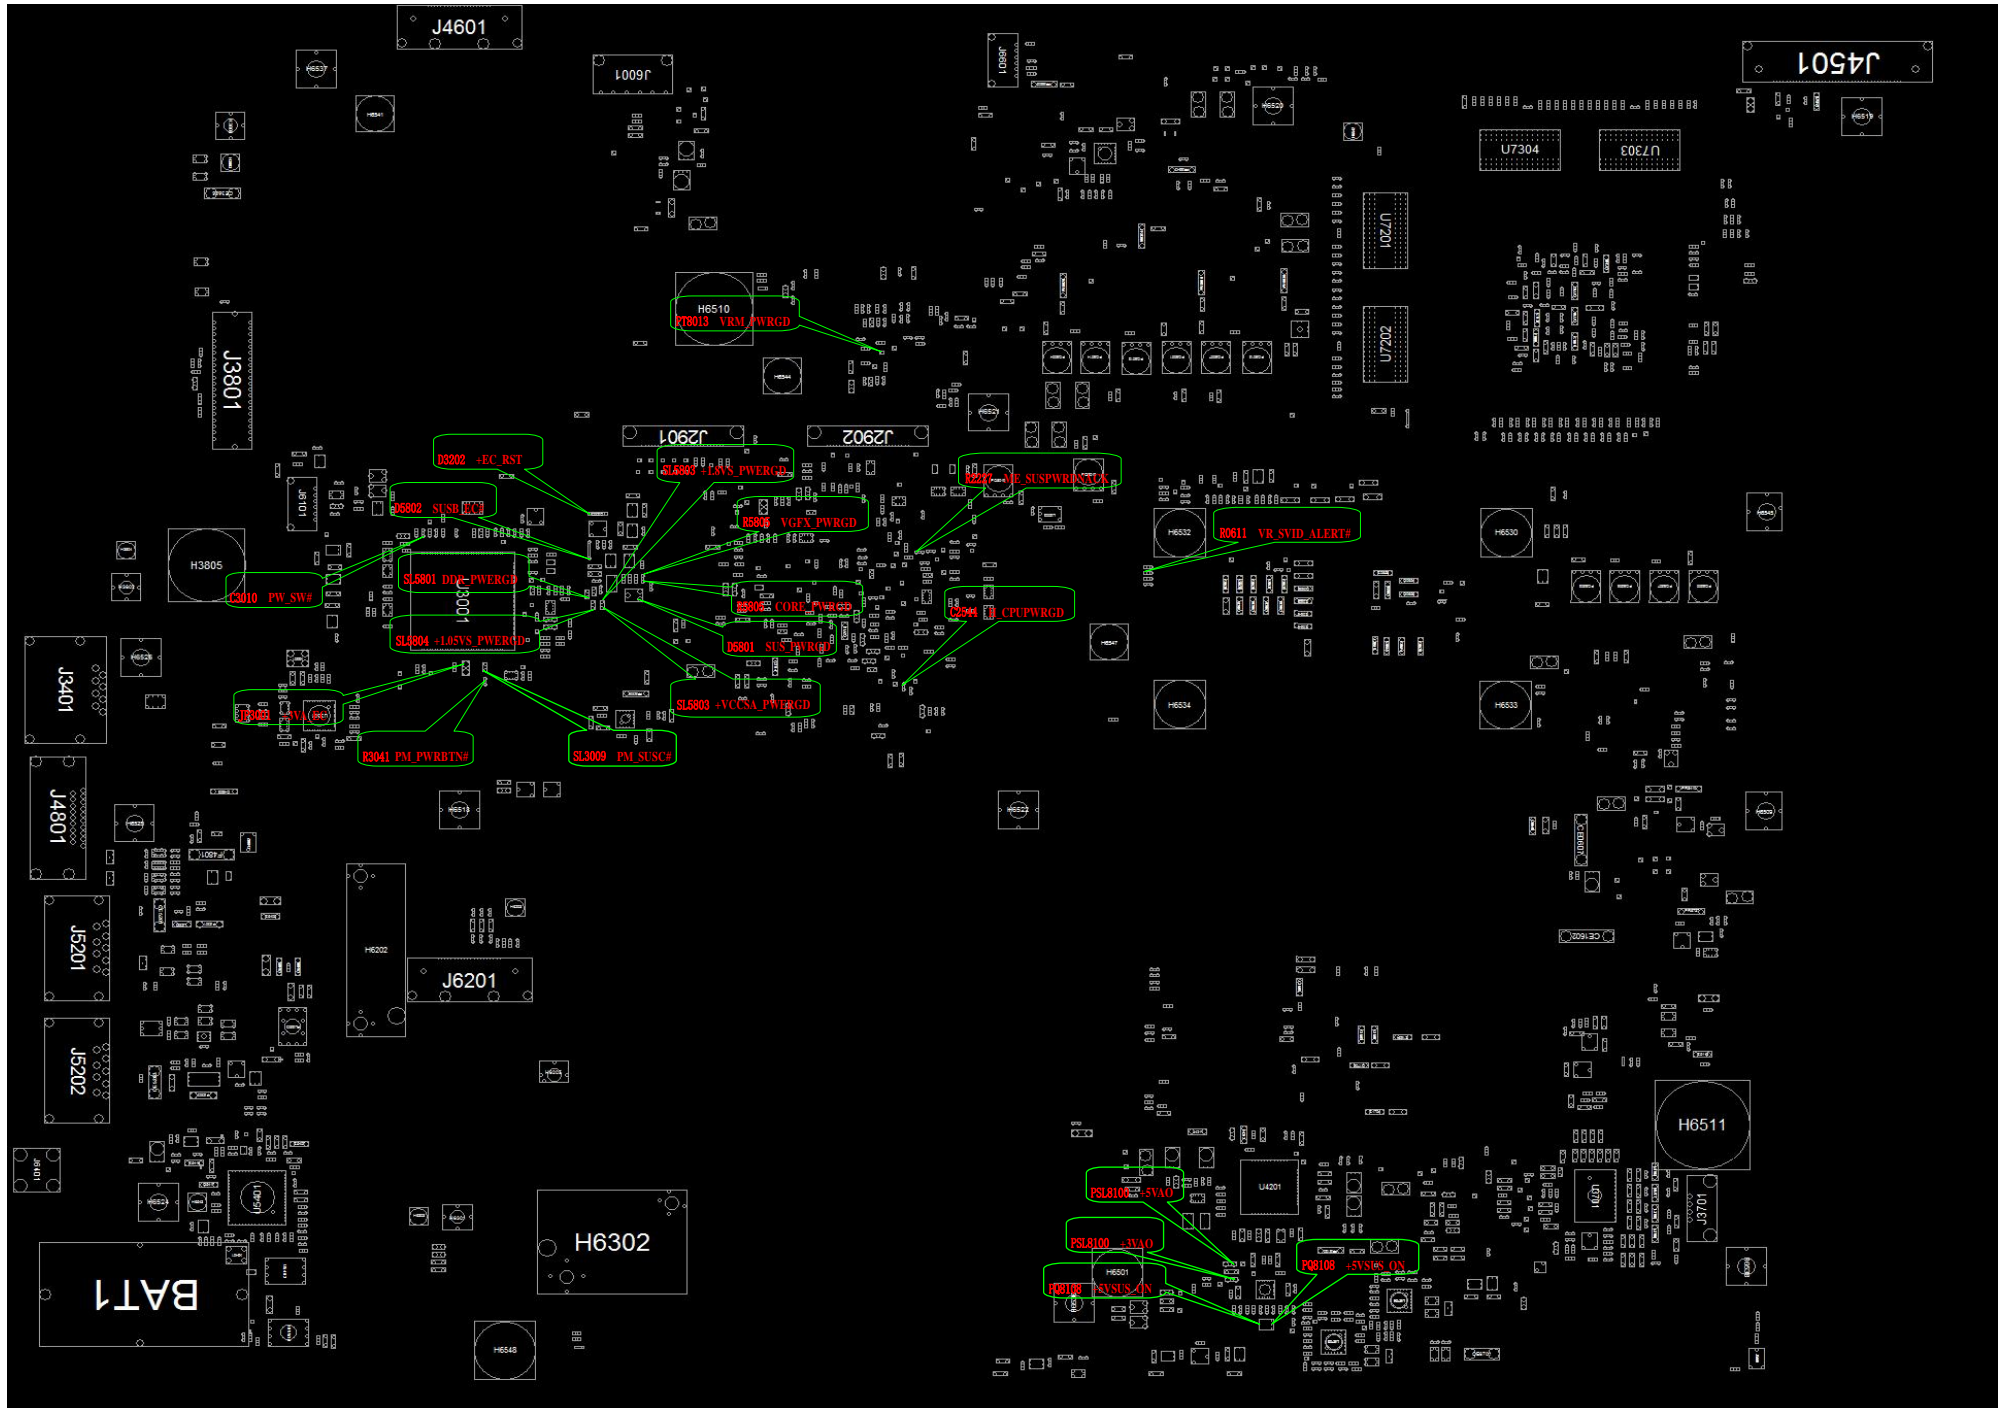

Voltage & Signal Measure Point Bottom

