

SERVICE MANUAL

notebook

W510LU



Notebook Computer

W510LU

Service Manual

Notice

The company reserves the right to revise this publication or to change its contents without notice. Information contained herein is for reference only and does not constitute a commitment on the part of the manufacturer or any subsequent vendor. They assume no responsibility or liability for any errors or inaccuracies that may appear in this publication nor are they in anyway responsible for any loss or damage resulting from the use (or misuse) of this publication.

This publication and any accompanying software may not, in whole or in part, be reproduced, translated, transmitted or reduced to any machine readable form without prior consent from the vendor, manufacturer or creators of this publication, except for copies kept by the user for backup purposes.

Brand and product names mentioned in this publication may or may not be copyrights and/or registered trademarks of their respective companies. They are mentioned for identification purposes only and are not intended as an endorsement of that product or its manufacturer.

Version 1.0
JuLy 2015

Trademarks

Intel, and **Celeron** are trademarks/registered trademarks of Intel Corporation.

Windows® is a registered trademark of Microsoft Corporation.

Other brand and product names are trademarks and /or registered trademarks of their respective companies.

About this Manual

This manual is intended for service personnel who have completed sufficient training to undertake the maintenance and inspection of personal computers.

It is organized to allow you to look up basic information for servicing and/or upgrading components of the **W510LU** series notebook PC.

The following information is included:

Chapter 1, Introduction, provides general information about the location of system elements and their specifications.
Chapter 2, Disassembly, provides step-by-step instructions for disassembling parts and subsystems and how to upgrade elements of the system.

Appendix A, Part Lists

Appendix B, Schematic Diagrams

Appendix C, Updating the FLASH ROM BIOS

Preface

IMPORTANT SAFETY INSTRUCTIONS

Follow basic safety precautions, including those listed below, to reduce the risk of fire, electric shock and injury to persons when using any electrical equipment:

1. Do not use this product near water, for example near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electrical shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
5. This product is intended to be supplied by a Listed Power Unit with an AC Input of 100 - 240V, 50 - 60Hz, DC Output of 19V, 2.1A (**40 Watts**) minimum AC/DC Adapter.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference.

This device must accept any interference received, including interference that may cause undesired operation.


Instructions for Care and Operation

The notebook computer is quite rugged, but it can be damaged. To prevent this, follow these suggestions:


1. **Don't drop it, or expose it to shock.** If the computer falls, the case and the components could be damaged.



2. **Keep it dry, and don't overheat it.** Keep the computer and power supply away from any kind of heating element. This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.

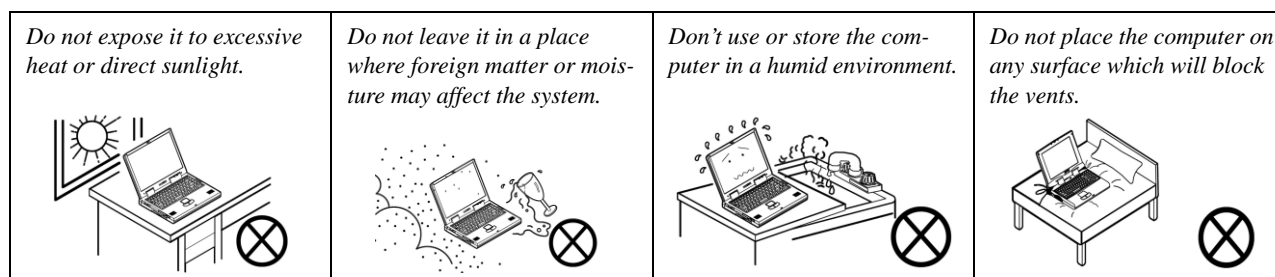


3. **Follow the proper working procedures for the computer.** Shut the computer down properly and don't forget to save your work. Remember to periodically save your data as data may be lost if the battery is depleted.

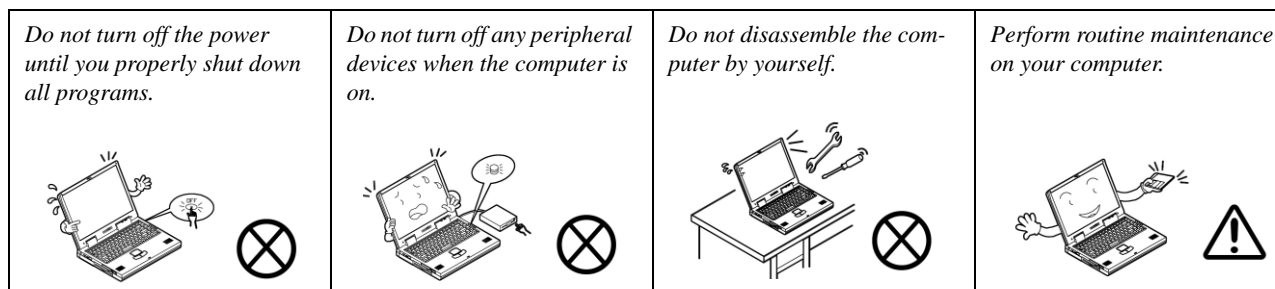

Preface

4. **Avoid interference.** Keep the computer away from high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage your data.
5. **Take care when using peripheral devices.**

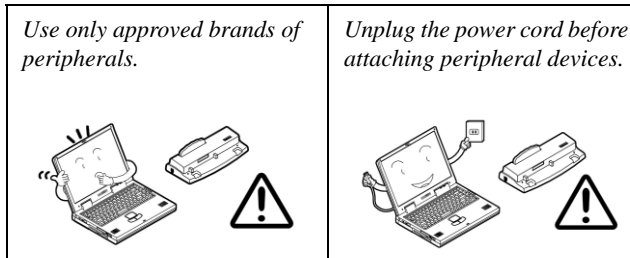

Power Safety Warning


Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines and power cord).

You must also remove your battery in order to prevent accidentally turning the machine on. **Before removing the battery disconnect the AC/DC adapter from the computer.**

Power Safety

The computer has specific power requirements:

- Only use a power adapter approved for use with this computer.
- Your AC adapter may be designed for international travel but it still requires a steady, uninterrupted power supply. If you are unsure of your local power specifications, consult your service representative or local power company.
- The power adapter may have either a 2-prong or a 3-prong grounded plug. The third prong is an important safety feature; do not defeat its purpose. If you do not have access to a compatible outlet, have a qualified electrician install one.
- When you want to unplug the power cord, be sure to disconnect it by the plug head, not by its wire.
- Make sure the socket and any extension cord(s) you use can support the total current load of all the connected devices.
- Before cleaning the computer, make sure it is disconnected from any external power supplies.

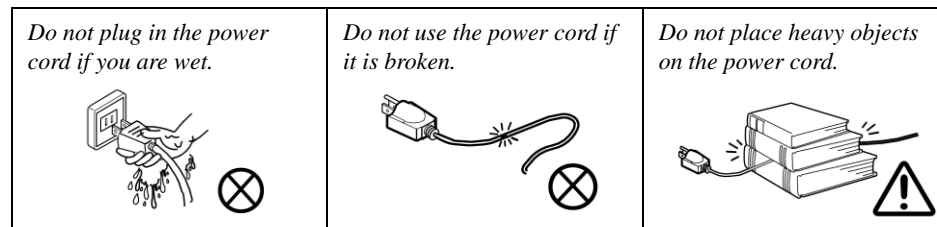

Battery Precautions

- Only use batteries designed for this computer. The wrong battery type may explode, leak or damage the computer.
- Do not continue to use a battery that has been dropped, or that appears damaged (e.g. bent or twisted) in any way. Even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire.
- Recharge the batteries using the notebook's system. Incorrect recharging may make the battery explode.
- Do not try to repair a battery pack. Refer any battery pack repair or replacement to your service representative or qualified service personnel.
- Keep children away from, and promptly dispose of a damaged battery. Always dispose of batteries carefully. Batteries may explode or leak if exposed to fire, or improperly handled or discarded.
- Keep the battery away from metal appliances.
- Affix tape to the battery contacts before disposing of the battery.
- Do not touch the battery contacts with your hands or metal objects.

Battery Guidelines

The following can also apply to any backup batteries you may have.

- If you do not use the battery for an extended period, then remove the battery from the computer for storage.
- Before removing the battery for storage charge it to 60% - 70%.
- Check stored batteries at least every 3 months and charge them to 60% - 70%.




Battery Disposal

The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

Caution

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.

Battery Level

Click the battery icon  in the taskbar to see the current battery level and charge status. A battery that drops below a level of 10% will not allow the computer to boot up. Make sure that any battery that drops below 10% is recharged within one week.

Preface

Related Documents

You may also need to consult the following manual for additional information:

User's Manual on DVD

This describes the notebook PC's features and the procedures for operating the computer and its ROM-based setup program. It also describes the installation and operation of the utility programs provided with the notebook PC.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference.

This device must accept any interference received, including interference that may cause undesired operation.

System Startup

1. Remove all packing materials.
2. Place the computer on a stable surface.
3. Insert the battery and make sure it is locked in position.
4. Attach the AC/DC adapter to the DC-In jack on the left of the computer, then plug the AC power cord into an outlet, and connect the AC power cord to the AC/DC adapter.
5. Use one hand to raise the lid/LCD to a comfortable viewing angle (do not exceed 130 degrees); use the other hand (as illustrated in [Figure 1](#)) to support the base of the computer (**Note: Never** lift the computer by the lid/LCD).
6. Press the power button to turn the computer "on".

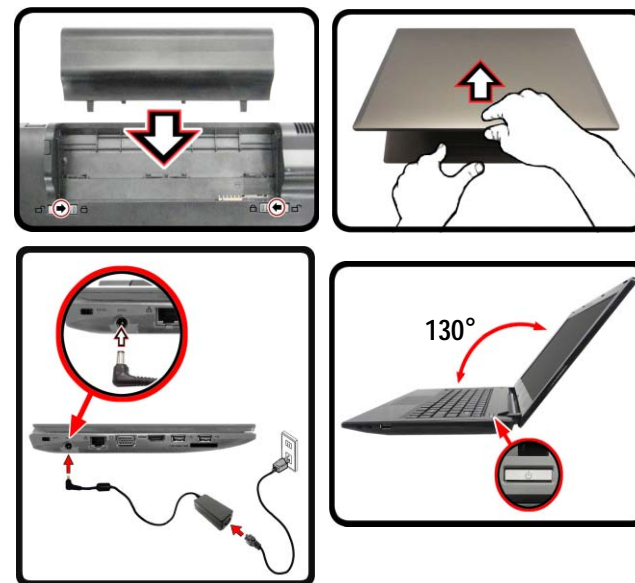


Figure 1
Opening the Lid/LCD/Computer with
AC/DC Adapter Plugged-In

Contents

Introduction1-1

Overview	1-1
Specifications	1-2
External Locator - Top View with LCD Panel Open	1-4
External Locator - Front & Right Side Views	1-5
External Locator - Left Side & Rear View	1-6
External Locator - Bottom View	1-7
Mainboard Overview - Top (Key Parts)	1-8
Mainboard Overview - Bottom (Key Parts)	1-9
Mainboard Overview - Top (Connectors)	1-10
Mainboard Overview - Bottom (Connectors)	1-11

Disassembly2-1

Overview	2-1
Maintenance Tools	2-2
Connections	2-2
Maintenance Precautions	2-3
Disassembly Steps	2-4
Removing the Battery	2-5
Removing the Keyboard	2-6
Removing the Hard Disk Drive	2-7
Removing the System Memory (RAM)	2-9
Removing the Wireless LAN Module	2-11
Wireless LAN, and Combo Module Cables	2-12
Removing the Click Board Module	2-13
Removing the MSATA Module	2-14
Removing the CCD Module	2-15

Part ListsA-1

Parts List Illustration Location	A-2
Top (4W)	A-3

Top (6W)	A-4
Bottom (4W)	A-5
Bottom (6W)	A-6
LCD	A-7

Schematic Diagrams.....B-1

System Block Diagram	B-2
SOC 1/8	B-3
SOC 2/8	B-4
SOC 3/8	B-5
SOC 4/8	B-6
SOC 5/8	B-7
SOC 6/8	B-8
SOC 7/8	B-9
SOC 8/8	B-10
DDR3 SO-DIMM_0	B-11
RTD2136N-CG	B-12
RTD2168-CG, CRT	B-13
Panel	B-14
HDMI	B-15
Audio Codec ALC269Q-VC2	B-16
HDD, LED	B-17
USB, TPM	B-18
Conn, CCD, Fan, Click	B-19
NGFF Card	B-20
KBC ITE IT8987E	B-21
System Power	B-22
Level Shifter 1	B-23
Level Shifter 2	B-24
I/O Board	B-25
RTL8402	B-26

Preface

AC-In Conn	B-27
Power SW Board	B-28
Click Board	B-29
VDD3, VDD5	B-30
Power 1.8VA/1.5VS	B-31
Power 1.05VA/1.15VA/1.24VA	B-32
VTT_MEM/1.35V	B-33
VGG	B-34
Power VCore	B-35
AC-In, Charger	B-36
Power On SEQ	B-37
.....	B-37

Updating the FLASH ROM BIOS..... C-1


Download the BIOS	C-1
Unzip the downloaded files to a bootable CD/DVD or USB Flash drive	C-1
Set the computer to boot from the external drive	C-1
Use the flash tools to update the BIOS	C-2
Restart the computer (booting from the HDD)	C-2

Chapter 1: Introduction

Overview

This manual covers the information you need to service or upgrade the **W510LU** series notebook computer. Information about operating the computer (e.g. getting started, and the *Setup* utility) is in the *User's Manual*. Information about drivers (e.g. VGA & audio) is also found in the *User's Manual*. The manual is shipped with the computer.

Operating systems (e.g. *Window 8.1*, etc.) has its own manuals as do application softwares (e.g. word processing and database programs). If you have questions about those programs, you should consult those manuals.

The **W510LU** series notebook is designed to be upgradeable. See [Disassembly on page 2 - 1](#) for a detailed description of the upgrade procedures for each specific component. Please take note of the warning and safety information indicated by the “” symbol.

The balance of this chapter reviews the computer's technical specifications and features.

Introduction

Specifications



Latest Specification Information

The specifications listed here are correct at the time of sending them to the press. Certain items (particularly processor types/speeds) may be changed, delayed or updated due to the manufacturer's release schedule. Check with your service center for more details.



CPU

The CPU is not a user serviceable part. Accessing the CPU in any way may violate your warranty.

Processor Options

Intel® Pentium® Processor

N3700 (1.60GHz)

2MB Smart Cache, 14nm, DDR3L-1600MHz, TDP 6W

Intel® Celeron® Processor

N3150 (1.60GHz), N3050 (1.60GHz)

2MB Smart Cache, 14nm, DDR3L-1600MHz, TDP 6W

N3000 (1.04GHz)

2MB Smart Cache, 14nm, DDR3L-1600MHz, TDP 4W

BIOS

64Mb SPI Flash ROM

AMI BIOS

Memory

One 204 Pin SO-DIMM Socket Supporting **DDR3L**

1600MHz Memory

Memory Expandable up to 8GB

(The real memory operating frequency depends on the FSB of the processor.)

LCD

11.6" (29.46cm) HD (Thickness: 3.6mm)

Video Adapter

Intel HD Graphics

Dynamic Frequency

Intel Dynamic Video Memory Technology

Microsoft DirectX®11.1 Compatible

Storage

One Changeable 2.5" 7.0mm (h) SATA **HDD**

(**Factory Option**) One mSATA Solid State Drive (SSD)

Audio

High Definition Audio Compliant Interface

2 * Built-In Speakers

Built-In Microphone

Security

Security (Kensington® Type) Lock Slot

BIOS Password

Intel® PTT

Keyboard

"WinKey" keyboard (with embedded numeric keypad)

Pointing Device

Built-in Touchpad

Interface

Two USB 2.0 Ports

One USB 3.0 Port

One HDMI-Out Port

One External Monitor Port

One Headphone-Out Jack

One Microphone-In Jack

One RJ-45 LAN Jack

One DC-in Jack

Slots

M.2 Slot for **WLAN and Bluetooth** Combo Module

Mini Card Slot for mSATA **SSD**

Or

(**Factory Option**) **Mini Card** Slot for Mini-Card interface adapter for **M.2** 3G or 4G module

Card Reader

Embedded Multi-In-1 Card Reader

MMC (MultiMedia Card) / RS MMC

SD (Secure Digital) / Mini SD / SDHC/ SDXC

Communication

Built-In 10/100Mb Ethernet LAN

1.0M HD PC Camera Module

(Factory Option) 3G or 4G **M.2** Module

WLAN/ Bluetooth M.2 Modules:

(Factory Option) Intel® Wireless-AC 3165 Wireless LAN
(802.11ac) + Bluetooth 4.0

(Factory Option) Intel® Wireless-N 7265 Wireless LAN
(802.11b/g/n) + Bluetooth 4.0

(Factory Option) Third-Party Wireless LAN (802.11b/g/n) +
Bluetooth 4.0

Environmental Spec

Temperature

Operating: 5°C - 35°C

Non-Operating: -20°C - 60°C

Relative Humidity

Operating: 20% - 80%

Non-Operating: 10% - 90%

Power

Full Range AC/DC Adapter

AC Input: 100 - 240V, 50 - 60Hz

DC Output: 19V, 2.1A (**40W**)

Removable 3 Cell Smart Lithium-Ion Battery Pack, 24WH

(Factory Option) Removable 3 Cell Smart Lithium-Ion Bat-
tery Pack, 31WH

Dimensions & Weight

292.4mm (w) * 210.5mm (d) * 22.7mm (h)

(Height Excluding Battery Area)

1.3kg (Barebone with 24WH Battery)

Introduction

Figure 1
Top View

1. PC Camera
2. *PC Camera LED
**When the PC camera is in use, the LED will be illuminated in red*
3. Built-In Microphone
4. LCD
5. Power Button
6. Keyboard
7. Touchpad & Buttons

External Locator - Top View with LCD Panel Open



External Locator - Front & Right Side Views

Figure 2
Front View

1. LED Indicators

FRONT VIEW



RIGHT SIDE VIEW



Figure 3
Right Side View

1. USB 2.0 Ports
2. Multi-in-1 Card Reader
3. RJ-45 LAN Jack
4. DC-In Jack

Introduction

External Locator - Left Side & Rear View

Figure 4
Left Side View

1. Security Lock Slot
2. External Monitor Port
3. Vent
4. HDMI-Out Port
5. USB 3.0 Port
6. Microphone-In Jack
7. Headphone-Out Jack

LEFT SIDE VIEW



Figure 5
Rear View

1. Battery

REAR VIEW



External Locator - Bottom View



Figure 6
Bottom View

1. Battery
2. Speakers
3. Fan Intake/Vent



Overheating


To prevent your computer from overheating, make sure nothing blocks any vent while the computer is in use.

Introduction

Figure 7
**Mainboard Top
Key Parts**

1. KBC ITE IT8987E
2. ALC269

Mainboard Overview - Top (Key Parts)

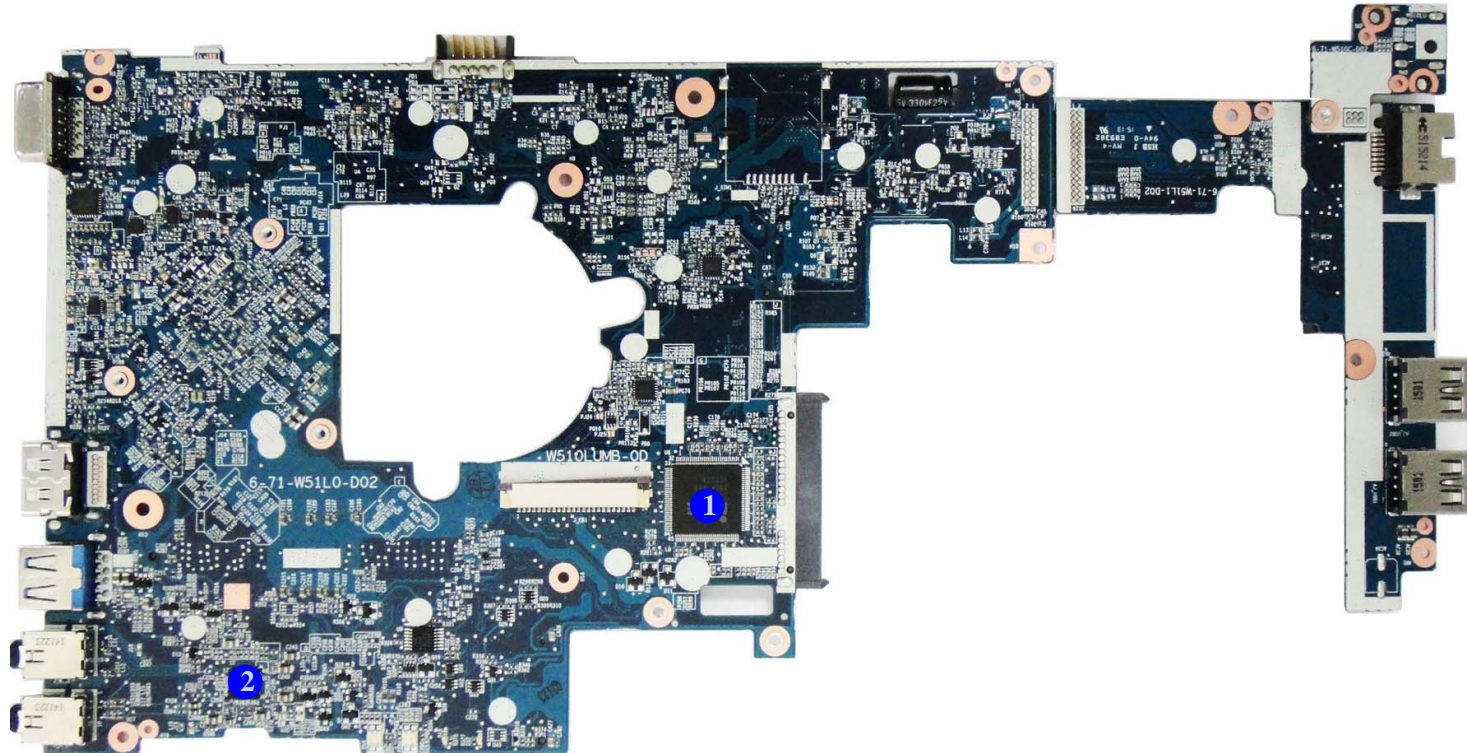

Mainboard Overview - Bottom (Key Parts)

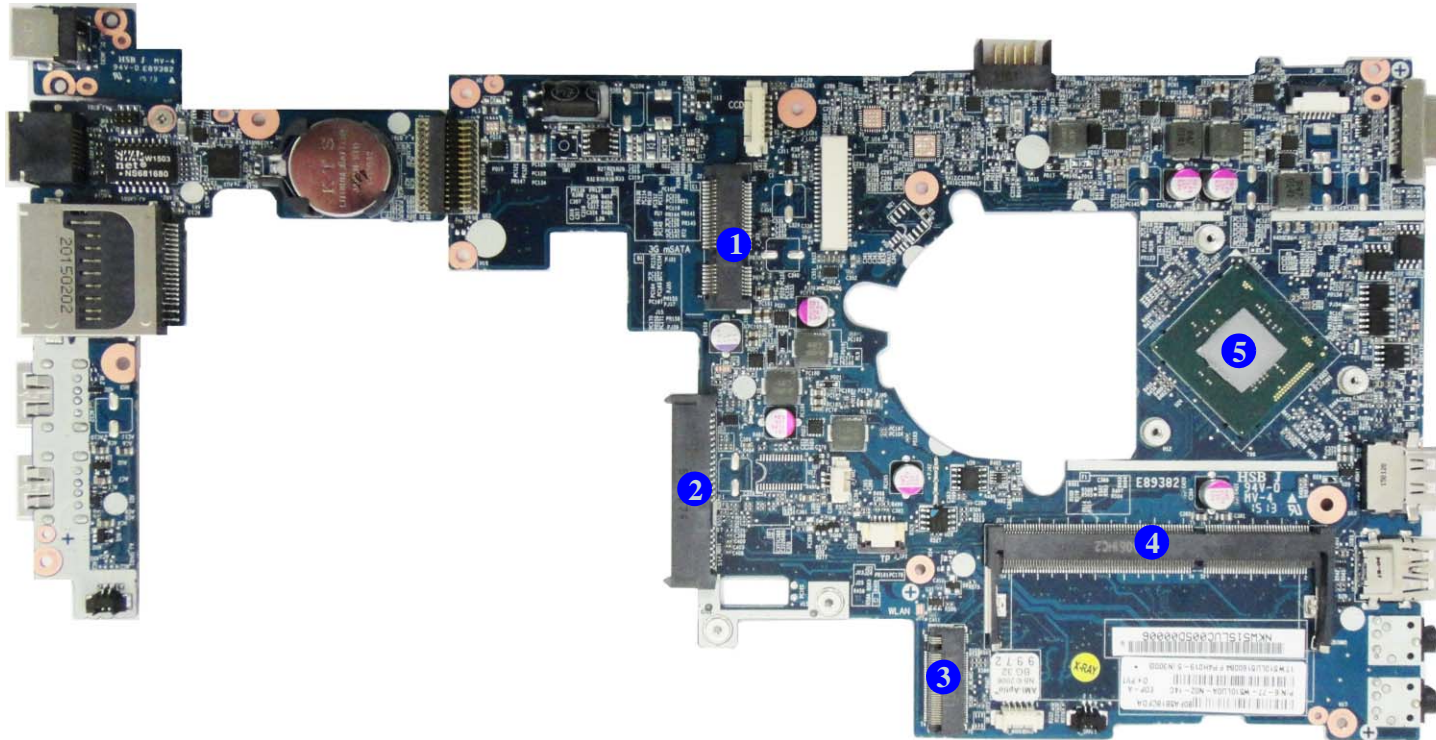



Figure 8
**Mainboard Bottom
Key Parts**

1. Mini-Card Connector (3G/mSATA module)
2. HDD Connector
3. M.2 Connector (WLAN Module)
4. Memory Slot (DDR3L SO-DIMM)
5. CPU

Figure 9
**Mainboard Top
Connectors**

1. External Monitor Port
2. HDMI-Out Port
3. USB 3.0 Port
4. Microphone-In Jack
5. Headphone-Out Jack
6. Keyboard Cable Connector


Mainboard Overview - Top (Connectors)

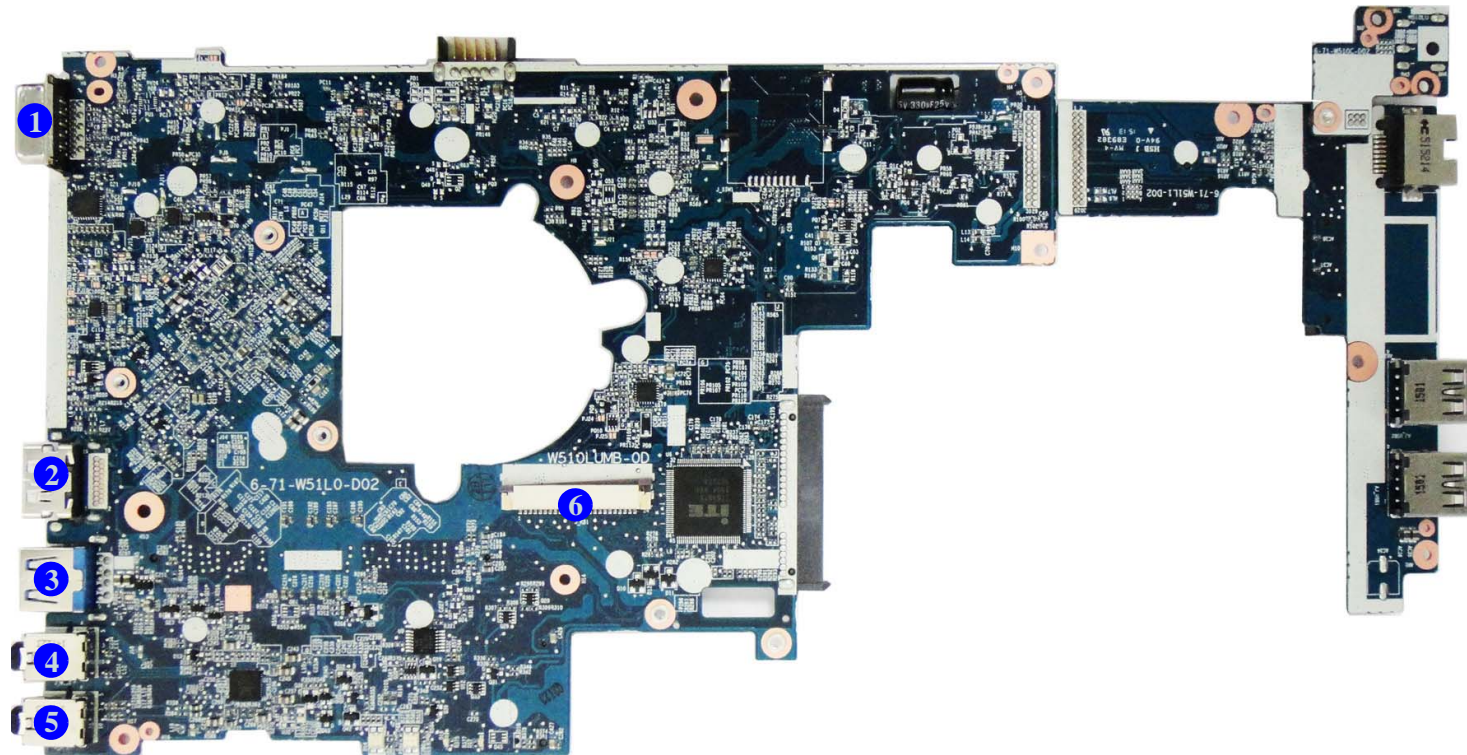

Mainboard Overview - Bottom (Connectors)

Figure 10
**Mainboard Bottom
Connectors**

1. CCD Cable Connector
2. LCD Connector
3. Fan Cable Connector
4. Touchpad Connector
5. Power Switch Connector

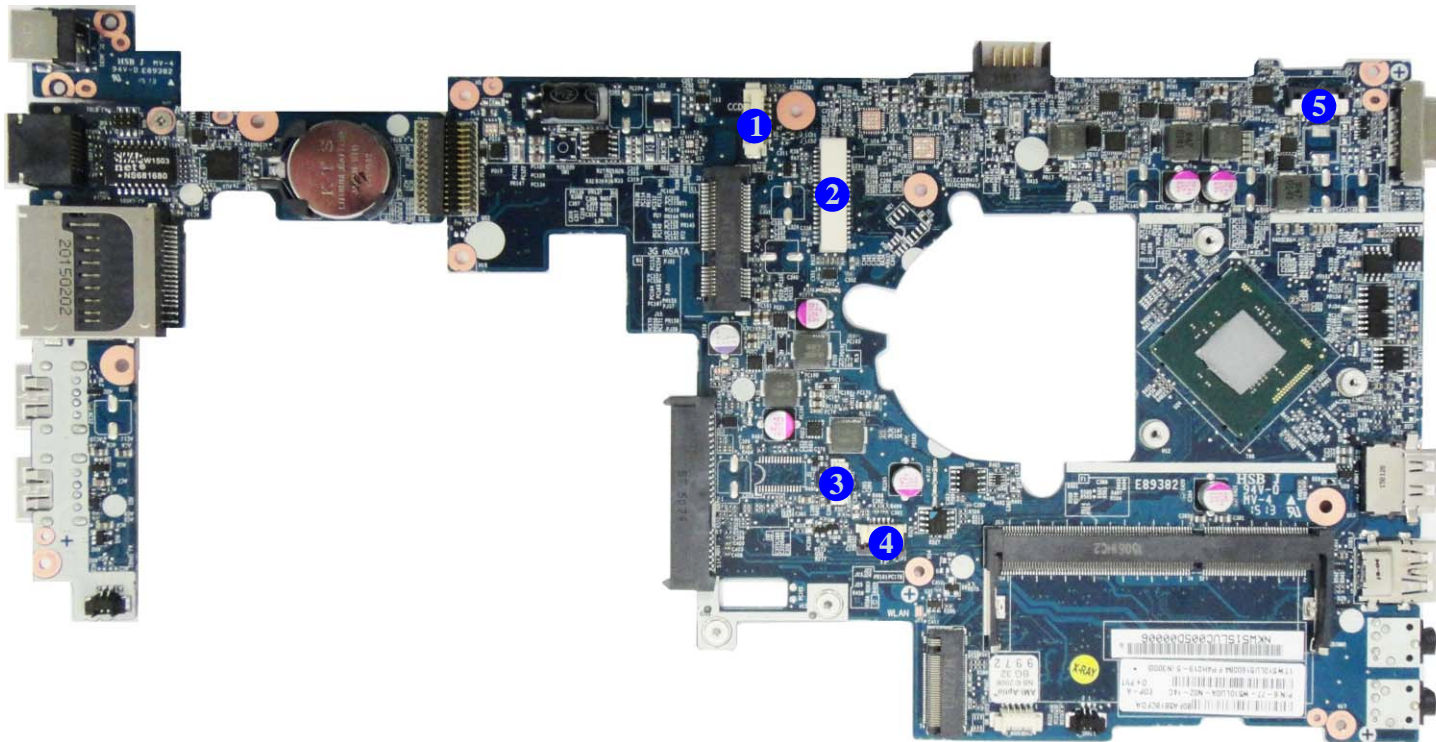


Chapter 2: Disassembly

Overview

This chapter provides step-by-step instructions for disassembling the **W510LU** series notebook's parts and subsystems. When it comes to reassembly, reverse the procedures (unless otherwise indicated).


We suggest you completely review any procedure before you take the computer apart.

Procedures such as upgrading/replacing the RAM, optical device and hard disk are included in the User's Manual but are repeated here for your convenience.

To make the disassembly process easier each section may have a box in the page margin. Information contained under the figure # will give a synopsis of the sequence of procedures involved in the disassembly procedure. A box with a  lists the relevant parts you will have after the disassembly process is complete. **Note:** The parts listed will be for the disassembly procedure listed ONLY, and not any previous disassembly step(s) required. Refer to the part list for the previous disassembly procedure. The amount of screws you should be left with will be listed here also.

A box with a  will also provide any possible helpful information. A box with a  contains warnings.

An example of these types of boxes are shown in the sidebar.

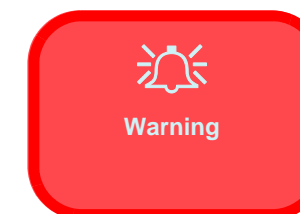

Disassembly

NOTE: All disassembly procedures assume that the system is turned **OFF**, and disconnected from any power supply (the battery is removed too).

Maintenance Tools

The following tools are recommended when working on the notebook PC:

- M3 Philips-head screwdriver
- M2.5 Philips-head screwdriver (magnetized)
- M2 Philips-head screwdriver
- Small flat-head screwdriver
- Pair of needle-nose pliers
- Anti-static wrist-strap

Connections

Connections within the computer are one of four types:

Locking collar sockets for ribbon connectors	To release these connectors, use a small flat-head screwdriver to gently pry the locking collar away from its base. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Pressure sockets for multi-wire connectors	To release this connector type, grasp it at its head and gently rock it from side to side as you pull it out. Do not pull on the wires themselves. When replacing the connection, do not try to force it. The socket only fits one way.
Pressure sockets for ribbon connectors	To release these connectors, use a small pair of needle-nose pliers to gently lift the connector away from its socket. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Board-to-board or multi-pin sockets	To separate the boards, gently rock them from side to side as you pull them apart. If the connection is very tight, use a small flat-head screwdriver - use just enough force to start.

Maintenance Precautions

The following precautions are a reminder. To avoid personal injury or damage to the computer while performing a removal and/or replacement job, take the following precautions:

1. **Don't drop it.** Perform your repairs and/or upgrades on a stable surface. If the computer falls, the case and other components could be damaged.
2. **Don't overheat it.** Note the proximity of any heating elements. Keep the computer out of direct sunlight.
3. **Avoid interference.** Note the proximity of any high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage components and/or data. You should also monitor the position of magnetized tools (i.e. screwdrivers).
4. **Keep it dry.** This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.
5. **Be careful with power.** Avoid accidental shocks, discharges or explosions.
 - Before removing or servicing any part from the computer, turn the computer off and detach any power supplies.
 - When you want to unplug the power cord or any cable/wire, be sure to disconnect it by the plug head. Do not pull on the wire.
6. **Peripherals** – Turn off and detach any peripherals.
7. **Beware of static discharge.** ICs, such as the CPU and main support chips, are vulnerable to static electricity. Before handling any part in the computer, discharge any static electricity inside the computer. When handling a printed circuit board, do not use gloves or other materials which allow static electricity buildup. We suggest that you use an anti-static wrist strap instead.
8. **Beware of corrosion.** As you perform your job, avoid touching any connector leads. Even the cleanest hands produce oils which can attract corrosive elements.
9. **Keep your work environment clean.** Tobacco smoke, dust or other air-born particulate matter is often attracted to charged surfaces, reducing performance.
10. **Keep track of the components.** When removing or replacing any part, be careful not to leave small parts, such as screws, loose inside the computer.

Cleaning

Do not apply cleaner directly to the computer, use a soft clean cloth.

Do not use volatile (petroleum distillates) or abrasive cleaners on any part of the computer.



Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

Disassembly Steps

The following table lists the disassembly steps, and on which page to find the related information. **PLEASE PERFORM THE DISASSEMBLY STEPS IN THE ORDER INDICATED.**

To remove the Battery:

1. Remove the battery *page 2 - 5*

To remove the Keyboard:

1. Remove the battery *page 2 - 5*
2. Remove the keyboard *page 2 - 6*

To remove the HDD:

1. Remove the battery *page 2 - 5*
2. Remove the keyboard *page 2 - 6*
3. Remove the HDD *page 2 - 7*

To remove the System Memory:

1. Remove the battery *page 2 - 5*
2. Remove the keyboard *page 2 - 6*
3. Remove the HDD *page 2 - 7*
4. Remove the system memory *page 2 - 9*

To remove the Wireless LAN Module:

1. Remove the battery *page 2 - 5*
2. Remove the keyboard *page 2 - 6*
3. Remove the HDD *page 2 - 7*
4. Remove the wireless LAN *page 2 - 11*

To remove the Click Board:

1. Remove the battery *page 2 - 5*
2. Remove the keyboard *page 2 - 6*
3. Remove the HDD *page 2 - 7*
4. Remove the wireless LAN *page 2 - 11*
5. Remove the click board *page 2 - 15*

To remove the Wireless LAN Module:

1. Remove the battery *page 2 - 5*
2. Remove the keyboard *page 2 - 6*
3. Remove the HDD *page 2 - 7*
4. Remove the wireless LAN *page 2 - 11*


To remove the CCD:

1. Remove the battery *page 2 - 5*
2. Remove the CCD *page 2 - 15*

Removing the Battery

1. Turn the computer **off**, and turn it over.
2. Slide the latch ① in the direction of the arrow (*Figure 1a*).
3. Slide the latch ② in the direction of the arrow, and hold it in place (*Figure 1a*).
4. Slide the battery ③ in the direction of the arrow ④ (*Figure 1b*).

a.

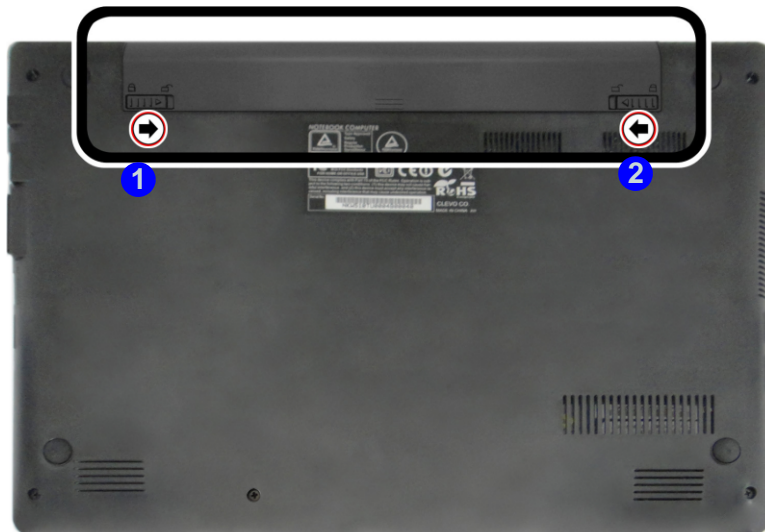

b.


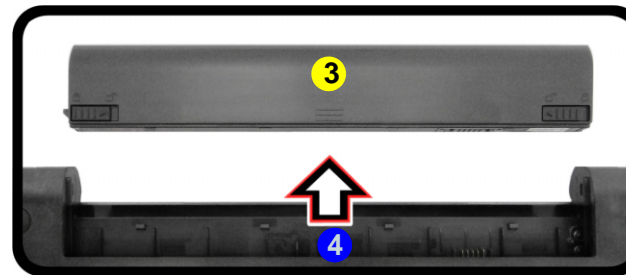


Figure 1
Battery Removal

- a. Slide the latch and hold in place.
- b. Slide the battery in the direction of the arrow.

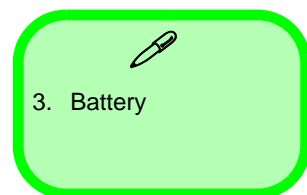

Disassembly

Figure 2
Keyboard Removal

- Press the four latches to release the keyboard.
- Lift the keyboard up and disconnect the cable from the locking collar.
- Remove the keyboard.
- Remove screws to release bottom case.



Re-Inserting the Keyboard

When re-inserting the keyboard, align first the **three** keyboard tabs (Figure 2e) that are located at the bottom, to the slots in the case.




5. Keyboard

- 5 Screws


Removing the Keyboard

- Turn **off** the computer and remove the battery ([page 2 - 5](#)).
- Use **only** the small tool **A** provided (see picture below) to carefully press the **four** keyboard latches **1** - **4** at the top of the keyboard to elevate the keyboard from its normal position ([Figure 2a](#)).
- Carefully lift the keyboard **5** up, being careful not to bend the keyboard ribbon cable **6** ([Figure 2b](#)).
- Disconnect the keyboard ribbon cable **6** from the locking collar socket **7** ([Figure 2b](#)).
- Carefully lift up the keyboard **5** ([Figure 2c](#)) off the computer.
- Remove screws **8** - **12** to release the bottom case ([Figure 2d](#)).

a.

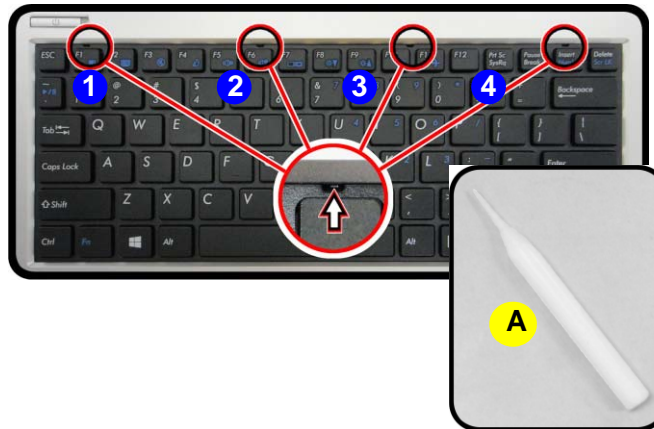


b.

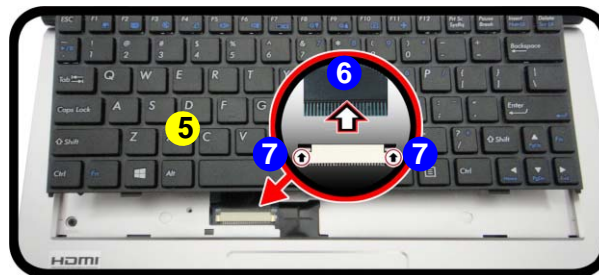

c.



d.

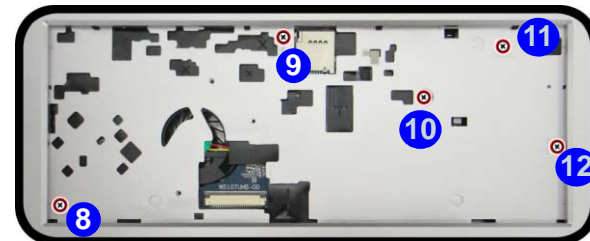

e.



Keyboard Tabs

Removing the Hard Disk Drive


The hard disk drive can be taken out to accommodate other 2.5" serial (SATA) hard disk drives with a height of 9.5mm (h) and a speed of **5400 RPM** or lower. Follow your operating system's installation instructions, and install all necessary drivers and utilities (as outlined in **Chapter 4 of the User's Manual**) when setting up a new hard disk.

Hard Disk Upgrade Process

1. Turn **off** the computer, remove the battery ([page 2 - 5](#)) and keyboard ([page 2 - 6](#)).
2. Remove the SD card cover **1** and screws **2** - **6** ([Figure 3a](#)).
3. Carefully lift the bottom case **8** up in the direction of the arrow **7** and remove it ([Figure 3b](#)).
4. The hard disk will be visible at point **9** on the computer. ([Figure 3b](#))

Figure 3
HDD Assembly Removal

- a. Remove the cover and screws.
- b. Remove the bottom case and locate the hard disk.

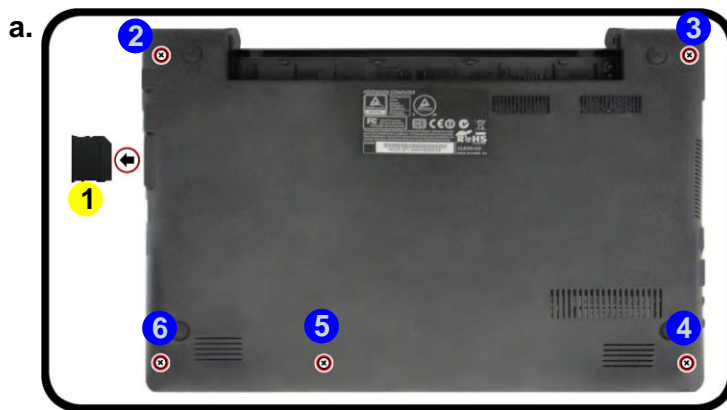



HDD System Warning

New HDD's are blank. Before you begin make sure:

You have backed up any data you want to keep from your old HDD.

You have all the CD-ROMs and FDDs required to install your operating system and programs.

If you have access to the internet, download the latest application and hardware driver updates for the operating system you plan to install. Copy these to a removable medium.

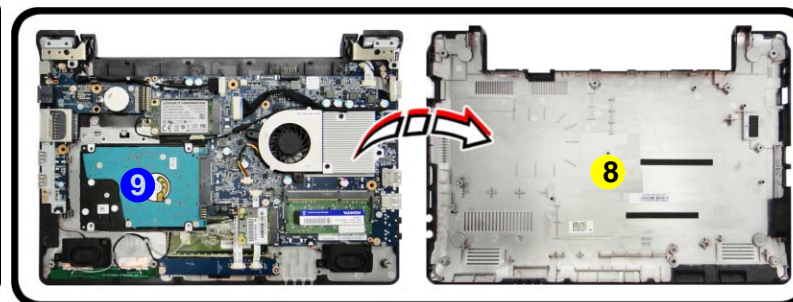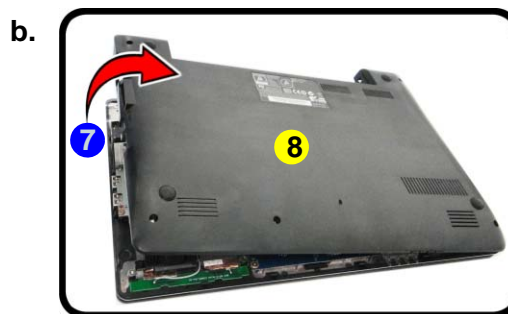

1. SD Card Cover
8. Bottom case



- 5 Screws

Disassembly

Figure 4
**HDD Assembly
Removal (cont'd.)**

- c. Slightly lift and pull the HDD in the direction of the arrow.
d. Lift the HDD assembly out of the bay.

5. Slightly lift and pull the hard disk in the direction of arrow 10 (*Figure 4c*).
6. Lift the hard disk 11 out of the bay 12 (*Figure 4d*).
7. Reverse the process to install a new hard disk (do not forget to replace all the screws and cover).

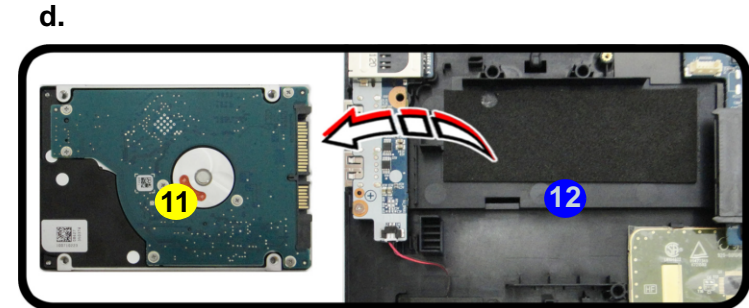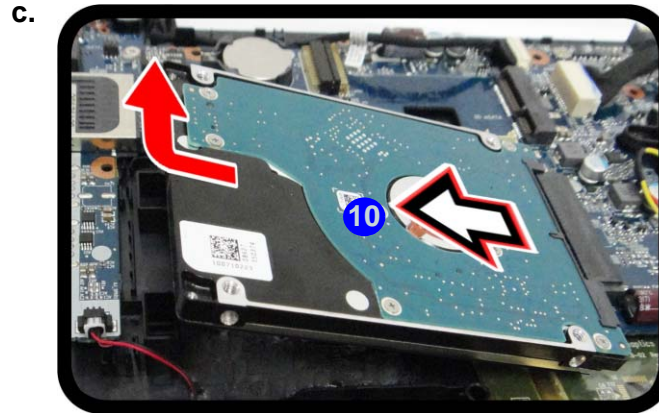

11. HDD

Removing the System Memory (RAM)

The computer has two memory sockets for 200 pin Small Outline Dual In-line Memory Modules (SO-DIMM) supporting DDR3L Up to 1600MHz. The main memory can be expanded up to 8GB. The SO-DIMM modules supported are 1024MB and 2048MB **DDR3L** Modules. The total memory size is automatically detected by the POST routine once you turn on your computer.

Memory Upgrade Process

1. Turn **off** the computer, remove the battery ([page 2 - 5](#)), keyboard ([page 2 - 6](#)), and bottom case ([page 2 - 7](#)).
2. The RAM modules will be visible at point **1** on the mainboard ([Figure 5a](#)).
3. Gently pull the two release latches (**2** & **3**) on the sides of the memory socket in the direction indicated by the arrows ([Figure 5b](#)).
4. The RAM module **4** will pop-up ([Figure 5c](#)), and you can then remove it.

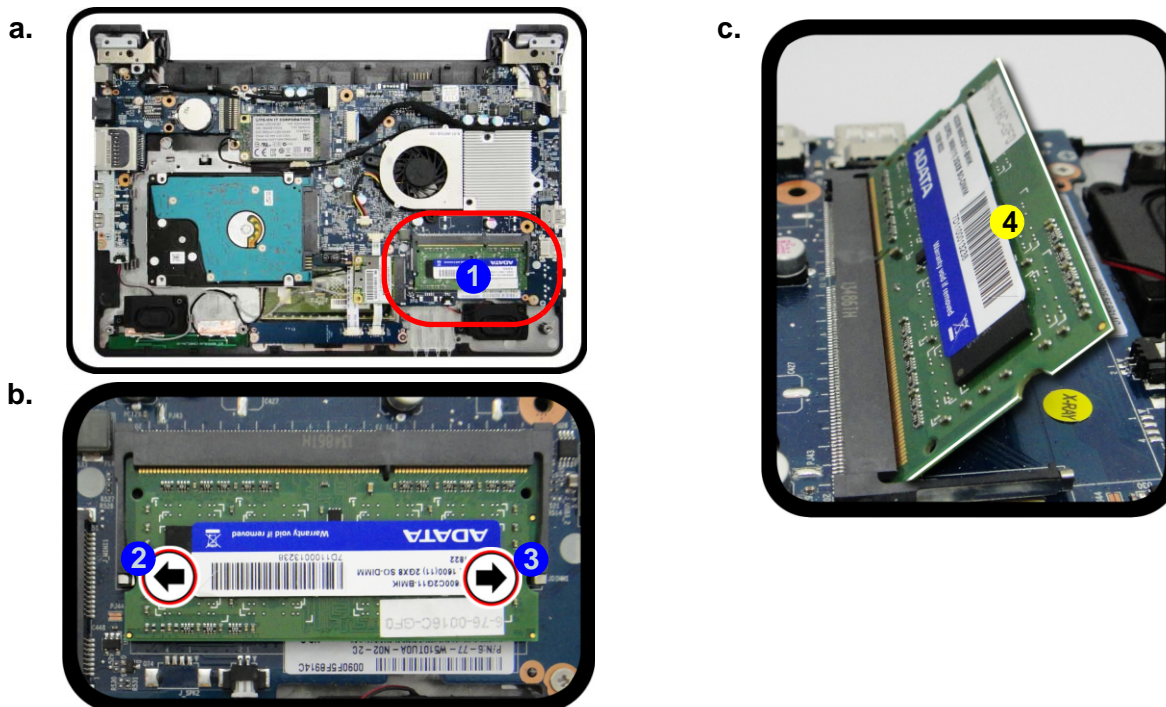


Figure 5
RAM Module Removal

- a. The RAM modules will be visible at point **1** on the mainboard.
- b. Pull the release latches.
- c. Remove the module.



Contact Warning

Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.



4. RAM Module

Disassembly

Figure 6
**RAM Module
Removal (cont'd)**

d. Replace the bottom case and tighten the screws.

5. Insert a new module holding it at about a 30° angle and fit the connectors firmly into the memory slot.
6. The module will only fit one way as defined by its pin alignment. Make sure the module is seated as far into the slot as it will go. DO NOT FORCE IT; it should fit without much pressure.
7. Press the module in and down towards the mainboard until the slot levers click into place to secure the module.
8. Replace the bottom case and tighten the screws and cover (*Figure 6d*).
9. Restart the computer to allow the BIOS to register the new memory configuration as it starts up.



Removing the Wireless LAN Module

1. Turn **off** the computer, remove the battery ([page 2 - 5](#)), keyboard ([page 2 - 6](#)), and bottom case ([page 2 - 7](#)).
2. The Wireless LAN module will be visible at point **1** ([Figure 7a](#)) on the mainboard.
3. Carefully disconnect cables **2** & **3**, then remove screw **4** from the module socket ([Figure 7b](#)).
4. The Wireless LAN module **5** ([Figure 7c](#)) will pop-up.
5. Lift the Wireless LAN module **5** ([Figure 7d](#)) up and off the computer.


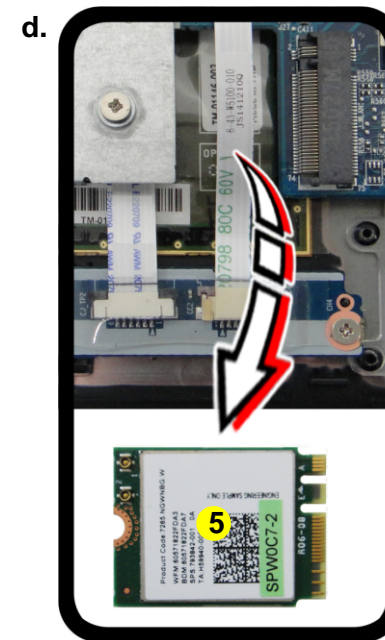


Figure 7
**Wireless LAN
Module Removal**

- a. Locate the wireless LAN module.
- b. Disconnect the cables and remove the screw.
- c. The WLAN module will pop up.
- d. Lift the WLAN module out.

Note: Make sure you reconnect the antenna cable to “1” + “2” socket ([Figure b](#)).

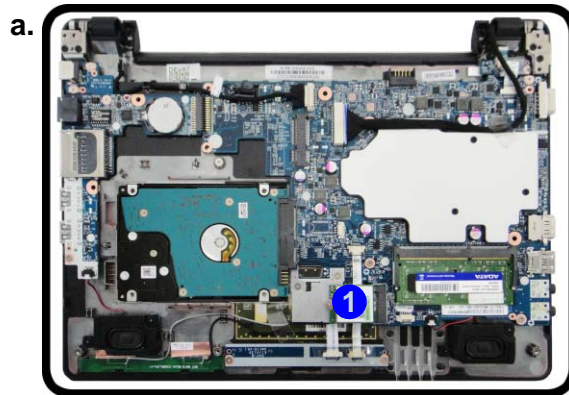

5. WLAN Module.

- 1 Screw

Disassembly

Wireless LAN, and Combo Module Cables

Note that the cables for connecting to the antennae on WLAN, WLAN & Bluetooth Combo, 3G and LTE modules are not labelled. The cables/covers (each cable will have either a black or transparent cable cover) are color coded for identification as outlined in the table below.


Module Type	Antenna Type	Cable Color	Cable Cover Type
WLAN/WLAN & Bluetooth Combo	WM 1	Black	Transparent
	WM 2	Gray	
	WM 3	White	
LTE Broadband	LTE 1	Black	Black
	LTE 2	Gray	
3G Broadband	3G 1	Black	Black
	3G 2	Gray	

Cable 1 is usually connected to antenna 1 (Main) on the module, and cable 2 to antenna 2 (Aux).

Removing the Click Board Module

1. Turn **off** the computer, remove the battery ([page 2 - 5](#)), keyboard ([page 2 - 6](#)), bottom case ([page 2 - 7](#)), and WLAN ([page 2 - 11](#)).
2. Carefully disconnect cables **1** & **2**, then remove screws **3** & **4** from the module ([Figure 7a](#)).
3. Lift the click board module **5** ([Figure 7b](#)) up and off the computer.

a.

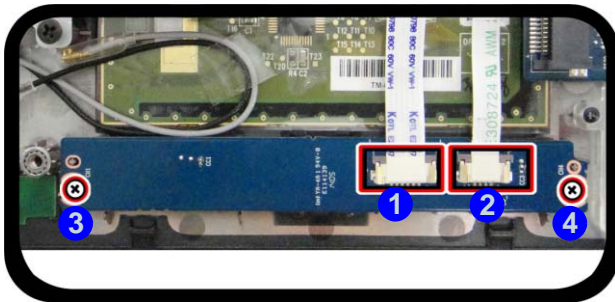

b.

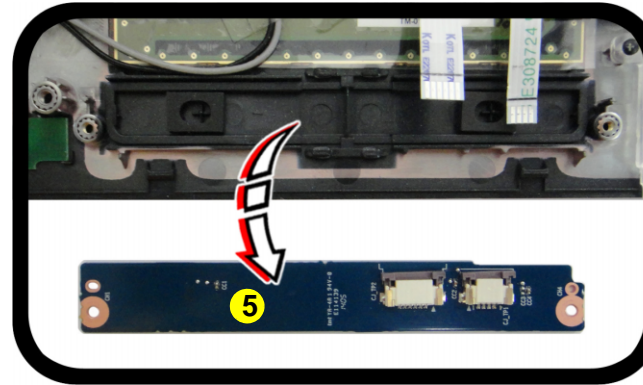


Figure 8
Click Board Module Removal

- a. Disconnect the cables and remove the screw.
- b. Lift the click board out.



5. Click Board Module

- 2 Screws


Disassembly

Figure 9
MSATA Module Removal

- a. Locate the wireless LAN module.
- b. Remove the screw.
- c. The mSATA module will pop up.
- d. Lift the mSATA module out.

Removing the MSATA Module

1. Turn **off** the computer, remove the battery ([page 2 - 5](#)), keyboard ([page 2 - 6](#)), and bottom case ([page 2 - 7](#)).
2. The mSATA module will be visible at point **1** ([Figure 7a](#)) on the mainboard.
3. Remove screw **2** from the module socket ([Figure 7b](#)).
4. The mSATA module **3** ([Figure 7c](#)) will pop-up.
5. Lift the mSATA module **3** ([Figure 7d](#)) up and off the computer.

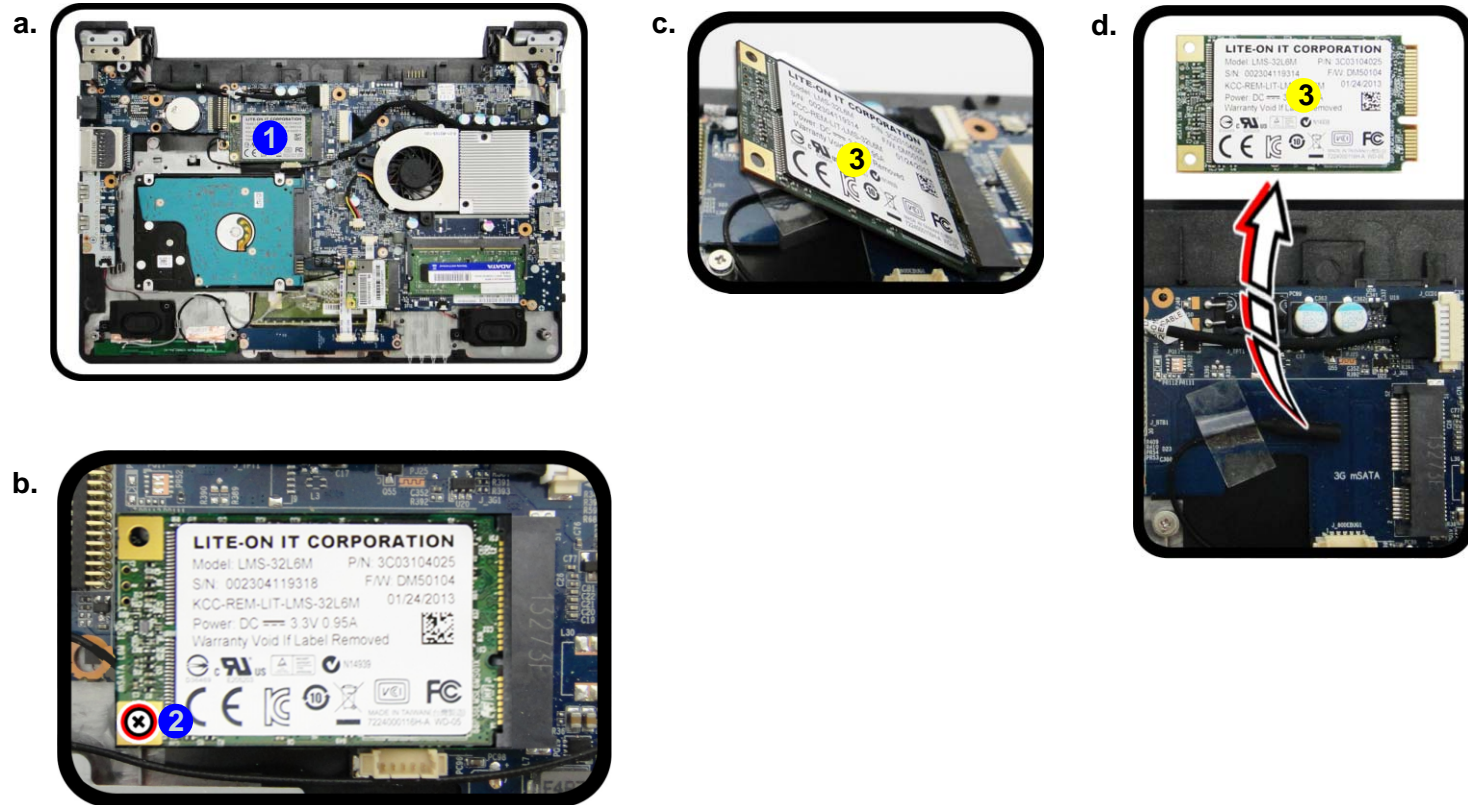

3. mSATA Module.

- 1 Screw

Removing the CCD Module

1. Turn **off** the computer, remove the battery ([page 2 - 5](#)).
2. Turn the computer over, run your fingers around the inner frame of the LCD panel at the points indicated by the arrows **1** - **3** ([Figure 10a](#)).
3. Carefully remove the LCD panel **4** off ([Figure 10b](#)).
4. Disconnect the cable **5** ([Figure 10c](#)).
5. Remove the CCD module **6** off ([Figure 10d](#)).


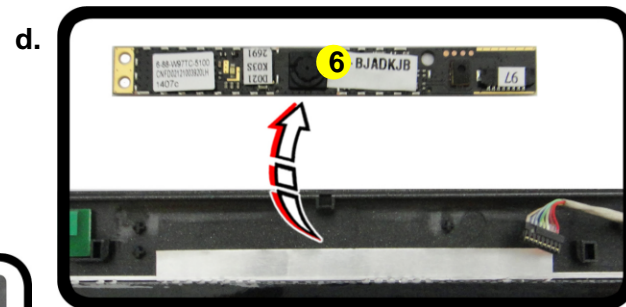


Figure 10
CCD Module Removal

- a. Run your fingers around the inner frame of the LCD panel at the points indicated by the arrow.
- b. Remove the LCD panel.
- c. Disconnect the cable.
- d. Remove the CCD module.

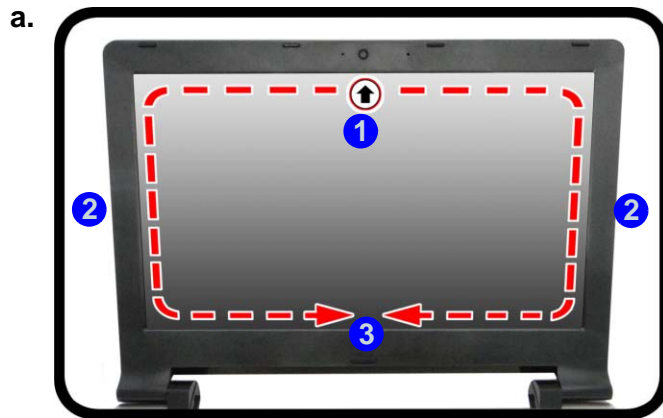

4. LCD Front Panel
6. CCD Module

Appendix A:Part Lists

This appendix breaks down the **W510LU** series notebook's construction into a series of illustrations. The component part numbers are indicated in the tables opposite the drawings.

Note: This section indicates the *manufacturer's* part numbers. Your organization may use a different system, so be sure to cross-check any relevant documentation.

Note: Some assemblies may have parts in common (especially screws). However, the part lists DO NOT indicate the total number of duplicated parts used.

Note: Be sure to check any update notices. The parts shown in these illustrations are appropriate for the system at the time of publication. Over the product life, some parts may be improved or re-configured, resulting in *new* part numbers.


Parts List Illustration Location

The following table indicates where to find the appropriate parts list illustration.

Table A - 1
Parts List Illustration
Location

Parts	
Top (4W)	<i>page A - 3</i>
Top (6W)	<i>page A - 5</i>
Bottom (4W)	<i>page A - 5</i>
Bottom (6W)	<i>page A - 5</i>
LCD	<i>page A - 7</i>


Top (4W)

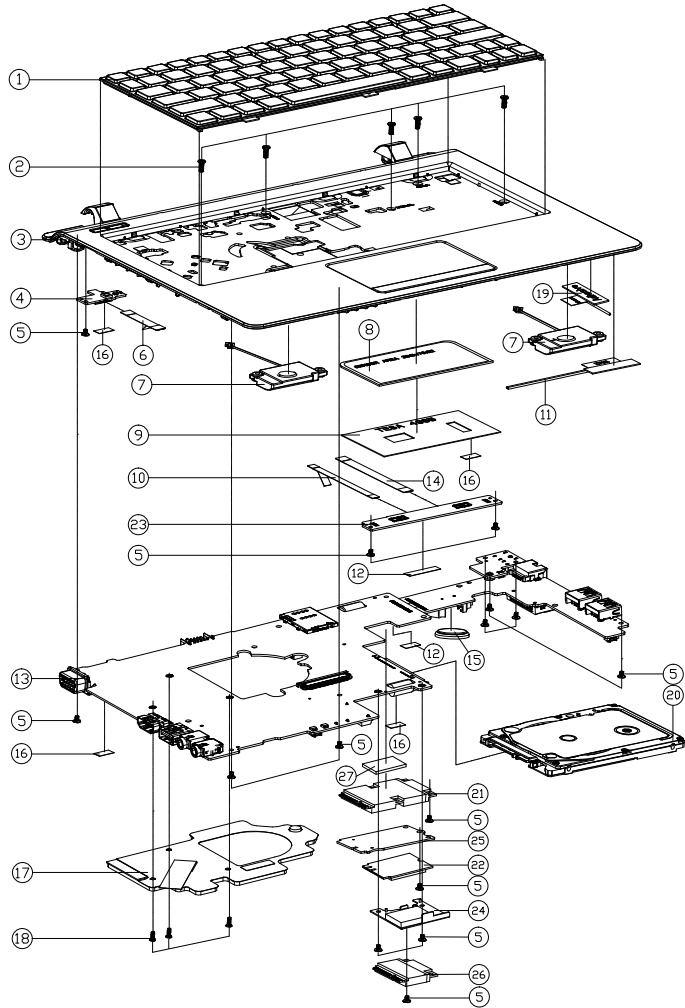

ITEM	PART NAME	PART NO	REMARK
1	K/8 USA W/884385-4385W W510LU BLACK WITH VINO KEY	6-80-W510L-010-1	
2	SCREW M2.5*6L K BZ ICT NY	6-35-82125-6RA	
3	TOP CASE MODULE W510TU	6-39-W5102-011	
3	TOP CASE MODULE W510TU-C	6-39-W5102-012-C	
4	POWER SWITCH BOARD V1.0 W510LU	6-77-W51LS-D01	
5	SCREW M2*3L KI NI ICT NY (CD=04.5,DT=0.4)	6-35-B1120-3RE	
6	FTC CABLE FOR POWER BOARD TO MB 22W 5V 4PIN (CULS) W510TU	6-43-W5100-020	
7	SPK CABLE R/L 2244 15W 41 35MM L125H77UL (CVD) W308Z	6-23-5W310-0S0	
8	TOUCH PAD SYNAPTICS TM-0146-003 MULTI-GESTURE C4800	6-49-C4802-010	
9	TP TAPE MYLAR PET W540EU	6-40-W5401-010	
10	FFC CABLE CLICK TO MB 64MM 5V 4PIN (CULS) W510TU	6-43-W5100-010	
11	ANTENNA PEK-4 WLAN CONDU V01 W/L2 PCB FR4 W/L2-55MM W510LU	6-23-7W51L-060	
12	TAPE MYLAR (A)MYLAR M550J	6-40-M55J2-010	
13	W/L2 HDD (CVD)W510LU V01 EP W/L2 35MM 125H77UL (CVD) W308Z	6-77-W510LU00-N02-14C	
13	W/L2 HDD (CVD)W510LU V01 LITE-2 PCB 045/046/047/048/049/050/051/052/053/054/055/056/057/058/059/060/061/062/063/064/065/066/067/068/069/070/071/072/073/074/075/076/077/078/079/080/081/082/083/084/085/086/087/088/089/090/091/092/093/094/095/096/097/098/099/100/101/102/103/104/105/106/107/108/109/110/111/112/113/114/115/116/117/118/119/120/121/122/123/124/125/126/127/128/129/130/131/132/133/134/135/136/137/138/139/140/141/142/143/144/145/146/147/148/149/150/151/152/153/154/155/156/157/158/159/160/161/162/163/164/165/166/167/168/169/170/171/172/173/174/175/176/177/178/179/180/181/182/183/184/185/186/187/188/189/190/191/192/193/194/195/196/197/198/199/200/201/202/203/204/205/206/207/208/209/210/211/212/213/214/215/216/217/218/219/220/221/222/223/224/225/226/227/228/229/230/231/232/233/234/235/236/237/238/239/240/241/242/243/244/245/246/247/248/249/250/251/252/253/254/255/256/257/258/259/260/261/262/263/264/265/266/267/268/269/270/271/272/273/274/275/276/277/278/279/280/281/282/283/284/285/286/287/288/289/290/291/292/293/294/295/296/297/298/299/300/301/302/303/304/305/306/307/308/309/310/311/312/313/314/315/316/317/318/319/320/321/322/323/324/325/326/327/328/329/330/331/332/333/334/335/336/337/338/339/340/341/342/343/344/345/346/347/348/349/350/351/352/353/354/355/356/357/358/359/360/361/362/363/364/365/366/367/368/369/370/371/372/373/374/375/376/377/378/379/380/381/382/383/384/385/386/387/388/389/390/391/392/393/394/395/396/397/398/399/400/401/402/403/404/405/406/407/408/409/410/411/412/413/414/415/416/417/418/419/420/421/422/423/424/425/426/427/428/429/430/431/432/433/434/435/436/437/438/439/440/441/442/443/444/445/446/447/448/449/450/451/452/453/454/455/456/457/458/459/460/461/462/463/464/465/466/467/468/469/470/471/472/473/474/475/476/477/478/479/480/481/482/483/484/485/486/487/488/489/490/491/492/493/494/495/496/497/498/499/500/501/502/503/504/505/506/507/508/509/510/511/512/513/514/515/516/517/518/519/520/521/522/523/524/525/526/527/528/529/530/531/532/533/534/535/536/537/538/539/540/541/542/543/544/545/546/547/548/549/550/551/552/553/554/555/556/557/558/559/560/561/562/563/564/565/566/567/568/569/570/571/572/573/574/575/576/577/578/579/580/581/582/583/584/585/586/587/588/589/590/591/592/593/594/595/596/597/598/599/600/601/602/603/604/605/606/607/608/609/610/611/612/613/614/615/616/617/618/619/620/621/622/623/624/625/626/627/628/629/630/631/632/633/634/635/636/637/638/639/640/641/642/643/644/645/646/647/648/649/650/651/652/653/654/655/656/657/658/659/660/661/662/663/664/665/666/667/668/669/670/671/672/673/674/675/676/677/678/679/680/681/682/683/684/685/686/687/688/689/690/691/692/693/694/695/696/697/698/699/700/701/702/703/704/705/706/707/708/709/710/711/712/713/714/715/716/717/718/719/720/721/722/723/724/725/726/727/728/729/730/731/732/733/734/735/736/737/738/739/740/741/742/743/744/745/746/747/748/749/750/751/752/753/754/755/756/757/758/759/760/761/762/763/764/765/766/767/768/769/770/771/772/773/774/775/776/777/778/779/780/781/782/783/784/785/786/787/788/789/790/791/792/793/794/795/796/797/798/799/800/801/802/803/804/805/806/807/808/809/810/811/812/813/814/815/816/817/818/819/820/821/822/823/824/825/826/827/828/829/830/831/832/833/834/835/836/837/838/839/840/841/842/843/844/845/846/847/848/849/850/851/852/853/854/855/856/857/858/859/860/861/862/863/864/865/866/867/868/869/869/870/871/872/873/874/875/876/877/878/879/880/881/882/883/884/885/886/887/888/889/889/890/891/892/893/894/895/896/897/898/899/900/901/902/903/904/905/906/907/908/909/910/911/912/913/914/915/916/917/918/919/920/921/922/923/924/925/926/927/928/929/930/931/932/933/934/935/936/937/938/939/940/941/942/943/944/945/946/947/948/949/950/951/952/953/954/955/956/957/958/959/960/961/962/963/964/965/966/967/968/969/970/971/972/973/974/975/976/977/978/979/980/981/982/983/984/985/986/987/988/989/989/990/991/992/993/994/995/996/997/998/999/1000/1001/1002/1003/1004/1005/1006/1007/1008/1009/1010/1011/1012/1013/1014/1015/1016/1017/1018/1019/1020/1021/1022/1023/1024/1025/1026/1027/1028/1029/1030/1031/1032/1033/1034/1035/1036/1037/1038/1039/1040/1041/1042/1043/1044/1045/1046/1047/1048/1049/1050/1051/1052/1053/1054/1055/1056/1057/1058/1059/1060/1061/1062/1063/1064/1065/1066/1067/1068/1069/1070/1071/1072/1073/1074/1075/1076/1077/1078/1079/1080/1081/1082/1083/1084/1085/1086/1087/1088/1089/1089/1090/1091/1092/1093/1094/1095/1096/1097/1098/1099/1100/1101/1102/1103/1104/1105/1106/1107/1108/1109/1110/1111/1112/1113/1114/1115/1116/1117/1118/1119/1120/1121/1122/1123/1124/1125/1126/1127/1128/1129/1130/1131/1132/1133/1134/1135/1136/1137/1138/1139/1140/1141/1142/1143/1144/1145/1146/1147/1148/1149/1150/1151/1152/1153/1154/1155/1156/1157/1158/1159/1160/1161/1162/1163/1164/1165/1166/1167/1168/1169/1170/1171/1172/1173/1174/1175/1176/1177/1178/1179/1180/1181/1182/1183/1184/1185/1186/1187/1188/1189/1189/1190/1191/1192/1193/1194/1195/1196/1197/1198/1199/1200/1201/1202/1203/1204/1205/1206/1207/1208/1209/1210/1211/1212/1213/1214/1215/1216/1217/1218/1219/1220/1221/1222/1223/1224/1225/1226/1227/1228/1229/1230/1231/1232/1233/1234/1235/1236/1237/1238/1239/1240/1241/1242/1243/1244/1245/1246/1247/1248/1249/1250/1251/1252/1253/1254/1255/1256/1257/1258/1259/1260/1261/1262/1263/1264/1265/1266/1267/1268/1269/1270/1271/1272/1273/1274/1275/1276/1277/1278/1279/1280/1281/1282/1283/1284/1285/1286/1287/1288/1289/1289/1290/1291/1292/1293/1294/1295/1296/1297/1298/1299/1300/1301/1302/1303/1304/1305/1306/1307/1308/1309/1310/1311/1312/1313/1314/1315/1316/1317/1318/1319/1320/1321/1322/1323/1324/1325/1326/1327/1328/1329/1330/1331/1332/1333/1334/1335/1336/1337/1338/1339/1340/1341/1342/1343/1344/1345/1346/1347/1348/1349/1350/1351/1352/1353/1354/1355/1356/1357/1358/1359/1360/1361/1362/1363/1364/1365/1366/1367/1368/1369/1370/1371/1372/1373/1374/1375/1376/1377/1378/1379/1380/1381/1382/1383/1384/1385/1386/1387/1388/1389/1389/1390/1391/1392/1393/1394/1395/1396/1397/1398/1399/1400/1401/1402/1403/1404/1405/1406/1407/1408/1409/1410/1411/1412/1413/1414/1415/1416/1417/1418/1419/1420/1421/1422/1423/1424/1425/1426/1427/1428/1429/1430/1431/1432/1433/1434/1435/1436/1437/1438/1439/1440/1441/1442/1443/1444/1445/1446/1447/1448/1449/1450/1451/1452/1453/1454/1455/1456/1457/1458/1459/1460/1461/1462/1463/1464/1465/1466/1467/1468/1469/1470/1471/1472/1473/1474/1475/1476/1477/1478/1479/1480/1481/1482/1483/1484/1485/1486/1487/1488/1489/1489/1490/1491/1492/1493/1494/1495/1496/1497/1498/1499/1500/1501/1502/1503/1504/1505/1506/1507/1508/1509/1510/1511/1512/1513/1514/1515/1516/1517/1518/1519/1520/1521/1522/1523/1524/1525/1526/1527/1528/1529/1530/1531/1532/1533/1534/1535/1536/1537/1538/1539/1540/1541/1542/1543/1544/1545/1546/1547/1548/1549/1550/1551/1552/1553/1554/1555/1556/1557/1558/1559/1560/1561/1562/1563/1564/1565/1566/1567/1568/1569/1570/1571/1572/1573/1574/1575/1576/1577/1578/1579/1580/1581/1582/1583/1584/1585/1586/1587/1588/1589/1589/1590/1591/1592/1593/1594/1595/1596/1597/1598/1599/1600/1601/1602/1603/1604/1605/1606/1607/1608/1609/1610/1611/1612/1613/1614/1615/1616/1617/1618/1619/1620/1621/1622/1623/1624/1625/1626/1627/1628/1629/1630/1631/1632/1633/1634/1635/1636/1637/1638/1639/1640/1641/1642/1643/1644/1645/1646/1647/1648/1649/1650/1651/1652/1653/1654/1655/1656/1657/1658/1659/1660/1661/1662/1663/1664/1665/1666/1667/1668/1669/1670/1671/1672/1673/1674/1675/1676/1677/1678/1679/1680/1681/1682/1683/1684/1685/1686/1687/1688/1689/1689/1690/1691/1692/1693/1694/1695/1696/1697/1698/1699/1700/1701/1702/1703/1704/1705/1706/1707/1708/1709/1710/1711/1712/1713/1714/1715/1716/1717/1718/1719/1720/1721/1722/1723/1724/1725/1726/1727/1728/1729/1730/1731/1732/1733/1734/1735/1736/1737/1738/1739/1740/1741/1742/1743/1744/1745/1746/1747/1748/1749/1750/1751/1752/1753/1754/1755/1756/1757/1758/1759/1760/1761/1762/1763/1764/1765/1766/1767/1768/1769/1770/1771/1772/1773/1774/1775/1776/1777/1778/1779/1780/1781/1782/1783/1784/1785/1786/1787/1788/1789/1789/1790/1791/1792/1793/1794/1795/1796/1797/1798/1799/1800/1801/1802/1803/1804/1805/1806/1807/1808/1809/1809/1810/1811/1812/1813/1814/1815/1816/1817/1818/1819/1820/1821/1822/1823/1824/1825/1826/1827/1828/1829/1830/1831/1832/1833/1834/1835/1836/1837/1838/1839/1840/1841/1842/1843/1844/1845/1846/1847/1848/1849/1850/1851/1852/1853/1854/1855/1856/1857/1858/1859/1860/1861/1862/1863/1864/1865/1866/1867/1868/1869/1870/1871/1872/1873/1874/1875/1876/1877/1878/1879/1880/1881/1882/1883/1884/1885/1886/1887/1888/1889/1889/1890/1891/1892/1893/1894/1895/1896/1897/1898/1899/1900/1901/1902/1903/1904/1905/1906/1907/1908/1909/1910/1911/1912/1913/1914/1915/1916/1917/1918/1919/1920/1921/1922/1923/1924/1925/1926/1927/1928/1929/1930/1931/1932/1933/1934/1935/1936/1937/1938/1939/1940/1941/1942/1943/1944/1945/1946/1947/1948/1949/1950/1951/1952/1953/1954/1955/1956/1957/1958/1959/1960/1961/1962/1963/1964/1965/1966/1967/1968/1969/1970/1971/1972/1973/1974/1975/1976/1977/1978/1979/1980/1981/1982/1983/1984/1985/1986/1987/1988/1989/1989/1990/1991/1992/1993/1994/1995/1996/1997/1998/1999/2000/2001/2002/2003/2004/2005/2006/2007/2008/2009/2010/2011/2012/2013/2014/2015/2016/2017/2018/2019/2020/2021/2022/2023/2024/2025/2026/2027/2028/2029/2030/2031/2032/2033/2034/2035/2036/2037/2038/2039/2040/2041/2042/2043/2044/2045/2046/2047/2048/2049/2050/2051/2052/2053/2054/2055/2056/2057/2058/2059/2060/2061/2062/2063/2064/2065/2066/2067/2068/2069/2070/2071/2072/2073/2074/2075/2076/2077/2078/2079/2080/2081/2082/2083/2084/2085/2086/2087/2088/2089/2089/2090/2091/2092/2093/2094/2095/2096/2097/2098/2099/2100/2101/2102/2103/2104/2105/2106/2107/2108/2109/2110/2111/2112/2113/2114/2115/2116/2117/2118/2119/2120/2121/2122/2123/2124/2125/2126/2127/2128/2129/2130/2131/2132/2133/2134/2135/2136/2137/2138/2139/2140/2141/2142/2143/2144/2145/2146/2147/2148/2149/2150/2151/2152/2153/2154/2155/2156/2157/2158/2159/2160/2161/2162/2163/2164/2165/2166/2167/2168/2169/2170/2171/2172/2173/2174/2175/2176/2177/2178/2179/2180/2181/2182/2183/2184/2185/2186/2187/2188/2189/2189/2190/2191/2192/2193/2194/2195/2196/2197/2198/2199/2200/2201/2202/2203/2204/2205/2206/2207/2208/2209/2210/2211/2212/2213/2214/2215/2216/2217/2218/2219/2220/2221/2222/2223/2224/2225/2226/2227/2228/2229/2230/2231/2232/2233/2234/2235/2236/2237/2238/2239/2240/2241/2242/2243/2244/2245/2246/2247/2248/2249/2250/2251/2252/2253/2254/2255/2256/2257/2258/2259/2260/2261/2262/2263/2264/2265/2266/2267/2268/2269/2270/2271/2272/2273/2274/2275/2276/2277/2278/2279/2280/2281/2282/2283/2284/2285/2286/2287/2288/2289/2289/2290/2291/2292/2293/2294/2295/2296/2297/2298/2299/2300/2301/2302/2303/2304/2305/2306/2307/2308/2309/2310/2311/2312/2313/2314/2315/2316/2317/2318/2319/2320/2321/2322/2323/2324/2325/2326/2327/2328/2329/2330/2331/2332/2333/2334/2335/2336/2337/2338/2339/2340/2341/2342/2343/2344/2345/2346/2347/2348/2349/2350/2351/2352/2353/2354/2355/2356/2357/2358/2359/2360/2361/2362/2363/2364/2365/2366/2367/2368/2369/2370/2371/2372/2373/2374/2375/2376/2377/2378/2379/2380/2381/2382/2383/2384/2385/2386/2387/2388/2389/2389/2390/2391/2392/2393/2394/2395/2396/2397/2398/2399/2400/2401/2402/2403/2404/2405/2406/2407/2408/2409/2410/2411/2412/2413/2414/2415/2416/2417/2418/2419/2420/2421/2422/2423/2424/2425/2426/2427/2428/2429/2430/2431/2432/2433/2434/2435/2436/2437/2438/2439/2440/2441/2442/2443/2444/2445/2446/2447/2448/2449/2450/2451/2452/2453/2454/2455/2456/2457/2458/2459/2460/2461/2462/2463/2464/2465/2466/24		

Top (6W)

Figure A - 1
Top (6W)

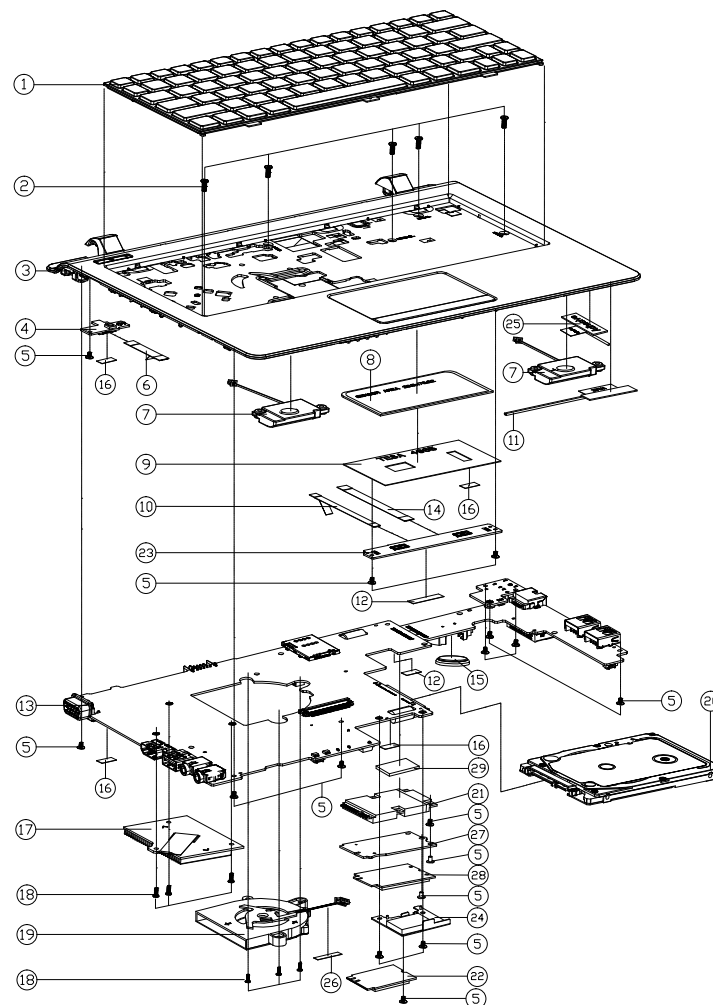[illegible]

Bottom (4W)

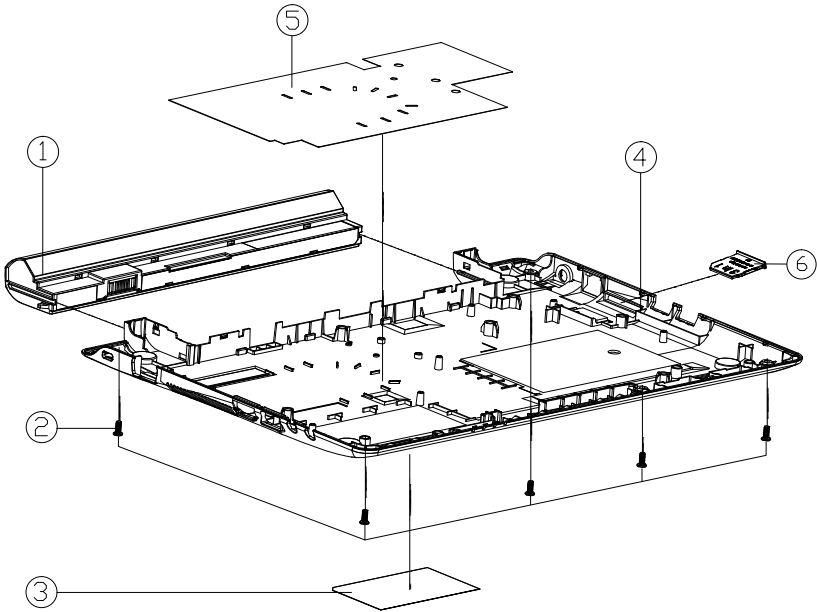



Figure A - 1
Bottom (4W)

ITEM	PART NAME	PART NO	REMARK
1	BATP S LI 11.1V/2200/2144H 35IP SMP/SOL 900T/02144F(CTEXTURED) W510TU	6-87-W510S-4292	
1	BATP S LI 11.1V/2200/2144H 35IP SMP/SOL 900T/02144F(CTEXTURED) W510TU AND LABEL CHANGE	6-87-W510S-42F2	
1	BATP S LI 11.1V/2200/2144H 35IP 02144/1202H 540363000(CTEXTURED) W510TU LABEL CHANGE	6-87-W510S-4UF2	
1	BATP S LI 11.1V/2200/2144H 35IP 02144/1202H 540363000(CTEXTURED) W510TU	6-87-W51LS-4UF	
2	SCREW M2.5*6L K BZ ICT NY	6-35-82125-6RA	
3	PRODUCT LABEL FOR W510LU	6-45-W510LU03-010	
4	BOTTOM CASE MODULE W510TU	6-39-W5103-011	
4	BOTTOM CASE MODULE W510TU-C	6-39-W5103-011-C	
5	BOTTOM CASE CU FOIL 0.25T W510TU	6-47-W5103-020	
6	DUMMY 30N NON PUSH TYPE PC+ABS (C7230P-701DE) W970SUW	6-42-W9708-030	

Part Lists


Bottom (6W)

Figure A - 1
Bottom (6W)

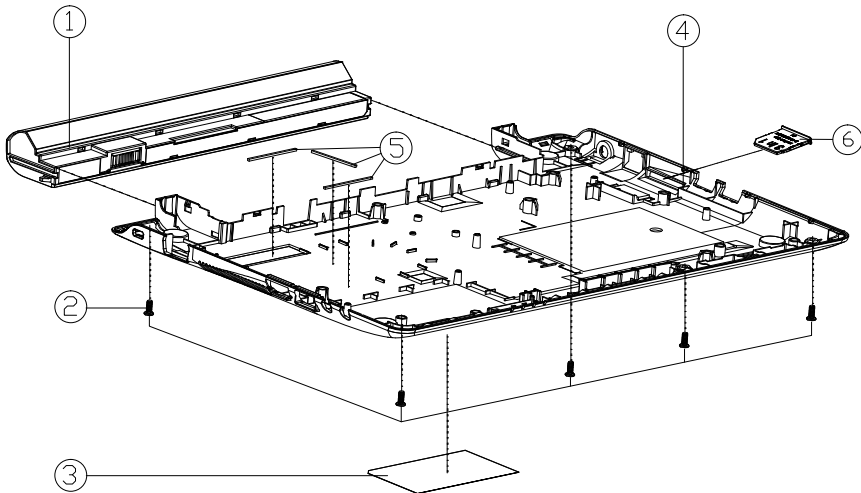

ITEM	PART NAME	PART NO	REMARK
1	BATP S LI 11.1V/2800mAh 30P SMP/STL 9801/0204F (TEXTURED) W510TU	6-87-W510S-4292	
1	BATP S LI 11.1V/2800mAh 30P SMP/STL 9801/0204F (TEXTURED) W510TU AND LABEL CHANGE	6-87-W510S-42F2	
1	BATP S LI 11.1V/2800mAh 30P DETACHABLE SWITCH/STL 9801/0204F (TEXTURED) W510TU AND LABEL CHANGE	6-87-W510S-4UF2	
1	BATP S LI 11.1V/2800mAh 30P DETACHABLE IP-V50P-30/25W (WHITE) W510LU	6-87-W51LS-4UF	
2	SCREW M2.5*6L K BZ ICT NY	6-35-82125-6RA	
3	PRODUCT LABEL FOR W510LU	6-45-W510LU03-010	
4	BOTTOM CASE MODULE W510TU	6-39-W5103-011	
4	BOTTOM CASE MODULE W510TU-C	6-39-W5103-011-C	
5	BOTTOM CASE SPONGE (52*44*4) (SM55+G4000) W515TU	6-47-0019A-523	
6	DUMMY 3IN1 NON PUSH TYPE PC+ABS (C7220P-7010C) W9703UW	6-42-W9708-030	

LCD

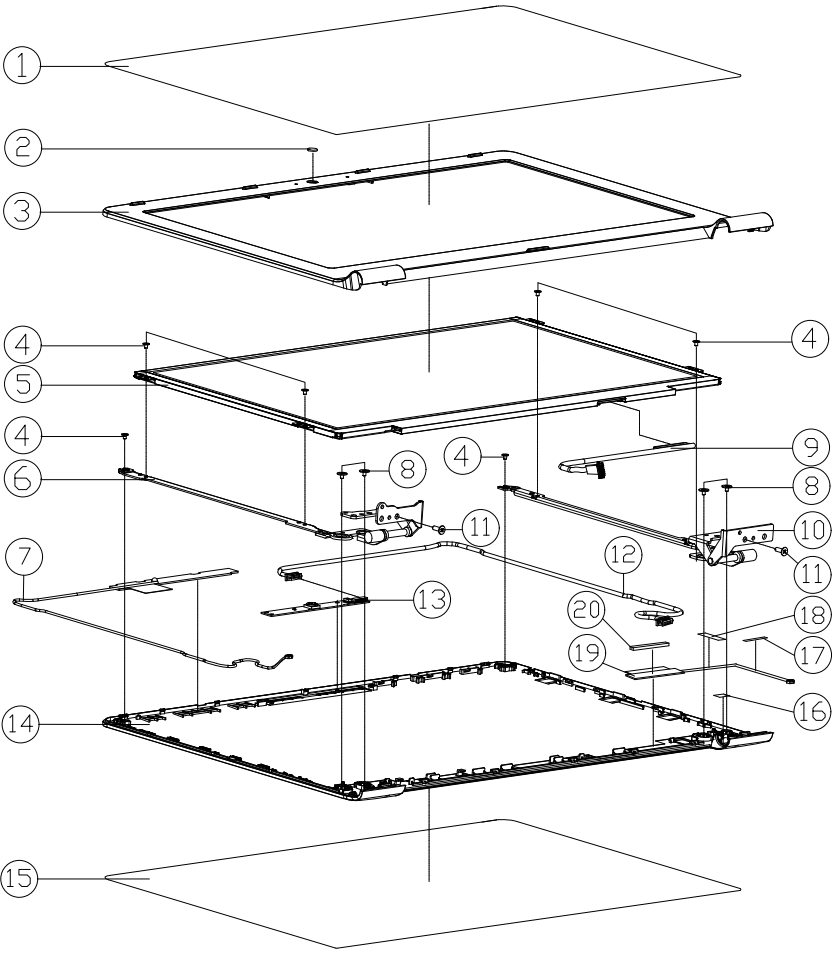

ITEM	PART NAME	PART NO	REMARK
1	LCD PANEL PROTECT MYLAR PET W310CZ	6-40-W3101-010	
2	CCD LENS (PMMA) W510TU	6-42-W5101-010	
3	LCD FRONT COVER MODULE(CHARGE) W510TU	6-39-W5101-014	
4	SCREW M2*2.5L KI BK/Z ICT NYØ3.5 T=0.3	6-35-B6120-2RB	
5	LCD 11.6" HD (EDP-A) INNOVUX N163GE-EA2 (LED) 3.0MM	6-50-B8130-V01	
5	LCD 11.6" HD (EDP-GLARE) TYPE CHIMEI N163WVS V0 (3.6MM) (LED)	6-50-B8136-D02	
5	LCD 11.6" HD AU N163WVS V1 FH (GLARE TYPE) (3.6MM) (LED) (EDP)	6-50-B8136-G03	
5	LCD 11.6" HD CHIMEI N163GE-L42 VIR (GLARE TYPE) (LED) 3.4MM	6-50-B8134-D01	
5	LCD 11.6" HD (EDP-ANGULAR TYPE) INNOVUX N163GE-EB2 (LED) 3.0MM	6-50-B8130-V00	
6	EDP HINGE MODULE L (SK7+SECC) W510TU	6-33-W5101-L11	FOR EDP
6	LVDS HINGE MODULE L (SK7+SECC) W510TU	6-33-W5101-L01	FOR LVDS
7	ANTENNA IPEX-4 SMD1206 WGT W1 PCB FR4 0.5/0.006/0.006/0.25/0.25/0.004 L=50MM W510LU	6-23-7W51L-010	
8	SCREW M2*2L KI BK/Z ICT NYØ8,T=0.6	6-35-B6120-2RE	
9	WIRE CABLE FOR EDP 3.3V 40P W/B (HT) (HL) CONN. (EDP-EDP) W510TU	6-43-W5151-010-C	FOR EDP
9	WIRE CABLE FOR LVDS 280MM 3.3V 30P W/B (HL/LA) CONN. (EDP-EDP) W510TU	6-43-W5101-021-P	FOR LVDS
9	WIRE CABLE FOR EDP 270MM 3.3V 40P W/B (HL/LA) CONN. (EDP-EDP) W510TU	6-43-W5101-030-N	FOR 6-50-B8130-V00
10	EDP HINGE MODULE R (SK7+SECC) W510TU	6-33-W5101-R11	FOR EDP
10	LVDS HINGE MODULE R (SK7+SECC) W510TU	6-33-W5101-R01	FOR LVDS
11	SCREW M2.5*6L K BZ ICT NY	6-35-82125-6RA	
12	WIRE CABLE FOR CCD 500MM 3.3V 8P (HT) W510TU	6-43-W515T-010	
13	UVC CAMERA CHIMY FIX CHIMY 30 IN HD SET1 W510TU F1665 V16D W/B-MIC	6-88-W940C-5100	
13	UVC CAMERA CHIMY FIX CHIMY 30 IN HD SET2 W510TU F1665 V16D W/B-MIC	6-88-W940C-4902	
14	LCD BACK COVER MODULE W510TU-D	6-39-W5101-D20	
14	LCD BACK COVER MODULE W510TU	6-39-W5101-022	
14	LCD BACK COVER MODULE W510TU-C	6-39-W5101-022-C	
15	LCD BACK COVER PROTECT MYLAR PET W310CZ	6-40-W3101-020	
16	REVERSIBLE(7*4*0.15 5000NS)FOR W510TU	6-40-W51TU-010	
17	TAPE MYLAR TRANS4965 (40*2*0.15T) W510TU	6-40-W5101-401	
18	TAPE MYLAR TRANSPARENT (30*5*0.05) W25HPQ	6-40-W25P3-010	
19	ANTENNA IPEX-4 WLAN COMBO WGT W1 PCB FR4 W1=50MM W510LU	6-23-7W51L-050	
20	FRONT COVER RUBBER+SONY G4000 (20*3*2.5) W510LU	6-47-W51L1-010	

Figure A - 2
LCD

Appendix B: Schematic Diagrams

This appendix has circuit diagrams of the **W510LU** notebook's PCB's. The following table indicates where to find the appropriate schematic diagram.

Table B - 1
**SCHEMATIC
DIAGRAMS**

Diagram - Page	Diagram - Page	Diagram - Page
<i>System Block Diagram - Page B - 2</i>	<i>HDMI - Page B - 15</i>	<i>Power SW Board - Page B - 28</i>
<i>SOC 1/8 - Page B - 3</i>	<i>Audio Codec ALC269Q-VC2 - Page B - 16</i>	<i>Click Board - Page B - 29</i>
<i>SOC 2/8 - Page B - 4</i>	<i>HDD, LED - Page B - 17</i>	<i>VDD3, VDD5 - Page B - 30</i>
<i>SOC 3/8 - Page B - 5</i>	<i>USB, TPM - Page B - 18</i>	<i>Power 1.8VA/1.5VS - Page B - 31</i>
<i>SOC 4/8 - Page B - 6</i>	<i>Conn, CCD, Fan, Click - Page B - 19</i>	<i>Power 1.05VA/1.15VA/1.24VA - Page B - 32</i>
<i>SOC 5/8 - Page B - 7</i>	<i>NGFF Card - Page B - 20</i>	<i>VTT_MEM/1.35V - Page B - 33</i>
<i>SOC 6/8 - Page B - 8</i>	<i>KBC ITE IT8987E - Page B - 21</i>	<i>VGG - Page B - 34</i>
<i>SOC 7/8 - Page B - 9</i>	<i>System Power - Page B - 22</i>	<i>Power VCore - Page B - 35</i>
<i>SOC 8/8 - Page B - 10</i>	<i>Level Shifter 1 - Page B - 23</i>	<i>AC-In, Charger - Page B - 36</i>
<i>DDR3 SO-DIMM_0 - Page B - 11</i>	<i>Level Shifter 2 - Page B - 24</i>	<i>Power On SEQ - Page B - 37</i>
<i>RTD2136N-CG - Page B - 12</i>	<i>I/O Board - Page B - 25</i>	
<i>RTD2168-CG, CRT - Page B - 13</i>	<i>RTL8402 - Page B - 26</i>	
<i>Panel - Page B - 14</i>	<i>AC-In Conn - Page B - 27</i>	




Version Note

The schematic diagrams in this chapter are based upon version 6-7P-W51L5-002. If your mainboard (or other boards) are a later version, please check with the Service Center for updated diagrams (if required).

System Block Diagram

Sheet 1 of 36
System Block
Diagram

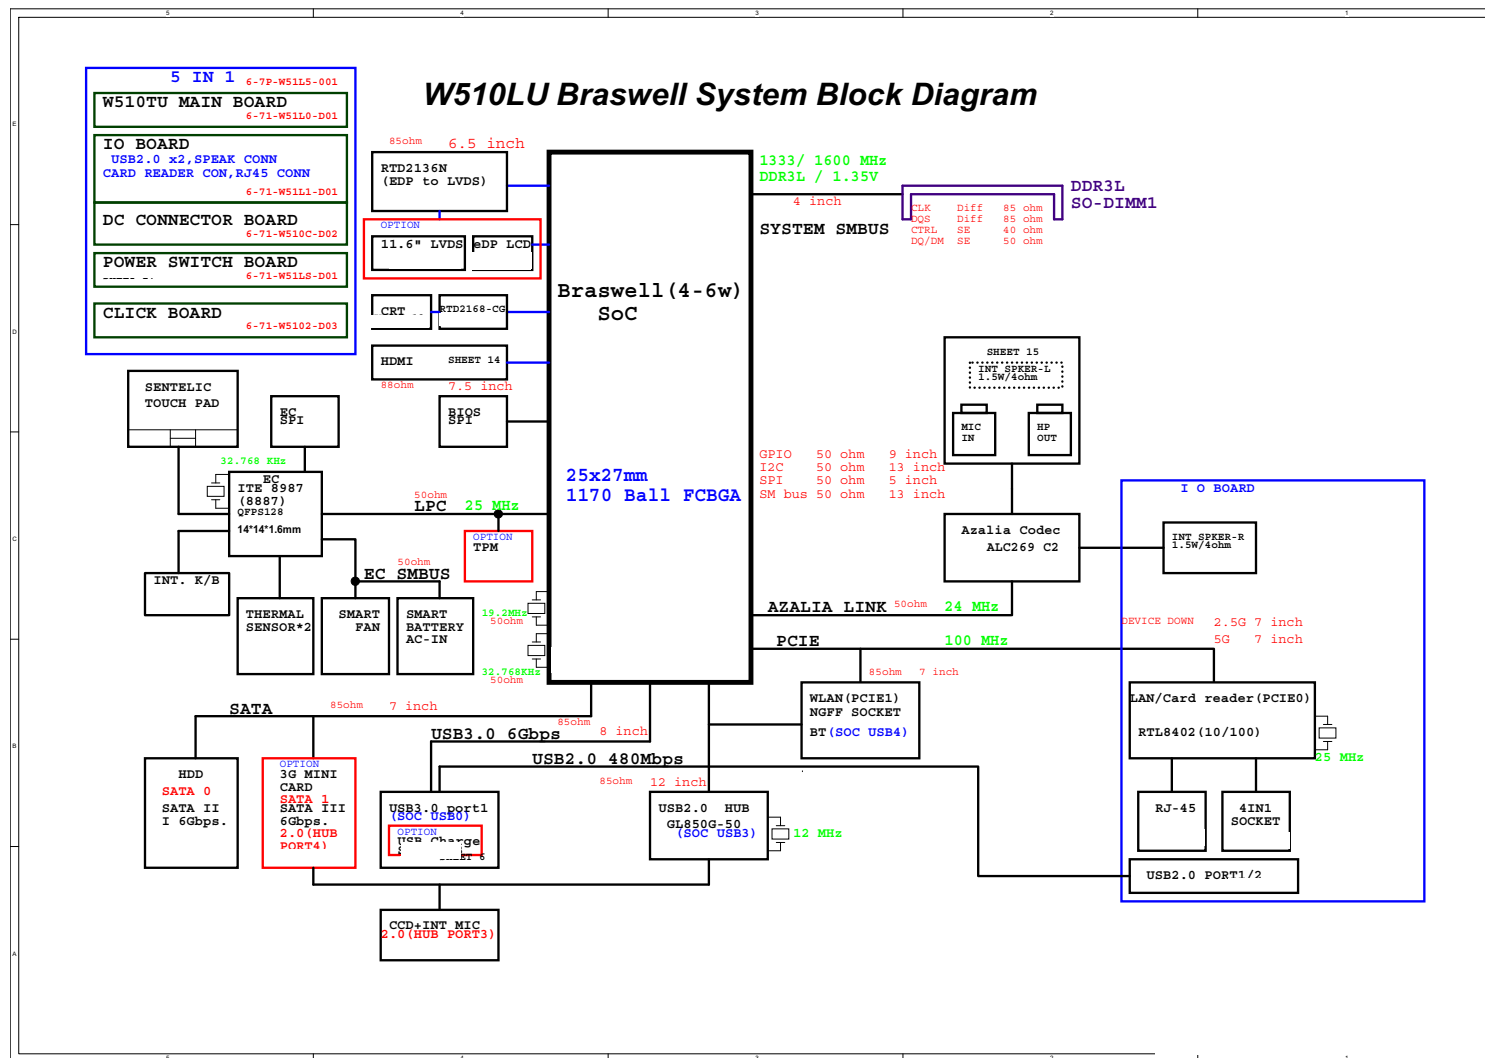


Sheet 2 of 36
SOC 1/8




Schematic Diagrams

SOC 2/8

Sheet 3 of 36
SOC 2/8

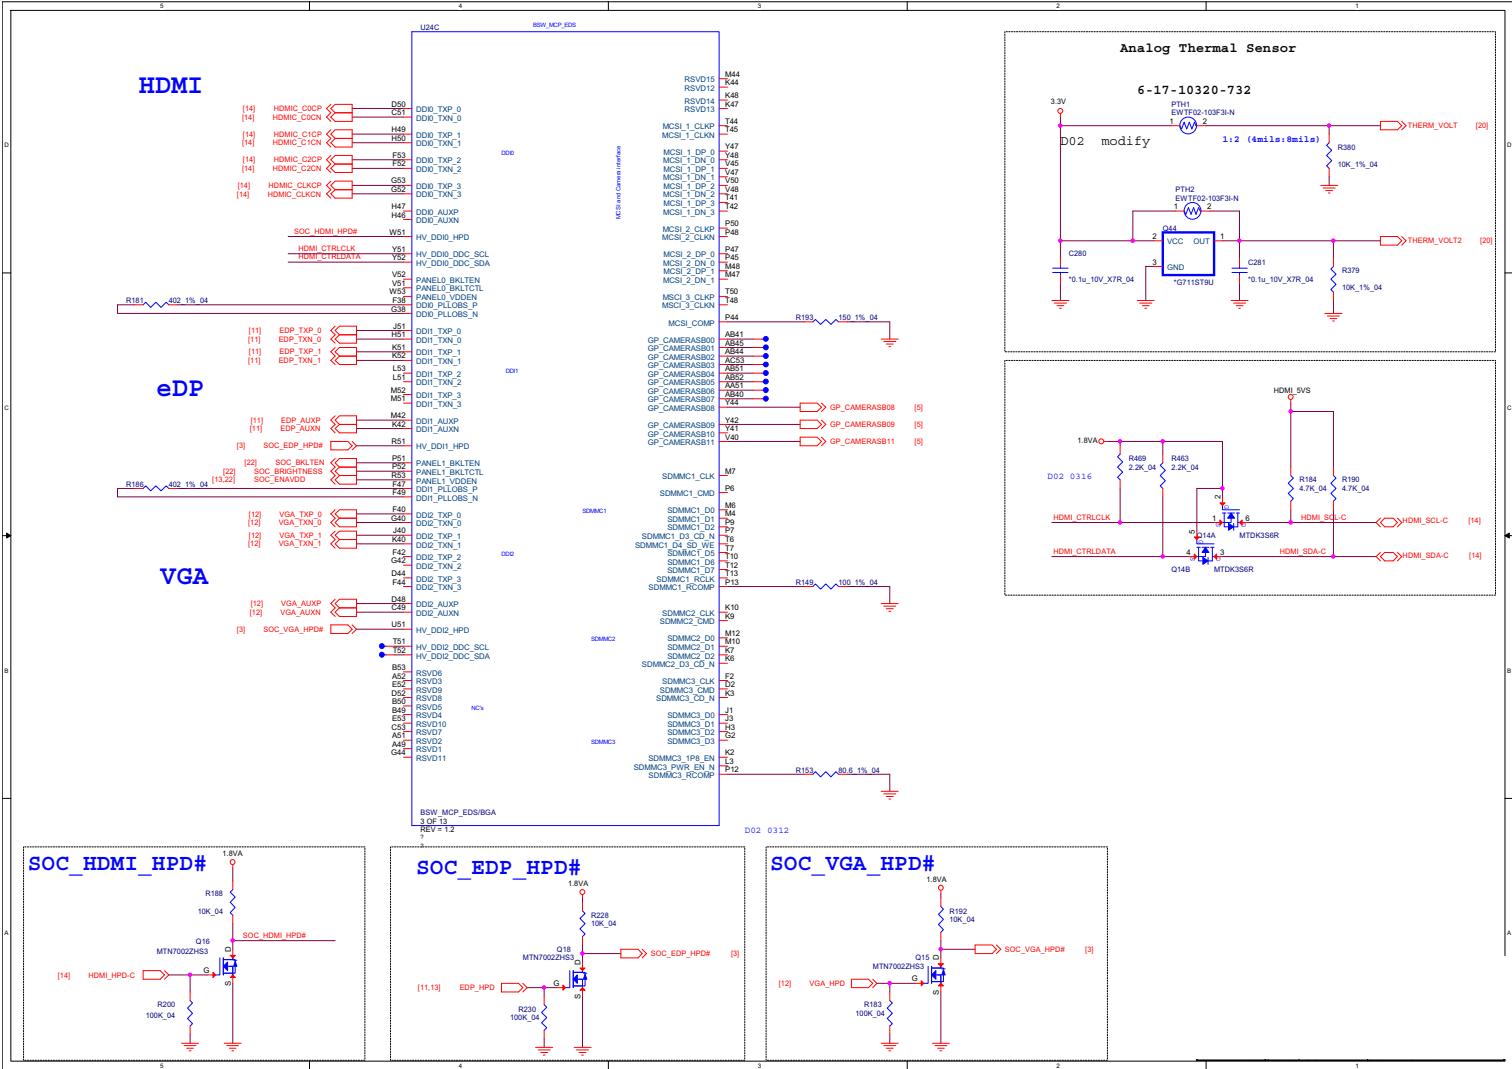

SOC 3/8

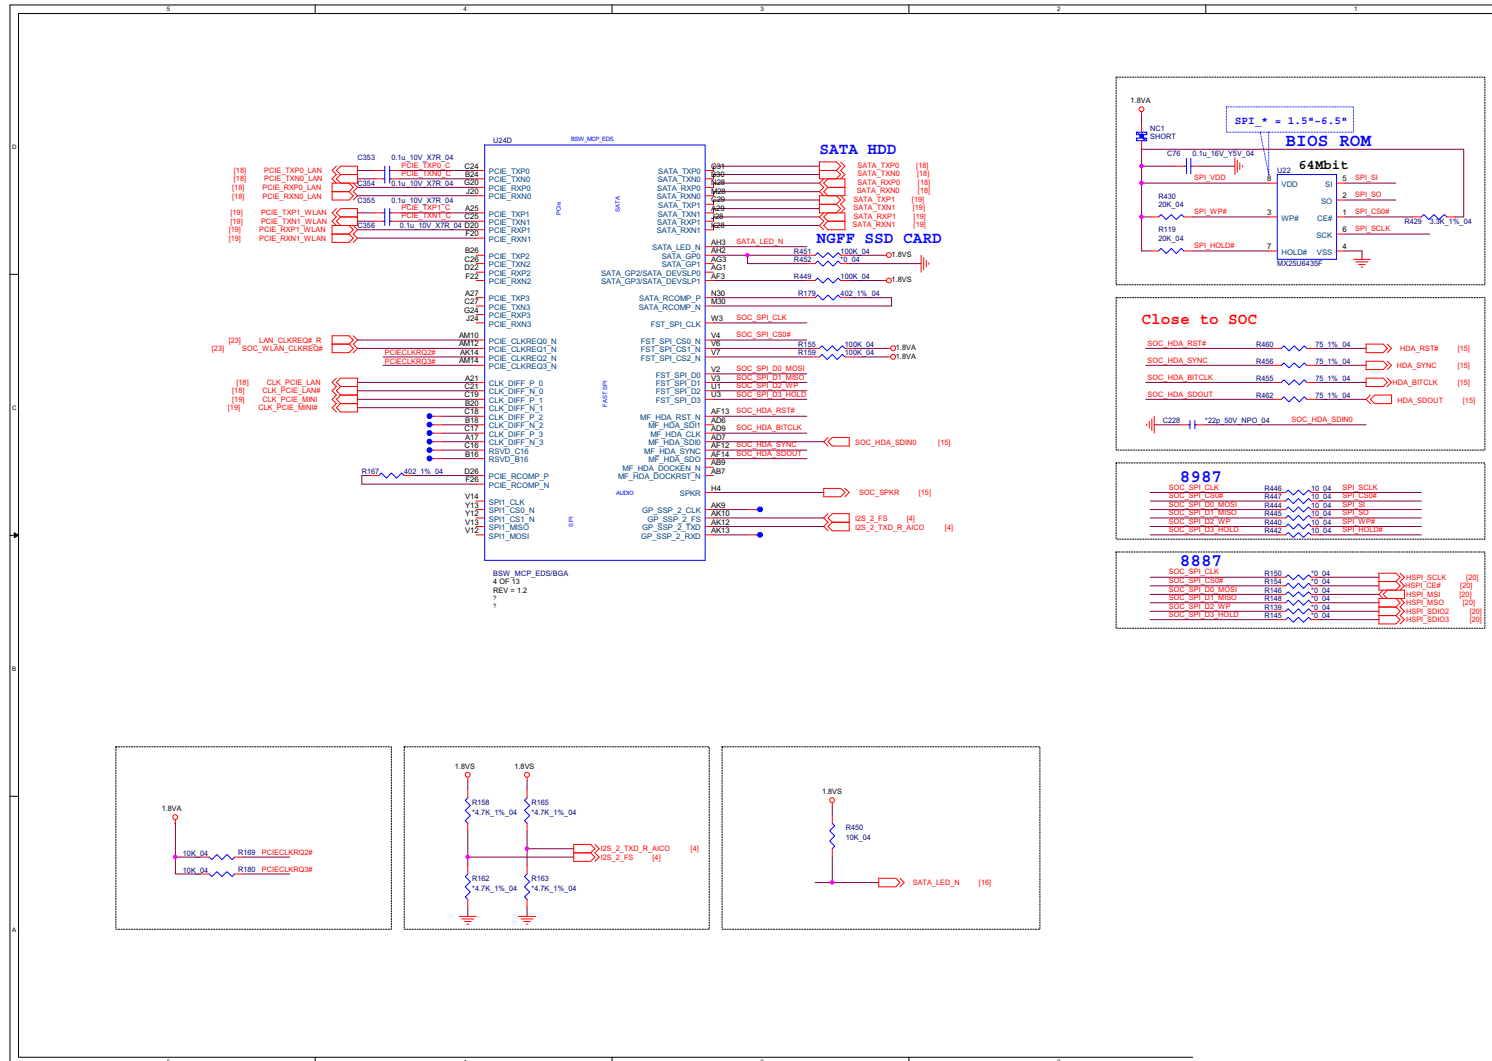


Sheet 4 of 36
SOC 3/8

SOC 4/8


B. Schematic Diagrams

Sheet 5 of 36
SOC 4/8

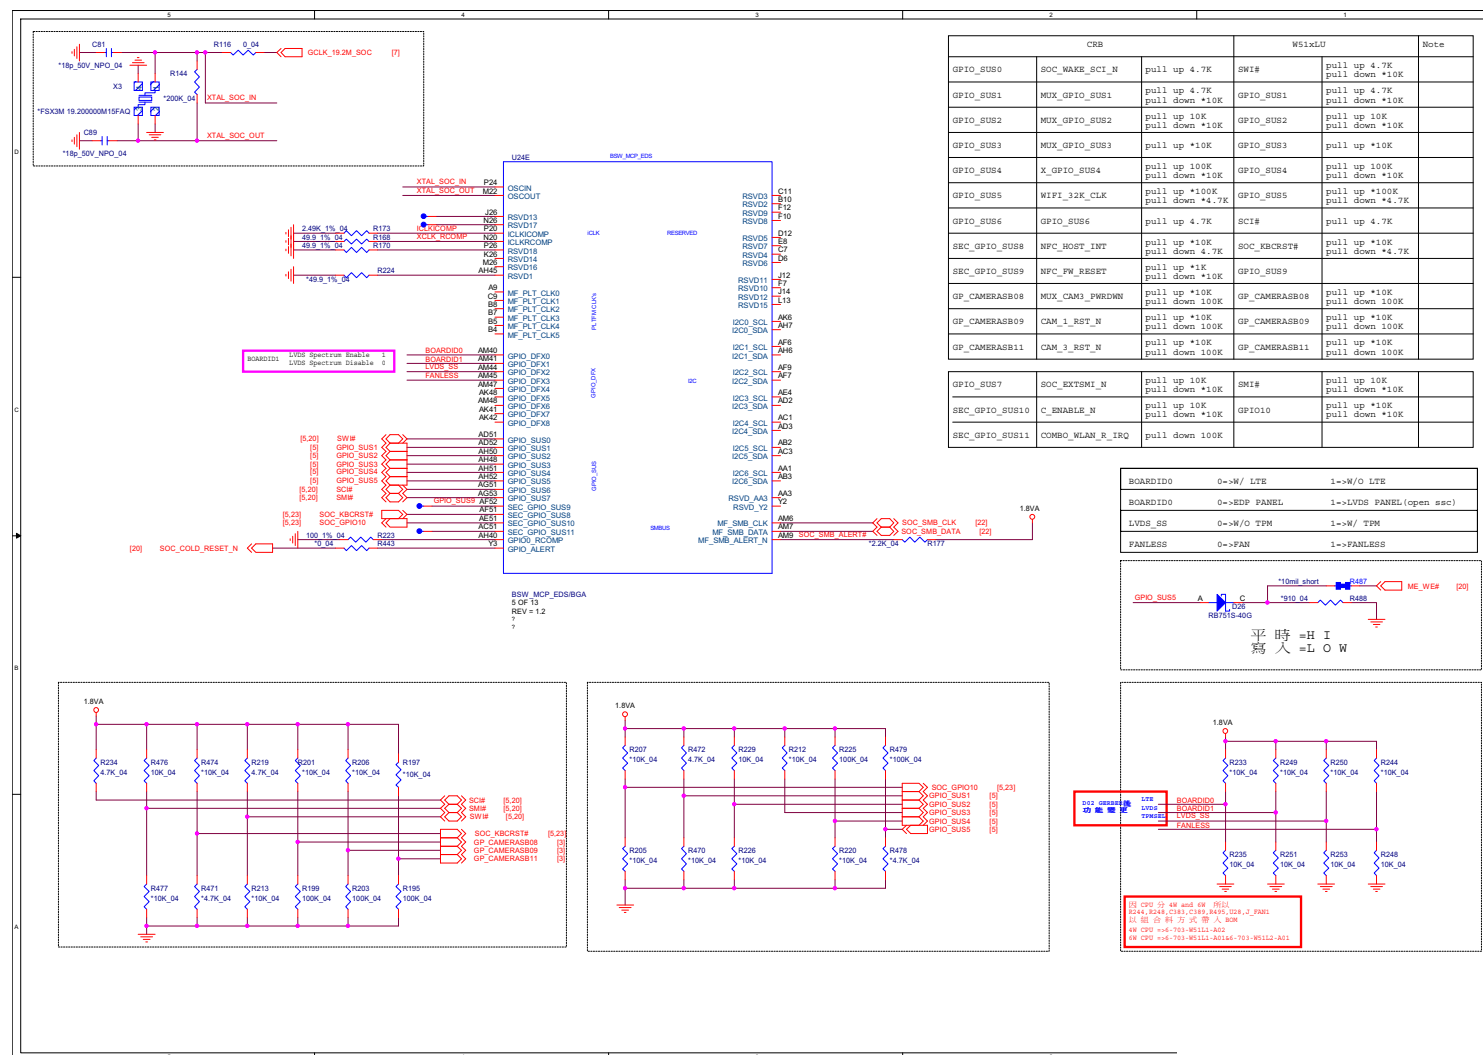

Schematic Diagrams


SOC 5/8

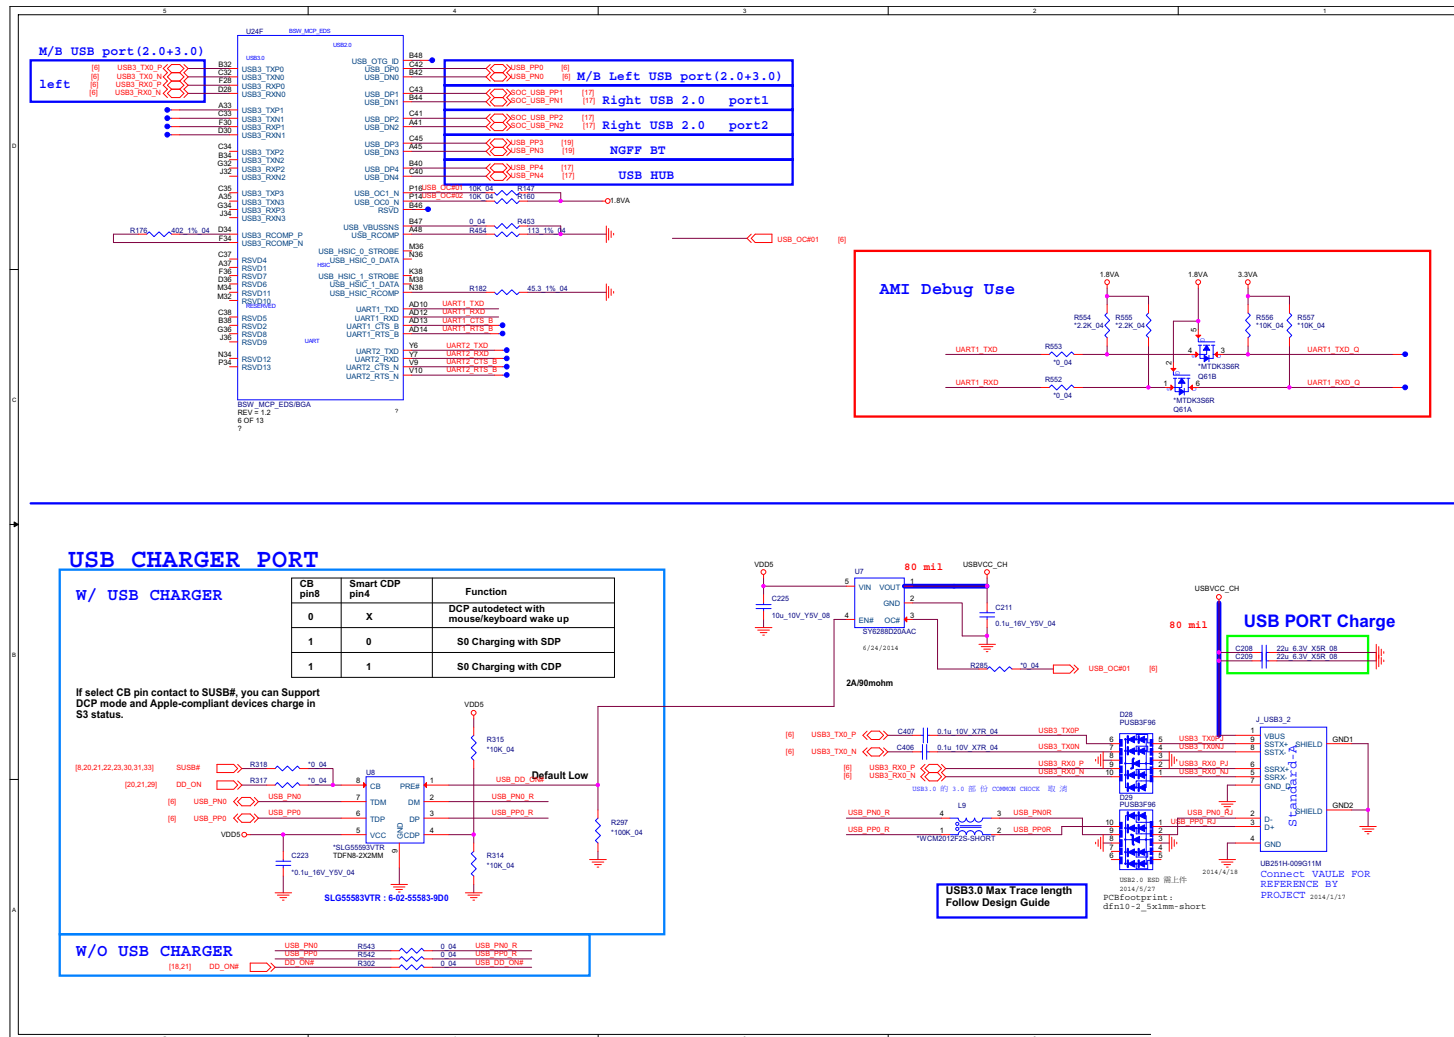


Schematic Diagrams

SOC 6/8

Sheet 7 of 36
SOC 6/8

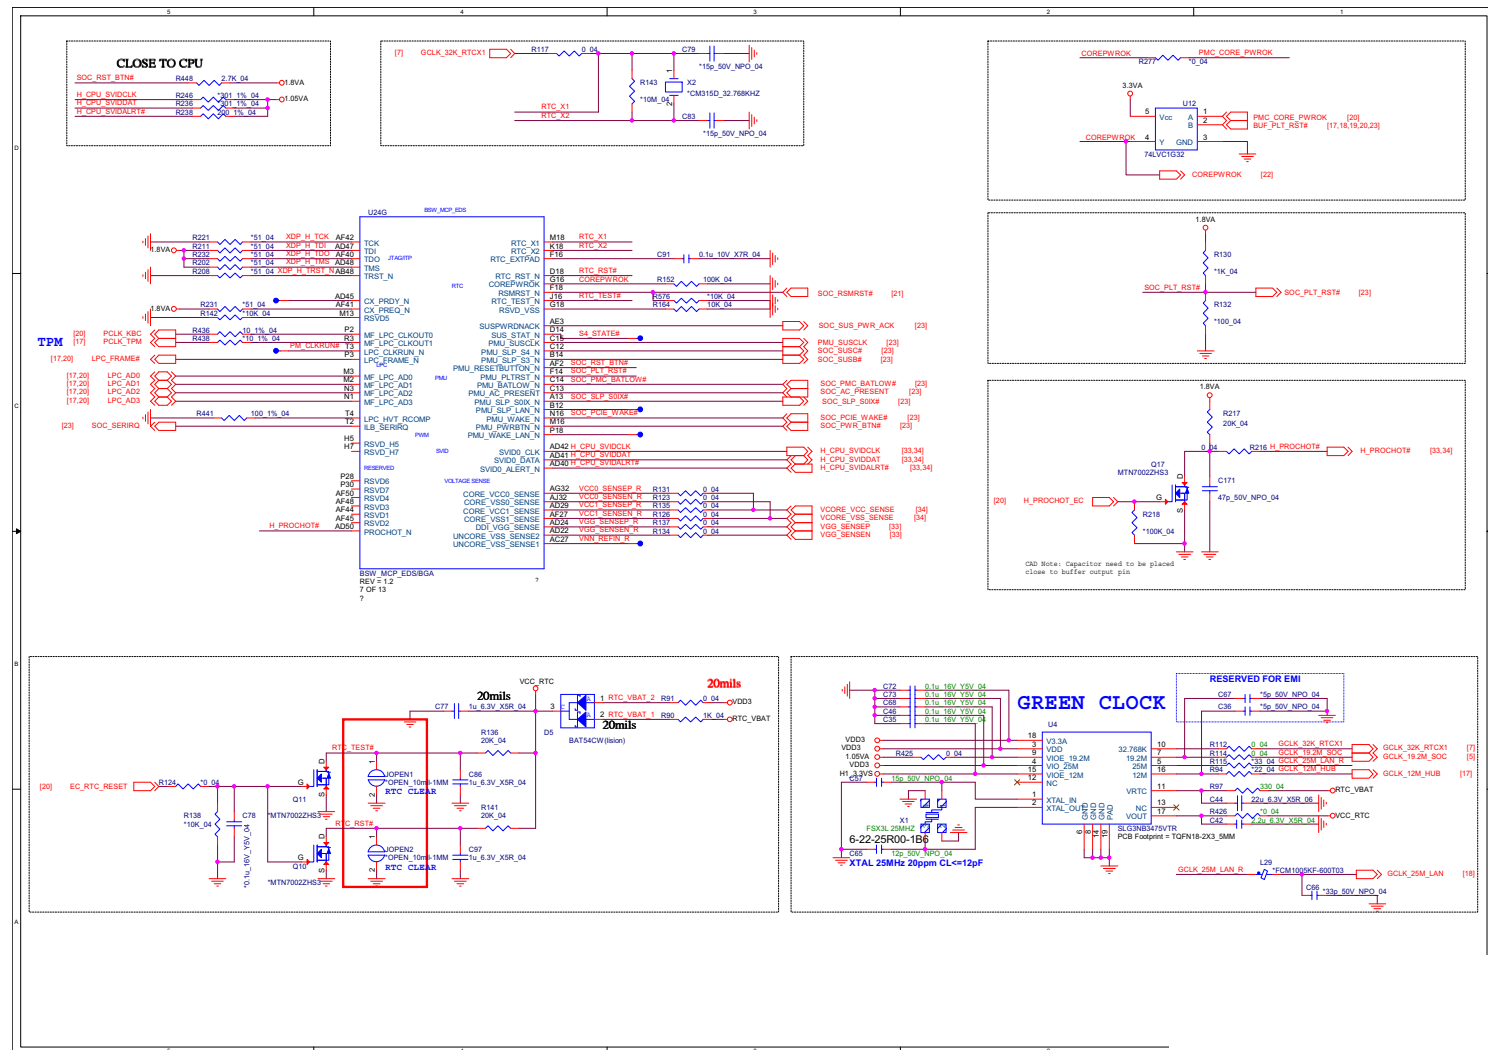

SOC 7/8

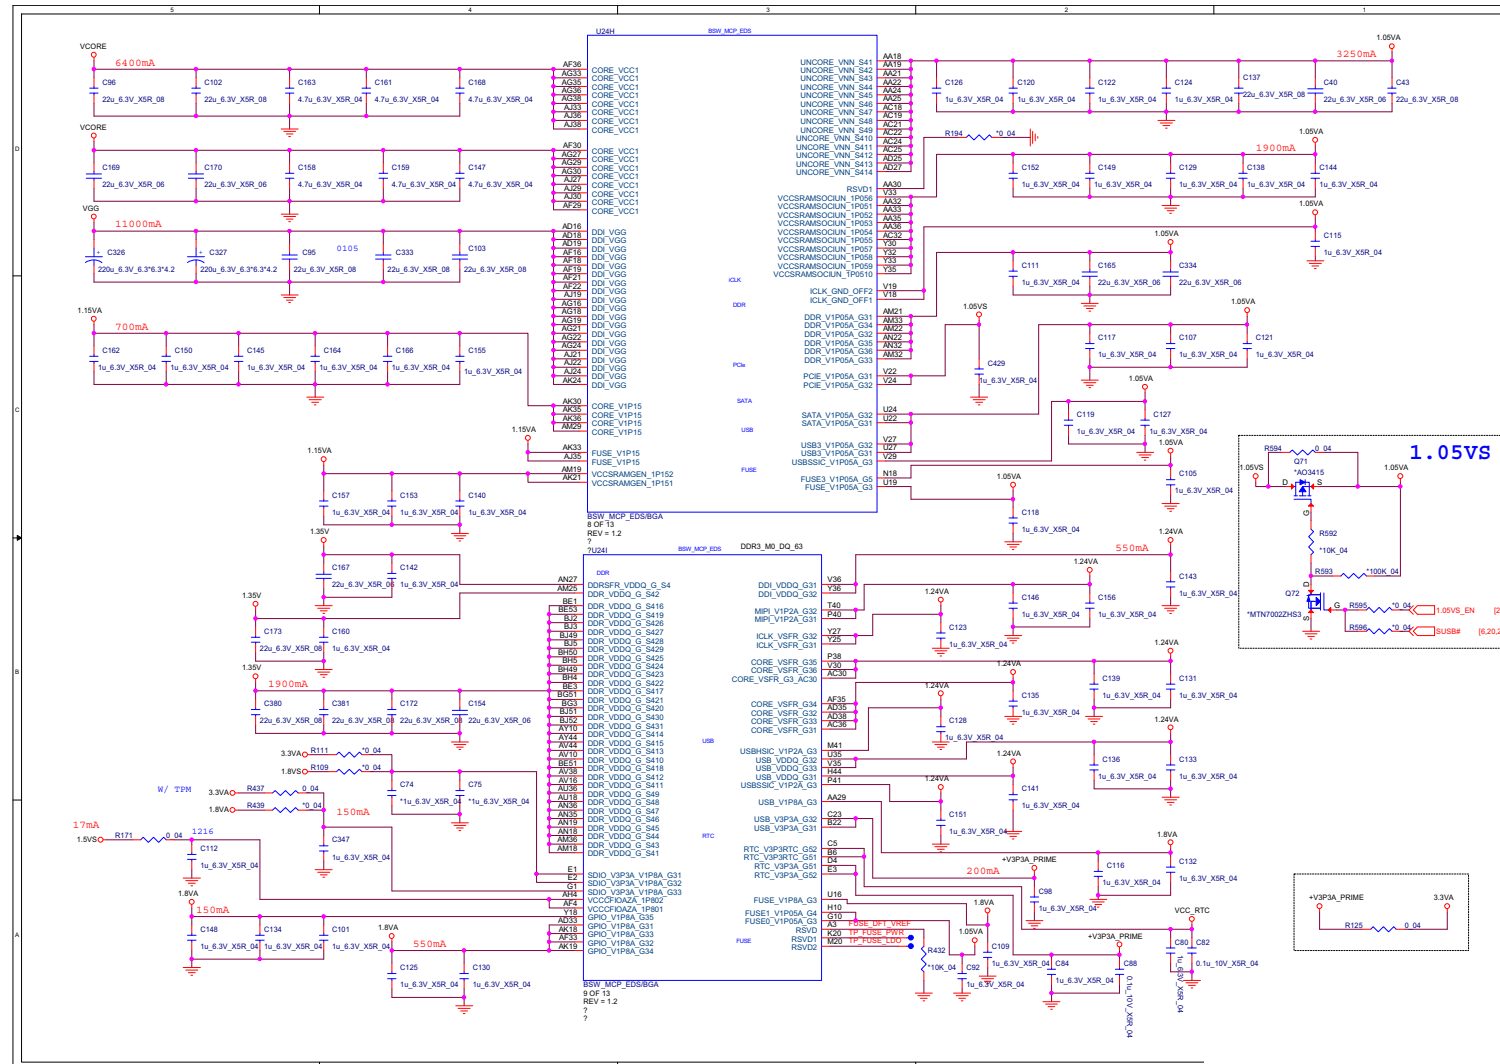


Sheet 8 of 36
SOC 7/8


SOC 8/8

B. Schematic Diagrams

Sheet 9 of 36
SOC 8/8

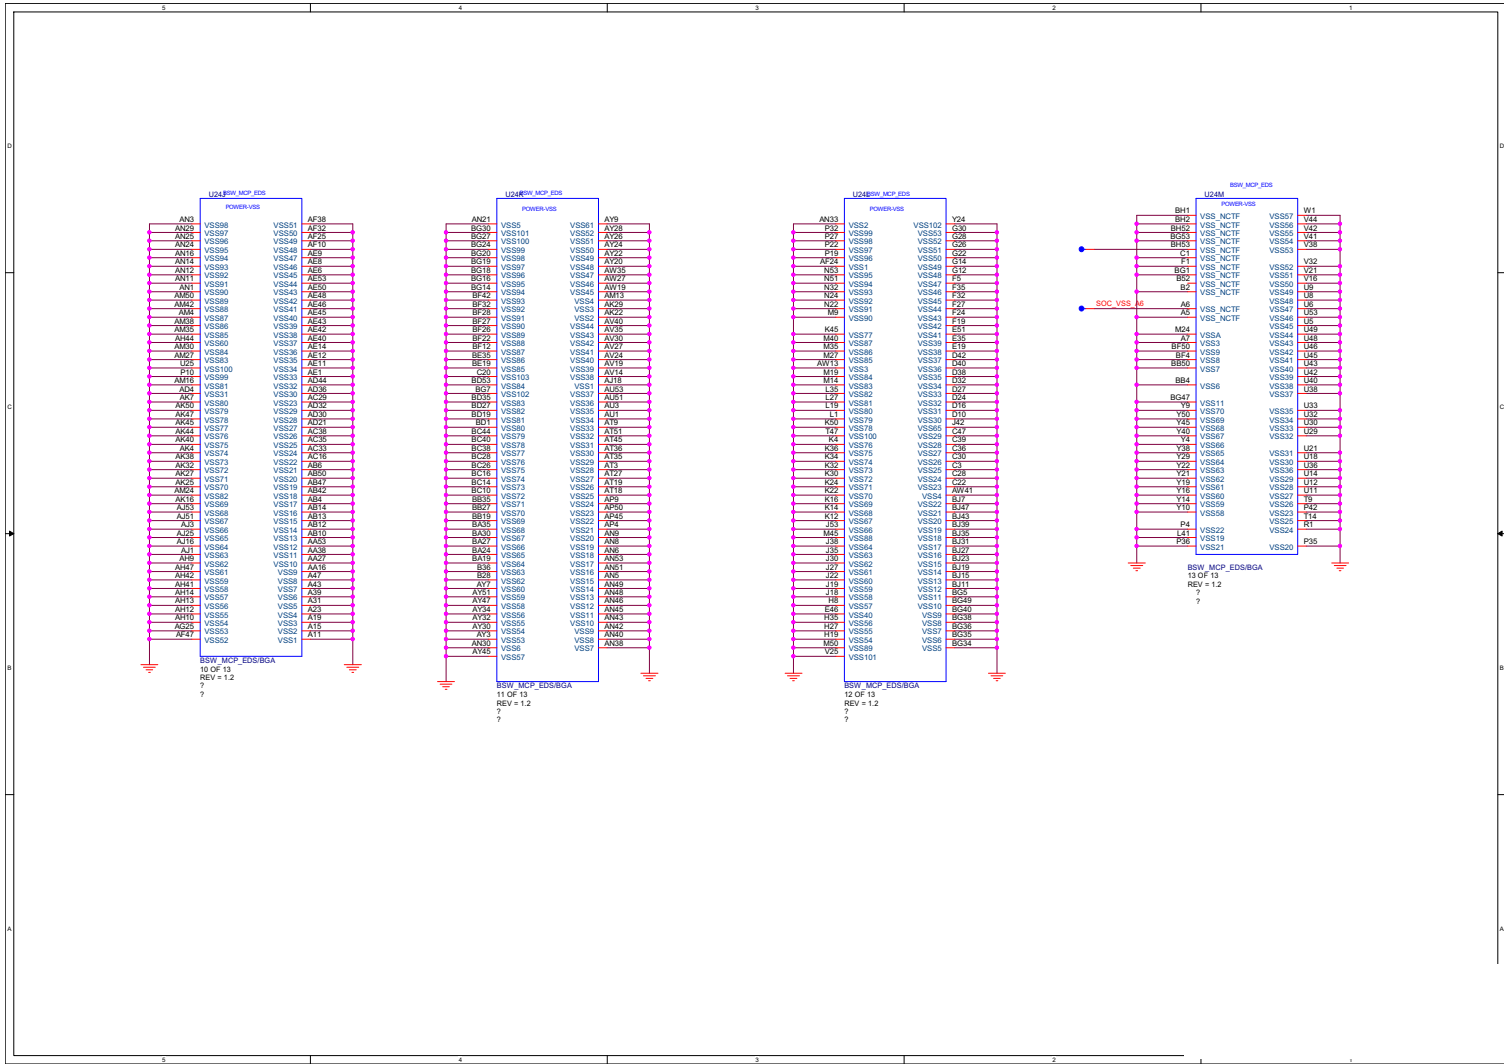


DDR3 SO-DIMM_0

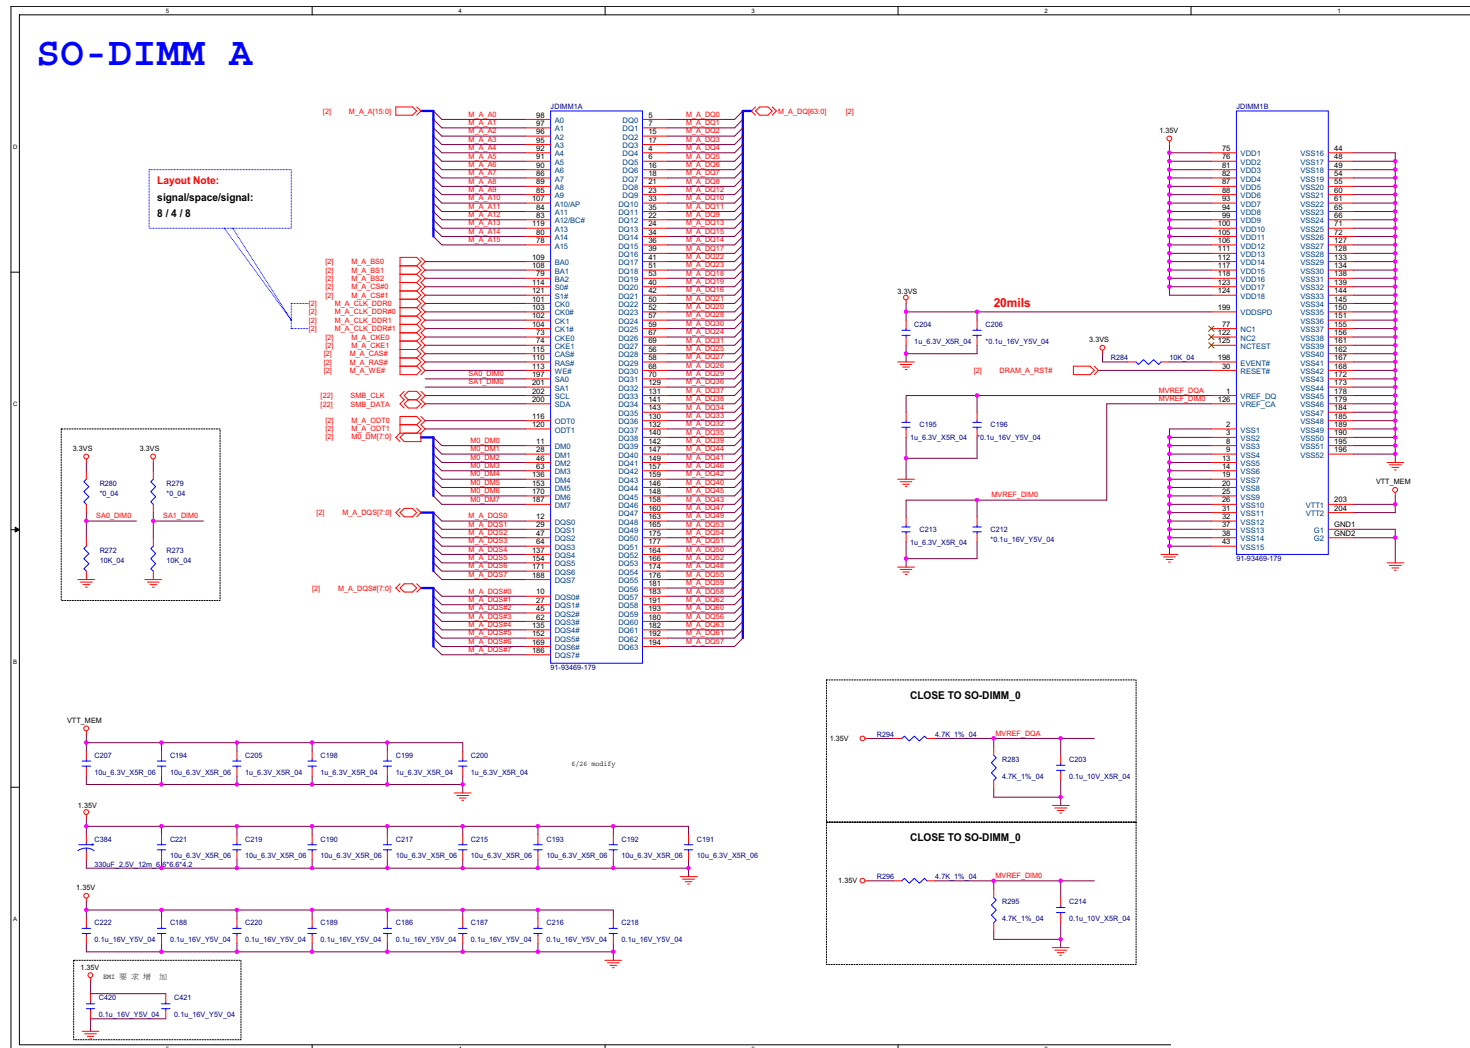

RTD2136N-CG

Sheet 11 of 36
RTD2136N-CG

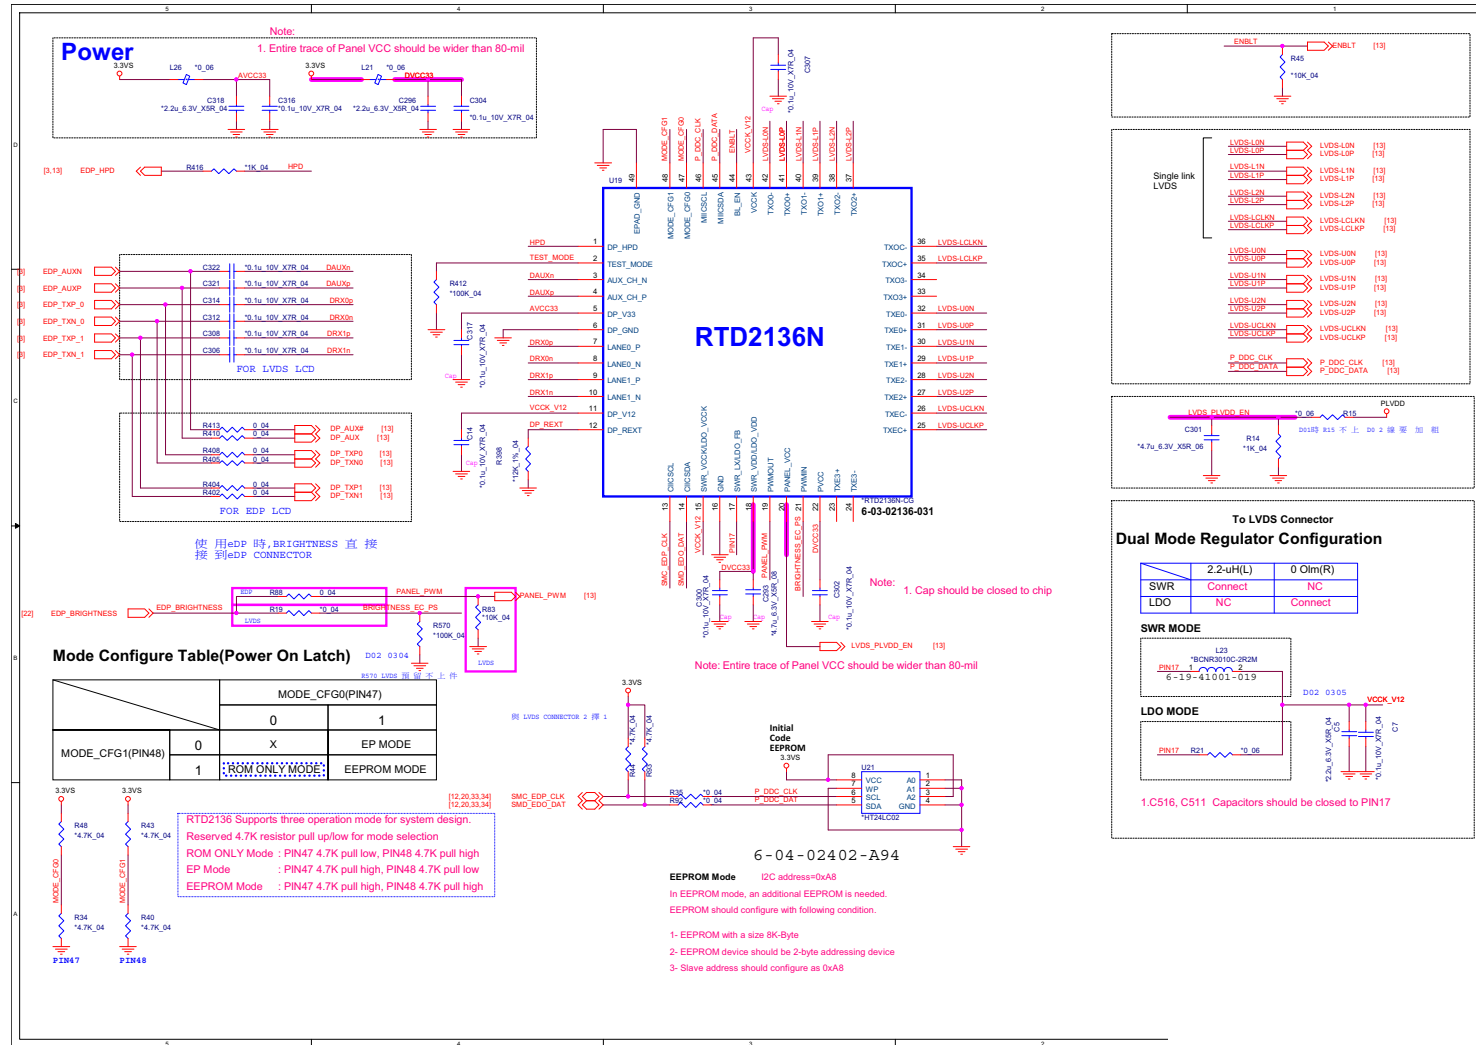


B.Schematic Diagrams

[illegible]

RTD2168-CG, CRT B - 13

Panel

Sheet 13 of 36
Panel

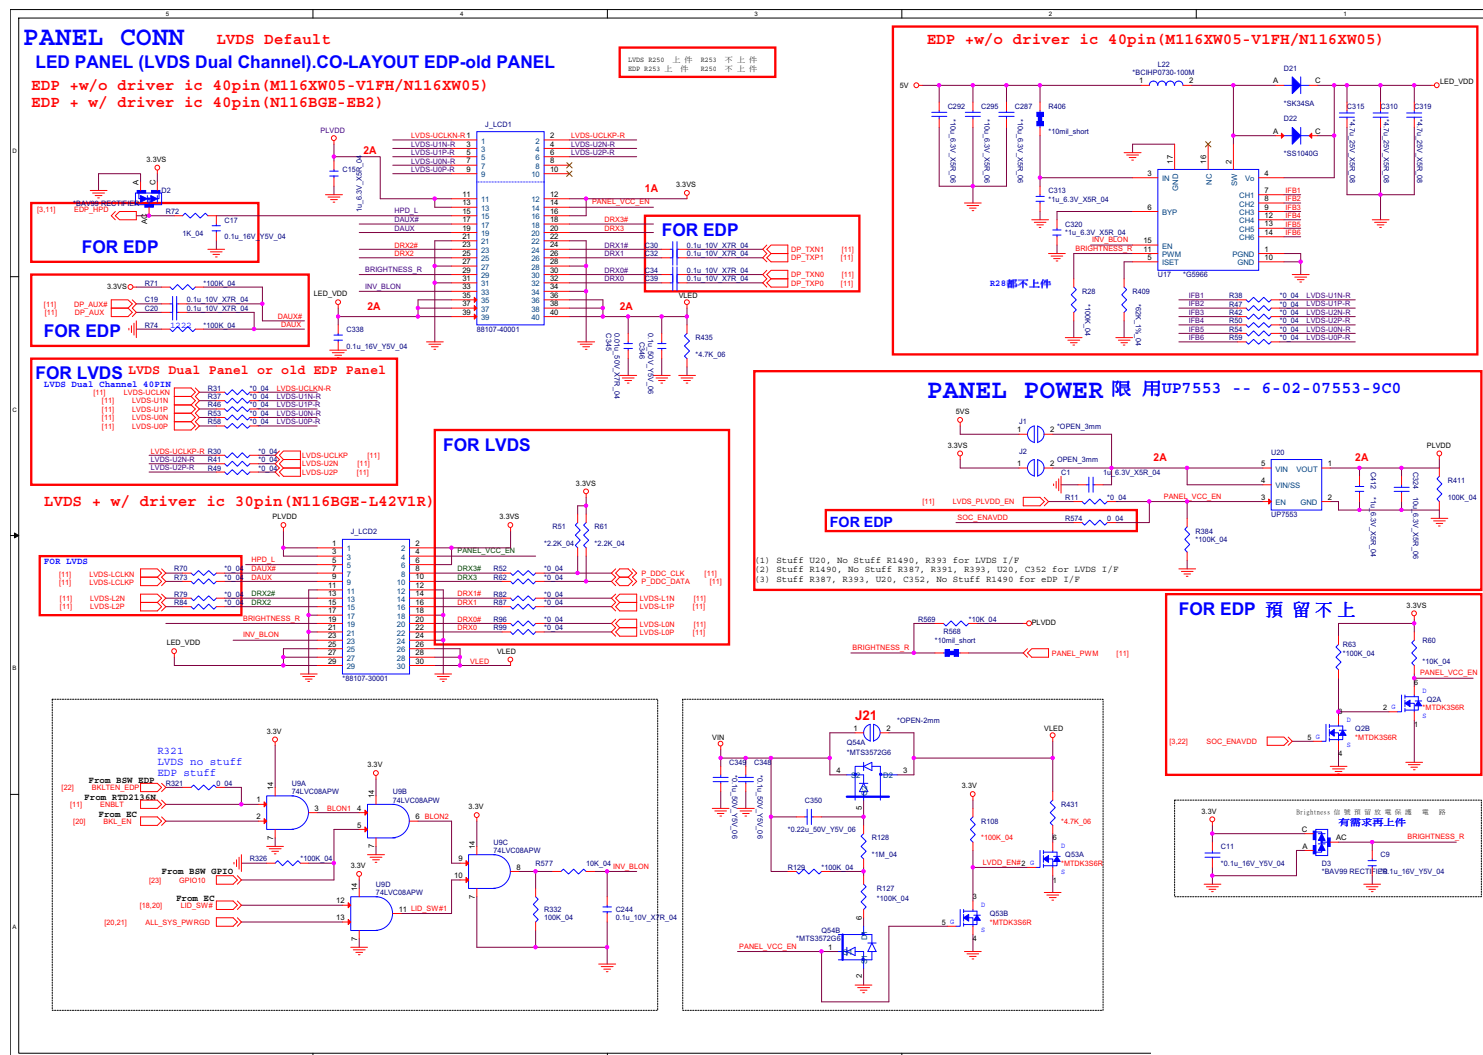

60950-1安規要求,
外供電源符合LPS
≤ 8A 設計

(W/O LEVELSHIFT)

For ESD

輸出命名以INTEL IC PIN 定義,
接線確認

IC端
DATA2
DATA1
DATA0
CLOCK

CONNECTOR端
DATA0
DATA1
DATA2
CLOCK


如有不同,再依 IC
要求去調整

B.Schematic Diagrams


Audio Codec ALC269Q-VC2

B. Schematic Diagrams

Sheet 15 of 36
Audio Codec
ALC269Q-VC2

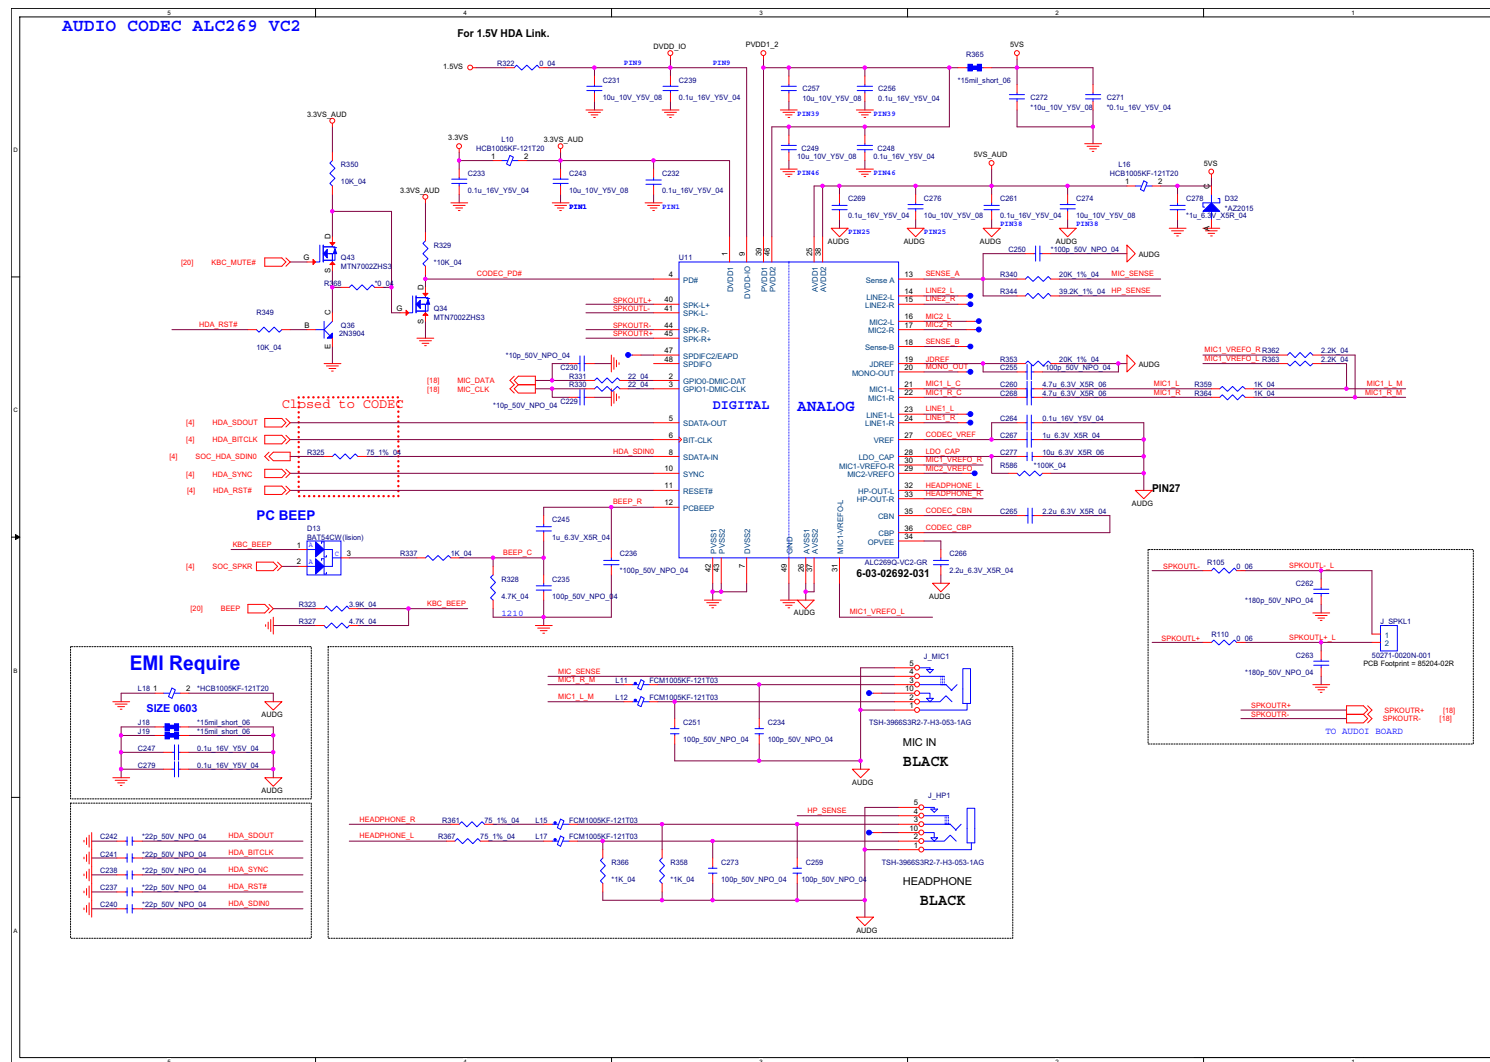


HDD, LED

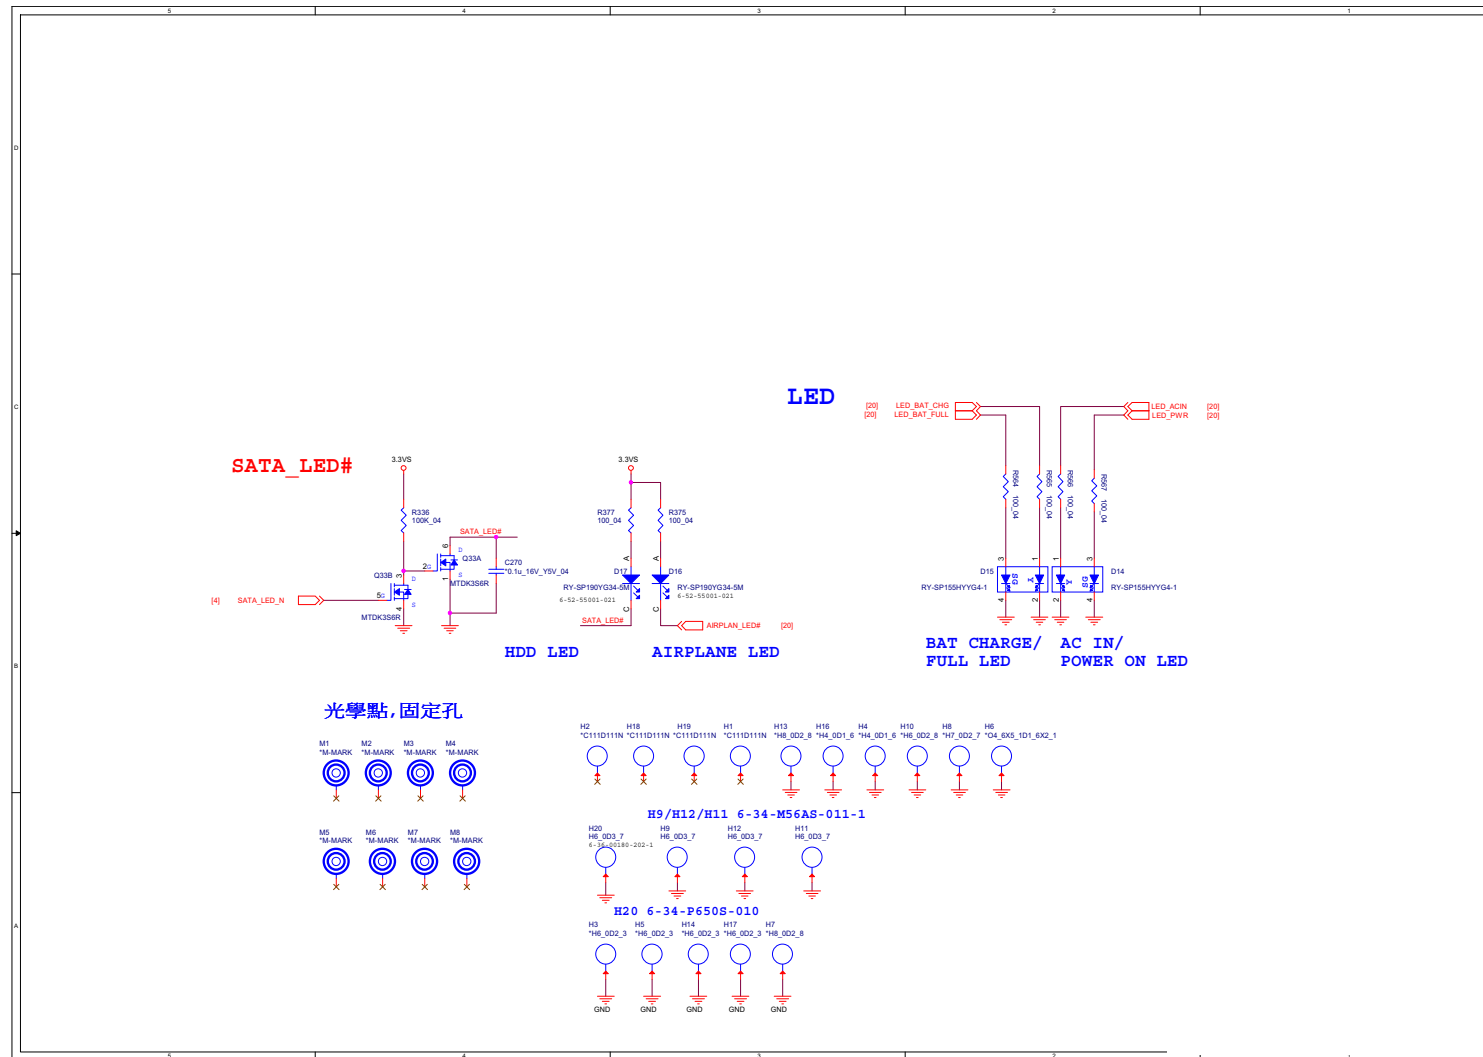

Sheet 16 of 36
HDD, LED

USB, TPM

Sheet 17 of 36
USB, TPM

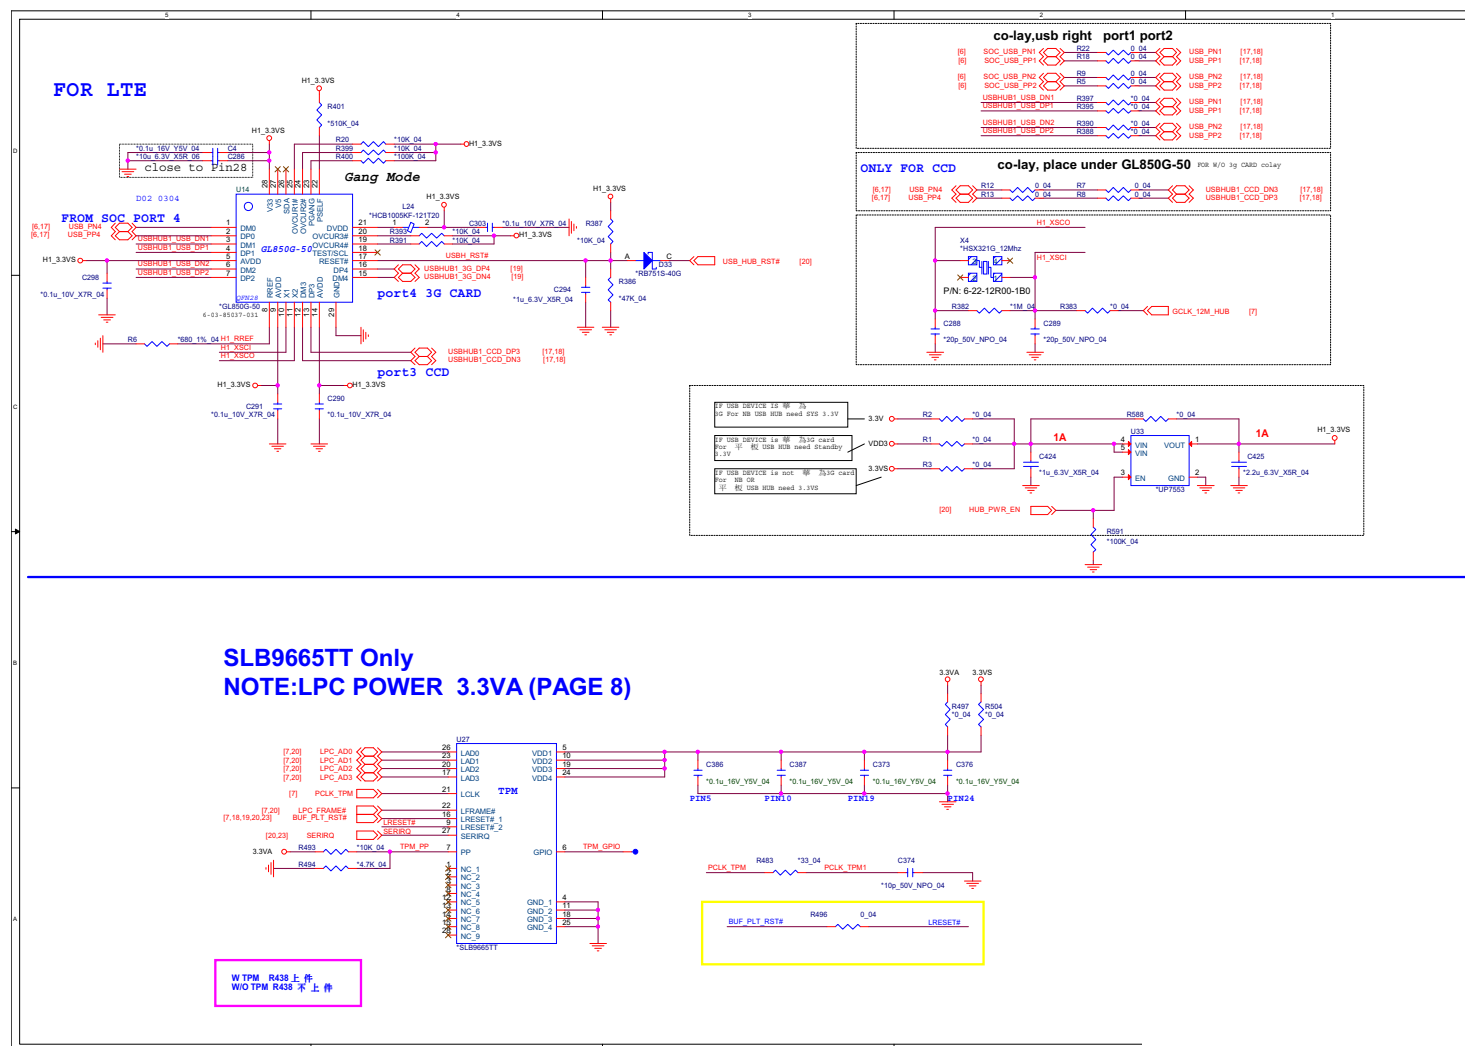

Sheet 18 of 36
Conn, CCD, Fan,
Click




B. Schematic Diagrams

Sheet 19 of 36
NGFF Card




KBC ITE IT8987E B - 21

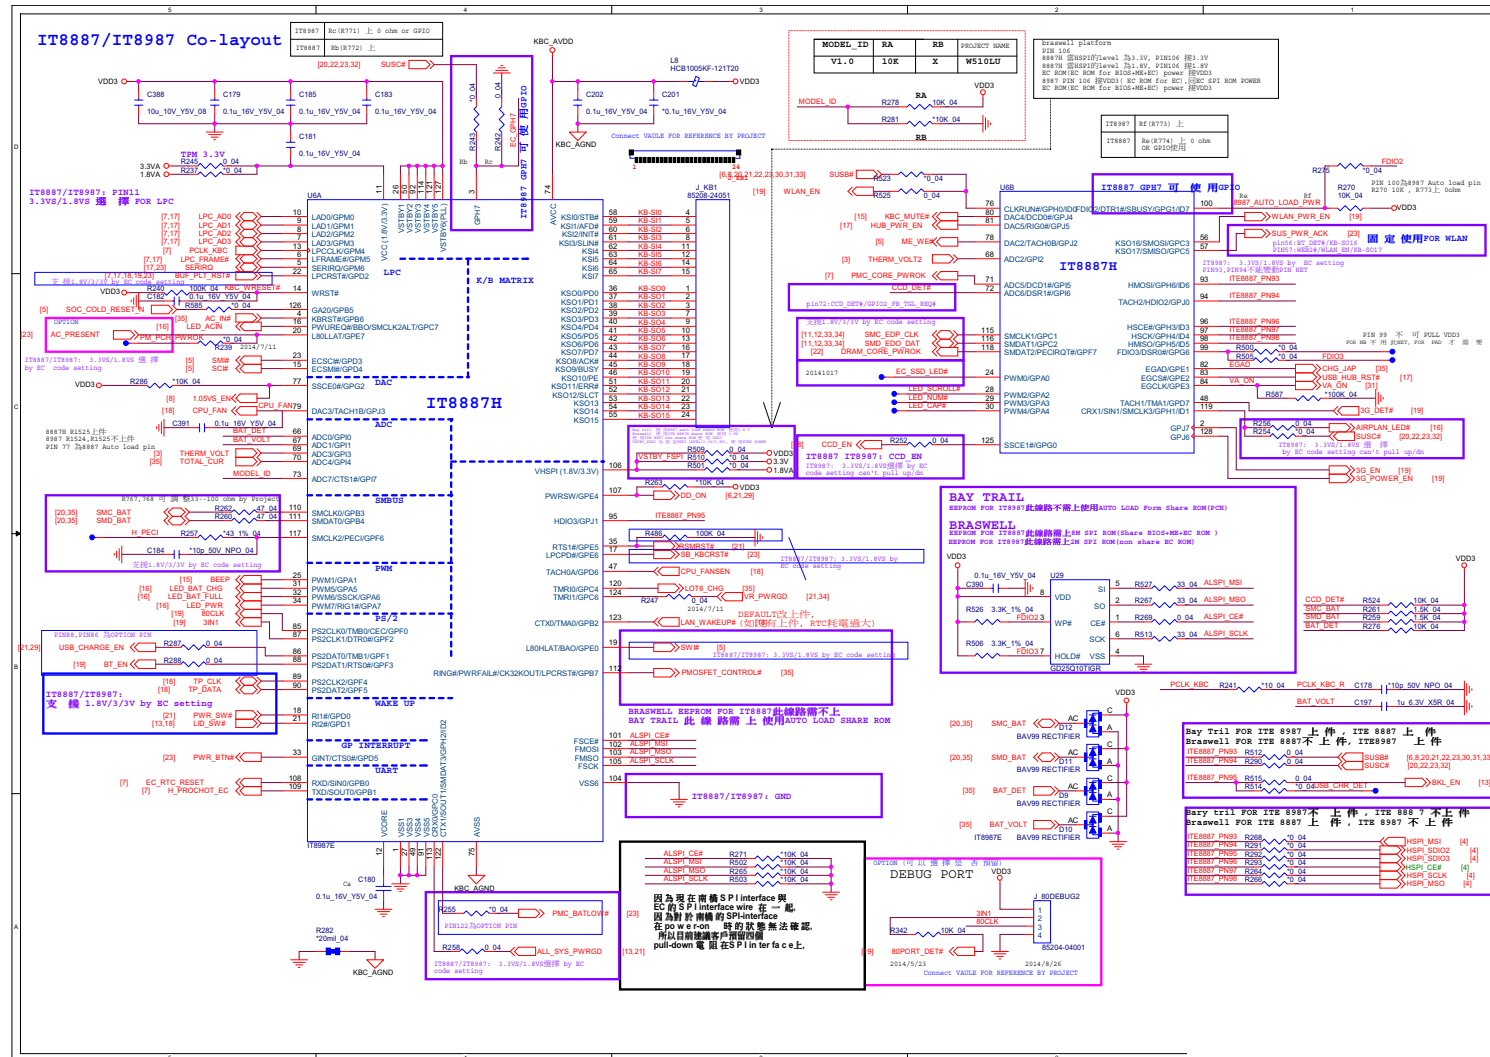


System Power

Sheet 21 of 36
System Power

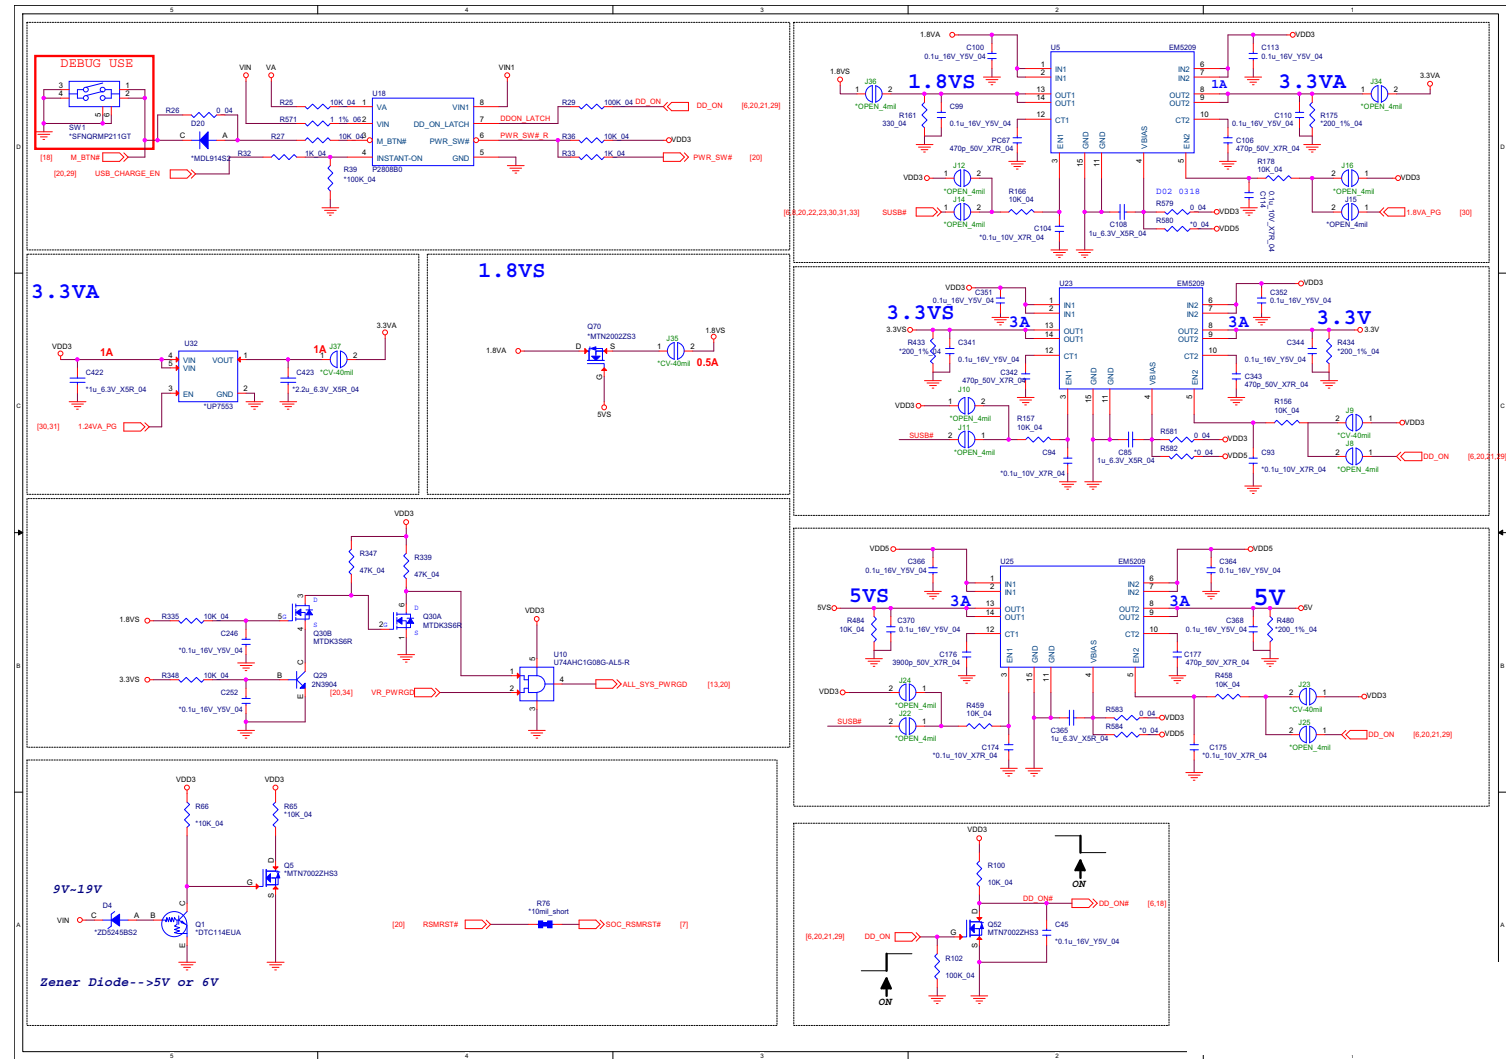

Level Shifter 1

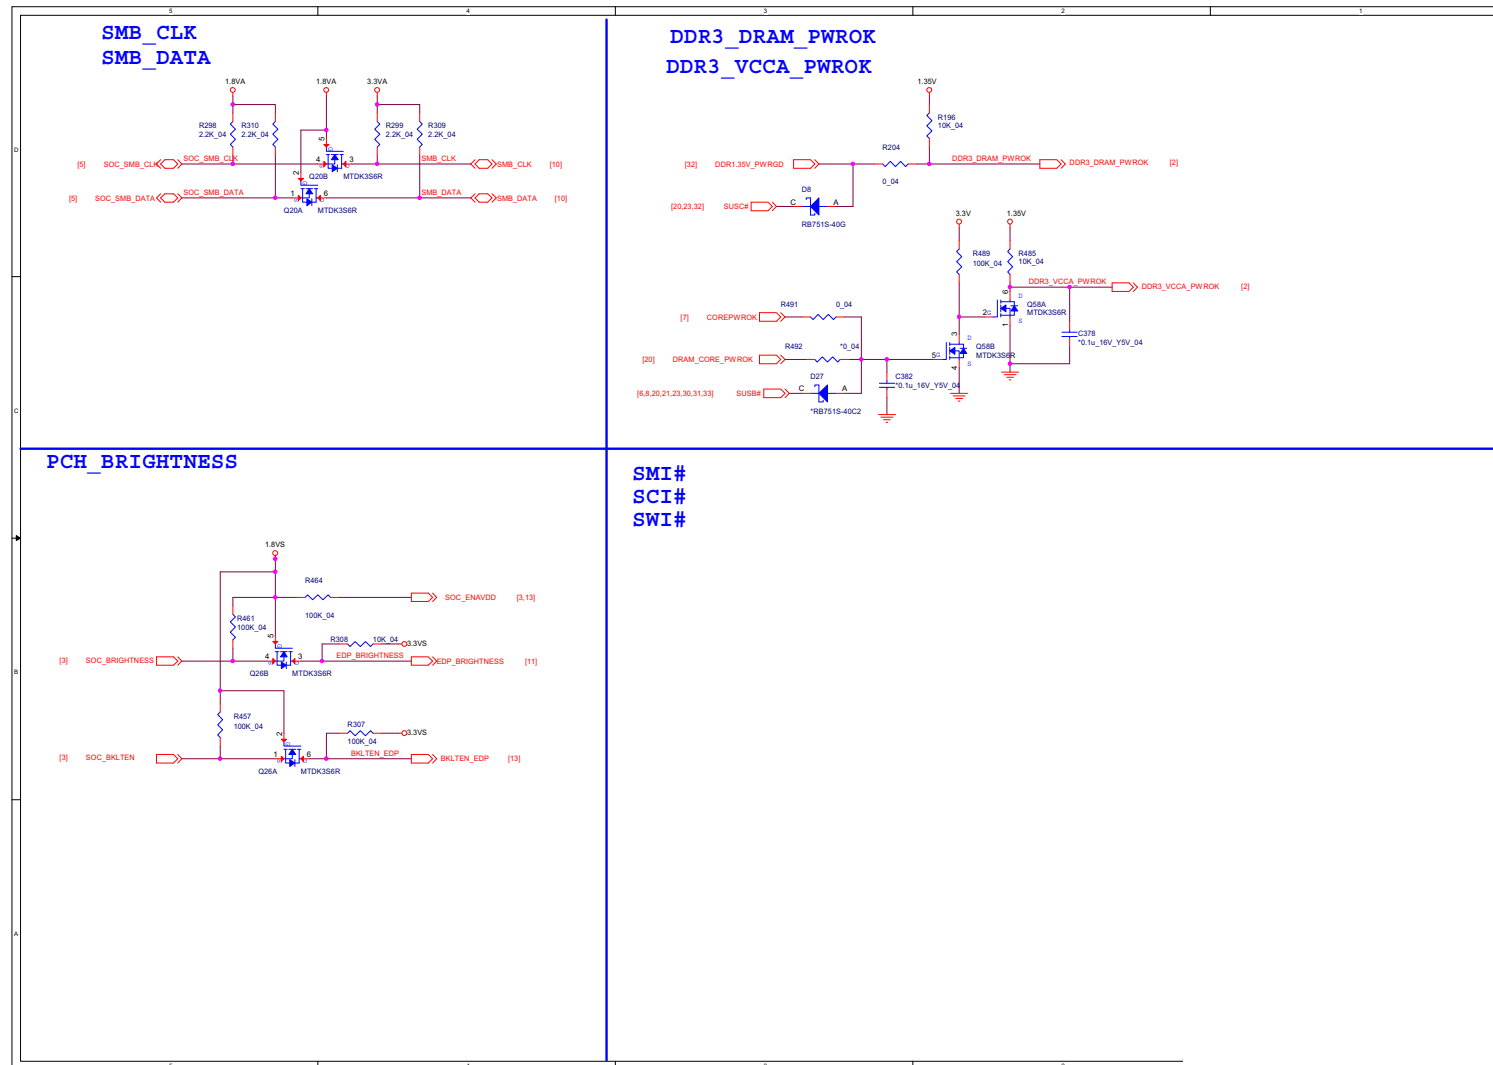


Sheet 22 of 36
Level Shifter 1

Schematic Diagrams

Level Shifter 2

Sheet 23 of 36
Level Shifter 2

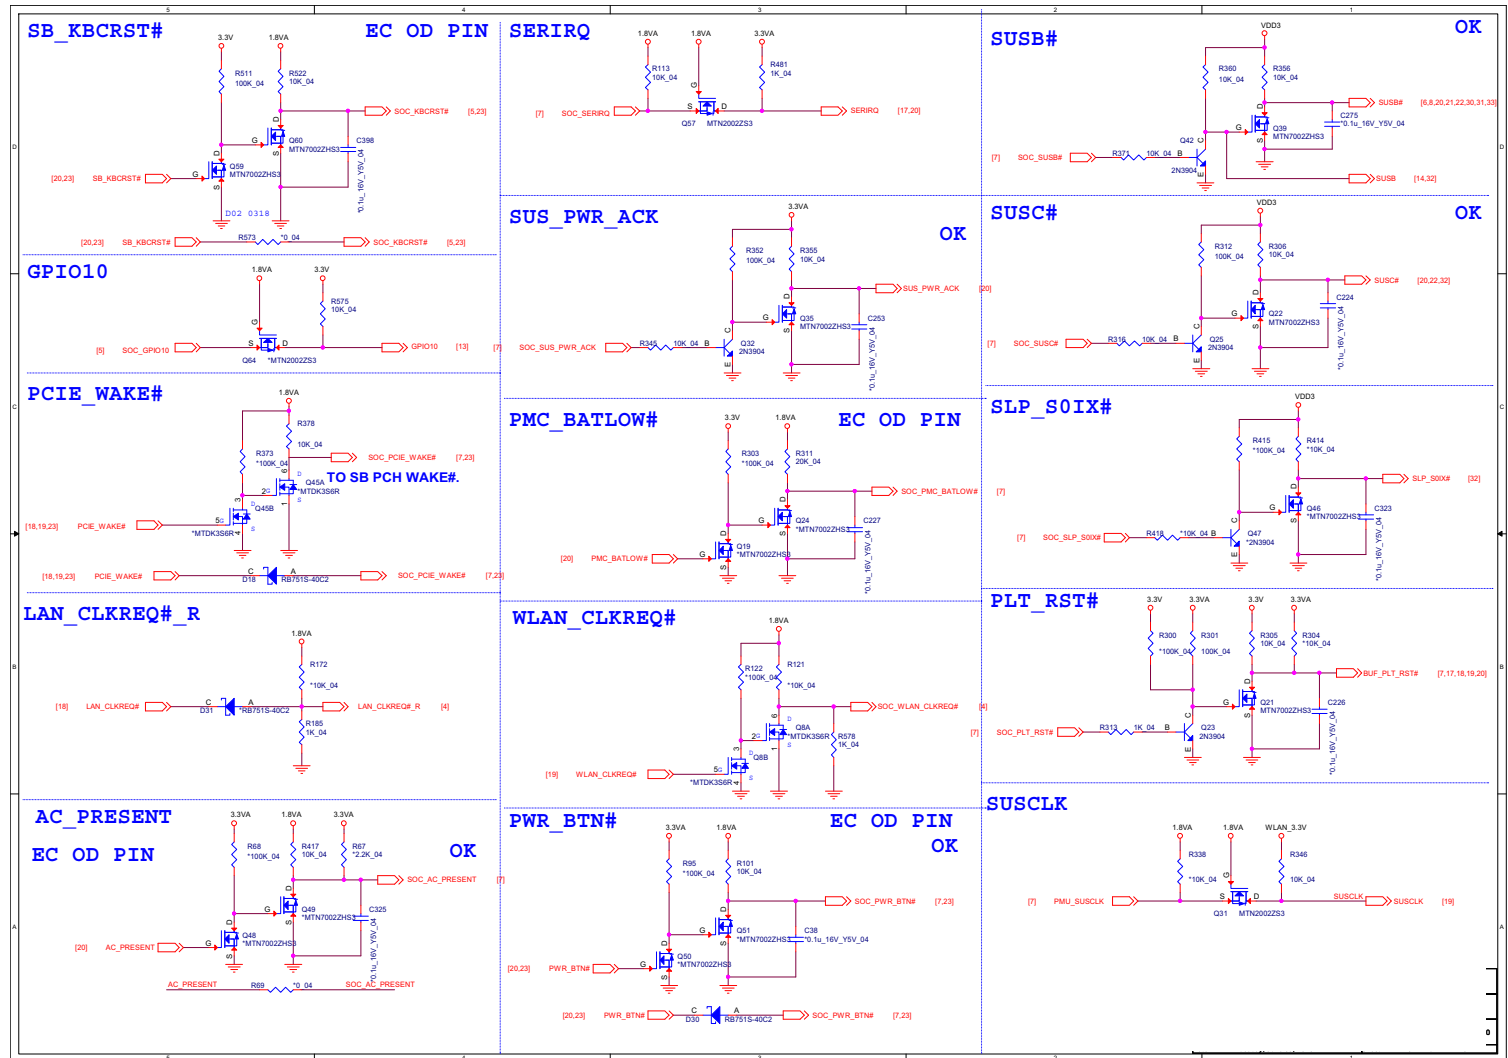


B.Schematic Diagrams




RTL8402


Sheet 25 of 36
RTL8402

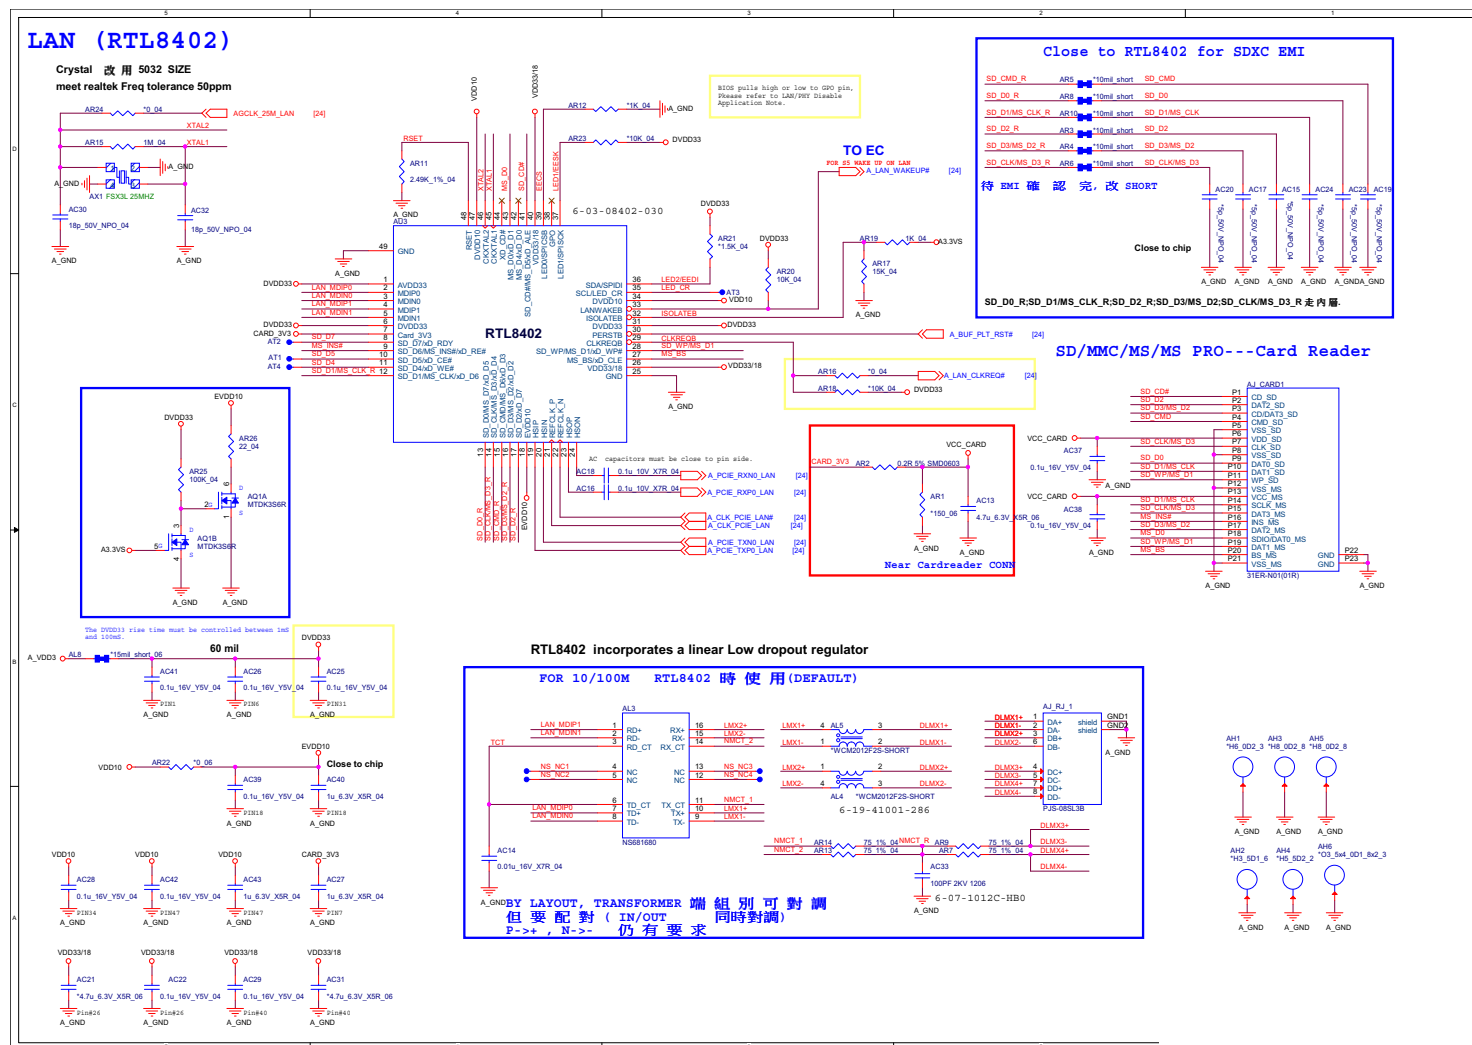


AC-In Conn

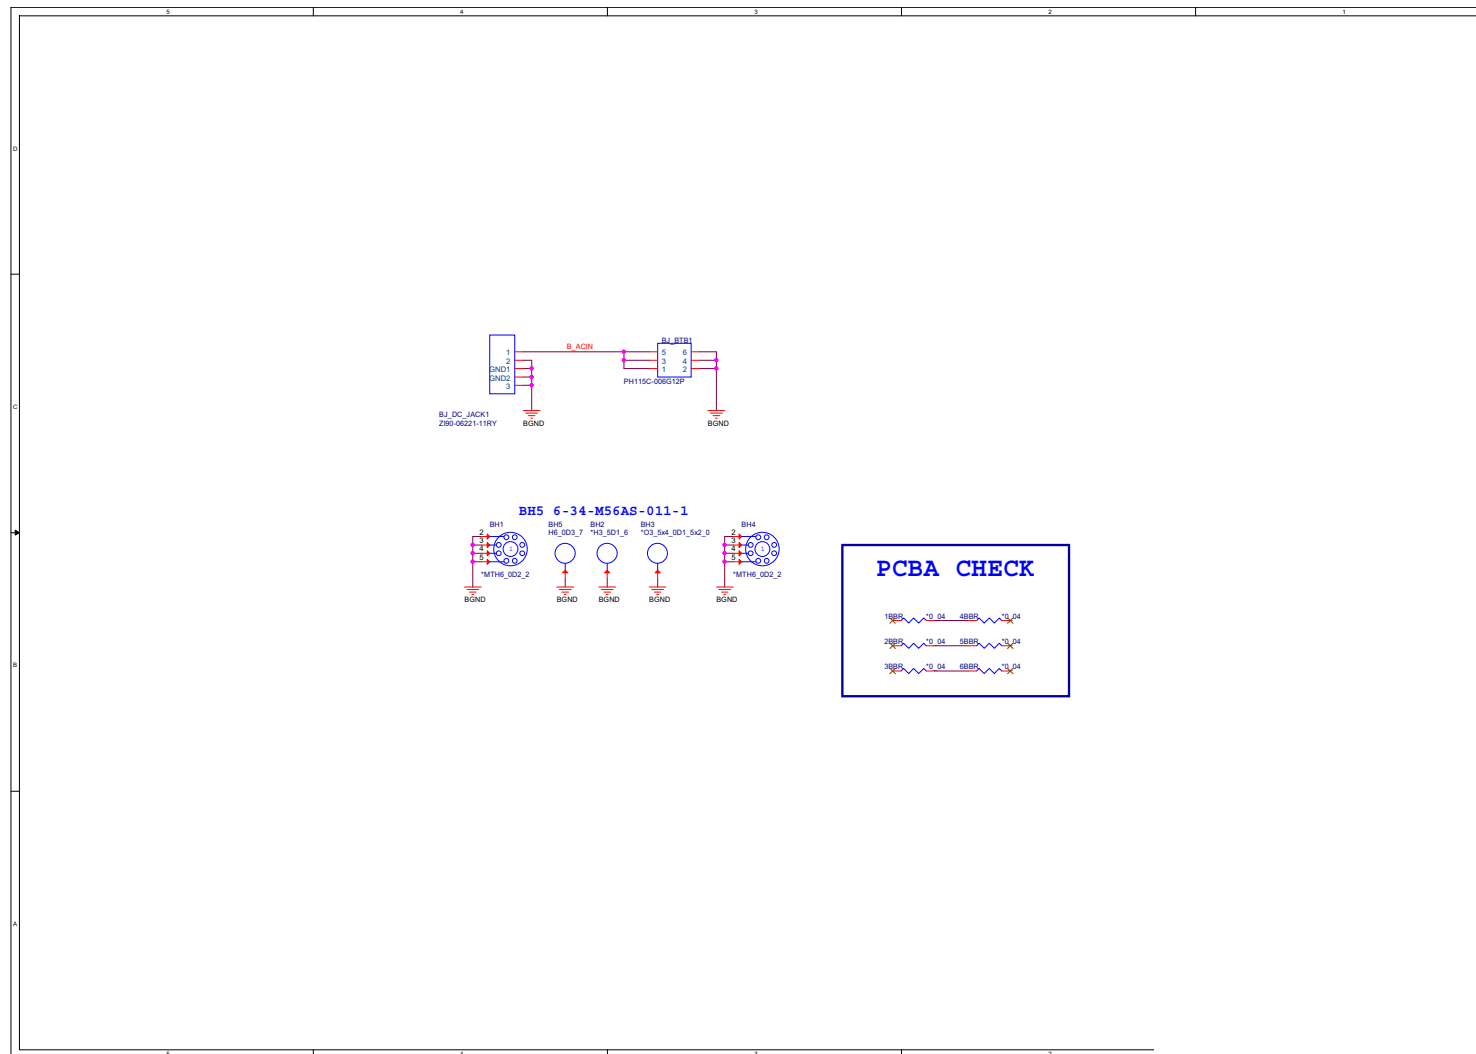Sheet 26 of 36
AC-In Conn

POWER SW & LED

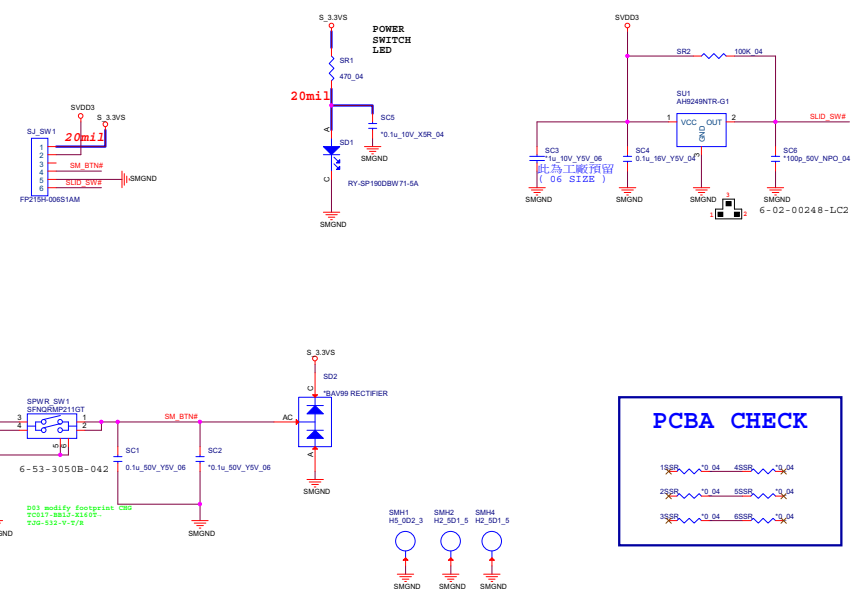


Click Board

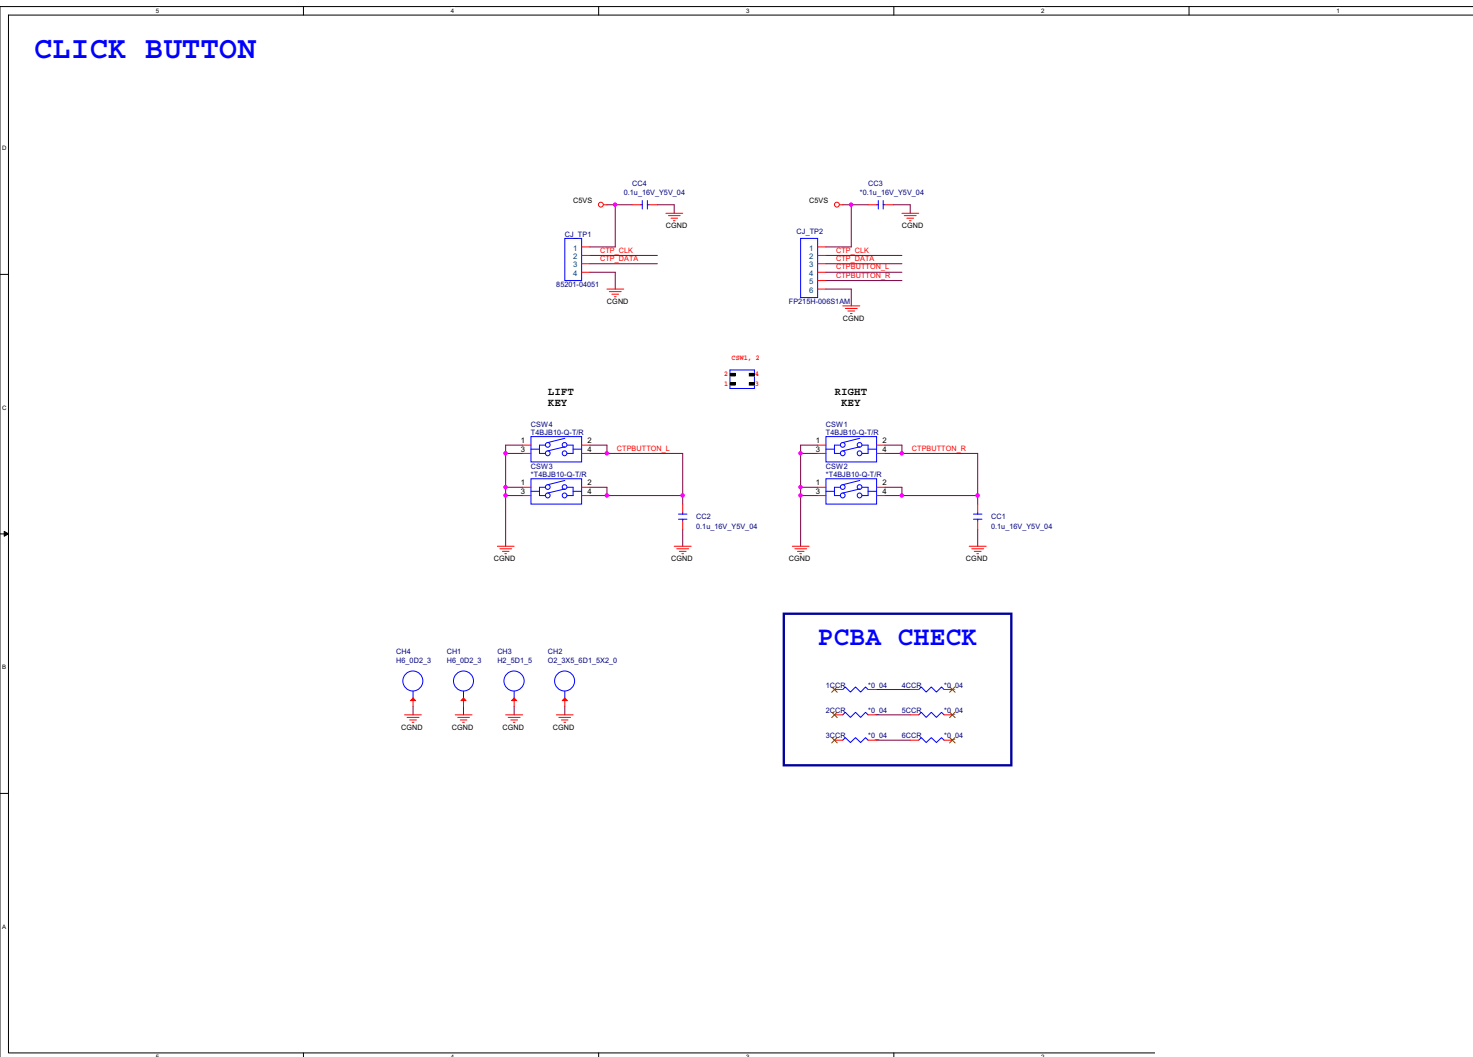


Sheet 28 of 36
Click Board

VDD3, VDD5

Sheet 29 of 36
VDD3, VDD5

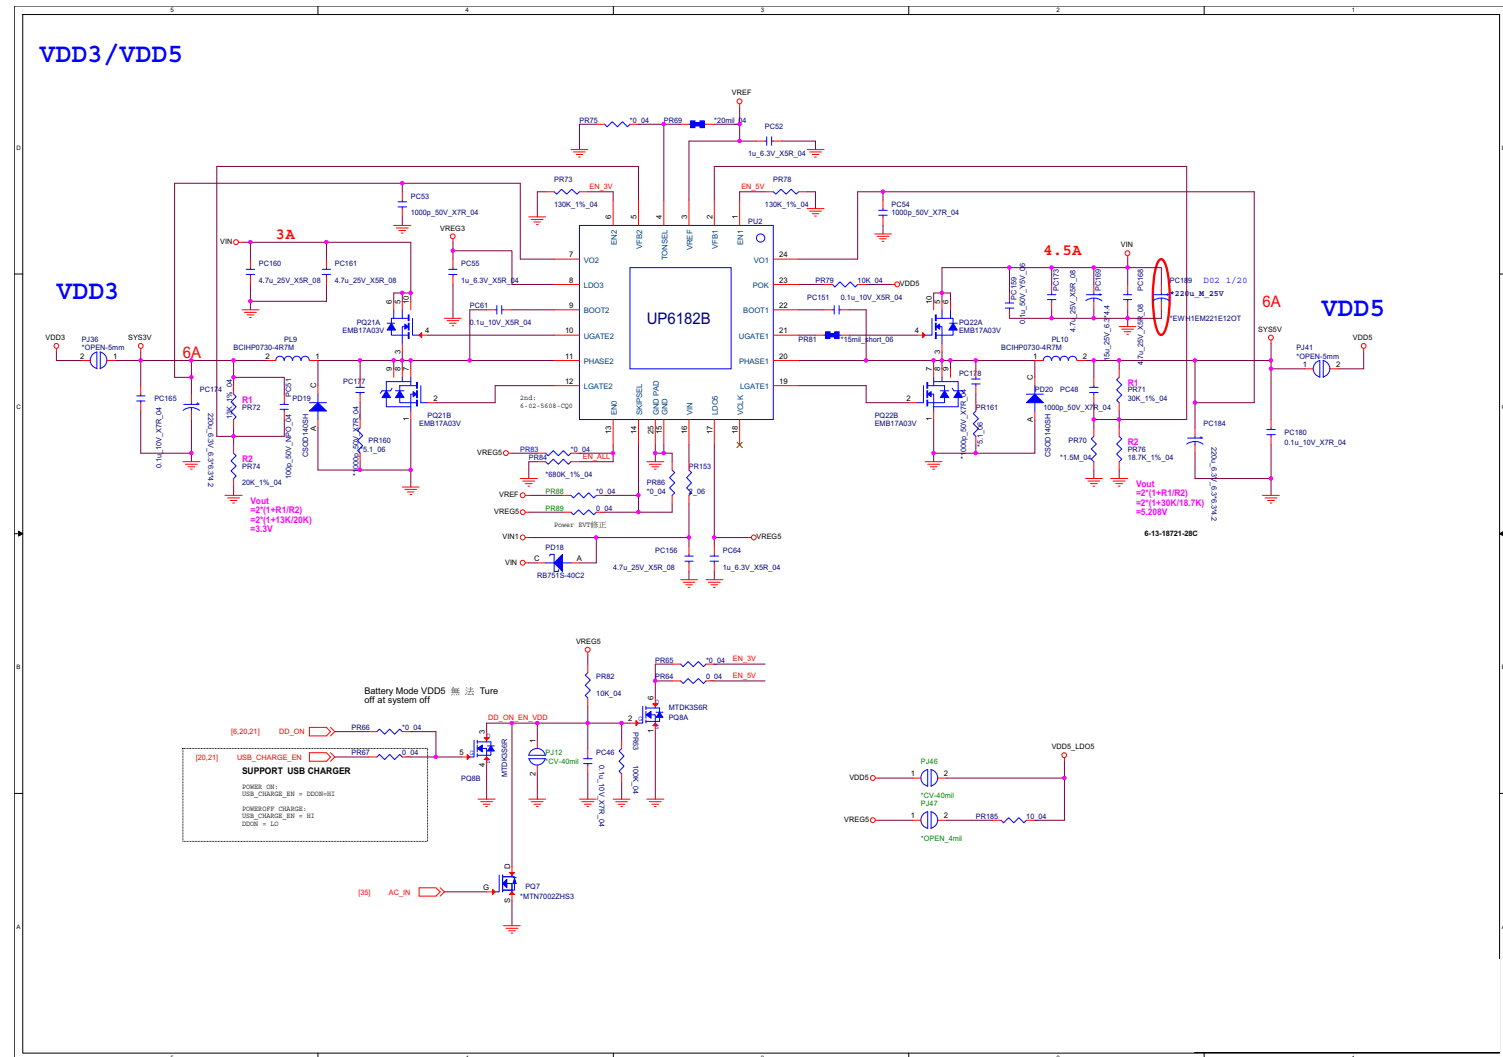


Sheet 30 of 36
Power 1.8VA/1.5VS

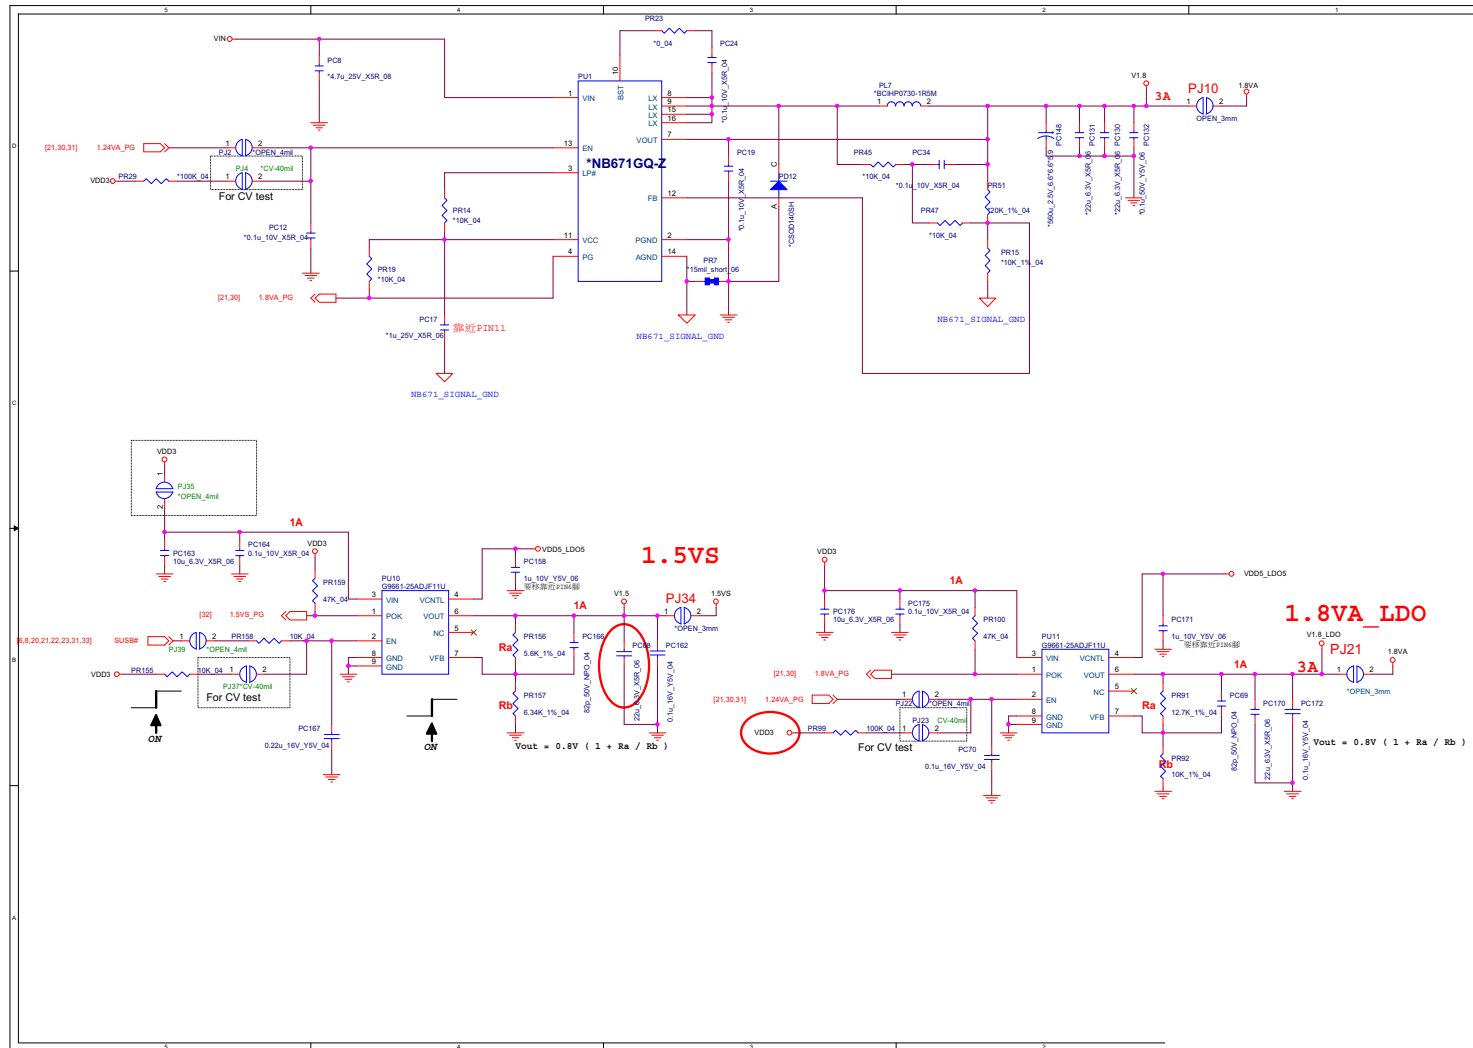


Schematic Diagrams

Power 1.05VA/1.15VA/1.24VA

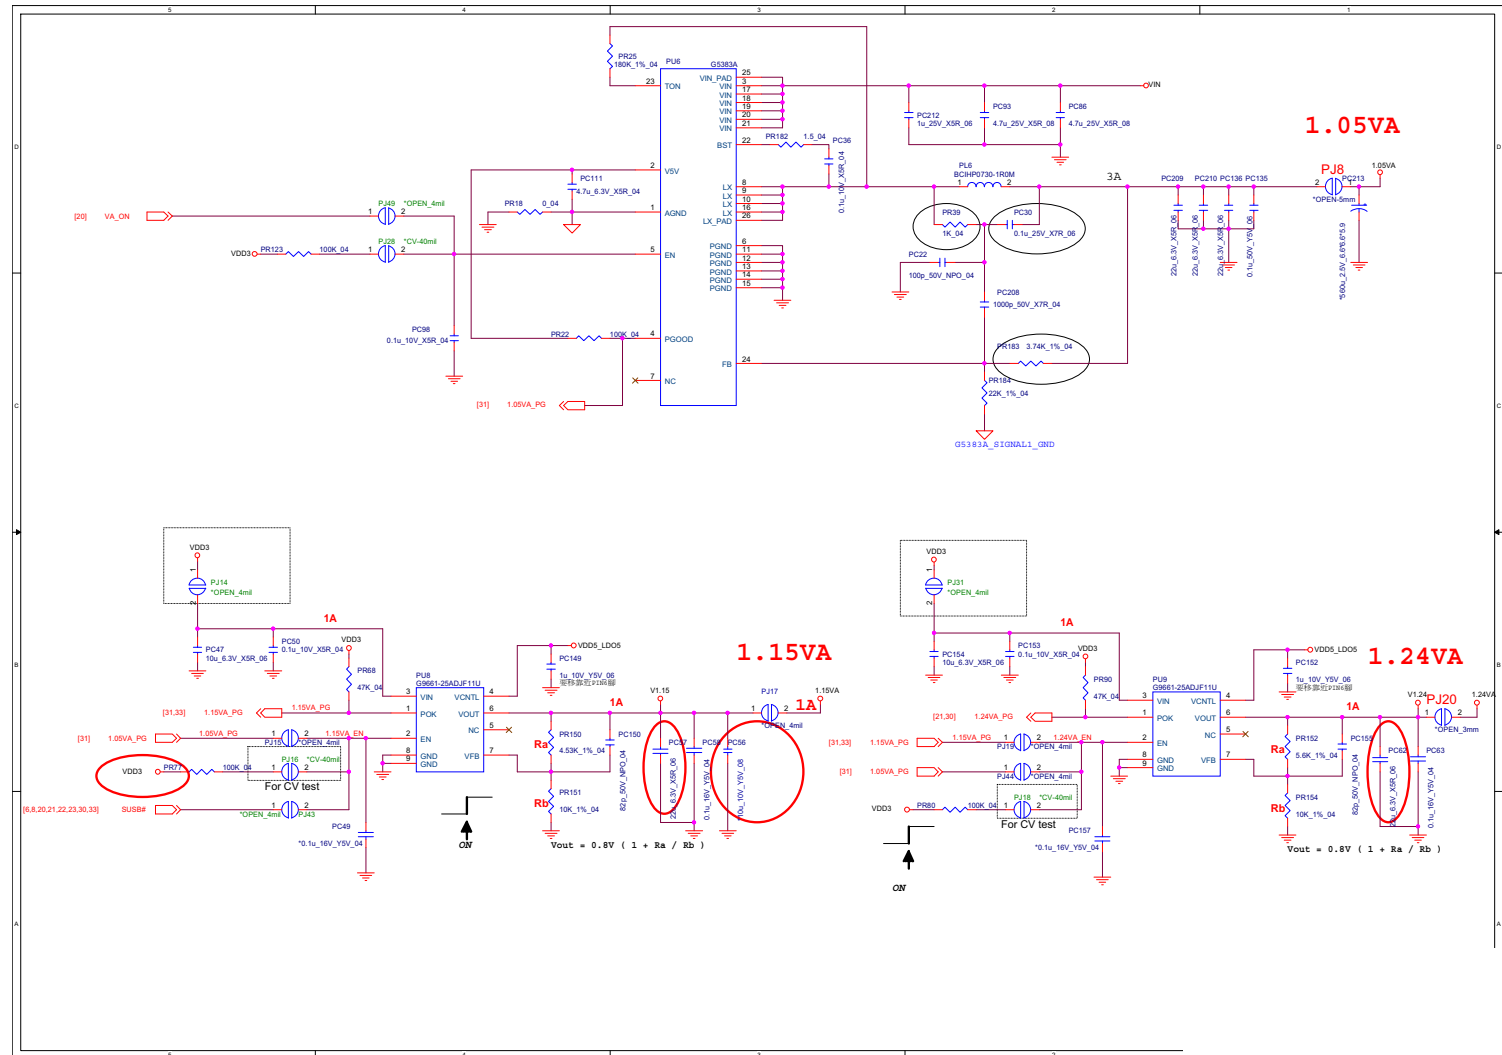

Sheet 31 of 36
Power 1.05VA/
1.15VA/1.24VA

VTT_MEM/1.35V

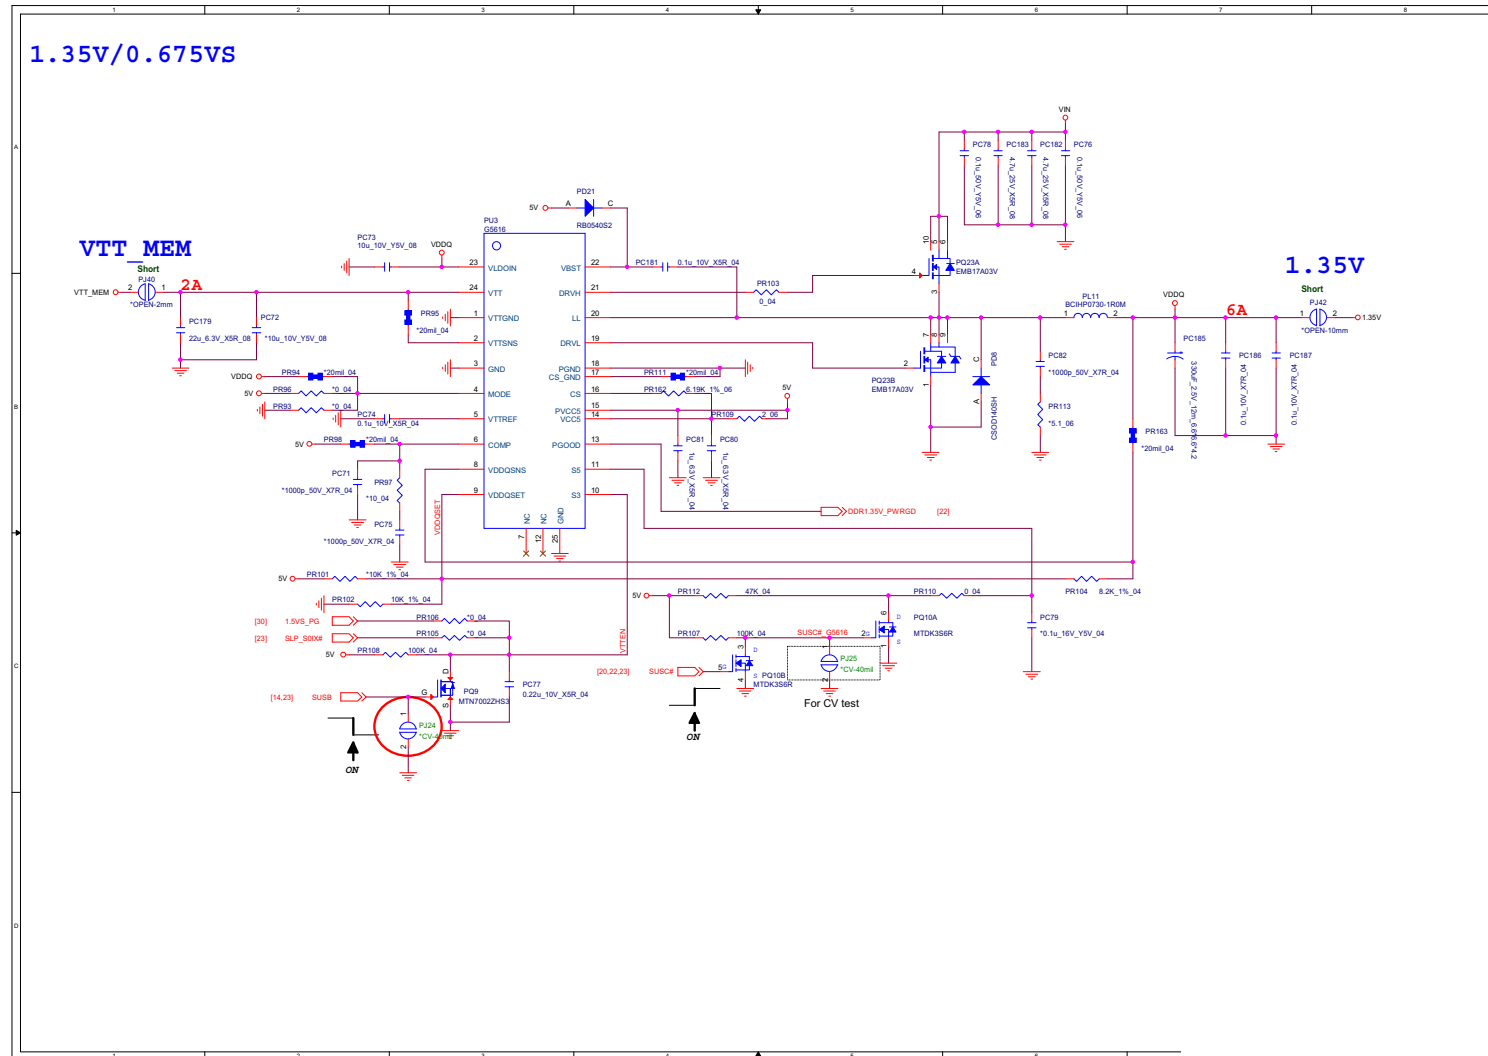


Sheet 32 of 36
VTT_MEM/1.35V

VGG

B. Schematic Diagrams

Sheet 33 of 36
VGG

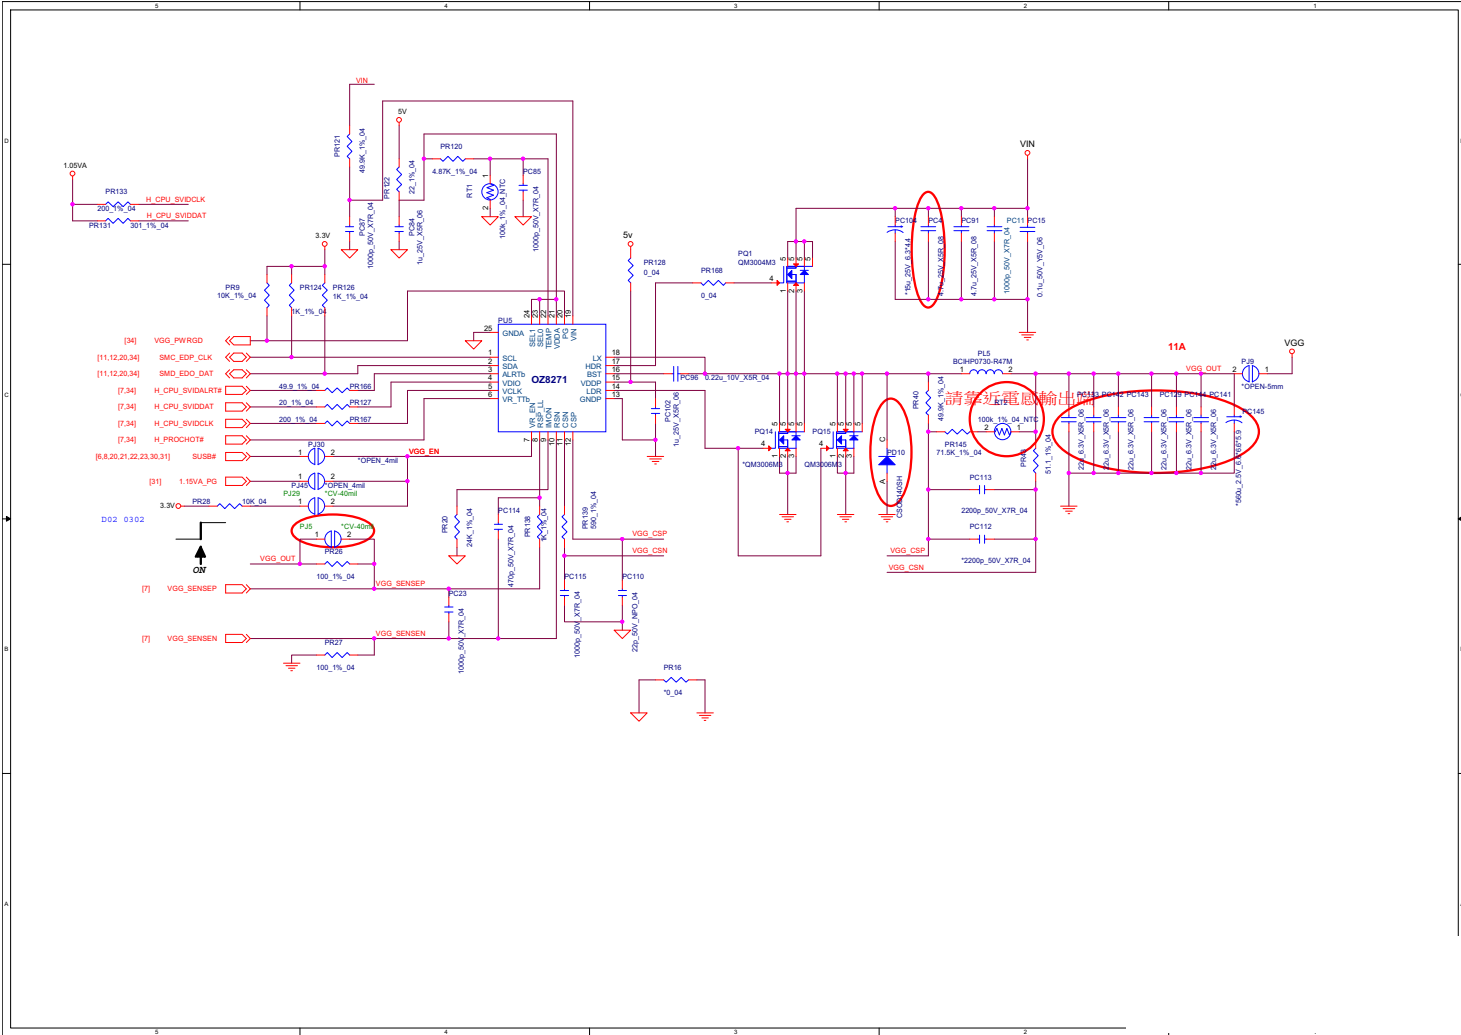


Power VCore B - 35




Schematic Diagrams

AC-In, Charger

Sheet 35 of 36
AC-In, Charger

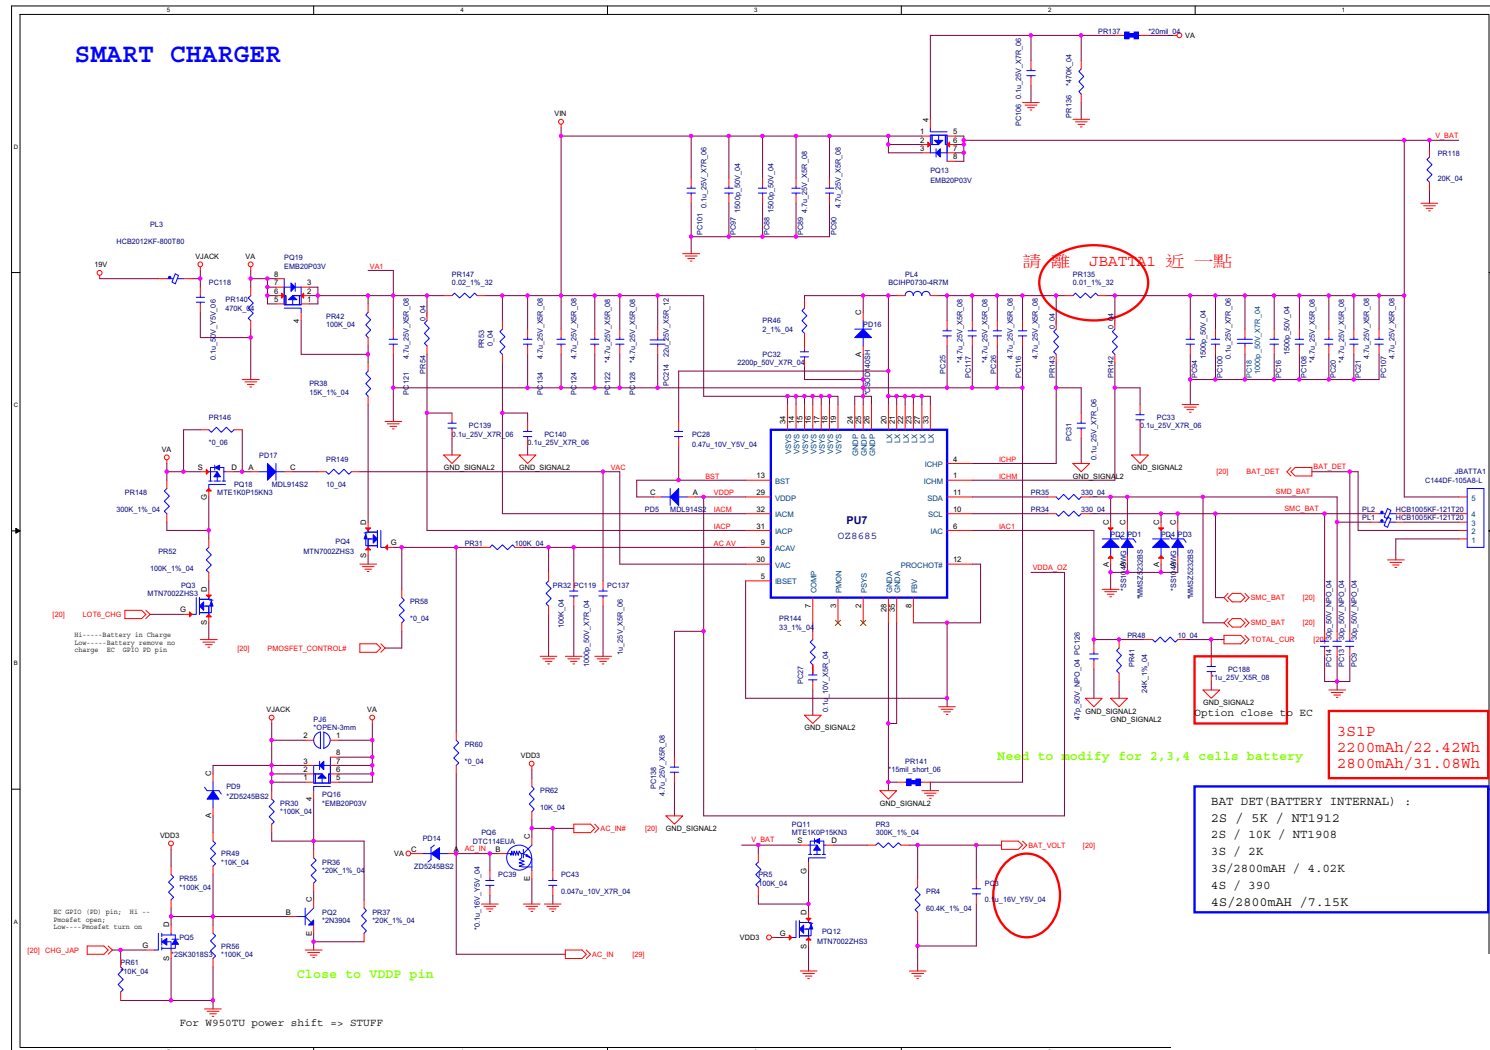

Power On SEQ

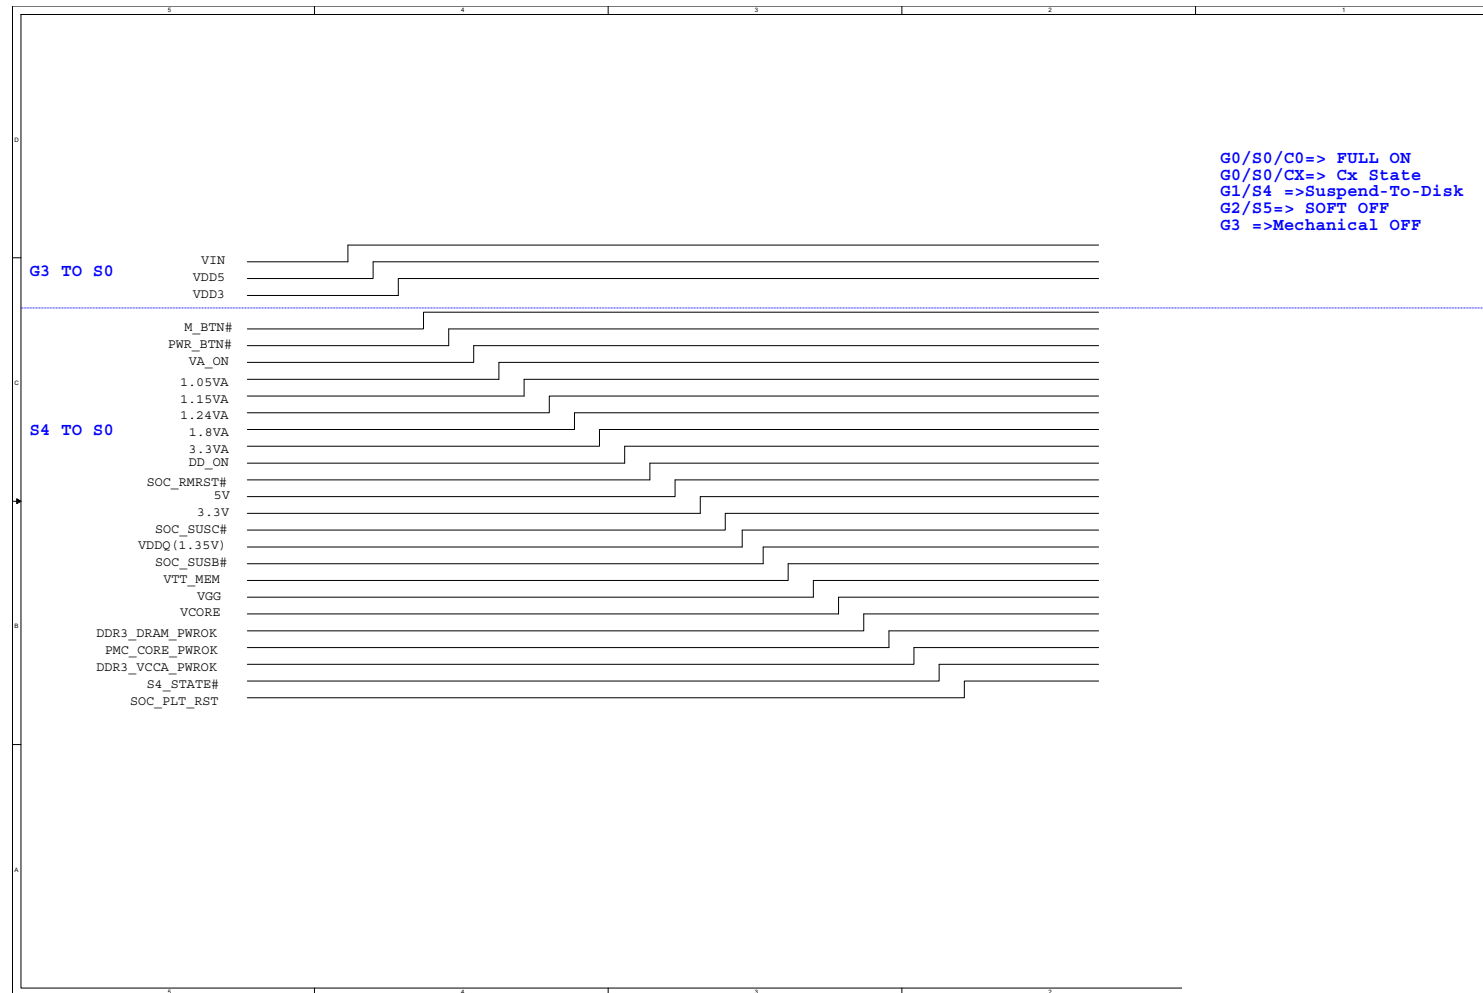

Sheet 36 of 36
Power On SEQ

Appendix C: Updating the FLASH ROM BIOS

To update the FLASH ROM BIOS, you must:

- Download the BIOS update from the web site.
- Unzip the files onto a bootable CD/DVD/USB Flash Drive.
- Reboot your computer from an external CD/DVD/USB Flash Drive.
- Use the flash tools to update the flash BIOS using the commands indicated below.
- Restart the computer booting from the HDD and press **F2** at startup enter the BIOS.
- Load setup defaults from the BIOS and save the default settings and exit the BIOS to restart the computer.
- After rebooting the computer you may restart the computer again and make any required changes to the default BIOS settings.

Download the BIOS

1. Go to www.clevo.com.tw and point to **E-Services** and click **E-Channel**.
2. Use your user ID and password to access the appropriate download area (BIOS), and download the latest BIOS files (the BIOS file will be contained in a batch file that may be run directly once unzipped) for your computer model (see sidebar for important information on BIOS versions).

Unzip the downloaded files to a bootable CD/DVD or USB Flash drive

1. Insert a bootable CD/DVD/USB flash drive into the CD/DVD drive/USB port of the computer containing the downloaded files.
2. Use a tool such as Winzip or Winrar to unzip all the BIOS files and refresh tools to your bootable CD/DVD/USB flash drive (you may need to create a bootable CD/DVD with the files using a 3rd party software).

Set the computer to boot from the external drive

1. With the bootable CD/DVD/USB flash drive containing the BIOS files in your CD/DVD drive/USB port, restart the computer and press **F2** (in most cases) to enter the BIOS.
2. Use the arrow keys to highlight the **Boot** menu.
3. Use the “+” and “-” keys to move boot devices up and down the priority order.
4. Make sure that the CD/DVD drive/USB flash drive is set first in the boot priority of the BIOS.
5. Press **F4** to save any changes you have made and exit the BIOS to restart the computer.



BIOS Version

Make sure you download the latest correct version of the BIOS appropriate for the computer model you are working on.

You should only download BIOS versions that are V1.01.XX or higher as appropriate for your computer model.

Note that BIOS versions are not backward compatible and therefore **you may not downgrade your BIOS to an older version** after upgrading to a later version (e.g if you upgrade a BIOS to ver 1.01.05, you **MAY NOT** then go back and flash the BIOS to ver 1.01.04).

BIOS Update

Use the flash tools to update the BIOS

1. Make sure you are not loading any memory management programs such as HIMEM by holding the **F8** key as you see the message “**EFI Shell**”. You will then be prompted to give “**Y**” or “**N**” responses to the programs being loaded by EFI Shell. Choose “**N**” for any memory management programs.
2. You should now see **DISK fsX:\>** (X is the designated drive number for the CD/DVD drive/USB flash drive).
3. **Type the following command:**

fsX:\> Flash.nsh

4. The utility will then proceed to flash the BIOS.
5. You should then be prompted to press any key to restart the system or turn the power off, and then on again but make sure you remove the CD/DVD/USB flash drive from the CD/DVD drive/USB port before the computer restarts.

Restart the computer (booting from the HDD)

1. With the CD/DVD/USB flash drive removed from the CD/DVD drive/USB port the computer should restart from the HDD.
2. Press **F2** as the computer restarts to enter the BIOS.
3. Use the arrow keys to highlight the **Exit** menu.
4. Select **Load Setup Defaults** (or press **F3**) and select “**Yes**” to confirm the selection.
5. Press **F4** to save any changes you have made and exit the BIOS to restart the computer.

Your computer is now running normally with the updated BIOS

You may now enter the BIOS and make any changes you require to the default settings.