

SERVICE MANUAL

W950LU / W955LU

notebook



Notebook Computer
W950LU / W955LU
Service Manual

Notice

The company reserves the right to revise this publication or to change its contents without notice. Information contained herein is for reference only and does not constitute a commitment on the part of the manufacturer or any subsequent vendor. They assume no responsibility or liability for any errors or inaccuracies that may appear in this publication nor are they in anyway responsible for any loss or damage resulting from the use (or misuse) of this publication.

This publication and any accompanying software may not, in whole or in part, be reproduced, translated, transmitted or reduced to any machine readable form without prior consent from the vendor, manufacturer or creators of this publication, except for copies kept by the user for backup purposes.

Brand and product names mentioned in this publication may or may not be copyrights and/or registered trademarks of their respective companies. They are mentioned for identification purposes only and are not intended as an endorsement of that product or its manufacturer.

Version 1.0
June 2015

Trademarks

Pentium and Celeron are trademarks of Intel Corporation.

Windows® is a registered trademark of Microsoft Corporation.

Other brand and product names are trademarks and /or registered trademarks of their respective companies.

About this Manual

This manual is intended for service personnel who have completed sufficient training to undertake the maintenance and inspection of personal computers.

It is organized to allow you to look up basic information for servicing and/or upgrading components of the **W950LU** / **W955LU** series notebook PC.

The following information is included:

Chapter 1, Introduction, provides general information about the location of system elements and their specifications.
Chapter 2, Disassembly, provides step-by-step instructions for disassembling parts and subsystems and how to upgrade elements of the system.

Appendix A, Part Lists

Appendix B, Schematic Diagrams

Appendix C, Updating the FLASH ROM BIOS

Preface

IMPORTANT SAFETY INSTRUCTIONS

Follow basic safety precautions, including those listed below, to reduce the risk of fire, electric shock and injury to persons when using any electrical equipment:

1. Do not use this product near water, for example near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electrical shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
5. This product is intended to be supplied by a Listed Power Unit with an AC Input of 100 - 240V, 50 - 60Hz, DC Output of 19V, 2.1A (**40 Watts**) minimum AC/DC Adapter.

CAUTION

This Computer's Optical Device is a Laser Class 1 Product

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference.

This device must accept any interference received, including interference that may cause undesired operation.


Instructions for Care and Operation

The notebook computer is quite rugged, but it can be damaged. To prevent this, follow these suggestions:


1. **Don't drop it, or expose it to shock.** If the computer falls, the case and the components could be damaged.



2. **Keep it dry, and don't overheat it.** Keep the computer and power supply away from any kind of heating element. This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.

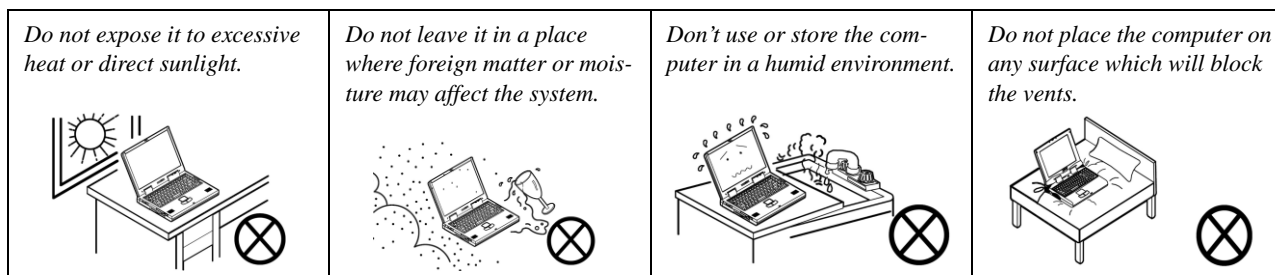


3. **Follow the proper working procedures for the computer.** Shut the computer down properly and don't forget to save your work. Remember to periodically save your data as data may be lost if the battery is depleted.

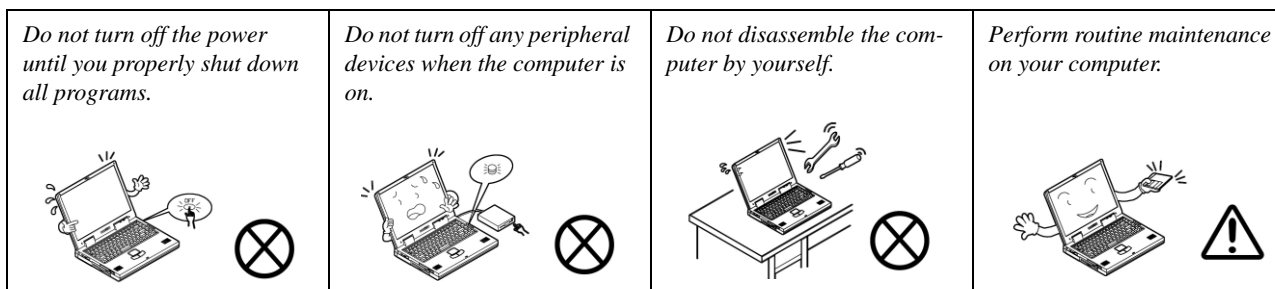

Preface


4. **Avoid interference.** Keep the computer away from high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage your data.
5. **Take care when using peripheral devices.**

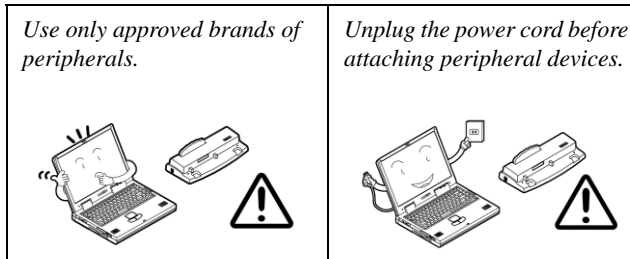

Power Safety

The computer has specific power requirements:

- Only use a power adapter approved for use with this computer.
- Your AC adapter may be designed for international travel but it still requires a steady, uninterrupted power supply. If you are unsure of your local power specifications, consult your service representative or local power company.
- The power adapter may have either a 2-prong or a 3-prong grounded plug. The third prong is an important safety feature; do not defeat its purpose. If you do not have access to a compatible outlet, have a qualified electrician install one.
- When you want to unplug the power cord, be sure to disconnect it by the plug head, not by its wire.
- Make sure the socket and any extension cord(s) you use can support the total current load of all the connected devices.
- Before cleaning the computer, make sure it is disconnected from any external power supplies.

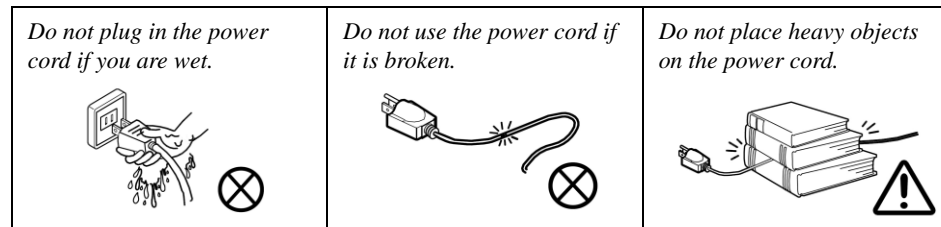

Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines and power cord). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

Battery Precautions

- Only use batteries designed for this computer. The wrong battery type may explode, leak or damage the computer.
- Do not continue to use a battery that has been dropped, or that appears damaged (e.g. bent or twisted) in any way. Even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire.
- Recharge the batteries using the notebook's system. Incorrect recharging may make the battery explode.
- Do not try to repair a battery pack. Refer any battery pack repair or replacement to your service representative or qualified service personnel.
- Keep children away from, and promptly dispose of a damaged battery. Always dispose of batteries carefully. Batteries may explode or leak if exposed to fire, or improperly handled or discarded.
- Keep the battery away from metal appliances.
- Affix tape to the battery contacts before disposing of the battery.
- Do not touch the battery contacts with your hands or metal objects.

Battery Guidelines

The following can also apply to any backup batteries you may have.

- If you do not use the battery for an extended period, then remove the battery from the computer for storage.
- Before removing the battery for storage charge it to 60% - 70%.
- Check stored batteries at least every 3 months and charge them to 60% - 70%.




Battery Disposal

The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

Caution

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.

Battery Level

Click the battery icon  in the taskbar to see the current battery level and charge status. A battery that drops below a level of 10% will not allow the computer to boot up. Make sure that any battery that drops below 10% is recharged within one week.

Preface

Related Documents

You may also need to consult the following manual for additional information:

User's Manual on CD/DVD

This describes the notebook PC's features and the procedures for operating the computer and its ROM-based setup program. It also describes the installation and operation of the utility programs provided with the notebook PC.

System Startup

1. Remove all packing materials.
2. Place the computer on a stable surface.
3. Insert the battery and make sure it is locked in position.
4. Securely attach any peripherals you want to use with the computer (e.g. keyboard and mouse) to their ports.
5. Attach the AC/DC adapter to the DC-In jack at the left of the computer, then plug the AC power cord into an outlet, and connect the AC power cord to the AC/DC adapter.
6. Use one hand to raise the lid/LCD to a comfortable viewing angle (do not exceed 130 degrees); use the other hand (as illustrated in Figure 1) to support the base of the computer (**Note: Never** lift the computer by the lid/LCD).
7. Press the power button to turn the computer "on".



Figure 1
**Opening the Lid/LCD/
Computer with AC/DC
Adapter Plugged-In**



Shut Down

Note that you should always shut your computer down by choosing **Shut Down** from the **Start** Menu.

This will help prevent hard disk or system problems.

Contents

Introduction1-1

Overview	1-1
Specifications	1-2
External Locator - Top View with LCD Panel Open	1-4
External Locator - Front & Right Side Views	1-5
External Locator - Left Side & Rear View	1-6
External Locator - Bottom View	1-7
Mainboard Overview - Top (Key Parts)	1-8
Mainboard Overview - Bottom (Key Parts)	1-9
Mainboard Overview - Top (Connectors)	1-10
Mainboard Overview - Bottom (Connectors)	1-11

Disassembly2-1

Overview	2-1
Maintenance Tools	2-2
Connections	2-2
Maintenance Precautions	2-3
Disassembly Steps	2-4
Removing the Battery	2-5
Removing the Hard Disk Drive	2-6
Removing the Optical (CD/DVD) Device	2-8
Removing the Caddy/Second Hard disk	2-10
Removing the System Memory (RAM)	2-11
Removing the Keyboard	2-13
Removing the Wireless LAN Module	2-15
Wireless LAN and Combo Module Cables	2-16
Removing the CCD	2-17

Part ListsA-1

Part List Illustration Location	A-2
Top (1 DIMM)	A-3

Top (2 DIMM)	A-4
Bottom	A-5
LCD	A-6
DVD DUAL	A-7
HDD	A-8
HDD Caddy	A-9

Schematic Diagrams.....B-1

System Block Diagram	B-2
Processor 1/8	B-3
Processor 2/8	B-4
Processor 3/8	B-5
Processor 4/8	B-6
Processor 5/8	B-7
Processor 6/8	B-8
Processor 7/8	B-9
Processor 8/8	B-10
DDR3 SO-DIMM_0	B-11
DDR3 SO-DIMM_1	B-12
RTD2136	B-13
Panel, CRT	B-14
HDMI	B-15
LAN, Card Reader	B-16
Mini Card	B-17
HDD, ODD, LED, LID	B-18
USB, Touch Panel	B-19
Conn, CCD, Fan, Click, TV	B-20
Audio Codec	B-21
KBC-ITE IT8587E	B-22
AU6259	B-23
5VS, 3VS, 1.8VS, 1.0VS	B-24

Preface

VDD3, VDD5	B-25
1.5VS, 1.5V, VTT_MEM	B-26
1.0V, 1.05VS, 1.24V	B-27
VCore	B-28
AC IN, Charger	B-29
Audio Board	B-30
TPM	B-31
SW Board	B-32
Touch Panel Board	B-33
Level Shifter 1	B-34
Level Shifter 2	B-35

Updating the FLASH ROM BIOS..... C-1


Download the BIOS	C-1
Unzip the downloaded files to a bootable CD/DVD/ or USB Flash drive	C-1
Set the computer to boot from the external drive	C-1
Use the flash tools to update the BIOS	C-2
Restart the computer (booting from the HDD)	C-2

Chapter 1: Introduction

Overview

This manual covers the information you need to service or upgrade the **W950LU / W955LU** series notebook computer. Information about operating the computer (e.g. getting started, and the *Setup* utility) is in the *User's Manual*. Information about drivers (e.g. VGA & audio) is also found in the *User's Manual*. The manual is shipped with the computer.

Operating systems (e.g. *Window 8.1*, etc.) have their own manuals as do application softwares (e.g. word processing and database programs). If you have questions about those programs, you should consult those manuals.

The **W950LU / W955LU** series notebook is designed to be upgradeable. See [Disassembly on page 2 - 1](#) for a detailed description of the upgrade procedures for each specific component. Please take note of the warning and safety information indicated by the “” symbol.

The balance of this chapter reviews the computer's technical specifications and features.

Introduction

Specifications



Latest Specification Information

The specifications listed here are correct at the time of sending them to the press. Certain items (particularly processor types/speeds) may be changed, delayed or updated due to the manufacturer's release schedule. Check with your service center for more details.



CPU

The CPU is not a user serviceable part. Accessing the CPU in any way may violate your warranty.

Processor Options

Intel® Pentium® Processor

N3700 (1.60GHz)

2MB Smart Cache, 14nm, DDR3L-1600MHz, TDP 6W

Intel® Celeron® Processor

N3150 (1.60GHz), N3050 (1.60GHz)

2MB Smart Cache, 14nm, DDR3L-1600MHz, TDP 6W

N3000 (1.04GHz)

2MB Smart Cache, 14nm, DDR3L-1600MHz, TDP 4W

BIOS

64Mb SPI Flash ROM

AMI BIOS

Memory

Two 204 Pin SO-DIMM Sockets Supporting **DDR3L**

1600MHz Memory

Memory Expandable up to 8GB

LCD Options

15.6" (39.62cm) HD (Thickness: 3.8mm)

Video Adapter

Intel HD Graphics

Dynamic Frequency

Intel Dynamic Video Memory Technology

Microsoft DirectX®11.1 Compatible

Audio

High Definition Audio Compliant Interface

2 * Built-In Speakers

Built-In Microphone

Security

Security (Kensington® Type) Lock Slot

BIOS Password

Intel® PTT

Storage

One Changeable 2.5" **7mm** (h) SATA **HDD/SSD**

(**Factory Option**) One 9.5mm(h) Optical Device Type Drive (Super Multi Drive)

Or

(**Factory Option**) Dummy ODD

Or

(**Factory Option**) **7mm** 2nd **HDD** caddy

Pointing Device

Built-in Touchpad

Keyboard

Full-size "WinKey" keyboard (with numeric keypad)

M.2 Slots

Slot 1 for **WLAN and Bluetooth** Combo Module

(**Factory Option**) Slot 2 for **3G** or **4G** Module

Interface

One HDMI-Out Port

One External Monitor Port

One Headphone-Out Jack

One Microphone-In Jack

One RJ-45 LAN Jack

Two USB 3.0 Ports

One DC-in Jack

Two USB 2.0 Ports

Communication

Built-In Gigabit Ethernet LAN
1.0M HD PC Camera Module
(Factory Option) 3G or 4G M.2 Module

WLAN/Bluetooth M.2 Modules:

(Factory Option) Intel® Wireless-AC 3165 Wireless LAN
(802.11ac) + Bluetooth 4.0
(Factory Option) Intel® Wireless-N 7265 Wireless LAN
(802.11b/g/n) + Bluetooth 4.0
(Factory Option) Third-Party Wireless LAN (802.11b/g/n) +
Bluetooth 4.0

Card Reader

Embedded Multi-In-1 Card Reader
MMC (MultiMedia Card) / RS MMC
SD (Secure Digital) / Mini SD / SDHC/ SDXC
MS (Memory Stick) / MS Pro / MS Duo

Environmental Spec

Temperature

Operating: 5°C - 35°C
Non-Operating: -20°C - 60°C

Relative Humidity

Operating: 20% - 80%
Non-Operating: 10% - 90%

Power

Full Range AC/DC Adapter
AC Input: 100 - 240V, 50 - 60Hz
DC Output: 19V, 2.1A (**40W**)
Removable 4 Cell Smart Lithium-Ion Battery Pack, 32WH
(Factory Option) Removable 4 Cell Smart Lithium-Ion Battery Pack, 44WH

Dimensions & Weight

374mm (w) * 258.5mm (d) * 12 - 24.7mm (h)
2.1kg (Barebone with ODD and 32WH Battery)

Introduction

Figure 1
Top View

1. PC Camera
2. *PC Camera LED
**When the PC camera is in use, the LED will be illuminated in red.*
3. Built-In Microphone (W950LU only)
4. LCD
5. Power Button
6. Keyboard
7. Touchpad & Buttons

External Locator - Top View with LCD Panel Open



External Locator - Front & Right Side Views

FRONT VIEW



Figure 2
Front View

1. LED Indicator
2. Multi-in-1 Card Reader

RIGHT SIDE VIEW



Figure 3
Right Side View

1. Microphone-In Jack
2. Headphone-Out Jack
3. USB 2.0 Port
4. Optical Device Drive Bay
5. Emergency Eject Hole
6. Security Lock Slot

Introduction

External Locator - Left Side & Rear View

Figure 4
Left Side View

1. DC-In Jack
2. RJ-45 LAN Jack
3. External Monitor Port
4. Vent
5. HDMI-Out Port
6. USB 3.0 Ports

LEFT SIDE VIEW



Figure 5
Rear View

1. Battery

REAR VIEW



External Locator - Bottom View

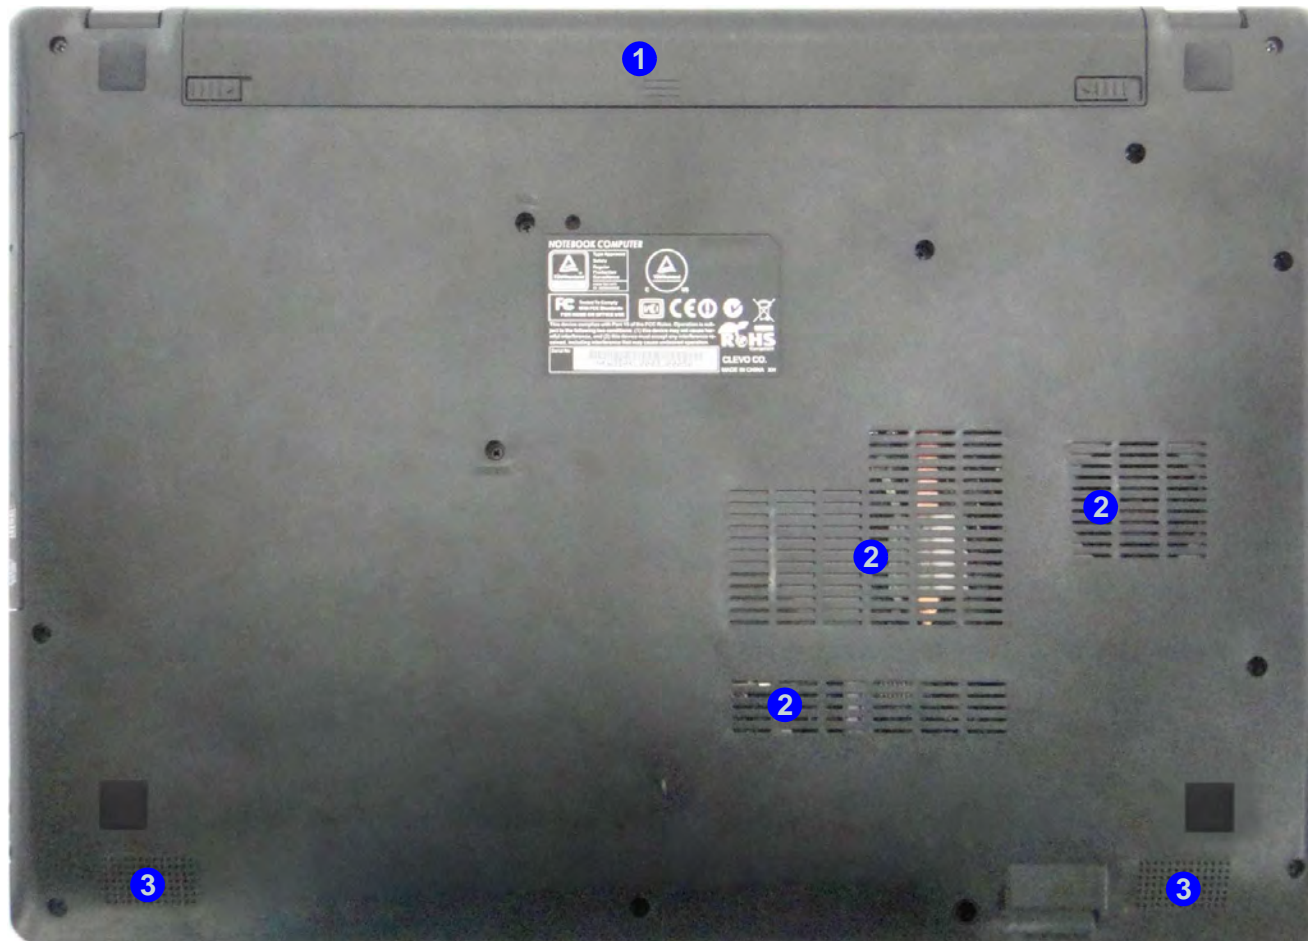


Figure 6
Bottom View

1. Battery
2. Vent
3. Speakers



Overheating

To prevent your computer from overheating, make sure nothing blocks any vent while the computer is in use.

Introduction

Figure 7
**Mainboard Top
Key Parts**

1. KBC-ITE IT8587

Mainboard Overview - Top (Key Parts)



Mainboard Overview - Bottom (Key Parts)

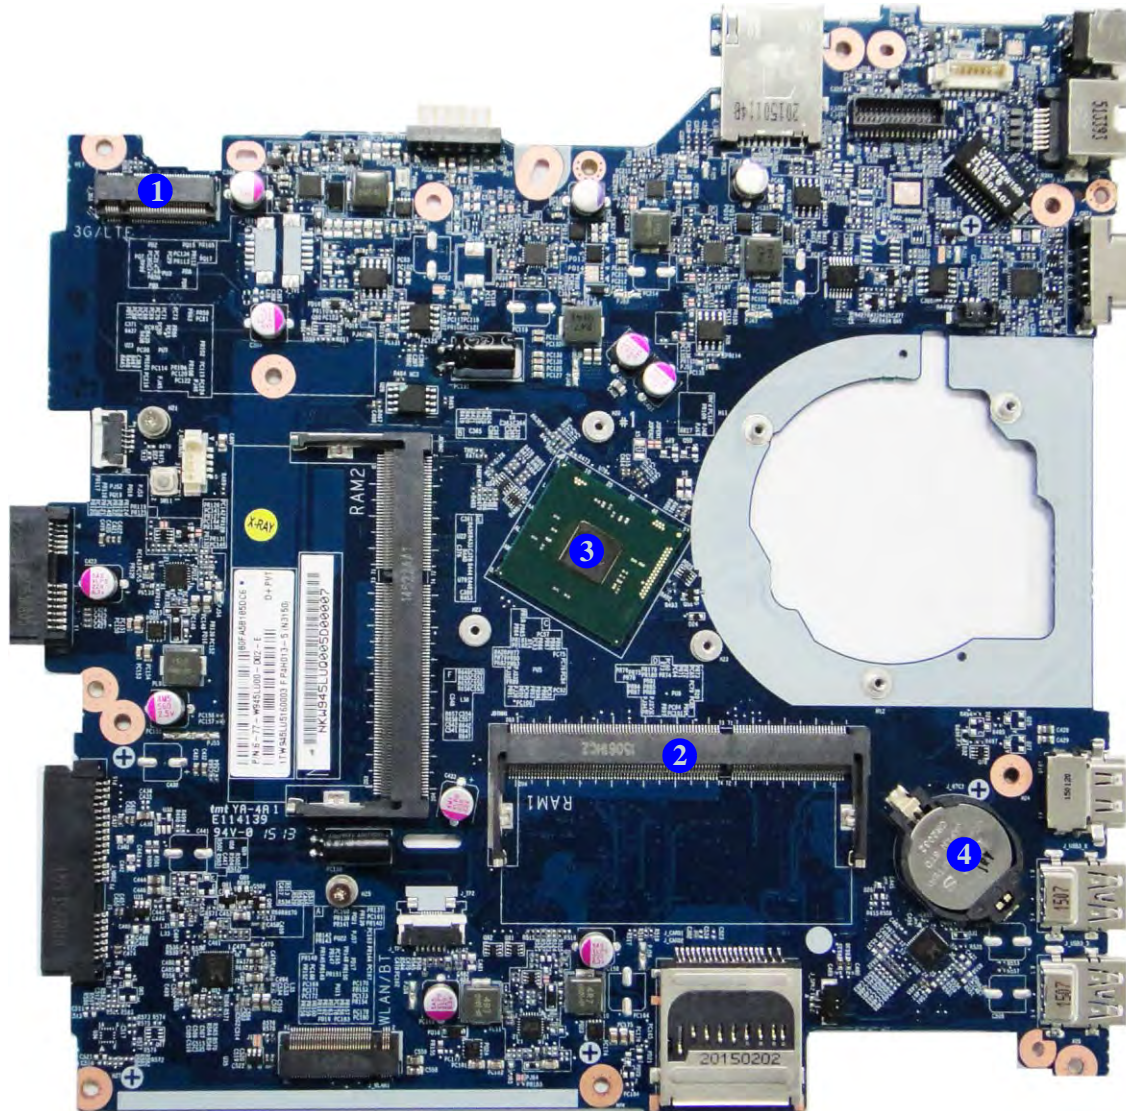


Figure 8
**Mainboard Bottom
Key Parts**

1. M.2 Card Connector
2. Memory Slots
DDR3L SO-DIMM
3. CPU
4. CMOS Battery

Introduction

Figure 9
**Mainboard Top
Connectors**


1. HDMI-Out Port
2. USB Port 3.0
3. Keyboard Cable Connector
4. Audio Board Cable Connector

Mainboard Overview - Top (Connectors)



Figure 10
**Mainboard Bottom
Connectors**

1. ODD Connector
2. HDD Connector
3. Multi-in-1 Card Reader
4. External Monitor Port
5. RJ-45 LAN Jack
6. DC-In Jack
7. CCD Connector
8. LCD Cable Connector
9. Touchpad Connector

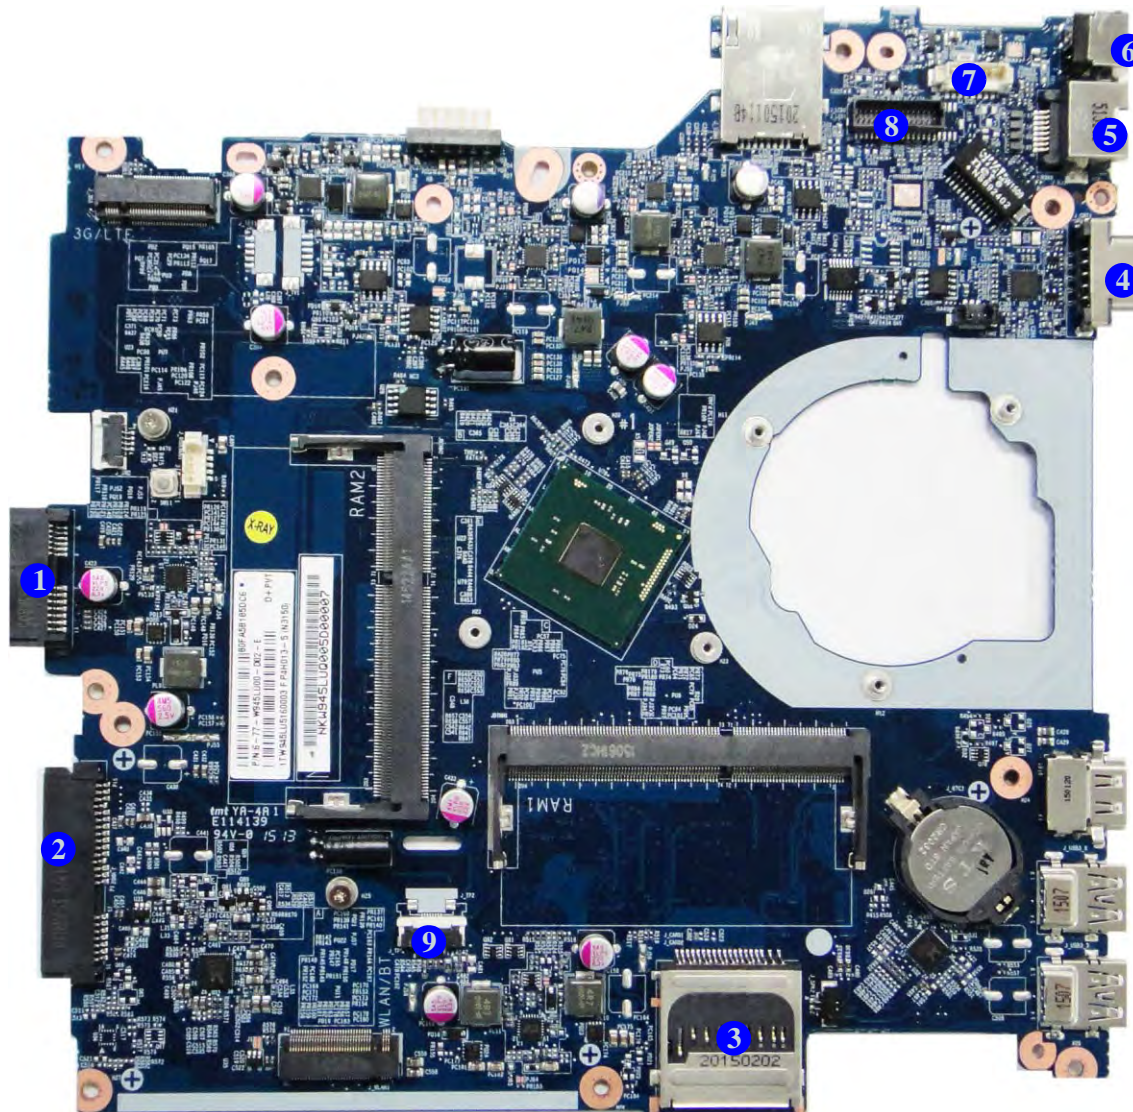


Chapter 2: Disassembly

Overview

This chapter provides step-by-step instructions for disassembling the **W950LU / W955LU** series notebook's parts and subsystems. When it comes to reassembly, reverse the procedures (unless otherwise indicated).

We suggest you completely review any procedure before you take the computer apart.

Procedures such as upgrading/replacing the RAM, optical device and hard disk are included in the User's Manual but are repeated here for your convenience.

To make the disassembly process easier each section may have a box in the page margin. Information contained under the figure # will give a synopsis of the sequence of procedures involved in the disassembly procedure. A box with a  lists the relevant parts you will have after the disassembly process is complete. **Note:** The parts listed will be for the disassembly procedure listed ONLY, and not any previous disassembly step(s) required. Refer to the part list for the previous disassembly procedure. The amount of screws you should be left with will be listed here also.

A box with a  will also provide any possible helpful information. A box with a  contains warnings.

An example of these types of boxes are shown in the sidebar.


Information

Warning

Disassembly

NOTE: All disassembly procedures assume that the system is turned **OFF**, and disconnected from any power supply (the battery is removed too).

Maintenance Tools

The following tools are recommended when working on the notebook PC:

- M3 Philips-head screwdriver
- M2.5 Philips-head screwdriver (magnetized)
- M2 Philips-head screwdriver
- Small flat-head screwdriver
- Pair of needle-nose pliers
- Anti-static wrist-strap

Connections

Connections within the computer are one of four types:

Locking collar sockets for ribbon connectors	To release these connectors, use a small flat-head screwdriver to gently pry the locking collar away from its base. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Pressure sockets for multi-wire connectors	To release this connector type, grasp it at its head and gently rock it from side to side as you pull it out. Do not pull on the wires themselves. When replacing the connection, do not try to force it. The socket only fits one way.
Pressure sockets for ribbon connectors	To release these connectors, use a small pair of needle-nose pliers to gently lift the connector away from its socket. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Board-to-board or multi-pin sockets	To separate the boards, gently rock them from side to side as you pull them apart. If the connection is very tight, use a small flat-head screwdriver - use just enough force to start.

Maintenance Precautions

The following precautions are a reminder. To avoid personal injury or damage to the computer while performing a removal and/or replacement job, take the following precautions:

1. **Don't drop it.** Perform your repairs and/or upgrades on a stable surface. If the computer falls, the case and other components could be damaged.
2. **Don't overheat it.** Note the proximity of any heating elements. Keep the computer out of direct sunlight.
3. **Avoid interference.** Note the proximity of any high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage components and/or data. You should also monitor the position of magnetized tools (i.e. screwdrivers).
4. **Keep it dry.** This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.
5. **Be careful with power.** Avoid accidental shocks, discharges or explosions.
 - Before removing or servicing any part from the computer, turn the computer off and detach any power supplies.
 - When you want to unplug the power cord or any cable/wire, be sure to disconnect it by the plug head. Do not pull on the wire.
6. **Peripherals** – Turn off and detach any peripherals.
7. **Beware of static discharge.** ICs, such as the CPU and main support chips, are vulnerable to static electricity. Before handling any part in the computer, discharge any static electricity inside the computer. When handling a printed circuit board, do not use gloves or other materials which allow static electricity buildup. We suggest that you use an anti-static wrist strap instead.
8. **Beware of corrosion.** As you perform your job, avoid touching any connector leads. Even the cleanest hands produce oils which can attract corrosive elements.
9. **Keep your work environment clean.** Tobacco smoke, dust or other air-born particulate matter is often attracted to charged surfaces, reducing performance.
10. **Keep track of the components.** When removing or replacing any part, be careful not to leave small parts, such as screws, loose inside the computer.

Cleaning

Do not apply cleaner directly to the computer, use a soft clean cloth.

Do not use volatile (petroleum distillates) or abrasive cleaners on any part of the computer.



Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines and power cord). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

Disassembly Steps

The following table lists the disassembly steps, and on which page to find the related information. **PLEASE PERFORM THE DISASSEMBLY STEPS IN THE ORDER INDICATED.**

To remove the Battery:

1. Remove the battery [page 2 - 5](#)

To remove the HDD:

1. Remove the battery [page 2 - 5](#)
2. Remove the HDD [page 2 - 6](#)

To remove the Optical Device:

1. Remove the battery [page 2 - 5](#)
2. Remove the HDD [page 2 - 6](#)
3. Remove the optical device [page 2 - 8](#)

To remove the Caddy/2nd HDD:

1. Remove the battery [page 2 - 5](#)
2. Remove the HDD [page 2 - 6](#)
3. Remove the optical device [page 2 - 8](#)
4. Remove the caddy [page 2 - 10](#)

To remove the System Memory:

1. Remove the battery [page 2 - 5](#)
2. Remove the HDD [page 2 - 6](#)
3. Remove the system memory [page 2 - 11](#)

To remove the Keyboard:

1. Remove the battery [page 2 - 5](#)
2. Remove the HDD [page 2 - 6](#)
3. Remove the keyboard [page 2 - 13](#)

To remove the Wireless LAN Module:

1. Remove the battery [page 2 - 5](#)
2. Remove the HDD [page 2 - 6](#)
3. Remove the WLAN [page 2 - 15](#)


To remove the CCD Module:

1. Remove the battery [page 2 - 5](#)
2. Remove the HDD [page 2 - 6](#)
3. Remove the CCD module [page 2 - 17](#)

Removing the Battery

1. Turn **off** the computer, turn it over.
2. Slide the latch ① in the direction of the arrow (*Figure 1a*).
3. Slide the latch ② in the direction of the arrow, and hold it in place (*Figure 1a*).
4. Slide the battery ③ in the direction of the arrow ④ (*Figure 1b*).

a.

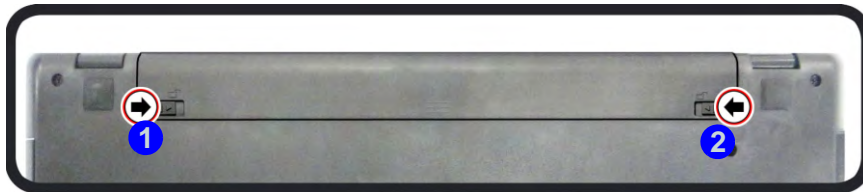

b.

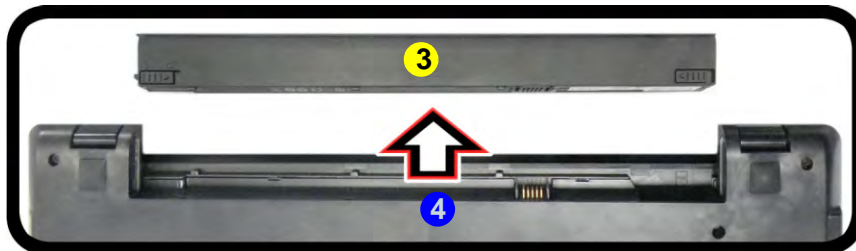


Figure 1
Battery Removal

- a. Slide the latch and hold it in place.
- b. Slide the battery out in the direction of the arrow.



3. Battery

Disassembly

Figure 2
**HDD Assembly
Removal**


- Remove the screws.
- Remove the bottom cover.
- Locate the HDD assembly.

Removing the Hard Disk Drive

The hard disk drive can be taken out to accommodate other 2.5" serial (SATA) hard disk drives with a height of 7.0mm (h). Follow your operating system's installation instructions, and install all necessary drivers and utilities (as outlined in **Chapter 4 of the User's Manual**) when setting up a new hard disk.

Hard Disk Upgrade Process

- Turn **off** the computer, turn it over to remove the battery ([page 2 - 5](#)).
- Remove the screws **1** - **13** ([Figure 2a](#)).
- Lift the bottom cover **14** up from point **15** ([Figure 2b](#)).
- The hard disk drive will be visible at point **16** ([Figure 2c](#)).

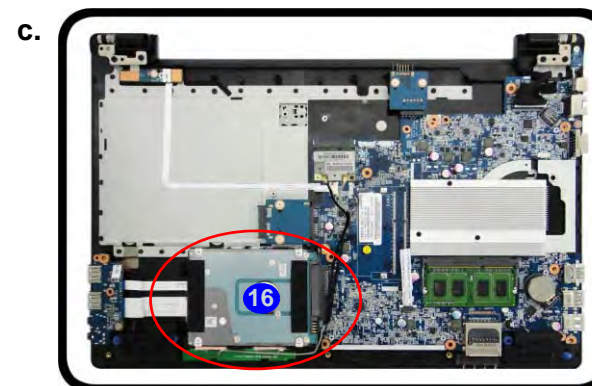

HDD System Warning

New HDD's are blank. Before you begin make sure:

You have backed up any data you want to keep from your old HDD.

You have all the CD-ROMs and FDDs required to install your operating system and programs.

If you have access to the internet, download the latest application and hardware driver updates for the operating system you plan to install. Copy these to a removable medium.



14. Bottom Cover

- 13 Screws

5. Slightly lift and pull the hard disk assembly in the direction of arrow 17 (Figure 3d).
6. Lift the hard disk assembly 18 out of the bay 19 (Figure 3e).
7. Remove the screws 20 - 21 and the adhesive cover 22 from the hard disk 23 (Figure 3f).
8. Reverse the process to install a new hard disk (do not forget to replace all the screws and bottom cover).



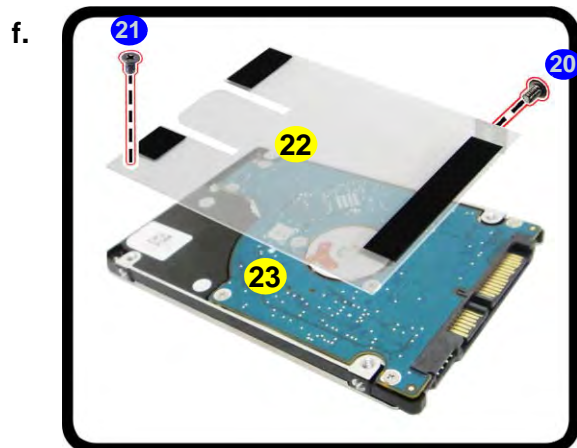


Figure 3
**HDD Assembly
Removal (cont'd.)**

- d. Slightly lift and pull the HDD assembly in the direction of the arrow.
- e. Lift the HDD assembly out of the bay.
- f. Remove the screws and adhesive cover.

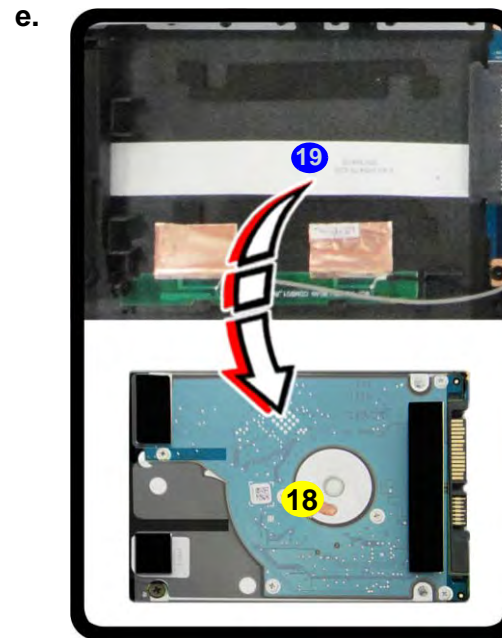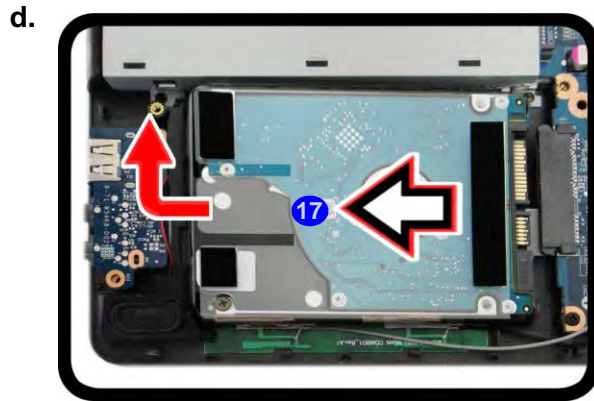

18. HDD Assembly
22. Adhesive Cover
23. HDD

- 2 Screws

Disassembly


Figure 4
**Optical Device
Removal**

- Pull out the optical device.
- Pry the bezel off the optical device.
- Separate the bezel and optical device.

Removing the Optical (CD/DVD) Device

- Turn **off** the computer, turn it over to remove the battery ([page 2 - 5](#)) and bottom cover ([page 2 - 6](#)).
- Carefully pull out the optical device **1** out of the bay at point **2** ([Figure 4a](#)).
- Carefully pry the bezel **4** off the optical device at point **3** ([Figure 4b](#)).
- Separate the bezel **4** and the optical device ([Figure 4c](#)).


a.

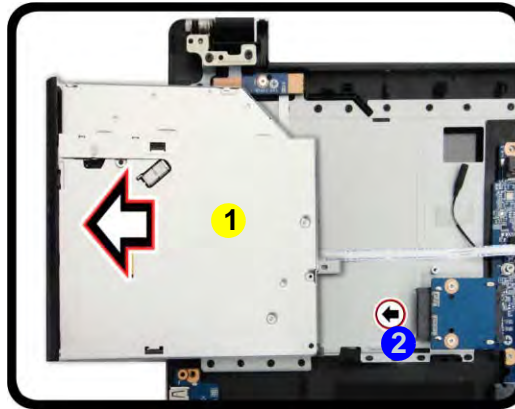

b.



c.

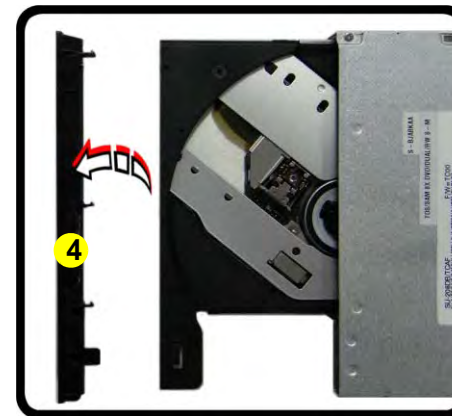

- Optical Device
- Bezel

5. Reverse the process to attach the front bezel **4** with the new optical device at point **5** (*Figure 5e*).
6. Insert the new optical device **1** and carefully slide it into the computer (the device only fits one way. DO NOT FORCE IT; The screw holes should line up). Take care to avoid folding the connector underneath.
7. Replace the bottom cover and tighten the screws.
8. Restart the computer to allow it to automatically detect the new device.


Figure 5
**Optical Device
Assembly**

- d. Install the front bezel.
e. Insert the optical device.

d.



e.

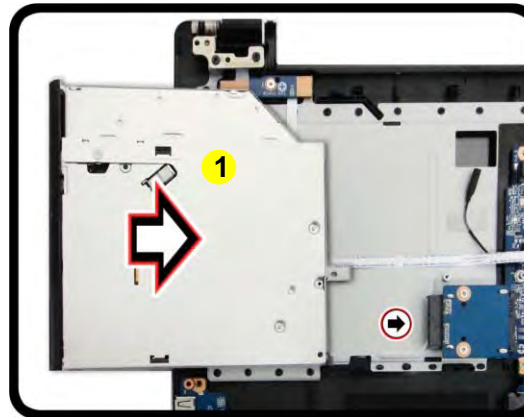

1. Optical Device
4. Bezel


Disassembly

Figure 6
**Caddy/2nd HDD
Removal**

- Remove the caddy from the ODD bay.
- Remove the screws.
- Lift the HDD assembly out.
- Separate the connector and HDD.

Removing the Caddy/Second Hard disk

- Turn **off** the computer, turn it over to remove the battery ([page 2 - 5](#)) and bottom cover ([page 2 - 6](#)).
- Carefully pull out the caddy **1** out of the bay at point **2** ([Figure 6a](#)).
- Remove screws **3 - 8** ([Figure 6b](#)) to release the hard disk assembly.
- Lift the hard disk **9** and connector **10** out ([Figure 6c](#)).
- Separate the hard disk **9** and connector **10** ([Figure 6d](#)).
- Reverse the process to install a new HDD (do not forget to replace the screws and bottom cover).
- Restart the computer to allow it to automatically detect the new device.

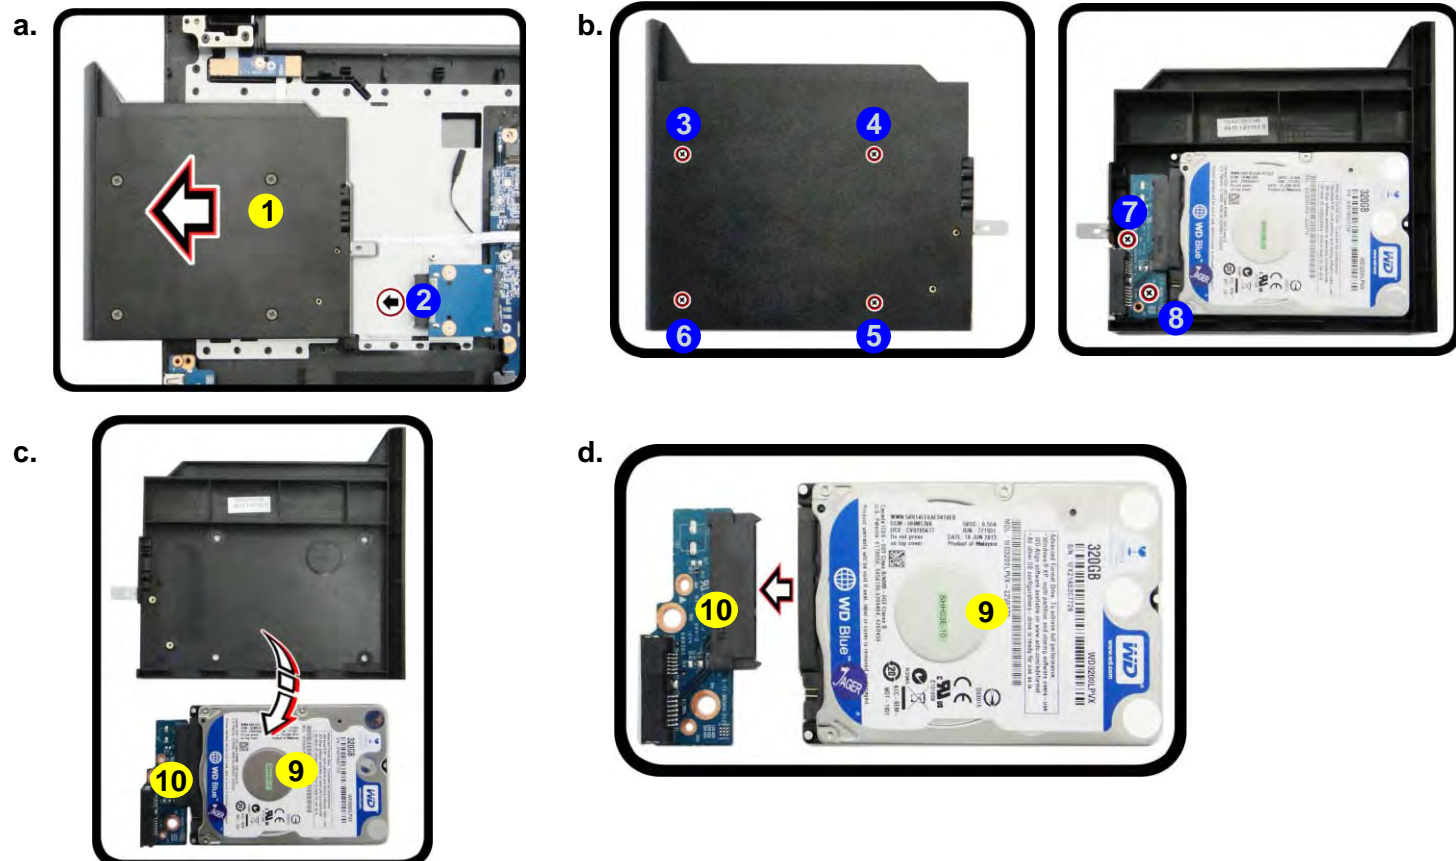

1. Caddy
9. HDD
10. HDD Connector
- 6 Screws

Removing the System Memory (RAM)

The computer has two memory sockets for 204 pin Small Outline Dual In-line Memory Modules (SO-DIMM) supporting DDR3L Up to 1066/1333 MHz. The main memory can be expanded up to 8GB. The SO-DIMM modules supported are 1024MB and 2048MB **DDR3L** Modules. The total memory size is automatically detected by the POST routine once you turn on your computer.

Memory Upgrade Process

1. Turn **off** the computer, turn it over to remove the battery ([page 2 - 5](#)) and bottom cover ([page 2 - 6](#)).
2. The RAM modules will be visible at point **1** on the mainboard ([Figure 7b](#)).
3. Gently pull the two release latches (**2** & **3**) on the sides of the memory socket in the direction indicated by the arrows ([Figure 7b](#)). The RAM module **4** will pop-up ([Figure 7c](#)), and you can then remove it.

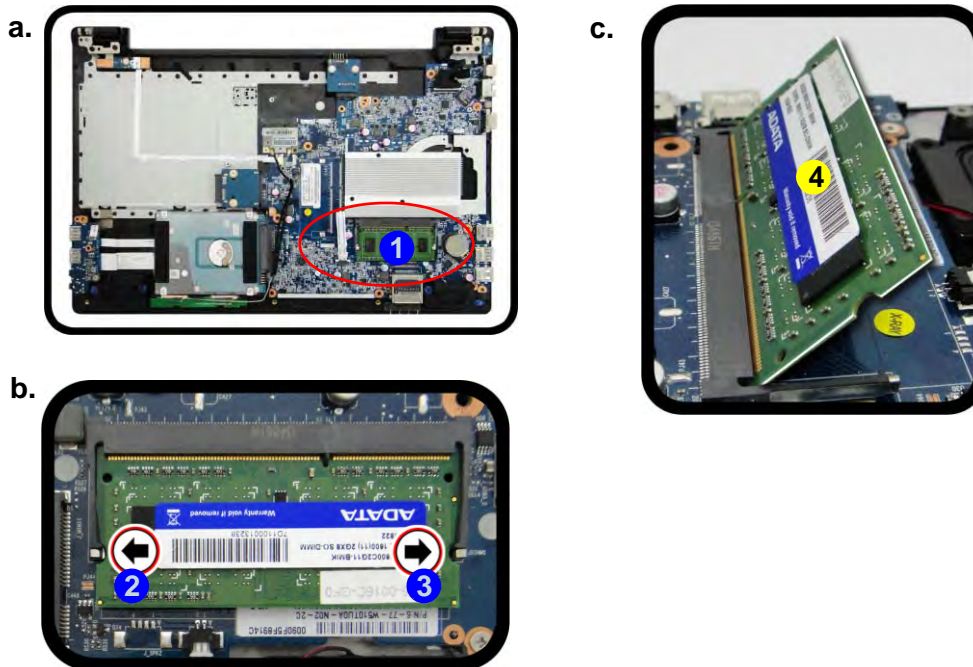


Figure 7
RAM Module Removal

- a. The RAM modules will be visible at point **1** on the mainboard.
- b. Pull the release latches.
- c. Remove the module.



Contact Warning

Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.



4. RAM Module

Disassembly

Figure 8
RAM Module Assembly

d. Insert the RAM modules properly.

4. Pull the latches to release the second module if necessary.
5. Insert a new module holding it at about a 30° angle and fit the connectors firmly into the memory slot.
6. The module will only fit one way as defined by its pin alignment. Make sure the module is seated as far into the slot as it will go. **DO NOT FORCE IT**; it should fit without much pressure.
7. Replace the bottom case and the screws (see [page 2 - 6](#)).
8. Restart the computer to allow the BIOS to register the new memory configuration as it starts up.

d.




4. RAM Module

Removing the Keyboard

1. Turn **off** the computer, turn it over to remove the battery ([page 2 - 5](#)).
2. Remove screws **1** - **2** from the bottom case and press at point **3** to release the keyboard ([Figure 9a](#)).
3. Turn the computer over, remove the keyboard **4** ([Figure 9c](#)).
4. Carefully lift the keyboard up, being careful not to bend the keyboard ribbon cable **5**. Disconnect the keyboard ribbon cable from the locking collar socket **6** ([Figure 9d](#)).
5. Carefully lift up the keyboard **4** off the computer ([Figure 9e](#)).

a.

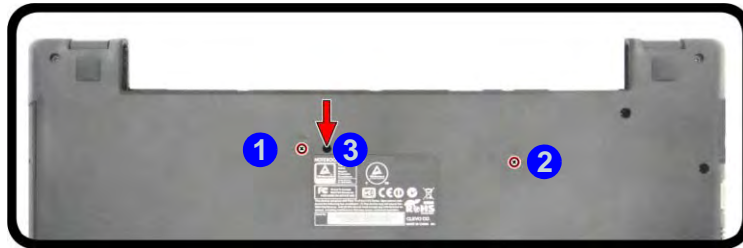

c.



b.

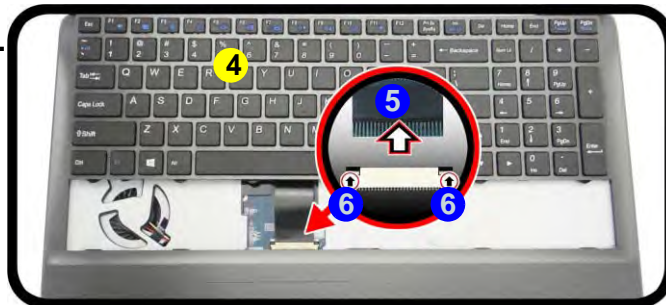


Figure 9
Keyboard Removal

- a. Remove screw and release the keyboard by pressing at point **3**.
- b. Disconnect the keyboard ribbon cable from the locking collar socket.
- c. Remove the keyboard.



4. Keyboard

- 2 Screws

Disassembly

Figure 10
Keyboard Assembly

- d. Connect the keyboard ribbon cable to the locking collar socket.
- e. Insert the keyboard at point 9 and slide it in at point 10 and 11 (Figure 10e).
- f. Tighten the screws.

6. Connect the keyboard ribbon cable to the locking collar socket 8, and be careful not to bend the keyboard ribbon cable 7 (Figure 10d).
7. Insert the keyboard 4 at point 9 and then slide the keyboard in at point 10 and 11 (Figure 10e).
8. Tighten the screws 12 - 13 to secure the keyboard (Figure 10f).

d.



e.



f.



4. Keyboard

- 2 Screws

Removing the Wireless LAN Module

1. Turn **off** the computer, turn it over to remove the battery ([page 2 - 5](#)) and bottom cover ([page 2 - 6](#)).
2. The Wireless LAN module will be visible at point **1** on the mainboard ([Figure 11a](#)).
3. Carefully disconnect the cables **2** & **3**, and then remove the screw **4** ([Figure 11b](#)).
4. The Wireless LAN module **5** ([Figure 11c](#)) will pop-up, and you can remove it from the computer.

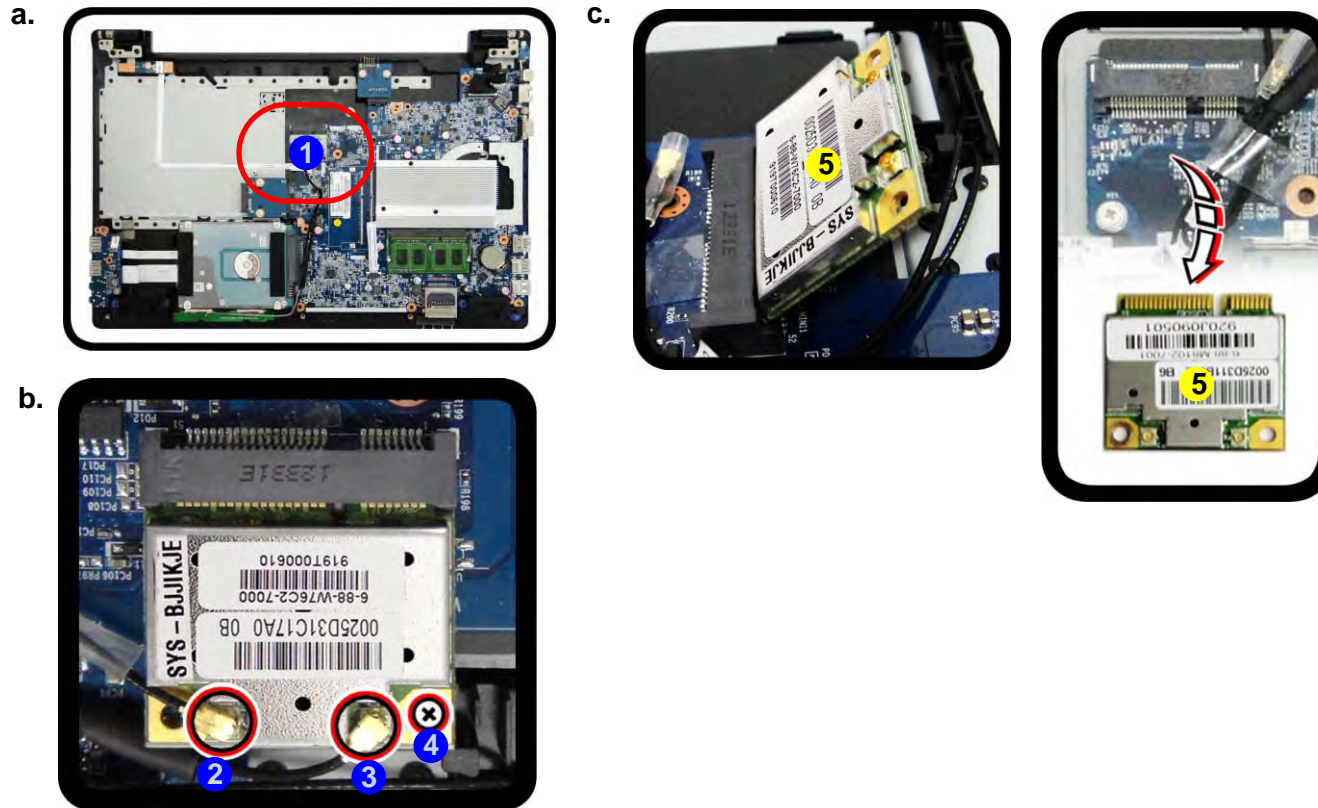


Figure 11
**Wireless LAN
 Module Removal**

- a. Locate the WLAN.
- b. Disconnect the cable and remove the screw.
- c. The WLAN module will pop up and lift it out of the computer.

Note: Make sure you reconnect the antenna cable to the “1 + 2” socket ([Figure 11b](#)).



5. Wireless LAN Module

- 1 Screw

Disassembly

Wireless LAN and Combo Module Cables

Note that the cables for connecting to the antennae on WLAN and WLAN & Bluetooth Combo modules are not labelled. The cables/covers (each cable will have either a black or transparent cable cover) are color coded for identification as outlined in the table below.

Module Type	Antenna Type	Cable Color	Cable Cover Type
WLAN/WLAN & Bluetooth Combo	WM 1	Black	Transparent
	WM 2	Gray	
	WM 3	White	

Cable 1 is usually connected to antenna 1 (Main) on the module, and cable 2 to antenna 2 (Aux).

Removing the CCD

1. Turn **off** the computer, turn it over to remove the battery ([page 2 - 5](#)).
2. Run your fingers around the inner frame of the LCD panel at the points as indicated by the arrows **1** - **4** ([Figure 12a](#)).
3. Lay the computer down on a flat surface with the top case up forming a 90 degree angle. Push the LCD front cover **5** upwards before carefully lifting it up.
4. Remove the LCD front cover **5** ([Figure 12c](#)).


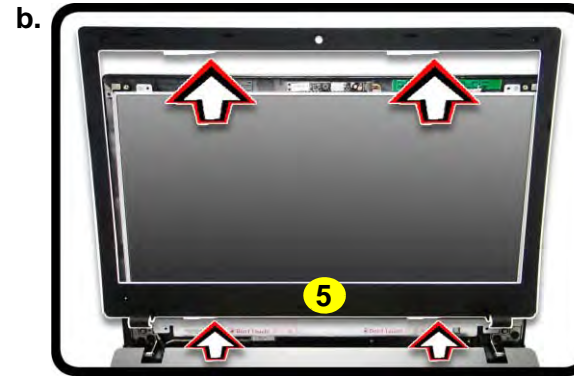


Figure 12
CCD Removal

- a. Run your fingers around the inner frame of the LCD panel at the points indicated by the arrows.
- b. Lay the computer down on a flat surface with the top case up forming a 90 degree angle. Push the LCD front panel upwards before carefully lifting it up.
- c. Remove the LCD front cover.

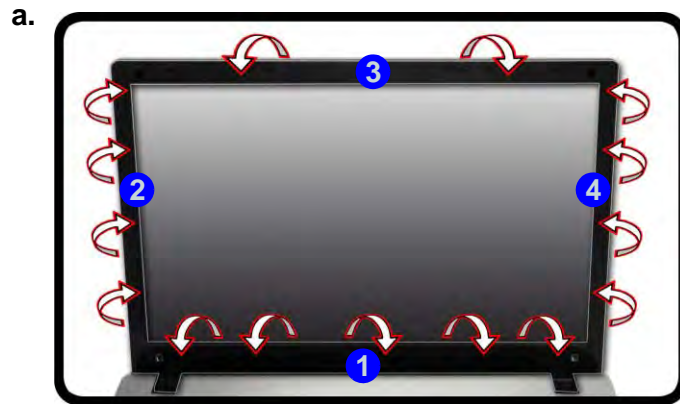


5. LCD Front Cover

Disassembly

Figure 13
CCD Removal
(cont'd)

- d. Disconnect the cable.
- e. Remove the CCD module.

- 5. Disconnect the cable ⑥.
- 6. Remove the CCD module ⑦ (*Figure 13f*).
- 7. Reverse the process to install a new CCD module.

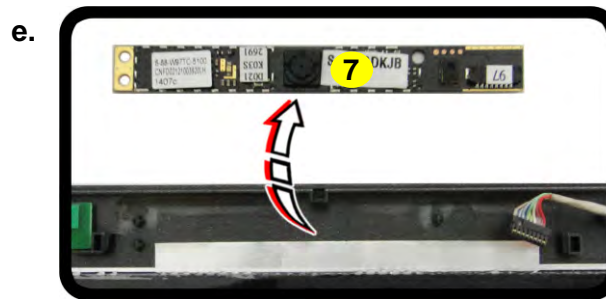

7. CCD Module

Appendix A:Part Lists

This appendix breaks down the *W950LU / W955LU* series notebook's construction into a series of illustrations. The component part numbers are indicated in the tables opposite the drawings.

Note: This section indicates the *manufacturer's* part numbers. Your organization may use a different system, so be sure to cross-check any relevant documentation.

Note: Some assemblies may have parts in common (especially screws). However, the part lists DO NOT indicate the total number of duplicated parts used.

Note: Be sure to check any update notices. The parts shown in these illustrations are appropriate for the system at the time of publication. Over the product life, some parts may be improved or re-configured, resulting in *new* part numbers.


Part List Illustration Location

The following table indicates where to find the appropriate part list illustration.

Table A - 1
**Part List Illustration
Location**

Part	W950LU	W955LU
Top (4W)	<i>page A - 3</i>	<i>page A - 5</i>
Top (6W)	<i>page A - 4</i>	<i>page A - 6</i>
Bottom	<i>page A - 7</i>	<i>page A - 8</i>
LCD	<i>page A - 9</i>	<i>page A - 10</i>
DVD Dual Drive	<i>page A - 11</i>	<i>page A - 12</i>
Dummy ODD	<i>page A - 13</i>	
HDD	<i>page A - 14</i>	
HDD Caddy	<i>page A - 15</i>	

Top (4W) - W950LU

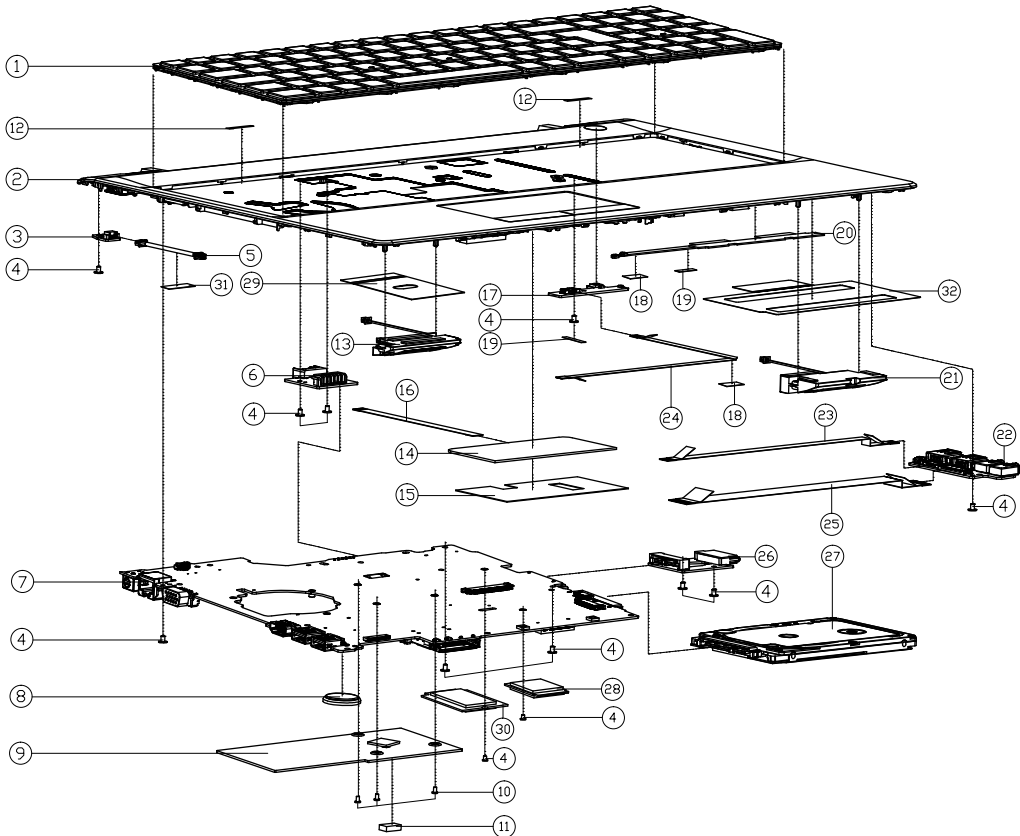

ITEM	PART NAME	PART NO	REMARK
1	WING K/B (SUSBLADER FRAMEOUS) MODULE W950AU	6-79-W950AU0K-010-W	
2	TOP CASE MODULE W950SU2	6-39-W95S2-014	
3	HALL SENSOR BOARD V1.0 W950KU	6-77-W95K1-D01	
4	SCREW M2X3. KI NI ICT NY (D0-B4.5,D1-B4)	6-35-B1120-3RE	
5	WIRE CABLE FOR LID 3P 40MM GH.) W950EU	6-43-W5503-011	
6	BATTERY BOARD V2.0 W950KU	6-77-W95KQ-D02	
7	WING K/B (SUSBLADER FRAMEOUS) MODULE W950AU	6-77-W950LU00-D08-3C	
8	BATTERY 3V 220MA BBBCR2032B (KTS)	6-23-6A2B2-030	
9	CPU HEATSINK MODULE W945TUQ	6-33-W945N-T00	
10	SCREW M2X4L KI BZ ICT NY	6-35-B6120-4RA	
11	CONDUCTIVE GASKET (D06.5X6) (D06.5X6.5XMM W945U)	6-47-00190-109	
12	MYLAR(12*2*0.75T) FOR W940SU2	6-40-00150-12D	
13	SPK+CABLE L 2W 4T 23MM (K250249X00 W950KU)	6-23-SW95K-0L1	
14	TOUCH PAD SYNAPTICS TM-01146-003 MULTI-GE5	6-49-C4802-010	
15	TP TAPE MYLAR PET W540EU	6-40-W5401-010	
16	FFC CABLE FOR HOT KEY TO HALL SENSOR 6PIN COLD W550ETQ	6-43-W35E2-011	
17	POWER SWITCH BOARD V2.0 W945LUQ	6-77-W94LS-D02-A	
18	TAPE MYLAR TRANSPARENT (20X10X0.05) P180MM	6-40-P1803-020	
19	TAPE MYLAR TRANSPARENT (30X5X0.05) W25HPQ	6-40-W25P3-010	
20	WING K/B (SUSBLADER FRAMEOUS) MODULE W950AU	6-23-W950-030	이 부분의 부품은 LITE-2에 사용 이 부분은 LITE-2에 사용
21	SPK+CABLE R 2W 4T 50MM (K250249X00 W950KU)	6-23-SW95K-0R1	
22	AUDIO BOARD (HEADPHONE) V2.0 W950LU	6-77-W95L8-D02	
23	FFC CABLE MD TO AUDIO BOARD COLD 16MM 5V 6P W950SU2	6-43-W95S0-020-2	
24	FFC CABLE FOR POWER TO MD W950SU2 20V 4PIN COLD W950SU2	6-43-W95S0-010	
25	FFC CABLE MD TO AUDIO BOARD COLD 17MM 5V 12PIN W950SU2	6-43-W95S0-030-2	
26	CDD BOARD V3.0 W950KU	6-77-W95KN-D03	
27	W/O HDD ASS'Y W950KU	6-79-W950KU0J-010	
27	W/ HDD ASS'Y W950KU	6-79-W950KU0J-020	
27	2ND HDD CADDY ASS'Y W/HDD W950KU	6-79-W950KU0J-030	<OPTION>
27	2ND HDD CADDY ASS'Y W/O HDD W950KU	6-79-W950KU0J-040	<OPTION>
28	W/O HDD CADDY ASS'Y W/HDD W950KU	6-88-S210F-9400	
28	W/O HDD CADDY ASS'Y W/HDD W950KU	6-88-N240F-4200	
28	W/O HDD CADDY ASS'Y W/HDD W950KU	6-88-N170F-5100	
28	W/O HDD CADDY ASS'Y W/HDD W950KU	6-88-W95LF-4240	
29	TOP CASE AL FOIL (SUSBLADER) AL FOIL (HET + 1225W W950LU)	6-47-W95L2-011	
30	WING K/B (SUSBLADER) WING K/B (SUSBLADER) WING K/B (SUSBLADER)	6-88-S210W-8810	
30	WING K/B (SUSBLADER) WING K/B (SUSBLADER) WING K/B (SUSBLADER)	6-88-W3306-8830	
30	WING K/B (SUSBLADER) WING K/B (SUSBLADER) WING K/B (SUSBLADER)	6-88-W3306-8841	
31	TAPE MYLAR (C)MYLAR M550J	6-40-M55J2-030	
32	TOP ANTENNA AL FOIL (94.3X38.9) W950AU	6-47-W9502-010	ONLY FOR LTE-2

Figure A - 1
Top (4W) - W950LU

A.Part Lists

This exploded view diagram illustrates the assembly of the HP Z8 G4 Workstation. The components are numbered 1 through 34, indicating the sequence of assembly. The diagram shows the main chassis, the top cover, the front panel, the rear panel, the power supply, the cooling system, and the internal components like the motherboard, RAM, and storage. The assembly order is as follows:

1. Main chassis
2. Top cover
3. Front panel
4. Screws
5. Rear panel
6. Power supply
7. Motherboard
8. RAM
9. Storage
10. Cooling system
11. Fan
12. Fan bracket
13. Fan bracket
14. Fan bracket
15. Fan bracket
16. Fan bracket
17. Fan bracket
18. Fan bracket
19. Fan bracket
20. Fan bracket
21. Fan bracket
22. Fan bracket
23. Fan bracket
24. Fan bracket
25. Fan bracket
26. Fan bracket
27. Fan bracket
28. Fan bracket
29. Fan bracket
30. Fan bracket
31. Fan bracket
32. Fan bracket
33. Fan bracket
34. Fan bracket

ITEM	PART	NAME	PART NO	REMARK
1	WIRE K/2	USG&L&C&R FRM&C&D MODULE W950U	6-79-W950AUK-010-W	
2	TOP CASE	MODULE W950S2U	6-39-W95S2-014	
3	HALL SENSOR	BOARD V10 W950KU	6-77-W95K1-D01	
4	SCREW M2X4	K1 IC NET I/O C0H-445J1-0-A	6-35-B1120-3RE	
5	WIRE CABLE	FOR LID 3P 40MM (4L) W950U	6-43-W5503-011	
6	BATTERY	BOARD V2.0 W950KU	6-77-W95K0-D02	
7	WIRE BOARD	C&R&C&R&C&R C&R&C&R C&R&C&R C&R&C&R	6-77-W950LUD-D02-F	
7	WIRE BOARD	C&R&C&R&C&R V2 C&R&C&R&C&R PR&C&R PR&C&R	6-77-W950LUD-D02-3E	
7	WIRE BOARD	C&R&C&R&C&R V2 C&R&C&R&C&R C&R&C&R C&R&C&R	6-77-W950LUD-D02-4B	
7	WIRE BOARD	C&R&C&R&C&R V2 V2&C&R&C&R C&R&C&R C&R&C&R	6-77-W950LUD-D02-5F	
7	WIRE BOARD	C&R&C&R&C&R V2 C&R&C&R&C&R C&R&C&R C&R&C&R	6-77-W950LUD-D02-5D	
7	WIRE BOARD	C&R&C&R&C&R C&R&C&R&C&R C&R&C&R C&R&C&R	6-77-W950LUD-D02-F	
8	BATTERY	3V 220MA BBBCR2032B (KTS)	6-23-6A2B2-030	
9	CPU	HEATSINK AL6063 W940TU	6-41-W940S-011	
10	FAN	MODULE (ADDA) W547BU	6-31-W547S-101	
11	FAN	HOUSING TENOPE&BS N7575L	6-42-W940S-011	
12	SCREW M2X4L	K1 B2 IC TNY	6-35-B6120-4RA	
13	SPK CABLE	L 2V 41ZM P2C224900 W950U	6-23-W595K-011	
14	TOUCH PAD	SYNAPTICS TW-01146-083 MULTI-GE3	6-49-C4802-010	
15	TP	TAPE. MYLAR PET W540EU	6-40-W5401-010	
16	FFC CABLE	FOR NET KEY TO HALL SENSOR 6P C&D V&C&R	6-43-W35E2-011	
17	POWER	SWITCH BOARD V2.0 W945LUD	6-77-W94LS-002-A	
18	TAPE	MYLAR TRANSPARENT (CONDU&D) P180M	6-40-P1803-020	
19	TAPE	MYLAR TRANSPARENT (CONDU&D) W25P30	6-40-W25P3-010	
20	WIRE BOARD	S&C&R&C&R&C&R C&R&C&R&C&R C&R&C&R C&R&C&R	6-23-W7950-030	
21	SPK CABLE	L 2V 41ZM P2C224900 W950U	6-23-W595K-0R1	
22	AUDIO	BOARD (HEAD&P&N) V2.0 W95U	6-77-W95L8-002	
23	FFC CABLE	NO TO AUDIO BOARD C&D&M 5P 4P W950U	6-43-W9550-020	
24	FFC CABLE	FOR POWER TO NO TO AUDIO BOARD C&D&M 5P 4P W950U	6-43-W9550-010	
25	FFC CABLE	NO TO AUDIO BOARD C&D&M 5P 4P W950U	6-43-W9550-030	
26	ODD	BOARD V3.0 W950KU	6-77-W95KN-D03	
27	W/D	HDD ASS'Y W950KU	6-79-W950KUJ-010	
27	W / HDD	ASS'Y W950KU	6-79-W950KUJ-020	
28	2ND	HDD CADDY ASSY W/HDD W950KU	6-79-W950KUJ-030	(OPTION)
28	2ND	HDD CADDY ASSY W/HDD W950KU	6-79-W950KUJ-040	(OPTION)
28	WIRE BOARD	C&R&C&R&C&R C&R&C&R&C&R C&R&C&R C&R&C&R	6-88-S210F-9400	
28	WIRE BOARD	C&R&C&R&C&R C&R&C&R&C&R C&R&C&R C&R&C&R	6-88-N240F-4200	
28	WIRE BOARD	C&R&C&R&C&R C&R&C&R&C&R C&R&C&R C&R&C&R	6-88-N1270F-5100	
28	WIRE BOARD	C&R&C&R&C&R C&R&C&R&C&R C&R&C&R C&R&C&R	6-88-W95L4-4200	
29	TOP CASE	AL FULL (S&C&R&C&R&C&R) AL FULL (NET I/O) W950U	6-47-W9502-010	
30	CON	CONDU&C&R&C&R NET KEY NET KEY TO MIC&R&C&R C&R&C&R	6-88-S210W-8810	
31	CON	CONDU&C&R&C&R NET KEY NET KEY TO MIC&R&C&R C&R&C&R	6-88-W3306-8830	
31	CON	CONDU&C&R&C&R NET KEY NET KEY TO MIC&R&C&R C&R&C&R	6-88-W3306-8841	
32	CONDUCTIVE	GO&C&R&C&R&C&R (L&C&R&C&R&C&R) W950U	6-47-00190-109	
32	TOP	ANTENNA AL FULL (S&C&R&C&R&C&R) W940TU	6-47-W9502-010	ONLY FOR LTE-2
33	TAPE	MYLAR (C) MYLAR M550J	6-40-M55J2-030	
34	MYLAR	(12*2*0.75) F&C&R FOR W940S2U	6-40-00150-12D	



A.Part Lists

[illegible]

Bottom (W950LU)

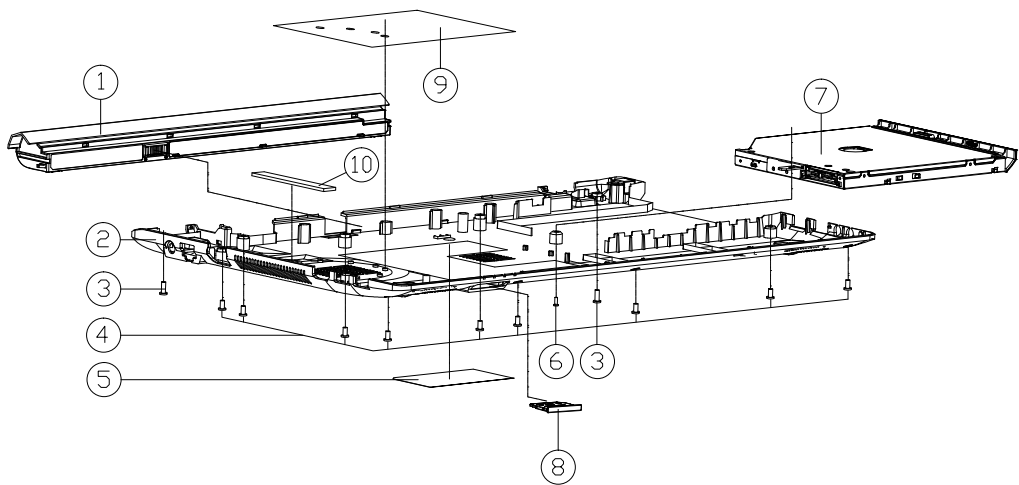


Figure A - 5
Bottom (W950LU)

ITEM	PART NAME	PART NO	REMARK
1	IMP S LU NAV/CDRW KCP OPT/ODD SPMCEST 22MM V950LU TEXTURE	6-87-W95KS-42F2	
1	IMP S LU NAV/CDRW KCP OPT/ODD SPMCEST 22MM V950LU TEXTURE	6-87-W97KS-42L	
1	IMP S LU NAV/CDRW KCP OPT/ODD SPMCEST 22MM V950LU TEXTURE	6-87-W95KS-42F3	
1	IMP S LU NAV/CDRW KCP OPT/ODD SPMCEST 22MM V950LU TEXTURE	6-87-W97KS-42L1	
2	BOTTOM CASE MODULE W950SU2	6-39-W95S3-012	
2	BOTTOM CASE MODULE W950SU2-C	6-39-W95S3-012-C	
3	SCREW M2.5*8L KI BK/Z NY ICT	6-35-B6125-8R0	
4	SCREW M2.5*6L K BZ ICT NY	6-35-82125-6RA	
5	PRODUCT LABEL FOR W950LU	6-45-W950LU03-010	
6	SCREW MEMSL KKIT-0.8 D=4.0 BK/Z ICT NY	6-35-B6120-5R0	
7	SATA DVD SUPER MULTI ASS'Y (OPTION)	6-79-W950LU00-001	(OPTION)
7	W/O ODD ASS'Y W950KU	6-79-W950KU02-000	(OPTION)
7	(PRE-PROCESS)DUMMY ODD ASS'Y W950KU	6-79-W950KU02-010	(OPTION)
8	DUMMY 300L NON PUSH TYPE PE-HABS (C720P-700C) W970DU	6-42-W9708-030	
9	BOTTOM CASE AL FOIL (AL+3M467) W950TU	6-40-W9503-010	
10	SPONGE FOR TOP CASE (576*42) (3K55+30M) 64000	6-47-0019A-570	ONLY FOR W950LU-C


A.Part Lists

ITEM	PART NAME	PART NO	REMARK
1	W/1 1/2" DIA STD OF BORE RECESSED 2X 1/2" DIA 1/2" DIA 1/2" DIA	6-87-W9555-42F2	
1	W/1 1/2" DIA STD OF BORE RECESSED 2X 1/2" DIA 1/2" DIA 1/2" DIA	6-87-W9555-42F3	
2	BOTTOM CASE MODULE W955TU	6-39-W9553-K11	
2	BOTTOM CASE MODULE W955KL	6-39-W9553-K11	
2	BOTTOM CASE MODULE W955KL	6-39-W9553-K11-C	
3	SCREW M2.5X.8L KI BK/2 NY ICT	6-35-B6125-BR0	
4	SCREW M2.5X.8L KI BK/2 ICT NY	6-35-B6125-SRA	
5	PRODUCT LABEL FOR W955KL	6-45-W955KL03-010	
5	PRODUCT LABEL FOR W955KU	6-45-W955KU03-010	
5	PRODUCT LABEL FOR W955TU	6-45-W955TU03-010	
5	PRODUCT LABEL FOR W955SU2	6-45-W955SU23-010	
5	PRODUCT LABEL FOR W955AU	6-45-W955AU03-010	
5	PRODUCT LABEL FOR W955LU	6-45-W955LU03-010	
6	SCREW M2.5X.8L KI/148 D/40 BK/2 ICT NY	6-35-B6120-SR0	
7	SATA DVD SUPER MULTI ASSY (OPTION)	6-79-W955AU00-010	(OPTION)
7	SATA DVD SUPER MULTI ASSY (OPTION)	6-79-W955SU20-010	(OPTION)
7	SATA DVD SUPER MULTI ASSY (OPTION)	6-79-W955KL00-010	(OPTION)
7	SATA DVD SUPER MULTI ASSY (OPTION)	6-79-W955LU00-002	(OPTION)
7	SATA BLU-RAY COMBO ASSY (OPTION)	6-79-W955SU2W-010	(OPTION)
7	SATA BLU-RAY COMBO ASSY (OPTION)	6-79-W955AU0W-010	(OPTION)
7	W/O DDD ASSY W955SU2	6-79-W955SU2W-000	(OPTION)
7	W/O DDD ASSY W955AU	6-79-W955AU0W-000	(OPTION)
8	2000 100 MM FLEX FOR PC-805 (2220-7000) W955W	6-42-W95708-030	



LCD (W955LU)

Figure A - 8
LCD (W955LU)

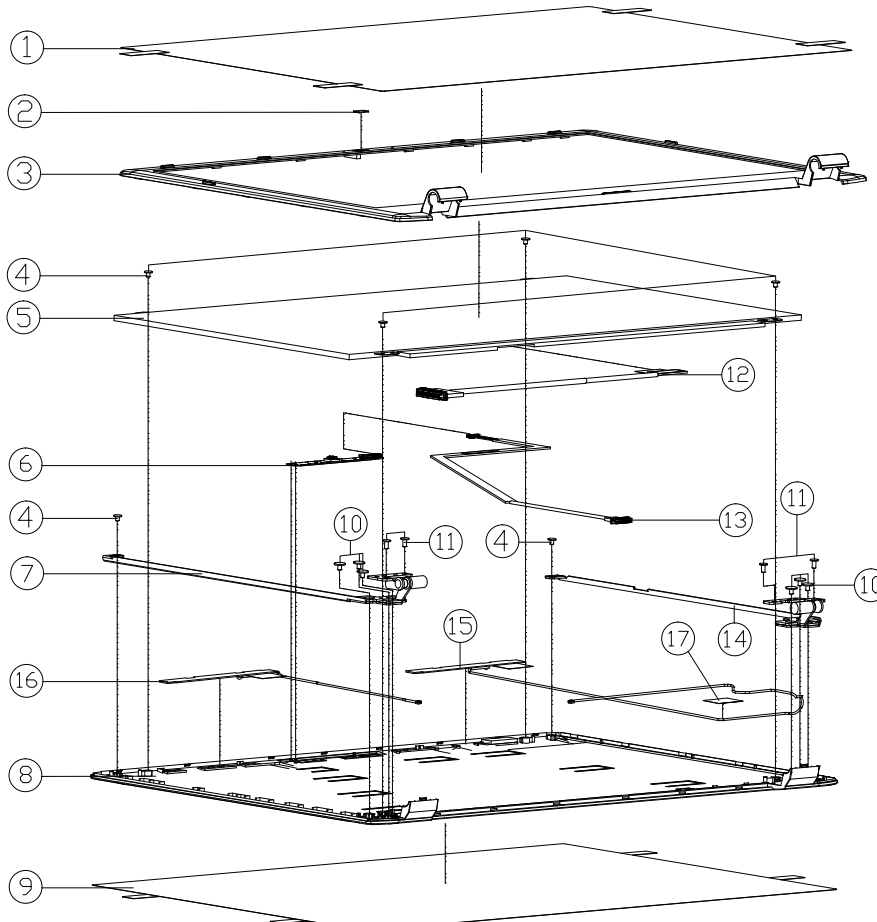

ITEM	PART NAME	PART NO	REMARK
1	LCD FRONT COVER PROTECTION MYLAR (PET+3MS95) ES200	6-40-E51Q1-030-1	
2	CCD LENS PMMA W955SU2	6-42-W9551-010	
3	LCD FRONT COVER MODULE W955SU2	6-39-W9551-011	
4	SCREW M2*3L KI NI ICT NY (DD=0.45,DT=0.4)	6-35-B1120-3RE	
5	LCD 15.6" HD LG LP156WHB-TLBI (LED) 3.8 MM	6-50-L8138-L08	
5	LCD 15.6" HD (EDP) AU B156XTN035 3.2MM LED	6-50-L8132-G03	
5	LCD 15.6" HD (CLARE TYPE) (ECP) LG LP156WHB-TLBI (LED) 3.2 MM	6-50-L8132-L00	
5	LCD 15.6" HD (ECP) INNOLUX INS68GE-EA2 (LED) 3.25 MM	6-50-L8132-V00	
5	LCD 15.6" HD (ECP) (CLARE TYPE) INNOLUX INS68GE-EBI (LED) 3.25 MM	6-50-L8132-V01	
6	UVC CAMERA CORDON FIX (C)0866 20 IN HD SETI 3200 VPHOTO FVAB8 WLED W9-MC	6-88-W940C-5100	OPTION
6	UVC CAMERA BROW FIX (C)0866 20 IN HD SETI 3200 VPHOTO FVAB8 WLED W9-MC	6-88-W940C-4902	OPTION
7	LCD HINGE L W955SU2	6-33-W9551-0L1	
8	LCD BACK COVER MODULE W955SU2	6-39-W9551-021	
9	LCD BACK COVER PROTECTION MYLAR (PET+3MS95) (CHANCE)W6500R	6-40-W6508-012	
10	SCREW M2*2L KI BK/Z ICT NY(0.6,T=0.6)	6-35-B6120-2RE	
11	SCREW M2.5*5L KI BK/Z ICT NY	6-35-B6125-5RA	
12	WIRE CABLE FOR LVDS 20MM 20V 30P 04/AV CONN VIOCR-202-HF) W9500	6-43-W95K1-011-K	
12	WIRE CABLE FOR EDP 20MM 20V 30P 04/AV CONN VIOCR-202-HF) W9500R	6-43-W9551-010-N	
13	WIRE CABLE FOR CCD D-MIC 420MM 3.3V BP (HL) W9500U	6-43-W95KT-011	
14	LCD HINGE R W955SU2	6-33-W9551-0R1	
15	ANTENNA PEBA MAIN CONDU VET W955LU FOR 246/50HZ W955LU W955LU W955LU	6-23-7W95L-011	OPTION
16	ANTENNA PEBA 364LE W955LU FOR 246/50HZ W955LU W955LU W955LU	6-23-7W950-020	需要出3G/LTE 模组 必需此3G/LTE-1天线
17	TOP CASE MYLAR FR83 25*7*0.05 P180H	6-40-P1802-030	

DVD DUAL (W950LU)



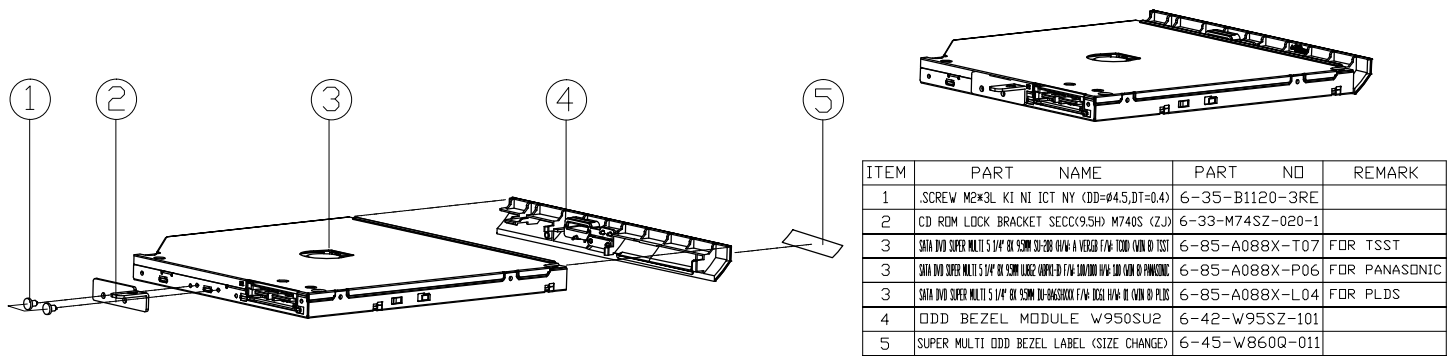


Figure A - 9
DVD DUAL
(W950LU)



DVD DUAL (W955LU)

Figure A - 10
DVD DUAL
(W955LU)

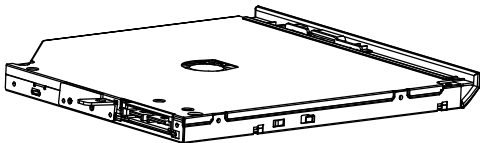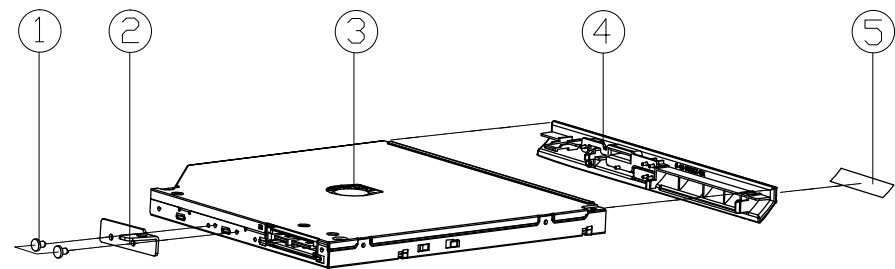

ITEM	PART NAME	PART NO	REMARK
1	SCREW M2*3L KI NI ICT NY (DD=4.0,DT=0.8)	6-35-B1120-3RD	
2	CD ROM LOCK BRACKET SECC(9.5H) M740S (Z.D)	6-33-M74SZ-020-1	
3	SATA DVD SUPER MULTI 5.25" DR 9500 BU 6400000 F/W 10GB RW+IN RW+O PLDS	6-85-A088X-L04	FOR PLDS
3	SATA DVD SUPER MULTI 5.25" DR 9500 BU 6400000 F/W 10GB RW+IN RW+O PANASONIC	6-85-A088X-P06	FOR PANASONIC
3	SATA DVD SUPER MULTI 5.25" DR 9500 BU 6400000 F/W 10GB RW+IN RW+O TSST	6-85-A088X-T07	FOR TSST
4	ODD BEZEL MODULE W955SU2	6-42-W955Z-102	
5	SUPER MULTI ODD BEZEL LABEL (SIZE CHANGE)	6-45-W860Q-011	

Dummy ODD

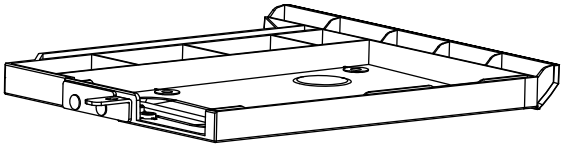
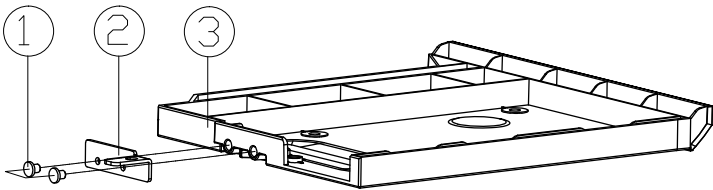


ITEM	PART NAME	PART NO	REMARK
1	.SCREW M2*3L KI NI ICT NY (DD=Ø4.5,DT=0.4)	6-35-B1120-3RE	
2	CD RDM LOCK BRACKET SECC(9.5H) M740S (ZJ)	6-33-M74SZ-020-1	
3	DUMMY ODD PC+ABS GINAR D231(+) W950SU2	6-42-W95SZ-041	

Figure A - 11
Dummy ODD

HDD

Figure A - 12
HDD

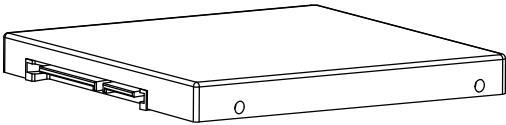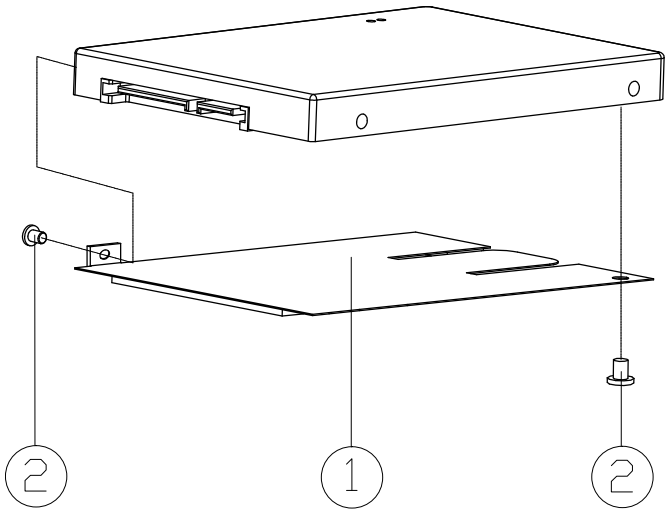

ITEM	PART NAME	PART NO	REMARK
1	HDD MYLAR <PET0.25T+CR2030> W940TU	6-40-W940J-010	
2	SCREW M3*2.5L KI NI ICT NY	6-35-B1130-2R5	

HDD Caddy

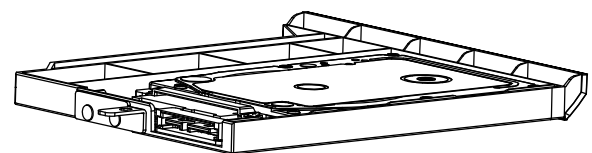
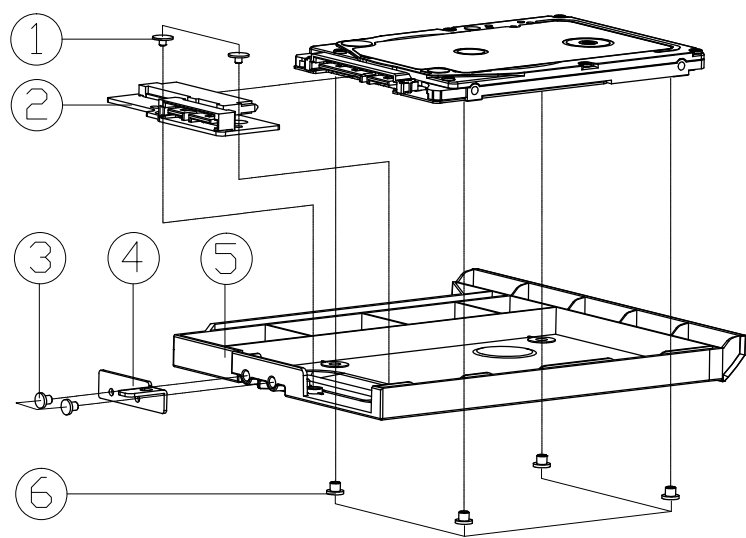


Figure A - 13
HDD Caddy

ITEM	PART NAME	PART NO	REMARK
1	SCREW M2*2L KI BK/Z ICT NY (Ø6,T=0.5)	6-35-B6120-2RC	
2	ODD TO HDD BOARD V3.0 W950SU2 (W/ REPEATER)	6-77-W95KN-D13-A	
3	SCREW M2*3L KI NI ICT NY (DD=Ø4.5,DT=0.4)	6-35-B1120-3RE	
4	CD ROM LOCK BRACKET SECC(9.5H) M740S (ZJ)	6-33-M74SZ-020-1	
5	DUMMY ODD PC+ABS GINAR D231(+*) W950SU2	6-42-W95SZ-041	
6	SCREW M3*2.5L KI NI ICT NY	6-35-B1130-2R5	

Appendix B: Schematic Diagrams

This appendix has circuit diagrams of the **W950LU / W955LU** notebook's PCB's. The following table indicates where to find the appropriate schematic diagram.

Diagram - Page	Diagram - Page	Diagram - Page
<i>System Block Diagram - Page B - 2</i>	<i>CRT - Page B - 15</i>	<i>VDD3, VDD5 - Page B - 28</i>
<i>Processor 1/9 - Page B - 3</i>	<i>Panel - Page B - 16</i>	<i>VDD 1.8/1.15VA - Page B - 29</i>
<i>Processor 2/9 - Page B - 4</i>	<i>HDMI - Page B - 17</i>	<i>VTT_MEM / 1.35V - Page B - 30</i>
<i>Processor 3/9 - Page B - 5</i>	<i>Audio Codec - Page B - 18</i>	<i>1.5VS/1.24VA - Page B - 31</i>
<i>Processor 4/8 - Page B - 6</i>	<i>USB Hub - Page B - 19</i>	<i>VGG - Page B - 32</i>
<i>Processor 5/8 - Page B - 7</i>	<i>LAN / Card Reader - Page B - 20</i>	<i>VCore - Page B - 33</i>
<i>Processor 6/8 - Page B - 8</i>	<i>TPM, G Sensor - Page B - 21</i>	<i>AC-In, Charger - Page B - 34</i>
<i>Processor 7/8 - Page B - 9</i>	<i>Conn, Fan, Click, CCD - Page B - 22</i>	<i>Level Shifter 1 - Page B - 35</i>
<i>Processor 8/9 - Page B - 10</i>	<i>HDD, ODD, LED, LID - Page B - 23</i>	<i>Level Shifter 2 - Page B - 36</i>
<i>Processor 9/9 - Page B - 11</i>	<i>NGFF - Page B - 24</i>	<i>Audio Board - Page B - 37</i>
<i>DDR3 SO-DIMM_A - Page B - 12</i>	<i>USB, Touch Panel, TV - Page B - 25</i>	<i>Power SW Board - Page B - 38</i>
<i>DDR3 SO-DIMM_B - Page B - 13</i>	<i>KBC ITE IT8987E - Page B - 26</i>	<i>Power Diagram - Page B - 39</i>
<i>PS8625 - Page B - 14</i>	<i>5V, 3.3V, 1.8VA - Page B - 27</i>	<i>Power Sequence - Page B - 40</i>

Table B - 1
**SCHEMATIC
DIAGRAMS**




Version Note


The schematic diagrams in this chapter are based upon version 6-7P-W94L3-002. If your mainboard (or other boards) are a later version, please check with the Service Center for updated diagrams (if required).

System Block Diagram

Sheet 1 of 39
System Block
Diagram

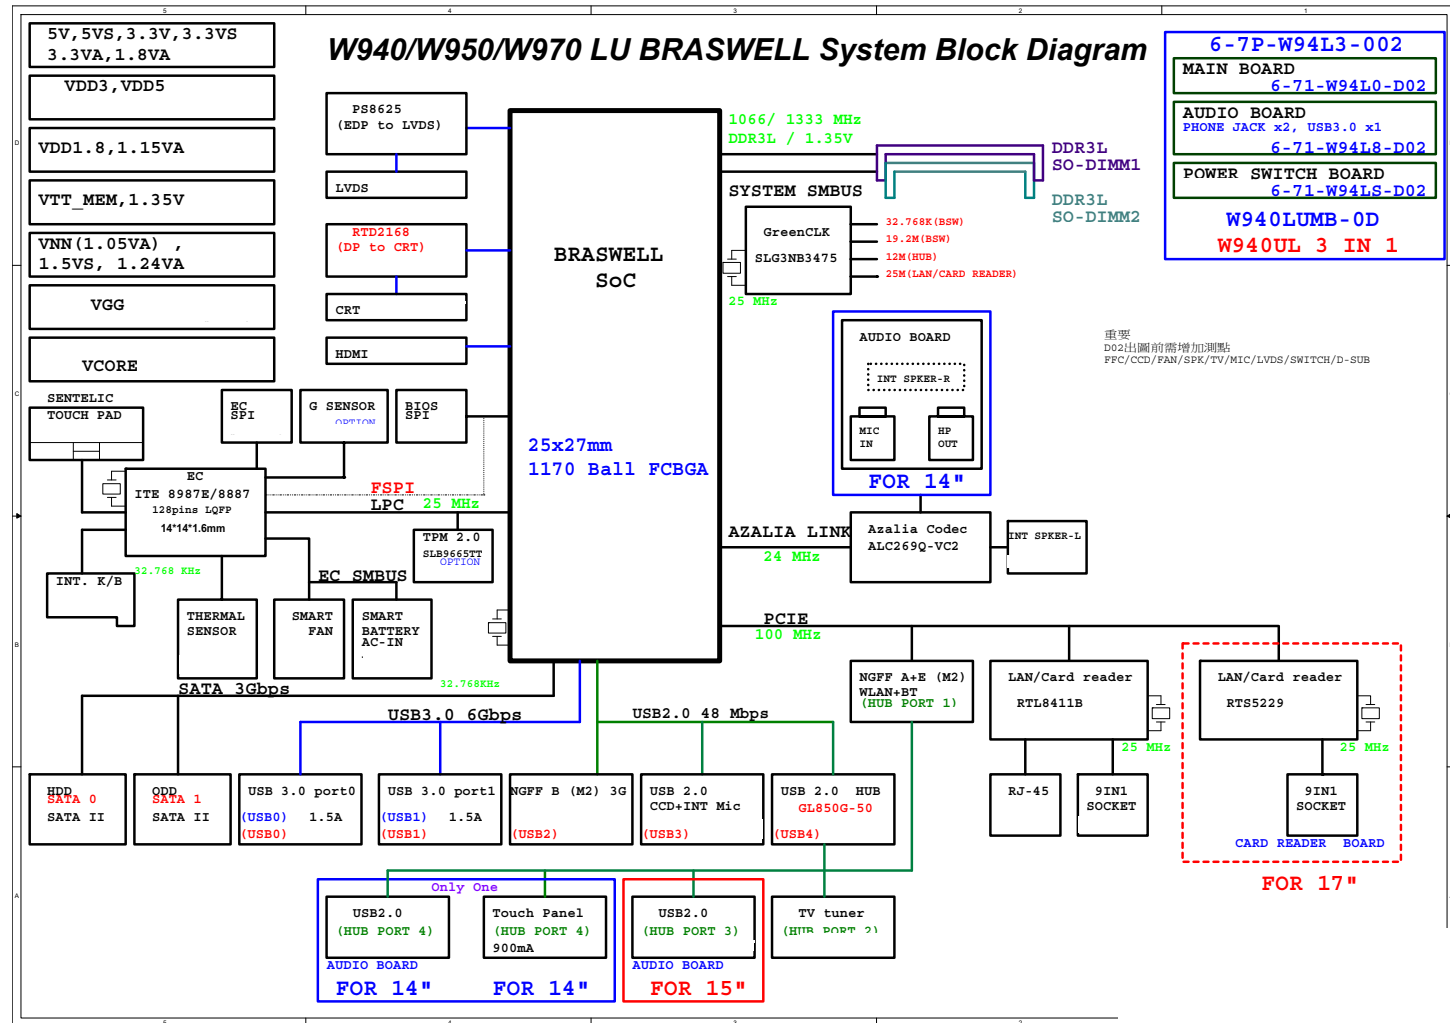


Processor 1/9 B - 3

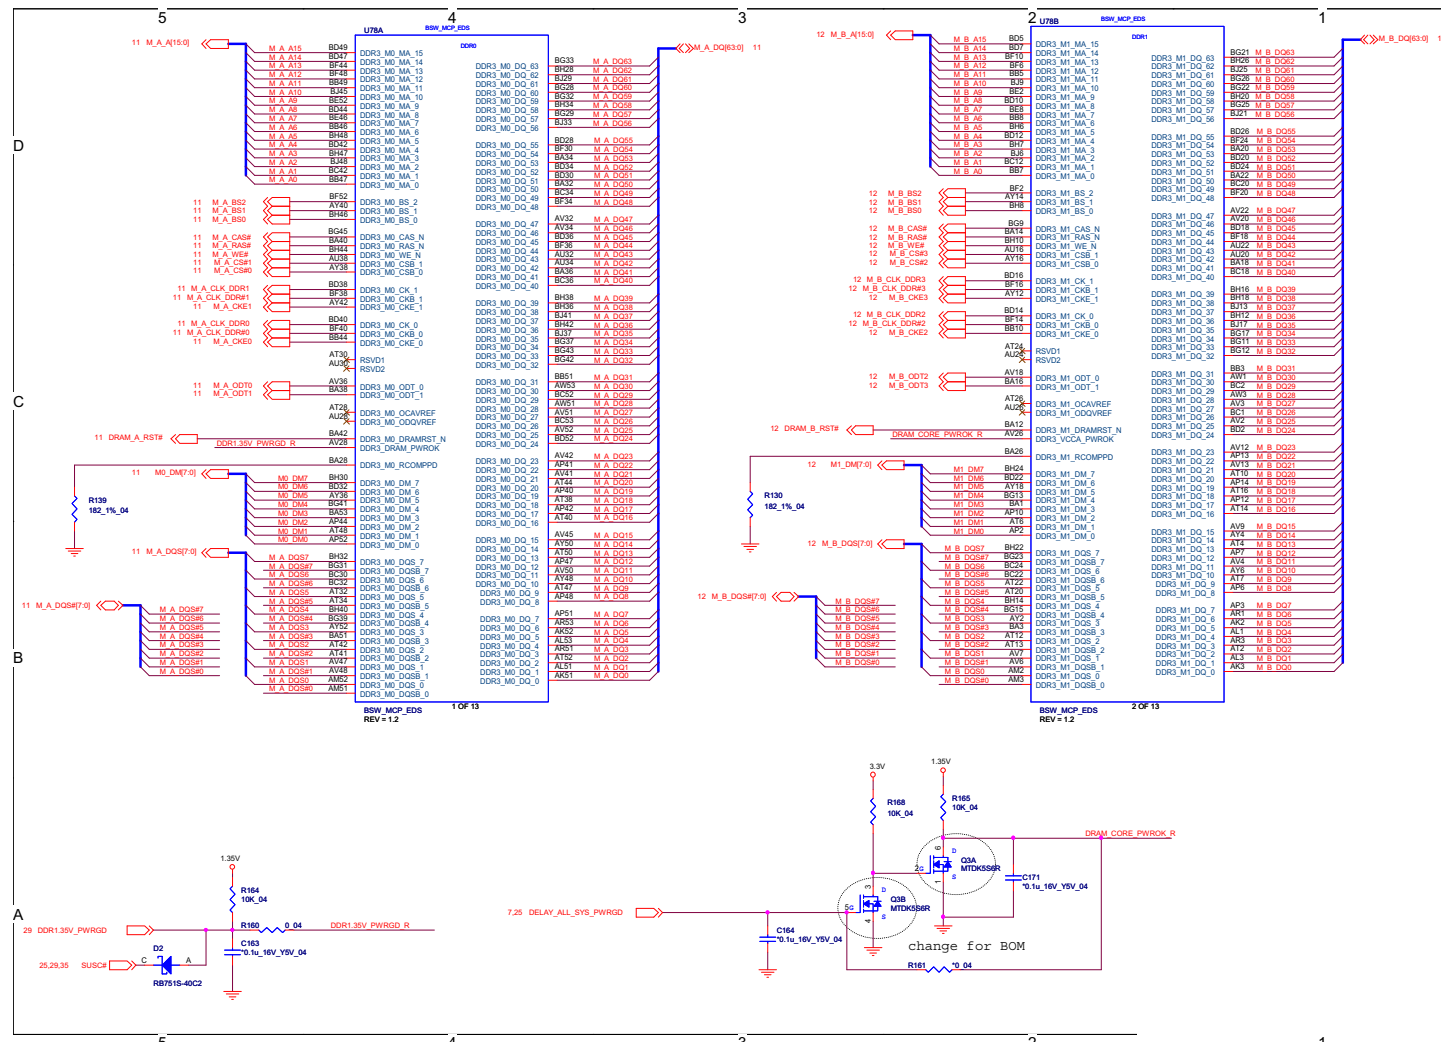


Processor 4/8

B. Schematic Diagrams

Sheet 5 of 39
Processor 4/8

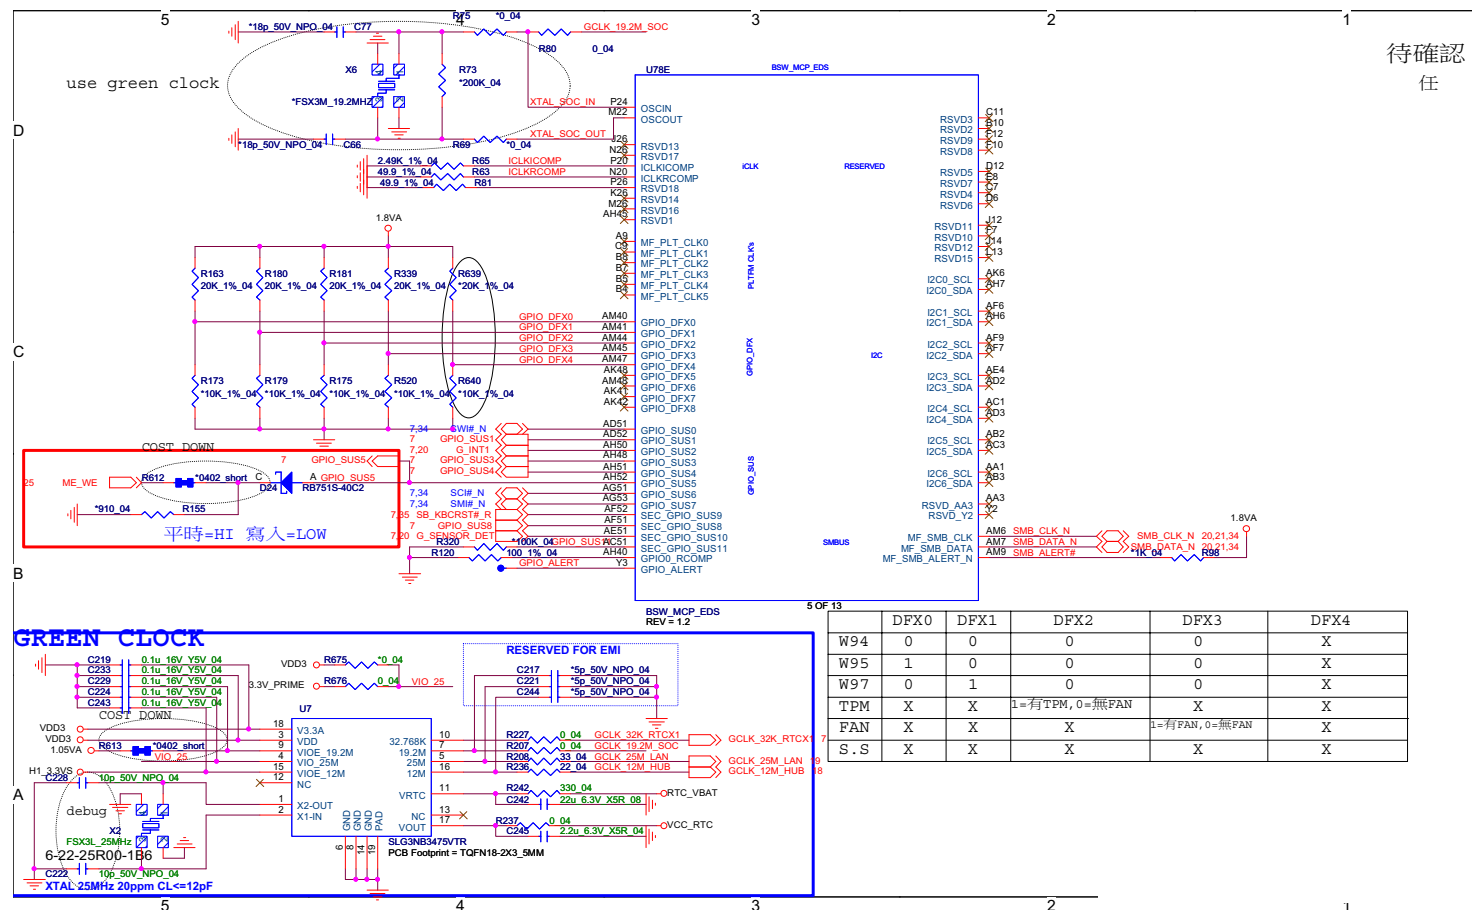


Processor 5/8

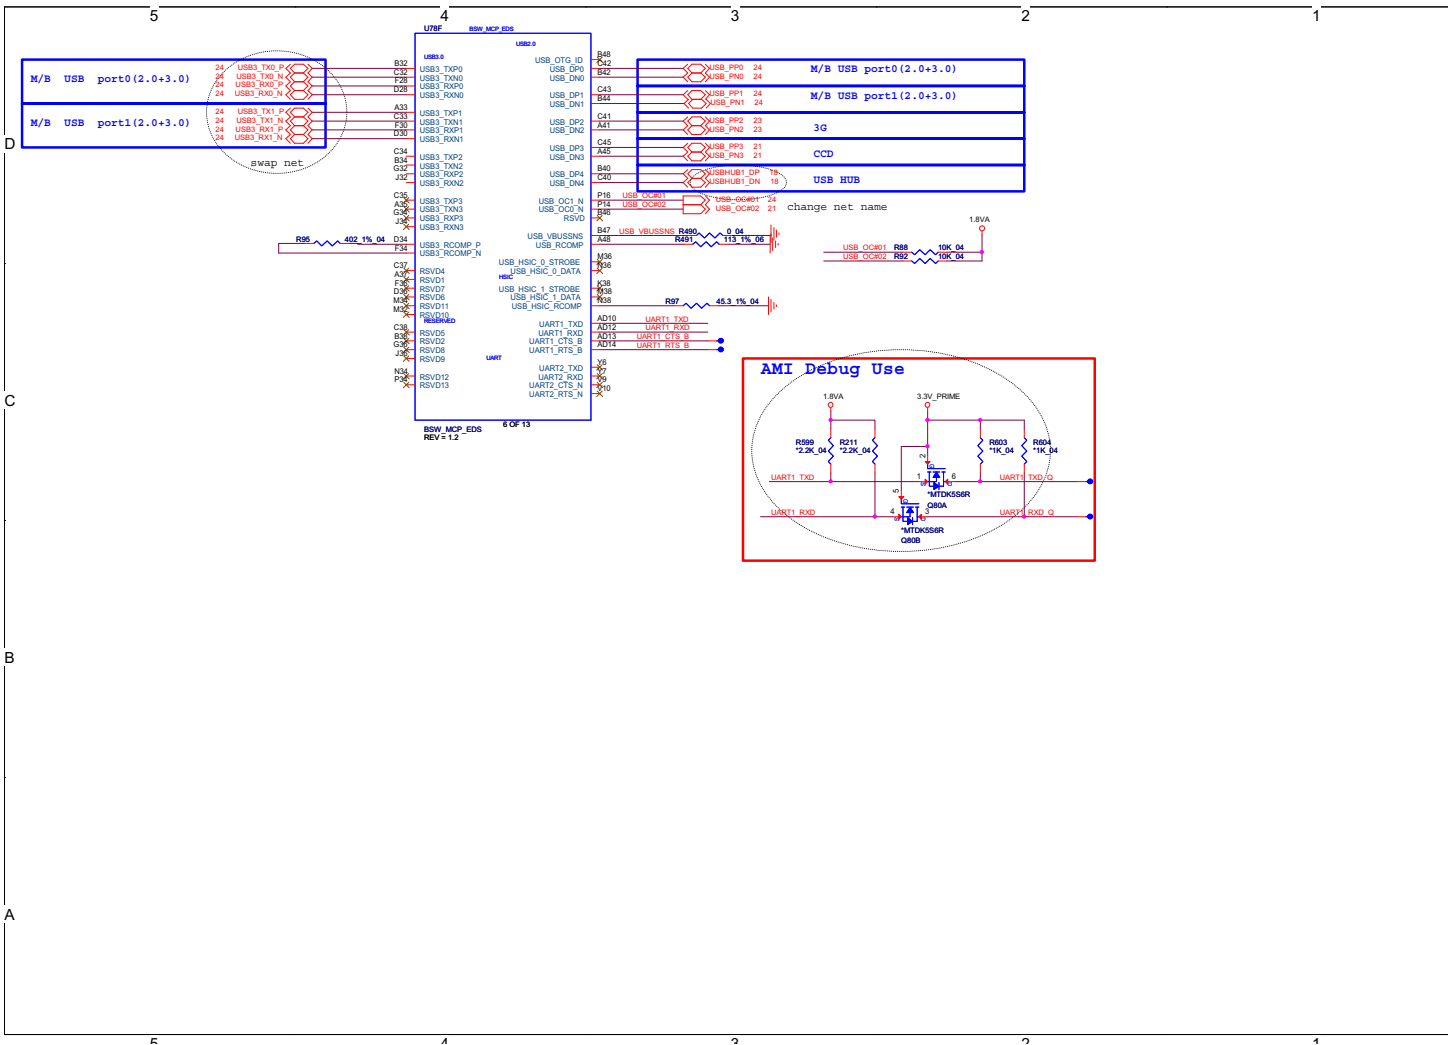Sheet 6 of 39
Processor 5/8


Schematic Diagrams

Processor 6/8

Sheet 7 of 39
Processor 6/8

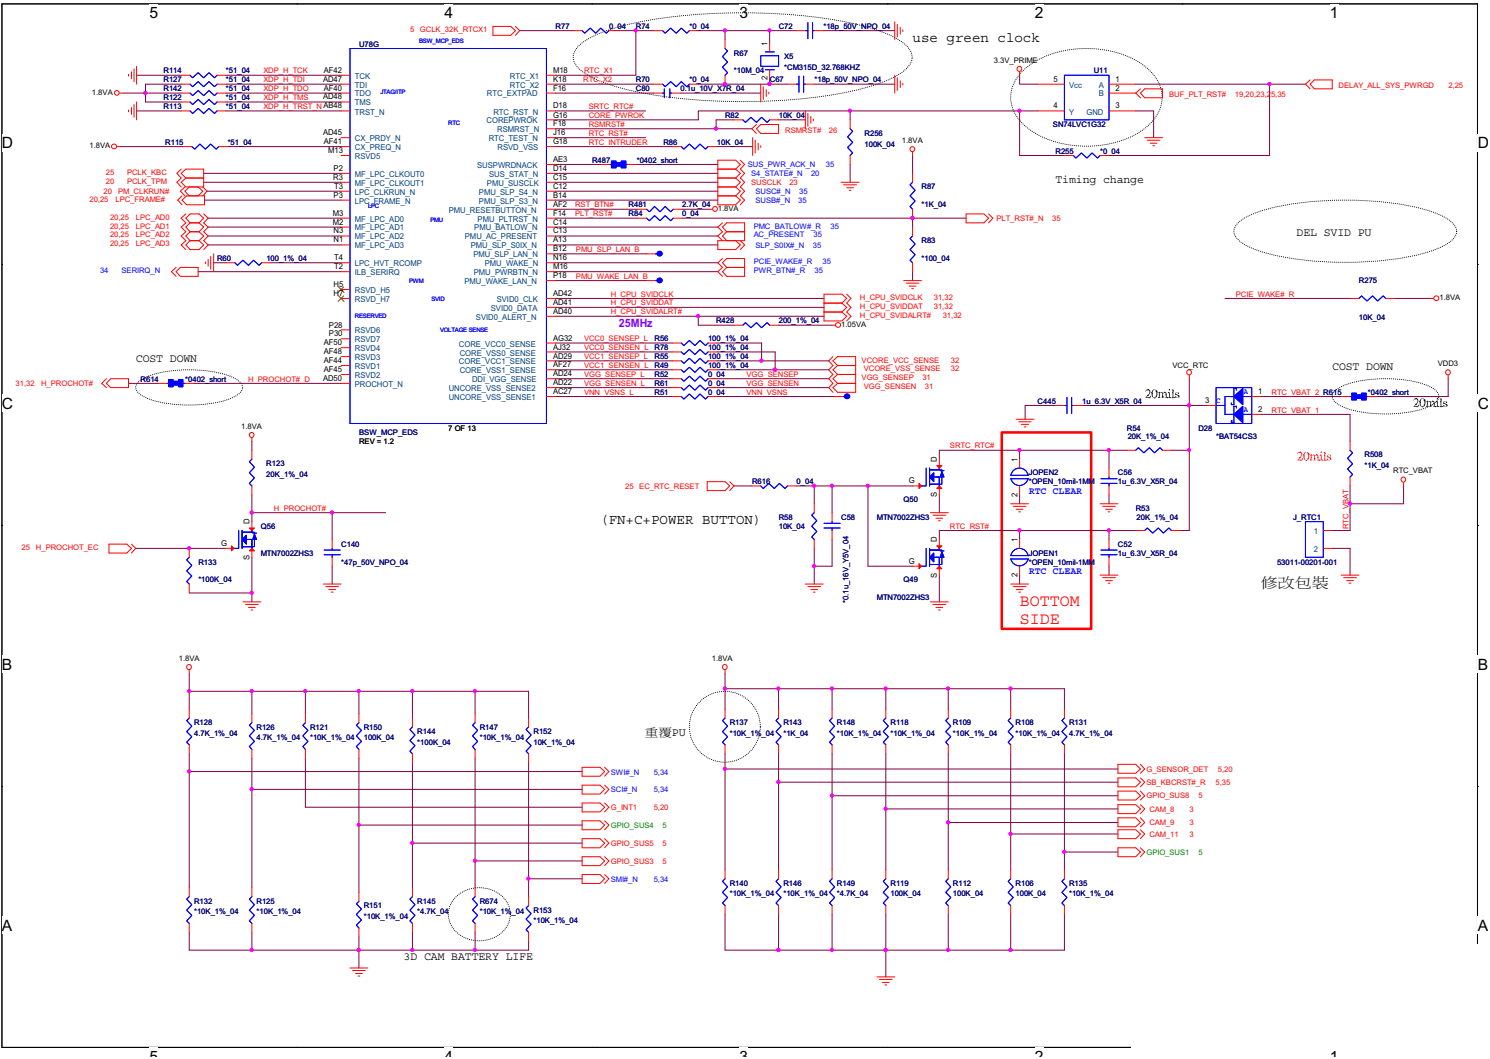

Processor 7/8

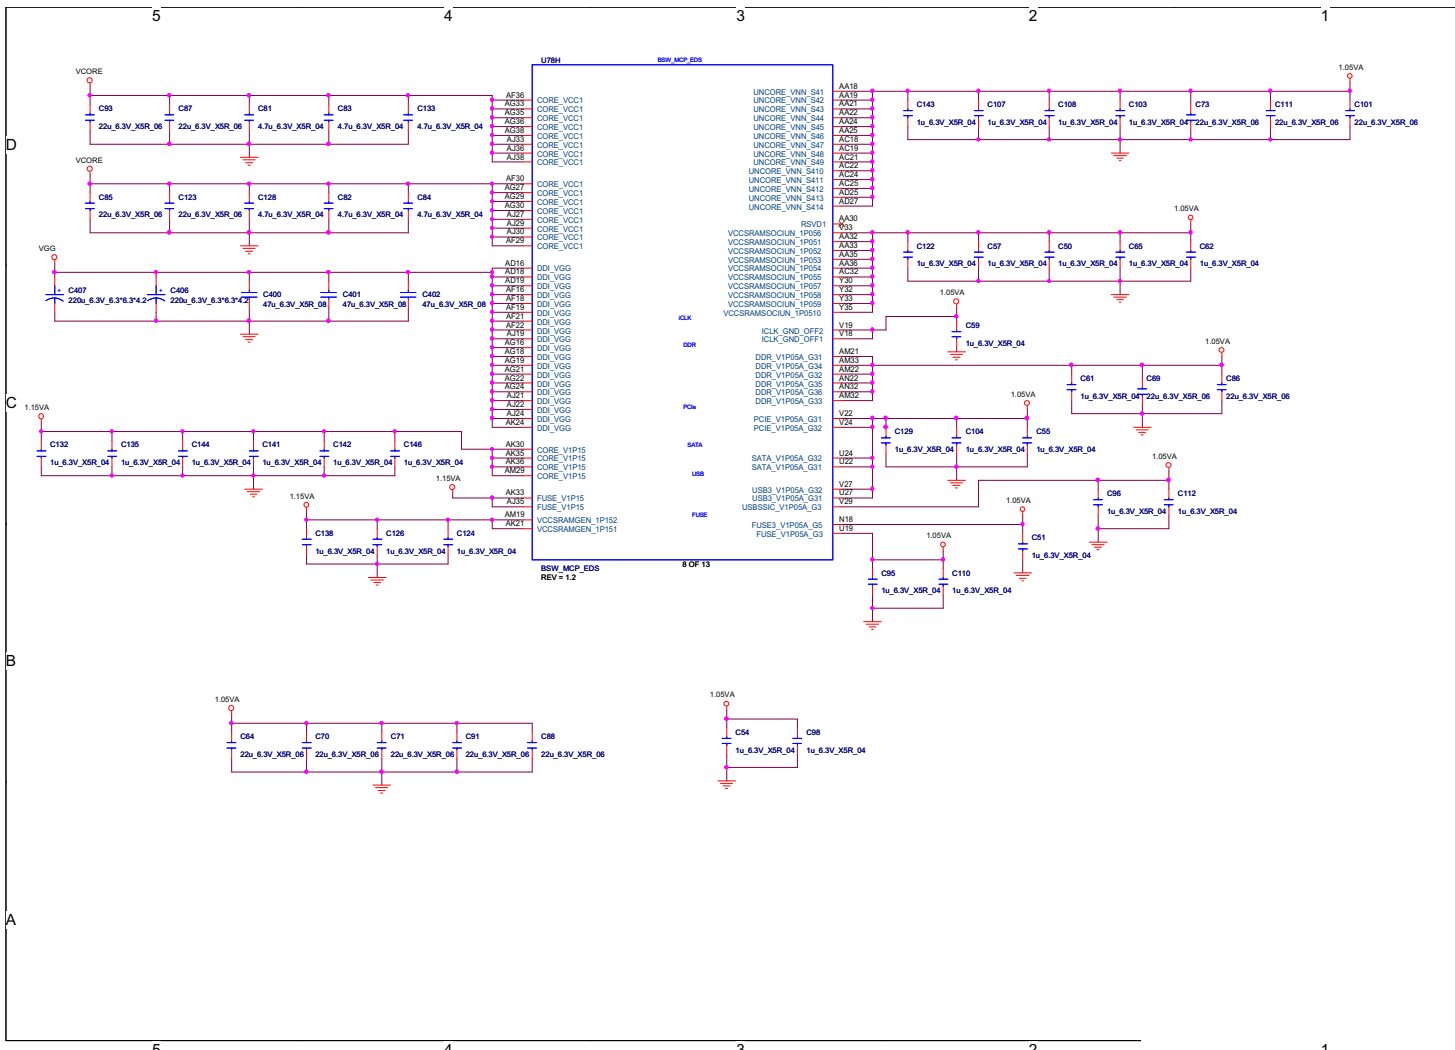


Sheet 8 of 39
Processor 7/8


Processor 8/9

B. Schematic Diagrams

Sheet 9 of 39
Processor 8/9

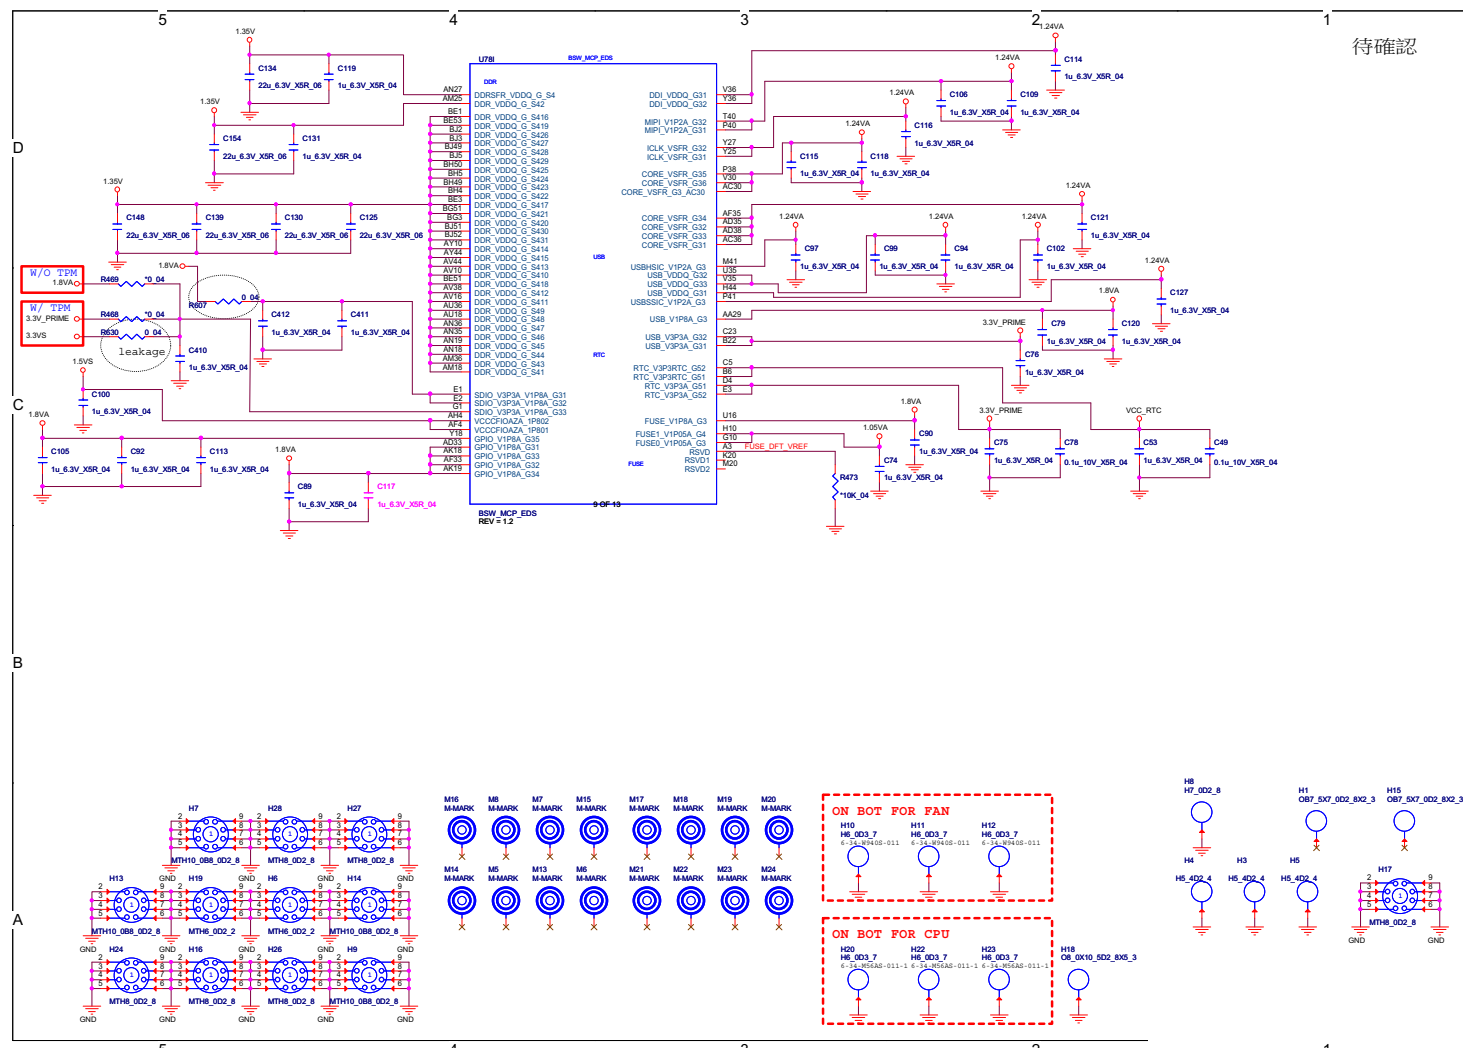

Processor 9/9

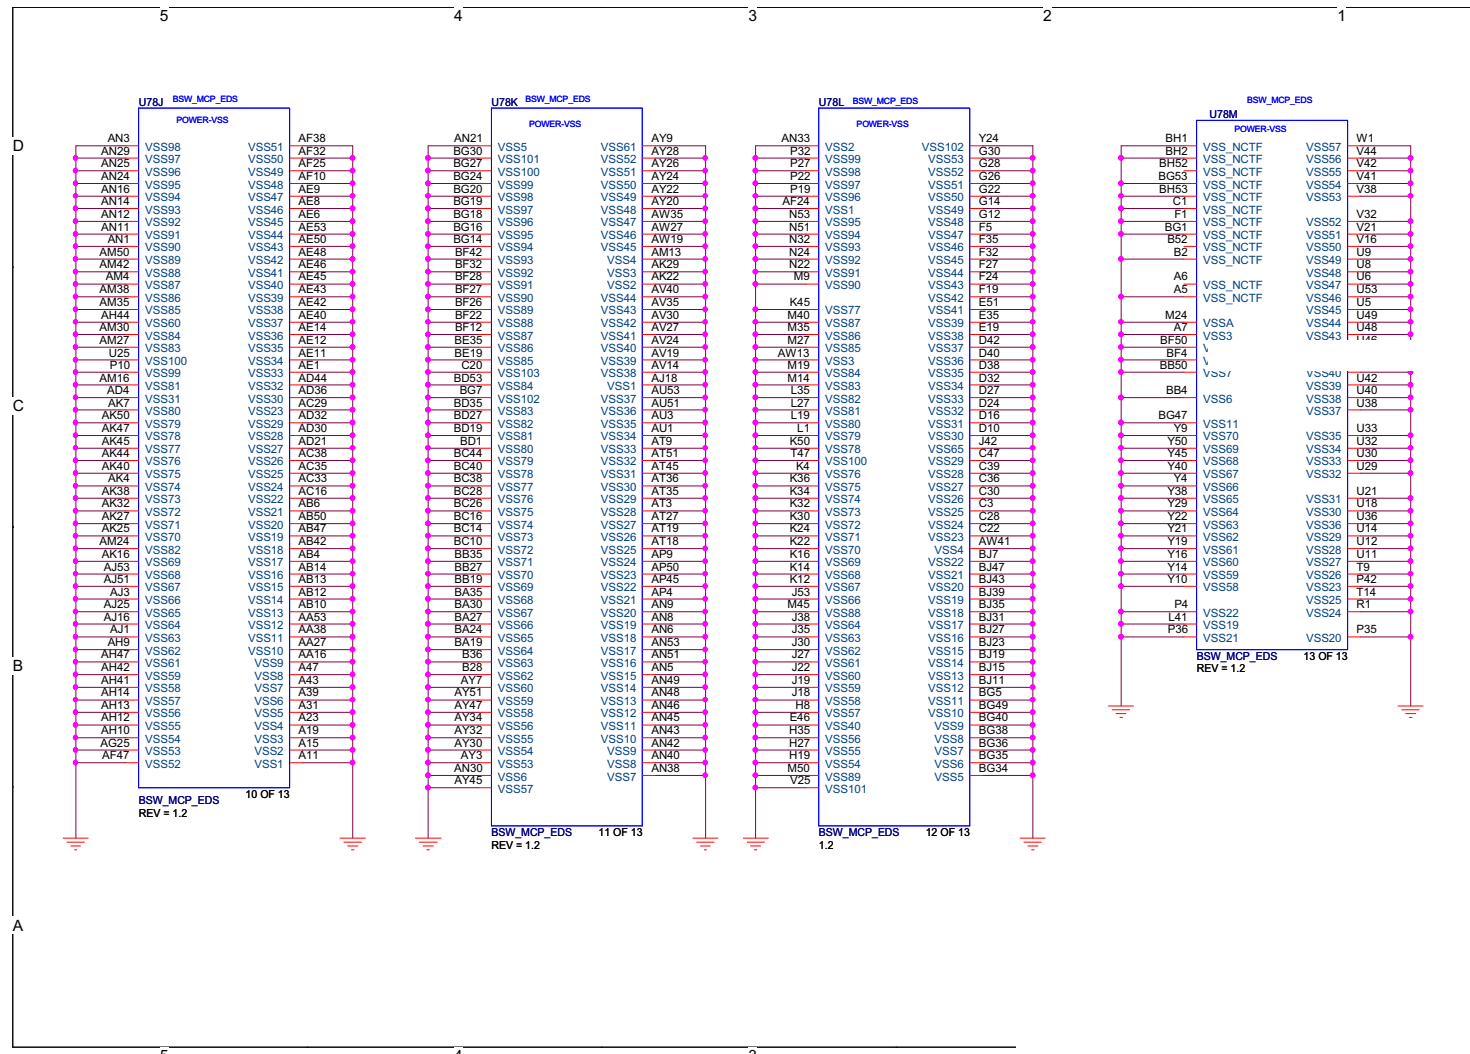Sheet 10 of 39
Processor 9/9

B.Schematic Diagrams


DDR3 SO-DIMM_A

The image shows a detailed PCB layout for the STM32F407VGT6. The layout includes a microcontroller (STM32F407VGT6) and various peripheral components. The components are labeled with their part numbers and values, and the layout is color-coded to match the components in the photograph. The layout includes a detailed pinout for the STM32F407VGT6, showing connections for power, ground, and various signals. The components are labeled with their part numbers and values, and the layout is color-coded to match the components in the photograph.

B.Schematic Diagrams

Sheet 11 of 39
DDR3 SO-DIMM A


DDR3 SO-DIMM_B

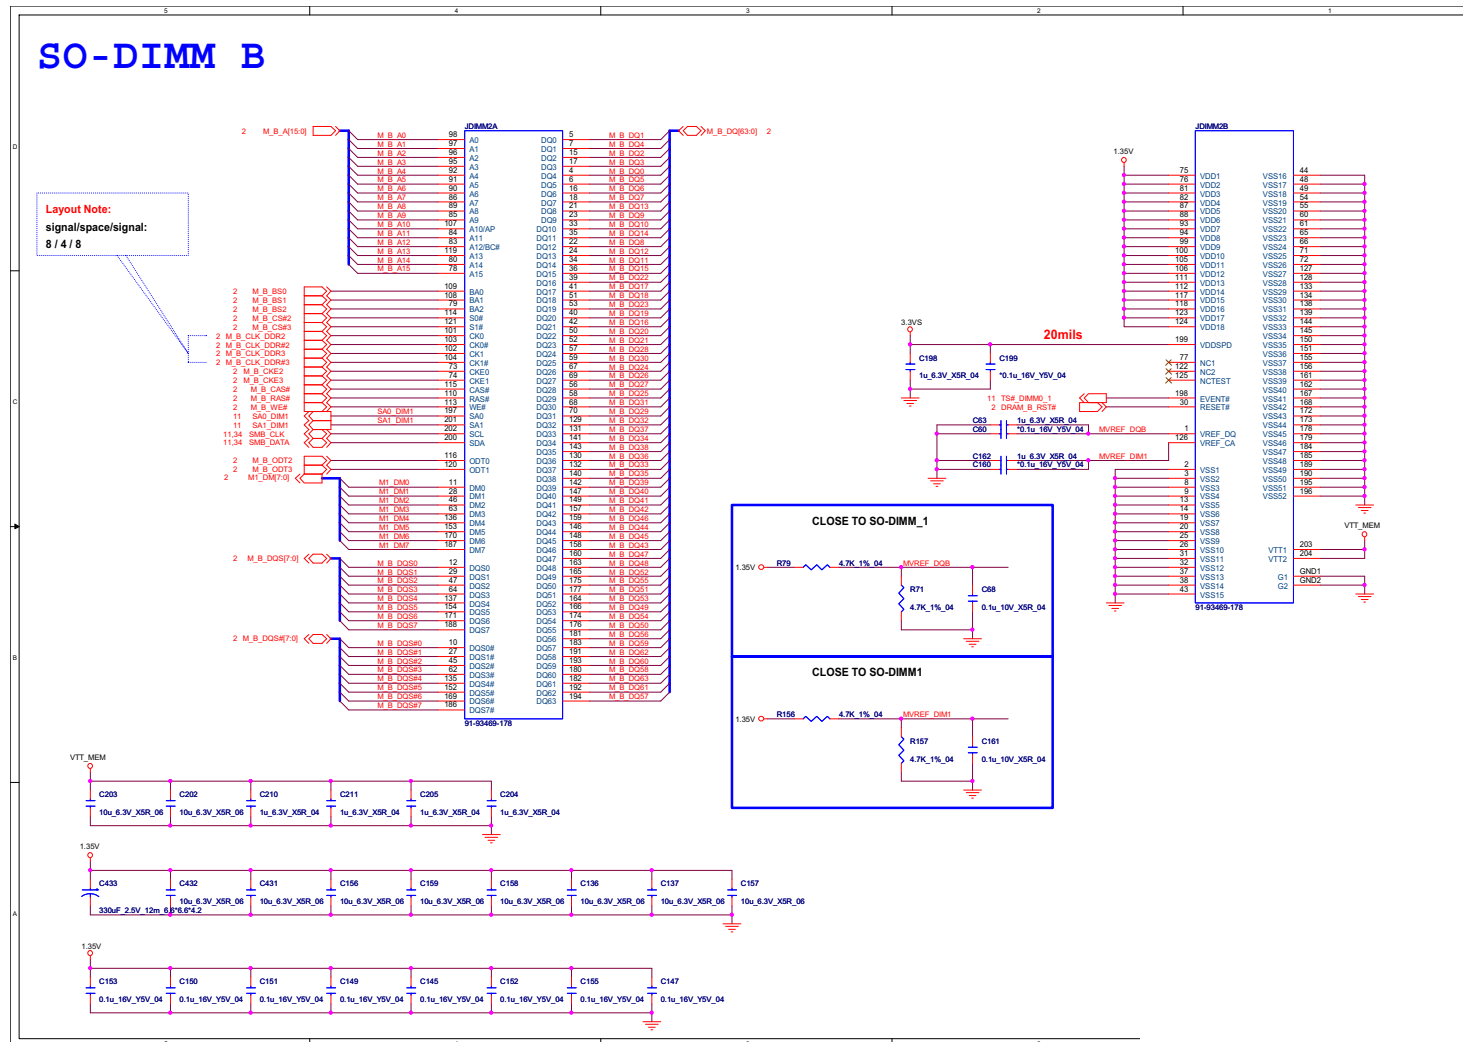


Sheet 12 of 39
DDR3 SO-DIMM_B

PS8625

Sheet 13 of 39
PS8625

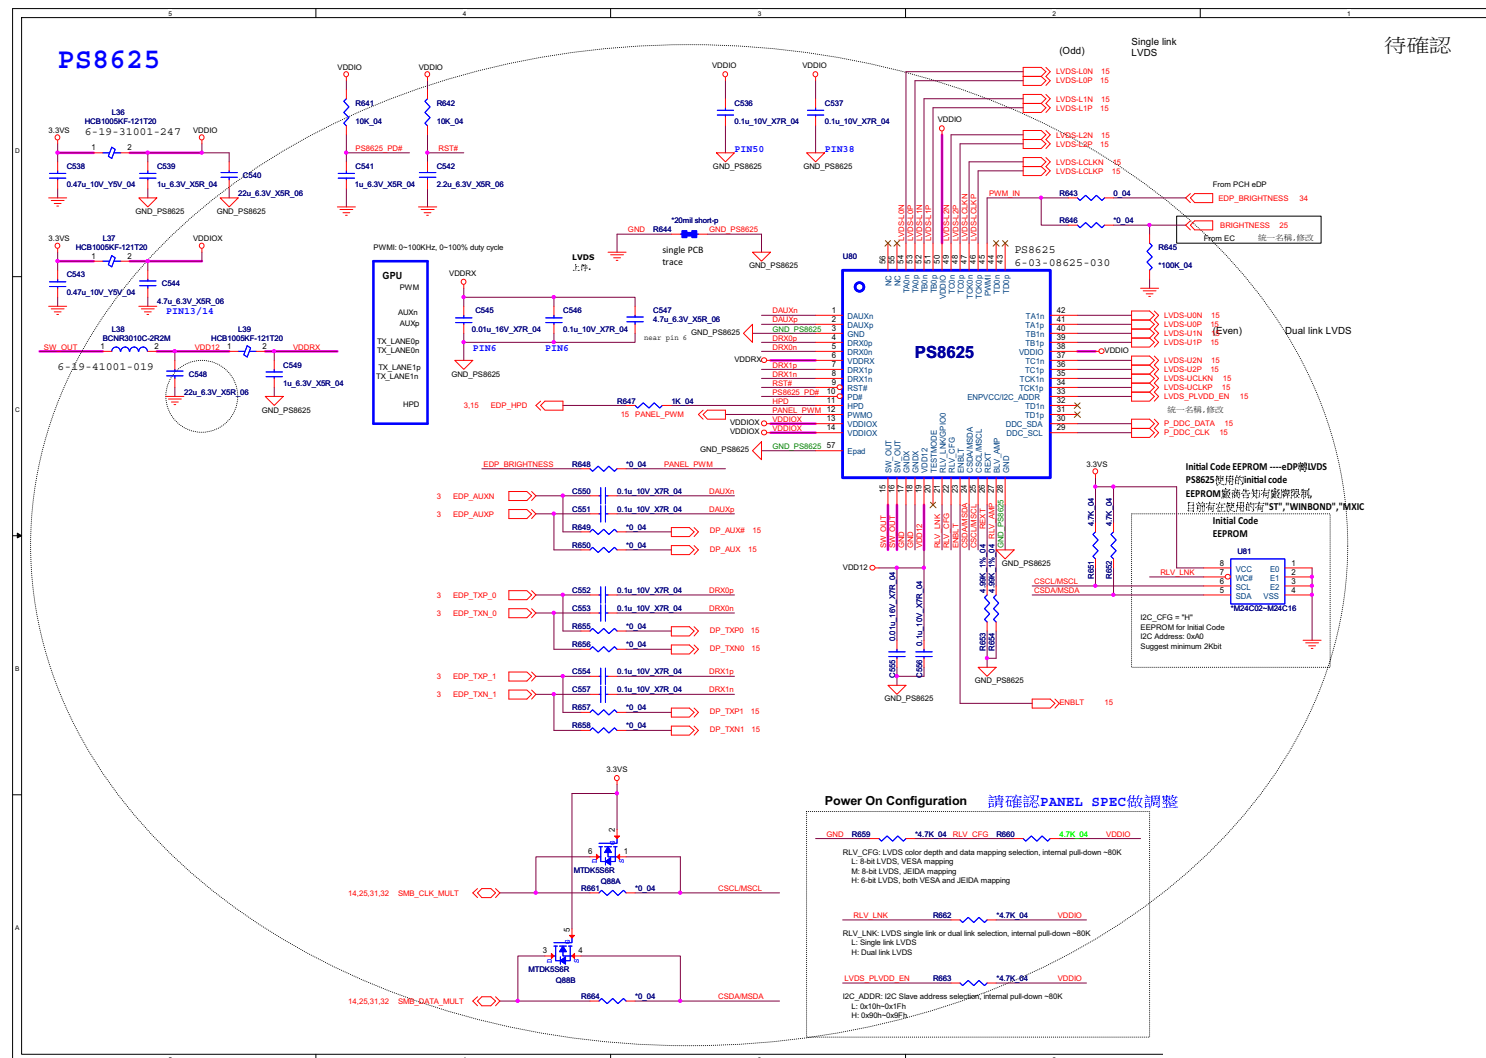

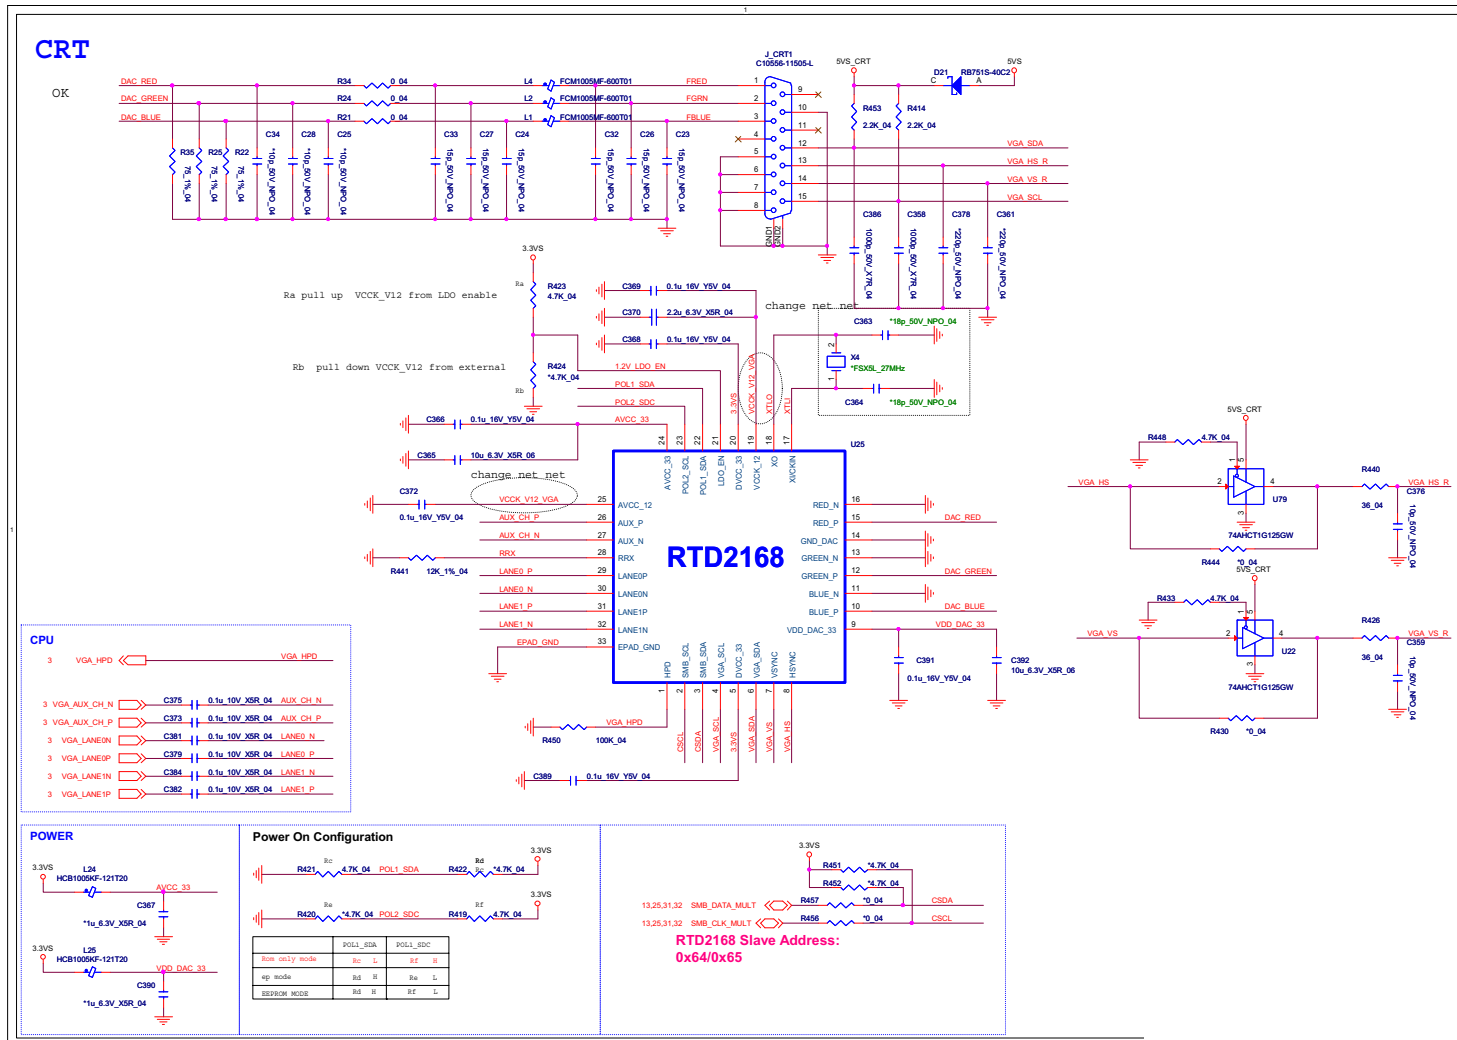


Sheet 14 of 39
CRT


B.Schematic Diagrams

Panel

Sheet 15 of 39
Panel

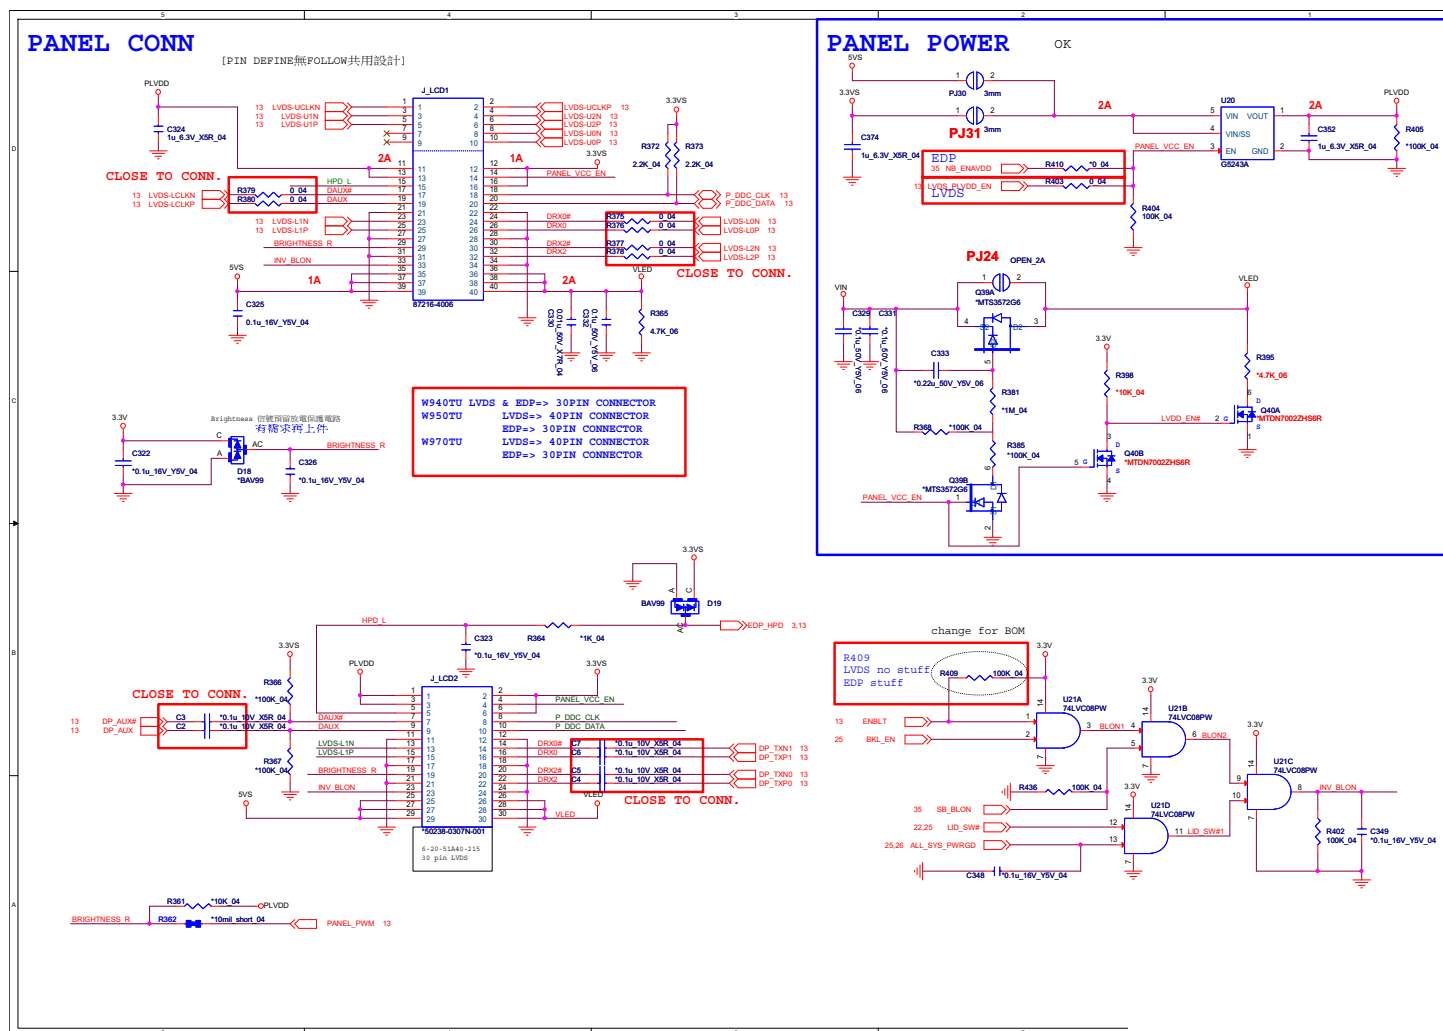


HDMI

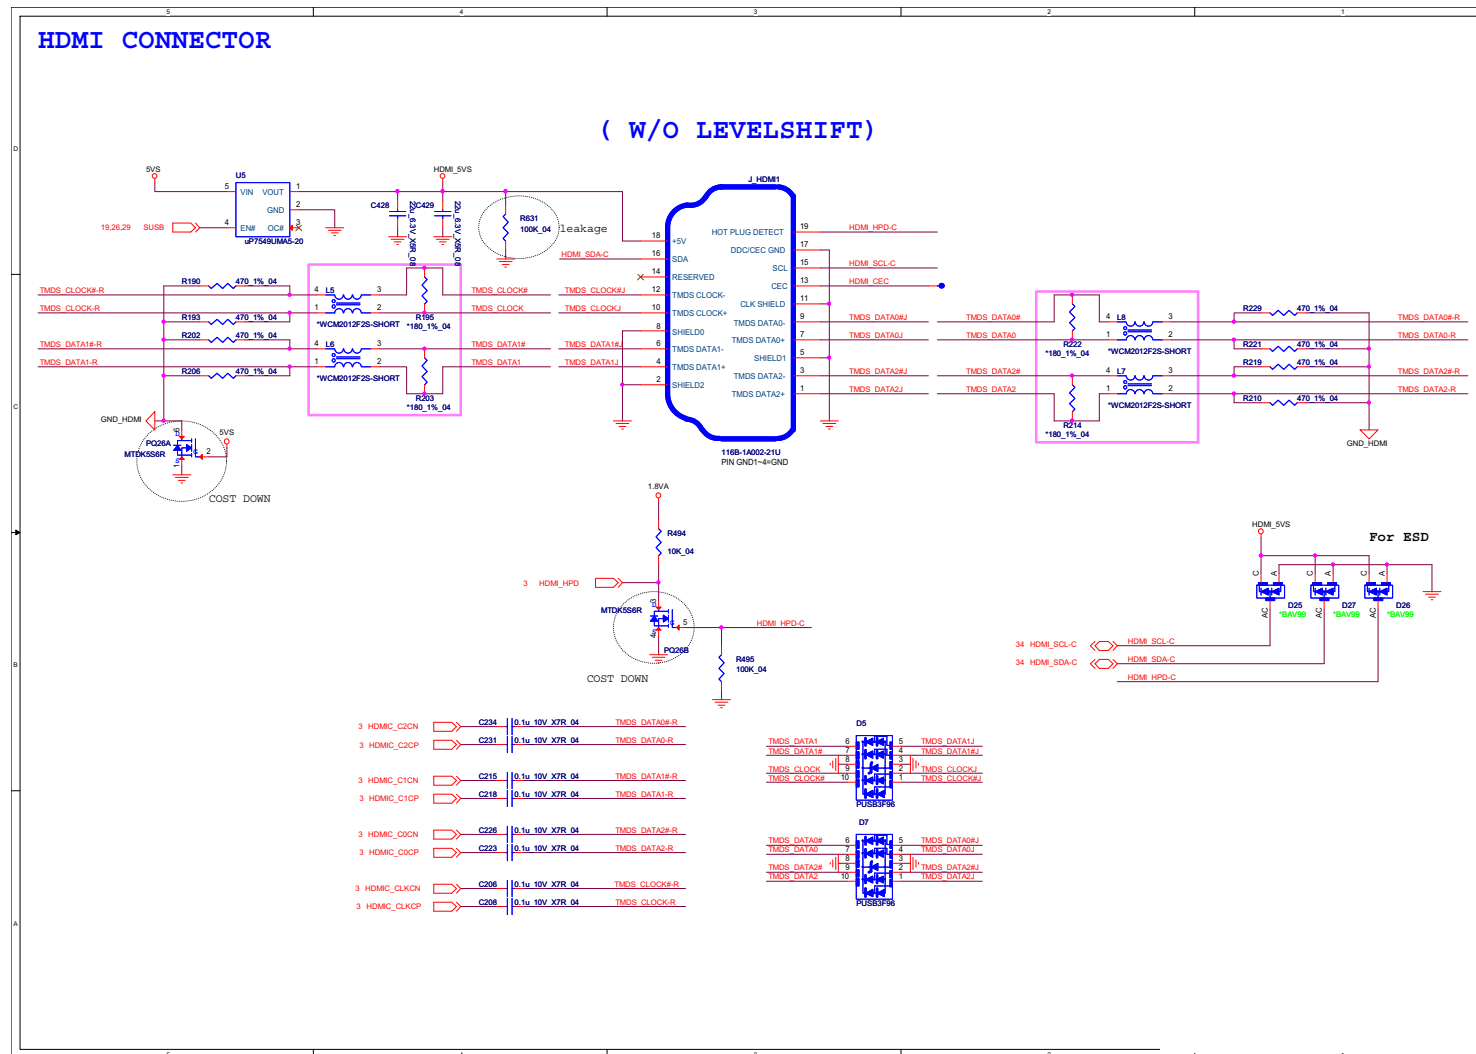

Sheet 16 of 39
HDMI


Audio Codec

Sheet 17 of 39
Audio Codec

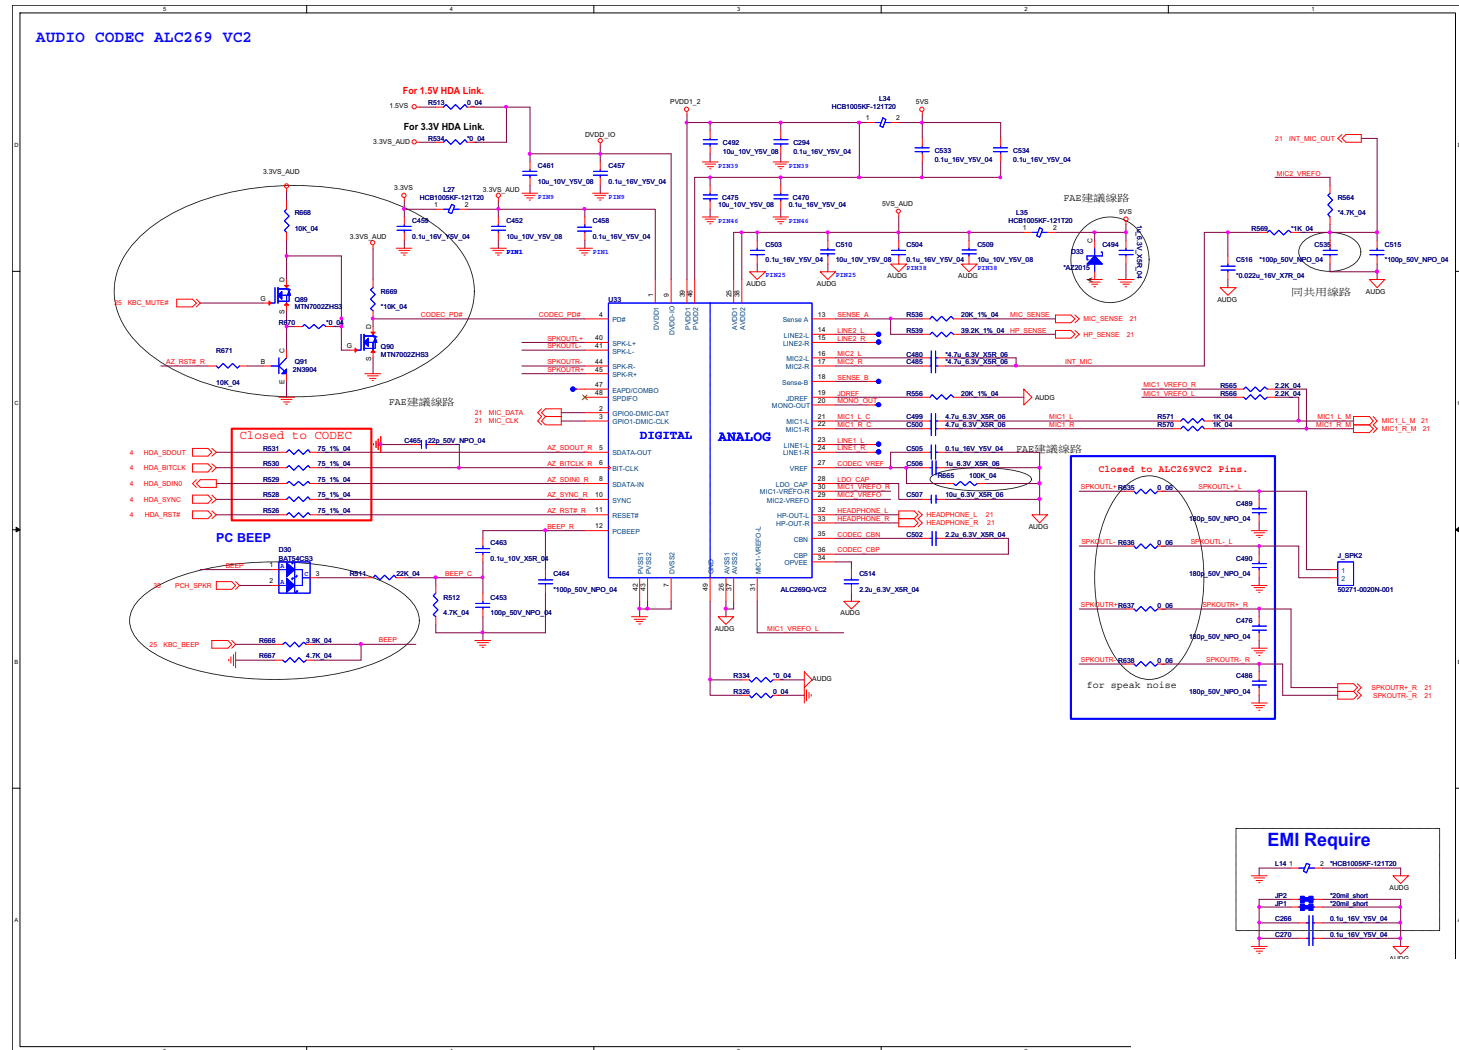


USB Hub

Sheet 18 of 39
USB Hub

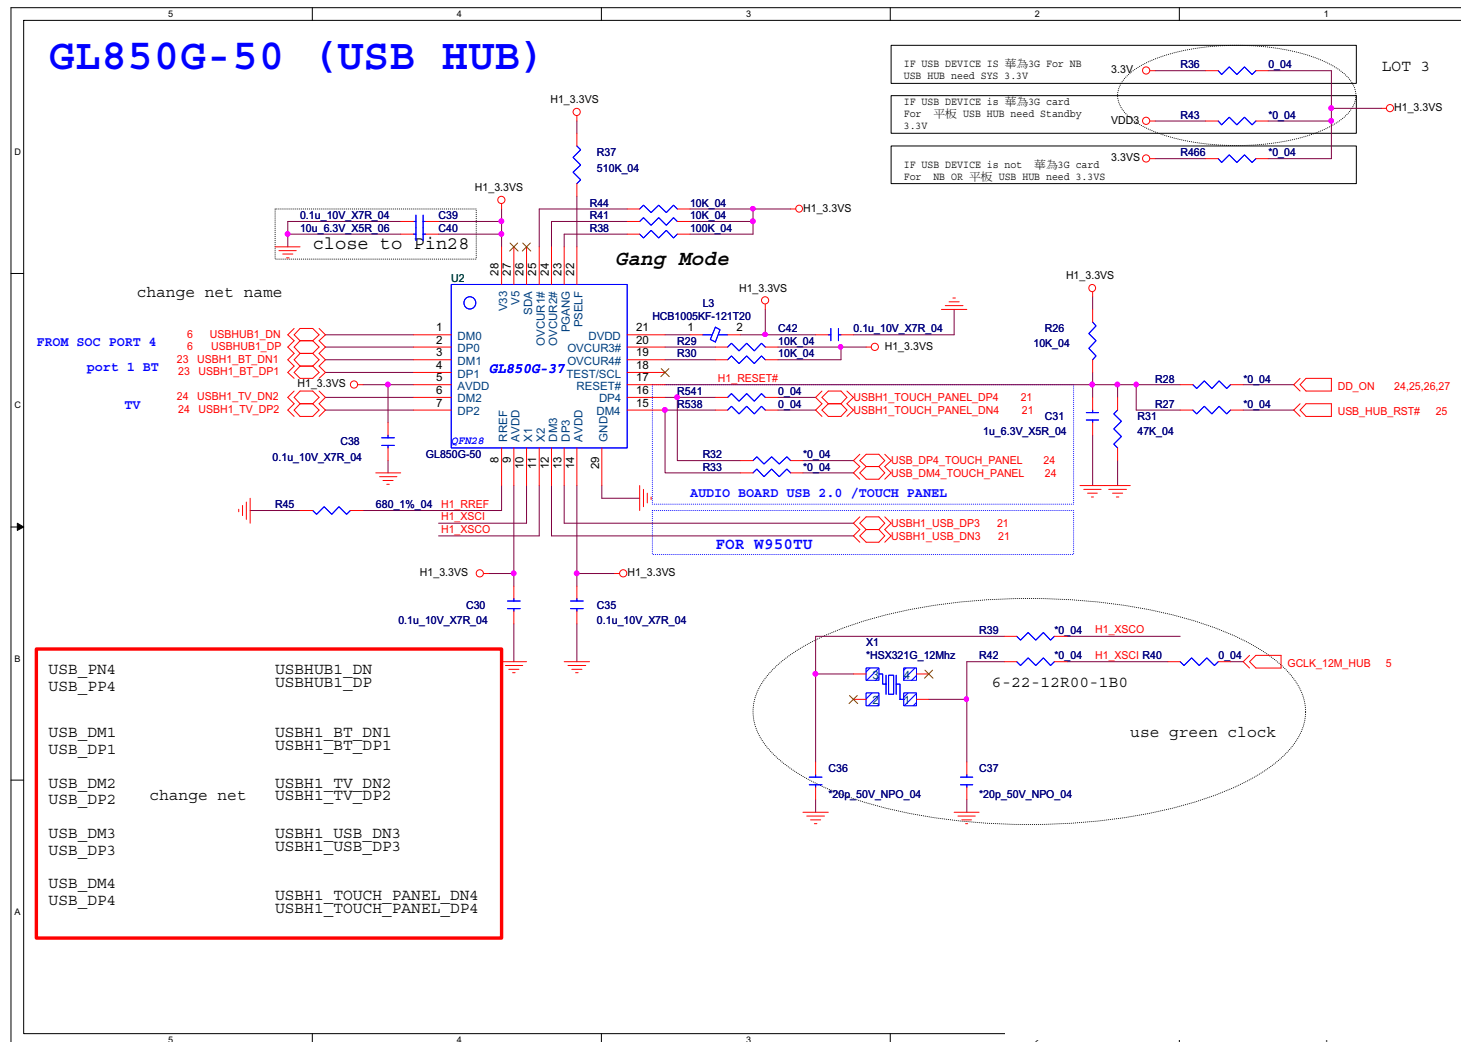

LAN / Card Reader


Sheet 19 of 39
LAN / Card Reader

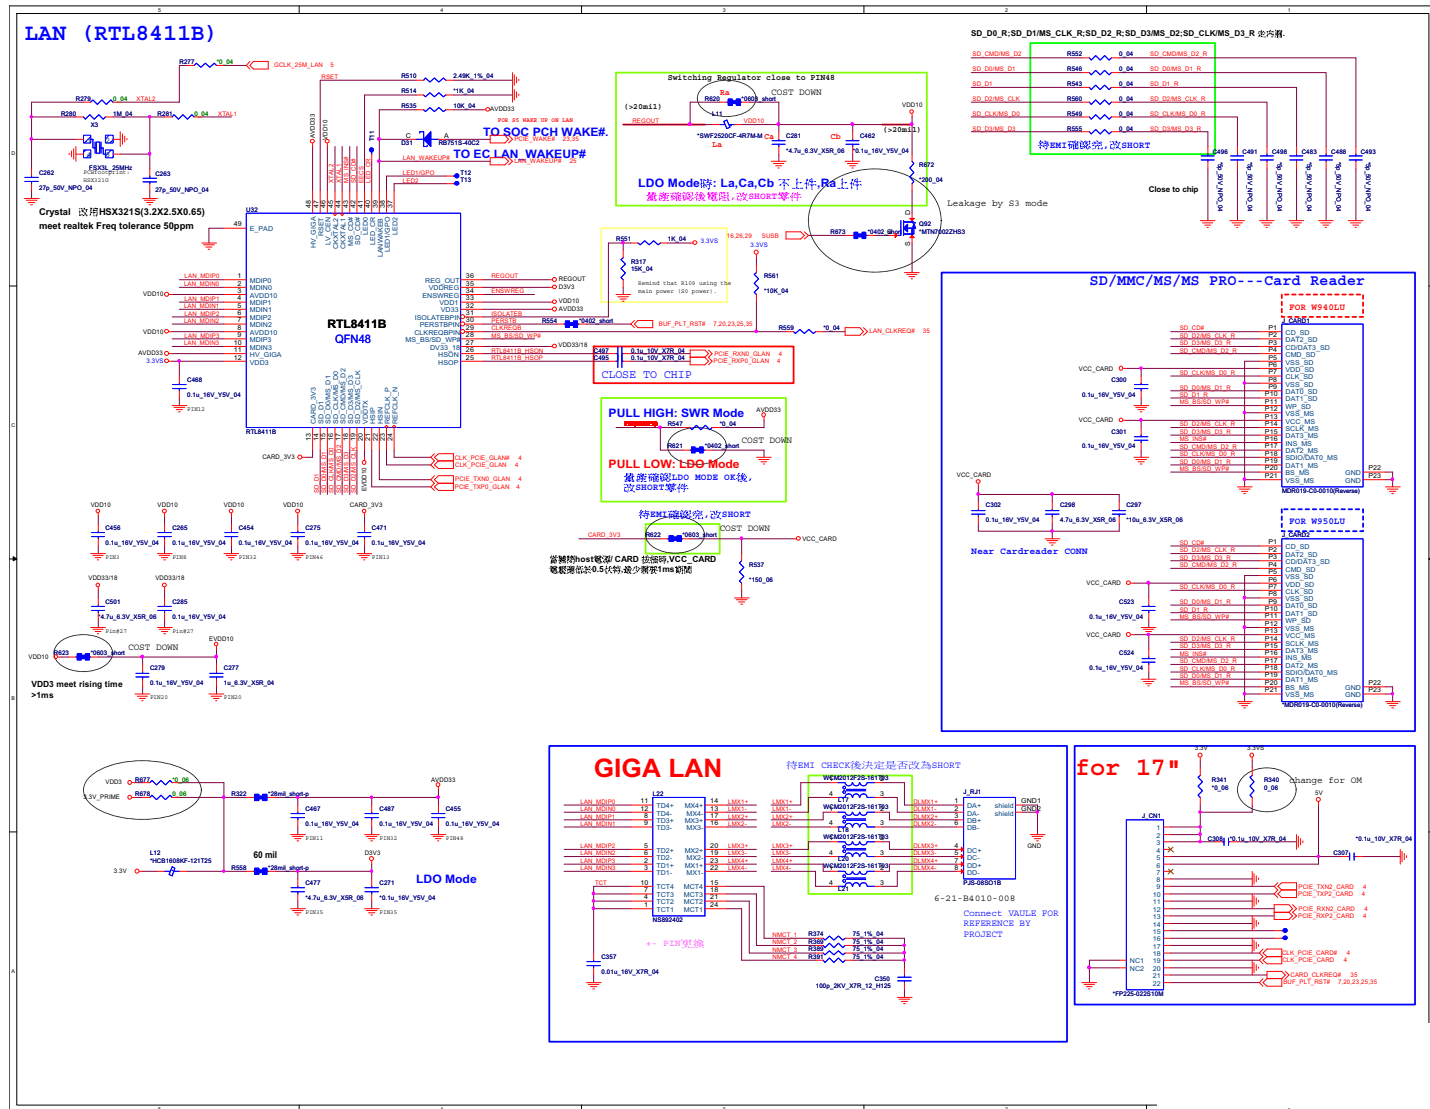


Schematic Diagrams

Conn, Fan, Click, CCD

Sheet 21 of 39
Conn, Fan, Click,
CCD

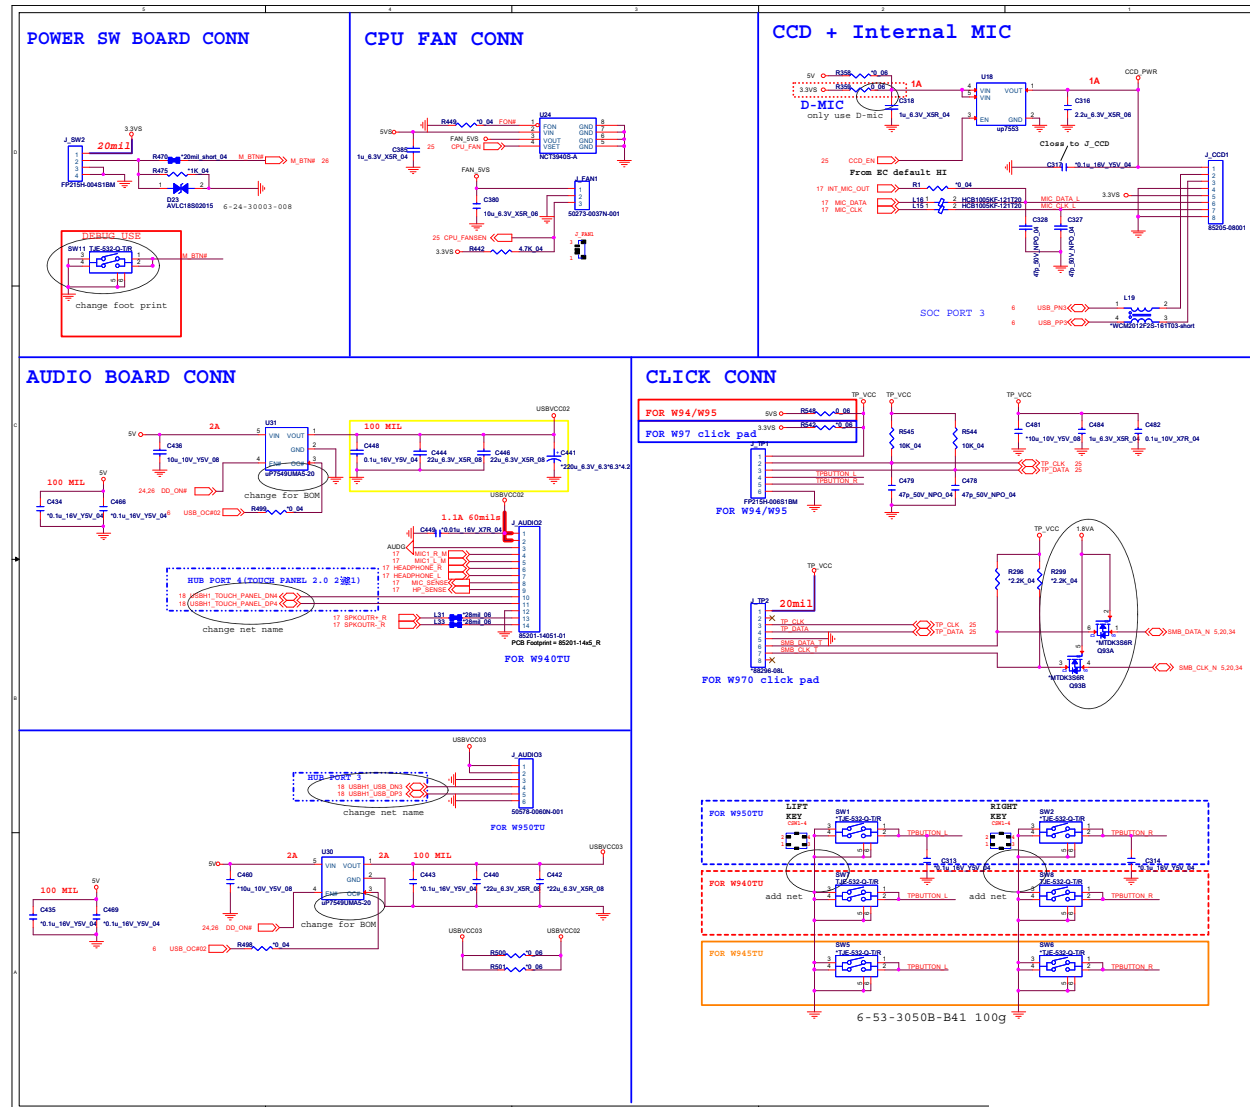

HDD, ODD, LED, LID

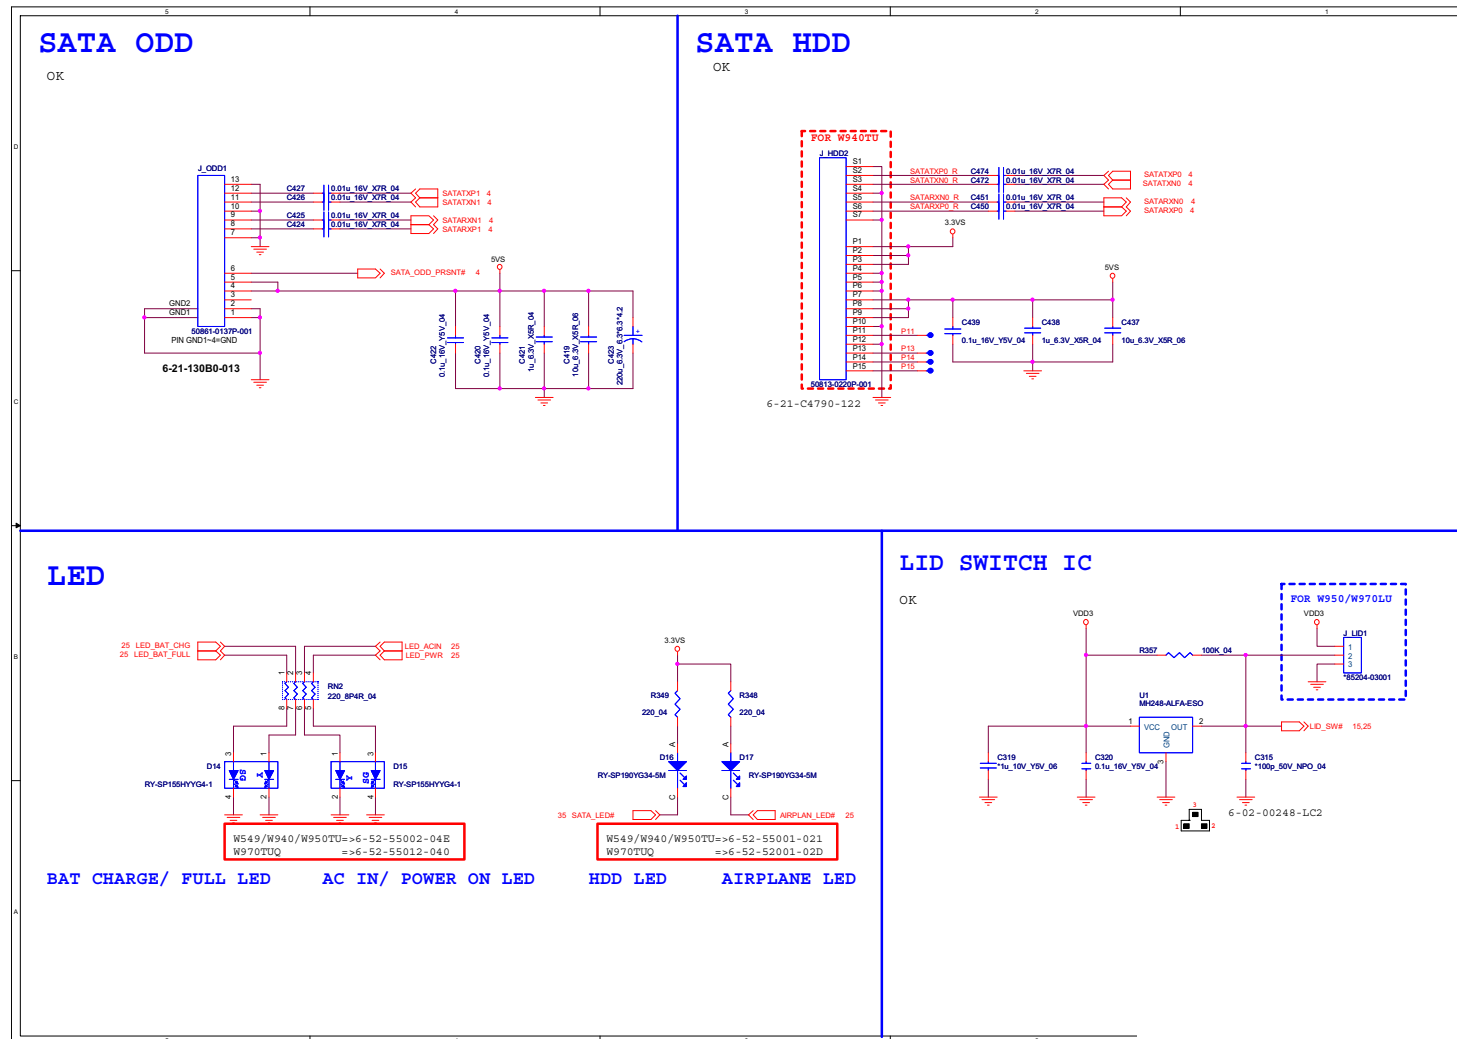


Sheet 22 of 39
HDD, ODD, LED,
LID

NGFF

B. Schematic Diagrams

Sheet 23 of 39
BGFF

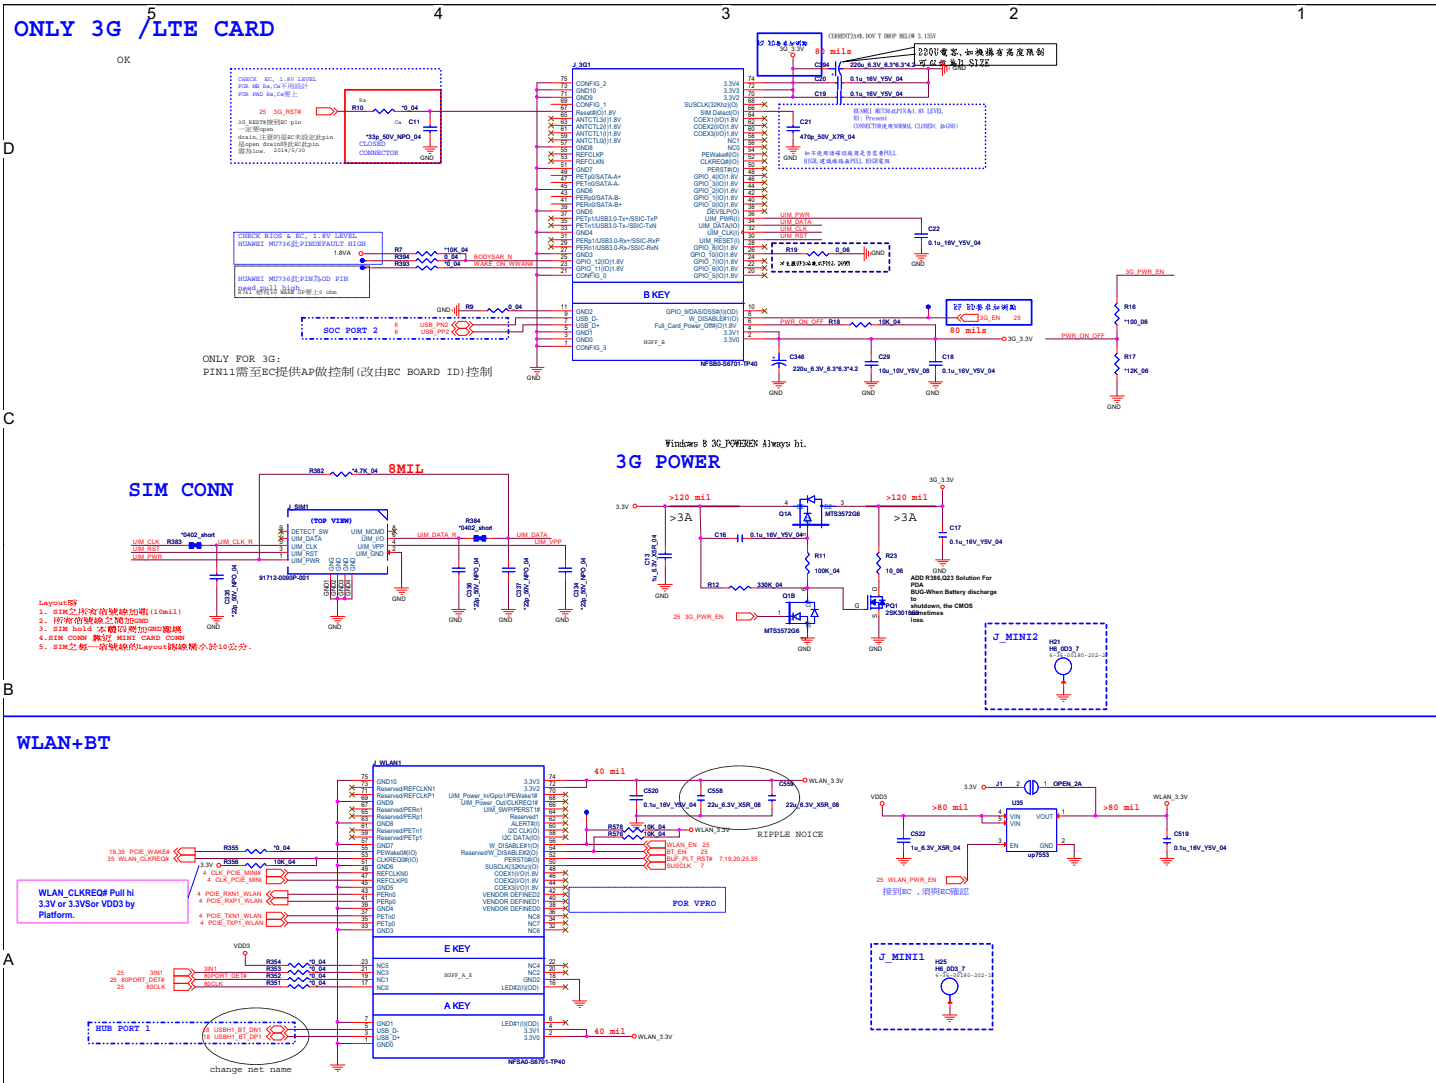


Sheet 24 of 39
USB, Touch Panel,
TV




Schematic Diagrams

KBC ITE IT8987E

Sheet 25 of 39
KBC ITE IT8987E

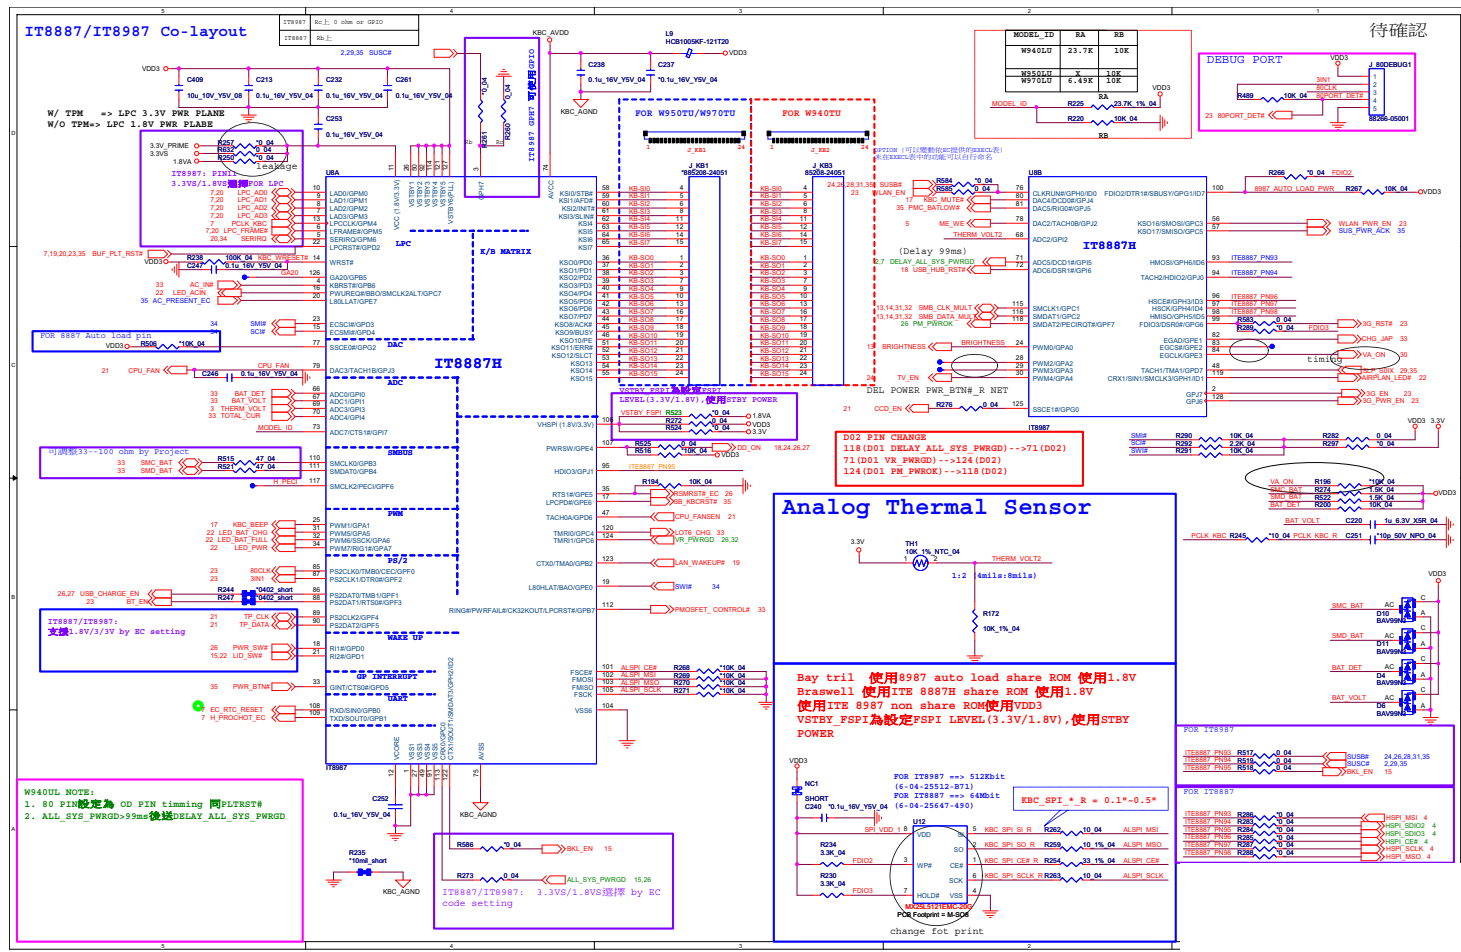


5V, 3.3V, 1.8VA B - 27

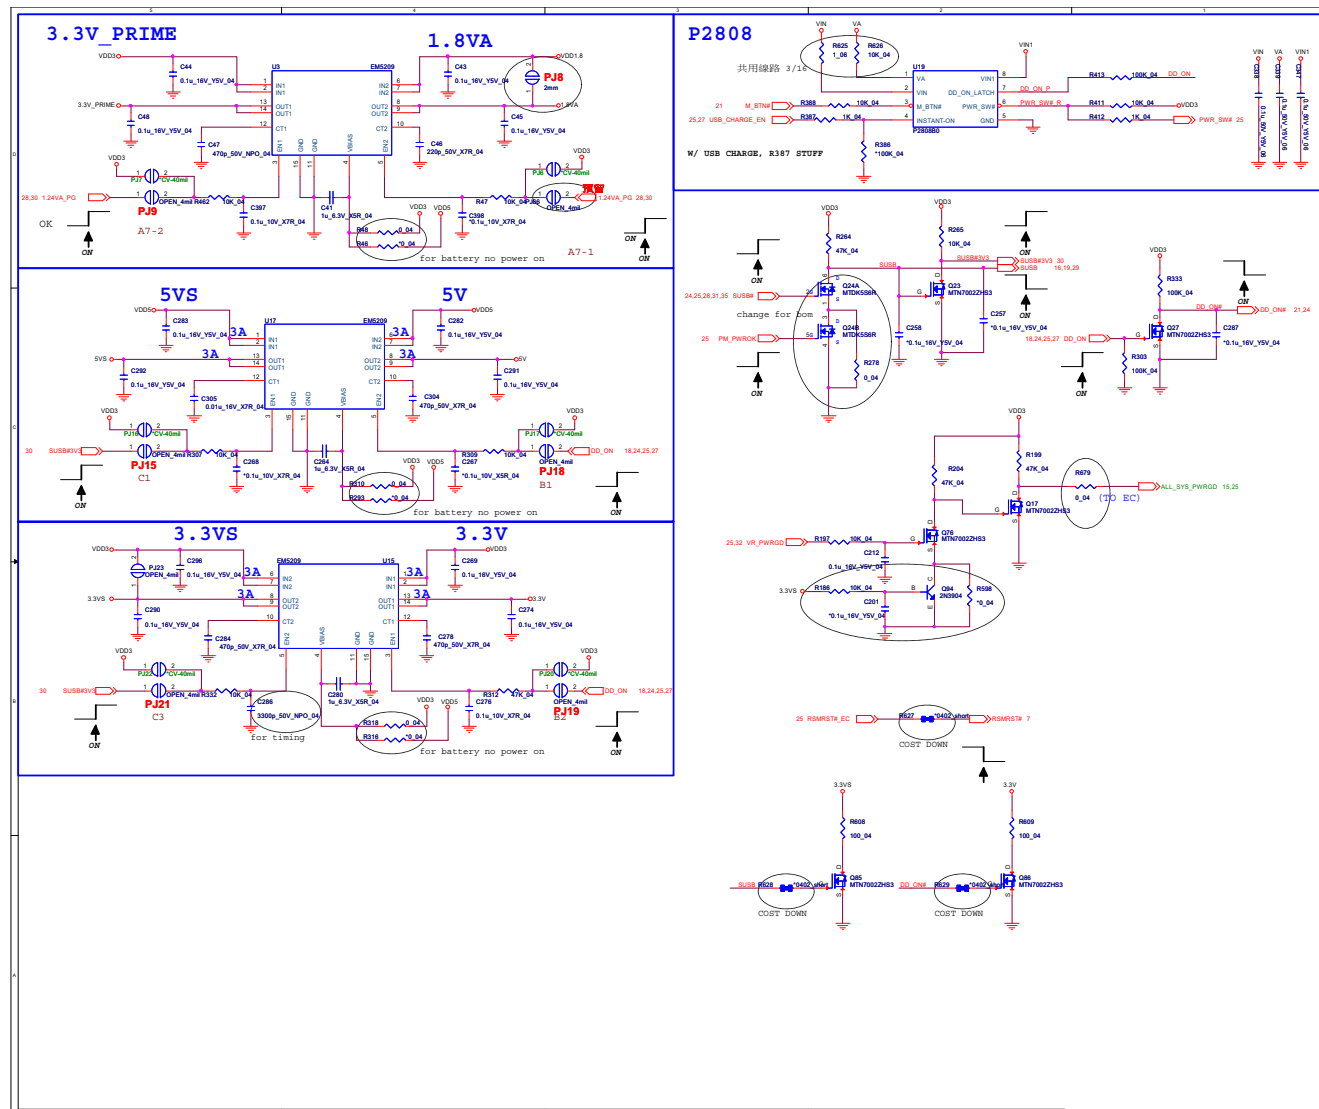


VDD3, VDD5

Sheet 27 of 39
VDD3, VDD5

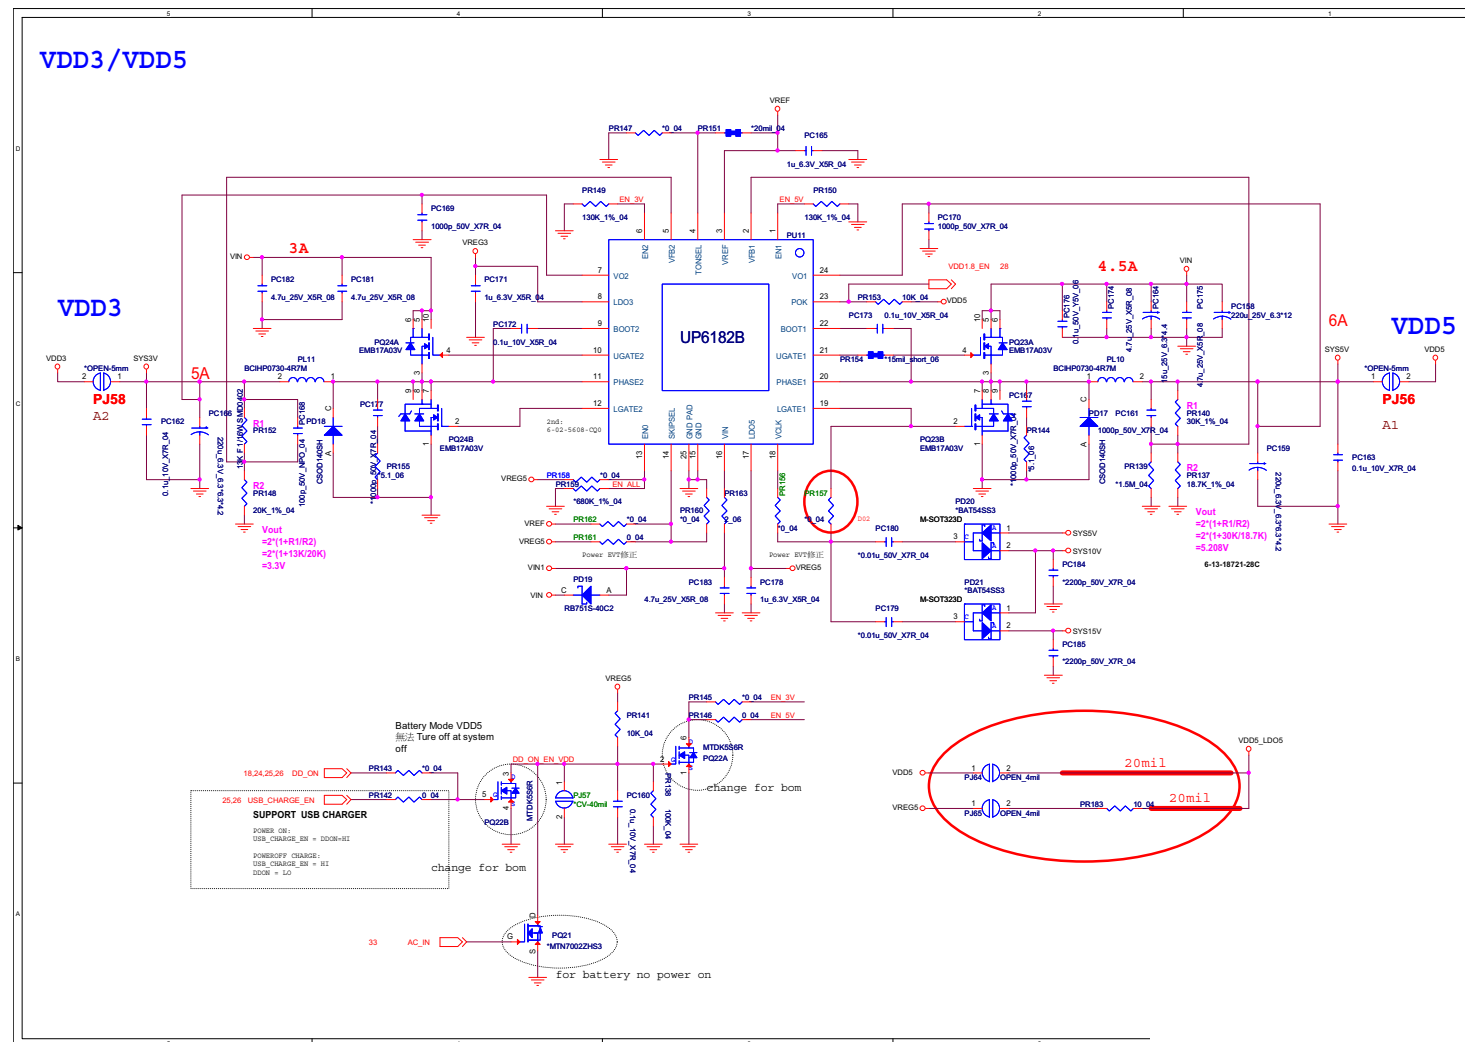


VDD 1.8/1.15VA

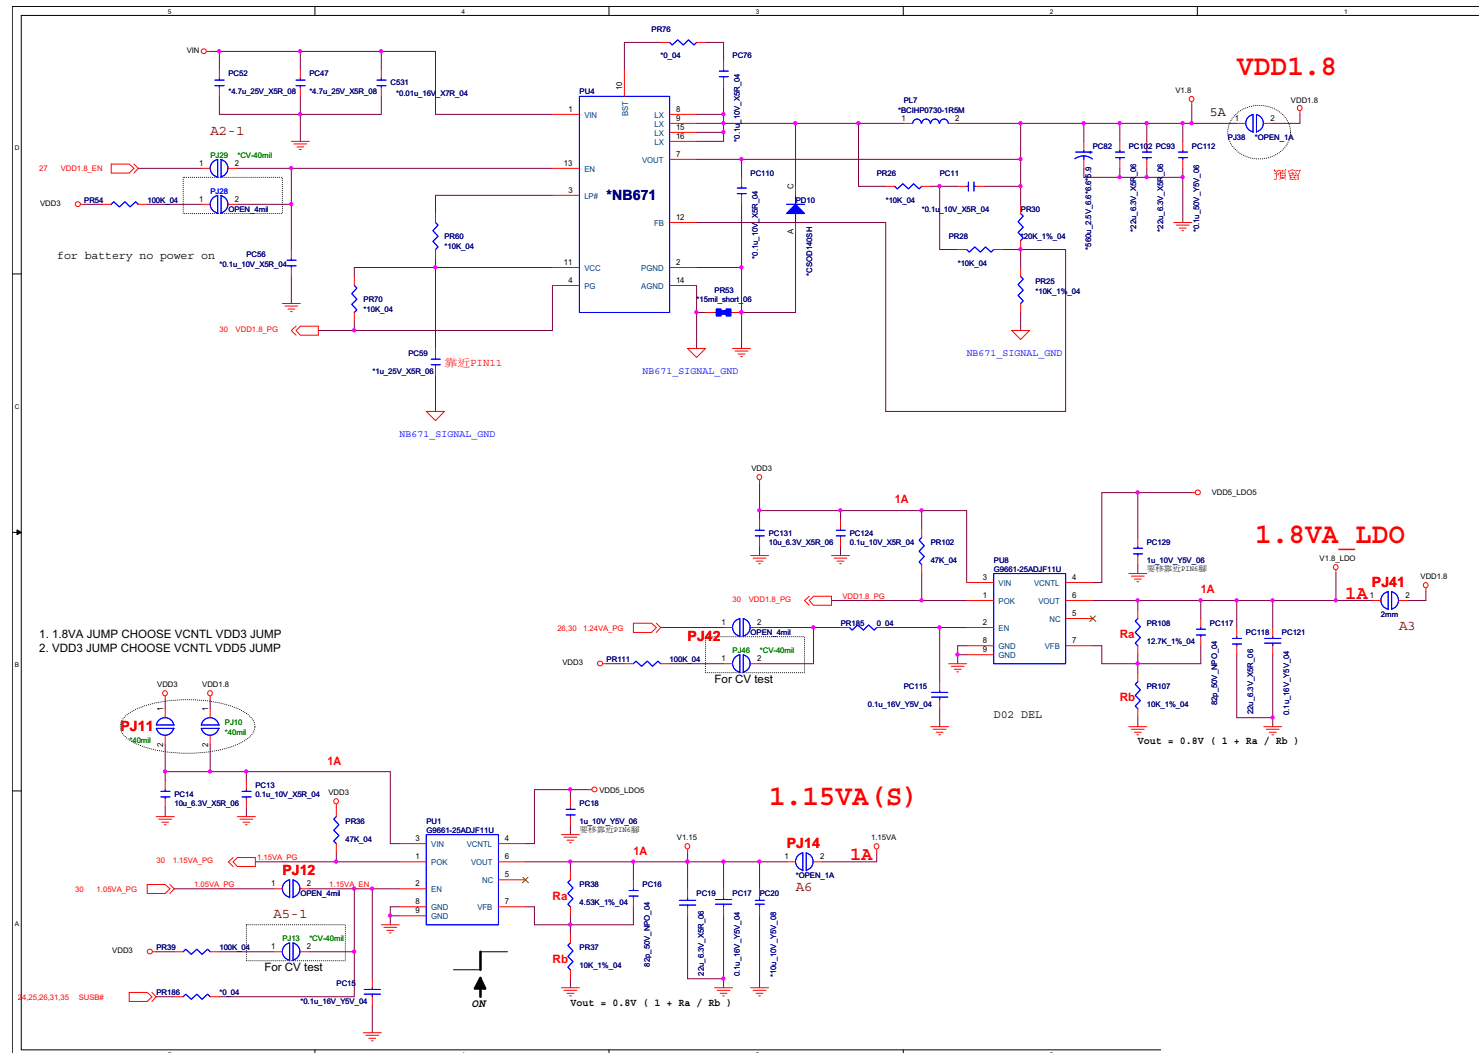


Sheet 28 of 39
VDD 1.8/1.15VA

VTT_MEM / 1.35V

1.35V/0.675VS

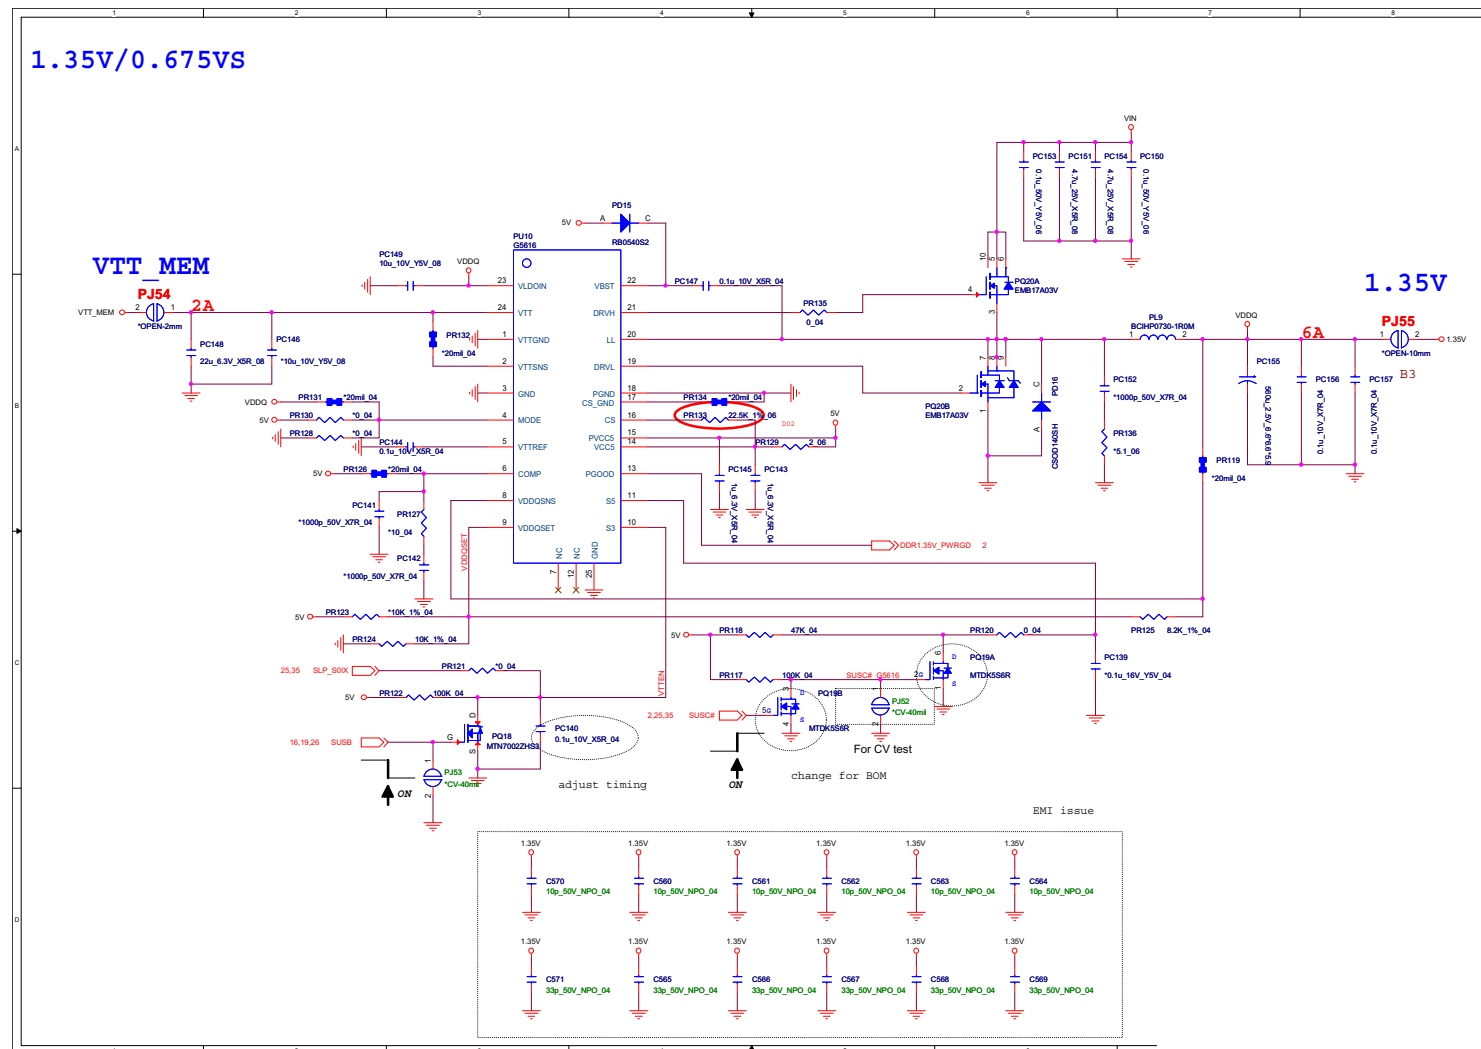


1.5VS/1.24VA

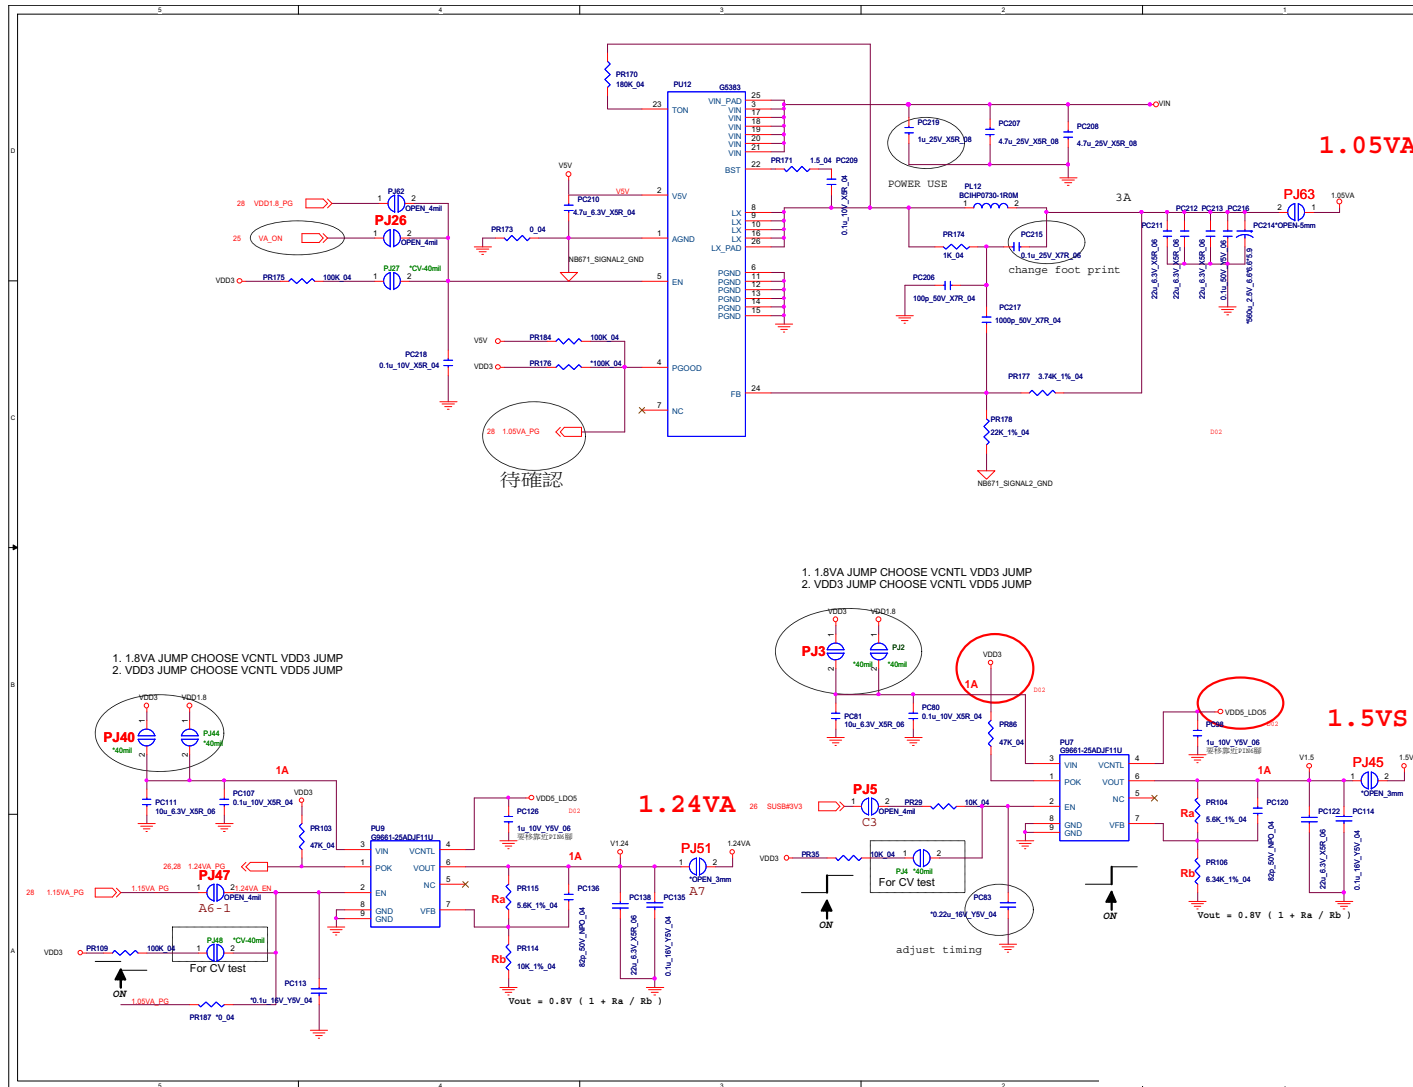
Sheet 30 of 39
1.5VS/1.24VA

VGG

Sheet 31 of 39
VGG

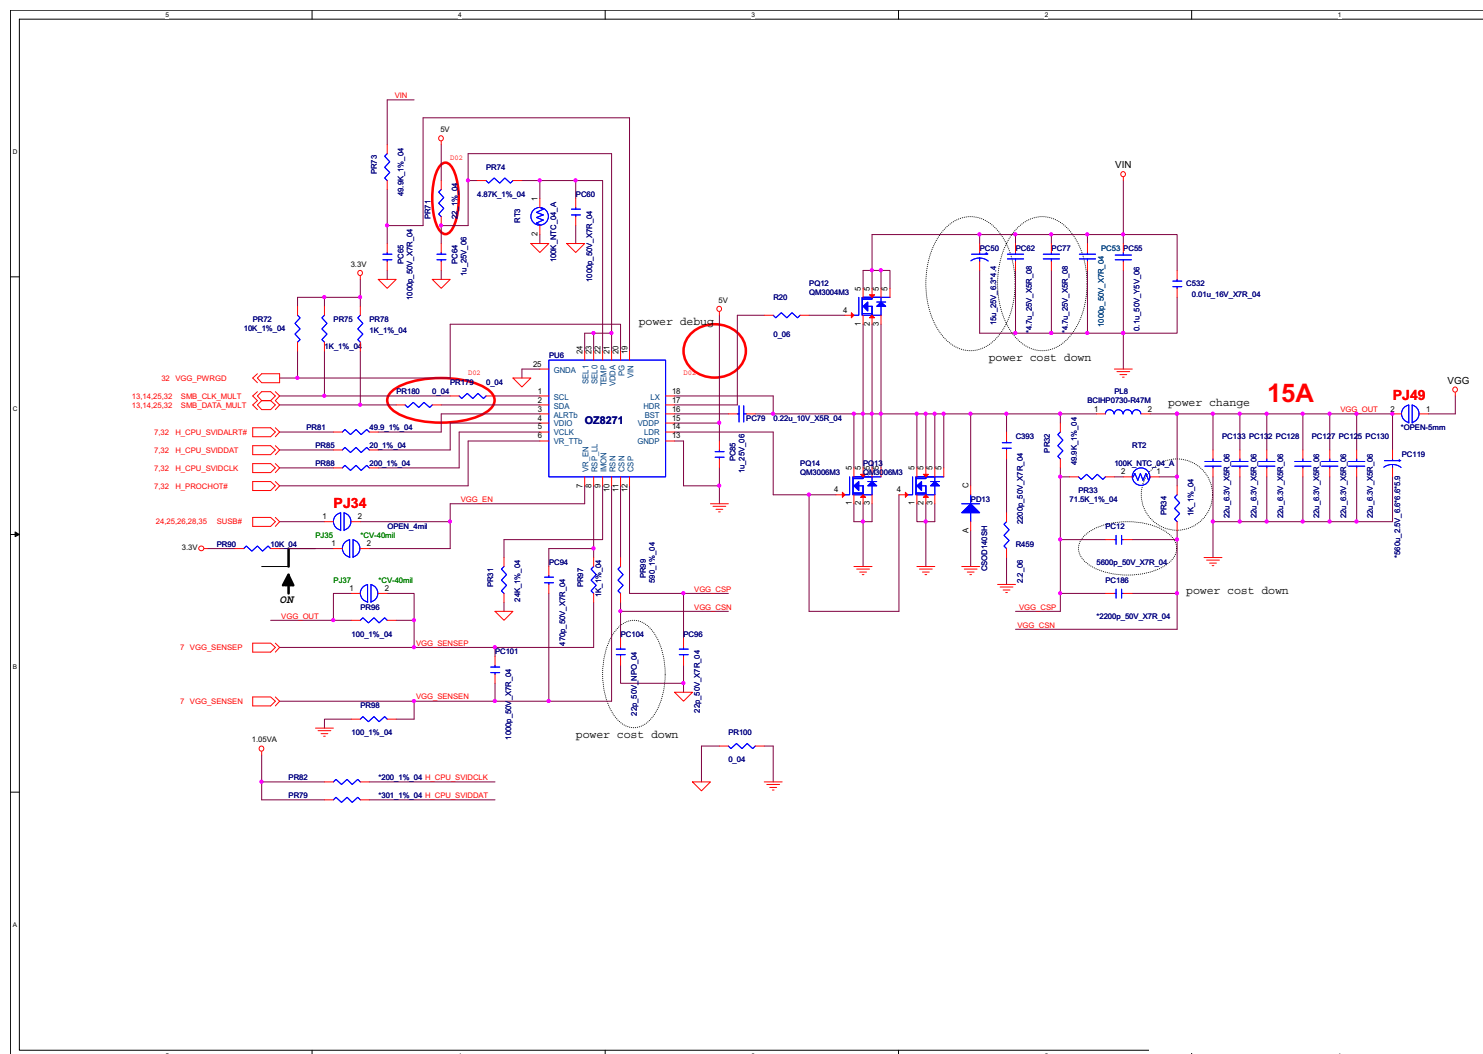


VCore B - 33

 


Schematic Diagrams

AC-In, Charger

Sheet 33 of 39
AC-IN, Charger

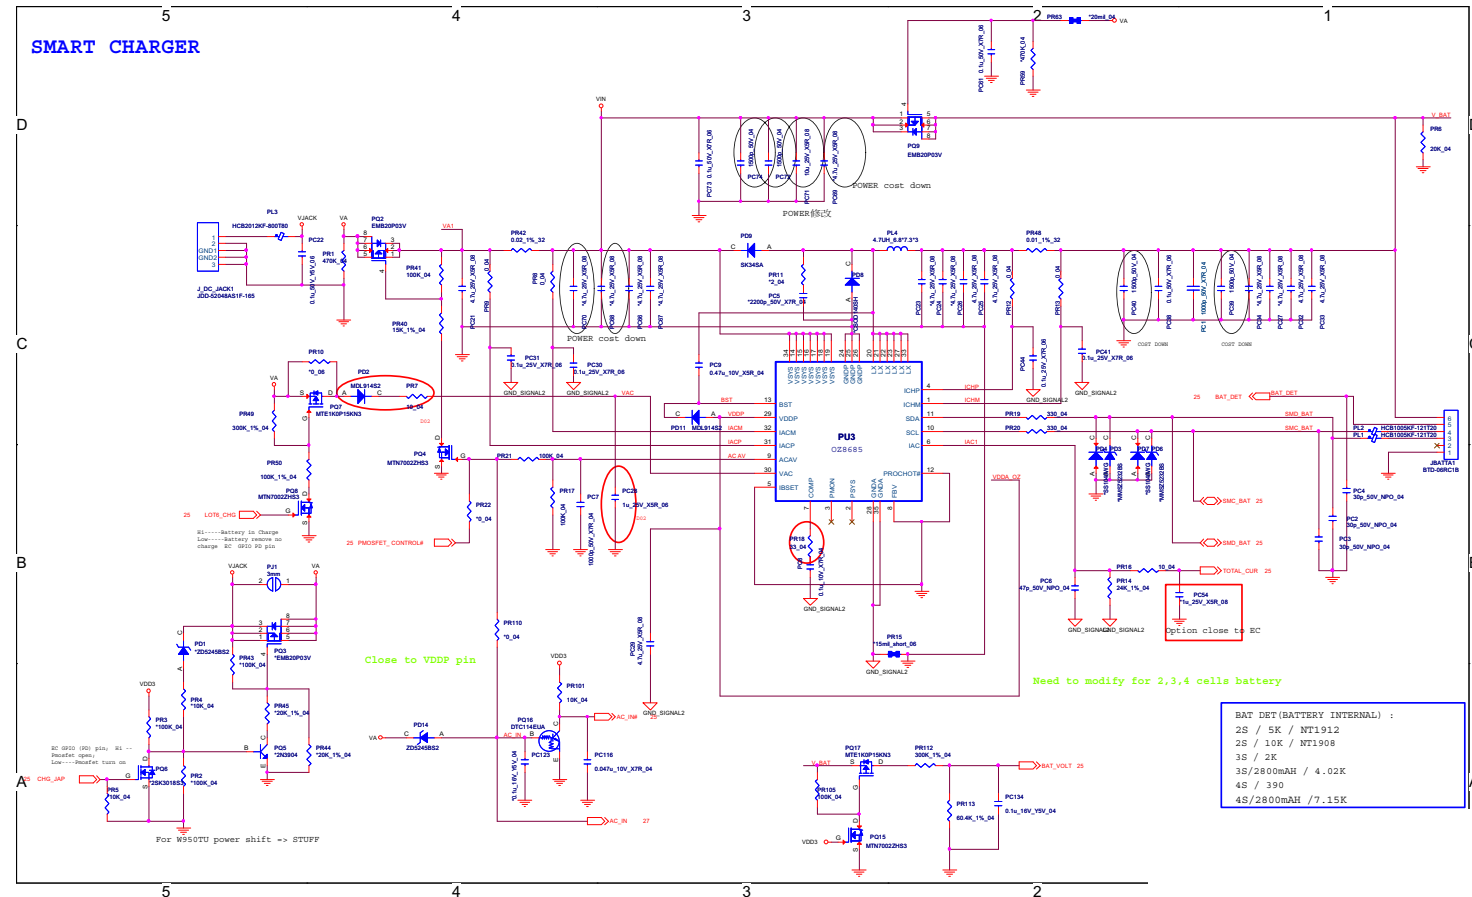

Level Shifter 1

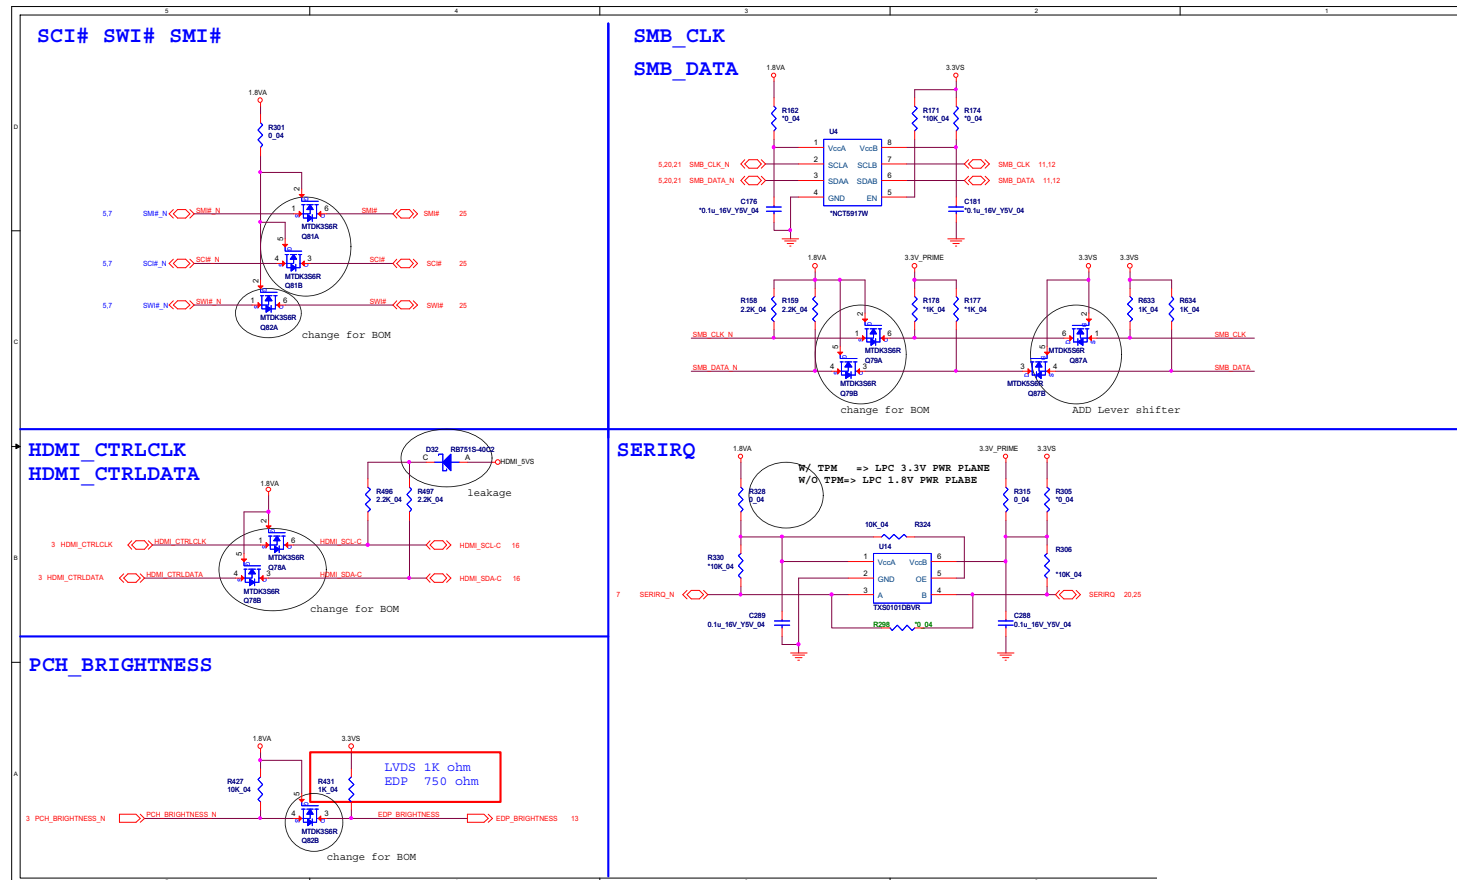


Sheet 34 of 39
Level Shifter 1


Schematic Diagrams


Level Shifter 2

Sheet 35 of 39
Level Shifter 2

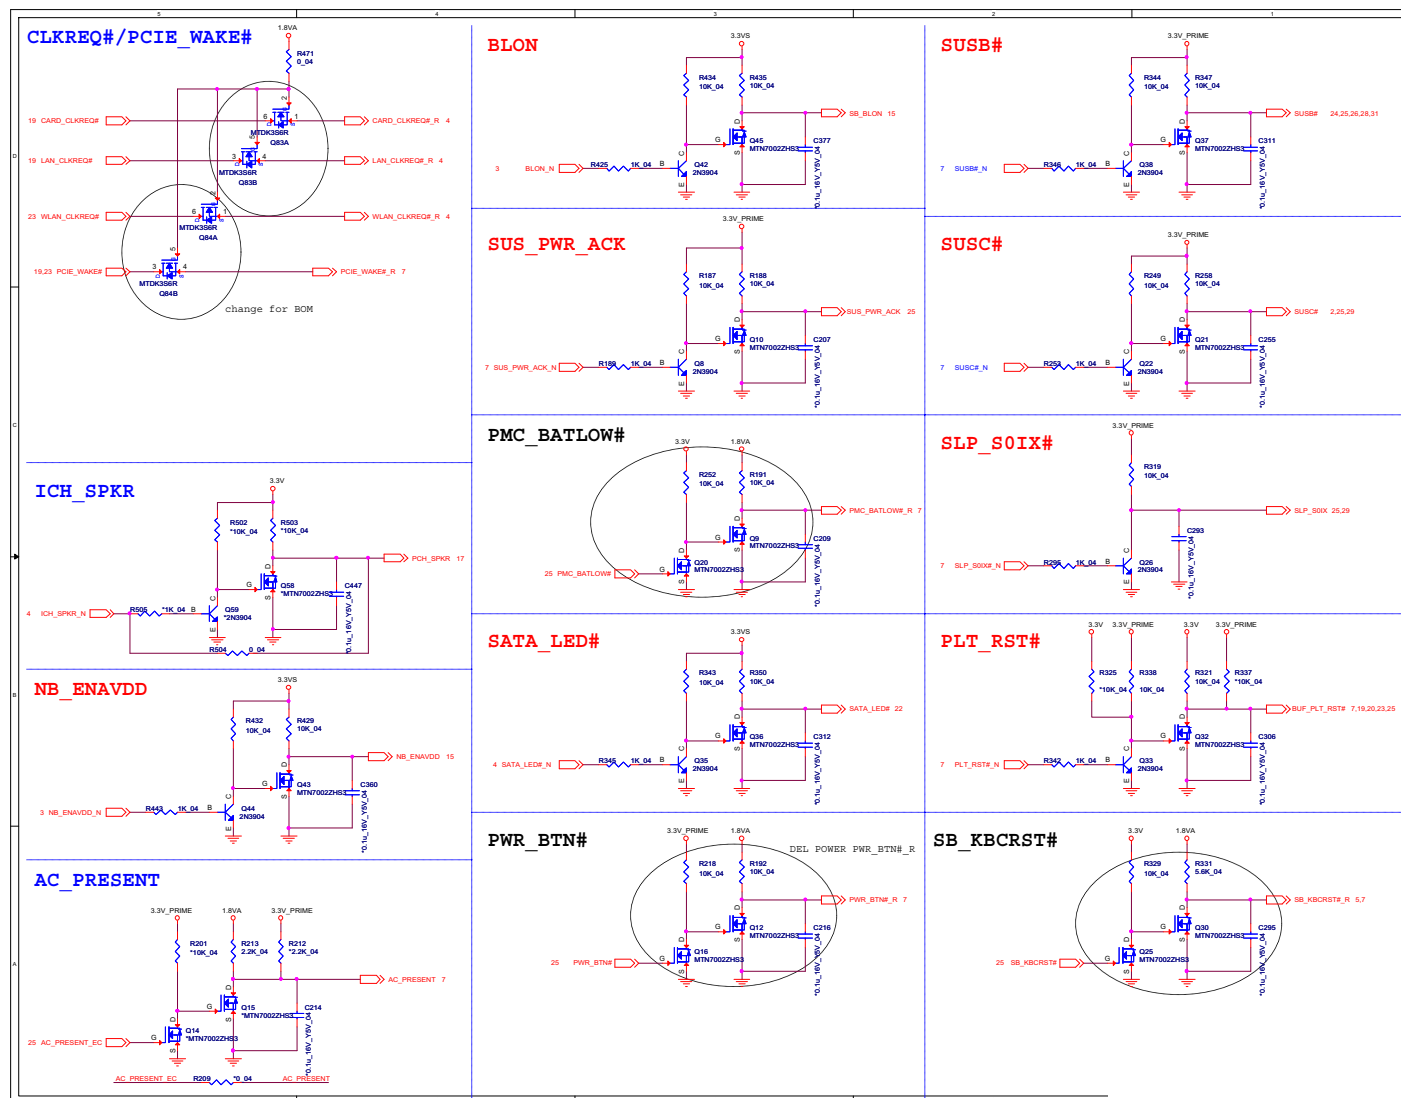


Audio Board

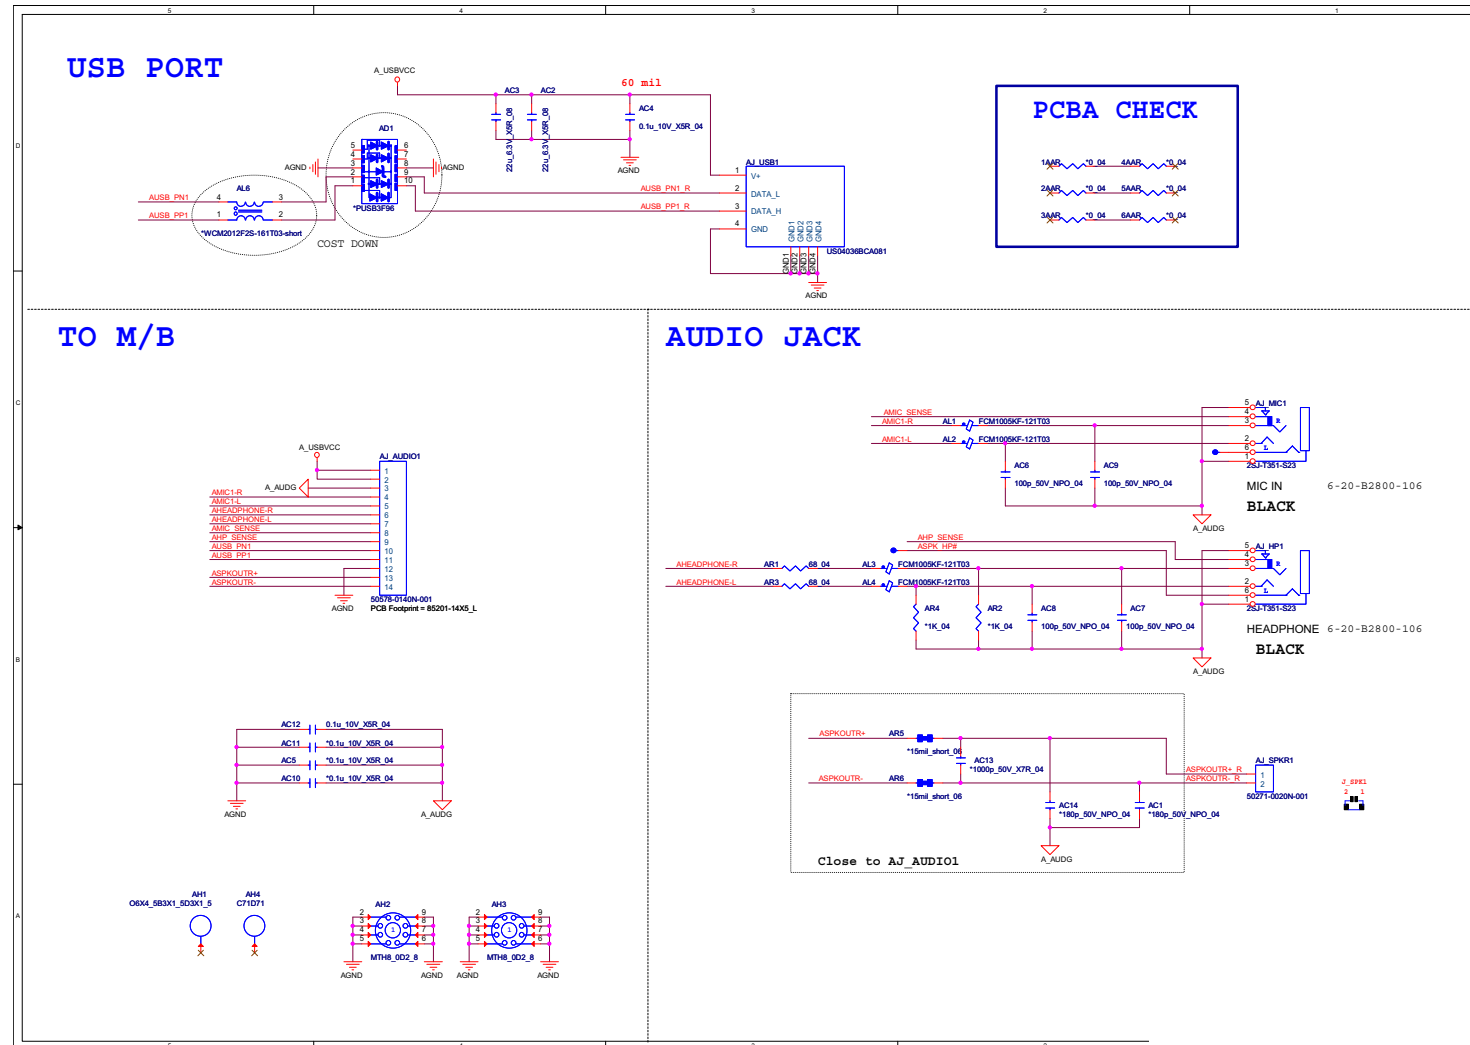Sheet 36 of 39
Audio Board

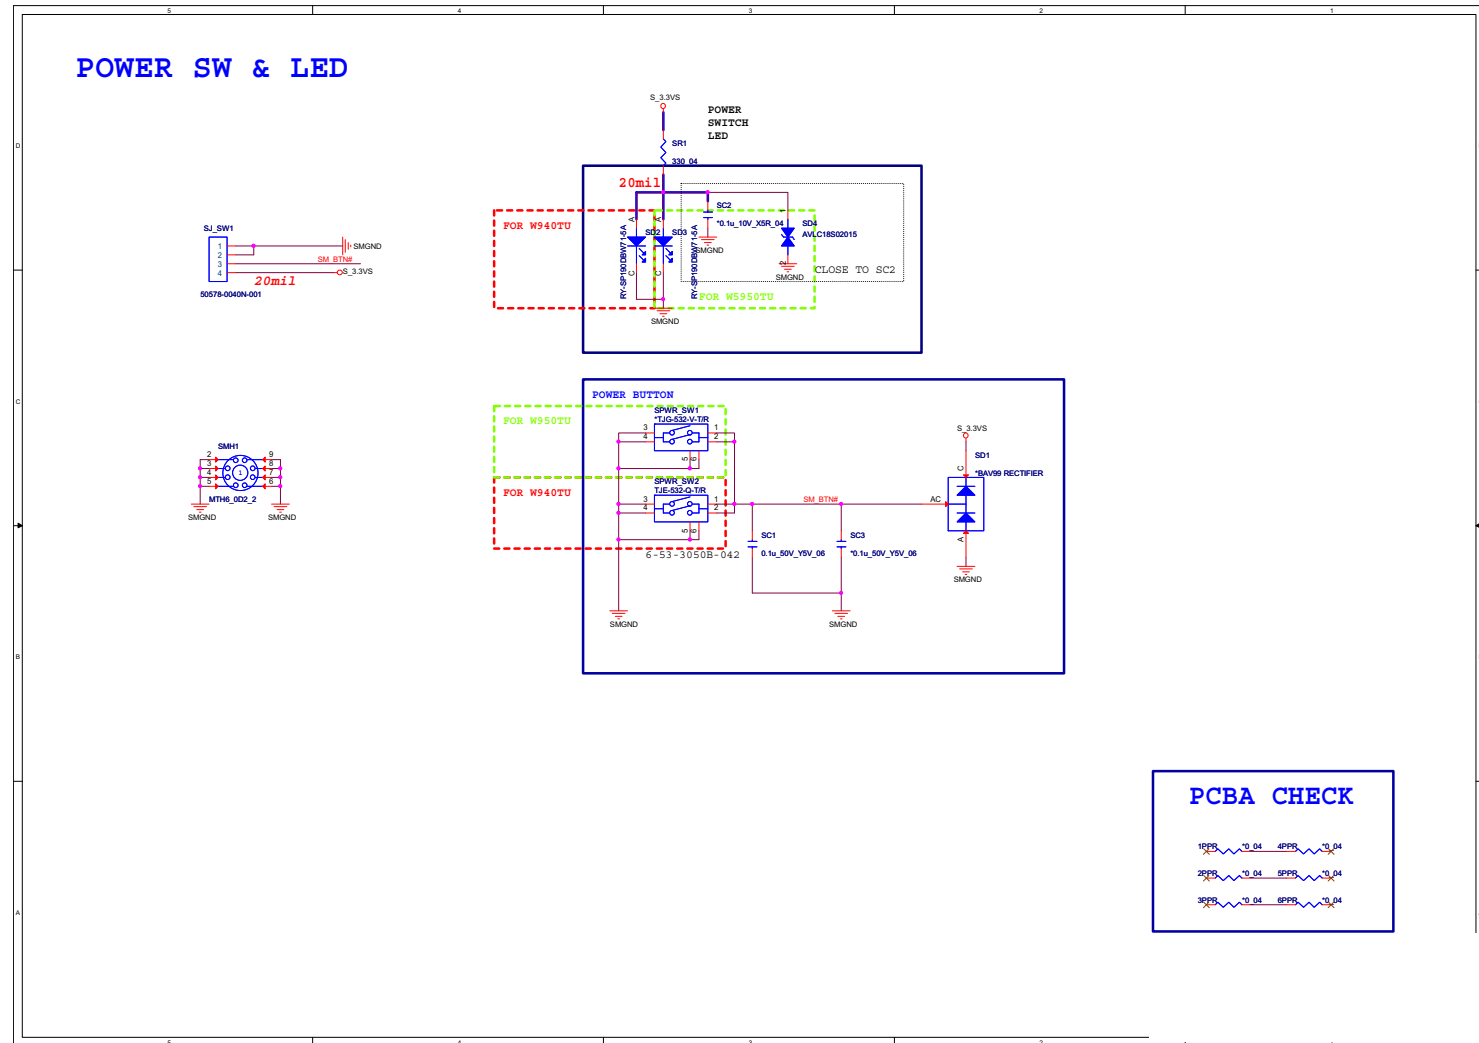


Power Diagram

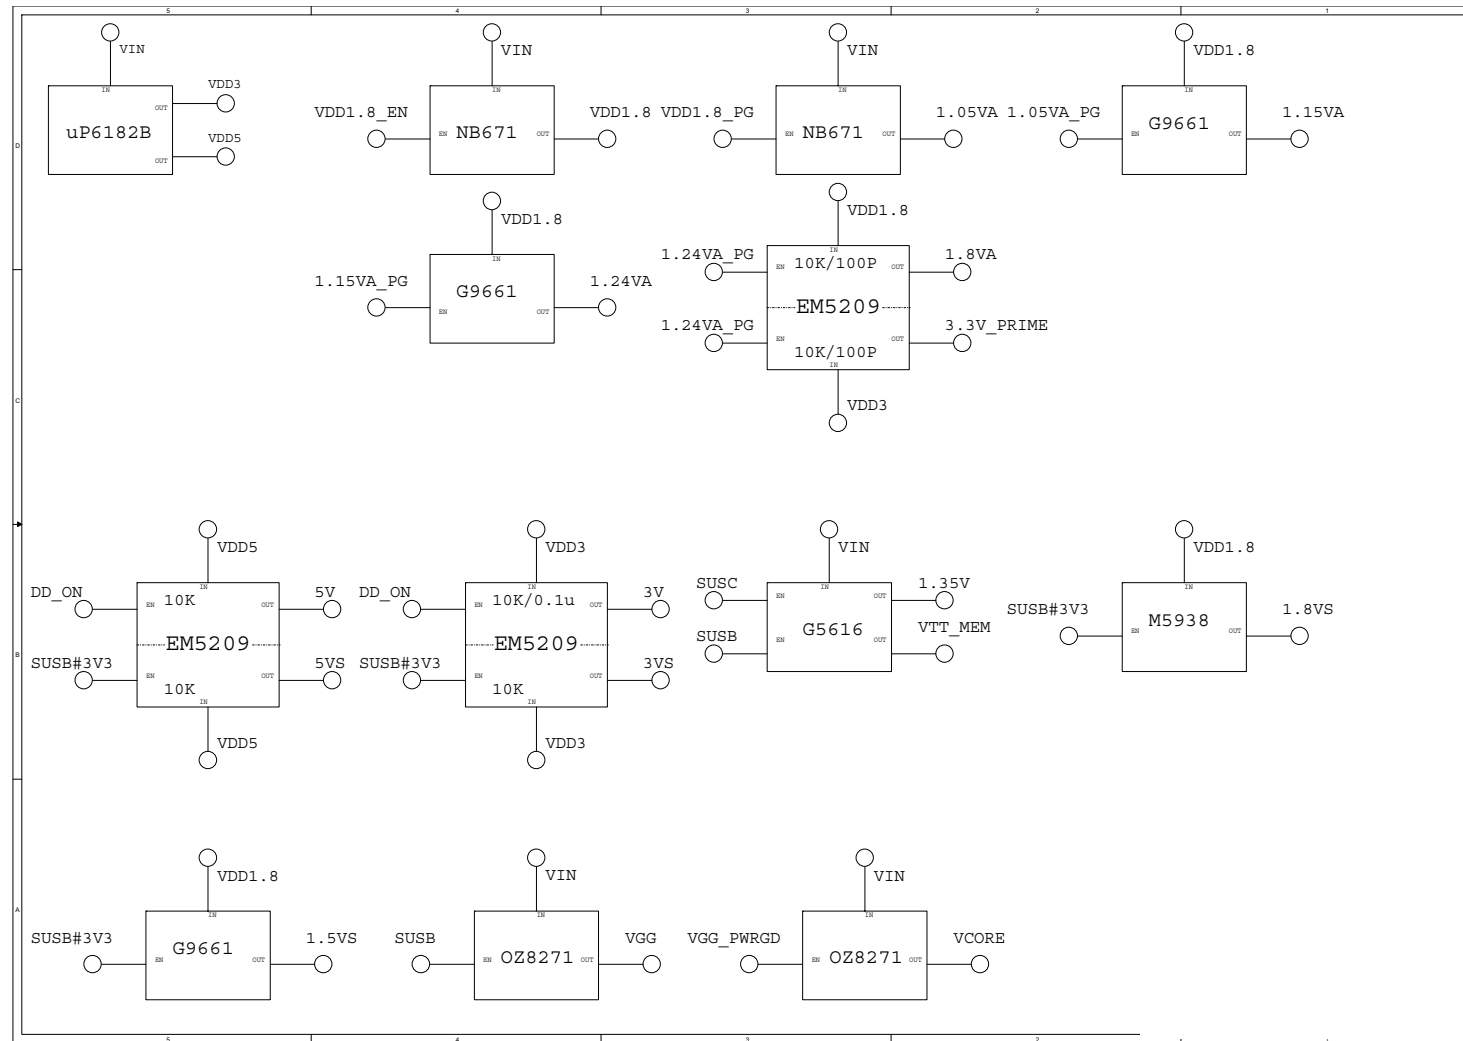

Sheet 38 of 39
Power Diagram

Power Sequence

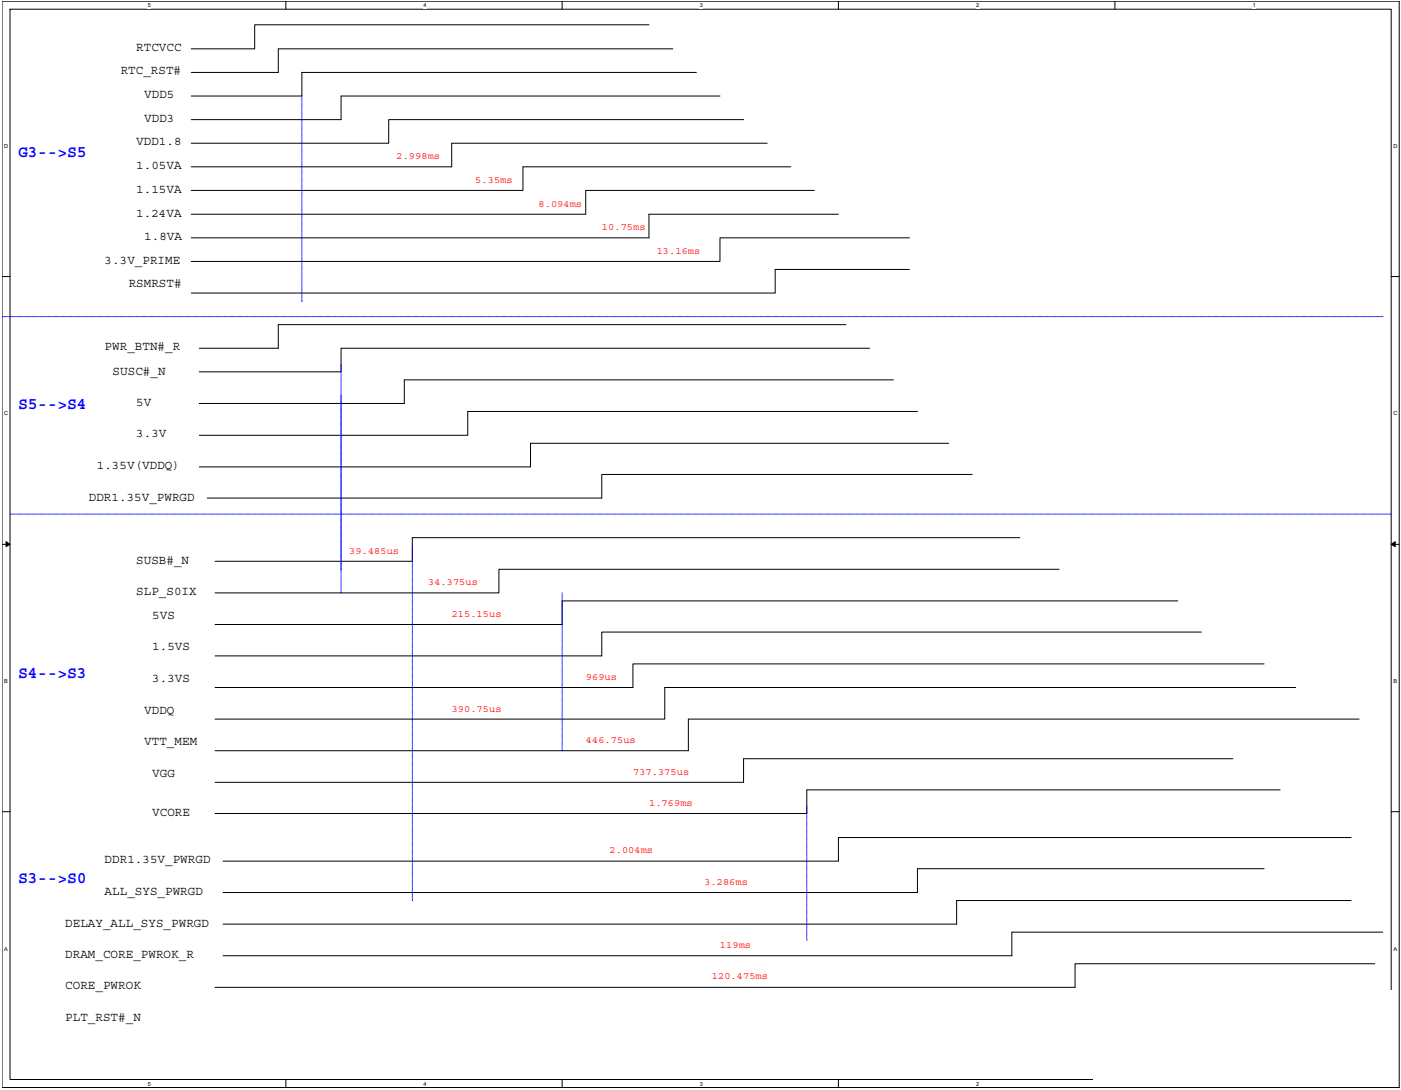

Sheet 39 of 39
Power Sequence

Appendix C: Updating the FLASH ROM BIOS

To update the FLASH ROM BIOS, you must:

- Download the BIOS update from the web site.
- Unzip the files onto a bootable CD/DVD/USB Flash Drive.
- Reboot your computer from an external CD/DVD/USB Flash Drive.
- Use the flash tools to update the flash BIOS using the commands indicated below.
- Restart the computer booting from the HDD and press **F2** at startup enter the BIOS.
- Load setup defaults from the BIOS and save the default settings and exit the BIOS to restart the computer.
- After rebooting the computer you may restart the computer again and make any required changes to the default BIOS settings.

Download the BIOS

1. Go to www.clevo.com.tw and point to **E-Services** and click **E-Channel**.
2. Use your user ID and password to access the appropriate download area (BIOS), and download the latest BIOS files (the BIOS file will be contained in a batch file that may be run directly once unzipped) for your computer model (see sidebar for important information on BIOS versions).

Unzip the downloaded files to a bootable CD/DVD/ or USB Flash drive

1. Insert a bootable CD/DVD/USB flash drive into the CD/DVD drive/USB port of the computer containing the downloaded files.
2. Use a tool such as Winzip or Winrar to unzip all the BIOS files and refresh tools to your bootable CD/DVD/USB flash drive (you may need to create a bootable CD/DVD with the files using a 3rd party software).

Set the computer to boot from the external drive

1. With the bootable CD/DVD/USB flash drive containing the BIOS files in your CD/DVD drive/USB port, restart the computer and press **F2** (in most cases) to enter the BIOS.
2. Use the arrow keys to highlight the **Boot** menu.
3. Use the “+” and “-” keys to move boot devices up and down the priority order.
4. Make sure that the CD/DVD drive/USB flash drive is set first in the boot priority of the BIOS.
5. Press **F4** to save any changes you have made and exit the BIOS to restart the computer.



BIOS Version

Make sure you download the latest correct version of the BIOS appropriate for the computer model you are working on.

You should only download BIOS versions that are V1.01.XX or higher as appropriate for your computer model.

Note that BIOS versions are not backward compatible and therefore **you may not downgrade your BIOS to an older version** after upgrading to a later version (e.g if you upgrade a BIOS to ver 1.01.05, you **MAY NOT** then go back and flash the BIOS to ver 1.01.04).

BIOS Update

Use the flash tools to update the BIOS

1. Make sure you are not loading any memory management programs such as HIMEM by holding the **F8** key as you see the message “**EFI Shell**”. You will then be prompted to give “**Y**” or “**N**” responses to the programs being loaded by EFI Shell. Choose “**N**” for any memory management programs.
2. You should now see **DISK fsX:\>** (X is the designated drive number for the CD/DVD drive/USB flash drive).
3. **Type the following command:**

fsX:\> Flash.nsh

4. The utility will then proceed to flash the BIOS.
5. You should then be prompted to press any key to restart the system or turn the power off, and then on again but make sure you remove the CD/DVD/USB flash drive from the CD/DVD drive/USB port before the computer restarts.

Restart the computer (booting from the HDD)

1. With the CD/DVD/USB flash drive removed from the CD/DVD drive/USB port the computer should restart from the HDD.
2. Press **F2** as the computer restarts to enter the BIOS.
3. Use the arrow keys to highlight the **Exit** menu.
4. Select **Load Setup Defaults** (or press **F3**) and select “**Yes**” to confirm the selection.
5. Press **F4** to save any changes you have made and exit the BIOS to restart the computer.

Your computer is now running normally with the updated BIOS

You may now enter the BIOS and make any changes you require to the default settings.