




P8H67-M PRO Repair Guide

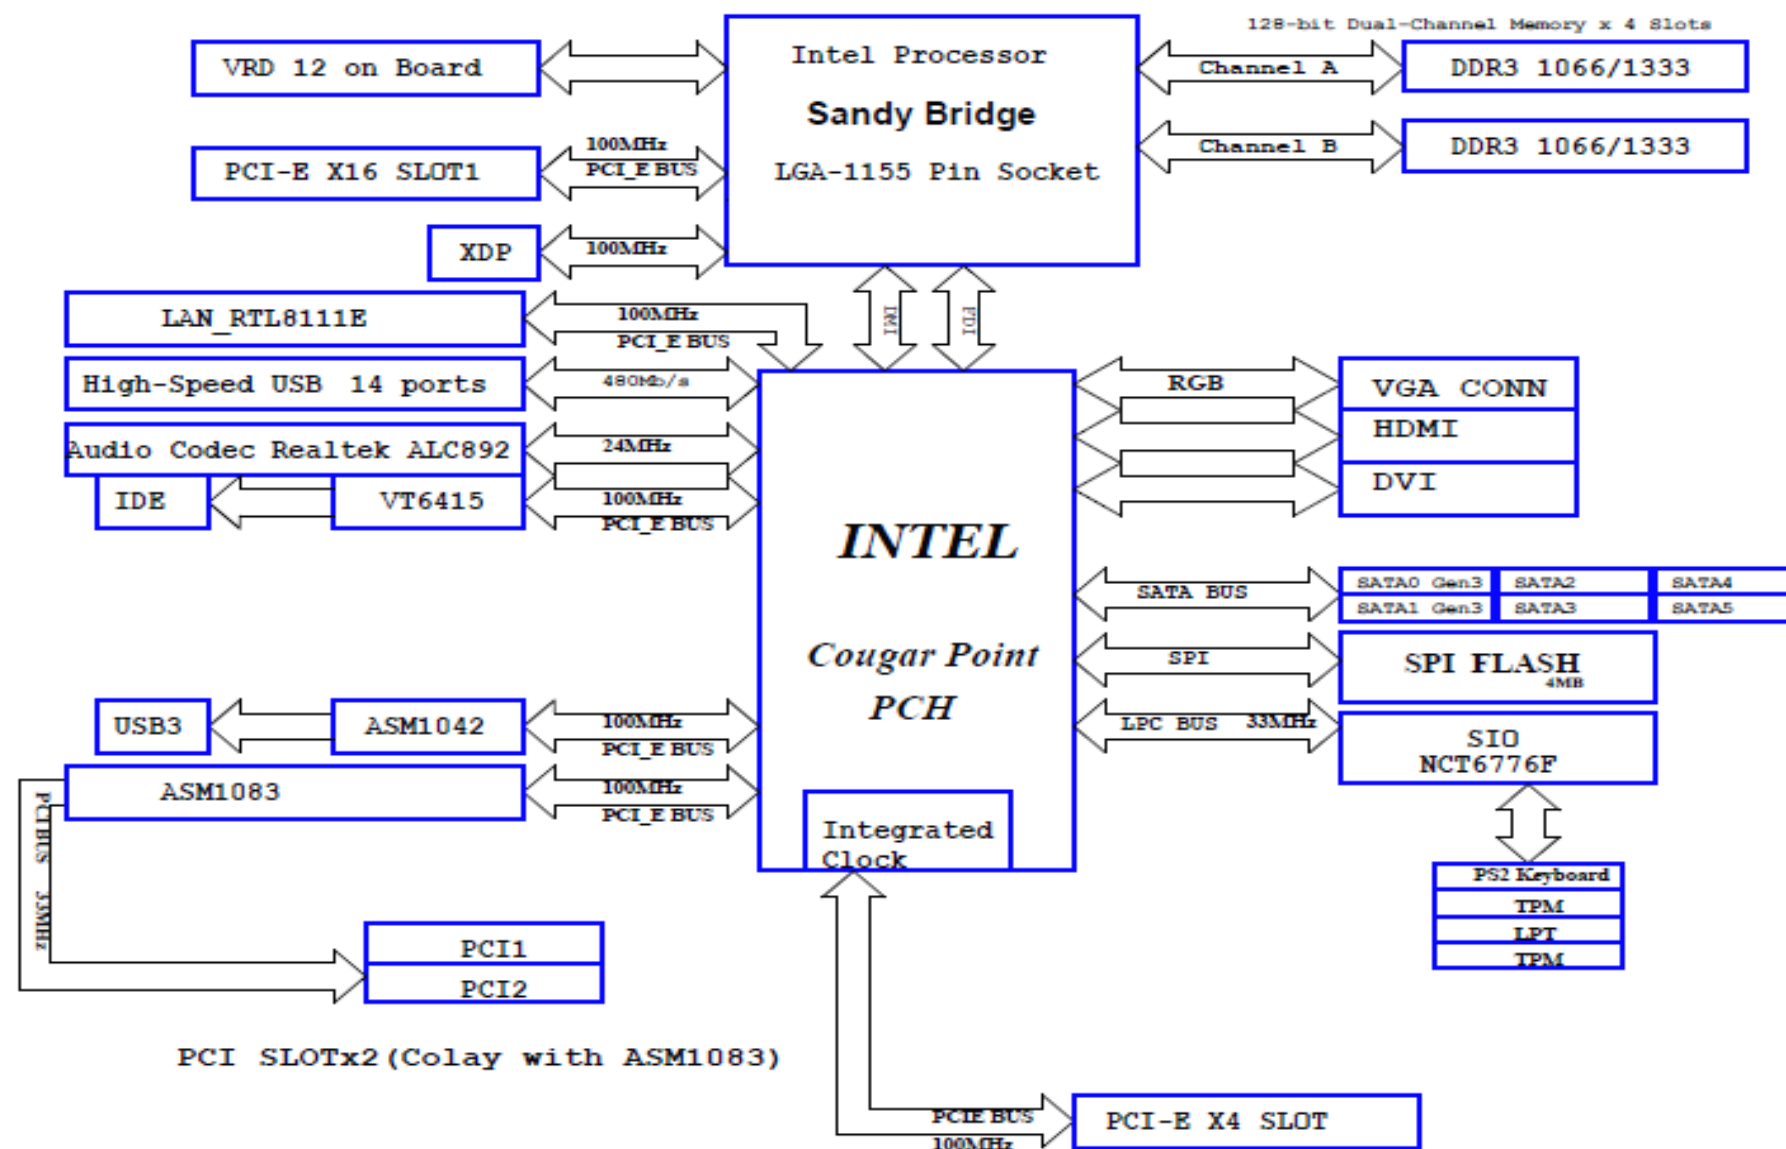

POWER FLOW

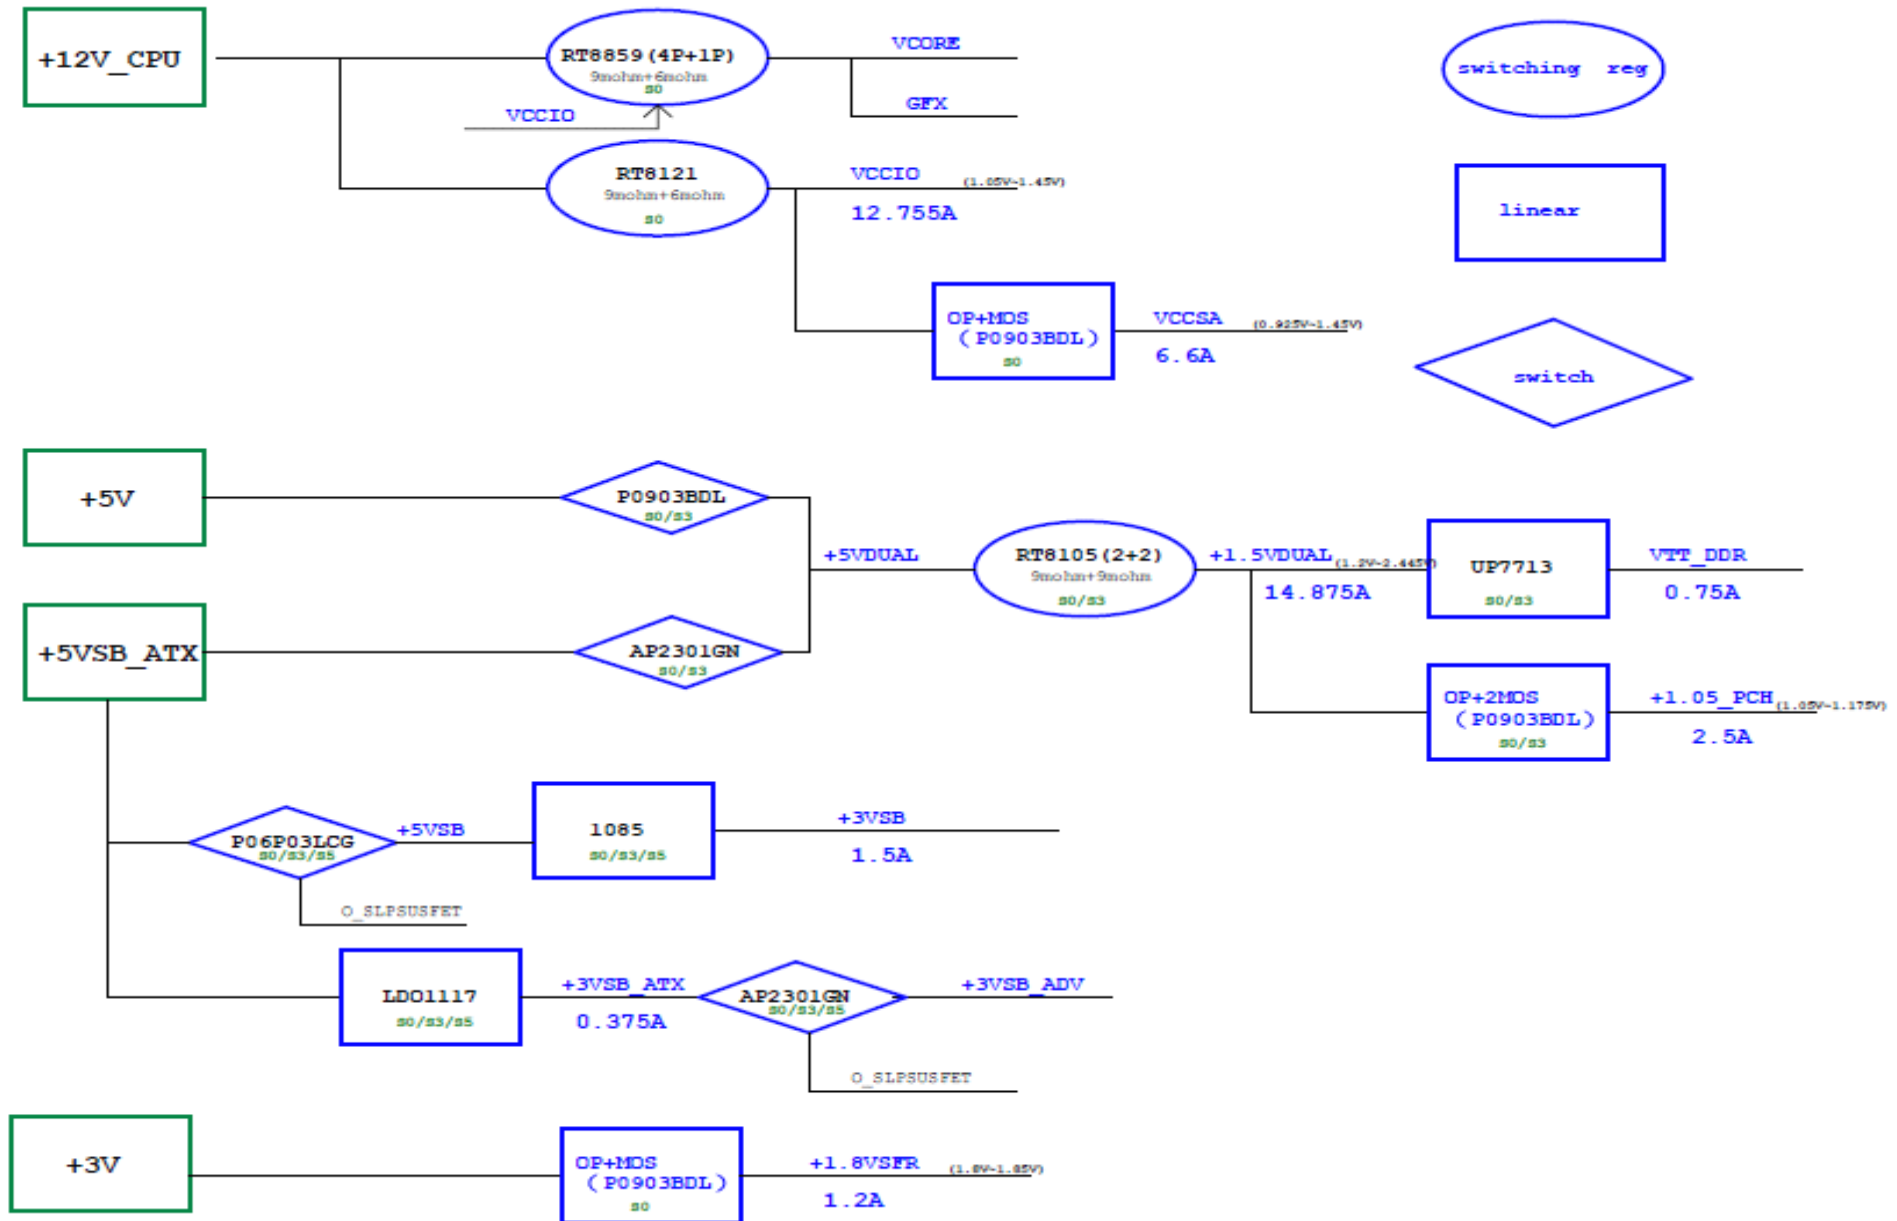

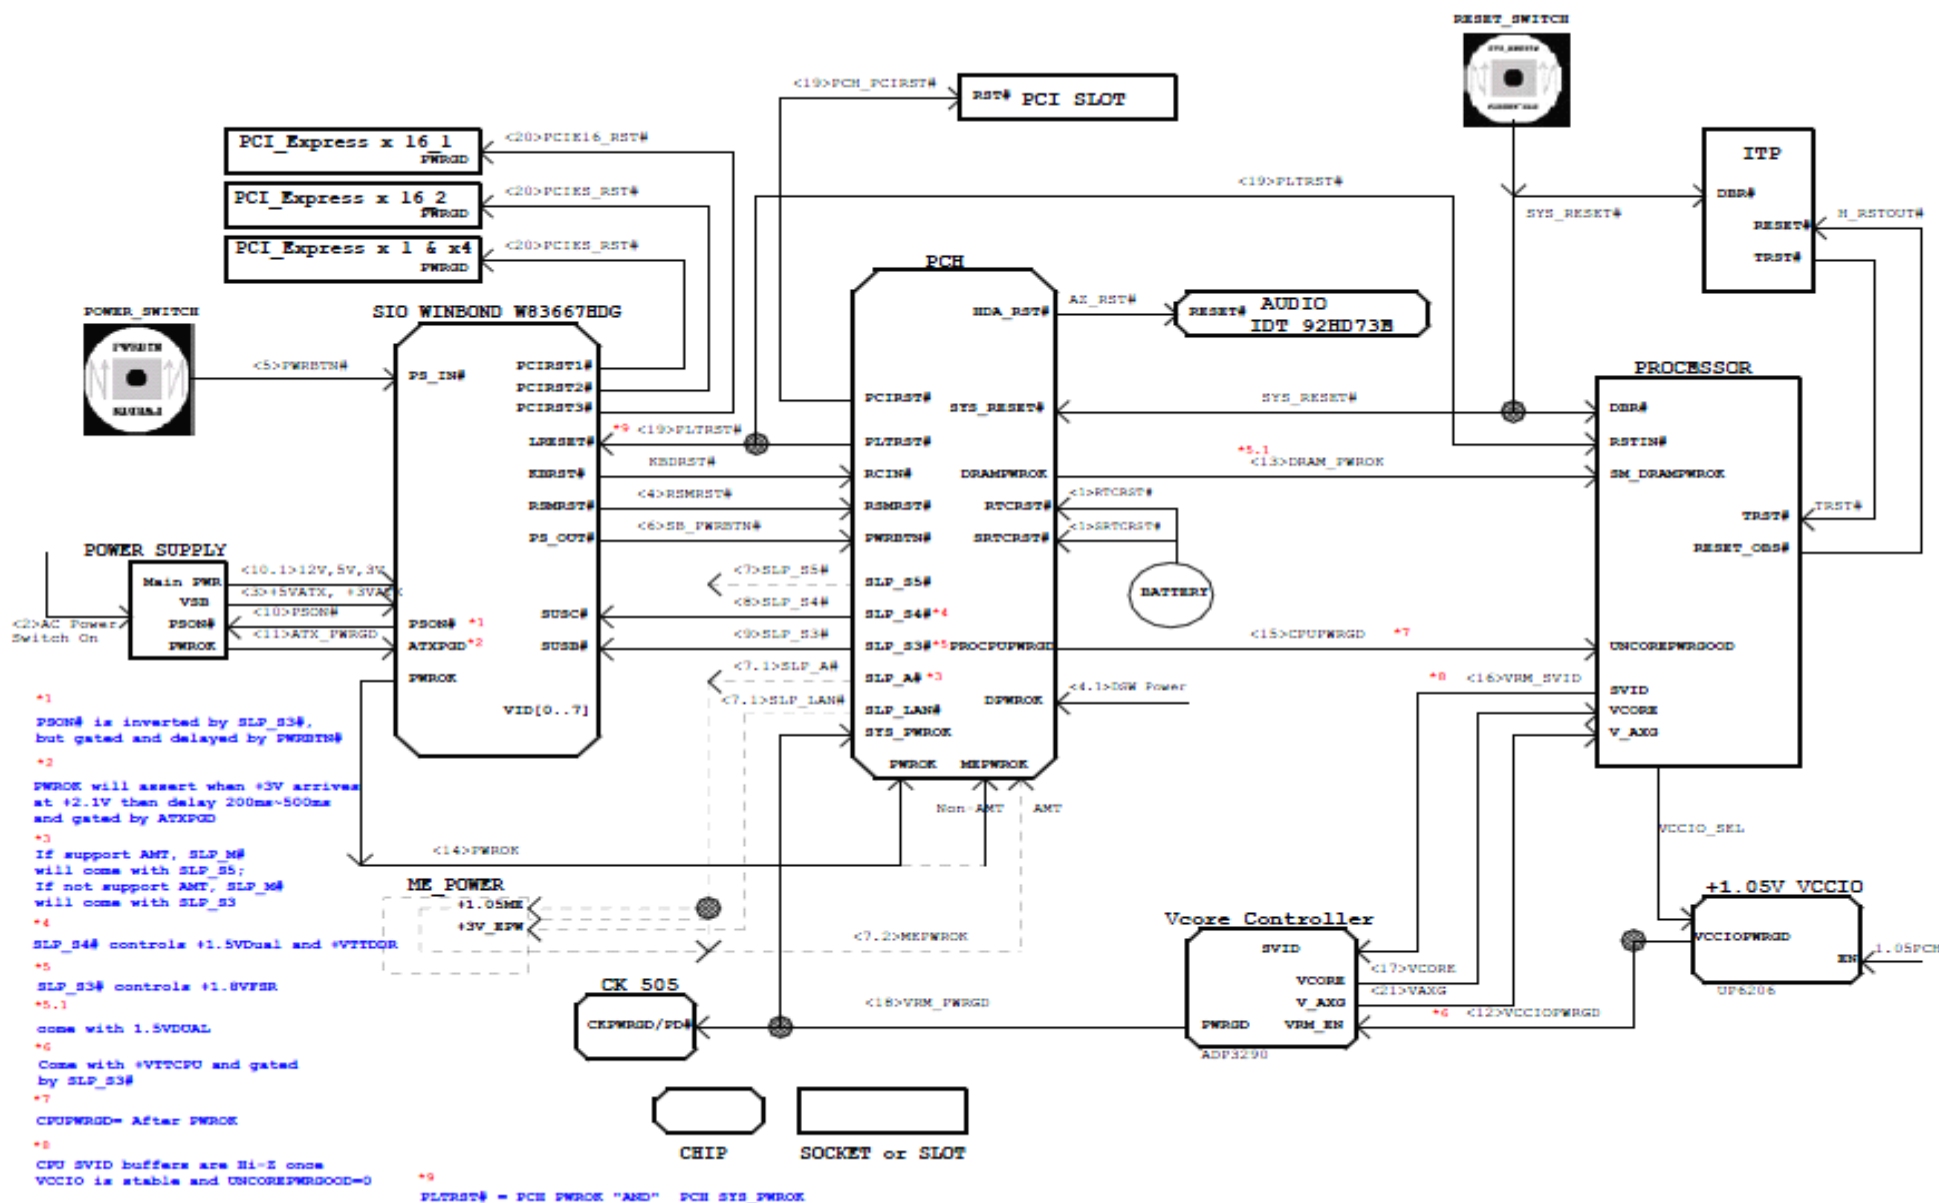

Voltage & Signal Measure Point

