


U53F Repair Guide

2018/03/16
Janmouss_chang
CSC-GRMA

BLOCK DIAGRAM

U53F SCHEMATIC Revision 2.0

PAGE	Content
1	Block Diagram
2	System Setting
3	CPU(1) DMI, PEG, FDI, CLK, MISC
4	CPU(2) DDR3
5	CPU(3) CFG, RSVD, GND
6	CPU(4) FWR
7	CPU(5) XDP
16	DDR3 20-DIMM 0
17	DDR3 20-DIMM 1
18	DDR3 CA_DQ VOLTAGE
19	VID controller
20	PCH_IBEX(1) SATA, INDA, RTC, LFC
21	PCH_IBEX(2) PCIe, CLM, GND, PEG
22	PCH_IBEX(3) FDI, DMI, SYS PMR
23	PCH_IBEX(4) DP, LVDS, CRT
24	PCH_IBEX(5) PCI, NVDRAM, USB
25	PCH_IBEX(6) CPU, GPIO, MISC
26	PCH_IBEX(7) POWER, GND
27	PCH_IBEX(8) POWER, GND
28	PCH_SP2 ROM, OTH
29	CLK_IC89LP8362
30	EC_IT8541(1/2)
31	EC_IT8541(2/2) KB, TP
32	RST Reset Circuit
33	Hybrid Switch
35	CODEC-ALC269
39	AUDIO HEADSET JACK
40	CardReader AUG433
44	BUS Debug
45	CRT_LCD Panel
46	CRT D-Sub
48	HEMT
50	FAN Fan & Sensor
51	XDD HDD & CDD
52	USB USB Port *2
56	LED /Power bottom/Exp board
57	DSB Discharge
60	DC DC & BATT Conn.
61	BT Bluetooth
65	ME Conn & Skew Mole
67	BtoB Connector
70	VGA_nVIDIA_N11M_40nm PCIe
71	VGA_nVIDIA_N11M_40nm FS
72	VGA_nVIDIA_N11M_40nm DDR3
73	VGA_nVIDIA_N11M_40nm Display
74	VGA_nVIDIA_N11M_40nm XTAL
75	VGA_nVIDIA_N11M_40nm ROM/GPIO
76	VGA_nVIDIA_N11M_40nm Power Sel
80	PW_VCORE(MAX17034)
81	PW_SYSTEM(MAX17020)
82	PW_I/O_VTT_CPU+1.1VM
83	PW_I/O_DDR & VTT+1.8VS
84	PW_I/O_3VM & ME +VM FBREG
86	PW_VDRY_CORE(MAX17028)
88	PW_CHARGER(MAX17015)
90	PW_DETECT
91	PW_LOAD_SWITCH
92	PW_PROTECT
93	PW_STDBY
94	PW_FLOWCHART

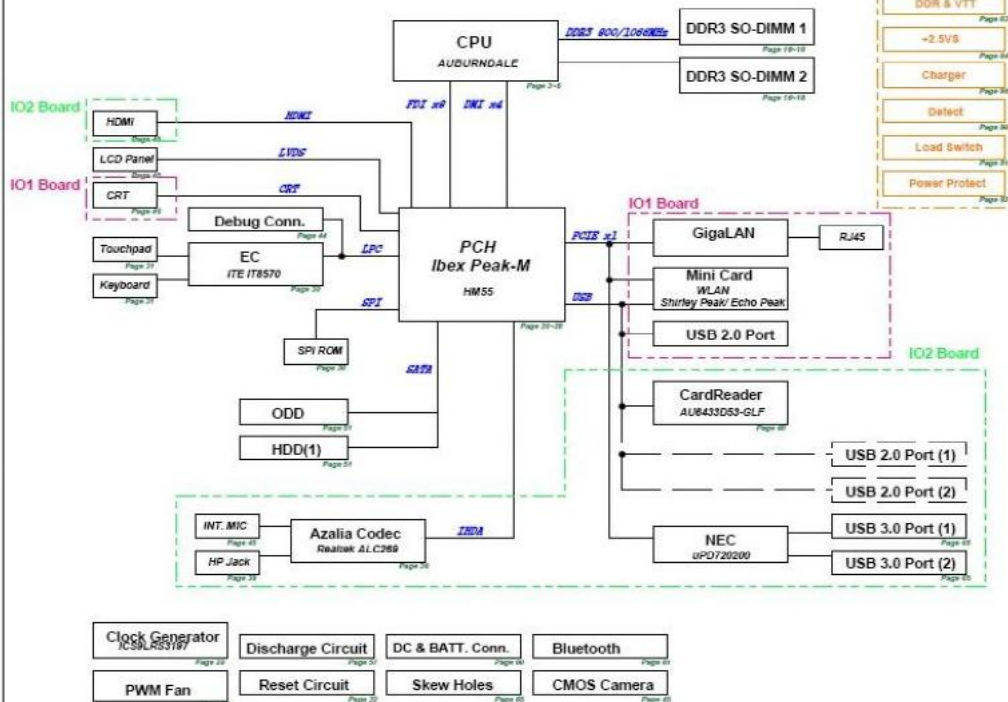


2010/03/16
Janmous_chang
CSC-GRMA

AC-IN Mode




U53F Repair Guide

2010/03/16
Janmou_chang
CSC-GRMA

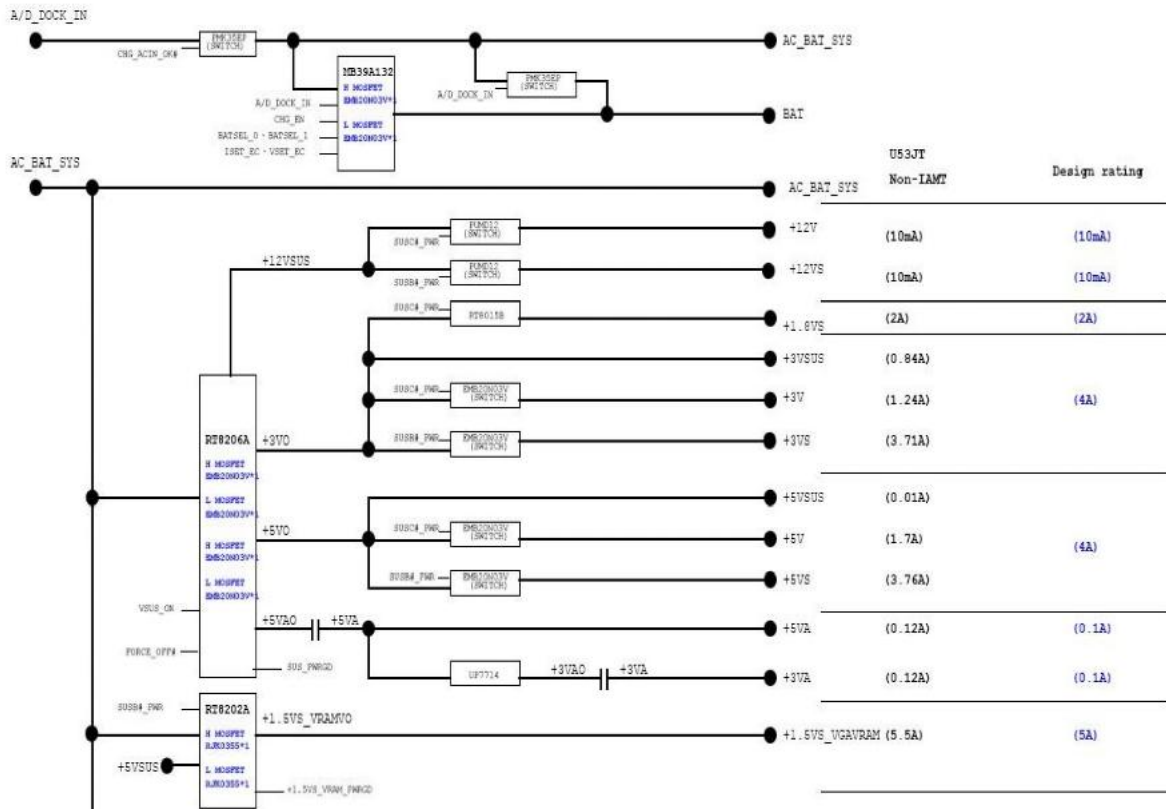


2010/03/16
Janmous_chang
CSC-GRMA

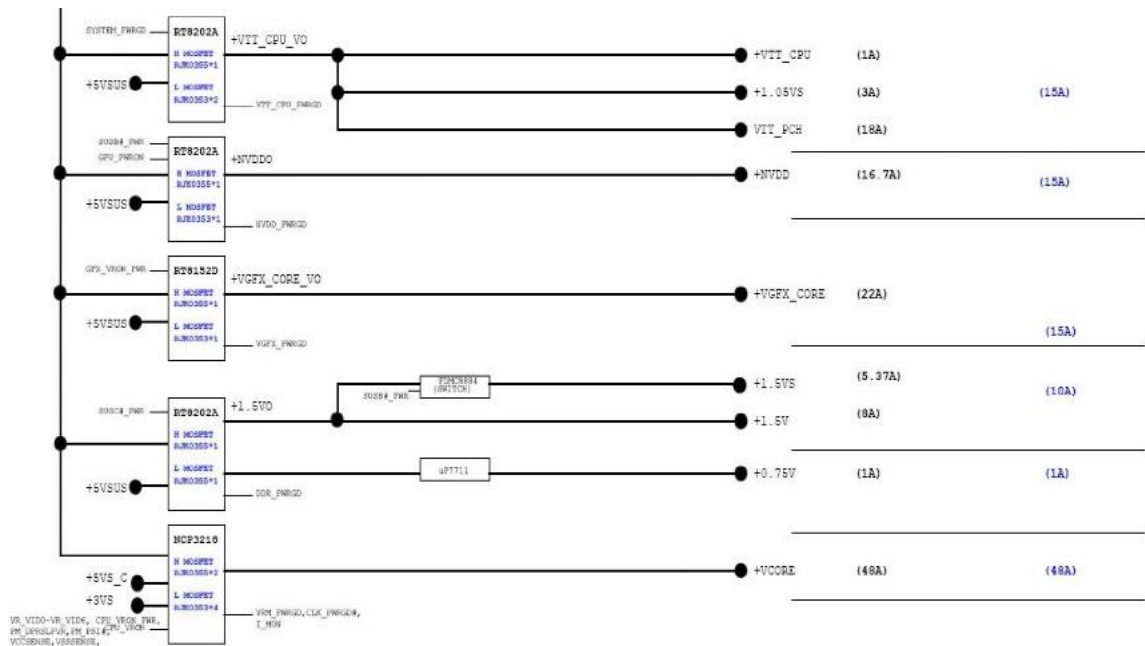

U53F Repair Guide


2010/03/16
Janmouss_chang
CSC-GRMA

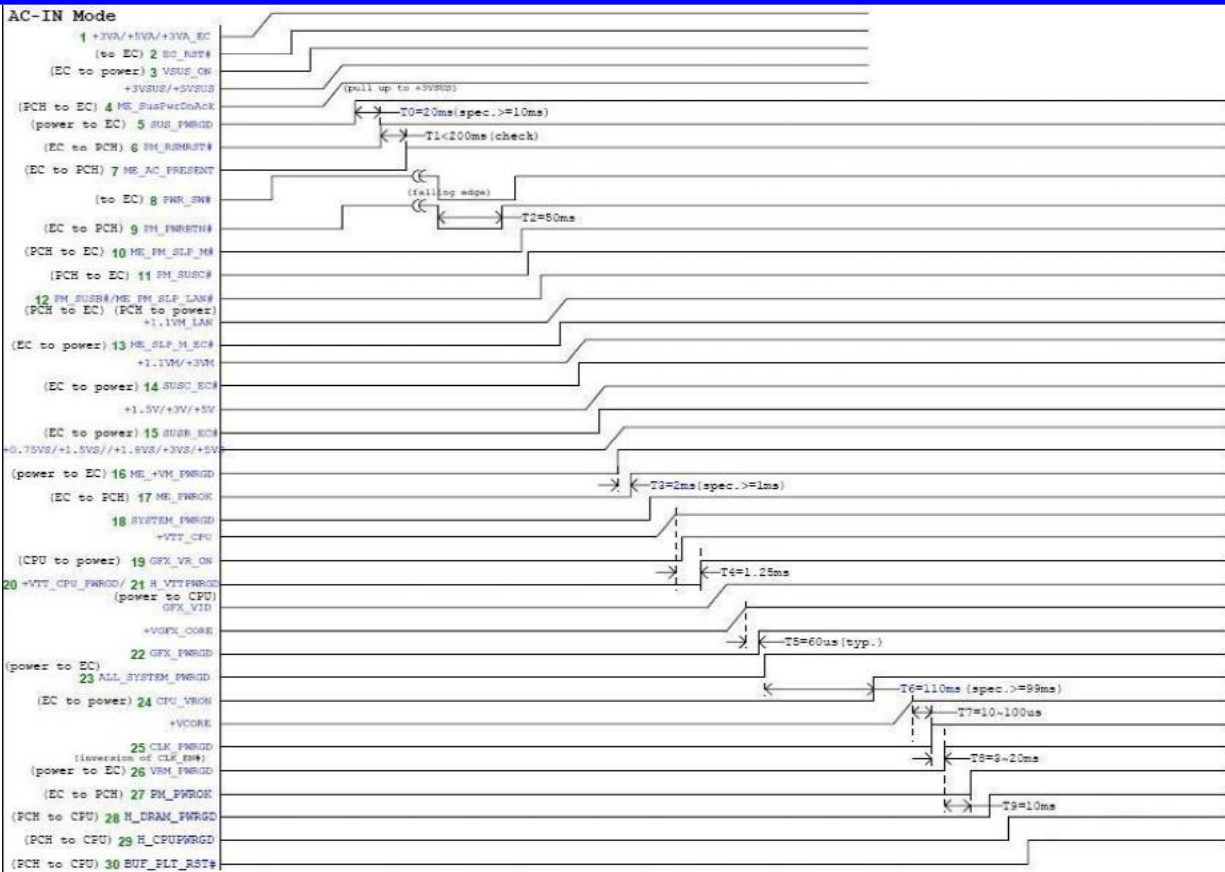

U53F Repair Guide


2010/03/16
Janmouss_chang
CSC-GRMA

DC-IN Mode

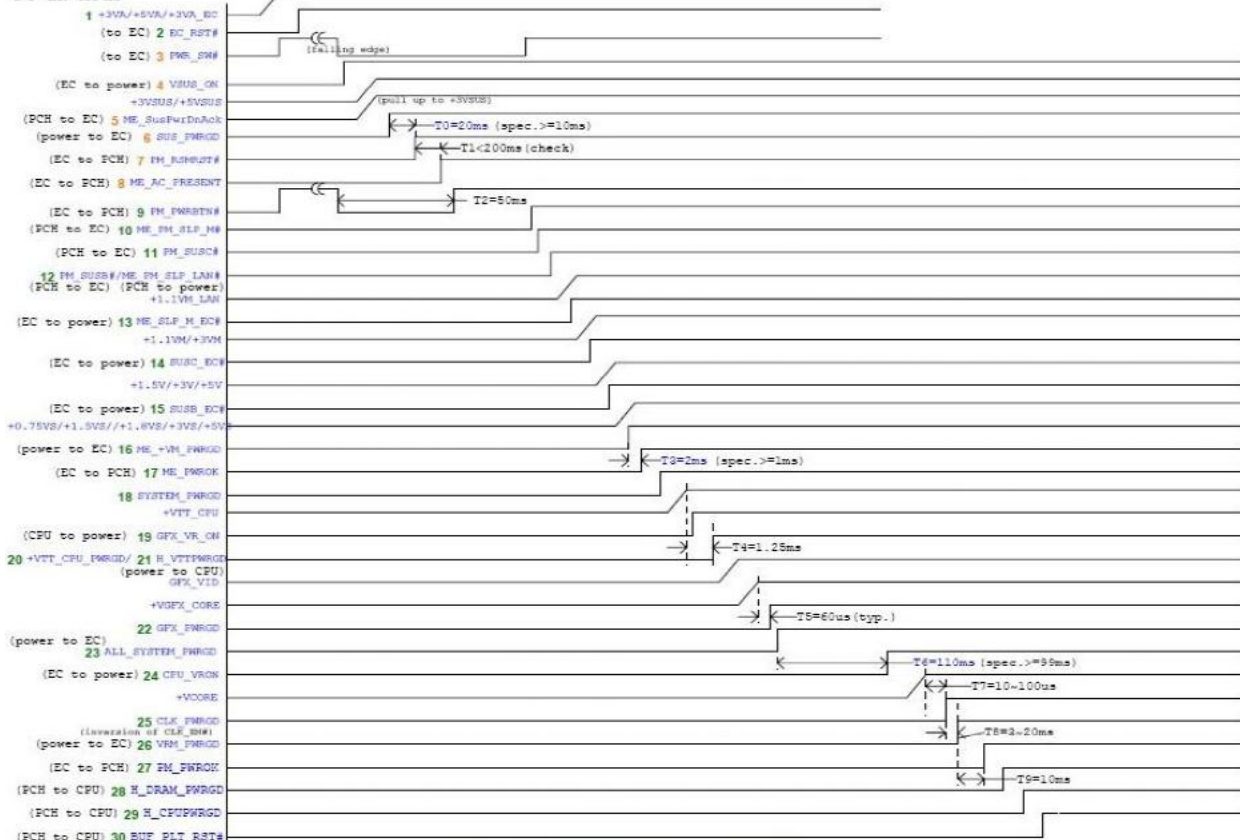

U53F Repair Guide(TOP)

2010/03/16
Janmou_chang
CSC-GRMA

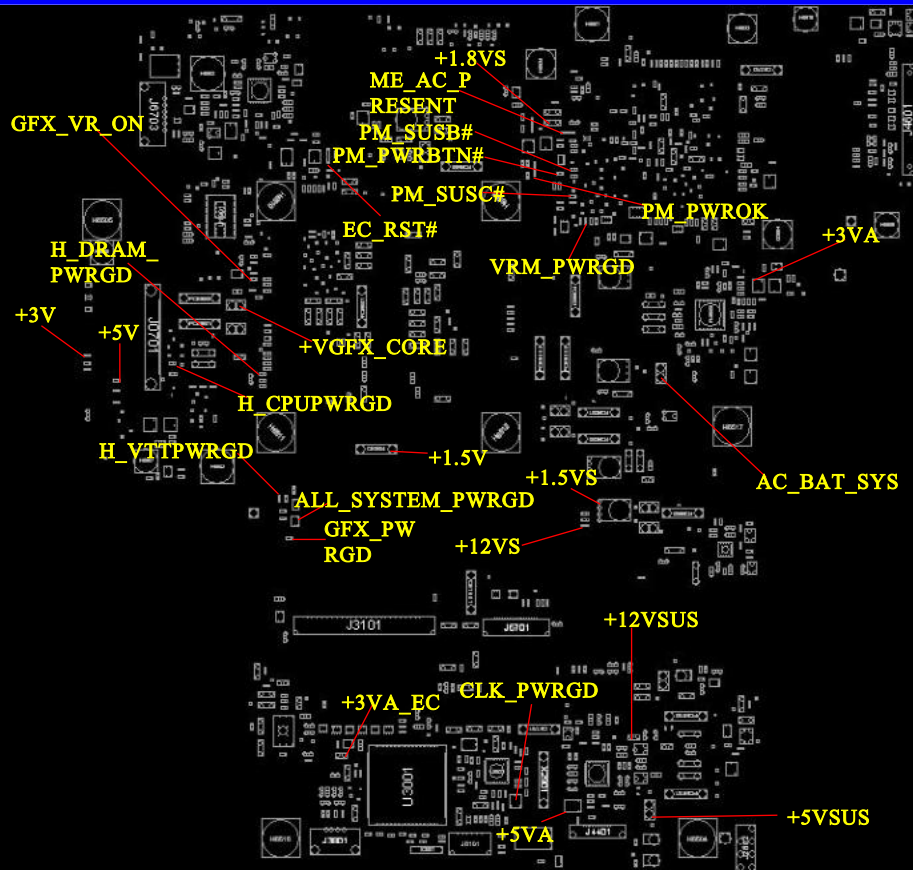

U53F Repair Guide(Bottom)

2010/03/16
Janmou_chang
CSC-GRMA

