

### 3. Disassembly and Assembly





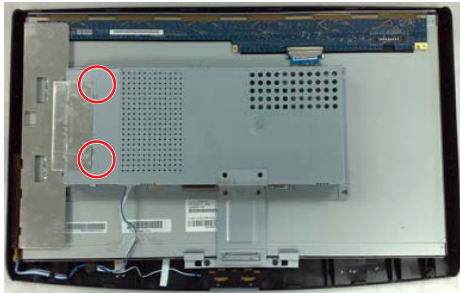
This section describes the disassembly and reassembly sequences for this monitor.

**⚠ Warning:** As this monitor has parts that are sensitive to static electricity, be careful when handling them.

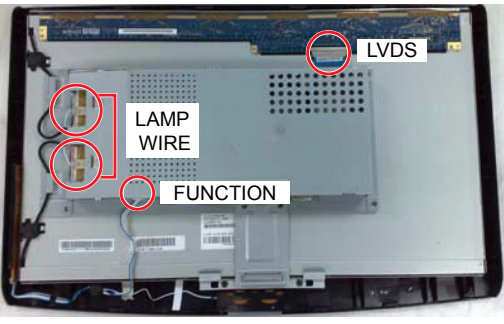


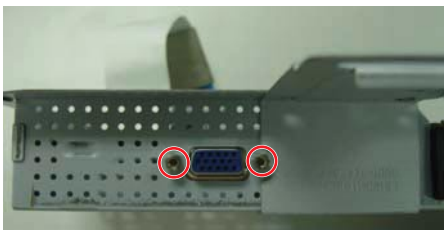

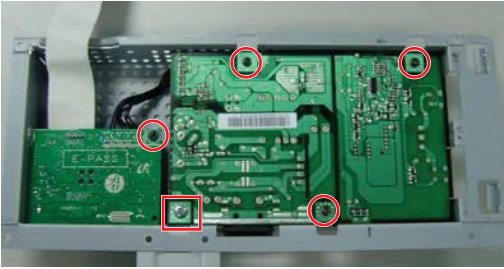
 

#### 3-1. Disassembly

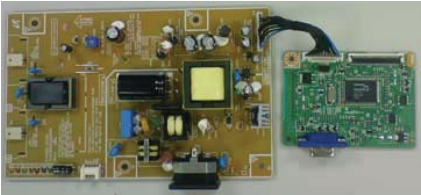
**⚠ Caution:**

1. Turn the monitor off before beginning the disassembly process.
2. When disassembling the monitor, do not use any metal tools except for the provided jig.
3. Disassemble the monitor carefully as directed in the following procedures.

Description	Photo	Screws
1. Remove the stand body and then remove the two (2) screws shown in the figure.		
2. ① Turn the monitor over and insert your hands into the top of the monitor at the center and separate the front cover in the direction of the arrow as shown in the figure.  ② Separate the sides of the front cover up to the directed line as shown in the figure.		
3. Turn the monitor over again to remove the back cover.		
4. Remove the SHIELD-LAMP using the provided JIG.  <b>⚠ Caution:</b> The SHIELD-LAMP is sharp.		

### 3. Disassembly and Assembly

Description	Photo	Screws
<p>5. Remove the LVDS, LAMP wire, FUNCTION cable, and then remove the SHIELD-COVER.</p>		
<p>6. Remove the LCD panel.</p>		
<p>7. Get Panel out of cabinet before disassembly knob-function .</p>		
<p>8. Remove the two(2) screws shown in the figure.</p>		
<p>9. Remove the five(5) screws shown in the figure and remove the Bracket support.</p>		 

Description	Photo	Screws
10. Remove the main PCB and IP boards from the SHIELD-cover.		

※ The assembly is in the reverse order of disassembly.

**Memo**

---