

**Toshiba Personal Computer  
PORTEGE R830 Satellite R830  
Maintenance Manual**

**First edition January 2011**

**TOSHIBA CORPORATION**

**File Number 960-880**

*[CONFIDENTIAL]*

## **Copyright**

© 2011 by Toshiba Corporation. All rights reserved. Under the copyright laws, this manual cannot be reproduced in any form without the prior written permission of Toshiba. No patent liability is assumed with respect to the use of the information contained herein.

Toshiba Personal Computers satellite PORTEGE R830 Satellite R830 Series Maintenance Manual

First edition January 2011

## **Disclaimer**

The information presented in this manual has been reviewed and validated for accuracy. The included set of instructions and descriptions are accurate for the PORTEGE R830 Satellite R830 Series at the time of this manual's production. However, succeeding computers and manuals are subject to change without notice. Therefore, Toshiba assumes no liability for damages incurred directly or indirectly from errors, omissions, or discrepancies between any succeeding product and this manual.

## **Trademarks**

IBM is a registered trademark and IBM PC is a trademark of International Business Machines Corporation.

Intel, Intel SpeedStep, Intel Core, Celeron and Centrino are trademarks or registered trademarks of Intel Corporation.

Windows, Microsoft and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation.

Bluetooth is a trademark owned by its proprietor and used by TOSHIBA under license.

InterVideo and WinDVD are registered trademarks of InterVideo Inc.

Photo CD is a trademark of Eastman Kodak.

i.LINK is trademark and registered trademark of Sony Corporation.

Other trademarks and registered trademarks not listed above may be used in this manual.

---

## Preface

---

This maintenance manual describes how to perform hardware service maintenance for the Toshiba Personal Computer satellite PORTEGE R830 Satellite R830 Series Maintenance Manual (960-880) Series

The procedures described in this manual are intended to help service technicians isolate faulty Field Replaceable Units (FRUs) and replace them in the field.

### SAFETY PRECAUTIONS

Four types of messages are used in this manual to bring important information to your attention. Each of these messages will be italicized and identified as shown below.

***DANGER:*** “Danger” indicates the existence of a hazard that could result in death or serious bodily injury, if the safety instruction is not observed.

***WARNING:*** “Warning” indicates the existence of a hazard that could result in bodily injury, if the safety instruction is not observed.

***CAUTION:*** “Caution” indicates the existence of a hazard that could result in property damage, if the safety instruction is not observed.

***NOTE:*** “Note” contains general information that relates to your safe maintenance service.

Improper repair of the computer may result in safety hazards. Toshiba requires service technicians and authorized dealers or service providers to ensure the following safety precautions are adhered to strictly.

- ☐ Be sure to fasten screws securely with the right screwdriver. If a screw is not fully fastened, it could come loose, creating a danger of a short circuit, which could cause overheating, smoke or fire.
- ☐ If you replace the battery pack or RTC battery, be sure to use only the same model battery or an equivalent battery recommended by Toshiba. Installation of the wrong battery can cause the battery to explode.

The manual is divided into the following parts:

- |            |  |
|------------|--|
| Chapter 1  | Hardware Overview describes the Qosmio F60 Series system unit and each FRU.  |
| Chapter 2  | Troubleshooting Procedures explains how to diagnose and resolve FRU problems.  |
| Chapter 3  | Test and Diagnostics describes how to perform test and diagnostic operations for maintenance service.  |
| Chapter 4  | Replacement Procedures describes the removal and replacement of the FRUs.  |
| Appendices | <p>The appendices describe the following:</p> <ul style="list-style-type: none"><li><input type="checkbox"/> Handling the LCD module</li><li><input type="checkbox"/> Board layout</li><li><input type="checkbox"/> Pin assignments</li><li><input type="checkbox"/> Keyboard scan/character codes</li><li><input type="checkbox"/> Key layout</li><li><input type="checkbox"/> Wiring diagrams</li><li><input type="checkbox"/> BIOS rewrite procedures</li><li><input type="checkbox"/> EC/KBC rewrite procedures</li><li><input type="checkbox"/> Reliability</li></ul> |



## Conventions

This manual uses the following formats to describe, identify, and highlight terms and operating procedures.

### *Acronyms*

On the first appearance and whenever necessary for clarification acronyms are enclosed in parentheses following their definition. For example:

Read Only Memory (ROM)

### *Keys*

Keys are used in the text to describe many operations. The key top symbol as it appears on the keyboard is printed in **boldface** type.

### *Key operation*

Some operations require you to simultaneously use two or more keys. We identify such operations by the key top symbols separated by a plus (+) sign. For example, **Ctrl + Pause (Break)** means you must hold down **Ctrl** and at the same time press **Pause (Break)**. If three keys are used, hold down the first two and at the same time press the third.

### *User input*

Text that you are instructed to type in is shown in the boldface type below:

**DISKCOPY A: B:**

### *The display*

Text generated by the computer that appears on its display is presented in the type face below:

```
Format complete
System transferred
```

---

# Table of Contents

---

## Chapter 1 Hardware Overview

1.1	Features .....	5
1.2	System Unit Block Diagram .....	13
1.3	3.5-inch Floppy Disk Drive (USB External) .....	18
1.4	HDD&SSD .....	19
1.5	Optical Drive (ODD) .....	22
1.6	Keyboard.....	24
1.7	TFT Color Display .....	25
1.8	Power Supply .....	26
1.9	Batteries .....	28
1.10	AC Adapter .....	31

## Chapter 2 Troubleshooting Procedures

2.1	Troubleshooting .....	2-6
2.2	Troubleshooting Flowchart .....	2-8
2.3	Power Supply Troubleshooting.....	2-13
2.4	System Board Troubleshooting.....	2-22
2.5	USB FDD Troubleshooting .....	2-31
2.6	HDD/SSD Troubleshooting .....	2-35
2.7	Keyboard Troubleshooting .....	2-40
2.8	Touch pad Troubleshooting .....	2-41
2.9	Display Troubleshooting.....	2-43
2.10	Optical Disk Drive Troubleshooting.....	2-45
2.11	LAN Troubleshooting .....	2-47
2.12	Wireless LAN or Bluetooth Troubleshooting.....	2-48
2.13	Bluetooth Troubleshooting .....	2-50
2.14	Sound Troubleshooting .....	2-52
2.15	SD Card Slot Troubleshooting.....	2-54
2.16	PCI ExpressCard Slot Troubleshooting .....	2-56
2.17	Fingerprint sensor Troubleshooting.....	2-57
2.18	Web camera Troubleshooting .....	2-61
2.19	3G Troubleshooting .....	2-63
2.20	HDMI Troubleshooting .....	2-65

## Chapter 3 Tests and Diagnostics

3.1	The Diagnostic Test .....	3-7
3.2	Executing the Diagnostic Test .....	3-10
3.3	Setting of the hardware configuration .....	3-17
3.4	Heatrun Test.....	3-19
3.5	Subtest Names.....	3-20
3.6	System Test.....	3-22
3.7	Keyboard Test.....	3-25
3.8	Display Test .....	3-26
3.9	Floppy Disk Test.....	3-29
3.10	Printer Test.....	3-31
3.11	Async Test .....	3-33
3.12	Hard Disk Test .....	3-34
3.14	Real Timer Test.....	3-37
3.15	NDP Test.....	3-39
3.16	Expansion Test.....	3-40
3.17	CD-ROM/DVD-ROM Test .....	3-42
3.18	Error Code and Error Status Names.....	3-43
3.19	Hard Disk Test Detail Status .....	3-46
3.20	ONLY ONE TEST.....	3-48
3.21	Head Cleaning.....	3-60
3.22	Log Utilities .....	3-61
3.23	Running Test.....	3-63
3.24	Floppy Disk Drive Utilities.....	3-64
3.25	System Configuration .....	3-69
3.26	Wireless LAN Test Program (Atheros) .....	3-71
3.27	Wireless LAN Test Program (Intel-made a/b/g/n Setting up of REF PC).....	3-73
3.28	Wireless LAN Test Program on DUT PC (Intel-made).....	3-78
3.29	LAN/Modem/Bluetooth/IEEE1394 Test Program .....	3-82
3.30	Sound Test program.....	3-89
3.31	SETUP .....	3-90
3.32	Maintenance (WinPE&FreeDos) Test Program Operation .....	3-98

3.33	. Starting TOSHIBA Test & Diagnostic .....	3-99
3.34	. Windows PE T&D .....	3-101
3.35	DOS T&D .....	3-150
3.36	Maintenance (WinPE&FreeDos) Test Program Supplementary Information .....	3-178
3.37	Maintenance (WinPE&FreeDos) Test Program Supplementary Information .....	3-181

## Chapter 4 Replacement Procedures

4.1 Overview.....	4-
1	
4.2 Battery pack .....	4-10
4.3 SIM card .....	4-12
4.4 ExpressCard .....	4-13
4.5 Bridge media (SD, mini SD, Micro SD Card/MultiMedia Card).....	4-14
4.6 Memory module.....	4-
15	
4.7 HDD/SSD .....	4-18
4.8 Base assembly.....	4-23
4.9 ExpressCard slot .....	4-28
4.10 Battery lock.....	4-30
4.11 3G card.....	4-
31	
4.12 Optical disk drive (DVD-Super Multi drive)/SD board .....	4-37
4.13 Wireless LAN card .....	4-43
4.14 DC fan.....	4-45
4.15 E-SATA board .....	4-47
4.16 Fin .....	4-49
4.17 Bluetooth module.....	4-51
4.18 System board.....	4-53
4.19 Sound board .....	4-62
4.20 Speaker.....	4-68
4.21 DC-IN harness .....	4-71
4.22 Touch pad/Fingerprint sensor board .....	4-72

4.23 Keyboard.....	4-77
4.24 Cover assembly/LCD assembly.....	4-79
4.25 LCD.....	4-85
4.26 Camera module .....	4-93
4.27 Wireless LAN antenna/Bluetooth antenna/3G antenna .....	4-95
4.28 Hinge.....	4-118

## Appendices

Appendix A	Handling the LCD Module .....	A-1
Appendix B	Board Layout .....	B-1
Appendix C	Pin Assignments.....	C-1
Appendix D	Keyboard Scan/Character Codes .....	D-1
Appendix E	Key Layout.....	E-1
Appendix F	Wiring Diagrams.....	F-1
Appendix G	BIOS rewrite Procedures .....	G-1
Appendix H	EC/KBC rewrite Procedures .....	H-1
Appendix I	Reliability.....	I-1

---

# **Chapter 1**

# **Hardware Overview**

---





---

## Chapter 1 Contents

---

<b>Chapter 1 Hardware Overview .....</b>	<b>1</b>
1.1 Features .....	5
1.2 System Unit Block Diagram .....	13
1.3 3.5-inch Floppy Disk Drive (USB External) .....	18
1.4 HDD&SSD .....	19
1.4.1 2.5-inch SATA HDD.....	19
1.4.2 SATA SSD .....	21
1.5 Optical Drive (ODD) .....	22
1.5.1 DVD-Super Multi Drive.....	22
1.6 Keyboard.....	24
1.7 TFT Color Display .....	25
1.7.1 LCD Module.....	25
1.8 Power Supply .....	26
1.9 Batteries .....	28
1.9.1 Main Battery.....	28
1.9.2 Battery Charging Control .....	29
1.9.3 RTC battery .....	30
1.10 AC Adapter .....	31

## Figures

Figure 1-1 Front of the computer.....	11
Figure 1-2 System unit configurations.....	12
Figure 1-3 System unit block diagram.....	13
Figure 1-4 3.5-inch FDD (USB External).....	18
Figure 1-5 2.5-inch SATA HDD .....	19
Figure 1- 6 Keyboard.....	24
Figure 1- 7 LCD module.....	25

## Tables

Table 1-1 3.5-inch FDD specifications.....	18
Table 1-2 2.5-inch SATA HDD specifications (HGST).....	19
Table 1-3 2.5-inch HDD specifications (TSDC) .....	20
Table 1-4 1.8-inch Solid State Drive (SSD) specifications .....	21
Table 1-5 DVD Super Multi drive (Double Layer) specifications .....	22
Table 1-7 LCD module specifications .....	25
Table 1-8 Power supply output rating.....	27
Table 1-9 Battery specifications .....	28
Table 1-10 Time required for charges .....	29
Table 1-11 Data preservation time.....	30
Table 1-12 RTC battery charging/data preservation time .....	30
Table 1-13 AC adapter specifications.....	31

## 1.1 Features

The Toshiba PORTEGE R830 Satellite R830 *Series* Personal Computer uses extensive Large Scale Integration (LSI), and Complementary Metal-Oxide Semiconductor (CMOS) technology extensively to provide compact size, minimum weight, low power usage and high reliability. This computer incorporates the following features.

There some models and options. Refer to the Parts List for the configuration of each model and options.

### ❑ Microprocessor

The Toshiba PORTEGE R830 Satellite R830 Series computer is equipped with an Intel® Processor.

The PC comes in with one of the following speeds:

Intel (Sanday Bridge DC 2+2 SV BGA )

Core Frequency	System Bus Frequency	L2 Cache Size	Turbo	number of cores / number of threads
2.7GHz Core i7-2620M (BGA)	1333MHz	4MB	3.4 GHz	2/4
2.5GHz Core i5-2520M (BGA)	1333MHz	3MB	3.2 GHz	2/4
2.3GHz Core i5-2410M (BGA)	1333MHz	3MB	2.9GHz	2/4
2.1GHz Core i3-2310M (BGA)	1333MHz	3MB	-	2/4

### ❑ Memory

Two DDR3-1333 SDRAM slots. Memory modules can be installed to provide a maximum of 8GB. Memory modules are available in 1024MB, 2048MB and 4096MB sizes.

☐ Chipset

Toshiba PORTEGE R830 Satellite R830 *Series* computer is Equipped with Intel Cougar Point QM67 (AMT model) or HM65 (Non-AMT model).

☐ VGA Controller

The PC comes in with one of the following types:

- The internal graphics controller in Intel Processor (Core i\*) is used.

☐ HDD

The computer has a 2.5-inch SATA HDD. The following capacities are available.

- 250GB/320/500/640 GB

☐ SSD

Some models are equipped with a "Solid State Drive (SSD)" instead of a hard disk drive.

2.5"SATA SSD type

- 256GB/512GB

1.8"SATA SSD type

- 128GB

☐ USB FDD

A 3.5-inch USB FDD accommodates 2HD (1.44MB) or 2DD (720KB) disks.

☐ Optical Drive

A DVD Super Multi drive (double layer) can be installed.

They are 7mm thickness or 9.5mm thickness by a model.

❑ Display

The PC comes in with one of the following types:

33.8cm (13.3") LCD screen, 16 million colors, configured with the following resolution:

- HD, 1366 horizontal x 768 vertical pixels

Interface

To external monitor via - RGB connector and HDMI connector

❑ Keyboard

An-easy-to-use 85(US)/87(UK)-key keyboard provides a numeric keypad overlay for fast numeric data entry or for cursor and page control. The keyboard also includes two keys that have special functions in Microsoft® Windows® 7. It supports software that uses a 101- or 102-key enhanced keyboard.

❑ Touch Pad

A Touch Pad and control buttons in the palm rest enable control of the on-screen pointer and scrolling of windows.

❑ Batteries

The computer has two batteries: a rechargeable Lithium-Ion main battery pack and RTC battery (that backs up the Real Time Clock and CMOS memory).

❑ Universal Serial Bus (USB2.0)

One Universal Serial Bus ports, which comply to the USB 2.0 standard, are provided on the right hand side of the computer.

❑ Universal Serial Bus(USB 2.0 or 3.0) port

One Universal Serial Bus port, which complies to the USB 2.0 or 3.0 standard, is provided on the left side of the computer.

The USB port type may vary depending on the model you purchased. The Port with blue color is USB 3.0 port.

The USB 2.0 port is compliant with USB 2.0 standard and not compatible with USB 3.0 devices.

The USB 3.0 port is compliant with USB 3.0 standard and backward compatible with USB 2.0 devices.

### ☐ eSATA/USB combo

One eSATA/USB combo port, which complies to the USB 2.0 standard, is provided on the left hand side of the computer. This port has eSATA (External Serial ATA) function. Some models are equipped with an eSATA/USB combo port.  
A Charge power supply (When a computer is power-on or sleep).

### ☐ External monitor (RGB) port

This port provides 15-pin, analog VGA port. This port allows you to connect an external monitor to the computer.

### ☐ HDMI out port

HDMI out port can connect with Type A connector HDMI cable. HDMI cable can send video and audio signals.

### ☐ SD Media slot

This slot lets you insert an SD<sup>TM</sup>/SDHC<sup>TM</sup> memory card, miniSD<sup>TM</sup>/microSD<sup>TM</sup> Card, and MultiMediaCard

### ☐ ExpressCard slot(Some models)

This slot allows you to install a single ExpressCard device.

### ☐ PC Card slot(Some models)

This slot allows you to install a single PC Card device.

### ☐ Smart Card slot(Some models)

This slot allows you to install a smart card device.  
Some models are equipped with a Smart Card slot.

### ☐ Fingerprint sensor(Some models)

The computer is equipped with a fingerprint sensor and fingerprint authentication utility. They enable only person who has registered his/her fingerprint to use the computer.

#### ☐ Sound system

The sound system is equipped with the following features:

- Stereo speakers
- Built-in microphone
- Stereo headphone jack
- External microphone jack
- External Headphone jack

#### ☐ Docking interface port

The docking interface port enables connection of an optional TOSHIBA Hi-Speed Port Replicators II . It provides additional features as follows:

- RJ45 LAN jack
- External monitor port
- DC IN 19V jack
- Security lock slot
- Universal Serial Bus 2.0 port (four)
- Universal Serial Bus 3.0 port (two)
- Serial port
- HDMI out port (some models are equipped with a HDMI out port)
- Microphone jack
- Line out (Headphones, Speakers)

#### ☐ Internal LAN

The computer has built-in support for Ethernet LAN (10 megabits per second, 10BASE-T), Fast Ethernet LAN (100 megabits per second, 100BASE-TX) and Gigabit Ethernet LAN (1000 megabits per second, 1000BASE-T).

#### ☐ Wireless LAN

Some computers in this series are equipped with a Wireless LAN module that is compatible with other LAN systems based on Direct Sequence Spread Spectrum/Orthogonal Frequency Division Multiplexing radio technology that complies with the IEEE 802.11 Standard.

### ☐ Bluetooth

Some computers in this series have Bluetooth wireless communication function which eliminates the need for cables between electronic devices such as computers, printers and mobile phones. When it is enabled, Bluetooth provides the wireless personal area network environment which is safe and trustworthy, that is quick and easy.


### ☐ Web Camera

Web Camera is a device that allows you to record video or take photographs with your computer. You can use it for video chatting or video conferences using a communication tool such as Windows Live Messenger. TOSHIBA Web Camera Application will help you to add various video effects to your video or photograph.

### ☐ 3G

Some computers in this series are equipped with a 3G module.



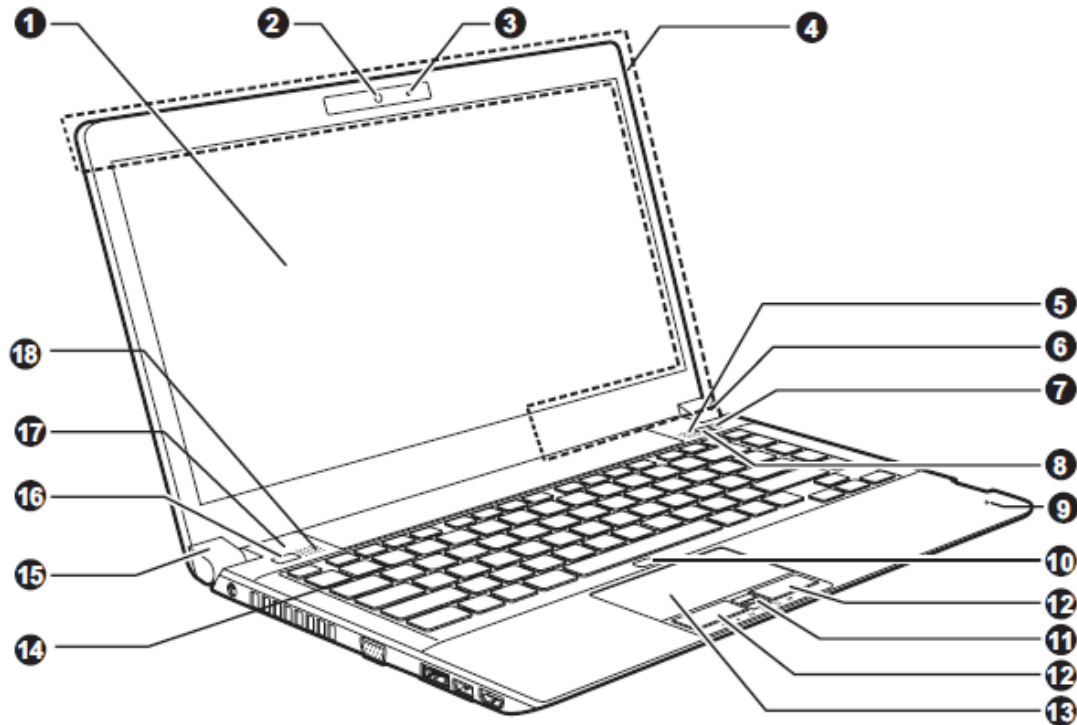

- |  |                                   |
|--|-----------------------------------|
| 1. Display screen  | 10. Touch Pad ON/OFF button       |
| 2. Web Camera*   | 11. Fingerprint Sensor*           |
| 3. Web Camera LED*   | 12. Touch Pad control buttons     |
| 4. Bluetooth antenna, Wireless LAN antennas,<br>Wireless WAN antennas (not shown)* | 13. Touch Pad                     |
| 5. Stereo speaker  | 14. Keyboard                      |
| 6. Display hinge   | 15. Display hinge                 |
| 7. TOSHIBA Presentation button   | 16. Power button                  |
| 8. TOSHIBA eco button  | 17. LCD Sensor switch (not shown) |
| 9. Microphone  | 18. Stereo speaker                |

\* Provided with some models.

Product appearance depends on the model you purchased.

Figure 1-1 Front of the computer

The system unit configuration is shown in figure 1-2

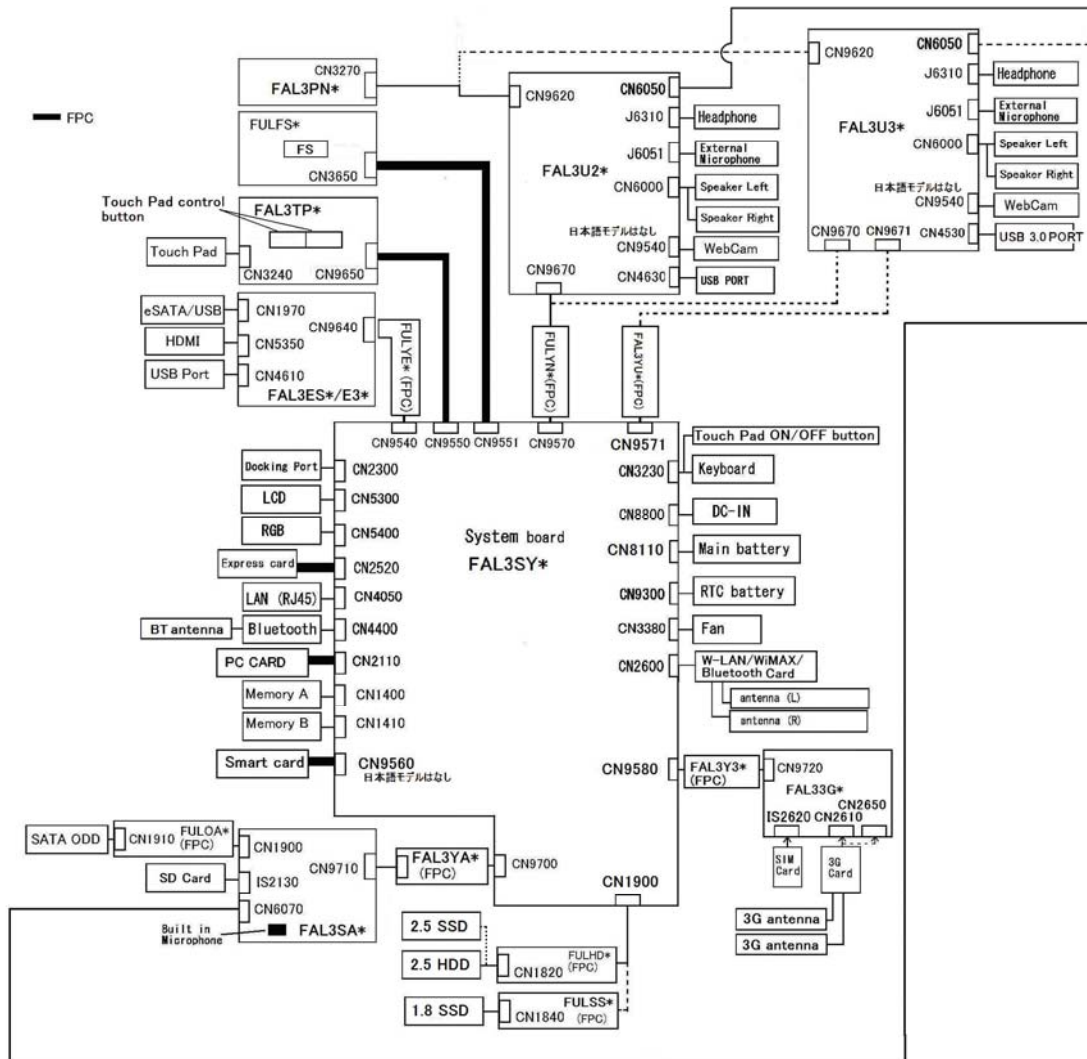


Figure 1-2 System unit configurations

## 1.2 System Unit Block Diagram

Figure 1-3 is a block diagram of the system unit.

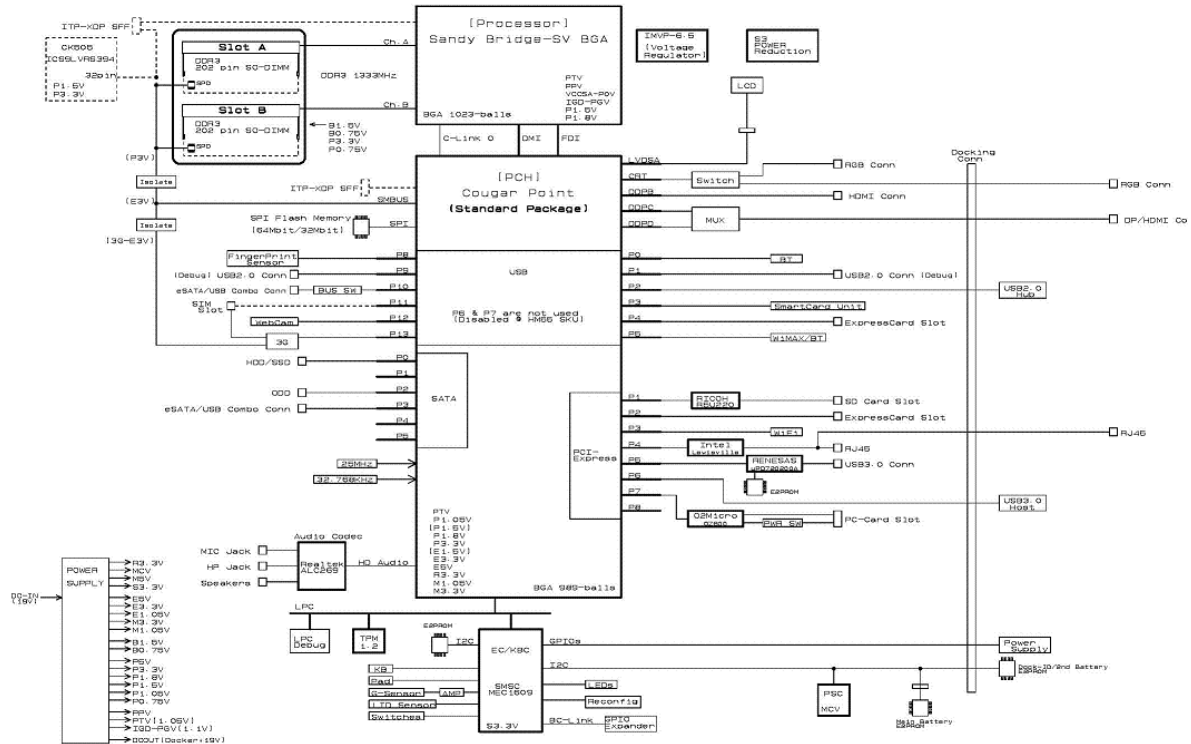


Figure 1-3 System unit block diagram

The system unit is composed of the following major components:

### ❑ Microprocessor

The Toshiba PORTEGE R830 Satellite R830 Series computer is equipped with an Intel® Processor.

The PC comes in with one of the following speeds:

Intel (Sanday Bridge DC 2+2 SV BGA )

Core Frequency	System Bus Frequency	L2 Cache Size	Turbo	number of cores / number of threads
2.7GHz Core i7-2620M (BGA)	1333MHz	4MB	3.4 GHz	2/4
2.5GHz Core i5-2520M (BGA)	1333MHz	3MB	3.2 GHz	2/4
2.3GHz Core i5-2410M (BGA)	1333MHz	3MB	2.9GHz	2/4
2.1GHz Core i3-2310M (BGA)	1333MHz	3MB	-	2/4

### ❑ Memory

Two DDR3-1333 SDRAM slots. Memory modules can be installed to provide a maximum of 8GB. Memory modules are available in 1024MB, 2048MB and 4096MB sizes.

- 204-pin slot
- DDR3-1333 support

❑ Chipset

(1)HM65 (Non-AMT)

(2)QM67 (AMT)

- 989-ball 25×25mm FCBGA Package

❑ VGA Controller

The PC comes in with one of the following types:

- The internal graphics controller in Intel Processor (Core i\*) is used..

❑ LAN Controller

This controller has the following functions:

- Support only a Gigabit Ethernet.
- RJ45x1 port (with LED), docking connector (branch) 1 port.
- WOL support (from S3, S4, and S5)
- LAN controller  
Made in Intel Lewisville (WG82579V/LM(AMT)): PCI-Ex Connection
- AMT6.0 support (BTO correspondence)

❑ Wireless LAN

- One PCI Express Mini Card slot1

Atheros 802.11(b/g)13ch-HB195 MOW-HMC

Atheros 802.11(a/g/n)13ch-HB116 MOW-HMC

Atheros 802.11(b/g/n)13ch-HB125 MOW-HMC

Atheros 802.11(b/g/n)WB195-HMC w/ BT V3.0+HS

Atheros 802.11(b/g)WB195-HMC w/ BT V3.0+HS

Intel 802.11(b/g/n)13ch-CP 1x2 MOW-HMC

Intel a/b/n(2x2) RP2 MOW-HMC w/ BT V3.0+EDR

Intel a/g/n(2x2) TP MOW-HMC

Intel 802.16e(a/g/n)13ch+WiMAX-KP 2x2 MOW-HMC(BestBuy)

Intel 802.16e(b/g/n)WiMAX KelseyPeak

- WOWL support (only Intel module)

☐ Bluetooth

- V2.1 +EDR Module with a External antenna
- USB I/F connection

☐ Express Card slot

- ExpressCard/34 x1、USB/PCI Express I/F
- 

☐ SD Media Controller slot

- Card slotx1
- SD, mini SD (w/ adapter),Micro SD (w/adapter),xD, MMC
- SD Token KEY, SD boot correspondence
- SD IO is No-supporting.
- Controller : RICOH R5U220-QFN48P

☐ Sound Controller

- PCH built-in HD Audio Link (Intel High Definition Audio I/F)+RealTek ALC269-VR5-GR
- Amplifier:Realtek ( ALC269Q-VB5-GR ) Codec
- Built-in microphone :
- Built-in speaker: Stereo
- External monophonic microphone input plug
- Stereo headphone jack
- Digital volume (button type)

☐ Camera

- It is BTO correspondence by the built-in microphone and a set.
- Connection interface: USB I/F connection
- Product made from Liteon
- Resolution :VGA

☐ Other chips

- Clock generator: ICS9LVRS394CKLFT (Made by Integrated Device Technology)
- EC/KBC: MEC1609-PZP(REVISION.D) (Made by standard micro system)
- GPIO Expander: ECE1088-DZK (Made by standard micro system)
- PSC: TMP86FS49BUG (made by Toshiba)
- TPM: SLB9635 TT 1.2FW3.17 (made by Infineon)


❑ Sensor

- Temperature reset IC : 105-degree-C type
- Thermistor: Four places (CPU, Memory, for normal temperature measurement, 3G)
- Magneto metric sensor :  
Use it as a LCD opening-and-closing sensor (ferrite magneto system).
- Acceleration sensor : Made by ST Microelectronics  
TSH35TR (Three axes)  
HDD protection
- Fingerprint sensor : Made by Authen Tec.  
It mounts between the Touchpad buttons.

### 1.3 3.5-inch Floppy Disk Drive (USB External)

The 3.5-inch FDD is a thin, high-performance reliable drive that supports 720KB (formatted) 2DD and 1.44MB (formatted) 2HD disks.

The FDD is shown in figure 1-4. The specifications for the FDD are listed in Table 1-1.

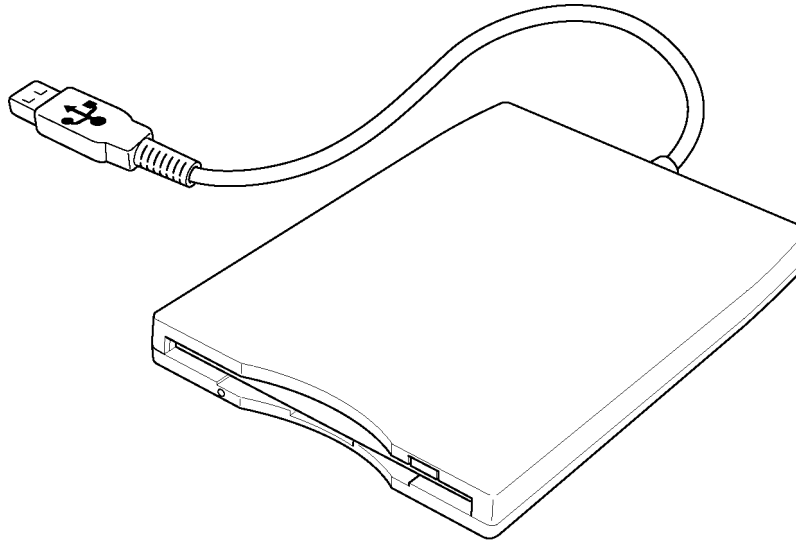

*Figure 1-4 3.5-inch FDD (USB External)*

*Table 1-1 3.5-inch FDD specifications*

Items		TEAC FD-05PUB-337 (G8AC0000B320)	
		720KB mode	1.44MB mode
Data transfer rate	FDD part	250K bits/second	500K bits/second
	USB	Full speed mode (12M bits/second)	
Disk rotation speed		300rpm	
Track density		5.3 track/mm (135TPI)	



## 1.4 HDD&SSD

### 1.4.1 2.5-inch SATA HDD

The removable SATA HDD is a random access non-volatile storage device. It has a non-removable 2.5-inch magnetic disk and mini-Winchester type magnetic heads.

The computer supports a 250GB, 320GB, 500GB or 640GB.

The SATA HDD is shown in figure 1-5. Specifications are listed in Table 1-2.and Table 1-3.

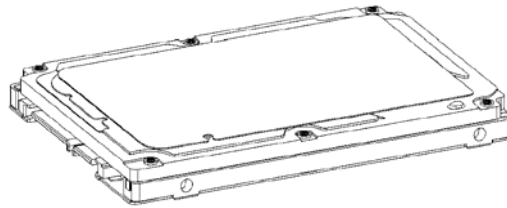


Figure 1-5 2.5-inch SATA HDD

Table 1-2 2.5-inch SATA HDD specifications (HGST)

Items		Specifications					
		HGST					
		G8BC0007J2 51	G8BC0007J 321	G8BC000 7Q500	G8BC0007Q 640	G8BC0006U500	G8BC0007L320
Outline Dimensions	Width (mm)	100.2±0.25					
	Height (mm)	6.8±0.2		9.5±0.2		6.8±0.2	
	Depth (mm)	69.85±0.25					
	Weight (g)	95 max		~/102 max		115 max	-
Storage size (formatted)		250GB	320GB	500GB	640GB	500GB	320GB
Speed (RPM)		5,400				7,200	
Data transfer rate Disk-buffer to/from media(Mbps)		994		~/875		1245	1334
Buffer-host data transfer (Ggit/sec)		3.0/1.5 max.					
		3.0 max.					
Data buffer size		8 MB/s				16MB/s	

Positioning Time(read and seek time)	Read: 13ms	Read: 12ms
Motor startup time (s)	3.5	4.0

Table 1-3 2.5-inch HDD specifications (TSDC)

Items		Specifications			
		TSDC			
		G8BC0007R250	G8BC0007R320	G8BC0007R500	G8BC0007R640
Outline Dimensions	Width (mm)	100.0			
	Height (mm)	9.5			
	Depth (mm)	69.85			
	Weight (g)	97 typ		101 typ	
Storage size (formatted)		250GB	320GB	500GB	640GB
Speed (RPM)		5,400			
Internal transfer speed (Mb/s)		464-1148 typ			
Host transfer rate (Gbit/sec)		3			
Data buffer size (MB/s)		8			
Positioning Time(read and seek time)		Read: 12ms			
Motor startup time (s)		3.5			

### 1.4.2 SATA SSD

Some models are equipped with a "Solid State Drive (SSD)" instead of a hard disk drive.

The computer supports a 128GB, 256GB and 512GB.

The specifications of SSD are listed by the table 1-4.

*Table 1-4 1.8-inch Solid State Drive (SSD) specifications*

Items		Specifications		
		TOSHIBA		
		1.82 SDD SATA G8BC00071100	2.5 SDD SATA G8BC00070250	2.5 SDD SATA G8BC00070510
Outline Dimensions	Width (mm)	53.60	100.0	
	Height (mm)	3.0	9.5	
	Depth (mm)	70.6	69.85	
	Weight (g)	15		
Storage size (formatted)		128GB	256GB	512GB
Data transfer speed		Host Interface : Max 300MB/s Sustained Data Read : Max 250MB/s Sustained Data Write : Max 160MB/s		

## 1.5 Optical Drive (ODD)

### 1.5.1 DVD-Super Multi Drive

The DVD Super Multi drive accommodates either 12 cm (4.72-inch) or 8 cm (3.15-inch) CD-ROM, DVD-ROM, CD-R, CD-RW, DVD-R, DVD+R, DVD-RW, DVD+RW, DVD-RAM, DVD-R DL and DVD+R DL.

The specifications are listed in Table 1-5 and Table 1-6.

#### 9.5mm SATA ODD

*Table 1-5 DVD Super Multi drive (Double Layer) specifications*

項目		仕様
		Panasonic DVD Super Multi drive (Double Layer)
		G8CC00050Z3L
Outline dimensions	Width (mm)	128 (excluding projections)
	Height (mm)	12.7 (excluding projections)
	Depth (mm)	9.5 (excluding projections)
	Mass (g)	100 g +/- 5g
Data transfer speed DVD-ROM read CD-ROM read		8 speed (maximum) 24 speed (maximum)
Data transfer speed DVD-R write DVD-R DL write DVD-RW write DVD+R write DVD+R DL write DVD+RW write DVD-RAM write CD-R write CD-RW write		8 speed (maximum) 4 speed (maximum) 6 speed (maximum) 8 speed (maximum) 4 speed (maximum) 8 speed (maximum) 5 speed (maximum) 24 speed (maximum) 16 speed (maximum, Ultra-speed media)
SATA interface		150MByte/s
Data Buffer Capacity		1MB

Access time (ms) CD-ROM DVD-ROM	150 typ. 180 typ.
Supported Disks	CD: CD-ROM (12cm, 8cm), CD-R, CD-RW DVD: DVD-ROM, DVD-R, DVD-RW, DVD-RAM, DVD+RW,DVD-R DL(Read only),DVD+R,DVD+R DL(Read only)
Supported Formats	CD: CD-DA, CD-ROM, CD-ROM XA, PHOTO CD, CD-Extra(CD+), CD-text, Video CD DVD: DVD-R, DVD-RW (Ver. 1.1, 1.2), DVD-Video, DVD+R, DVD+RW, DVD-RAM,DVD-ROM DVD-R DL(Read only, DVD+R DL(Read only

## 1.6 Keyboard

The keyboard is mounted 85(US)/87(UK) keys that consist of character key and control key, and in conformity with JIS. The keyboard is connected to membrane connector on the system board and controlled by the keyboard controller.

Figure 1-6 is a view of the keyboard.

See Appendix E about a layout of the keyboard.

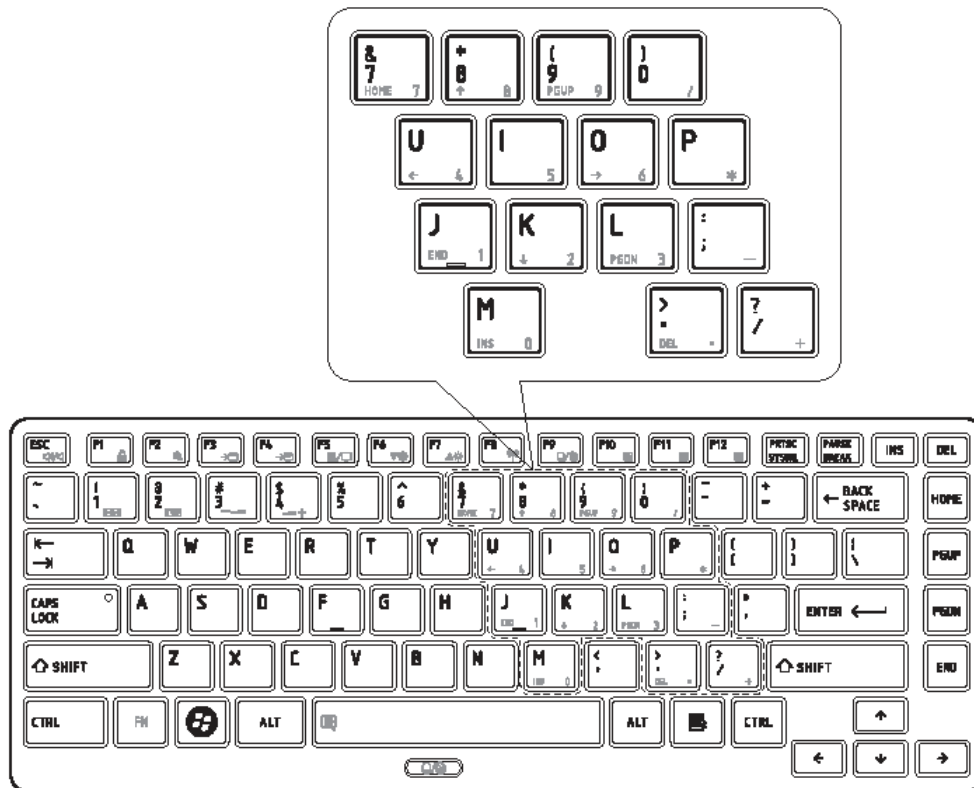


Figure 1- 6 Keyboard

## 1.7 TFT Color Display

The TFT color display consists of 14.0-inch HD /HD+ LCD module.

### 1.7.1 LCD Module

The LCD module used for the TFT color display uses a backlight as the light source and can display a maximum of 16M colors with 1,366 x 768 resolutions.

Figure 1-7 shows a view of the LCD module and Table 1-7 lists the specifications.

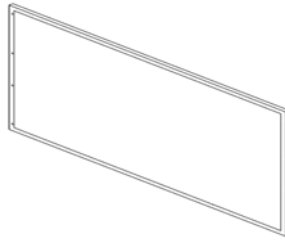


Figure 1- 7 LCD module

Table 1-6 LCD module specifications

Item	TMD (2010/10 AUO)		
	<b>13.3 HD 200 LD-LW</b> G33C00064110/ G33C0006E110	<b>13.3 HD 200 LD</b> G33C00065110/ G33C0006F110	<b>13.3 HD 200 CSV LD</b> G33C00066110/ G33C0006G110
Number of Dots	1,366 (W) x 768 (H)		
Dot pitch (mm)	0.2148(H)x0.2148(V)		
Active area (mm)	294.9(H)x166.4(V) (13.3" diagonal)		
Outline (mm)	302.06(W) x 188.77(H) x 2.06/2.4(D)	302.06(W) x 188.77(H) x 3.6/3.88(D)	

Item	LG	
	<b>13.3 HD 200 LD</b> G33C00068110	<b>13.3 HD 200 CSV LD</b> G33C00067110
Number of Dots	1,366 (W) x 768 (H)	
Dot pitch (mm)	0.2148(H)x0.2148(V)	
Active area (mm)	293.42(H)x164.97(V) (13.3" diagonal)	
Outline (mm)	306.3(W) × 177.7(H) × 3.6(D)	

## 1.8 Power Supply

The power supply supplies many different voltages to the system board and performs the following functions:

1. Judges that the DC power supply (AC adapter) is connected to the computer.
2. Detects DC output and circuit malfunctions.
3. Controls the battery icon, and DC IN icon.
4. Turns the battery charging system on and off and detects a fully charged battery.
5. Turns the power supply on and off.
6. Provides more accurate detection of a low battery.
7. Calculates the remaining battery capacity.
8. Controls the transmission of the status signal of the main battery.

The power supply output rating is specified in Table 1-8



Table 1-7 Power supply output rating

系	Voltage	ACPI state	S3 /S4/S5	S3	S3	S4/S5	S4/S5	G3	使用先 Related parts
		M state	M3	Moff	Moff	Moff	Moff		
		Wakeup	-	WOL	NO WOL	WOL	NO WOL		
		Sig. Name							
P		PPV	x	x	x	x	x	x	Processor
	0.75	VCCSA-P0V	x	x	x	x	x	x	Processor
	0.75	0R75-P0V	x	x	x	x	x	x	SO-DIMM
	1.05	PTV	x	x	x	x	x	x	Processor, PCH, ITP for Processor
	1.05	1R05-P1V	x	x	x	x	x	x	PCH, ITP for PCH
		IGD-PGV	x	x	x	x	x	x	Processor
	1.5	C1R5-P1V	x	x	x	x	x	x	Processor
	1.5	1R5-P1V	x	x	x	x	x	x	PCH, ExpressCard, eSATA Redriver
	1.8	1R8-P1V	x	x	x	x	x	x	Processor, PCH,
	3.3	P3V	x	x	x	x	x	x	SO-DIMM, PCH, SSD, PC-Card & Cont. Flash Media & Cont, Smart Card & Cont. ExpressCard, TPM, LPC Debug, Bluetooth, LCD, CRT-I/F, DP/HDMI MUX HDMI Level Shift, Finger Print Sensor Codec, Digital Mic, Web Camera
	5.0	P5V	x	x	x	x	x	x	PCH, HDD, SSD PC-Card, KB, FAN, CRT, Smart Card Cont, Codec, Touch Pad
	6.02	PDROPV	x	x	x	x	x	x	HDMI
B	0.75	MR0R75-B0V	○	○	○	x	x	x	SO-DIMM
	1.5	1R5-B1V	○	○	○	x	x	x	SO-DIMM
ME	1.05	1R05M-E1V	○/x	x	x	x	x	x	PCH
	3.3	M-E3V	○	x	x	x	x	x	PCH, SPI Flash Mem
LAN	1.05	LN1R05-E1V	○	○	x	○	x	x	LAN PHY
	3.3	LAN-E3V	○	○	x	○	x	x	LAN PHY, Dock
E	1.05	1R05-E1V	○	○	○	○	x	x	PCH, USB3.0 Host
	3.3	E3V	○	○	○	○	x	x	PCH, ITP for PCH, ExpressCard, LCD PCI-e Mini Card TPM, USB3.0 Host, USB Bus SW
	5.0	E5V	○	○	○	○	x	x	PCH, ODD, USB Ports, 3G, SIM, Codec
M	5.0	MCV&M5V	○	○	○	○	○	x	Thermal Protection, LED, Dock
S	3.3	S3V	○	○	○	○	○	x	EC/KBC, GPIO Expander Accelerometer, GMR Sensor
R	2.0-3.6	R3V	○	○	○	○	○	○	PCH

## 1.9 Batteries

The computer has three types of batteries as follows:

- ☐ Main battery pack
- ☐ RTC battery

The battery specifications are listed in Table 1-9

*Table 1-8 Battery specifications*

Battery name		Material	Output voltage	Capacity
Main battery	G71C000BE710	Lithium-Ion	10.8 V	(66Wh, 6 cell)
	G71C000BE810			
	G71C000BE910			
	G71C000C2210			
	G71C000C2310			
	G71C000C2410			
	G71C000BF710			(93Wh, 9 cell)
	G71C000BF810			
	G71C000BF910			
RTC battery	GDM710000058	NiMH	2.4 V	16 mAh

### 1.9.1 Main Battery

The removable main battery pack is the computer's main power source when the AC adaptor is not attached. The main battery maintains the state of the computer when the computer enters in sleep mode.

## 1.9.2 Battery Charging Control

Battery charging is controlled by a power supply microprocessor. The microprocessor controls whether the charge is on or off and detects a full charge when the AC adaptor and battery are attached to the computer. The system charges the battery.

### Battery Charge

When the AC adaptor is attached, there are two types of charge: When the system is powered off and when the system is powered on. Table 1-10 lists the charging time required for charges.

*Table 1-9 Time required for charges*

Battery type	Power on (hours)	Power off (hours)
Battery (66Wh, 6 cell)	about 5.0 to 15.0	About 5.0
Battery (93Wh, 9 cell)	about 5.0 to 21.5	About 5.0

**NOTE:** *The time required when the system is powered on is affected by the amount of power the system is consuming. Use of the fluorescent lamp and frequent disk access diverts power and lengthens the charge time.*

If any of the following occurs, the battery charge process stops.

1. The battery becomes fully charged.
2. The AC adaptor or battery is removed.
3. The battery or output voltage is abnormal.

❑ Data preservation time

When turning off the power in being charged fully, the preservation time is as following Table 1-11.

*Table 1-10 Data preservation time*

Condition	preservation time
Standby	About 5 days Battery(66Wh, 6 cell)
Shutdown	About 115 days Battery(66Wh, 6 cell)
Standby	About 7 days (93Wh, 9 cell)
Shutdown	About 165 days(93Wh, 9 cell)

### 1.9.3 RTC battery

The RTC battery provides power to keep the current date, time and other setup information in memory while the computer is turned off. Table 1-12 lists the charging time and data preservation period of the RTC battery.

*Table 1-11 RTC battery charging/data preservation time*

Status	Time
Charging Time (power on)	10 hours
Data preservation period (full charge)	30 days

## 1.10 AC Adapter

The AC adapter is also used to charge the battery.

Table 1-13 lists the AC adapter specifications.

*Table 1-12 AC adapter specifications*

Parameter	Specification	
	G71C0009S210/ G71C000AE212 (2-pin)	G71C0009S111 / G71C000AE113 (3-pin)
Power	65W	
Input voltage	100V/240V	
Input frequency	50Hz to 60Hz	
Input current	1.5 A (100V-240V)	
B Output voltage	19V	
Output current	3.42A	

---

## **Chapter 2**

# **Troubleshooting Procedures**

---



## Chapter 2 Contents

<b>2</b>	<b>2-2</b>	
2.1	Troubleshooting .....	2-6
2.2	Troubleshooting Flowchart .....	2-8
2.3	Power Supply Troubleshooting .....	2-13
2.3.1	Procedure 1 Power Status Check .....	2-13
2.3.2	Procedure 2 Error Code Check .....	2-15
2.3.3	Procedure 3 Connection Check .....	2-20
2.3.4	Procedure 4 Charging Check .....	2-21
2.3.5	Procedure 5 Replacement Check .....	2-21
2.4	System Board Troubleshooting .....	2-22
2.4.1	Procedure 1 Message Check .....	2-23
2.4.2	Procedure 2 Debugging Port Check .....	2-25
2.4.3	Procedure 3 Diagnostic Test Program Execution Check .....	2-30
2.4.4	Procedure 4 Replacement Check .....	2-30
2.5	USB FDD Troubleshooting .....	2-31
2.5.1	Procedure 1 FDD Head Cleaning Check .....	2-31
2.5.2	Procedure 2 Diagnostic Test Program Execution Check .....	2-32
2.5.3	Procedure 3 Connector Check and Replacement Check .....	2-33
2.6	HDD/SSD Troubleshooting .....	2-35
2.6.1	Procedure 1 Partition Check (Not Used) .....	2-35
2.6.2	Procedure 2 Message Check .....	2-36
2.6.3	Procedure 3 Format Check (Not Used) .....	2-37
2.6.4	Procedure 4 Diagnostic Test Program Execution Check .....	2-38
2.6.5	Procedure 5 Connector Check and Replacement Check .....	2-39
2.7	Keyboard Troubleshooting .....	2-40
2.7.1	Procedure 1 Diagnostic Test Program Execution Check .....	2-40
2.7.2	Procedure 2 Connector Check and Replacement Check .....	2-40
2.8	Touch pad Troubleshooting .....	2-41
2.8.1	Procedure 1 Diagnostic Test Program Execution Check .....	2-41
2.8.2	Procedure 2 Connector Check and Replacement Check .....	2-41



2.9	Display Troubleshooting.....	2-43
2.10	Optical Disk Drive Troubleshooting.....	2-45
2.10.1	Procedure 1 Diagnostic Test Program Execution Check.....	2-45
2.10.2	Procedure 2 Connector Check and Replacement Check.....	2-45
2.11	LAN Troubleshooting.....	2-47
2.11.1	Procedure 1 Diagnostic Test Program Execution Check.....	2-47
2.11.2	Procedure 2 Connector Check and Replacement Check.....	2-47
2.12	Wireless LAN or Bluetooth Troubleshooting.....	2-48
2.12.1	Procedure 1 Transmitting-Receiving Check.....	2-48
2.12.2	Procedure 2 Antennas' Connection Check.....	2-48
2.12.3	Procedure 3 Replacement Check .....	2-49
2.13	Bluetooth Troubleshooting .....	2-50
2.14	Sound Troubleshooting .....	2-52
2.14.1	Procedure 1 Diagnostic Test Program Execution Check.....	2-52
2.14.2	Procedure 2 Connector Check .....	2-52
2.14.3	Procedure 3 Replacement Check .....	2-53
2.15	SD Card Slot Troubleshooting.....	2-54
2.15.1	Procedure 1 Check on Windows OS.....	2-54
2.15.2	Procedure 2 Connector Check and Replacement Check.....	2-54
2.16	PCI ExpressCard Slot Troubleshooting.....	2-56
2.17	Fingerprint sensor Troubleshooting.....	2-57
2.18	Web camera Troubleshooting.....	2-61
2.18.1	Procedure 1 Check on Windows OS.....	2-61
2.18.2	Procedure 2 Connector Check and Replacement Check.....	2-61
2.19	3G Troubleshooting .....	2-63
2.20	HDMI Troubleshooting .....	2-65
2.20.1	Procedure 1 Check on HDMI TV .....	2-65

**Figures**

Figure 2-1 Troubleshooting flowchart (1/2).....2-9

**Tables**

Table 2-1 Battery icon .....2-13

Table 2-2 DC IN icon .....2-14

Table 2-3 Error code.....2-16

Table 2-4 Debug port error status (1/2) pending .....2-26

Table 2-5 FDD error code and status.....2-32

Table 2-6 2.5” Hard disk drive error code and status.....2-38

## 2.1 Troubleshooting

Chapter 2 describes how to determine which Field Replaceable Unit (FRU) in the computer is causing the computer to malfunction. (The “FRU” means the replaceable unit in the field.) The FRUs covered are:

- |                 |                          |                        |
|-----------------|--------------------------|------------------------|
| 1. Power supply | 8. Optical Disk Drive    | 15. Fingerprint Sensor |
| 2. System Board | 9. LAN                   | 16. Web camera         |
| 3. USB FDD      | 10. Wireless LAN         | 17. 3G                 |
| 4. HDD/SSD      | 11. Bluetooth            | 18. HDMI               |
| 5. Keyboard     | 12. Sound                |                        |
| 6. Touch pad    | 13. SD Card slot         |                        |
| 7. Display      | 14. PCI ExpressCard slot |                        |

The Test Program operations are described in Chapter 3. Detailed replacement procedures are described in Chapter 4.

**NOTE:** Before replacing the system board, it is necessary to execute the subtest 03 DMI Information save of the 3.4 Setting of the hardware configuration in Chapter 3.

After replacing the system board, it is necessary to execute the subtest 04 DMI Information recovery and subtest 08 System configuration display of the 3.4 Setting of the hardware configuration in Chapter 3. Also update with the latest EC/KBC as described in Appendix H “EC/KBC Rewrite Procedures”.

After replacing the LCD, update with the latest EC/KBC as described in Appendix H “EC/KBC Rewrite Procedures” to set the SVP parameter.

The implement for the Diagnostics procedures is referred to Chapter 3. Also, following implements are necessary:

1. Phillips screwdrivers (For replacement procedures)
2. Implements for debugging port check
  - Toshiba MS-DOS system FD
  - RS-232C cross cable
  - Test board with debug port test cable
  - PC for displaying debug port test result

There are following two types of connections in the figure of board and module connection in and after 2.3 Power Supply Troubleshooting.

(1) Cable connection is described in the figure as line.

(2) Pin connection is described in the figure as arrow.

<e.g> Connection of modem

## **2.2 Troubleshooting Flowchart**

Use the flowchart in Figure 2-1 as a guide for determining which troubleshooting procedures to execute. Before going through the flowchart steps, verify the following:

- ☐ Ask him or her to enter the password if a password is registered.
- ☐ Verify with the customer that Toshiba Windows is installed on the hard disk. Non-Windows operating systems can cause the computer to malfunction.
- ☐ Make sure all optional equipment is removed from the computer.

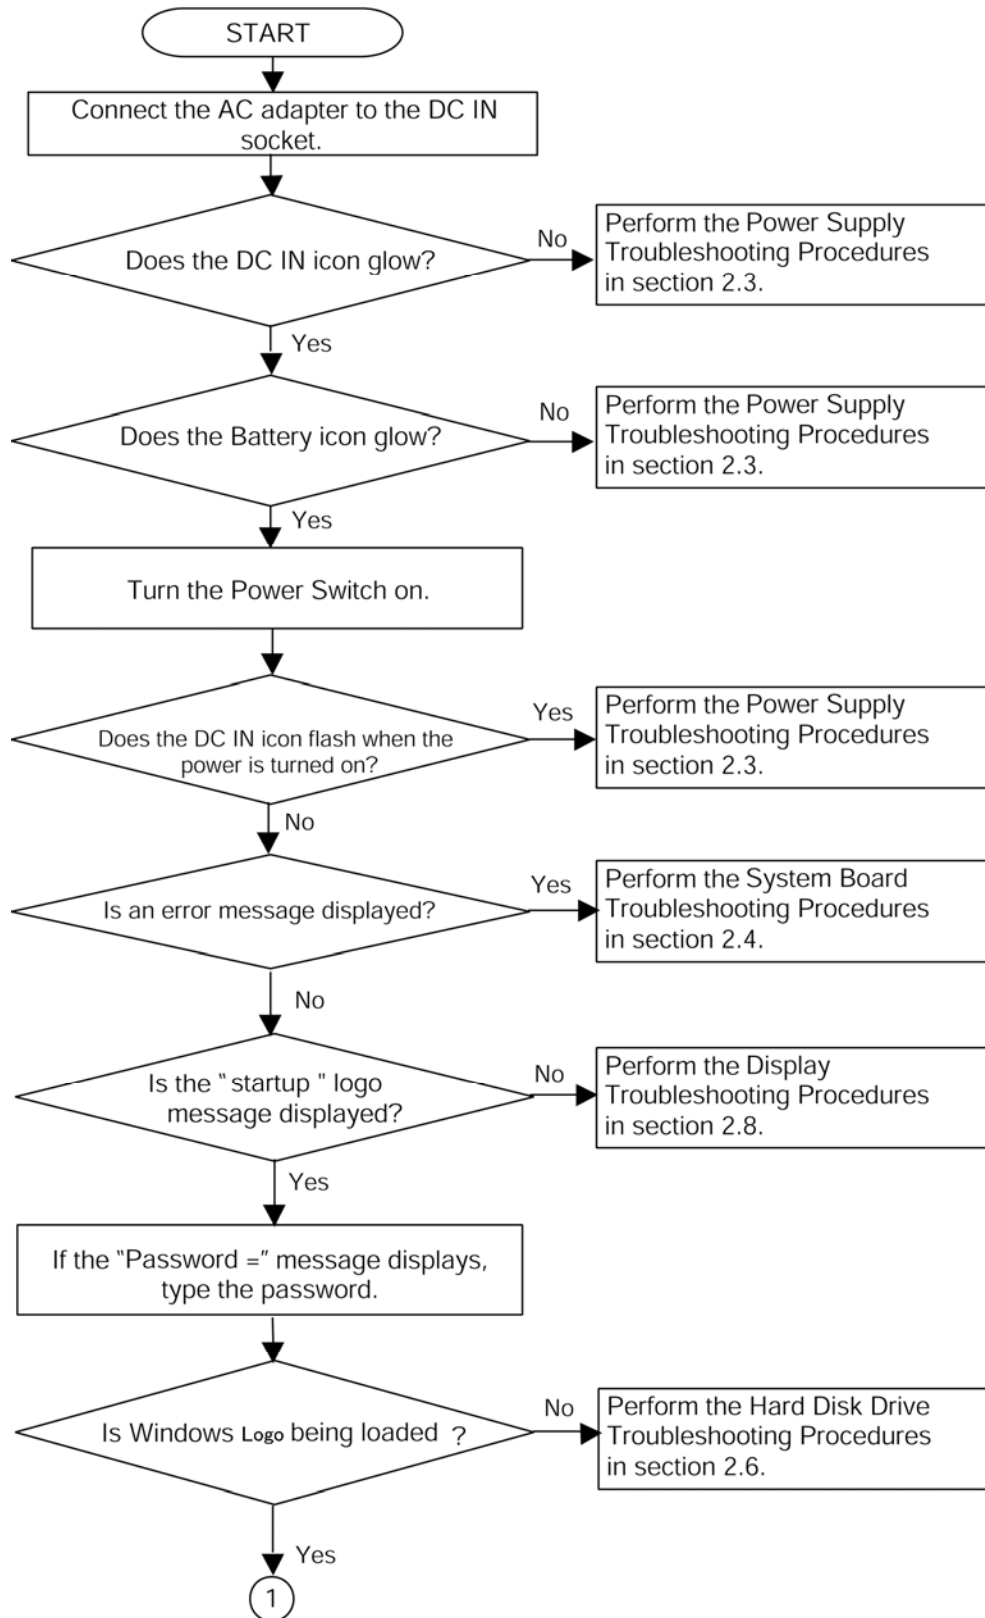


Figure 2-1 Troubleshooting flowchart (1/2)

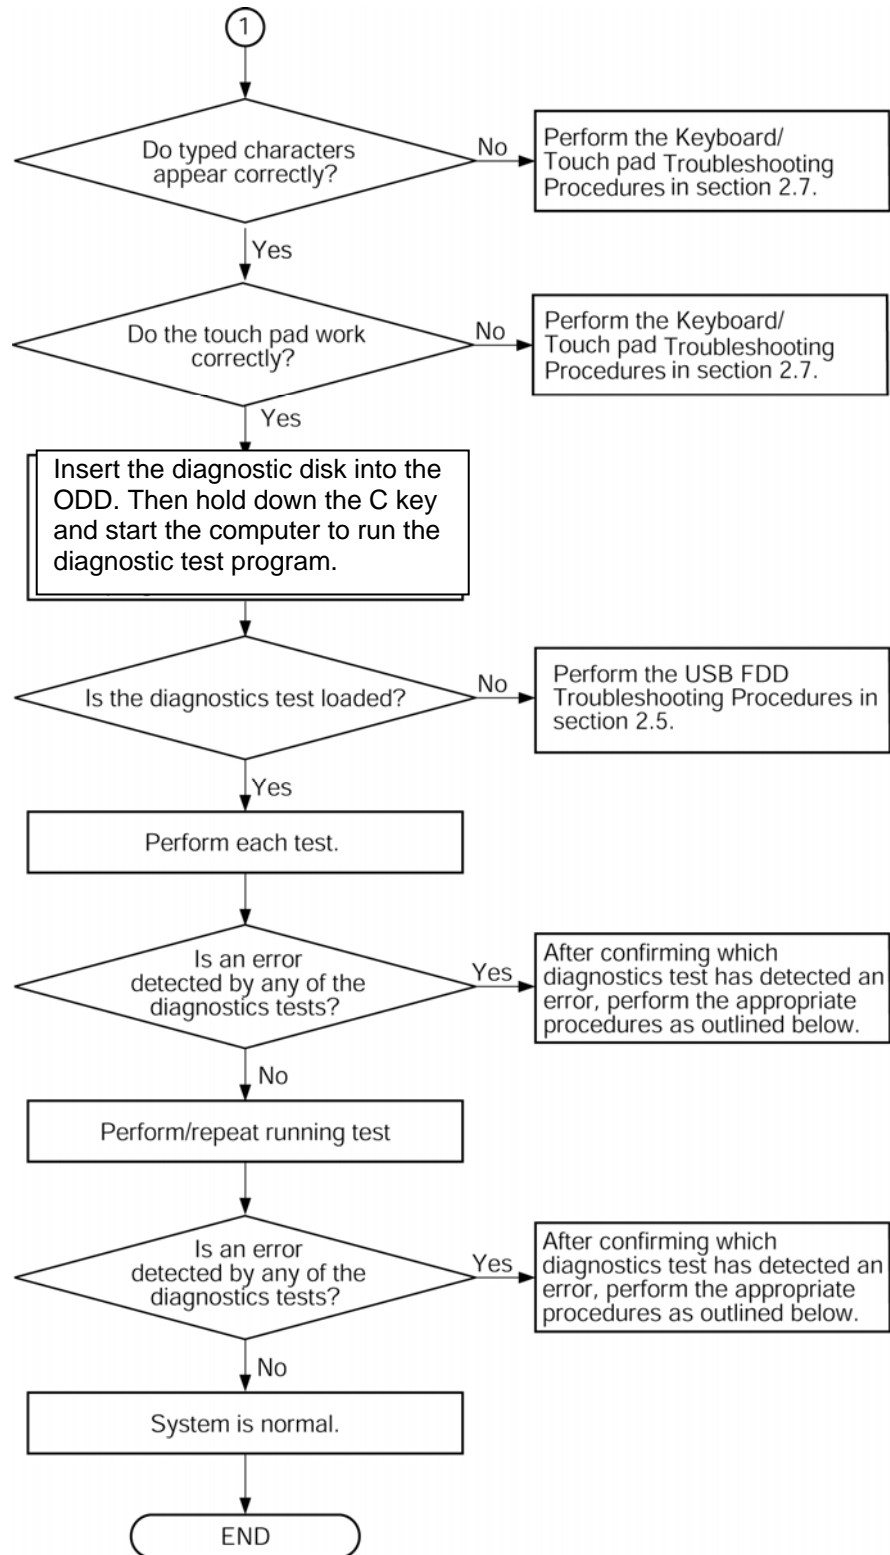


Figure 2-1 Troubleshooting flowchart (2/2)

If the diagnostics program cannot detect an error, the problem may be intermittent. The Test program should be executed several times to isolate the problem. Check the Log Utilities function to confirm which diagnostic test detected an error(s), then perform the appropriate troubleshooting procedures as follows:

1. If an error is detected on the power supply , perform the power supply Troubleshooting Procedures in Section 2.3.
2. If an error is detected on the system test, memory test, display test, CD-ROM/DVD-ROM test, expansion test, real timer test, sound test or Modem/LAN/Bluetooth /IEEE1394 test, perform the System Board Troubleshooting Procedures in Section 2.4.
3. If an error is detected on the floppy disk test, perform the USB FDD Troubleshooting Procedures in Section 2.5.
4. If an error is detected on the hard disk test, perform the HDD/SSD Troubleshooting Procedures in Section 2.6.
5. If an error is found on the keyboard test (DIAGNOSTICS TEST) and pressed key display test (ONLY ONE TEST), perform the Keyboard Troubleshooting Procedures in Section 2.7.
6. If an error is found on the touch pad test (ONLY ONE TEST), perform the touch pad Troubleshooting Procedures in Section 2.8.
7. If an error is detected on the display test, perform the Display Troubleshooting Procedures in Section 2.9.
8. If an error is detected on the CD-ROM/DVD-ROM test, perform the Optical Disk Drive Troubleshooting Procedures in Section 2.10.
9. If an error is detected on the LAN test, perform the LAN Troubleshooting Procedures in Section 2.11.
10. If an error is detected on the wireless LAN test, perform the Wireless LAN Troubleshooting Procedures in Section 2.12.
11. If an error is detected on the Bluetooth test, perform the Bluetooth Troubleshooting Procedures in Section 2.13.
12. If an error is detected on the sound test, perform the Sound Troubleshooting Procedures in Section 2.14.
13. If an error is detected on the sound test, perform the SD Card Troubleshooting Procedures in Section 2.15.
14. If a malfunction is detected on the PCI ExpressCard, perform the PCI ExpressCard Troubleshooting Procedures in Section 2.16.



15. If a malfunction is detected on the fingerprint sensor, perform the Fingerprint Sensor Troubleshooting Procedures in Section 2.17.
16. If a malfunction is detected on the Web camera, perform the Web camera Troubleshooting Procedures in Section 2.18
17. If a malfunction is detected on the 3G, perform the 3G Troubleshooting Procedures in Section 2.19
18. If a malfunction is detected on the HDMI, perform the HDMI Troubleshooting Procedures in Section 2.20



## 2.3 Power Supply Troubleshooting

The power supply controller controls many functions and components. To determine if the power supply is functioning properly, start with Procedure 1 and continue with the other Procedures as instructed. The procedures described in this section are:

- Procedure 1: Power Status Check
- Procedure 2: Error Code Check
- Procedure 3: Connection Check
- Procedure 4: Charging Check
- Procedure 5: Replacement Check

### 2.3.1 Procedure 1 Power Status Check

The following icons indicate the power supply status:

-  Battery icon
-  DC IN icon

The power supply controller displays the power supply status with the Battery icon and the DC IN icon as listed in the tables below.

*Table 2-1 Battery icon*

Battery icon	Power supply status
Lights orange	Battery is charged and the external DC is input. It has no relation with ON/OFF of the system power.
Lights blue	Battery is fully charged and the external DC is input. It has no relation with ON/OFF of the system power.
Blinks orange (even intervals)	The battery level is low while the system power is ON.
Blinks orange once (at being switched on)	The system is driven by only a battery and the battery level is low.
Doesn't light	Any condition other than those above.

Table 2-2 DC IN icon

DC IN icon	Power supply status
Lights blue	DC power is being supplied from the AC adapter.
Blinks orange	Power supply malfunction <sup>*1</sup>
Doesn't light	Any condition other than those above.

\*1 When the power supply controller detects a malfunction, the DC IN icon blinks orange. It shows an error code.

When the icon is blinking, perform the following procedure.

1. Remove the battery pack and the AC adapter.
2. Re-attach the battery pack and the AC adapter.

If the icon is still blinking after the operation above, check the followings:

Check 1 If the DC IN icon blinks orange, go to Procedure 2.

Check 2 If the DC IN icon does not light, go to Procedure 3.

Check 3 If the battery icon does not light orange or blue, go to Procedure 4.

**NOTE:** Use a supplied AC adapter G71C000A5210 (2-pin)/ G71C000A6210 (3-pin).


### 2.3.2 Procedure 2 Error Code Check

If the power supply microprocessor detects a malfunction, the DC IN icon blinks orange. The blink pattern indicates an error as shown below.

- |   |                     |
|---|---------------------|
| <input type="checkbox"/> Start              | Off for 2 seconds   |
| <input type="checkbox"/> Error code (8 bit) |                     |
| “1”   | On for one second   |
| “0”   | On for half second  |
| Interval between data bits                  | Off for half second |

The error code begins with the least significant digit.

Example: Error code 11h (Error codes are given in hexadecimal format.)

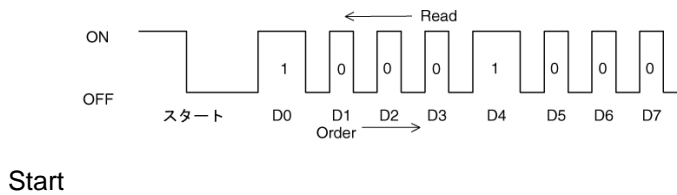

- Check 1 Convert the DC IN icon blink pattern into the hexadecimal error code and compare it to the tables below. Then go to Check 2.

*Table 2-3 Error code*

Error code	Where error occurs
1*h	DC Power (AC Adapter)
2*h	Main battery
3:h	2nd battery
4*h	S3V output
5*h	E5V output
6*h	E3V output
7*h	1R5-B1V output
8*h	PPV output
9*h	1R05-E1V output
A*h	IGD-PGV output
B*h	—
C*h	VCCSA_P0V output
D*h	PTV output
E*h	PGV output
F*h	-

- ☐ DC power supply (AC adapter)

Error code	Meaning
10h	AC Adapter output voltage is over 20.92V.
11h	Common Dock output voltage is over 20.92V...
12h	Current from the DC power supply is over 6.6A.
13h	Current from the DC power supply is over 0.5A when there is no load.
14h	The compensation value of [0A] is not within the limits from design data ( $\pm 481\text{mA}$ ).

❑ Main Battery

Error code	Meaning
22h	Main battery discharge current is over 0.5A.
23h	Main battery charge current is over 4.7A
24h	The compensation value of [0A] is not within the limits from design data ( $\pm 400\text{mA}$ ).
25h	Main battery charge current is over 0.3A when the charging is off.

❑ 2nd Battery

Error code	Meaning
32h	Second battery discharge current is over 0.5A.
33h	Second battery charge current is over 4.7A
34h	The compensation value of [0A] is not within the limits from design data ( $\pm 400\text{mA}$ )
35h	Second battery charge current is over 0.3A

❑ S3V output

Error code	Meaning
40h	S3V voltage is over 3.47V.
45h	S3V voltage is under 3.14V.
46h	S3V voltage is under 3.14V or less when the computer is booting up.

❑ E5V output

Error code	Meaning
50h	E5V voltage is over 6.00V.
51h	E5V voltage is under 4.50V when the computer is powered on.
52h	E5V voltage is under 4.50V when the computer is booting up.
54h	E5V voltage is under 4.50V when EV power is maintained.

❑ E3V output

Error code	Meaning
60h	E3V voltage is over 3.96V.
61h	E3V voltage is under 2.81V when the computer is powered on.
62h	E3V voltage is under 2.81V when the computer is booting up.
64h	E3V voltage is under 2.81V when EV power is maintained.

❑ 1R5-B1V output

Error code	Meaning
70h	1R5-B1V voltage is over 1.80V.
71h	1R5-B1V voltage is under 1.28V when the computer is powered on.
72h	1R5-B1V voltage is under 1.28V when the computer is booting up.
73h	1R5-B1V power supply showed the normal range at the time of BV power supply stop.

❑ PPV output

Error code	Meaning
80h	PPV voltage is over 1.80V.
81h	PPV voltage is under 0.00V when the computer is powered on.
82h	PPV voltage is under 0.55V when the computer is booting up.

❑ 1R05-E1V output

Error code	Meaning
90h	1R05-E1V voltage is over 1.26V.
91h	1R05-E1V voltage is under 0.89V when the computer is powered on.
92h	1R05-E1V voltage is under 0.89V when the computer is booting up.
94h	1R05-E1V voltage is under 0.89V when EV power is maintained.

❑ IGD-PGV output

Error code	Meaning
A0h	IGD-PGV voltage is over 1.80V.
A1h	IGD-PGV voltage is under 0.00V when the computer is powered on.
A2h	IGD-PGV voltage is under 0.00V when the computer is booting up.

❑ VCCSA-P0V output

Error code	Meaning
C0h	VCCSA-P0V voltage is over 1.08V.
C1h	VCCSA-P0V voltage is under 0.64V when the computer is powered on.
C2h	VCCSA-P0V voltage is under 0.64V when the computer is booting up.

❑ PTV output

Error code	Meaning
D0h	PTV voltage is over 1.26V.
D1h	PTV voltage is under 0.89V when the computer is powered on.
D2h	PTV voltage is under 0.89V when the computer is booting up.

❑ PGV output

Error code	Meaning
E0h	PGV voltage is over 1.80V.
E1h	PGV voltage is under 0.00V when the computer is powered on.
E2h	PGG voltage is under 0.00V when the computer is booting up.

❑ Miscellaneous

Error code	Meaning
F0h	The sub clock does not oscillate.



Check 2 In the case of error code 10h or 12h:

- ☐ Make sure the AC adapter and AC power cord are firmly plugged into the DC IN 19 V socket and wall outlet. If the cables are connected firmly, go to the following step.
- ☐ Connect a new AC adapter and AC power cord. If the problem still occurs, go to Procedure 5.


Check 3 In the case of error code 21h:

- ☐ Go to Procedure 3.

Check 4 For any other errors, go to Procedure 5.

### **2.3.3 Procedure 3 Connection Check**

The wiring diagram related to the power supply is shown below:

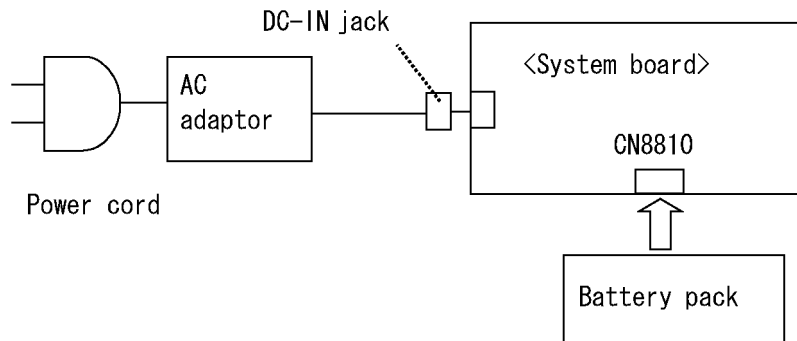

Any of the connectors may be disconnected. Perform Check 1.

Check 1 Make sure the AC adapter and the AC power cord are firmly plugged into the DC IN jack and wall outlet. If these cables are connected firmly, go to Check 2.

Check 2 Replace the AC adapter and the AC power cord with new ones.

- If the DC IN icon does not light, go to Procedure 5.
- If the battery icon does not light, go to Check 3.

Check 3 Make sure the battery pack is installed in the computer correctly. If the battery is properly installed and the battery icon still does not light, go to Procedure 4.

### **2.3.4 Procedure 4 Charging Check**

Check if the power supply controller charges the battery pack properly. Perform the following procedures:

- Check 1    Make sure the AC adapter is firmly plugged into the DC IN jack.
- Check 2    Make sure the battery pack is properly installed. If it is properly installed, go to Check 3.
- Check 3    The battery pack may be completely discharged. Wait a few minutes to charge the battery pack while connecting the battery pack and the AC adapter. If the battery pack is still not charged, go to Check 4.
- Check 4    The battery's temperature is too high or low. Leave the battery for a while to adjust it in the right temperature. If the battery pack is still not charged, go to Check 5.
- Check 5    Replace the battery pack with a new one. If the battery pack is still not charged, go to Procedure 5.

### **2.3.5 Procedure 5 Replacement Check**

The power is supplied to the system board by the AC adapter. If either the AC adapter or the system board was damaged, perform the following Checks.

To disassemble the computer, follow the steps described in Chapter 4, *Replacement Procedures*.

When AC adapter is connected:

- Check 1    AC adapter may be faulty. Replace the AC adapter with a new one. If the problem still occurs, perform Check 2.
- Check 2    System board may be faulty. Replace the system board with a new one.

When AC adapter is not connected:  
(When driving with battery pack)

- Check 1    Battery pack may be faulty. Replace it with a new one. If the problem still occurs, perform Check 2.
- Check 2    System board may be faulty. Replace it with a new one.

## **2.4 System Board Troubleshooting**

This section describes how to determine if the system board is malfunctioning or not. Start with Procedure 1 and continue with the other procedures as instructed. The procedures described in this section are:

Procedure 1: Message Check

Procedure 2: Debugging Port Check

Procedure 3: Diagnostic Test Program Execution Check

Procedure 4: Replacement Check

### 2.4.1 Procedure 1 Message Check

When the power is turned on, the system performs the Initial Reliability Test (IRT) installed in the BIOS ROM. The IRT tests each IC on the system board and initializes it.

- ☐ If an error message is shown on the display, perform Check 1.
- ☐ If there is no error message, go to Procedure 2.
- ☐ If MS-DOS or Windows OS is properly loaded, go to Procedure 4.

**Check 1** If one of the following error messages is displayed on the screen, press the **F1** key as the message instructs. These errors occur when the system configuration preserved in the RTC memory (CMOS type memory) is not the same as the actual configuration or when the data is lost.

If you press the **F1** key as the message instructs, the **SETUP** screen appears to set the system configuration. If error message (b) appears often when the power is turned on, replace the RTC battery. If any other error message is displayed, perform Check 2.

- (a)      \*\*\* Bad HDD type \*\*\*  
Check system. Then press [F1] key .....
- (b)      \*\*\* Bad RTC battery \*\*\*  
Check system. Then press [F1] key .....
- (c)      \*\*\* Bad configuration \*\*\*  
Check system. Then press [F1] key .....
- (d)      \*\*\* Bad memory size \*\*\*  
Check system. Then press [F1] key .....
- (e)      \*\*\* Bad time function \*\*\*  
Check system. Then press [F1] key .....
- (f)      \*\*\* Bad check sum (CMOS) \*\*\*  
Check system. Then press [F1] key .....
- (g)      \*\*\* Bad check sum (ROM) \*\*\*  
Check system. Then press [F1] key .....

**Check 2** If the following error message is displayed on the screen, press any key as the message instructs.  
The following error message appears when data stored in RAM under the resume function is lost because the battery has become discharged or the system board is damaged. Go to Procedure 3.

WARNING: RESUME FAILURE.  
PRESS ANY KEY TO CONTINUE.

If any other error message displays, perform Check 3.

Check 3 The IRT checks the system board. When the IRT detects an error, the system stops or an error message appears.

If one of the following error messages (1) through (17), (23) or (24) is displayed, go to Procedure 4.

If error message (18) is displayed, go to the Keyboard Troubleshooting Procedures.

If error message (19), (20) or (21) is displayed, go to the HDD Troubleshooting Procedures.

If error message (22) is displayed, go to the USB FDD Troubleshooting Procedures.

- (1) PIT ERROR
- (2) MEMORY REFRESH ERROR
- (3) TIMER CH.2 OUT ERROR
- (4) CMOS CHECKSUM ERROR
- (5) CMOS BAD BATTERY ERROR
- (6) FIRST 64KB MEMORY ERROR
- (7) FIRST 64KB MEMORY PARITY ERROR
- (8) VRAM ERROR
- (9) SYSTEM MEMORY ERROR
- (10) SYSTEM MEMORY PARITY ERROR
- (11) EXTENDED MEMORY ERROR
- (12) EXTENDED MEMORY PARITY ERROR
- (13) DMA PAGE REGISTER ERROR
- (14) DMAC #1 ERROR
- (15) DMAC #2 ERROR
- (16) PIC #1 ERROR
- (17) PIC #2 ERROR
- (18) KBC ERROR
- (19) HDC ERROR
- (20) HDD #0 ERROR
- (21) HDD #1 ERROR
- (22) NO FDD ERROR
- (23) TIMER INTERRUPT ERROR
- (24) RTC UPDATE ERROR

## 2.4.2 Procedure 2 Debugging Port Check

Check the D port status by a debug port test. The tool for debug port test is shown below.


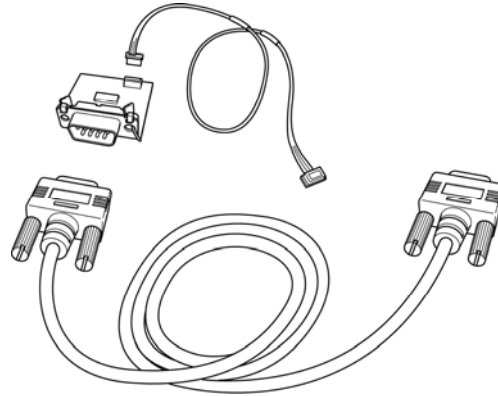


Figure 2-1 A set of tool for debug port test

1. Not a Serial Port model should connect a debug port test cable to connector CN3110 of a system board.
2. Connect the RS-232C Cross-cable to the PC that displays the test results.

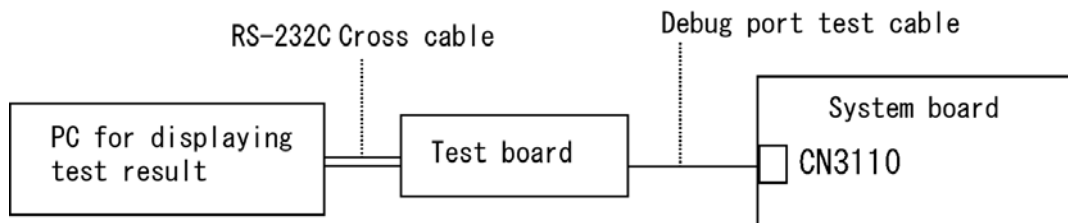

4. Boot the computer in MS-DOS mode.
5. Execute GETDPORT.COM in the text menu in CPU REAL mode. (Insert the FD for starting D port into USB FDD and input "FD starting drive:>dport".)

The D port status is displayed in the following form;

F100 : 000.000382		IRT_CHK_INI\SYSL_START
D port status	Time (second) to process	Contents of process

6. When the D port status is FFFFh (normal status), go to Procedure 4.
7. When the D port status falls into any status in Table 2-4, execute Check 1.

Table 2-4 Debug port error status (1/2) pending

System BIOS Boot block processing			
Debug Code	BIOS processing outline	Target Device	IC No.
	CPU setup	CPU	IS1050 (CPU )
	PCH		
F000	Boot Block processing start	BIOSROM	IC3001/IC3002 (BIOS ROM)
F001	-	-	-
F002	Initialization of PCH	PCH	IC1600 (PCH)
F003	Initialization of PCH	PCH	IC1600 (PCH)
	Graphics distinction	VGA	IC1600 (PCH),
F004	PCH initialization end	BIOSROM	IC3001/IC3002 (BIOS ROM)
F005	Updating judging of BIOS and EC	BIOSROM	IC3001/IC3002 (BIOS ROM)
F006	Memory initialization start	PCH	IC1600 (PCH)
F007	Memory initialization end	PCH	IC3001/IC3002 (BIOS ROM)
F008	Loader start to a system part	BIOSROM	IC3001/IC3002 (BIOS ROM)
F009	Deployment start to a system part	BIOSROM	IC3001/IC3002 (BIOS ROM)
F00A	Updating judging of BIOS and EC	BIOSROM	IC3001/IC3002 (BIOS ROM)
F00B	Update process start of BIOS and EC	BIOSROM EC USB Memory	IC3001/IC3002 (BIOS ROM) IC3200(EC/KBC)
F00C	BIOS update authority error	-	Check BIOS Password
F00D	Renewal error of BIOS Bootblock	BIOSROM	IC3001/IC3002 (BIOS ROM)
F00E	Completion of updating of Boot block	BIOSROM	IC3001/IC3002 (BIOS ROM)
F00F	End of Boot Block processing. IRT shift	BIOSROM	IC3001/IC3002 (BIOS ROM)

Table 2-4 Debug port error status (2/2)

System BIOS IRT processing			
Debug Code	BIOS processing outline	Target Device	IC No.
F100	IRT section start	CPU	IS1050 (CPU)
F101	Creation of SETUP information	BIOSROM RAM	IC3001/IC3002 (BIOS ROM) CN1400, CN1410 (RAM Conn.)
F102	PCI Express initialization	PCH	IC1600 (PCH)
F103	PCH Express initialization	PCH, RAM	IC1600 (PCH)
F104	SMRAM initialization	PCH RAM	IC1600 (PCH) CN1400, CN1410 (RAM Conn.)
F105	End of SMRAM initialization	PCH RAM	IS1050 (CPU Socket), CN1400, CN1410 (RAM Conn.)
F106	EC Evart initialization	EC	IC3200 (EC/KBC)
F107	USB Legacy initialization	PCH	IC1600 (PCH)
F108	Device Lock main processing start	RAM	CN1400, CN1410 (RAM Conn.)
F109	Device Lock device processing start	RAM	CN1400, CN1410 (RAM Conn.)
F10A	End of Device Lock main processing	RAM	CN1400, CN1410 (RAM Conn.)
F10B	Thermal control initialization	RAM	CN1400, CN1410 (RAM Conn.)
F10C	Digital thermal sensor initialization	CPU	IS1050 (CPU Socket)
F10D	End for IRT of a module load	RAM	CN1400, CN1410 (RAM Conn.)
F10E	Memory test start	RAM	CN1400, CN1410 (RAM Conn.)
F10F	End of a memory test	RAM	CN1400, CN1410 (RAM Conn.)
F110	Start of VGA initialization	RAM	IC1600 (PCH)
F111	End of VGA initialization	RAM	CN1400, CN1410 (RAM Conn.)
F112	Interrupt vector table initialization	RAM	CN1400, CN1410 (RAM Conn.)
F113	VGA, LAN initialization	VGA LAN BIOSROM RAM	IC1600 (PCH), IC4000 (LAN Controller), IC3001 /IC3002 (BIOS ROM), CN1400, CN1410 (RAM Conn.)
F114	End of option ROM execution	RAM	CN1400, CN1410 (RAM Conn.)
F115	Logo display start	RAM	IC1600 (PCH)
F116	Start of IDE Bus initialization	PCH	IC1600 (PCH)
F117	End of IDE Bus initialization	RAM	IC1600 (PCH)



F118	Waiting start for key detection	EC	IC3200(EC/KBC)
F119	Waiting end for key detection	EC	IC3200(EC/KBC)
F11A	Waiting start for USB device detection	PCH	IC1600 (PCH)
F11B	Waiting end for USB device detection	PCH	IC1600 (PCH)
F11C	Determination of a boot device	RAM	CN1400, CN1410 (RAM Conn.)
F11D	Renewal start of SMBIOS data	RAM	CN1400, CN1410 (RAM Conn.)
F11E	Renewal end of SMBIOS data	RAM	CN1400, CN1410 (RAM Conn.)
F11F	Start of SC initialization	EC	IC3200(EC/KBC)
F120	End of SC initialization	RAM	CN1400, CN1410 (RAM Conn.)
F121	Processing before boot	RAM	CN1400, CN1410 (RAM Conn.)
F122	Device processing before boot	PCH	IC1600 (PCH)
F123	-	-	-
F1FF	End of IRT processing. It shifts to OS.	RAM	CN1400,CN1410 (RAM Conn.)
F800	S3 shift start	RAM	CN1400,CN1410 (RAM Conn.)
F801	S4 shift start	RAM	CN1400,CN1410 (RAM Conn.)
F802	S5 shift start	RAM	CN1400,CN1410 (RAM Conn.)
F803	USB electric supply setting start	PCH, EC	IC1600 (PCH) IC3200 (EC/KBC)
F804	completion of a USB electric supply setting	PCH, EC	IC1600 (PCH) IC3200 (EC/KBC)
F805	Shutdown processing	RAM	CN1400,CN1410 (RAM Conn.)
F8FF	completion of Shutdown processing	RAM	CN1400,CN1410 (RAM Conn.)
F180	S3 return service start	BIOSROM, RAM	IC3001/IN3002 (BIOS ROM) CN1400,CN1410 (RAM Conn.)
F181	-	-	-
F1FF	End of S3 return processing. Shifts to OS.	RAM	CN1400, CN1410 (RAM Conn.)

**NOTE:** Status outputted by the test means the last error detected in the debug port test.

Check 1 If the D port is status F11Eh or F120h is displayed, go to “HDD Trouble shooting Procedure in Section 2.6.

Check 2 If any other D port status error code is displayed, perform Procedure 3.

D port error code is as follows:

Error code	Contents
F003h or F004h	SC initialization error
F00Bh	BIOS update error
F117h	Exception check error
F121h	Clock generator error

### **2.4.3 Procedure 3 Diagnostic Test Program Execution Check**

Execute the following tests from the Diagnostic Test Menu. These tests check the system board. Refer to Chapter 3, *Tests and Diagnostic*, for more information on how to perform these tests.

1. System test
2. Memory test
3. Keyboard test
4. Display test
5. Floppy Disk test
6. Printer test [It is not supported]
7. Async test [It is not supported]
8. Hard Disk test
9. Real Timer test
10. NDP test
11. Expansion test
12. CD-ROM/DVD-ROM test
13. Only One test
14. Wireless LAN test
15. LAN/Modem/Bluetooth/IEEE1394 test
16. Sound test

If an error is detected during these tests, go to Procedure 4.

### **2.4.4 Procedure 4 Replacement Check**

System board may be faulty. Disassemble the computer following the steps described in Chapter 4, *Replacement Procedures* and replace system board with a new one.

## **2.5 USB FDD Troubleshooting**

To check if the USB FDD is malfunctioning or not, follow the troubleshooting procedures below as instructed.

Procedure 1: FDD Head Cleaning Check

Procedure 2: Diagnostic Test Program Execution Check

Procedure 3: Connector Check and Replacement Check

### **2.5.1 Procedure 1 FDD Head Cleaning Check**

FDD head cleaning is one option available in the Diagnostic Program.

After connecting ODD, insert the Diagnostics Disk (CD) in the floppy disk drive. Turn on the computer and run the test. And then clean the USB FDD heads using the cleaning kit. If the USB FDD still does not function properly after cleaning, go to Procedure 2.

Detailed operation is given in Chapter 3, *Tests and Diagnostics*.

If the test program cannot be executed on the computer, go to Procedure 3.

## 2.5.2 Procedure 2 Diagnostic Test Program Execution Check

Insert the Diagnostics Disk (CD) in the ODD, turn on the computer and run the test. Refer to Chapter 3, *Tests and Diagnostics*, for more information about the diagnostics test procedures.

Make sure the floppy disk is formatted correctly and that the write protect tab is disabled. Floppy disk drive test error codes and their status names are listed in Table 2-7. If any other errors occur while executing the FDD diagnostics test, go to Check 1.

Table 2-5 FDD error code and status

Code	Status
01h	Bad command
02h	Address mark not found
03h	Write protected
04h	Record not found
06h	Media replaced
08h	DMA overrun error
09h	DMA boundary error
10h	CRC error
20h	FDC error
40h	Seek error
60h	FDD not drive
80h	Time out error (Not ready)
EEh	Write buffer error
FFh	Data compare error

Check 1 If the following message is displayed, disable the write protect tab on the floppy disk by sliding the write protect tab to “write enable”. If any other message appears, perform Check 2.


Write protected

Check 2 Make sure the floppy disk is formatted correctly. If it is, go to Procedure 3.

### 2.5.3 Procedure 3 Connector Check and Replacement Check

USB FDD is connected to USB port on Sound/ USB board or eSATA/HDMI/USB board. The connection of the cable and board may be defective. Otherwise, they may be faulty. Disassemble the computer following the steps described in Chapter 4, *Replacement Procedures* and perform the following checks.

USB FDD can be connected to the following 3 ports.  
(Sound/ USB board 1 port and eSATA/HDMI/USB board. 2 port.)

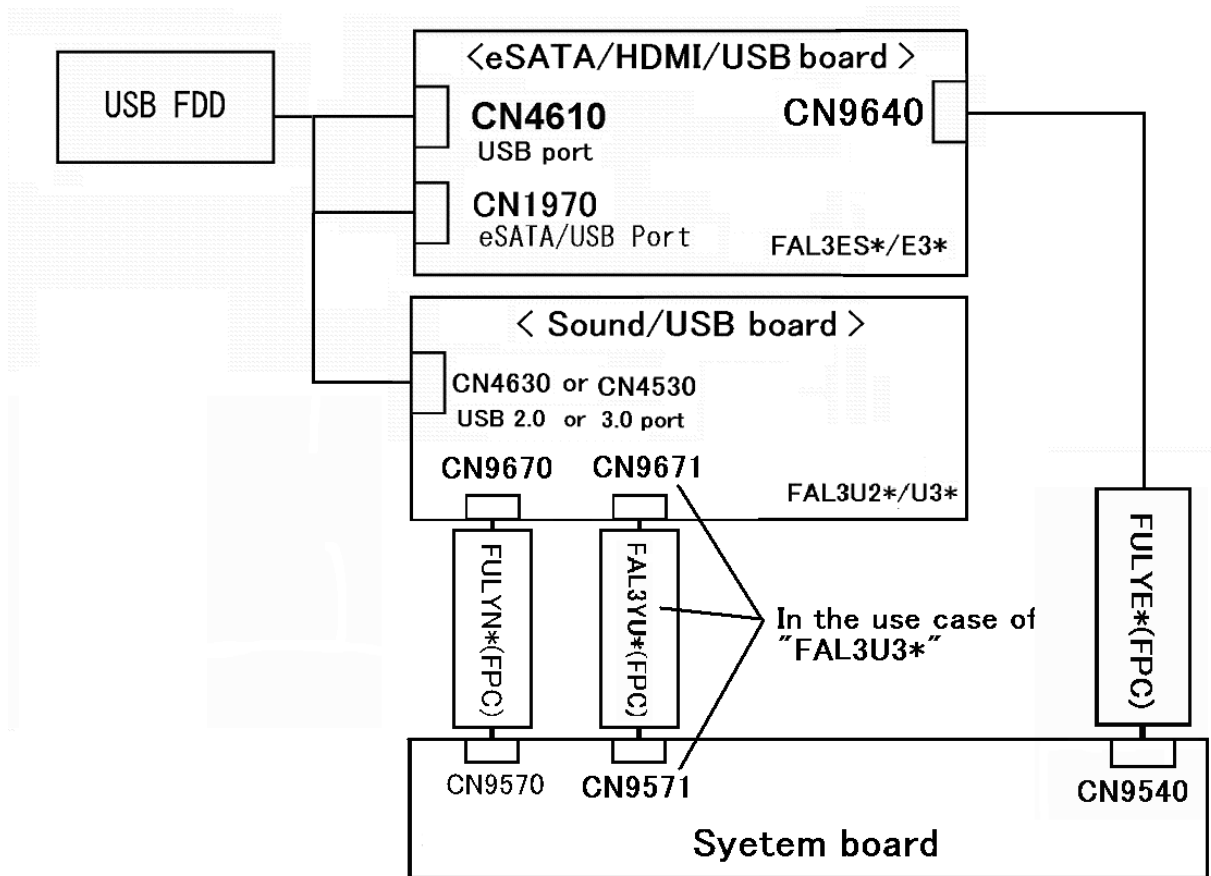

Check 1 Make sure USB FDD is firmly connected to USB port. If the connection is loose, connect firmly and repeat Procedure 2. If the problem still occurs, go to Check 2

**NOTE:** When checking the connection, be sure to check it with care for the followings.

1. Cable can not be disconnected from the connector.
2. Cable is connected straight to the connector.
3. Cable is connected all the way seated in the connector.
4. Cable or connector can not be broken.

- Check 2    Connect USB FDD to other USB port and check if it works properly. If it does not work properly, perform Check 3
- Check 3    USB FDD may be faulty. Replace it with a new one. If the problem still occurs, perform Check 4
- Check 4    Sound/ USB board (and FPU) or eSATA/HDMI/USB board (and FPC) may be damaged. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures* and check the operation. If the problem still exists, perform Check 5.
- Check 5    System board may be faulty. Replace it with a new one following the steps in Chapter 4, *Replacement Procedures*.

## 2.6 HDD/SSD Troubleshooting

To check if the SATA HDD/SSD is malfunctioning or not, follow the troubleshooting procedures below as instructed.

- Procedure 1: Partition Check (Not Used)
- Procedure 2: Message Check
- Procedure 3: Format Check (Not Used)
- Procedure 4: Diagnostic Test Program Execution Check
- Procedure 5: Connector Check and Replacement Check

**CAUTION:** *The contents of the hard disk will be erased when the 2.5" HDD troubleshooting procedures are executed. Transfer the contents of the hard disk to floppy disks or other storage drive(s). For the backup, refer to the User's Manual.*

### 2.6.1 Procedure 1 Partition Check (Not Used)

Insert the Toshiba DOS system disk and start the computer. Perform the following checks:

**Note:** Partition Check cannot be performed in Diagnostics Disk (CD)

- Check 1 Input **C:** and press **Enter**. If you cannot change to drive C, go to Check 2. If you can change to drive C, go to Procedure 2.
- Check 2 Input **FDISK** and press **Enter**. Choose Display Partition Information from the FDISK menu. If drive C is listed in the Display Partition Information, go to Check 3. If drive C is not listed, return to the FDISK menu and choose the option to create a DOS partition or a logical DOS drive on drive C. If the problem still occurs, go to Procedure 2.
- Check 3 If drive C is listed as active in the FDISK menu, go to Check 4. If drive C is not listed as active, return to the FDISK menu and choose the option to set the active partition for drive C. Then go to Procedure 2.
- Check 4 Remove the system disk from the FDD and reboot the computer. If the problem still occurs, go to Procedure 2. Otherwise, the 2.5" HDD is operating normally.



## 2.6.2 Procedure 2 Message Check

When the power is turned on, the system performs the Initial Reliability Test (IRT) installed in the BIOS ROM. When the test detects an error, an error message is displayed on the screen.

Make sure no floppy disk is in the FDD. Turn on the computer and check the message on the screen. When an OS starts from the 2.5" HDD, go to Procedure 3. Otherwise, start with Check 1 below and perform the other checks as instructed.

- Check 1 If any of the following messages appear, go to Procedure 3. If the following messages do not appear, perform Check 2.

HDC ERROR

or

HDD #X ERROR (After 5 seconds this message will disappear.)

- Check 2 If either of the following messages appears, go to Check 3. If the following messages do not appear, perform Check 4.

Insert system disk in drive  
Press any key when ready .....

or

Non-System disk or disk error  
Replace and press any key when ready

- Check 3 Using the SYS command of the DOS, transfer the system to the 2.5" HDD. If the system is not transferred, go to Procedure 3. Refer to the DOS Manual for detailed operation.

If the following message appears on the display, the system program has been transferred to the HDD.

System Transferred

If an error message appears on the display, perform Check 4.

- Check 4 2.5" HDD(s) and the connector(s) of system board may be defective (Refer to the steps described in Chapter 4, *Replacement Procedures* for disassembling.). Insert HDD(s) to the connector(s) firmly. If it is (or they are) firmly connected, go to Procedure 3.

### **2.6.3 Procedure 3 Format Check (Not Used)**

The computer's HDD is formatted using the DOS FORMAT program or the physical format program of the test program. To format the HDD, start with Check 1 below and perform the other steps as required.

#### **Note: Format Check cannot be performed in Diagnostics Disk (CD)**

Refer to the DOS Manual for the operation of DOS. For the format by the test program, refer to the Chapter 3.

Check 1    Format the 2.5" HDD using DOS FORMAT command. Type as **FORMAT C:  
/S/U**.

          If the 2.5" HDD can not be formatted, perform Check 2.

Check 2    Using the DOS FDISK command, set the 2.5" HDD partition. If the partition is not set, go to Check 3. If it is set, format the 2.5" HDD using MS-DOS FORMAT command.

Check 3    Using the Diagnostic Disk, format the 2.5" HDD with a format option (physical format). If HDD is formatted, set the 2.5" HDD partition using DOS FDISK command.

          If you cannot format the 2.5" HDD using the Tests and Diagnostic program, go to Procedure 4.

## 2.6.4 Procedure 4 Diagnostic Test Program Execution Check

The HDD test program is stored in the Diagnostics Disk (CD). Perform all of the HDD tests in the Hard Disk Drive Test. Refer to Chapter 3, *Tests and Diagnostics*, for more information about the HDD test program.

If an error is detected during the HDD test, an error code and status will be displayed. The error codes and statuses are described in Table 2-8. If an error code is not displayed but the problem still occurs, go to Procedure 5.


Table 2-6 2.5" Hard disk drive error code and status

Code	Status
05	HDD - HDC NOT RESET ERROR
07	HDD - DRIVE NOT INITIALIZE
09	HDD - DMA BOUNDARY ERROR
0B	HDD - BAD TRACK ERROR
BB	HDD - UNDEFINED ERROR
08	HDD - OVERRUN ERROR (DRQ ON)
01	HDD - BAD COMMAND ERROR
02	HDD - ADDRESS MARK NOT FOUND
04	HDD - RECORD NOT FOUND ERROR
10	HDD - ECC ERROR
20	HDD - HDC ERROR
40	HDD - SEEK ERROR
80	HDD - TIME OUT ERROR
11	HDD - ECC RECOVER ENABLE
AA	HDD - DRIVE NOT READY
CC	HDD - WRITE FAULT
E0	HDD - STATUS ERROR
0A	HDD - BAD SECTOR
EE	HDD - ACCESS TIME ERROR
DA	HDD - NO HDD
12	HDD - DMA CRC ERROR

### 2.6.5 Procedure 5 Connector Check and Replacement Check

The SATA HDD/SSD may be disconnected, or the SATA HDD/SSD or system board may be damaged. Disassemble the computer following the steps described in Chapter 4, *Replacement Procedures* and perform the following checks:

Check 1 Make sure the SATA HDD/SSD is firmly connected to CN1900 on the system board.

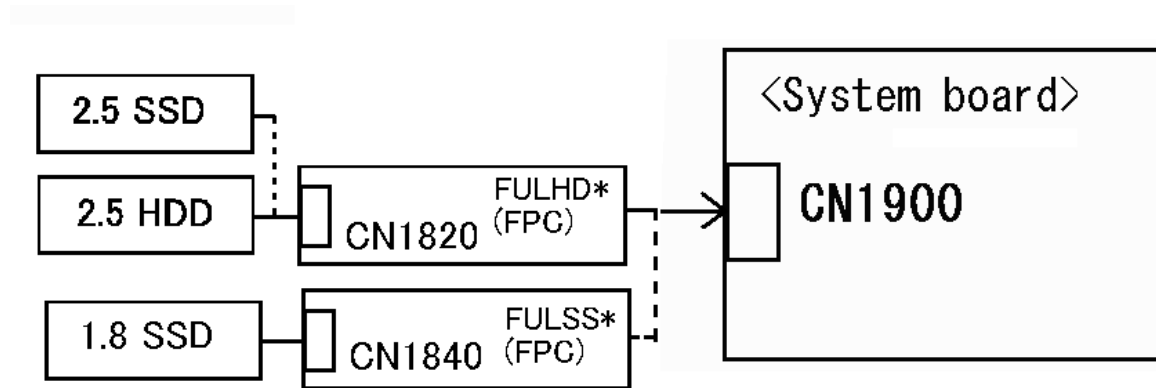

If any of the connections are loose, reconnect firmly and repeat Procedure 1. If there is still an error, go to Check 2.

Check 2 SATA HDD/SSD or the FPC may be damaged. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures* and check the operation. If the problem still exists, perform Check 3.

Check 3 System board may be faulty. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures*

## 2.7 Keyboard Troubleshooting

To check if the computer's keyboard is malfunctioning or not, follow the troubleshooting procedures below as instructed.

Procedure 1: Diagnostic Test Program Execution Check

Procedure 2: Connector Check and Replacement Check

### 2.7.1 Procedure 1 Diagnostic Test Program Execution Check


Execute the Keyboard Test (DIAGNOSTIC TEST), pressed key display test in the Diagnostic Program (CD). Refer to Chapter 3, *Tests and Diagnostics*, for more information on how to perform the test program.

If an error occurs, go to Procedure 2. If an error does not occur, keyboard is functioning properly.

### 2.7.2 Procedure 2 Connector Check and Replacement Check

The connection of cable and board may be defective. Otherwise, they may be faulty. Disassemble the computer following the steps described in Chapter 4, *Replacement Procedures*, and perform the following checks:

Check 1 Make sure keyboard cable is firmly connected to CN3230 in the system board.

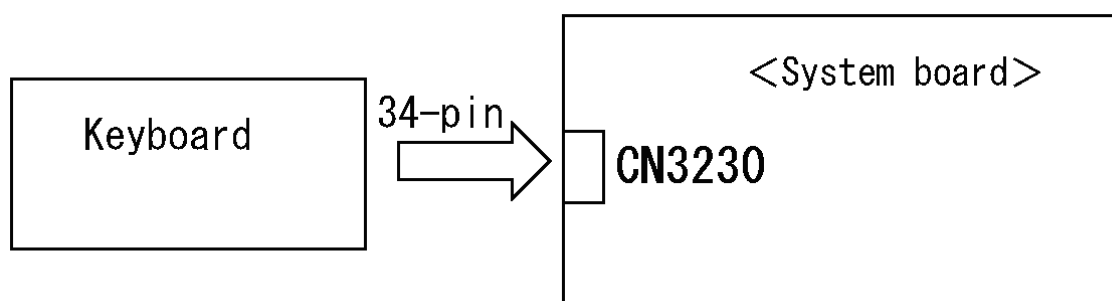

If the connection is loose, reconnect firmly and repeat Procedure 1. If the problem still occurs, go to Check 2.

Check 2 Keyboard may be faulty. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures*. If the problem still occurs, perform Check 3.

Check 3 System board may be faulty. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures*.

## 2.8 Touch pad Troubleshooting

To check if the computer's touch pad is malfunctioning or not, follow the troubleshooting procedures below as instructed.

Procedure 1: Diagnostic Test Program Execution Check

Procedure 2: Connector Check and Replacement Check

### 2.8.1 Procedure 1 Diagnostic Test Program Execution Check


Execute the Touch pad test (ONLY ONE TEST) in the Diagnostic Program (CD). Refer to Chapter 3, *Tests and Diagnostics*, for more information on how to perform the test program.

If an error occurs, go to Procedure 2. If an error does not occur, touch pad is functioning properly.

### 2.8.2 Procedure 2 Connector Check and Replacement Check

The connection of the cable and board may be defective. Otherwise, they may be faulty. Disassemble the computer following the steps described in Chapter 4, *Replacement Procedures*, and perform the following checks:

Check 1 Make sure the cables are firmly connected to the button board and system board.

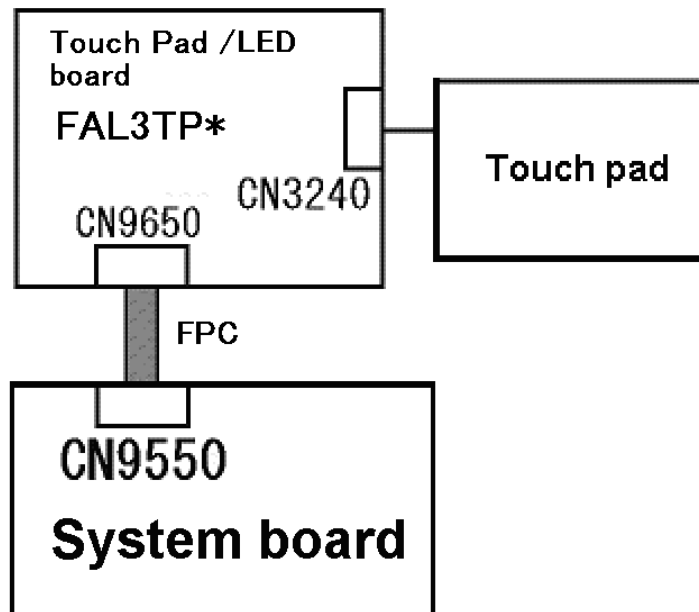

If the connection is loose, reconnect firmly and repeat Procedure 1. If the problem still occurs, go to Check 2.

- Check 2    Touch pod or the cable may be faulty. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures*. If the problem still occurs, perform Check 3.
- Check 3    Touch Pad/LED board or the FPC may be faulty. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures*. If the problem still occurs, perform Check 4.
- Check 4    System board may be faulty. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures*.

## 2.9 Display Troubleshooting

This section describes how to determine if the computer's display is functioning properly. Start with Procedure 1 and continue with the other procedures as instructed.

Procedure 1: Diagnostic Test Program Execution Check

Procedure 2: Connector Check and Cable Check


Procedure 3: Replacement Check

### Procedure 1 Diagnostic Test Program Execution Check

The Display Test program is stored on the computer's Diagnostics disk. This program checks the display controller on the system board. Insert the Diagnostics disk (CD) in the computer's floppy disk drive, turn on the computer and run the test. Refer to Chapter 3, *Tests and Diagnostics* for details. If an error is detected, go to Procedure 2.

### Procedure 2 Connector Check and Cable Check

Check 1 Make sure the LCD cable is securely connected to CN5300 on the system board.

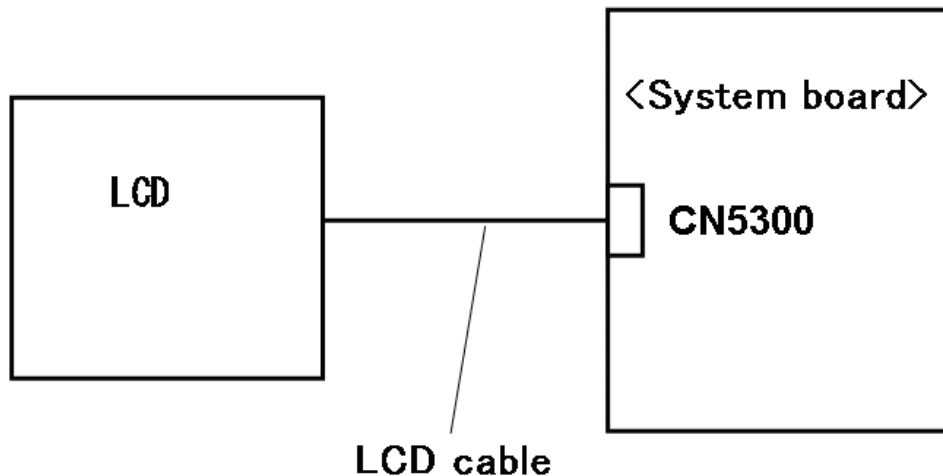

If the connection is loose, reconnect firmly and restart the computer. If there is still an error, go to Procedure 3.



### **Procedure 3    Replacement Check**

The LCD module and system board are connected to display circuits. Any of these components may be damaged. Refer to Chapter 4, *Replacement Procedures*.

- Check 1    Replace the LCD cable with a new one following the instructions in Chapter 4, *Replacement Procedures* and test the display again. If the problem still exists, perform Check 2.
- Check 2    Replace the LCD module with a new one following the instructions in Chapter 4, *Replacement Procedures* and test the display again. If the problem still exists, perform Check 3
- Check 3    The display controller on the system board may be damaged. Replace the system board with a new one following the instructions in Chapter 4, *Replacement Procedures*.

## 2.10 Optical Disk Drive Troubleshooting

To check if optical disk drive is malfunctioning or not, follow the troubleshooting procedures below as instructed.

Procedure 1: Diagnostic Test Program Execution Check

Procedure 2: Connector Check and Replacement Check

### 2.10.1 Procedure 1 Diagnostic Test Program Execution Check

Execute the CD-ROM/DVD-ROM Test in the Diagnostic Program (CD). Refer to Chapter 3, *Tests and Diagnostics* for more information on how to perform the test program.


Prepare the tools before the test.

If any error is detected by the test, go to Procedure 2.

### 2.10.2 Procedure 2 Connector Check and Replacement Check

The ODD may be disconnected, or the ODD or system board may be damaged. Disassemble the computer following the steps described in Chapter 4, *Replacement Procedures* and perform the following checks:

Check 1 Make sure the SATA ODD is firmly connected to CN9700 on the system board.

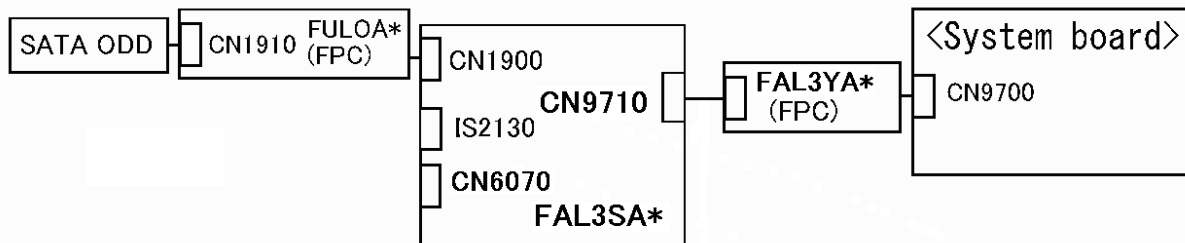

If any of the connections are loose, reconnect firmly and repeat Procedure 1. If there is still an error, go to Check 2.

Check 2 SATA ODD or the FPC (FULOA\*) may be damaged. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures*. If the problem still exists, perform Check 3.

Check 3 SD/SATA ODD board(FAL3SA\*) or the FPC( FAL3YA\*) may be damaged. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures*. If the problem still exists, perform Check 4

Check 4    System board may be faulty. Replace it with new one following the instructions in Chapter 4, *Replacement Procedure*.

## 2.11 LAN Troubleshooting

To check if the computer's LAN is malfunctioning or not, follow the troubleshooting procedures below as instructed.

Procedure 1: Diagnostic Test Program Execution Check

Procedure 2: Connector Check and Replacement Check

### 2.11.1 Procedure 1 Diagnostic Test Program Execution Check


Execute LAN test in the LAN/Modem/Bluetooth/IEEE1394 test program. Refer to Chapter 3, *Tests and Diagnostics* for more information on how to perform the test program.

If any error is detected by the test, go to Procedure 2.

### 2.11.2 Procedure 2 Connector Check and Replacement Check

LAN cable is connected to system board. If LAN malfunctions, the connection of the cable and board may be defective. Otherwise, they may be faulty.

Check 1 Make sure LAN cable is firmly connected to the LAN jack on the system board. If the problem still occurs, perform Check 2.

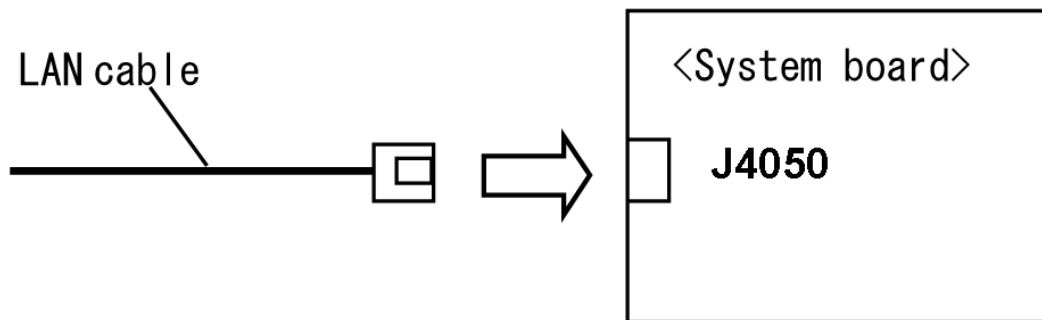

Check 2 LAN cable may be faulty. Replace it with a new one. If the problem still occurs, perform Check 3.

Check 3 System board may be faulty. Replace it with a new one following the instruction in Chapter 4, *Replacement Procedure*.

## 2.12 Wireless LAN or Wireless LAN +Bluetooth Troubleshooting

To check if the computer's Wireless LAN is malfunctioning or not, follow the troubleshooting procedures below as instructed.

Also in a wireless LAN +Bluetooth module, it checks by the same method except a test program.

Procedure 1: Transmitting-Receiving Check

Procedure 2: Antennas' Connection Check

Procedure 3: Replacement Check


### 2.12.1 Procedure 1 Transmitting-Receiving Check

**Check 1** Execute Wireless LAN test or Bluetooth test program to check the transmitting-receiving function of wireless LAN or Bluetooth. You will need a second computer that can communicate by wireless LAN or Bluetooth. Perform the test following the instructions described in Chapter 3, *Tests and Diagnostics*.

If the computer passes the test, the function is correctly working. If the computer does not pass the test, perform Procedure 2.

### 2.12.2 Procedure 2 Antennas' Connection Check

The wireless LAN or Bluetooth function-wiring diagram is shown below:

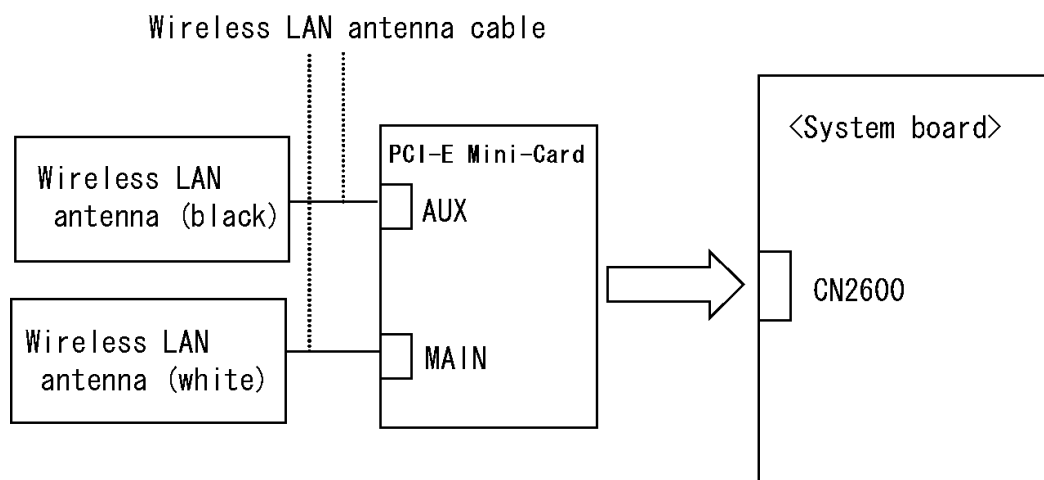

In addition, the antenna used by Wireless LAN and Bluetooth function is common use.

Any of the connections may be defective. Disassemble the computer following the steps described in Chapter 4, *Replacement Procedures*, and perform the following checks:

- Check 1    Make sure PCI-E Mini-Card (Wireless LAN or Wireless LAN/Bluetooth Combo card) is firmly connected to the CN2600 on the system board. If the connection is loose, connect it firmly and perform Procedure 1. If the problem still occurs, perform Check 2.
- Check 2    Make sure that wireless LAN antenna cables (black and white) are firmly connected to the connectors on Wireless LAN card. If wireless LAN antenna cables are not connected properly, connect them firmly and perform Procedure 1. If the problem still occurs, go to the procedure 3.

### **2.12.3 Procedure 3                      Replacement Check**

Wireless LAN card, wireless LAN antenna or system board may be faulty. Refer to Chapter 4, *Replacement Procedures*, for instructions on how to disassemble the computer and then perform the following checks:

- Check 1    Wireless LAN antenna may be faulty. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures*. If the problem still occurs, perform Check 2.
- Check 2    Wireless LAN or Wireless LAN/Bluetooth Bluetooth Combo card may be faulty. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures*. If the problem still occurs, perform Check 3.
- Check3    System board may be faulty. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures*.

## 2.13 Bluetooth Troubleshooting

To check if the Bluetooth is malfunctioning or not, follow the troubleshooting procedures below as instructed.

Procedure 1: Diagnostic Test Program Execution Check

Procedure 2: Connection Check and Replacement Check

### Procedure 1 Diagnostic Test Program Execution Check

Check 1 Execute Bluetooth test program. Perform the test following the instructions described in Chapter 3, Bluetooth Test Program. You will need a second computer that can communicate by the Bluetooth.

If the computer passes the test, the function is correctly working. If the computer does not pass the test, go to check 2.


Check 2 The Bluetooth module may be defective or damaged. Replace it with a new one. Then perform the test program again.

If the computer still does not pass the test, go to Procedure 2.

### Procedure 2 Connector Check and Replacement Check

The Bluetooth may be disconnected, or the Bluetooth module, Bluetooth cable or system board may be damaged. Disassemble the computer following the steps described in Chapter 4, *Replacement Procedures* and perform the following checks:

Check 1 Make sure the Bluetooth is firmly connected to CN4440 on the system board. In the case of a wireless LAN +Bluetooth module, Section 2.12 is referred to.

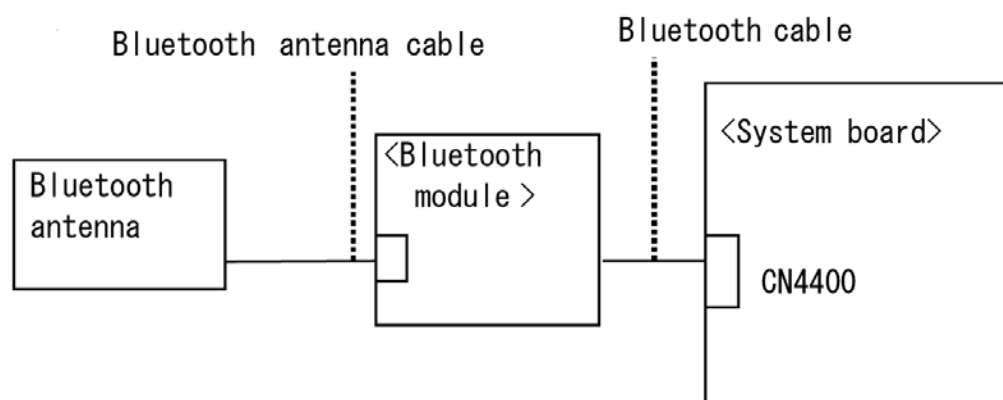

If any of the connections are loose, reconnect firmly and repeat Procedure 1. If there is still an error, go to Check 2.

- Check 2 Bluetooth antenna may be faulty. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures*. If the problem still occurs, perform Check 3.
- Check 3 Bluetooth module may be damaged. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures* and check the operation. If the problem still exists, perform Check 4.
- Check 4 Bluetooth cable may be damaged. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures*. If the problem still exists, perform Check 4.
- Check 5 System board may be damaged. Replace it with a new one following the



## 2.14 Sound Troubleshooting

To check if the sound function is malfunctioning or not, follow the troubleshooting procedures below as instructed.

Procedure 1: Diagnostic Test Program Execution Check

Procedure 2: Connector Check

Procedure 3: Replacement Check


### 2.14.1 Procedure 1 Diagnostic Test Program Execution Check

Execute the Sound test in Sound Test program disk. Refer to Chapter 3, *Tests and Diagnostics* for more information on how to perform the test program.

If any error is detected by the test, go to Procedure 2.

### 2.14.2 Procedure 2 Connector Check

The connection of sound system is shown in the following figure.

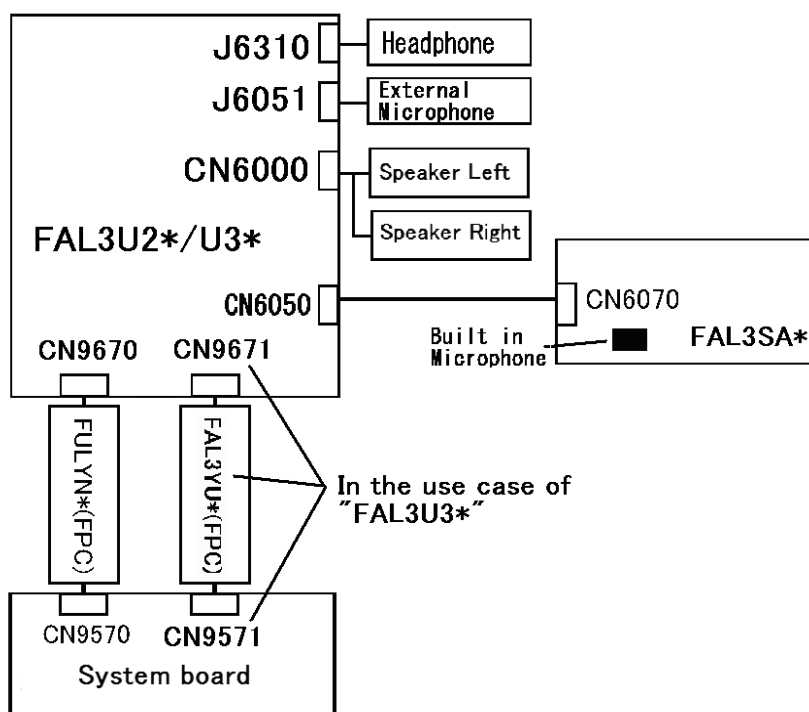

As the connection may be defective, disassemble the computer and check each connection. If the problem still occurs, go to Procedure 3.

### 2.14.3 Procedure 3 Replacement Check

- ☐ If headphone does not work properly, perform check 1.
- ☐ If external microphone does not work properly, perform check 2.
- ☐ If internal microphone does not work properly, perform check 3.
- ☐ If Speaker Right does not work properly, perform check 4.
- ☐ If Speaker Left does not work properly, perform check 5.

- Check 1 Headphone may be faulty. Replace it with a new one following the steps in Chapter 4, *Replacement Procedures*. If the problem still occurs, perform Check 7.
- Check 2 External microphone may be faulty. Replace it with a new one following the steps in Chapter 4, *Replacement Procedures*. If the problem still occurs, perform Check 7
- Check 3 Internal microphone may be faulty. Replace it with a new one following the steps in Chapter 4, *Replacement Procedures*. If the problem still occurs, perform Check 6
- Check 4 Speaker Right may be faulty. Replace it with a new one following the steps in Chapter 4, *Replacement Procedures*. If the problem still occurs, perform Check 7.
- Check 5 Speaker Left may be faulty. Replace it with a new one following the steps in Chapter 4, *Replacement Procedures*. If the problem still occurs, perform Check 7
- Check 6 SD/SATA ODD board (FAL3SA\*) or the cable may be damaged. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures*. If the problem still exists, perform Check 8
- Check 7 Sound/USB board (FAL3U2\*/ FAL3U3\*) or the FPC (FULYN\*/FAL3YU\*) may be faulty. Replace it with a new one following the steps in Chapter 4, *Replacement Procedures*. If the problem still occurs, perform Check 8
- Check 8 System board may be faulty. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures*.

## 2.15 SD Card Slot Troubleshooting

This section describes how to determine if the computer's SD Card functions are functioning properly. Perform the steps below starting with Procedure 1 and continuing with the other procedures as required.

Procedure 1: Check on Windows OS

Procedure 2: Connector Check and Replacement Check

### 2.15.1 Procedure 1 Check on Windows OS


Insert a SD Card (SD memory card/Multimedia card) into the slot. Check if the installed Windows recognizes automatically the SD Card and the data in the SD Card can be read.

If the card is not recognized or data are not read, go to Procedure 2.

### 2.15.2 Procedure 2 Connector Check and Replacement Check

The SD Card is connected to IS2130 on the SD/SATA ODD board (FAL3SA\*).

SD Card supports SD memory card/Multimedia card.

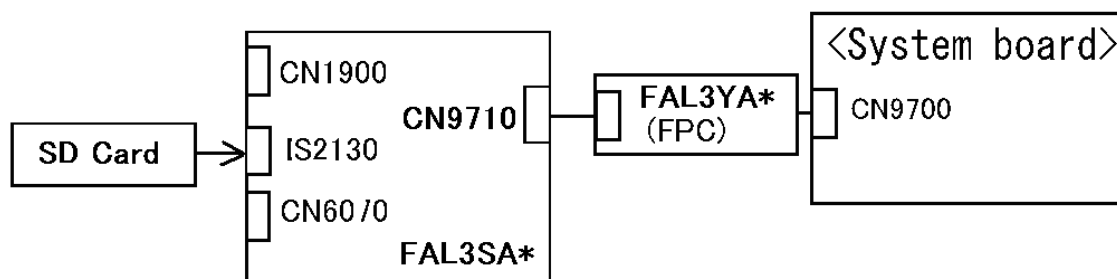

As the connection may be defective, disassemble the computer and check each connection. If the problem still occurs, go to Check 1.

- Check 1 SD Card may be disconnected. Make sure the SD Card is firmly inserted to IS2130. If not, insert it firmly. If the SD Card is still not functioning properly, perform Check 2.
- Check 2 SD Card may be faulty. Replace it with a new one following the step in Chapter 4 *Replacement Procedures*. If the problem continues, perform Check 3.
- Check 3 SD/SATA ODD board (FAL3SA\*) or the FPC (FAL3YA\*) may be damaged. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures*. If the problem still exists, perform Check 4

Check 4    System board may be faulty. Replace it with a new one following the step in Chapter 4 *Replacement Procedures*.

## **2.16 PCI ExpressCard Slot Troubleshooting**

This section describes how to check PCI ExpressCard slot by inspecting a card with PCI Express interface and a card with USB 2.0 interface.

1. Gigabit Ether ExpressCard
2. USB2.0 5in1 ExpressCard

### **1. Gigabit Ether ExpressCard**

- (1) Insert the Gigabit Ether ExpressCard into the ExpressCard slot.
- (2) On Windows, open System Property → Hardware → Device Manager window.
- (3) Make sure that the following device is recognized on the Device Manager window.

Marvell Yukon 88E8053E PCI-E Gigabit Ethernet Controller #2

(“#2” is displayed in the PC with a built-in LAN of Gigabit, because the controller is the same one. “#2” is not displayed in the PC with a built-in LAN of 10/100 Megabit.)

- (4) After confirmation, take a “Safety Remove” procedure and pull out the Gigabit Ether ExpressCard

### **2. USB2.0 5in1 ExpressCard**

- (1) Insert the USB2.0 5in1 ExpressCard into the ExpressCard slot.
- (2) On Windows, open System Property →Hardware → Device Manager window.
- (3) Make sure that the following device is recognized on the Device Manager window.

USB 2.0 5in1 ExpressCard USB Device

- (4) After confirmation, take a “Safety Remove” procedure and pull out the USB2.0 5in1 ExpressCard.

## 2.17 Fingerprint sensor Troubleshooting

**CAUTION:** To delete the account for confirming the fingerprint operation, it is necessary to log on by the account with the management authority. If the password has been set to log on, ask the Log-ON password to the user.

To check if the Fingerprint sensor works correctly or not, follow the troubleshooting procedures below as instructed.

When failed in Procedure 1 to Procedure 3, execute Procedure 4.

Procedure 1: Setting Windows Log-ON password



Procedure 2: Registration of fingerprint

Procedure 3: Authentication of fingerprint

Procedure 4: Connector Check and Replacement Check

**CAUTION:** Scan your finger shown below.

1. Lay your finger straight to the sensor and put lightly the first joint of your finger at the centerline of the fingerprint sensor.
2. Slide slowly your finger from the first joint to fingertip at constant speed. When not recognized, adjust the speed.

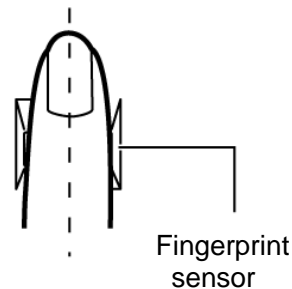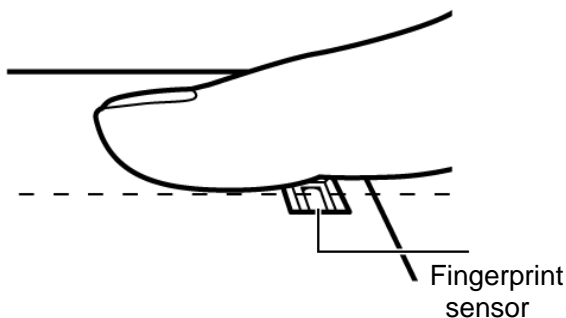

## **Procedure 1     Setting Windows Log-ON password**

1. Open [User Account] from [Control Panel].
2. Click [User Account].
3. Click the icon of the account (user's name) that you want to set the password.
4. Click "Create Account".
5. Type a password in "Type a new password".
6. Press **Tab** key.
7. Type the password again.
8. Click "Create Password" button.
9. When "Do you want to make your files and folders private" appears in [Computer administrator], click [Yes, Make Private].


## **Procedure 2     Registration of fingerprint**

1. To run this program, click Start -> All Programs -> TrueSuite Access Manager -> TrueSuite Access Manager ->.
2. The Verify screen will be displayed, enter the Windows logon password and click the Next button.
3. On the User's Fingers screen click the box above the finger you wish to register. If any of the previously enrolled fingerprints is selected again, the latest information will be enrolled and any previous information over-written.
4. The Fingerprint Enrollment screen will be displayed and the tutorial will begin. First click "Replay video" and confirm the proper movement for the finger you wish to register. Then confirm the message displayed on this screen and ensure that there is a check mark in the Run Interactive Tutorial box. Once this has been done, click Next.
5. At the Scanning Practice screen, you are able to practice swiping (three times) your finger to ensure you use the correct method. Click "Try again" to if you wish to practice again. You have finished practicing, click Next button.
6. Register your fingerprint on the Fingerprint Image Capture screen. Let the computer read the finger to be registered 3 times. An image of your fingerprint will be shown on the screen each time the fingerprint is successfully read. Once the fingerprint is successfully read for the third time, the message successfully combined will be displayed beneath the fingerprint images. Click the Next button.

7. When the Store to Sensor screen is displayed, check Store fingerprint to Sensor. Click Finish to complete fingerprint registration.

### **Procedure 3 Authentication of fingerprint**

1. Turn on the computer to start up Windows.
2. In the Windows logon window, put lightly the first joint of your finger registered and slide your finger sideways.

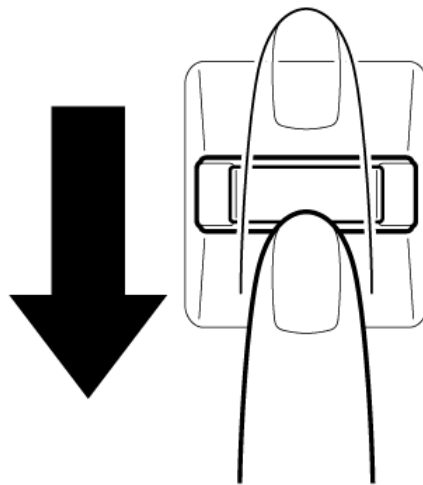

When authenticated, [Success] is displayed in the fingerprint authentication display.

When not authenticated well, warning message appears.

If you fail continually five times or more, you can not use the fingerprint authentication about two minute.


When not authenticated, type the password to logon to Windows.



#### Procedure 4 Connector Check and Replacement Check

The connection of the cable and board may be defective. Otherwise, they may be faulty. Disassemble the computer following the steps described in Chapter 4, *Replacement Procedures*, and perform the following checks:

- Check 1 Make sure the cables are firmly connected to the Finger/pad board and system board.

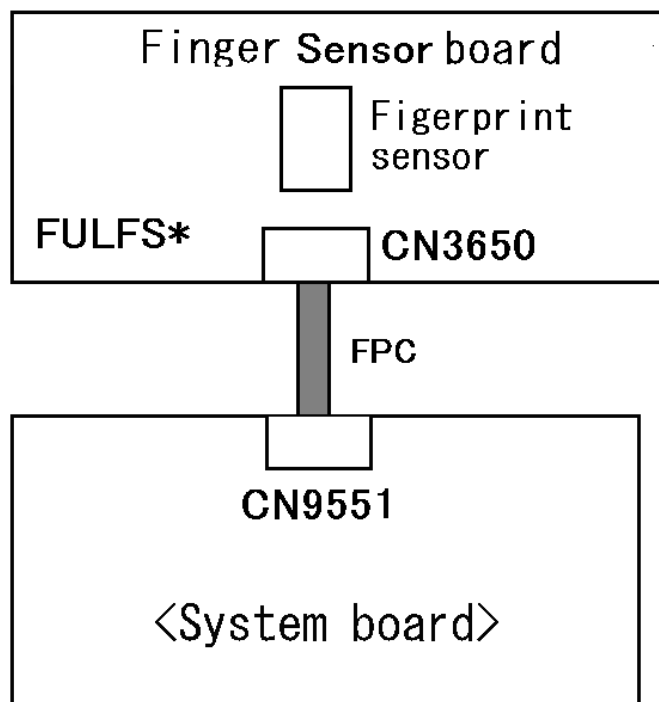

If the connection is loose, reconnect firmly and repeat Procedure 1. If the problem still occurs, go to Check 2.

- Check 2 Finger Sensor board or the FPC may be faulty. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures*. If the problem still occurs, perform Check 3.
- Check 3 System board may be faulty. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures*.

## 2.18 Web camera Troubleshooting


To check if the computer's web camera is malfunctioning or not, follow the troubleshooting procedures below as instructed.

Procedure 1: Check on Windows OS

Procedure 2: Connector Check and Replacement Check

### 2.18.1 Procedure 1 Check on Windows OS

Use the software, Camera Assistant Software, which is originally prepared in the computer to check if the web camera can record/replay still images and moving images (including sound) without problems.

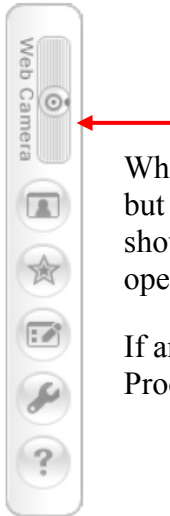


When the Camera Assistant Software is installed, the menu will stay on the screen but hide at the left edge of the screen. Move the pointer to the left on the screen to show the menu. When the menu appears, double-click the icon for Web Camera to operate the web camera.

If any troubles occur on recording/replaying of still or moving images, perform Procedure 2.

### 2.18.2 Procedure 2 Connector Check and Replacement Check

The connection of cables, web camera and microphone may be defective. Otherwise, they may be faulty. disassemble the computer following the steps described in Chapter 4 and perform the following checks.

Check 1 If the connection is loose, reconnect it firmly and check each connection. If the problem still occurs, perform Check 2.

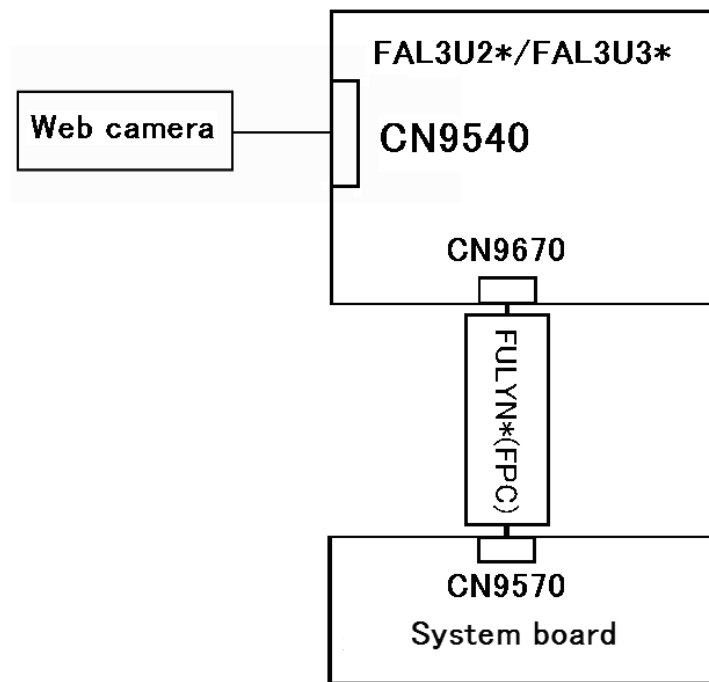

- Check 2 If web camera does not work properly (the image from a web camera cannot be displayed.), web camera may be faulty. Replace it with a new one following the steps in Chapter 4, *Replacement Procedures*. If the problem still occurs, perform Check 3
- Check 3 Sound/USB board (FAL3U2\*/FAL3U3\*) or the FPC (FULYN\*) may be faulty. Replace it with a new one following the steps in Chapter 4, *Replacement Procedures*. If the problem still occurs, perform Check 4
- Check 4 System board may be faulty. Replace it with a new one following the step in Chapter 4 *Replacement Procedures*.

## **2.19 3G Troubleshooting**

This section describes how to determine if the computer's 3G is functioning properly. Perform the steps below starting with Procedure 1 and continuing with the other procedures as required.

Procedure 1: Transmitting-Receiving Check

Procedure 2: Replacement Check

### **Procedure 1 Transmitting-Receiving Check**

Make sure the wireless switch ON side of the computer is turned. If it is not, slide the switch toward the ON side to turn it on.

Refer to Chapter 3, *Tests and Diagnostics* for more information on how to perform the test program.

Check 1    Execute test program for the 3G function to check the transmitting-receiving function of the 3G. You will need a second computer that can communicate by the 3G.

3G test program for DOS is an object for EV620TV2.


The test program for EU870DT1 should use the WINDOWS version.

If the computer passes the test, the function is correctly working.

If the computer does not pass the test, perform Procedure 2.

## Procedure 2 Replacement Check k

The 3G wiring diagram is shown below:

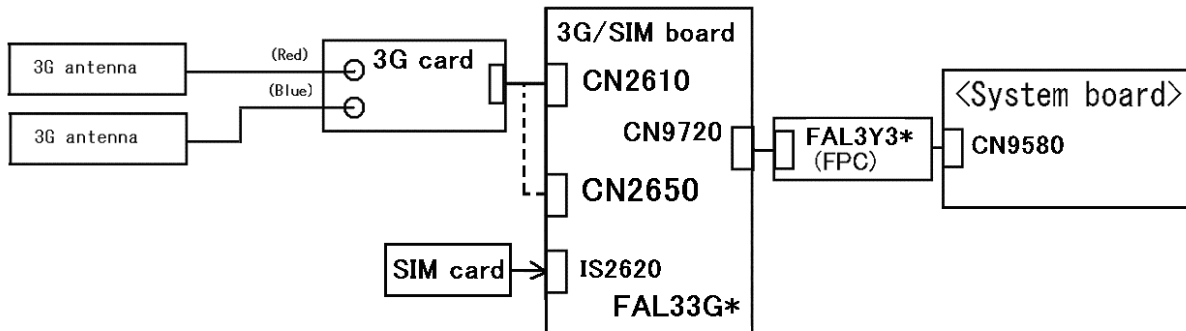

The 3G antenna, 3G card and the system board are connected to the circuits. Any of these components may be damaged. Refer to Chapter 4, *Replacement Procedures*, for instructions how to disassemble the computer and then perform the following checks:

- Check 1 SIM card may be defective or damaged. Replace it with a new one following the steps in Chapter 4, *Replacement Procedures*. If the problem still exists, perform Check 2.
- Check 1 3G card may be defective or damaged. Replace it with a new one following the steps in Chapter 4, *Replacement Procedures*. If the problem still exists, perform Check 2.
- Check 2 3G antennas may be defective or damaged. Replace the antennas with new ones following the steps in Chapter 4, *Replacement Procedures*. If the problem still exists, perform Check 3.
- Check 3 The 3GS/SIM board(FAL3G\*) or the FPC( FAL3Y3\*) may be damaged. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures*. If the problem still exists, perform Check 4
- Check 4 System board may be faulty. Replace it with a new one following the step in Chapter 4 *Replacement Procedures*.

## 2.20 HDMI Troubleshooting

To check if the computer's HDMI is malfunctioning or not, follow the troubleshooting procedures below as instructed.

Procedure 1: Check on HDMI TV

Procedure 2: Connector Check and Replacement Check


### 2.20.1 Procedure 1 Check on HDMI TV

A HDMI monitor can be connected to the HDMI out port on the computer. To connect monitor, follow the steps as detailed below:

Note: As the port operation of all HDMI (High-Definition Multimedia Interface) monitors have not been confirmed, some HDMI monitors may not function properly.

#### Connecting the HDMI out port

1. Plug one end of the HDMI cable into the HDMI out port of the HDMI device.
2. Plug the other end of the HDMI cable into the HDMI out port on your computer.

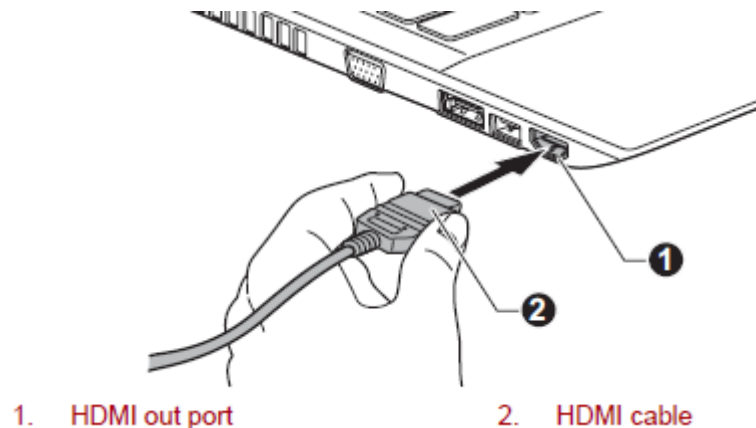

**Note:**

When connecting or disconnecting an HDMI device to or from the computer, only do so when the computer is turned on or when the computer is completely turned off. Do not do so when the computer is in Sleep Mode or Hibernation Mod

When you connect a television or external monitor to the HDMI port and the display output device is set to HDMI.

When you unplug the HDMI cable and re-plug it in please wait at least 5 seconds before you re-plug the HDMI cable again.

When you connect a television or external monitor to the HDMI port and you connect the television, external monitor or external sound device to another port.

When you change the display output or Unplug/re-plug the HDMI cable.

The sound output device and the display output device maybe changed automatically by the system

## Settings for display video on HDMI

To view video on the HDMI device, be sure to configure the following settings otherwise you may find that nothing is displayed.

### **Note:**

- Be sure to use the FN + F5 HotKey to select the display device before starting to play video. Do not change the display device while playing video.
- Do not change the display device under the following conditions.
  - While data is being read or written.
  - While communication is being carried out.

## Select HD Format

To select the display mode, follow the steps as detailed below:

1. Click Start and click Control Panel.
2. Click Appearance and Personalization.
3. Click Display.
4. Click Change display settings.
5. Click Advanced settings.
6. Click List All Modes.
7. Select the one of the below selection at "List All Modes".

<b>Display mode at "List All Modes"</b>	<b>HD Format</b>
---	------------------

1920 by 1080, True Color (32bit), 60Herts	1080p
1920 by 1080, True Color (32bit), 30Herts (Interlaced)	1080i
1280 by 720, True Color (32bit), 60Herts	720p
720 by 576, True Color (32bit), 50Herts	576p
720 by 480, True Color (32bit), 60Herts	480p


**Note:**

The above display mode is a typical HDMI display mode. The selectable display modes will vary for different HDMI monitors.

**Procedure 2 Connector Check and Replacement Check**

The connection of cables, boards and module may be defective. Otherwise, they may be faulty. Disassemble the computer following the steps described in Chapter 4 and perform the following checks:

Check 1 Make sure the HDMI TV is firmly connected to CN9540 on the system board.

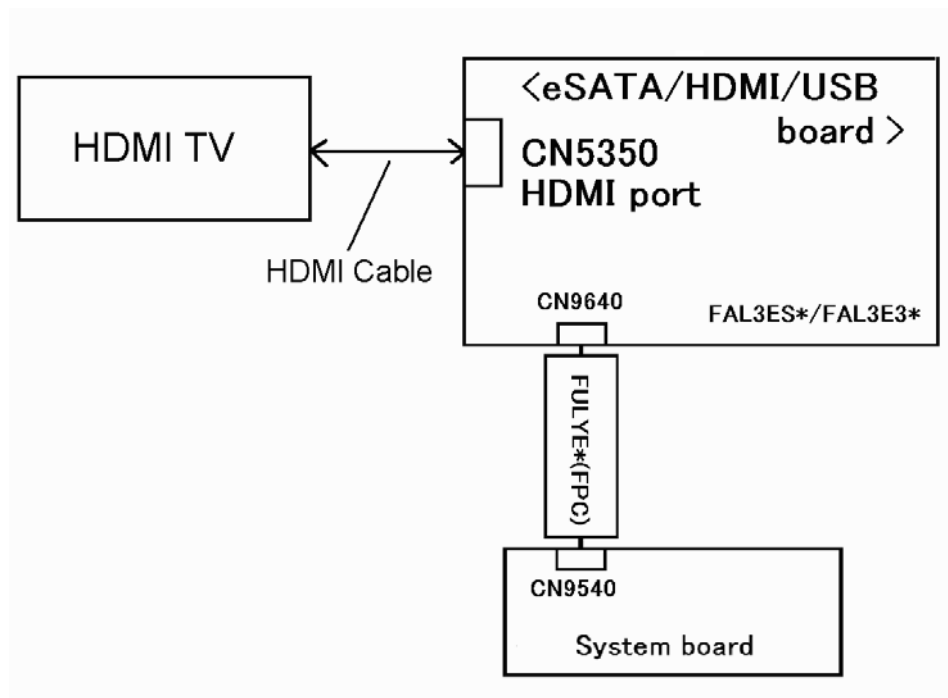

If any of the connections are loose, reconnect firmly and repeat Procedure 1. If there is still an error, go to Check 2.



- Check 2 It checks whether there are any abnormalities in a setup of HDMI TV, and returns to Procedure 1. In addition, a HDMI setup of television should check "the instructions manual of attachment on HDMI TV." If the problem still exists, perform Check 3.
- Check 3 HDMI TV cable may be damaged. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures*. If the problem still exists, perform Check 4.
- Check 4 HDMI TV may be damaged. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures* and check the operation. If the problem still exists, perform Check 5.
- Check 5 eSATA/HDMI/USB board (FAL3ES\*/FAL3E3\*) or the FPC (FULYE\*) may be damaged. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures* and check the operation. If the problem still exists, perform Check 6.
- Check 6 System board may be damaged. Replace it with a new one following the instructions in Chapter 4, *Replacement Procedures*.

---

## **Chapter 3**

# **Tests and Diagnostics**

---



---

## Chapter 3      Contents

---

<b>3</b>	<b>3-2</b>	
3.1	The Diagnostic Test .....	3-7
3.1.1	Diagnostics menu .....	3-7
3.1.2	H/W (Hardware) initial information setting tool.....	3-9
3.1.3	Heatrun test program .....	3-9
3.2	Executing the Diagnostic Test .....	3-10
3.2.1	Diagnostics menu (T&D) .....	3-13
3.2.2	H/W initial information setting tool .....	3-16
3.2.3	Heatrun test program .....	3-16
3.3	Setting of the hardware configuration .....	3-17
3.4	Heatrun Test.....	3-19
3.5	Subtest Names.....	3-20
3.6	System Test.....	3-22
3.7	Keyboard Test.....	3-25
3.8	Display Test .....	3-26
3.9	Floppy Disk Test.....	3-29
3.10	Printer Test.....	3-31
3.11	Async Test .....	3-33
3.12	Hard Disk Test .....	3-34
3.14	Real Timer Test.....	3-37
3.15	NDP Test.....	3-39
3.16	Expansion Test.....	3-40
3.17	CD-ROM/DVD-ROM Test .....	3-42
3.18	Error Code and Error Status Names .....	3-43
3.19	Hard Disk Test Detail Status .....	3-46
3.20	ONLY ONE TEST.....	3-48
3.20.1	Program Description .....	3-48
3.20.2	Operations .....	3-48
3.21	Head Cleaning.....	3-60
3.21.1	Function Description .....	3-60

3.21.2	Operations .....	3-60
3.22	Log Utilities .....	3-61
3.22.1	Function Description .....	3-61
3.22.2	Operations .....	3-62
3.23	Running Test.....	3-63
3.23.1	Function Description .....	3-63
3.23.2	Operations .....	3-63
3.24	Floppy Disk Drive Utilities.....	3-64
3.24.1	Function Description .....	3-64
3.24.2	Operations .....	3-65
3.25	System Configuration .....	3-69
3.25.1	Function Description .....	3-69
3.25.2	Operations .....	3-70
3.26	Wireless LAN Test Program (Atheros) .....	3-71
3.27	Wireless LAN Test Program (Intel-made a/b/g/n Setting up of REF PC).....	3-73
3.28	Wireless LAN Test Program on DUT PC (Intel-made).....	3-78
3.29	LAN/Modem/Bluetooth/IEEE1394 Test Program .....	3-82
3.29.1	LAN test .....	3-82
3.29.2	Modem test : (Not Used).....	3-85
3.29.3	Bluetooth test.....	3-86
3.29.4	IEEE1394 test (Not Used).....	3-88
3.30	Sound Test program.....	3-89
3.31	SETUP .....	3-90
3.31.1	Function Description .....	3-90
3.31.2	Accessing the SETUP Program.....	3-93
3.32	Maintenance (WinPE&FreeDos) Test Program Operation .....	3-98
3.32.1	. Outline .....	3-98
3.32.2	Outline of Specification .....	3-98
3.33	. Starting TOSHIBA Test & Diagnostic .....	3-99
3.33.1	Starting from CD .....	3-99
3.34	. Windows PE T&D .....	3-101
3.34.1	Equipment Configuration for Test .....	3-101

3.34.2	Starting T&D.....	3-102
3.34.3	System Information Menu.....	3-103
3.34.4	Test Menu.....	3-107
3.34.5	System Utility Menu .....	3-114
3.34.6	Details of Each Test Function .....	3-120
3.35	DOS T&D .....	3-147
3.35.1	Configuration of Test Equipment.....	3-147
3.35.2	How to start T&D.....	3-150
3.35.3	Test Operating Procedure.....	3-154
3.35.4	Error Code Status .....	3-156
3.35.5	Task Function.....	3-158
3.35.6	Detail of Each Test Function.....	3-161
3.36	Maintenance (WinPE&FreeDos) Test Program Supplementary Information.....	3-175
3.36.1	Details of HTML Log File .....	3-175
3.37	Maintenance (WinPE&FreeDos) Test Program Supplementary Information.....	3-178
3.37.1	Outline.....	3-178
3.37.2	Notices and Restrictions (Win PE T&D) .....	3-178
3.37.3	Notices and Restrictions (Freedos) .....	3-179

**Tables**

Table 3-1 Subtest names (1/2) ..... 3-20

Table 3-2 Error codes and error status names (1/3)..... 3-43

Table 3-3 Hard disk controller status register contents ..... 3-46

Table 3-4 HDC Error register contents..... 3-47

## 3.1 The Diagnostic Test

This chapter explains how to use the Diagnostic Test programs to test the functions of the computer's hardware modules.

If Diagnostic Disks (CD) is inserted in Optical disk drive, it will start in the following procedures.

Procedure 1: The check and setup of Entry of the DMI information

Procedure 2: The check and update of BIOS information

Procedure 3: The check and update of EC/KBC information

Then, the following test program menu is displayed.

Repair test program

1. DMI Entry utility
2. Repair Heatrun (T&D)
3. Repair Main (T&D)
4. BIOS (VX.XX) it is the latest
5. EC/KBC (VX.XX) it is the latest

The Diagnostics Programs (Repair Main) are stored on some Diagnostic Disks. There are Service Program Modules (DIAGNOSTIC MENU) and the Test Program Modules (DIAGNOSTIC TEST MENU) on the Diagnostic Disk (CD).

The Hardware Initial information Setting Tool (DMI Entry utility) consists of some programs that write the hardware information or displays the current information of the computer. It is also included in one of Diagnostic Disks.

The Heatrun test (Repair Heatrun) is automatic test program that executes the some tests successively.

**NOTE:** Before starting the diagnostics, be sure to follow these steps:

1. Check all cables are connected firmly.
2. Exit any application and close Windows.
3. Check if [ALL Device] is selected in the "Device Config." in SET UP menu.  
After checking the diagnostics, be sure to select [Setup by OS] in the "Device Config."

### 3.1.1 Diagnostics menu

The DIAGNOSTIC MENU consists of the following functions.



- ☐ DIAGNOSTIC TEST
- ☐ ONLY ONE TEST
- ☐ HEAD CLEANING
- ☐ LOG UTILITIES
- ☐ RUNNING TEST
- ☐ FDD UTILITIES
- ☐ SYSTEM CONFIGURATION
- ☐ POWER OFF

The DIAGNOSTIC TEST MENU contains the following functional tests:

- ☐ SYSTEM TEST
- ☐ MEMORY TEST
- ☐ KEYBOARD TEST
- ☐ DISPLAY TEST
- ☐ FLOPPY DISK TEST
- ☐ PRINTER TEST [It is not supported ]
- ☐ ASYNC TEST [It is not supported ]
- ☐ HARD DISK TEST
- ☐ REAL TIMER TEST
- ☐ NDP TEST
- ☐ EXPANSION TEST
- ☐ CD-ROM/DVD-ROM TEST
- ☐ ERROR RETRY COUNT SET [FDD & HDD]

Other tests are:

- ☐ Wireless LAN TEST (Wireless LAN TEST disk)
- ☐ LAN/Modem/Bluetooth/IEEE1394 TEST (LAN/Modem/Bluetooth/IEEE1394 TEST disk)
- ☐ Sound TEST (Sound TEST disk)

You will need the following equipment to perform some of the Diagnostic test programs.

- ☐ USB FDD
- ☐ The Diagnostic Disks (T&D for maintenance (CD), LAN/Modem/Bluetooth/IEEE1394 for maintenance, wireless LAN for maintenance and Sound for maintenance)
- ☐ A formatted working disk (Floppy disk test)
- ☐ A cleaning kit to clean the floppy disk drive heads (Head Cleaning)
- ☐ An external display supporting monitor ID (Expansion test)
- ☐ A CD test media TOSHIBA CD-ROM TEST DISK or ABEX TEST CD-ROM (Sound test)
- ☐ A DVD test media (DVD-ROM TEST DISK TSD-1) (Sound test)
- ☐ A music CD (Sound test)
- ☐ A CD-RW test media (CD-ROM/DVD-ROM test)
- ☐ A USB test module (USB test )

- ☐ A USB cable (USB test)
- ☐ LAN wraparound connector (LAN test)
- ☐ RGB wraparound connector (Expansion test)
- ☐ Module cable and RJ11 connector checker (Modem test)
- ☐ Headphones (Sound test)
- ☐ A microphone (Sound test)
- ☐ A PC for wraparound test (Wireless LAN test/Bluetooth test/IEEE1394 test)
- ☐ PC card wraparound connector (Expansion test) [Not necessary for this model]

### **3.1.2 H/W (Hardware) initial information setting tool**

The H/W initial information setting tool consists of the following programs.

- ☐ Initial configuration
- ☐ DMI information save
- ☐ DMI information recovery
- ☐ System configuration display
- ☐ E2PROM test (MAC/GUID/DMI)

You will need the following equipment to perform some of the programs.

- ☐ The Diagnostics Disk (Main T&D)

### **3.1.3 Heatrun test program**

The heatrun test starts automatically after the selection.

You will need the following equipment to perform this program.

- ☐ The Diagnostics Disk (Main T&D)

## 3.2 Executing the Diagnostic Test

To start the Repair test program, follow these steps:

Step 1: Insert the Repair test program disk in the Optical disk drive.

Step 2: Turn on the computer while pressing F12 key.

Step 3: chose ODD on the selection screen which chooses a startup drive, press the Enter Key.

Step 4: Then, the following procedure is followed.

Procedure 1: The check and setup of Entry of the DMI information

When a system board is exchanged and DMI information is not written in, a setup is performed here.

Refer to 3.3 Setting of the hardware configuration- subtest 01 Entry of the DMI information (DMI Write program VX.XX) for details.

Procedure 2: The check and update of BIOS information

The BIOS version of a computer is checked, and when it is not the latest version, it updates.

The following menu is displayed on a screen. When the BIOS update is needed.

Check update BIOS

BIOS Version = VX.XX (VX.XX) Possible to update

Does it update BIOS? (Y or N), or press [Enter] (Selection=Y)?

Pressing on an Enter key will start BIOS update.

Then, since a computer restarts, it begins from the step 2.

In addition, when not updating, press N key is pressed and then Enter key.

**Procedure 3:** The check and update of EC/KBC information

The EC/KBC version of a computer is checked, and when it is not the latest version, it updates.

The following menu is displayed on a screen. When the EC/KBC update is needed.

Check update EC/KBC

EC/KBC Version = VX.XX (VX.XX) Possible to update

Does it update EC/KBC? (Y or N), or or press [Enter] (Selection=Y)?

Pressing on an Enter key will start EC/KBC update.

Then, since a computer restarts, it begins from the step 2.

In addition, when not updating, press N key is pressed and then Enter key.

- NOTE:**

  1. *Connect the AC adapter and the charged battery to the computer when you update the BIOS or EC/KBC.*
  2. *Do not turn off the power while you are updating the BIOS or EC/KBC. If the update fails, it might be impossible to start up the computer.*
  3. *If the update rewrite fails, when you next turn on the power, a message may be displayed that the contents of the BIOS or EC/KBC have been erased. In that case, turn on the power again and perform Procedure 2 or 3.*

After the work for procedures 1-3 is completed, the following test program menu is displayed.

Repair test program

1. DMI Entry utility
2. Repair Heatrun (T&D)
3. Repair Main (T&D)
4. BIOS (VX.XX) it is the latest
5. EC/KBC (VX.XX) it is the latest

To start the Diagnostics menu (T&D), press **3** and **Enter**.

To start the H/W initial information setting tool, press **1** and **Enter**.

To start the Heatrun test, press **2** and **Enter**.

**NOTE:** When replacing the system board, be sure to execute the following procedures.

1. Before replacing the system board, execute subtest03 “DMI information save” in 3.4 Setting of the hardware configuration in order to save the DMI information from system board to floppy disk.
2. After replacing the system board, execute the subtest04 “DMI information recovery” and subtest08 “System configuration display” in 3.4 Setting of the hardware configuration in order to copy the DMI information and system information from the floppy disk.

### 3.2.1 Diagnostics menu (T&D)

Set the highlight bar to **3**, and press **Enter**. The following DIAGNOSTIC TEST MENU will appear:

```
TOSHIBA personal computer XXXXXX DIAGNOSTICS  
version X.XX (c) copyright TOSHIBA Corp. 20XX
```

```
DIAGNOSTICS MENU :  
1 - DIAGNOSTIC TEST  
2 - ONLY ONE TEST  
3 -  
4 - HEAD CLEANING  
5 - LOG UTILITIES  
6 - RUNNING TEST  
7 - FDD UTILITIES  
8 - SYSTEM CONFIGURATION  
9 - EXIT TO MS-DOS
```

**NOTE:** To exit the DIAGNOSTIC TEST MENU, press the **Esc** key. If a test program is in progress, press **Ctrl + Break** to exit the test program. If a test program is in progress, press **Ctrl + C** to stop the test program.

Set the highlight bar to **1**, and press **Enter**. The following DIAGNOSTIC TEST MENU will appear:

```
TOSHIBA personal computer XXXXXX DIAGNOSTICS
version X.XX (c) copyright TOSHIBA Corp. 20XX
```

```
DIAGNOSTIC TEST MENU :
```

```
1 - SYSTEM TEST
2 - MEMORY TEST
3 - KEYBOARD TEST
4 - DISPLAY TEST
5 - FLOPPY DISK TEST
6 - PRINTER TEST           [It is not supported]
7 - ASYNC TEST
8 - HARD DISK TEST
9 - REAL TIMER TEST
10 - NDP TEST
11 - EXPANSION TEST
12 - CD-ROM/DVD-ROM TEST
88 - ERROR RETRY COUNT SET [FDD & HDD]
99 - EXIT TO DIAGNOSTICS MENU
```

<p><b>NOTE:</b> Only when a 2nd HDD is installed in the computer, [There is a second hard disk] message appears in the display.</p>
---

Functions 1 through 12 are the Diagnostic Tests. Function 88 sets the floppy disk drive and hard disk drive error retry count (0-255).

To exit the submenu of the Diagnostic Test and returns to the Diagnostics Menu, set the highlight bar to function 99 and press **Enter**.

Select the option you want to execute and press **Enter**. When you select 1-SYSTEM TEST, the following message will appear:

```
SYSTEM TEST NAME      XXXXXX      xxxxxxxx DIAGNOSTIC TEST VX.XX
                                [Ctrl]+[Break] : test end
                                [Ctrl]+[C]   : key stop
```

```
SUB-TEST      : XX
PASS COUNT    : XXXXX      ERROR COUNT: XXXXX
WRITE DATA   : XX         READ DATA  : XX
ADDRESS       : XXXXXX     STATUS      : XXX
```

SUB-TEST MENU :

```
01 - ROM checksum
02 - Fan ON/OFF
03 - Geyserville
04 - Quick charge
05 - DMI read
99 - Exit to DIAGNOSTIC TEST MENU
```

```
↑↓→← : Select items
Enter : Specify
Esc   : Exit
```

**NOTE:** The menu displayed by your computer may be slightly different from the one shown above.

Select the desired subtest number from the subtest menu and press **Enter**. The following message will appear:

```
TEST LOOP : YES (or NO)
ERROR STOP : YES (or NO)
```

Use the right and left arrow keys to move the cursor to the desired option.

Selecting **YES** of TEST LOOP increases the pass counter by one, each time the test cycle ends and restarts the test cycle.

Selecting **NO** returns the process to the subtest menu after the test is complete.



Use the up and down arrow keys to move the cursor to “ERROR STOP”.

Use the right and left arrow keys to move the cursor to the desired option and press **Enter**.

Selecting **YES** of ERROR STOP stops the test program when an error is found and displays the operation guide on the right side of the display screen as shown below:

```

ERROR STATUS NAME    [[ HALT OPERATION ]]

                        1: Test end
                        2: Continue
                        3: Retry
    
```

These three selections have the following functions respectively:

1. Terminates the test program and exits to the subtest menu.
2. Continues the test.
3. Restarts the test from the error.

Selecting **NO** keeps the test running even if an error is found. When an error occurred, the error status is displayed and one error is added to the error counter.

Table 3-1 in section 3.6 describes the function of each test on the subtest menu. Table 3-2 in section 3.19 describes the error codes and error status for each error.

### 3.2.2 H/W initial information setting tool

After selecting this test, the following menu appears in the display.

```

#####
#####   Repair Initial config set   #####
#####
*      1 ..... Entry of the DMI information      *
*      2 ..... DMI information save              *
*      3 ..... DMI information recovery           *
*                                                    *
*      9 ..... Exit to Repair test menu          *
*****
... Press test number [1-3,9] ?
    
```

For more details on this test, refer to the section 3.3.

### 3.2.3 Heatrun test program

Heatrun test starts executing the same subtest as 3.23 RUNNING TEST.

For more details on this test, refer to the section 3.4.

### 3.3 Setting of the hardware configuration

To execute this program, input **1** in the startup menu. Then press **Enter** to select the (1)-DMI Entry utility. The H/W initial information setting tool consists of four subtests.

Input the number you want to execute and press **Enter**.

**NOTE:** Connect USB FDD, when you perform the Repair test program from the CD-ROM. DMI information on the subtest 02 is written in floppy disk.

Subtest 01      Entry of the DMI information (DMI Write program VX.XX)

This subtest executes the following items and shows their contents in the display. When an item ends normally, the program proceeds automatically to the next one. When an error is found, the program stops and waits for key input. (After solving the problem, the program executes the item again.)

Setting of the CPU set table  
Setting of the micro code  
Setting of the EHSS  
Inputting and writing of DMI information

When the DMI information is displayed, the following messages appear in order. Input each information. (If you do not replace the PCB, the DMI information should not be changed.)

1. “Enter Model Name?” is displayed. Input the computer’s model name and press **Enter**. (e.g. DynaBook)
2. “Enter Version Number?” is displayed. Input the computer’s version number and press **Enter**. (e.g. PC18070C313S)
3. “Enter Serial Number?” is displayed. Input the computer’s serial number and press **Enter**. (e.g. 12345678)
4. “Enter Model Number?” is displayed. Input the computer’s sales model number and press **Enter**. (e.g. PP200-AAAAA)
5. “Enter Bundle Number?” is displayed. Input the computer’s PCN/Bundle number and press **Enter**. (e.g. PMSREQ3Q34H/S0123456789)
6. “Write data OK (Y/N)?” is displayed. To write the DMI information to the Flash ROM, press **Y**, and then **Enter**.

7. “Create DMIINFO TXT (Y/N)?” is displayed. Press **Y**, then the DMI information (text data) is written to the Floppy disk, etc.

Setting of the HWSC

Setting of the UUID

Display of the DMI information (including UUID)

After completion of the above settings, H/W configuration & DMI information are appeared in order. Check the contents and press **Enter**.

Subtest 02      DMI information save

**NOTE:** Before replacing the system board, be sure to execute this subtest and save the DMI information to the floppy disk.

This is one of tools to copy the DMI information to a new PCB after replacing.

This subtest saves all the DMI data in a floppy disk.

Subtest 03      DMI information recovery

This is one of tools to copy the DMI information to a new PCB after replacing.

This subtest writes all the DMI data in the floppy disk into the new PCB.

**NOTE:** Since the data of UUID is updated every time when this subtest, DMI information recovery, is done, the saved UUID data is not written.

### 3.4 Heatrun Test

To execute this program, press **2**, Repair Heatrun and press **Enter** in the startup menu, press **Enter**.

After selecting this test, the same subtests as 3.23 RUNNING TEST is executed successively.

For more details on the procedure and test content, refer to RUNNING TEST.

When the heatrun test ends, following message appears in the display.

```
*****
                        HEATRAN TEST END
*****
Press any key to continue...
```

Press any key and return to the startup menu.

### 3.5 Subtest Names

Table 3-1 lists the subtest names for each test program in the DIAGNOSTIC TEST MENU.

*Table 3-1 Subtest names (1/2)*

No.	Test Name	Subtest No.	Subtest Name
1	SYSTEM	01	ROM checksum
		02	Fan ON/OFF
		03	Geyserville
		04	Quick charge
		05	DMI read
2	MEMORY	01	Conventional memory
		02	Protected Mode
		03	Protected Mode (cache off)
		04	Cache memory (on/off)
		05	Stress
3	KEYBOARD	01	Pressed key code display
4	DISPLAY	01	VRAM read/write for VGA
		02	Gradation for VGA
		03	Gradation for LCD
		04	Gradation & Mode test for VGA
		05	All dot on/off for LCD
		06	"H" pattern display
		07	LCD Brightness
5	FLOPPY DISK	01	Sequential read
		02	Sequential read/write
		03	Random address/data
		04	Write specified address
		05	Read specified address

Table 3-1 Subtest names (2/2)

No.	Test Name	Subtest No.	Subtest Name
6	PRINTER [Not supported]	01	Ripple pattern
		02	Function
		03	Wraparound
7	ASYNC [Not supported]	01	FIR/SIR Point to point (send)
		02	FIR/SIR Point to point (receive)
		03	Wraparound (board)
8	HARD DISK	01	Sequential read
		02	Address uniqueness
		03	Random address/data
		04	Cross talk & peak shift
		05	Partial Read
		06	Write specified address
		07	Read specified address
		08	Sequential write
		09	W-R-C specified address
9	REAL TIMER	01	Real time
		02	Backup memory
		03	Real time carry
10	NDP	01	NDP test
11	EXPANSION	01	PCMCIA wraparound [Not supported]
		02	RGB monitor ID
12	CD-ROM /DVD-ROM	01	Sequential read
		02	Read specified address
		03	Random address/data
		04	RW 1point W/R/C

## 3.6 System Test

To execute the System Test select **1** from the DIAGNOSTIC TEST MENU, press **Enter** and follow the directions on the screen. Move the highlight bar to the subtest you want to execute and press **Enter**.

### Subtest 01 ROM checksum

This subtest executes a checksum test of the BIOS ROM (range: F0000h to FFFFFh, 64KB) on the System Board.

### Subtest 02 Fan ON/OFF

This subtest turns on/off the fan motor by force with Fan ON/OFF commands.

The following message will appear.

```
Fan number select (1:FAN#1, 2:FAN#2, 0:FAN#1&#2) ?
```

To check the CPU fan, press **1** and **Enter**.

To check the VGA fan, press **2** and **Enter**.

To check both CPU fan and VGA fan, press **0** and **Enter**.

The following message will appear.

```
Fan test execute now ... (CPU:xxxxRpm / GPU:xxxxRpm)
```

```
*** Test Fan Revolution 0000RPM start
```

Make sure the specified fan does not rotate and the message of fan revolution is "0000Rpm". Then press **Enter**.

The following message will appear.

```
*** Test Fan Revolution Low speed Start
```

Make sure the fan rotates at low speed, then press **Enter**.

The following message will appear.

```
*** Test Fan Revolution High speed Start
```

Make sure the fan rotates at high speed, then press **Enter**.

After a while, the fan rotating will stop.

### Subtest 03 Geyserville

If the CPU supports Gerserville (SpeedStep), this Subtest checks that the CPU operating clock speed can be changed.

If the CPU does not support Gerserville (SpeedStep), the following message is displayed and the test is ended.

This chip is not supported

#### Subtest 04 Quick Charge

This subtest checks the status for the quick charge.

#### Subtest 05 DMI read

This subtest displays the information in the Flash-ROM in the following format.

```
*** DMI Data Display Ver X.XX ***
Model Name       : XXXXXXXXXXXX
Version Number   : XXXXXXXXXXXX
Serial Number    : XXXXXXXX
UUID Number      : XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
Model Number     : XXXXXX-XXXXX
PCN/BND Number   : XXXXXXXXXXXX
Press [Enter] to EXIT
```

To exit this subtest and return to the SYSTEM test menu, press **Enter**.Memory Test

To execute the Memory Test, select **2** from the DIAGNOSTIC TEST MENU, press **Enter** and follow the directions on the screen. Move the highlight bar to the subtest you want to execute and press **Enter**.

#### Subtest 01 Conventional memory

This subtest writes a constant data to conventional memory (0 to 640 KB), then reads the new data and compares the result with the original data.

#### Subtest 02 Protected Mode

**NOTE:** The CONFIG.SYS file must be configured without expanded memory manager programs such as EMM386.EXE, EMM386.SYS or QEMM386.SYS. Also, the HIMEM.SYS must be deleted from the CONFIG.SYS file.

This subtest writes constant data and address data (from 1MB to maximum MB), and reads the new data and compares the result with the original data.

#### Subtest 03 Cache memory (on/off)



To test the cache memory, a pass-through write-read comparison of '5Ah' data is run repeatedly to the test area ('7000': 'Program' size to '7000': '7FFF' (32 KB)) to check the hit-miss ratio (on/off status) for CPU cache memory. One test takes 3 seconds.

Number of misses < Number of hits → OK

Number of misses ≥ Number of hits → Fail

Subtest 04      Stress

Write/Read buffer (1 size = B30h) is prepared in the conventional memory. The data is made in the Write Buffer, the data in Write Buffer is written in the area of address of 1MB or after. The data is read in the Read Buffer and data is compared in area up to the maximum size.

Data: FFh, FFh, FFh, FFh, FFh, 00h, 00h, 00h, 00h,  
FFh, FFh, FFh, 00h, FFh, 00h, 00h, FFh, 00h,  
00h, FFh, FFh, FFh, FFh, 00h, 00h, 00h, AAh

### 3.7 Keyboard Test

To execute the Keyboard Test, select **3** from the DIAGNOSTIC TEST MENU, press **Enter** and follow the directions on the screen. Move the highlight bar to the subtest you want to execute and press **Enter**.

#### Subtest 01      Pressed key code display

When a key is pressed, the scan code, character code, and key top name are displayed on the screen in the format shown below. The **Ins Lock**, **Caps Lock**, **Num Lock**, **Scroll Lock**, **Alt**, **Ctrl**, **Left Shift**, and **Right Shift** keys are displayed in reverse screen mode when pressed. The scan codes, character codes, and key top names are shown in Appendix D.

KEYBOARD TEST IN PROGRESS 302000

Scan code            =

Character code      =

Keytop              =

Ins Lock    Caps Lock    Num Lock    Scroll Lock

Alt            Ctrl            Left Shift    Right Shift

PRESS [Enter] KEY

### 3.8 Display Test


To execute the Display Test, select **4** from the DIAGNOSTIC TEST MENU, press **Enter** and follow the directions on the screen. Move the highlight bar to the subtest you want to execute and press **Enter**.

Subtest 01      VRAM read/write for VGA

This subtest writes the constant data (AAAAh and 5555h) to the video RAM. The data is read and compared to the original data.

Subtest 02      Gradation for VGA

This subtest displays four colors: red, green, blue and white from left to right across the screen from black to maximum brightness. The display below appears on the screen, when this subtest is executed.

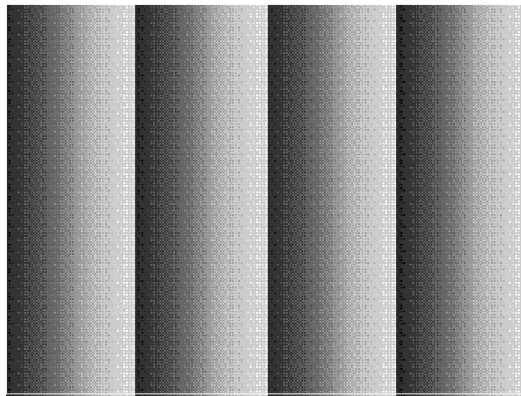

To exit this subtest and return to the DISPLAY TEST menu, press **Enter**.

Subtest 03      Gradation for LCD


This subtest displays bands of gradations for mixed colors, then for red, green, and blue. Next, it displays eight solid colors full screen: red, semi-red, green, semi-green, blue, semi-blue, white, and semi-white. Each color displays for three seconds.

#### Subtest 04 Gradation & Mode test for VGA

This subtest displays gradations for following modes. To change the mode, press **Enter**.

```
[Mode 12]
[Mode 13]
[Mode 3]
[Mode 111 640*480 64K]
[Mode 112 640*480 16M]
[Mode 114 800*600 64K]
[Mode 115 800*600 16M]
[Mode 117 1024*768 64K]
[Mode 118 1024*768 16M]
```

The display below appears on the screen when this subtest is executed.

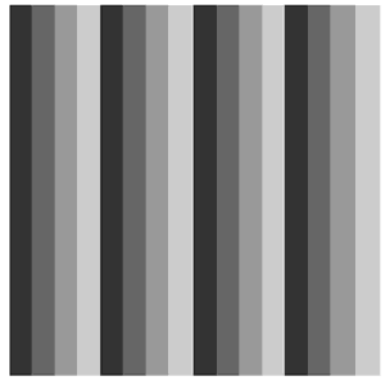

[ Mode 12 ]

(Display example: Mode 12)

To exit this subtest and return to the DISPLAY TEST menu, press **Enter** after displaying the Mode 118.

#### Subtest 05 All dot on/off for LCD

This subtest displays an all-white screen then an all-black screen. The display changes automatically every three seconds, then returns to the DISPLAY TEST menu.

[illegible]

**NOTE:** The last row may not be completely filled. This condition does not indicate on error.

The LCD brightness changes in the following order:

After displaying with Super-Bright of LCD brightness, return to the DISPLAY TEST menu.

## Subtest 09 External EDID read/compare (not use)

### 3.9 Floppy Disk Test

**CAUTION:** Before running the floppy disk test, prepare a formatted work disk. Remove the Diagnostics Disk and insert the work disk into the FDD. The contents of the floppy disk will be erased.

To execute the Floppy Disk Test, select **5** from the DIAGNOSTIC TEST MENU, press **Enter** and follow the directions displayed on the screen.

1. The following message will appear. Select the media mode and start track to be tested, then press **Enter**.

Test start track                    (Enter:0/dd:00-79) ?

2. The Floppy Disk test contains five subtests that test the FDD.  
The floppy disk test menu will appear after you select FDD test parameters.

FLOPPY DISK

XXXXXXX

XXX DIAGNOSTIC TEST VX.XX  
[Ctrl]+[Break] : test end  
[Ctrl]+[C] : key stop

SUB-TEST : XX  
PASS COUNT : XXXXX ERROR COUNT : XXXXX  
WRITE DATA : XX READ DATA : XX  
ADDRESS : XXXXXX STATUS : XXX

SUB-TEST MENU :

01 - Sequential read  
02 - Sequential read/write  
03 - Random address/data  
04 - Write specified address  
05 - Read specified address  
99 - Exit to DIAGNOSTIC TEST MENU

↑↓→← : Select items  
Enter : Specify  
Esc : Exit

Select the number of the subtest you want to execute and press **Enter**. The following message will appear during the floppy disk test.

```
FLOPPY DISK  IN PROGRESS  XXXXXXXX  xxx DIAGNOSTIC TEST VX.XX
                                         [Ctrl]+[Break] : test end
                                         [Ctrl]+[C]   : key stop

SUB-TEST      : XX
PASS COUNT    : XXXXX  ERROR COUNT   : XXXXX
WRITE DATA   : XX     READ DATA    : XX
ADDRESS       : XXXXXX  STATUS       : XXX
```

When the subtest 04 or 05 is selected, the following messages will appear on the screen. Select the test data (subtest 04 only), track number and head number you want to test.

```
Test data     ?? (subtest 04 only)
Track No.     ??
Head No.      ?
```

**Subtest 01**      Sequential read

This subtest performs a Cyclic Redundancy Check (CRC) that continuously reads all the tracks (track: 0 to 39/0 to 79) on a floppy disk.

**Subtest 02**      Sequential read/write

This subtest continuously writes data pattern B5ADADh to all the tracks (track: 0 to 39/0 to 79) on a floppy disk. The data is then read and compared to the original data.

**Subtest 03**      Random address/data

This subtest writes random data to random addresses on all tracks (track: 0 to 39/0 to 79) on a floppy disk. The data is then read and compared to the original data.

**Subtest 04**      Write specified address

This subtest writes the data specified by an operator to a specified track, head, and address.

**Subtest 05**      Read specified address

This subtest reads data from a track, head, and address specified by an operator.

### 3.10 Printer Test

**CAUTION:** *Printer Test is not supported for this model.*

To execute the Printer Test, select **6** from the DIAGNOSTIC TEST MENU, press **Enter** and follow the directions on the screen.

**NOTE:** *An IBM compatible printer must be connected to the system to execute this test. Also, printer port wraparound connector must be connected.*

The following message will appear, after selecting the subtest 01 to 03 of the printer test:

```
channel#1 = XXXXh
channel#2 = XXXXh
channel#3 = XXXXh
```

Select the channel number (1-3) ?

The printer I/O port address is specified by the XXXXh number. The computer supports three printer channels. Select the printer channel number, and press **Enter** to execute the selected subtest.

#### Subtest 01      Ripple Pattern

This subtest prints characters for codes 20h through 7Eh line-by-line while shifting one character to the left at the beginning of each new line.

```
: " # $ % & ' ( ) * + , - . / 0 1 2 3 4 5 6 7 8 9 : ; < = > ? @ A B C D E F G H I J K L M N O P Q R S T U V W X Y Z [ \ ] ^ _ ` a b c d e f g h i j k l m n o
: " # $ % & ' ( ) * + , - . / 0 1 2 3 4 5 6 7 8 9 : ; < = > ? @ A B C D E F G H I J K L M N O P Q R S T U V W X Y Z [ \ ] ^ _ ` a b c d e f g h i j k l m n o p
" # $ % & ' ( ) * + , - . / 0 1 2 3 4 5 6 7 8 9 : ; < = > ? @ A B C D E F G H I J K L M N O P Q R S T U V W X Y Z [ \ ] ^ _ ` a b c d e f g h i j k l m n o p q
# $ % & ' ( ) * + , - . / 0 1 2 3 4 5 6 7 8 9 : ; < = > ? @ A B C D E F G H I J K L M N O P Q R S T U V W X Y Z [ \ ] ^ _ ` a b c d e f g h i j k l m n o p q r
$ % & ' ( ) * + , - . / 0 1 2 3 4 5 6 7 8 9 : ; < = > ? @ A B C D E F G H I J K L M N O P Q R S T U V W X Y Z [ \ ] ^ _ ` a b c d e f g h i j k l m n o p q r s
% & ' ( ) * + , - . / 0 1 2 3 4 5 6 7 8 9 : ; < = > ? @ A B C D E F G H I J K L M N O P Q R S T U V W X Y Z [ \ ] ^ _ ` a b c d e f g h i j k l m n o p q r s t
& ' ( ) * + , - . / 0 1 2 3 4 5 6 7 8 9 : ; < = > ? @ A B C D E F G H I J K L M N O P Q R S T U V W X Y Z [ \ ] ^ _ ` a b c d e f g h i j k l m n o p q r s t u
' ( ) * + , - . / 0 1 2 3 4 5 6 7 8 9 : ; < = > ? @ A B C D E F G H I J K L M N O P Q R S T U V W X Y Z [ \ ] ^ _ ` a b c d e f g h i j k l m n o p q r s t u v
( ) * + , - . / 0 1 2 3 4 5 6 7 8 9 : ; < = > ? @ A B C D E F G H I J K L M N O P Q R S T U V W X Y Z [ \ ] ^ _ ` a b c d e f g h i j k l m n o p q r s t u v w
) * + , - . / 0 1 2 3 4 5 6 7 8 9 : ; < = > ? @ A B C D E F G H I J K L M N O P Q R S T U V W X Y Z [ \ ] ^ _ ` a b c d e f g h i j k l m n o p q r s t u v w x
* + , - . / 0 1 2 3 4 5 6 7 8 9 : ; < = > ? @ A B C D E F G H I J K L M N O P Q R S T U V W X Y Z [ \ ] ^ _ ` a b c d e f g h i j k l m n o p q r s t u v w x y
```



Subtest 02      Function

This subtest is for IBM compatible printers, and tests the following functions:

Normal print  
Double-width print  
Compressed print  
Emphasized print  
Double-strike print  
All characters print

This subtest prints the various print types shown below:

```
PRINTER TEST
1.  THIS LINE SHOWS NORMAL PRINT.
2.  THIS LINE SHOWS DOUBLE-WIDTH PRINT.
3.  THIS LINE SHOWS COMPRESSED PRINT.
4.  THIS LINE SHOWS EMPHASIZED PRINT.
5.  THIS LINE SHOWS DOUBLE-STRIKE PRINT.
6.  ALL CHARACTERS PRINT
   !"#$%&'()*+,-./0123456789:;<=>?@ABCDEFGHIJKLMN
   OPQRSTUVWXYZ[\]^_`abcdefghijklmnopqrstuvwxyz
   ~
```

Subtest 03      Wraparound

**NOTE:** To execute this subtest, a printer wraparound connector must be connected to the computer's printer port.

This subtest checks the output and bi-directional modes of the data control and status lines through the parallel port wraparound connector (34M741986G01). (Both output and bi-directional modes are tested.)

### 3.11 Async Test

**CAUTION:** *Async Test is not supported for this model.*

To execute the Printer Test, select **6** from the DIAGNOSTIC TEST MENU, press **Enter** and follow the directions on the screen.

To execute the Async Test, select **7** from the DIAGNOSTIC TEST MENU, press **Enter** and follow the directions displayed on the screen. Move the highlight bar to the subtest you want to execute and press **Enter**.

Subtests 01 and 02 require the following data format:

Method:	Asynchronous
Speed:	38400BPS
Data:	8 bits and one parity bit (EVEN)
Data pattern:	20h to 7Eh

Subtest 01      FIR/SIR Point to point (send)

**NOTE:** *To execute subtests 01 and 02, each computer must have access to the other computer's infrared port.*

This subtest sends 20h through 7Eh data to the receive side, then receives the sent data and compares it to the original data through the FIR/SIR port.

Subtest 02      FIR/SIR Point to point (receive)

This subtest is used with subtest 01 described above. This subtest receives the data from the send side, then sends the received data through the FIR/SIR port.

Subtest 03      Wraparound (board)

**NOTE:** *To execute this subtest, a RS-232C wraparound connector must be connected to the RS-232C port.*

This subtest checks the data send/receive function through the wraparound connector.

### 3.12 Hard Disk Test

To execute the Hard Disk Test, select **8** from the DIAGNOSTIC TEST MENU, press **Enter**, and follow the directions on the screen.

**CAUTION:** *The contents of the hard disk will be erased when subtest 02, 03, 04, 06, 08 or 09 is executed. Before running the test, the customer should transfer the contents of the hard disk to floppy disk or another hard disk. If the customer has not or cannot perform the back-up, create back-up disks as described below.*

*Check to see if the Microsoft Create System Disks Tools (MSCSD.EXE) still exists in the System Tools Folder. (This tool can be used only once.) If it exists, use it to back up the pre-installed software, then use the Backup utility in the System Tools folder to back up the entire disk, including the user's files.*

*Refer to the operating system instructions.*

When a 2nd HDD is installed, the following messages will appear after selecting the hard disk test from the DIAGNOSTIC TEST MENU.

Test drive number select      (1:HDD#1, 2:HDD#2, 0:HDD#1&2) ?

↑↓→← : Select items  
Enter : Specify  
Esc : Exit

1. Input the number of HDD test and press **Enter**.
2. This message is used to select the error dump operation when a data compare error is detected. Select **1** or **2**.

Data compare error dump (1:no, 2:yes)

3. This message is used to select whether or not the HDD status is displayed on the screen. The HDC status is described in section 3.20. Select **1** or **2**.

Detail status display (1:no, 2:yes)

4. The Hard Disk Test message will appear after you respond to the Detail Status prompt. Select the number of the subtest you want to execute and press **Enter**. The following message will appear during each subtest.

HARD DISK TEST XXXXXXXX

XXX DIAGNOSTIC TEST VX.XX [Ctrl]+[Break] : test end [Ctrl]+[C] : key stop
---

SUB TEST	:	XX			
PASS COUNT	:	XXXXXX	ERROR COUNT	:	XXXXXX
WRITE DATA	:	XX	READ DATA	:	XX
ADDRESS	:	XXXXXX	STATUS	:	XXX

The first three digits of the ADDRESS indicate which cylinder is being tested, the fourth digit indicates the head and the last two digits indicate the sector.

The first digit of the STATUS number indicates the drive being tested and the last two digits indicate the error status code as explained in table 3-2 of the section 3.19.

#### Subtest 01 Sequential read

This subtest is a sequential reading of all the tracks on the HDD starting at track 0. When all the tracks on the HDD have been read, the test starts at the maximum track and reads the tracks on the HDD sequentially back to track 0.

#### Subtest 02 Address uniqueness

This subtest writes unique address data to each sector of the HDD track-by-track. The data written to each sector is then read and compared with the original data. There are three ways the HDD can be read:

1. Forward sequential
2. Reverse sequential
3. Random

#### Subtest 03 Random address/data

This subtest writes random data in a random length to random addresses. This data is then read and compared to the original data.

Subtest 04      Cross talk & peak shift

This subtest writes eight types of worst pattern data (listed below) to a cylinder, then reads the data while moving from cylinder to cylinder. (Test the data interference in the neighbor track)

Worst pattern data	Cylinder
'B5ADAD'	0 cylinder
'4A5252'	1 cylinder
'EB6DB6'	2 cylinder
'151149'	3 cylinder
'63B63B'	4 cylinder
'9C49C4'	5 cylinder
'2DB6DB'	6 cylinder
'D25114'	7 cylinder

Subtest 05      Partial Read

This subtest reads 1GB data that is in minimum, middle and maximum address of the HDD area.

Subtest 06      Write specified address

This subtest writes specified data to a specified cylinder and head on the HDD.

Subtest 07      Read specified address

This subtest reads data, which has been written to a specified cylinder and head on the HDD.

Subtest 08      Sequential write

This subtest writes specified 2-byte data to all of the cylinders on the HDD.

Subtest 09      W-R-C specified address

This subtest writes data to a specified cylinder and head on the HDD, then reads the data and compares it to the original data.

### 3.14 Real Timer Test

To execute the Real Timer Test, select **9** from the DIAGNOSTIC TEST MENU, press **Enter** and follow the directions on the screen. Move the highlight bar to the subtest you want to execute and press **Enter**.

#### Subtest 01     Real time

A new date and time can be input during this subtest. To execute the real time subtest, follow these steps:

1. Select subtest 01 and the following messages will appear:

```
Current date : XX-XX-XXXX
Current time : XX:XX:XX
Enter new date:

PRESS [ENTER] KEY TO EXIT TEST
```

2. If the current date is not correct, input the correct date at the “Enter new date” prompt and press **Enter**.

3. The following messages will appear:

```
Current date : XX-XX-XXXX
Current time : XX:XX:XX
Enter new time:

PRESS [ENTER] KEY TO EXIT TEST
```

4. If the current time is not correct, input the correct time in 24-hour format. To enter “:”, press **Shift + ;**. The time is updated.

To exit the test, press **Enter**.

#### Subtest 02     Backup memory

This subtest checks the following backup memories:

Writes 1-bit of “on” data (01h through 80h) to address 0Eh through 7Fh

Writes 1-bit of “off” data (FEh through 7Fh) to address 0Eh through 7Fh

Writes the data pattern AAh and 55h to the address 0Eh to 7Fh

Then the subtest reads and compares this data with the original data.

Subtest 03     Real time carry

**CAUTION:** *When this subtest is executed, the current date and time are erased.*

This subtest checks the real time clock increments, making sure the date and time are displayed in the following format:

```
Current date   : 12-31-1999
Current time   : 23:59:58
```

The real time increments are automatically executed and the following is displayed:

```
Current date   : 01-01-2000
Current time   : 00:00:00
```

```
PRESS [Enter] KEY TO EXIT TEST
```

To exit the test, press **Enter**.

### 3.15 NDP Test

To execute the NDP test, select **10** from the DIAGNOSTICS TEST MENU, press **Enter** and follow the directions on the screen.

**CAUTION:** Judge the existence of high-speed operation processor by 1bit of the composition byte. If exists, the bit is "1". Test only when the high-speed operation processor exists.

#### Subtest 01     NDP test

This test checks the following functions of NDP:

- ☐ Control word
- ☐ Status word
- ☐ Bus
- ☐ Addition
- ☐ Multiplication



### 3.16 Expansion Test

To execute the expansion test, select **11** from the DIAGNOSTICS TEST MENU, press **Enter** and follow the directions on the screen.

Subtest 01 PCMCIA wraparound [It is not supported]

**CAUTION:** PCMCIA wraparound test is not supported for this model.

**NOTE:** To execute this subtest, the PC card wraparound connector is required.

This subtest checks the following signal line of the PC card slot:

- ☐ Address line
- ☐ REG#, CE#1, CE#2 line
- ☐ Data line
- ☐ Speaker line
- ☐ Wait line
- ☐ BSY#, BVD1 line

This subtest is executed in the following order:

Sub#	Address	Good	Bad	Contents
01	00001 00001	nn nn	xx xx	Address line REG#, CE#1, CE#2 nn=A0, 90, 80, 00
02	00002	ww	rr	Data line ww=write data, rr=read data
03	00003	—	—	Speaker line
04	00004	40,80	xx	Wait line (40<xx<80)
05	00005	nn	xx	Other lines (BSY#, BVD1) NN=21, 00

**NOTE:** Select the subtest number 01, The following message will appear:  
Test slot number select (1:slot0, 2:slot1, 0:slot0&1)?

Subtest 02     RGB monitor ID

**NOTE:** *To execute this subtest, monitor supporting EDID (Extended Display Identification Data) is required.*

Connect a wraparound connector to CRT monitor for the test of ID acquisition. This subtest is executed by using VESA command.

**CAUTION:** *It becomes NG because the priority is given to the internal monitor in a simultaneous display mode.*

### 3.17 CD-ROM/DVD-ROM Test

To execute the CD-ROM/DVD-ROM test, select **12** from the DIAGNOSTICS TEST MENU, press **Enter** and follow the directions on the screen.

**NOTE:** For the subtest 01, 02 and 03, use the *TOSHIBA CD-ROM TEST DISK TDY-01* or *ABEX TEST CD-ROM TCDR-702* and *DVD-ROM TEST DISK TSD-1*. For the subtest 04, use a CD-RW on the market.

Subtest 01      Sequential read

This subtest is a sequential reading of one-block units (2K bytes) of all the logical addresses.

Subtest 02      Read specified address

This subtest reads one-block data from a specified address.

Subtest 03      Random address/data

This subtest reads one-block data and multi-block data from random addresses 200 times.

Subtest 04      RW 1point W/R/C

This subtest writes, reads and compares data at one point on a CD/RW media.

### 3.18 Error Code and Error Status Names

Table 3-2 lists the error codes and error status names for the Diagnostic Test.

*Table 3-2 Error codes and error status names (1/3)*

Device name	Error code	Error status name
(Common)	FF	Data Compare Error
System	01 03 04 05 06 07 08 09 10	ROM - CHECKSUM ERROR ROM - SERIAL ID WRITE ERROR ROM - NOT SUPPORTED PS-SYSTEM ROM - SENSING ERROR(AC-ADAPT) ROM - SENSING ERROR(1st Batt) ROM - SENSING ERROR(2nd Batt) ROM - THORMISTOR ERROR(1) ROM - THORMISTOR ERROR(2) ROM - THORMISTOR ERROR(3)
Memory	01 02 DD	RAM - PARITY ERROR RAM - PROTECTED MODE NO CHANGE RAM - CACHE MEMORY ERROR
Keyboard	FE FD F0 F1 F2 F3 F4 F5 F6 F7 F8 F9 FA EF ED	USB - GET DESCR.ERROR (FIRST) USB - SET ADDRESS ERROR HUB - GET DESCR.ERROR(Top 8B) HUB - GET DESCR.ERROR (Whole) HUB - SET CONFIGURATION ERROR HUB - GET DESCR.ERROR(DESCR.) HUB - SET FEATURE ERROR (P ON) HUB - GET STATUS ERROR HUB - SET FEATURE ERROR(RESET) HUB - CLEAR FEATURE ERROR HUB - CLEAR FEATURE1 ERROR HUB - SET FEATURE ERROR(Enab.) HUB - CLEAR FEATURE2 ERROR USB - OVER CURRENT ERROR USB - GET DESCR.ERROR(SECOND)
Display	EE	VRAM SIZE NOT SUPPORT

Table 3-2 Error codes and error status names (2/3)

Device name	Error code	Error status name
FDD	01 02 03 04 08 09 10 20 40 80 60 06 EE	FDD - BAD COMMAND ERROR FDD - ADDRESS MARK NOT FOUND FDD - WRITE PROTECTED FDD - RECORD NOT FOUND FDD - DMA OVERRUN ERROR FDD - DMA BOUNDARY ERROR FDD - CRC ERROR FDD - FDC ERROR FDD - SEEK ERROR FDD - TIME OUT ERROR FDD - NOT DRIVE ERROR FDD - MEDIA REMOVED FDD - WRITE BUFFER ERROR
Printer	01 08 10 20 40 80	PRT - TIME OUT PRT - FAULT PRT - SELECT LINE PRT - OUT OF PAPER PRT - POWER OFF PRT - BUSY LINE
ASYNC	01 02 04 08 10 20 40 80 88 05 06	RS232C - [DTR ON] TIME OUT RS232C - [CTS ON] TIME OUT RS232C - [RX READY] TIME OUT RS232C - [TX FULL] TIME OUT RS232C - PARITY ERROR RS232C - FRAMING ERROR RS232C - OVERRUN ERROR RS232C - LINE STATUS ERROR RS232C - MODEM STATUS ERROR SIR - TIME OUT ERROR FIR - TIME OUT ERROR
HDD	05 07 09 0B BB 08 01 02 04 10 20 40 80 11 AA	HDD - HDC NOT RESET ERROR HDD - DRIVE NOT INITIALIZE HDD - DMA BOUNDARY ERROR HDD - BAD TRACK ERROR HDD - UNDEFINED ERROR HDD - OVERRUN ERROR (DRQ ON) HDD - BAD COMMAND ERROR HDD - ADDRESS MARK NOT FOUND HDD - RECORD NOT FOUND ERROR HDD - ECC ERROR HDD - HDC ERROR HDD - SEEK ERROR HDD - TIME OUT ERROR HDD - ECC RECOVER ENABLE HDD - DRIVE NOT READY

Table 3-2 Error codes and error status names (3/3)

Device name	Error code	Error status name
(HDD)	CC E0 0A EE DA 12	HDD - WRITE FAULT HDD - STATUS ERROR HDD - BAD SECTOR HDD - ACCESS TIME ERROR HDD - NO HDD HDD - DMA CRC ERROR
NDP	01 02 03 04 05 06	NDP - NO CO-PROCESSOR NDP - CONTROL WORD ERROR NDP - STATUS WORD ERROR NDP - BUS ERROR NDP - ADDITION ERROR NDP - MULTIPLAY ERROR
EXPANSION	C1 C3 C4 C5 C6 C7 C8 CB CC CE CF	ADDRESS LINE ERROR CE#1 LINE ERROR CE#2 LINE ERROR DATA LINE ERROR WAIT LINE ERROR BSY# LINE ERROR BVD1 LINE ERROR ZV-Port ERROR NO PCMCIA CARD TYPE ERROR ZV_CONT# ERROR
CD-ROM /DVD-ROM	01 02 03 04 05 06 09 11 20 40 80 90 B0	BAD COMMAND ILLEGAL LENGTH UNIT ATTENTION MEDIA CHANGE REQUEST MEDIA DETECTED ADDITIMAL SENSE BOUNDARY ERROR CORRECTED DATA ERROR DRIVE NOT READY SEEK ERROR TIME OUT RESET ERROR ADDRESS ERROR

### 3.19 Hard Disk Test Detail Status

When an error occurs in the hard disk test, the following message is displayed:

HDC status = XXXXXXXX

Detailed information about the hard disk test error is displayed on the screen by an eight-digit number. The first four digits represent the hard disk controller (HDC) error status number and the last four digits are not used.

The hard disk controller error status is composed of two bytes; the first byte displays the contents of the HDC status register in hexadecimal form and the second byte displays the HDC error register.

The contents of the HDC status register and error register are listed in Tables 3-3 and 3-4.

*Table 3-3 Hard disk controller status register contents*

Bit	Name	Description
7	BSY (Busy)	"0" ... HDC is ready. "1" ... HDC is busy.
6	DRY (Drive ready)	"0" ... Hard disk drive is not ready to accept any command. "1" ... Hard disk drive is ready.
5	DWF (Drive write fault)	"0" ... DWF error is not detected. "1" ... Write fault condition occurred.
4	DSC (Drive seek complete)	"0" ... The hard disk drive heads are not settled over a track. "1" ... The hard disk drive heads are settled over a track.
3	DRQ (Data request)	"0" ... Drive is not ready for data transfer. "1" ... Drive is ready for data transfer.
2	COR (Corrected data)	"0" ... Not used "1" ... Correctable data error is corrected.
1	IDX (Index)	"0" ... Not used "1" ... Index is sensed.
0	ERR (Error)	"0" ... Normal "1" ... The previous command was terminated with an error.

Table 3-4 HDC Error register contents

Bit	Name	Description
7	BBK (Bad block mark)	"0" ... Not used "1" ... A bad block mark is detected.
6	UNC (Uncorrectable)	"0" ... There is no uncorrectable data error. "1" ... Uncorrectable data error has been detected.
5	—	Not used
4	IDN (Identification)	"0" ... Not used "1" ... There is no ID field in the requested sector.
3	—	Not used
2	ABT (Abort)	"0" ... Not used "1" ... Illegal command error or command abort.
1	TK0 (Track 0)	"0" ... The hard disk found track 0 during a recalibrate command. "1" ... The hard disk could not find track 0 during a recalibrate command.
0	—	Not used



## 3.20 ONLY ONE TEST

### 3.20.1 Program Description

This program tests the unique functions of this model.

### 3.20.2 Operations

Select test **2** from the DIAGNOSTIC MENU and press **Enter**. The following menu appears in the display.

```
#####
#####          ONLY ONE TEST Menu          #####
#####
*
* 1 ..... Pressed Key Display (Main-key)      *
* 2 ..... Pressed Key Display (Ten-key)       *
* 3 ..... Touch pad / IPS                     *
* 4 ..... USB Port select menu                *
* 5 ..... LED                                *
* 6 ..... Button                             *
* 7 ..... Acceleration sensor                 *
* 8 ..... Docker Dock/Undoc                  *
* 9 ..... Fan control                        *
* a ..... USB 3.0                           *
* 99 ..... Exit to Common Test                *
*
*****
.... Press test number [1-a, 99]?
```


Select the subtest number you want to test and press **Enter**.

To return to the DIAGNOSTIC TEST menu, select **9** and press **Enter**.

Subtest 01      Pressed Key Display (Main key)

When you execute this subtest, the keyboard layout is drawn on the display as shown below. When any key is pressed, the corresponding key on the screen changes to the key character that was pressed. Holding a key down enables the auto-repeat function that causes the key's display character to blink.

Press **Del + Enter** to end the test.

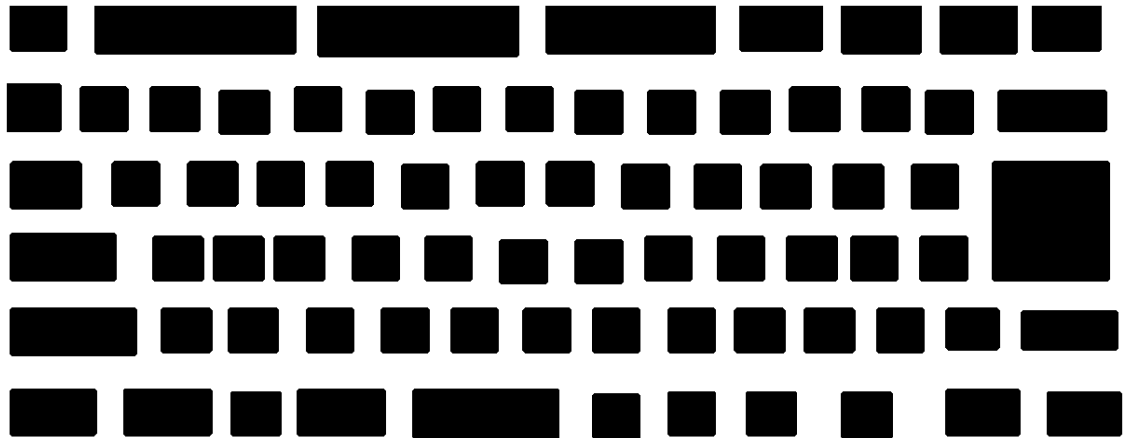


IF TEST OK, Press [Del][Enter]key

Subtest 02      Pressed Key Display (Ten key): Not Used

When you execute this subtest, the keyboard layout is drawn on the display as shown below. When any key is pressed, the corresponding key on the screen changes to the key character that was pressed. Holding a key down enables the auto-repeat function that causes the key's display character to blink.

Press **Del + Enter (Ten key)** to end the test.

[ Ten key test]

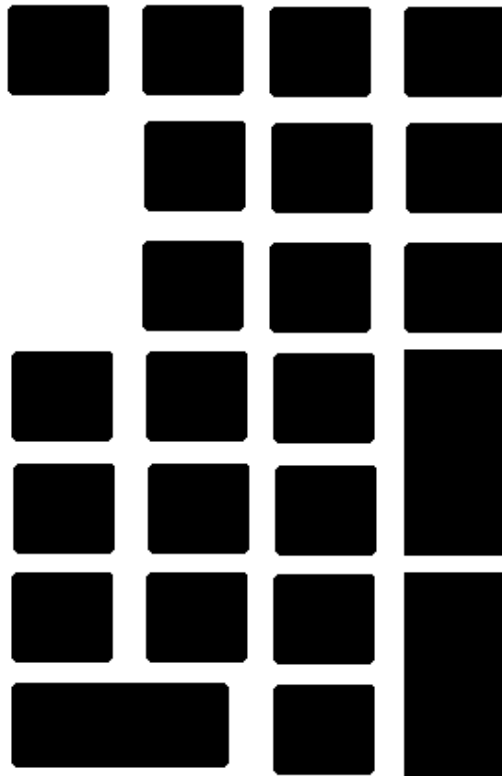

IF TEST OK, Press [Del][Enter]key

## Subtest 03 Touch Pad /IPS

This subtest checks the functions of the touch pad as shown below.

- A) Direction and parameter
- B) Switching function check.

This test displays the response from the touch pad and touch pad switch. When moving your finger on the touch pad towards the upper left, the <POINTING> display changes according to the following illustration. If a touch pad switch is pressed, the <BUTTONS> displays appear on the right side one by one. The parameters appear above the <BUTTONS> (1) or (2) corresponding to the pressed touch pad switch highlights. To end this subtest, press two touch pad switches at the same time.

```

*** IPS (PAD) TEST PROGRAM (Vx.xx) ***

<POINTING>
<PARAMETER>
STATUS:0000h
X-RATE:0000h
Y-RATE:0000H

<BUTTON>
(1)      (2)

<< PRESS BUTTON1+BUTTON2 THEN END >>

*** IPS (PAD) TEST PROGRAM (Vx.xx) ***

< POINTING >
<PARAMETER>
STATUS: 0018h
X-RATE: OK
Y-RATE: OK

<BUTTON>
(1)      (2)

<< PRESS BUTTON1+BUTTON2 THEN END >>

```

This subtest checks if the Wireless communication switch works properly.

The following message appears in the display.

[Touch Pad On/OFF Button test]

Press [Touch Pad On/OFF] Button

Please press Touch Pad On/OFF button

After checking Touch, return to the ONLY ONE TEST menu automatically.

#### Subtest 04     USB port select menu

**NOTE:** When executing this subtest, USB test module and USB cable must be connected.

This subtest checks if USB port works properly.

The following menu appears in the display.

```
#####          USB Port Select (XXXXXXXXX)          #####
#####
*
*  0 ..... Port 0   (Front in the right side)          *
*  1 ..... Port 1   (Behind the right side)             *
*  2 ..... Port 2   (Left side)                          *
*  9 ..... EXIT                                     *
*
*****
.... Press test number [0-2, 9] ?
```

Connect the USB test module and USB cable to the computer.

Input the port test number and press **Enter**.

OK message appears in the display if the test ends without a defective.

NG message appears in the display if a defective is found during the test.  
Confirm the connection of cable, then execute the test again.

Press **9** and return to ONLY ONE TESST menu.

**Subtest 05     LED**

This subtest checks if each LED lights properly.

The following message appears in the display in order. Follow the instructions in the display to execute the test.

[HDD Access LED test]

Confirm the LED of HDD status blinks properly.

Press any key and following message appears in the display.

[Caps/Num/Overlay BT/W-LAN LED test]

Confirm each LED lights properly.

- (1) Press [Caps Lock ] key ! ...Caps (on/off)
- (2) Press [Fn + F10 ] key ! ...Arrow (on/off)
- (3) Press [Fn + F11 ] key ! ...Num (on/off)
- (4) Slide [BT/W-LAN switch L&R ]! (on/off)


Press **Enter** and following message appears in the display.

Check [DC-IN]&[Power]&[Main Battery]LED= Green

Check if the each LED lights in the same color as the message in the display (Message switches Green <-> Orange ).

Press **Enter** and return to the ONLY ONE TEST menu.

Subtest 06 Button

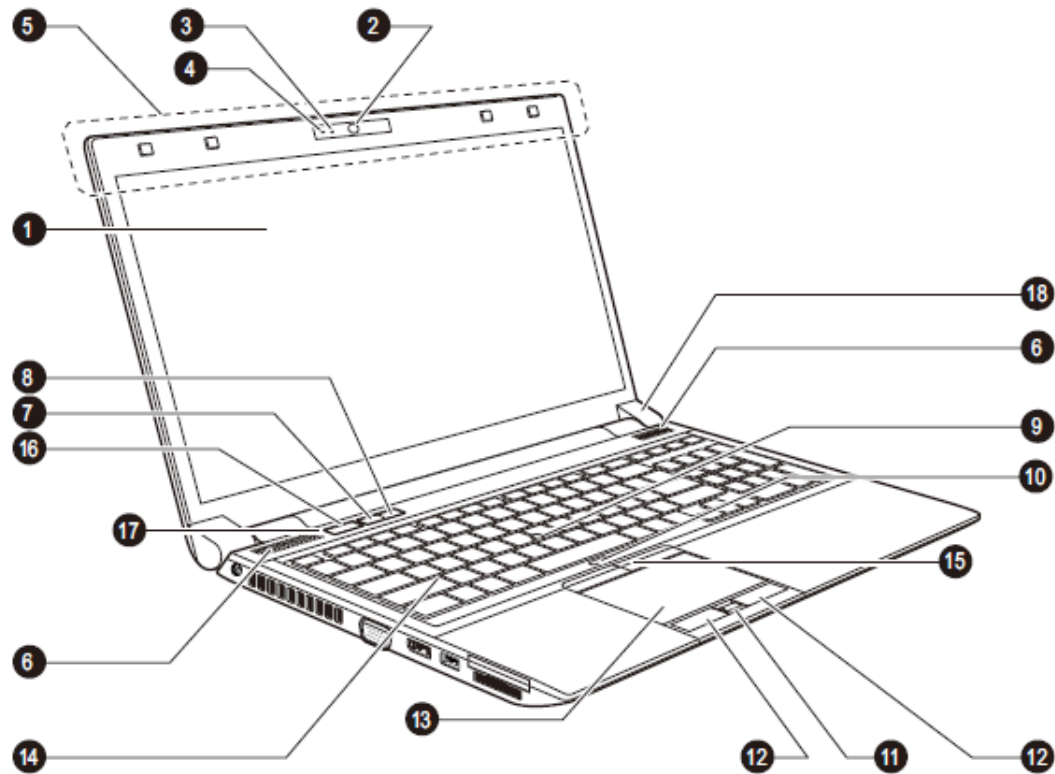

- |   |                                   |
|---|-----------------------------------|
| 1. Display screen   | 10. Touch Pad ON/OFF button       |
| 2. Web Camera*  | 11. Fingerprint Sensor*           |
| 3. Web Camera LED*  | 12. Touch Pad control buttons     |
| 4. Microphone*  | 13. Touch Pad                     |
| 5. Bluetooth antenna, Wireless LAN antennas, Wireless WAN/WiMAX antennas (not shown)* | 14. Keyboard                      |
| 6. Stereo speakers  | 15. AccuPoint control buttons*    |
| 7. TOSHIBA eco button   | 16. Power button                  |
| 8. TOSHIBA Presentation button  | 17. LCD Sensor switch (not shown) |
| 9. AccuPoint*   | 18. Display hinge                 |

This subtest checks the moving of the of the front operation panel button.

Press the eco button after the following message appears.

Step 1	X	1	2
	*		*.

Press Function button (TOSHIBA eco button)

OK message appears in the display if the test ends without an error.

Press any key return to each Steps if **NG!** or **Press any key** message appears.

Press the Presentation button after the following message appears.

Step2	X	1	2
	*	*	 .

Press Function button (TOSHIBA Presentation button)

OK message appears in the display if the test ends without an error.

Press any key return to each Steps if **NG!** or **Press any key** message appears.

If the test ends successfully, the display returns to the ONLY ONE TEST menu.



Subtest 07 Acceleration sensor


This subtest detects and corrects the each axis (X, Y, Z).

**NOTE:** Make sure that this subtest is executed on the following condition:


1. Flat desk with vertical plane to get the stability of machine.
2. The vertical wall or plane is necessary.
3. Prevent the machine from shake or shock.

<Example>

Set the machine  
against the vertical plane  
with the Front upward

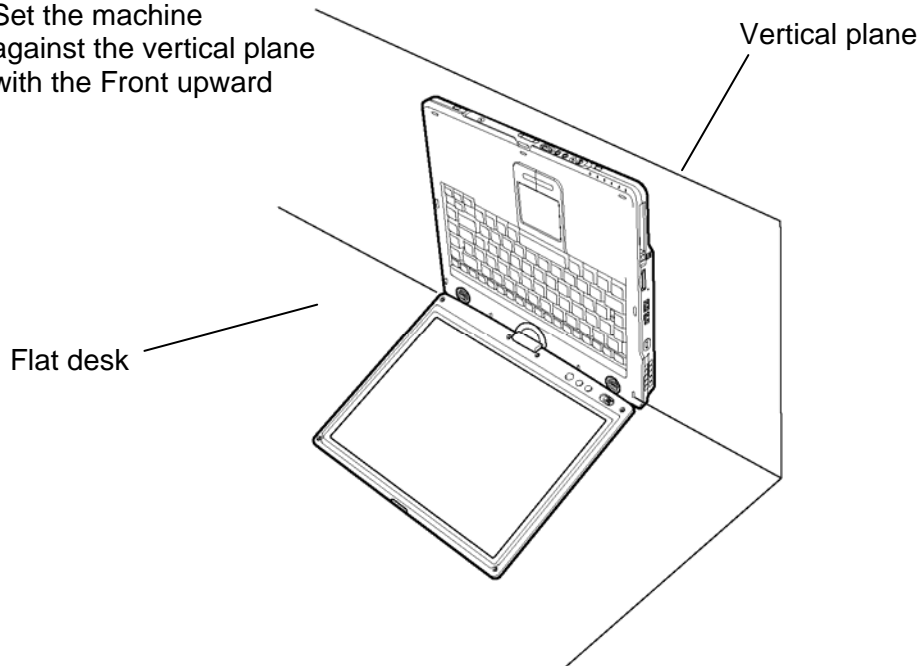

The figure below shows the name and position of each side.

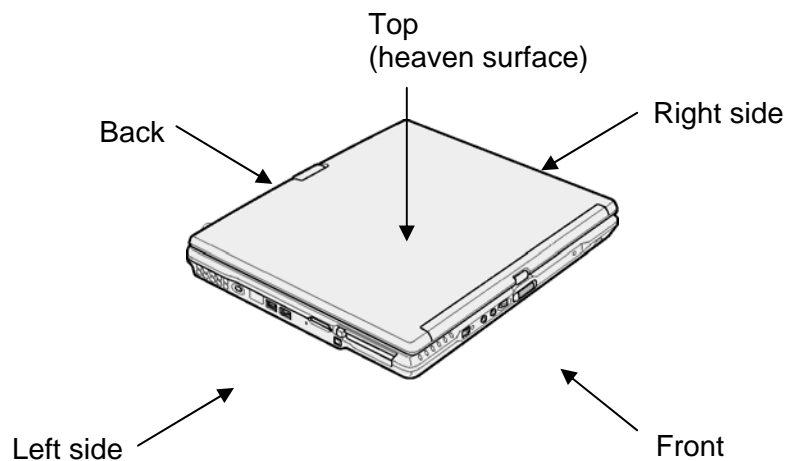

When this subtest is selected, the following message appears in the display.

The heaven surface establishes in the upper direction  
Press [Enter] key

**NOTE:** *Be sure to execute the test with the display panel opened.*

Set the machine on the flat desk. Then press **Enter** to detect the data on this setting of machine. The following message appears in the display.

The back establishes in the upper direction  
Press [Enter] key

Set the machine against the vertical plane on the flat desk with the back of machine upward. Then press **Enter** to detect the data on this setting of machine. The following message appears in the display.

The right establishes in the upper direction  
Press [Enter] key

Set the machine against the vertical plane on the flat desk with the right side of machine upward. Then press **Enter** to detect the data on this setting of machine. The following message appears in the display.

The front establishes in the upper direction  
Press [Enter] key

Set the machine against the vertical plane on the flat desk with the front of machine upward. Then press **Enter** to detect the data on this setting of machine. The following message appears in the display.

The left establishes in the upper direction  
Press [Enter] key

Set the machine against the vertical plane on the flat desk with the left side of machine upward. Then press **Enter** to detect the data on this setting of machine.

When there is no defective during the all checks above, the following message appears in the display. Then press **Enter** and return to the Only One Test menu.

\*\* Setting OK! \*\*  
Press [Enter] key

When any trouble in the above setting is found, the following message appears and the test halts. Then press **Enter** and return to the Only One Test menu.

\*\* Setting ERROR! \*\*  
Press [Enter] key

Subtest 08     Docker Dock/Undock

This subtest is executed with an Slim Port Replicator II. installed.

Press **Enter** while pushing the eject button of the Slim Port Replicator II. the following message appears.

Pushing Eject-SW, and press [Enter] Key

Press **Enter** without pushing the eject button of the Slim Port Replicator II. after the following message appears.

Release Eject-SW, and press [Enter] Key

If the test ends successfully, the display returns to the ONLY ONE TEST menu.

When the display returns to the ONLY ONE TEST menu, remove the Express Port Replicator from the computer.

Subtest 09 Fan control

This subtest checks if FAN works properly.

The following message appears in the display in order.

! Start low-speed rotation.....Waits 8 seconds  
! Start reading of rotation.....Waits 3 seconds  
! Start High-speed rotation.....Waits 8 seconds  
! Start reading of rotation.....Waits 3 seconds

FAN Low-speed---> Target Low: 3900 Rpm Result Low: XXXX Rpm OK!

FAN High-speed---> Target High: 3800 Rpm Result High: XXXX Rpm OK!

OK message appears in the display if the test ends without a defective.

NG message appears in the display if a defective is found during the test.

Subtest a USB 3/0

**NOTE:** When executing this subtest, USB 3.0 module and cable must be connected.

This subtest checks if USB 3.0 port works properly.

The following menu appears in the display.

[ USB 3.0 Port Test]  
Set [ USB 3.0 ] Device

Connect the USB 3.0 module and cable to the computer.

**OK** message appears in the display if the test ends without a defective.

Press **Enter** and return to the ONLY ONE TEST menu.

## 3.21 Head Cleaning

### 3.21.1 Function Description

This function cleans the heads in the FDD by executing a series of head load/seek and read operations. A cleaning kit is necessary to perform this program.

### 3.21.2 Operations

1. Selecting test **4** from the DIAGNOSTIC MENU and pressing **Enter** displays the following messages:

```
DIAGNOSTICS - FLOPPY DISK HEAD CLEANING : VX.XX
```

```
Mount cleaning disk(s) on drive(s).
```

```
Press any key when ready.
```

2. Remove the Diagnostics Disk from the FDD, then insert the cleaning disk and press **Enter**.
3. When the “cleaning start” message appears, the FDD head cleaning has begun.
4. The display automatically returns to the DIAGNOSTIC MENU when the program is completed.

## **3.22 Log Utilities**

### **3.22.1 Function Description**

This function logs error information generated while a test is in progress and stores the results in RAM. This function can store data on a floppy disk or output the data to a printer.

**NOTE:** Connect USB FDD, when you perform the DIAGNOSTIC PROGRAM from the DVD-ROM. The data is stored in floppy disk.

The error information is displayed in the following order:

1. Error count (CNT)
2. Test name, Subtest number (TS-No)
3. Pass count (PASS)
4. Error status (STS)
5. FDD/HDD or memory address (ADDR)
6. Write data (WD)
7. Read data (RD)
8. HDC status (HSTS)
9. Error status name (ERROR STATUS NAME)

If the power switch is turned off, the error information will be lost.

Select **5** and press **Enter** in the DIAGNOSTIC MENU, logs error information into RAM or onto a floppy disk. The error information is displayed in the following format:

XXXXXX ERRORS										
CNT	TS-NO	PASS	STS	ADDR	WD	RD	HSTS	[ERROR	STATUS	NAME]
001	FDD 02	0000	103	00001	00	00	0000	FDD-WRITE	PROTECTED	
001	FDD 01	0000	180	00001	00	00	0000	FDD-TIME	OUT ERROR	

Address

Error status

Pass count

Subtest number

Test name

Error count

HDC status

Read data

Write data

Error status name

```
[[1:Next,2:Prev,3:Exit,4:Clear,5:Print,6:FD Log Read,7:FD Log Write]]
```

2. The error information displayed on the screen can be manipulated by the following number keys:

The **1** key scrolls the display to the next page.

The **2** key scrolls the display to the previous page.

The **3** key returns to the Diagnostic Menu.

The **4** key erases all error log information in RAM.

The **5** key outputs the error log information to a printer.

The **6** key reads the log information from a floppy disk.

The **7** key writes the log information to a floppy disk.

3. In the case of “error retry OK,” a capital “R” will be placed at the beginning of the error status. However, it is not added to the error count.

## 3.23 Running Test

### 3.23.1 Function Description

This function automatically executes the following tests in sequence:

1. System test (subtest 01)
2. Memory test (subtests 01, 02)
3. Display test (subtest 01)
4. Real timer test (subtest 02)
5. HDD test (subtest 01)
6. FDD test (subtest 02)

The system automatically detects the number of floppy disk drives connected to the computer for the FDD test.

### 3.23.2 Operations

1. Select **6** from the Diagnostic Menu and press **Enter**, the following messages will appear in the display in order.  
FDD write/read test (Y/N) ?  
Printer wrap around test (Y/N) ?  
Serial wrap around test (Y/N) ?  
CD-ROM/DVD-ROM test (Y/N) ?
2. To execute the test, press **Y (yes)** and **Enter**. To cancel the test, press **N (no)** and **Enter**. If you execute the selectable test, follow the indication message in the display.  
After setting the selectable test, the test starts automatically. To terminate the program, press **Ctrl + Break**.



## 3.24 Floppy Disk Drive Utilities

### 3.24.1 Function Description

This function formats the FDD, copies the floppy disk and displays the dump list for both the FDD and HDD.

#### 1. FORMAT

**NOTE:** *This program is only for testing a floppy disk drive. The option is different from the Toshiba MS-DOS FORMAT command.*

This program can format a floppy disk in the following formats:

- (a) 2DD: Double-sided, double-density, double-track, 96/135 TPI, MFM mode, 512 bytes, 9 sectors/track.
- (b) 2HD: Double-sided, high-density, double-track, 96/135 TPI, MFM mode, 512 bytes, 18 sectors/track.

#### 2. COPY

This program copies data from a source floppy disk to a target floppy disk.

#### 3. DUMP

This program displays the contents of the floppy disk and the designated sectors of the hard disk on the display.

#### 4. HDD ID READ

This program reads the hard disk ID and displays hard disk information.

### 3.24.2 Operations

1. Selecting **7** from the DIAGNOSTIC MENU and pressing **Enter** displays the following message:

```
[ FDD UTILITIES ]

1 - FORMAT
2 - COPY
3 - DUMP
4 - HDD-ID READ
9 - EXIT TO DIAGNOSTICS MENU
```

2. FORMAT program

- (a) Selecting FORMAT displays the following message:

```
DIAGNOSTICS - FLOPPY DISK FORMAT : VX.XX
Drive number select (1:A, 2:B) ?
```

- (b) Select a drive number to display the following message:

```
Type select (0:2DD, 3:2HD) ?
```

- (c) Select a media/drive type number and press **Enter**. A message similar to the one below will be displayed:

```
Warning : Disk data will be destroyed.
Insert work disk into drive A:
Press any key when ready.
```

- (d) Remove the Diagnostics Disk from the FDD, insert the work disk and press any key.

The following message will be displayed when the FDD format is executed:

```
[ FDD TYPE ] : TRACK   = XXX
[ FDD TYPE ] : HEAD    = X
[ FDD TYPE ] : SECTOR  = XX

Format start

[[track, head = XXX X]]
```

After the floppy disk is formatted, the following message will appear:

```
Format complete
Another format (1:Yes/2:No) ?
```

- (e) Typing **1** displays the message from step (c) above. Typing **2** returns the test to the DIAGNOSTIC MENU.

### 3. COPY program

- (a) When COPY is selected, the following message appears:

```
FLOPPY DISK FORMAT & COPY : VX.XX
Type select (0:2DD,3:2HD) ?
```

- (b) Selecting a media/drive type number will display a message similar to the one below:

```
Insert source disk into drive A:
Press any key when ready.
```

- (c) Remove the Diagnostics Disk from the FDD, insert the source disk and press any key. The following message will appear, indicating the program has started.

```
[ FDD TYPE ] : TRACK      = XXX
[ FDD TYPE ] : HEAD       = X
[ FDD TYPE ] : SECTOR     = XX

Copy start
[[ track,head = XXX X ]]
```

- (d) The following message will appear.

```
Insert target disk into drive A:
Press any key when ready.
```

- (e) Remove the source disk from the FDD, then insert a formatted work disk and press any key. The following message will appear and start copying to the target disk.

```
[[ track,head = XXX X ]]
```

- (f) When the amount of data is too large to be copied in one operation, the message from step (b) is displayed again. After the floppy disk has been copied, the following message will appear:

```
Copy complete
Another copy (1:Yes/2:No) ?
```

- (g) To copy another disk, type **1** and the message from step (a) is displayed again. Entering **2** returns the test program to the DIAGNOSTIC MENU.

#### 4. DUMP program

- (a) When DUMP is selected, the following message appears:

```
DIAGNOSTICS-HARD DISK & FLOPPY DISK DUMP : VX.XX
Drive type select (1:FDD, 2:HDD) ?
```

- (b) Select a drive type. If 2:HDD is selected, the display will go to step (h). If 1:FDD is selected, the following message will appear:

```
Select drive number (1:A, 2:B) ?
```

- (c) Select a drive number and the following message will be displayed.

```
Format type select (1:2DD, 3:2HD) ?
```

- (d) If 3:2HD is selected, the following message will appear. Select a media mode.

```
2HD media mode (1:1.20MB, 2:1.44MB, 3:1.23MB)?
```

- (e) The following message will appear:

```
Insert source disk into drive A:
Press any key when ready.
```

- (f) Insert a source disk and press any key and the following message will appear:

```
—— Max. address ——
[Track ] = XXXX
[Head  ] = XX
[Sector] = XX
Track number ????
```

- (g) Set the track number, head number and sector number you want to dump. The system will access the disk and dump a list. Then the message shown in (k) will appear.

- (h) The following message will appear when selecting 2:HDD in (a).

```
Select drive number (1:C, 2:D) ?
```

- (i) Select a drive number and the following message will be displayed.

```
---Max. address ---
[LBA ] = XXXXXXXXX
LBA number ????????
```

- (j) Set the LBA number you want to dump. The system will access the disk and dump a list.

- (k) The following message will appear. To finish the dump, select **3**.

Press number key (1:up,2:down,3:end) ?

- (l) The following message will appear. Selecting **2** returns to the FDD UTILITIES MENU.

Another dump (1:Yes,2:No) ?

#### HDD ID READ program

Selecting HDD ID displays the following HDD ID configuration:

[HDD ID Read (VX.XX)]	[Drive #1]	[Drive #2]
Model No.	= XXXXXXXX	= XXXXXXXX

**NOTE:** Only when a 2nd HDD is installed, [Drive #2] message appears in the display.

Press Enter to return to the FDD UTILITIES MENU.

## **3.25 System Configuration**

### **3.25.1 Function Description**

The System Configuration program contains the following configuration information for the computer:

1. Processor Type [Code/L2 cache]
2. Chip set [VRAM]
3. BIOS ROM version [1st ID, 2nd ID]
4. Boot ROM version
5. EC/KBC version
6. PS Microprocessor version
7. SVP parameter version [Panel/Manufacture code/Product code]
8. Micro code revision [Processor number]
9. Total Memory Size [Conventional memory]
10. Battery code
11. HWSC
12. FSB [Voltage]
13. Printer Adapter
14. ASYNC Adapter
15. Math co-processors
16. Floppy Disk Drive [Track/Head/Sector]
17. Hard Disk Drive [Sector/Drive size/Manufacture code]
18. Optical Disk Drive [Maker/Drive type/Manufacture code/Product code]
19. T&D total version
20. Date/Time

### 3.25.2 Operations

Select **8** from the DIAGNOSTIC MENU and press **Enter**. Then, the following system configuration appears in the display.

```
System Configuration Display: Ver X.XX [Machine Name???]

* - Processor Type      = XXXXXX-XXXXXXMHz      Code = XX      L2 Cache = XXXXXXKB
* - Chip set           = XXXXXX                  VGA Chip = XXXXXX
* - BIOS ROM Version   = VX.XX      1st ID = XXH, 2nd ID = XXH
* - BOOT ROM Version   = VX.XX
* - EC/KBC Version     = VX.XX
* - PS Micon Version   = VX.XX
* - SVP Par. Version   = VX.XX      (Panel=XXXXXXXXX, Manu=XXXX, Prod=XXXX)
* - Micro code Revision = VX.XX      (Processor=XXXh)
* - Total Memory Size  = XXXXXXMB (Conventional Memory = XXXKB)
* - Battery Code       = XXXXXXXXXXXX
* - HWSC               = XXXXXXXX
* - FSB                = XXXXXXMHz (Voltage = XEh)
* - X Printer Adapter  LPT1 = XXXX   LPT2 = XXXX   LPT3 = XXXX
* - X ASYNC Adapter    COM1 = XXXX   COM2 = XXXX   COM3 = XXXX
* - X Math CO-Processor
* - X Floppy Disk Drive(s)  Track = XX   Head = XX, Sector = XX
* - X Hard Disk Drive(s)   #1 Sectors = XXXXX, (XXXXX GB) [XXXXXXXXXXXXXXXXXXXX]
                           #2 Sectors = XXXXX, (XXXXX GB) [XXXXXXXXXXXXXXXXXXXX]
* - ODD                 = XXXX XXXXXXXX XXXXXXXX [XXXXXXXXXXXX]
* - T&D Total Version    = VX.XX

Press [Enter] Key      [Date = XXXX-YY-ZZ, XX:YY:ZZ]
```

Press **Enter** to return to the DIAGNOSTIC MENU.


### 3.26 Wireless LAN Test Program (Atheros)

Since there is no test program for Atheros-made wireless LAN cards, check the wireless LAN card type of the computer and the antenna connection by using Windows programs.

#### Check of the wireless LAN card type

1. Slide the wireless communication switch to “ON” position.
2. Check the card type according to the following procedure:

Click [Start] -> [All Programs] -> [TOSHIBA] -> [Utilities] -> [PC Diagnostic Tool].  
Check the “Network”. If the “Atheros AR5007EG(11b/g)”, “Atheros AR5006EX(11a/b/g)”, “Atheros AR9281(11b/g/n)” or “Atheros 9280(11a/b/g/n)” is shown, the correct card is installed in the computer.

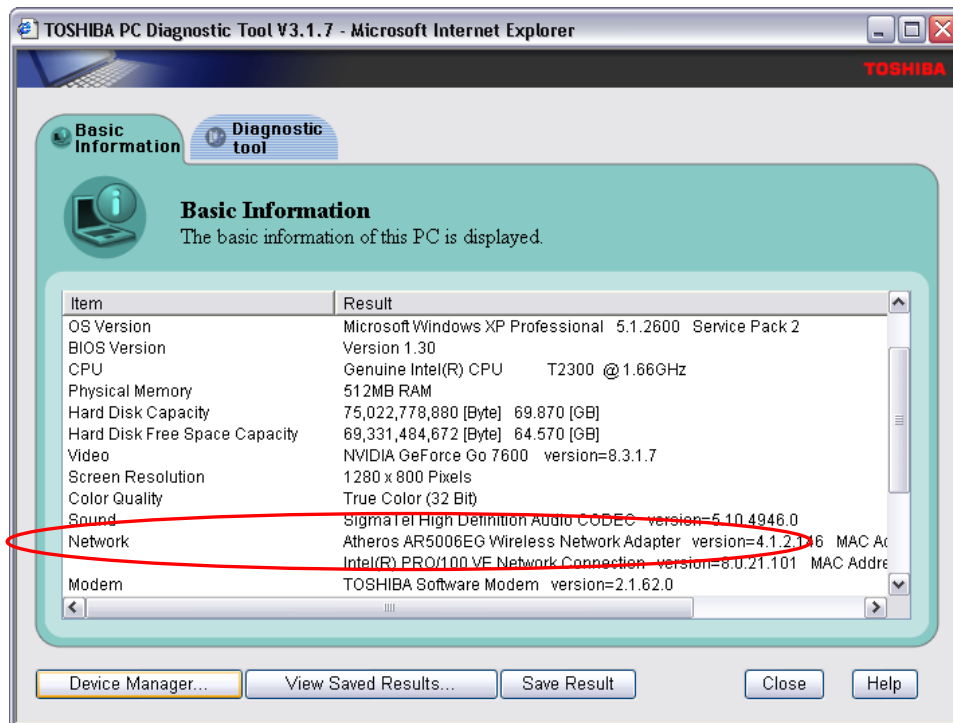




## Check of the antenna connection


1. Confirm that the icon for wireless LAN appears at the lower right of the screen under the circumstances the wireless LAN communication is available. (It is no problem if a cross is shown on the icon.)



2. Double-click the icon. If the computer finds any AP (Access Point), the antenna marks like as follows will appear. It shows the antenna cables are surely connected to the wireless LAN card.

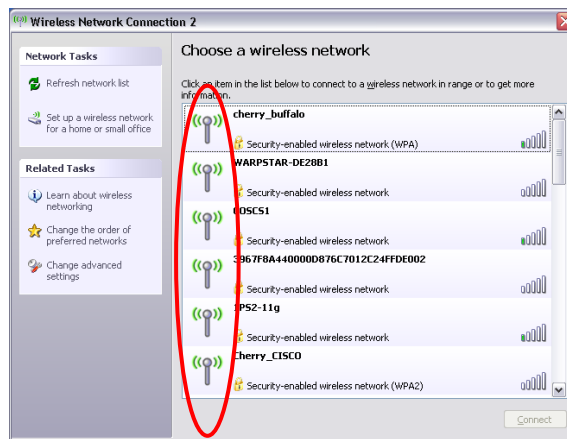

3. The following message will appear if the antenna cables are not connected to the wireless LAN card or no available access point is found. In this case, check the antenna cable connection to the wireless LAN card by disassembling the computer following the steps described in Chapter 4, Replacement Procedures.

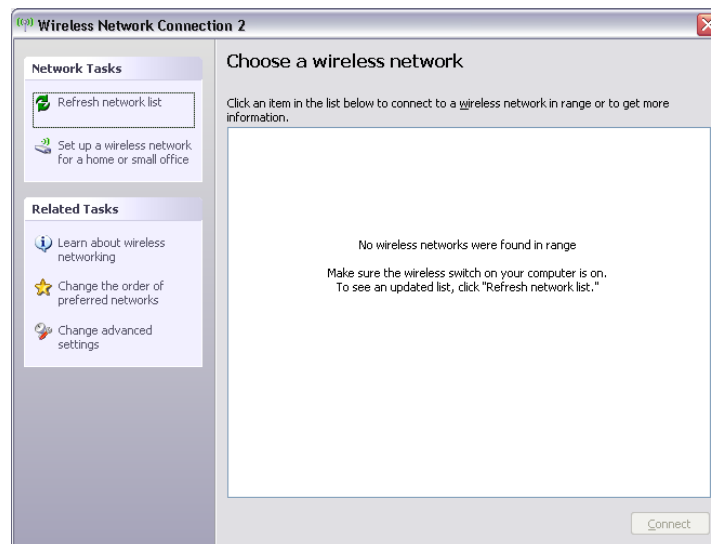

### 3.27 Wireless LAN Test Program (Intel-made a/b/g/n Setting up of REF PC)

For the test of Intel-made wireless LAN cards, configure the test environment as shown below with the following equipment.

- AP (which can operate on Windows XP and is corresponding to access point 11a, 11b and 11g)

**NOTE:** Set the SSID of AP as follows. (Note that upper case and lower case characters are recognized as different characters.)


AP for check of 11a : 11aAP

AP for check of 11b : 11bAP

AP for check of 11g : 11gAP

Make the security functions of AP (WEP, WPA, etc.) invalid.

- REF (Reference) PC
- Cross cable
- DUT (Device Under Testing)

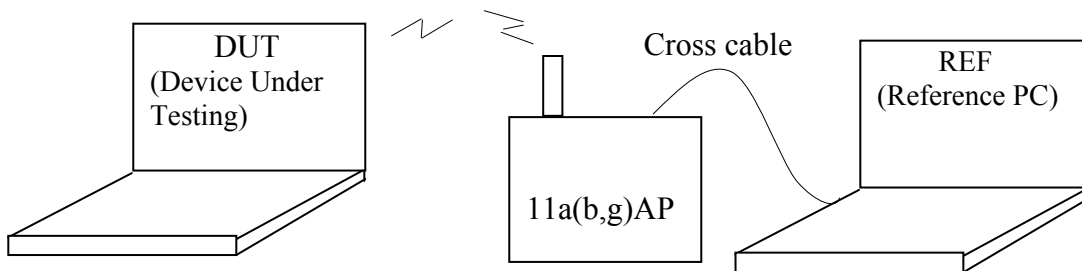

Configuration of equipment for transmitting-receiving test

#### How to setup the REF PC

Set up the wireless LAN environment needed for the test before the start of Responder program on REF PC.


1. Copy the R100VWL5.ZIP (wireless LAN program for maintenance, common to Calexico, Golan and Kedron) to REF PC and unzip it. Then "Clx\_Res" folder is created and the following three programs are copied in it.

PACKET.SYS


PACKET.INF

WTWINSVR.EXE


Open “My Computer” window and click “My Network places” on the left column.

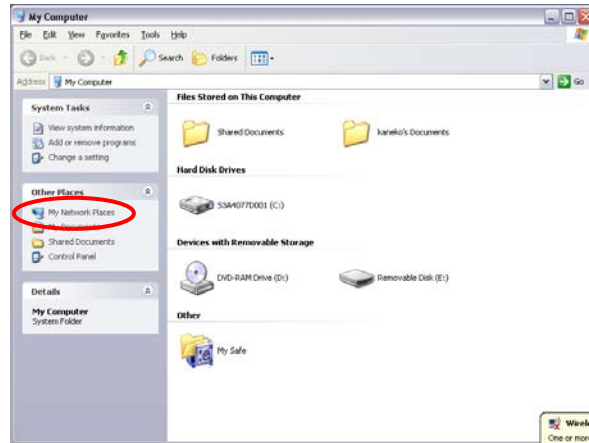

Click “View network connections” on the left column.

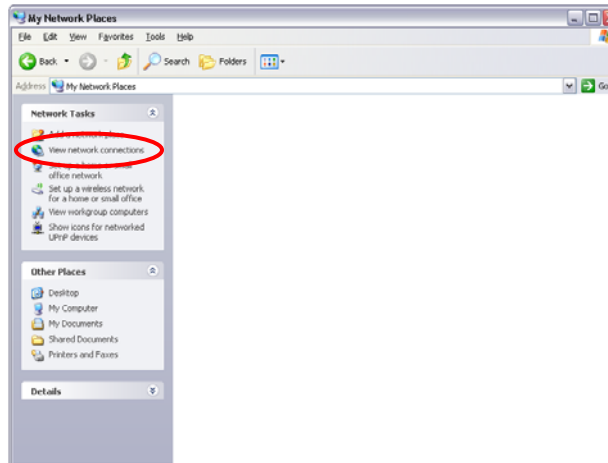


The “Network Connections” window appears. Double-click “Local Area Connection”.

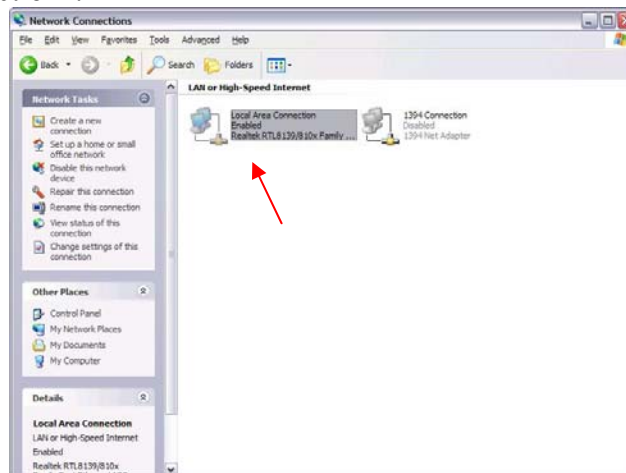


Network Connections window

Click “Install...” button on the “Local Area Connection Properties” window.

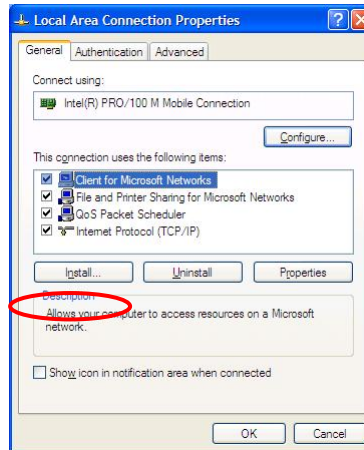


Local Area Connection Properties window

Select “Protocol” on the “Select Network Component Type” window and click “Add...” button.

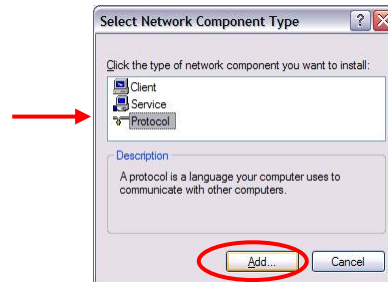


Select Network Component Type window

Click “Have Disk...” button on the “Select Network Protocol” window.

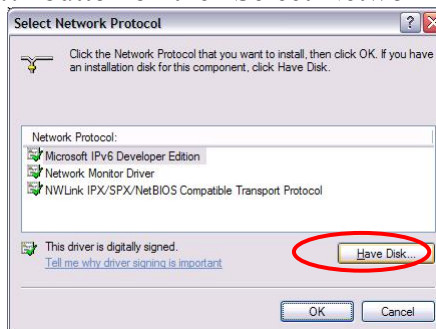


Select Network Protocol window

When “Install From Disk” window appears, click “Browse...” and specify the created “Clx\_Res” folder. Then Click “OK”. (For the test, “PACKET.INF” file is used.)

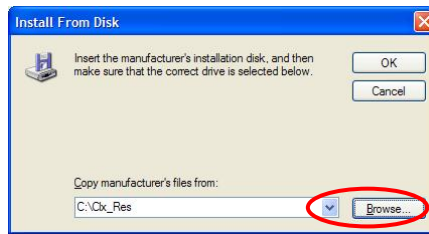


Install From Disk window

The “Select Network Protocol” window appears again. In the “Network Protocol”, “DDK PACKET Protocol” will appear. Then click “OK” to start the installation.

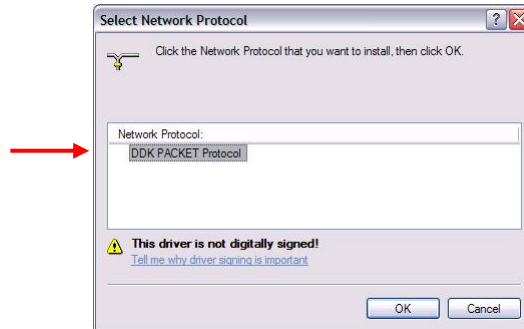

Select Network Protocol window

When the installation is completed, “Local Area Connection Properties” will appear. Confirm that the “DDK PACKET Protocol” is added. Click “Close” button to finish the setup of REF PC.

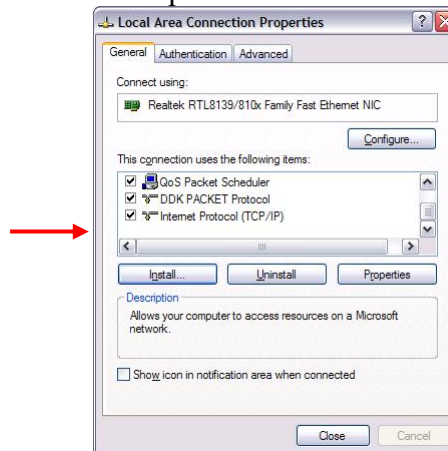

Local Area Connection Properties window


After the completion of REF PC setup, restart the WINDOWS. Then perform the Responder test program for Windows (WTWINSVR.EXE) in the Clx\_Res folder.

- WTWINSVR.EXE

Function : Transmitting/receiving of data to/from DUT via AP  
OS available : Windows XP only  
How to start : Double-click WTWINSVR icon.


### How to start

1. Double-click wtwinsvr icon. The following screen will appear.

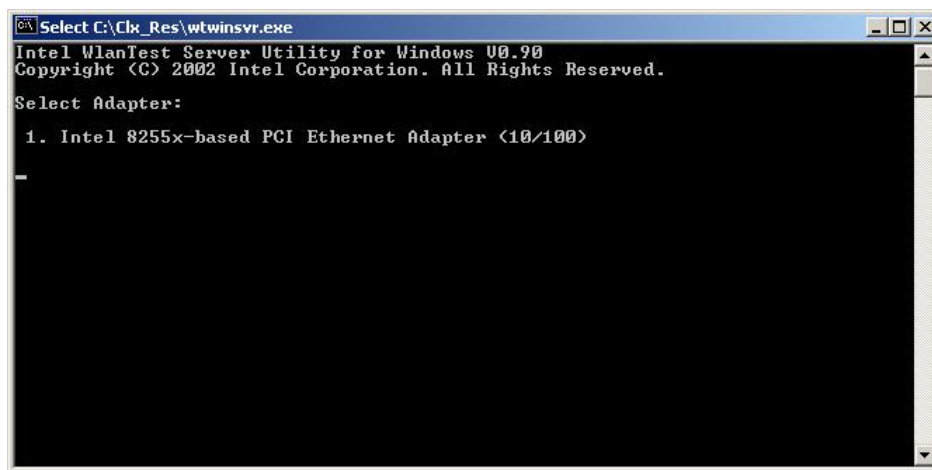

Startup screen of wtwinsvr program

2. Enter the number of Network Adapter used on REF PC (enter **1** for example above). Then the following screen will appear. Start the test program on DUT.

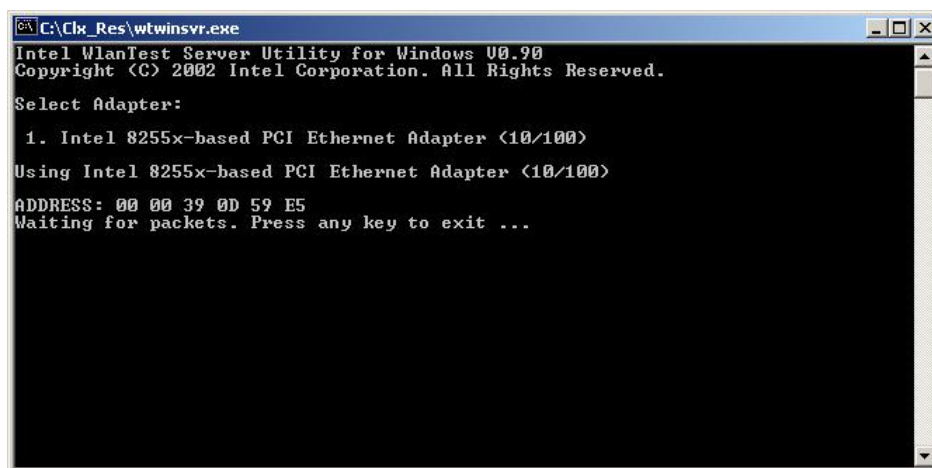

Screen while running the wtwinsvr program

The REF PC is waiting for the start of the test program on DUT.

## 3.28 Wireless LAN Test Program on DUT PC (Intel-made)

### 3.28.1 Wireless LAN Test Program (Intel-made : Shirley Peak) on DUT PC

This section describes how to perform the wireless LAN transmitting-receiving test (Intel-made 802.11 a/b/g). To execute the wireless LAN test, use the Diagnostics disk for wireless LAN test.

Insert the Diagnostics disk for wireless LAN test into the Floppy Disk Drive. Turn on the power while pressing **U**.

The following menu appears in the display.

```
*****
*
*      Intel WiFi Link 5100/5300 Maintenance T&D Menu      *
*
*  1 : Communication test of 11a mode for 5100/5150 module *
*
*  2 : Communication test of 11b mode for 5100/5150 module *
*
*  3 : Communication test of 11g mode for 5100/5150 module *
*
*  4 : All the tests of WiFi Link 5100/5150 Module          *
*      (MAC Check,communication test)                      *
*
*  5 : Communication test of 11a mode for 5300/5350 module *
*
*  6 : Communication test of 11b mode for 5300/5350 module *
*
*  7 : Communication test of 11g mode for 5300/5350 module *
*
*  8 : All the tests of WiFi Link 5300/5350 Module          *
*      (MAC Check,communication test)                      *
*****
```

To execute the subtest, input the subtest number and press **Enter**.

**Subtest01**      Communication test of 11a mode for 5100/5150 module (Two antenna type)

This subtest execute transmitting/receiving test in 802.11a mode using the main antenna.

If a defective is not found during the test, **OK** message will appear in the display. Press any key and return to the test menu.

If a defective is found during the test, **NG** message will appear in the display. When pressing any key, the following message is displayed

```
*****
*                                     *
*      11a Communication Test : NG !!   *
*      tx=a antenna : rx = a antenna   *
*                                     *
*****
```

Press any key and return to the test menu.

**Subtest02**      Communication test of 11b mode for 5100/5150 module (Two antenna type)

This subtest execute transmitting/receiving test in 802.11b mode using the main antenna.

If a defective is not found during the test, **OK** message will appear in the display. Press any key and return to the test menu.

If a defective is found during the test, **NG** message will appear in the display. When pressing any key, the following message is displayed

```
*****
*                                     *
*      11b Communication Test : NG !!   *
*      tx=a antenna : rx = a antenna   *
*                                     *
*****
```

Press any key and return to the test menu.



Subtest03      Communication test of 11g mode for 5100/5150 module (Two antenna type)

This subtest execute transmitting/receiving test in 802.11g mode using the main antenna.

If a defective is not found during the test, **OK** message will appear in the display. Press any key and return to the test menu.

If a defective is found during the test, **NG** message will appear in the display. When pressing any key, the following message is displayed

```
*****
*                                     *
*      11g Communication Test : NG !!   *
*      tx=a antenna : rx = a antenna   *
*                                     *
*****
```

Press any key and return to the test menu.

Subtest04      All the tests of WiFi Link 5100/5150 Module  
(MAC Check, communication test: Two antenna type)

All the tests is executed in the order of Communication test of 11a mode, Communication test of 11b mode and Communication test of 11g mode.

When any error has detected, the test finishes.

Subtest05      Communication test of 11a mode for 5100/5150 module (Three antenna type)

This subtest execute transmitting/receiving test in 802.11a mode using the main antenna.

If a defective is not found during the test, **OK** message will appear in the display. Press any key and return to the test menu.

If a defective is found during the test, **NG** message will appear in the display. When pressing any key, the following message is displayed

```
*****
*                                     *
*      11a Communication Test : NG !!   *
*      tx=a antenna : rx = a antenna   *
*                                     *
*****
```

Press any key and return to the test menu.

### Subtest06      Communication test of 11b mode for 5100/5150 module (Three antenna type)

This subtest execute transmitting/receiving test in 802.11b mode using the main antenna.

If a defective is not found during the test, **OK** message will appear in the display. Press any key and return to the test menu.

If a defective is found during the test, **NG** message will appear in the display. When pressing any key, the following message is displayed

```
*****
*                                     *
*      11b Communication Test : NG !!   *
*      tx=a antenna : rx = a antenna   *
*                                     *
*****
```

Press any key and return to the test menu.

### Subtest07      Communication test of 11g mode for 5100/5150 module (Three antenna type)

This subtest execute transmitting/receiving test in 802.11g mode using the main antenna.

If a defective is not found during the test, **OK** message will appear in the display. Press any key and return to the test menu.

If a defective is found during the test, **NG** message will appear in the display. When pressing any key, the following message is displayed

```
*****
*                                     *
*      11g Communication Test : NG !!   *
*      tx=a antenna : rx = a antenna   *
*                                     *
*****
```

Press any key and return to the test menu.

### Subtest08      All the tests of WiFi Link 5100/5150 Module (MAC Check, communication test: Three antenna type)

All the tests is executed in the order of Communication test of 11a mode, Communication test of 11b mode and Communication test of 11g mode.

When any error has detected, the test finishes.

## 3.29 LAN/Modem/Bluetooth/IEEE1394 Test Program

This section describes how to perform the LAN/Modem/Bluetooth/IEEE1394 test with the test program.

Insert the test program disk for LAN/Modem/Bluetooth/IEEE1394 test in FDD and turn on the power. The following message will appear:

```
Microsoft Windows XX Startup Menu
-----
```

1. LAN
2. Modem
3. Bluetooth
4. IEEE1394

Enter a choice:

Press the number you want to test and press **Enter**.

**NOTE:** *It is impossible to go back to startup menu once you choose the test. Therefore, LAN/Modem/Bluetooth/IEEE1394 test can not be executed successively.*

### 3.29.1 LAN test

To execute LAN test, press **1** and **Enter**. The following message will appear:

```
#####
#####      i82562 ICHx GbE (i82540) Diagnostics program      #####
#####
*
*  1 .....      (i82562 + ICHx)                                *
*
*  2 .....      (GbE)                                           *
*
*****
.... Press test number [1-2] ?
```

Press the number you want to test and press **Enter**.

## Subtest01 (i82562 + ICHx)

This subtest checks the operation of mini-PCI I/F by the loopback test in the chip.

The following message will appear:


```
[LAN transmit & receive test !]

                        COMPLETED Repeat count =      00000
                        Error count  =      00000

LOOPBACK TEST

100Mbps Auto-negotiation TxRx Test
Destination Address      = xxxxxxxxxxxxxxxx
Source Address           = xxxxxxxxxxxxxxxx

** 100Base-TX Full-Duplex **
< TRANSMIT >
< RECEIVE >
```

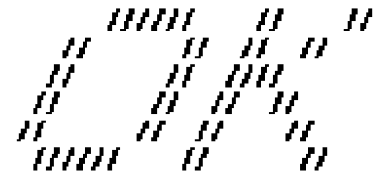

**NOTE:** The menu displayed by your computer may be slightly different from the one shown above.


If a defective is found, **NG** message will appear in the display.

Subtest02 (GbE)

This subtest checks the operation of mini-PCI I/F by the loopback test in the chip. Select **2** to execute and press **Enter**.

The following message will appear:

```
Testing adaptor...hit <ESC> to abort.  
*  
External Loopback Test...PASSED  
Testing completed.  
*  
*  
Loopback Test Complete  
*  
*  
* 1000Base Auto-negotiation TxRx Test  
*  
* CE Test Complete
```

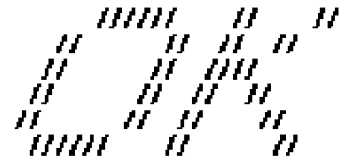

**NOTE:** The menu displayed by your computer may be slightly different from the one shown above.

If a defective is found, **NG** message will appear in the display.

### 3.29.2 Modem test 2 (Not Used)

For this subtest, connect the modem PCB and RJ11 connector with a harness. Use the dedicated “FAT-MODE inspection device (product code: QE2000P01 made by Nitto Denki Seisakusyo)” for the tests.

```
#####
#####      AC97' Modem Controller Diagnostics program      #####
#####
*
*          1 ..... (ICHx)
*
*          2 ..... (ICH6)
*
*****
.... Press test number[1-2] ?
```

To execute Modem test, press **2** and **Enter**. Following message will appear:

```
[Modem loopback test !]
ICHx MDC Test Program with Modem Sound (Line Test)
Version X.X
* Scorpio Modem Initialize           :OK
* Digital Loopback Test              :OK
* RJ11 Connector Check (LED)         : (Operator's Check!!)
```

**OK** is displayed when a error is detected, **NG** is display when a error is not detected.

**NOTE:** The menu displayed by your computer may be slightly different from the one shown above.

RJ11 Connection Check (LED) (Operator's Check LED) test will be executed, and the following message will appear:

```
...Press Key (Y = OK , N =NG)
```

If the color in the LED of the connection checker is orange, press **Y**, otherwise, press **N**.

### 3.29.3 Bluetooth test

#### Preparation


- For the test of Bluetooth function, use the Windows program installed on the target computer (computer to be tested). A responder device (device for transmitting/receiving data) is also needed. (A mobile phone with the Bluetooth function is also available.)
- A Bluetooth card should be installed on the target computer. Install the Bluetooth function by clicking [All Programs] -> [TOSHIBA] -> [Bluetooth] -> [Bluetooth Settings].

#### Test procedure


1. Enable the Bluetooth function of the responder device.
2. Make sure the wireless communication switch of the target computer is set to “ON” position.
3. Right-click the Bluetooth icon on the lower right screen of the target computer.




4. Select “Options...”.

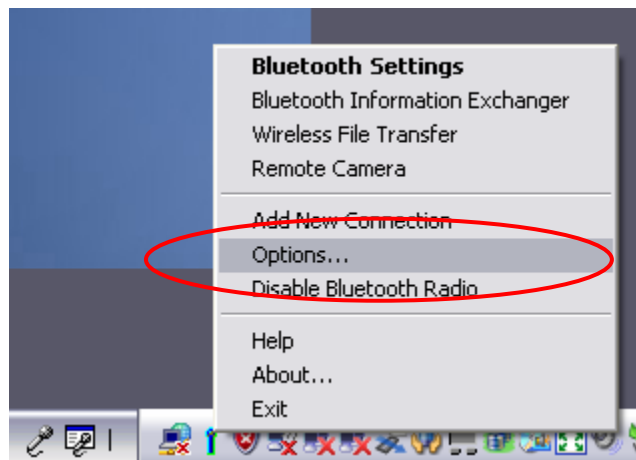

5. Select “Diagnostics” tab and click “Run”.

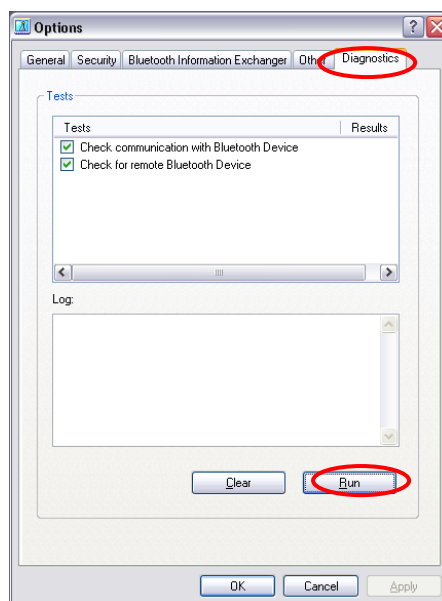

6. Check the “Log” to confirm the test result.

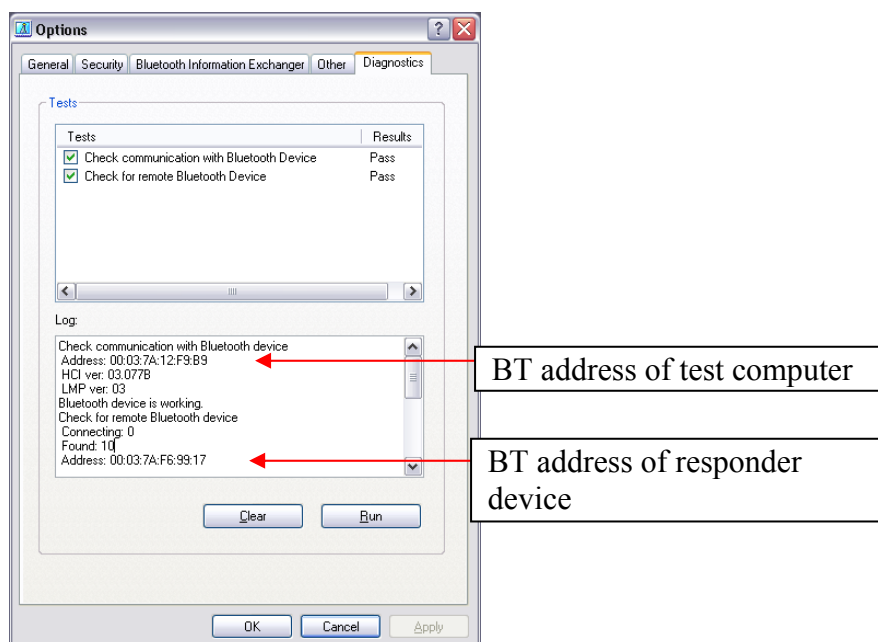

7. When the BT (Bluetooth) address of the responder device appears, the Bluetooth card and antenna connection are OK.  
If the BT address of the responder device does not appear, check the Bluetooth card condition and antenna cable connection to the Bluetooth card by disassembling the computer following the steps described in Chapter 4, *Replacement Procedures*.



### 3.29.4 IEEE1394 test (Not Used)

To execute this test, input **4** and press **Enter**.

**NOTE:** Use another computer that can communicate by IEEE1394 (i. Link) cable as a reference machine to perform this test.

The following menu will appear:

```
*****
*****      IEEE1394[XXXXX] Diagnostics program      *****
*****
*                                                     *
*      1 .... Transmit & Receive test                  *
*                                                     *
*      2 .... Responder set                            *
*                                                     *
*      3 .... 1394 GUID Display                        *
*                                                     *
*****
.... Press test number[1-3] ?
```

To execute the TEST, select the test number you want to execute and press **Enter**.

Subtest01      Transmit & Receive test

**NOTE:** Before executing subtest 01, be sure to execute subtest 02 in the responder machine.

This program checks the data transporting between responder machine and target machine and compare them with the original data through the IEEE1394 cable.

Subtest02      Responder set

This program is executed in the responder machine to initialize the responder machine with the IEEE1394 cable connected to the target machine before executing subtest 01.

Subtest03      1394 GUID Display

This program checks the GUID of IEEE1394.

### **3.30 Sound Test program**

Sound TEST disk cannot be used in Satellite Pro S300, TECRA A10/S10/P10.

Therefore, please test the sound on Windows OS.

1) Play a music file.

2) click TOSHIBA-> utility -> "PC diagnostic tool." to test the sound

Please check operation of speakers by one of methods.

## **3.31 SETUP**

### **3.31.1 Function Description**

This program displays the current system setup information as listed below:

## **Main menu**

**System Time(System time )**

**System Date(System date )**

**CPU Type**

**CPU Speed**

**HDD1/SSD1**

**ODD**

**Total Memory Size**

**System BIOS Version**

**EC Version**

**AMT Setup Prompt**

**Language**

## **Security menu**

**User Password**

**Supervisor Password**

**HDD1/SSD1 Password Mode**

**TPM**

## Power Management menu

- Wake-up on LAN
- Wake-up on LAN on Battery
- Wake on Keyboard
- Critical Battery Wake-up
- Dynamic CPU Frequency Mode
- Core Multi-Processing
- Intel Turbo boosts Technology
- Intel Display Power Management
- eSATA
- SATA Interface setting
- BIOS Power Management

## Advanced menu

- Execute-Disable Bit Capability
- Virtualization Technology
- Trusted Execution Technology
- Intel AT
- Intel AT Suspend
- Beep Sound
- USB Sleep and Charge
- USB KB/Mouse Legacy Emulation
- USB Memory BIOS Support Type
- Change Boot Order
- System Configuration

## Exit menu

Load Setup Defaults


Discard Changes

Exit Saving Changes


### 3.31.2 Accessing the SETUP Program

Turn on the power SW.  
then press **F2**. The following display appears.


#### Main menu screen

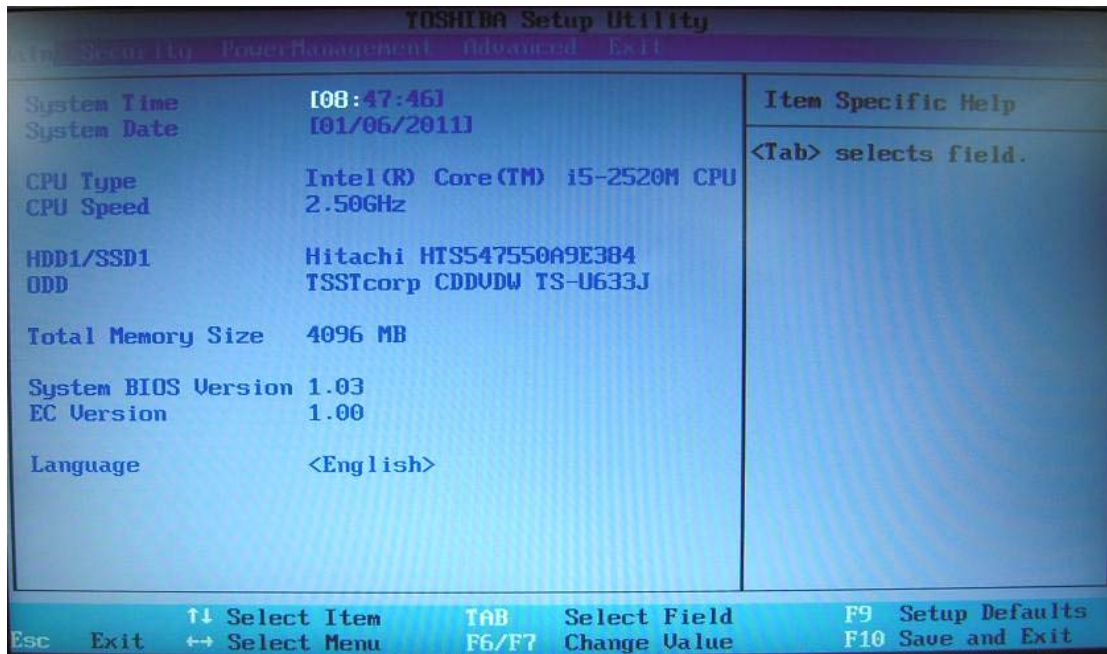

## Security menu screen

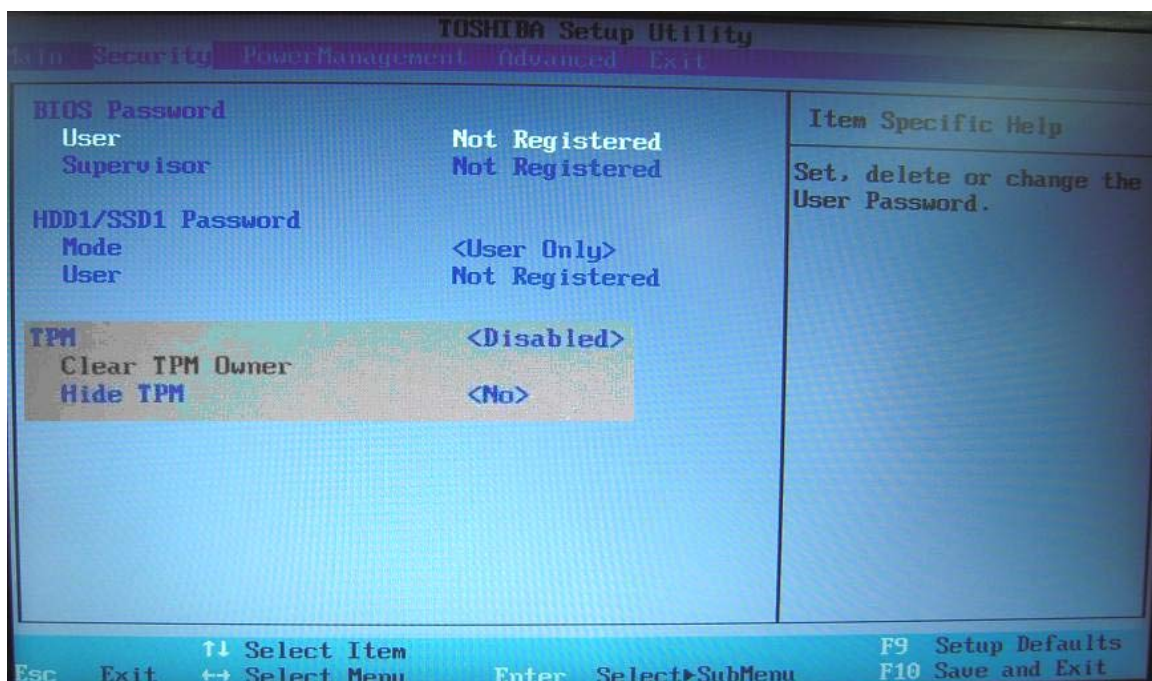


## Power Management menu screen

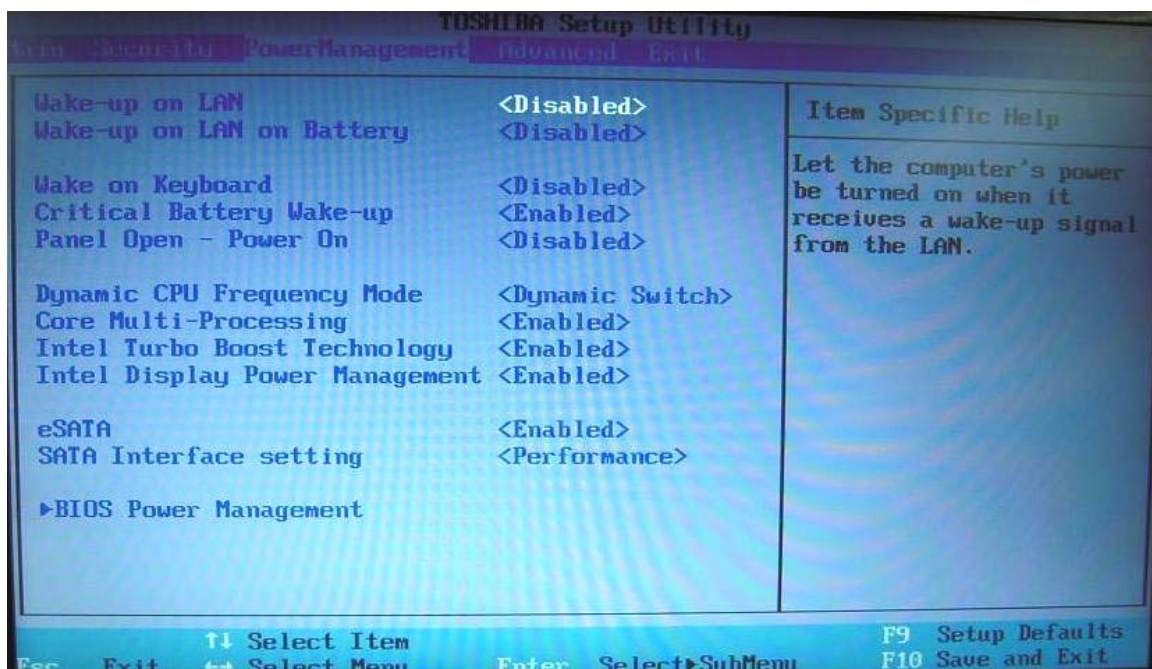




### Advanced menu screen

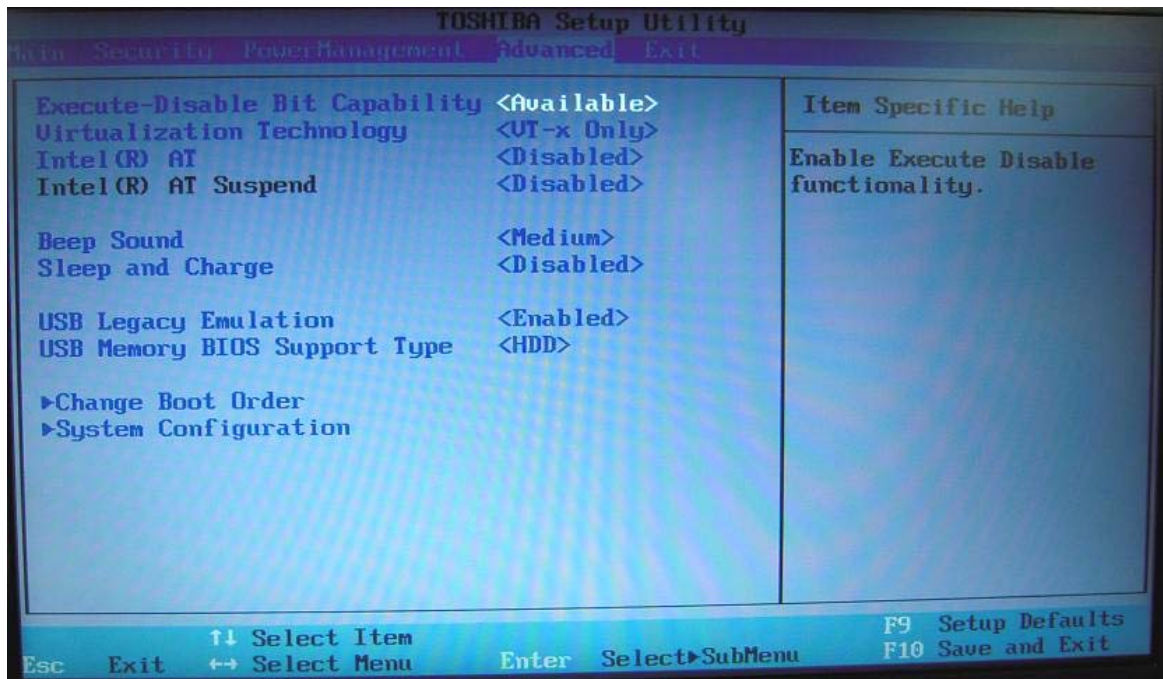

### Exit menu screen

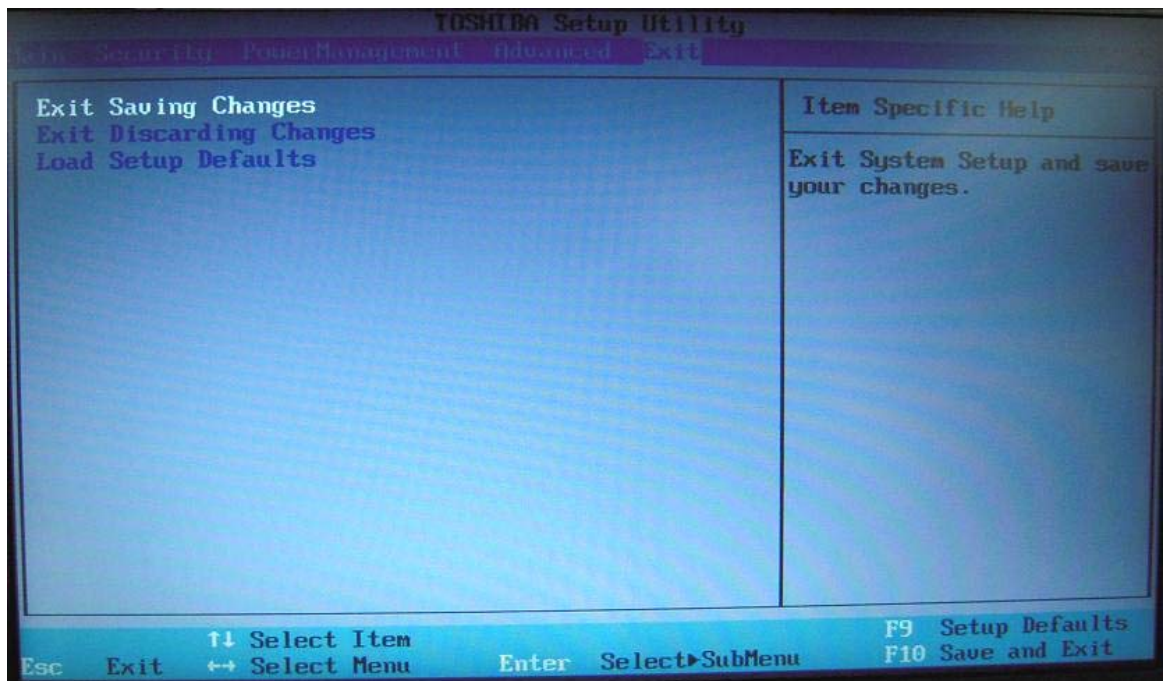



## Moving Within the SETUP Menu and Changing Values

1. Press ← and → to move between the two columns. Press ↑ and ↓ to move between items in a column.
2. Press either the **[Enter]Key** to change the value.

## Accepting Changes and Exiting the SETUP Window

1. Press **[F10] key** to accept the changes you made.
2. To make other changes, press **N**. Repeat the steps above.
3. To accept the changes, press **Y**.

**NOTE:** You can press **Esc** to quit at any time without saving changes. *SETUP* asks you to confirm that you do not want to save your changes. When *SETUP* is displayed at the next time, the current configuration appears.

## The Factory Preset Configuration

When you access *SETUP*, the current configuration is displayed.

1. To show the factory preset configuration, press **[F9]** key.
2. To accept the default settings, press **[Y]** key.

## **How to change setup Options**

Since a help is displayed on the right-hand side of each menu screen, it is referred to.

## **3.32 Maintenance (WinPE&FreeDos) Test Program Operation**

### **3.32.1 . Outline**

This document explains how to operate T&D that is released through TOSHIBA Test & Diagnostic CD.

### **3.32.2 Outline of Specification**

The TOSHIBA Test & Diagnostic CD already released includes WindowsPE T&D (hereafter, referred as WinPE T&D) and Freedos T&D (hereafter, referred as Fdos T&D) and either of the T&D programs can be activated by multiboot support.

#### **3.32.2.1 Outline of WindowsPE T&D**

WinPE T&D operates on the Windows PE2.0 operating system. If the CD is booted, the operating system WindowsPE is extracted to the RAM disk in the system memory and operates on it. (At this time, the drive is drive X:.)

T&D functionally consists of display of system information, execution of each test and various utilities, whose test items support only tests which can be commonly used on each model. T&D also allows you in some models to use the multitasking functions which execute the stress test and each test never been included in it, as multitasks.


#### **3.32.2.2 Outline of Freedos T&D**

Freedos T&D is extracted as image on the CD and operates on the CD drive. Also, if Freedos T&D can conduct a test such as the conventional memory test that cannot be done by WinPE T&D. The test items include only tests that can be commonly used on each model like WinPE T&D.

### 3.33 . Starting TOSHIBA Test & Diagnostic

#### 3.33.1 Starting from CD

1. Load the TOSHIBA Test & Diagnostic Discs into the optical disc drive and turn off the computer's power.
2. While holding down F12 key on the keyboard, turn on your computer - when the logo screen appears, release the F12 key.
3. Use the left and right cursors key to select the CD-ROM icon from the menu.
4. If T&D starts from the TOSHIBA Test & Diagnostic CD, the following screen is displayed.

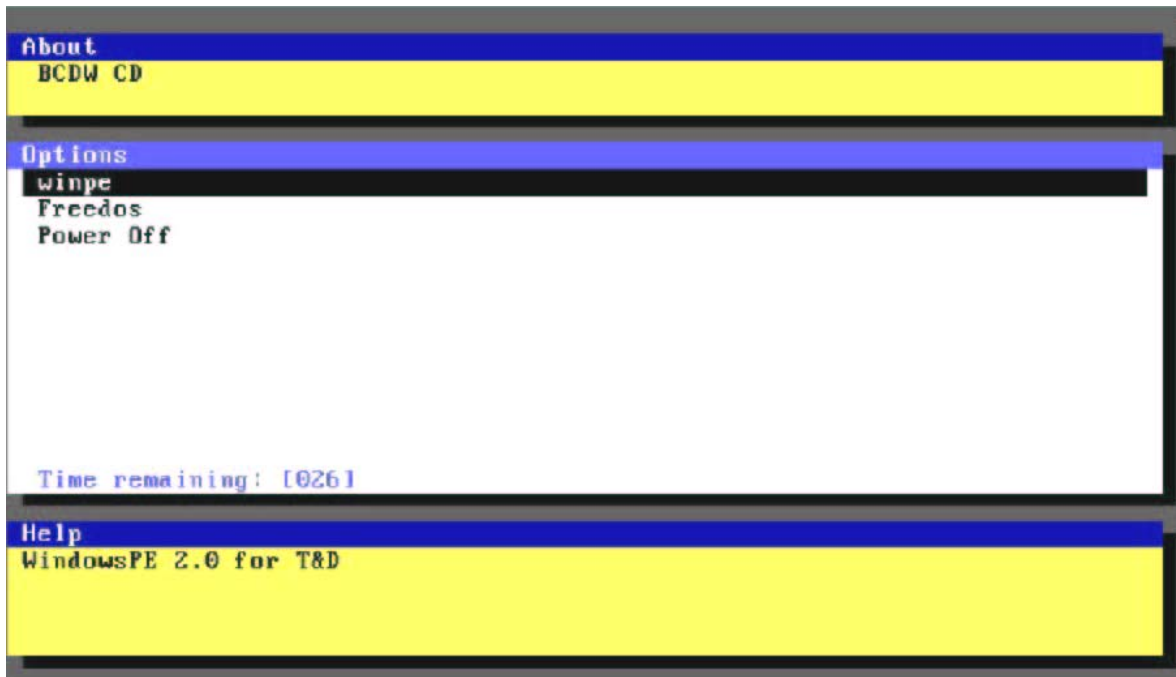

Move the cursor to the desired item and press the Enter key.

**[winpe]:** Displays the following screen. If Enter key is pressed, WindowsPE will start up and then WinPE T&D will start.

**[Freedos]:** Starts up FreeDOS and then starts FreeDOS T&D.

**[Power Off]:** Turns the power off.

**NOTE:** After [winpe] is selected, the following message is displayed on the screen. At this time, "Press any key to boot from CD or DVD.." is displayed, but only [ENTER] key is valid.



Starting CD ... ok.  
Bootable CD Wizard v2.0a1 Copyright (c) 2004 by Alex Kopylov  
Press any key to boot from CD or DVD.

Press the Enter key again on this screen. If the Enter key is pressed, WindowsPE will start. If a key different from an Enter key is pressed. Or a press of no keys will start Windows of built-in HDD.

### 3.34 . Windows PE T&D

#### 3.34.1 Equipment Configuration for Test

The following table indicates equipment configuration necessary for conduction of the tests items shown below using WinPE T&D.

Test Item	Equipment required	Remarks
USB	USB flash memory	Free space : More than 12MB (When you start WinPE T&D from a USB memory, use 512MB or more of USB memory.)
ODD	Media containing test data	The test data is included in a bootable CD. File name: CDDTEST0.DAT
LAN	Wired router, LAN cable	The router has the DHCP server function
FDD	USB connected FDD 2HD Floppy disk	Free space : 384KB
IEEE1394	IEEE1394-compatible external HDD	Free space : More than 12MB

To execute the above test, start the machine after connecting all of the equipment

\* In particular, if LAN router is connected after OS is activated, IP address is not assigned to it.

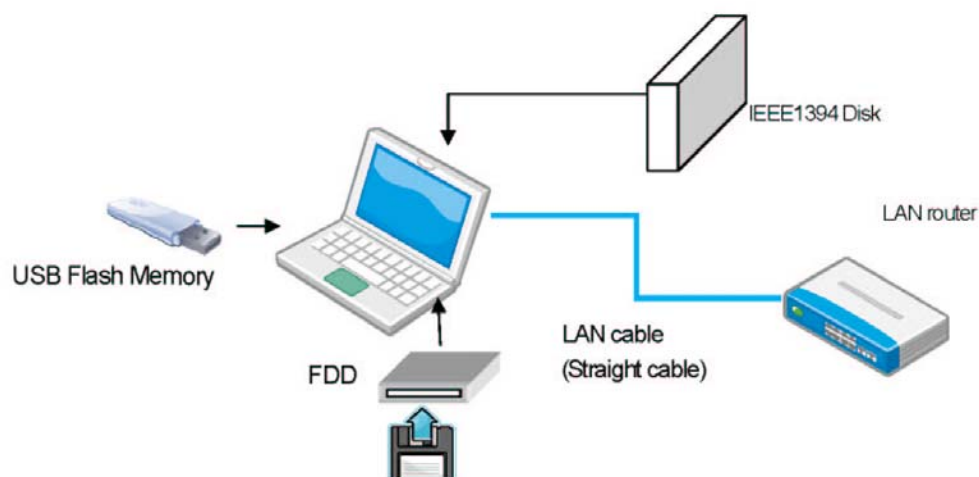


Fig.1 Test Environment Image

### 3.34.2 Starting T&D

#### 3.34.2.1 Automatic Start

When WindowsPE starts up from the TOSHIBA Test & Diagnostic CD or the USB memory, WinPE T&D starts automatically.

After the startup of the OS, unless CD volume name is WINTDCD or USB volume name is WINTDUSB, WinPE T&D does not start automatically.

***Note:** If the system starts up from the TOSHIBA Test & Diagnostic CD, WinPE T&D in the USB memory starts when the USB memory created in section 3-5-2 is connected.*

#### 3.34.2.2 Manual Start

If the user starts WinPE T&D manually, move to the folder containing WinPETD.exe and run WinPETD.exe.

Example of WinPE T&D to be executed from the command prompt screen

```
D:/WinPETD/>WinPETD [enter]
```

\* The actual drive letter varies depending on the PC.

The storage location of WinPETD.exe in each device is as follows:

CD media drive: ¥WinPETD


USB memory drive: ¥WinPETD

### 3.34.3 System Information Menu

If you set the TOSHIBA Test & Diagnostic CD to the ODD drive and run WinPE T&D, the following test selection screen is displayed. (For further details, refer to Chapter 2.)

Hereinafter, System Information will be described in detail.

There are three menus of System Information, Diagnostics, and System Utility as a menu.

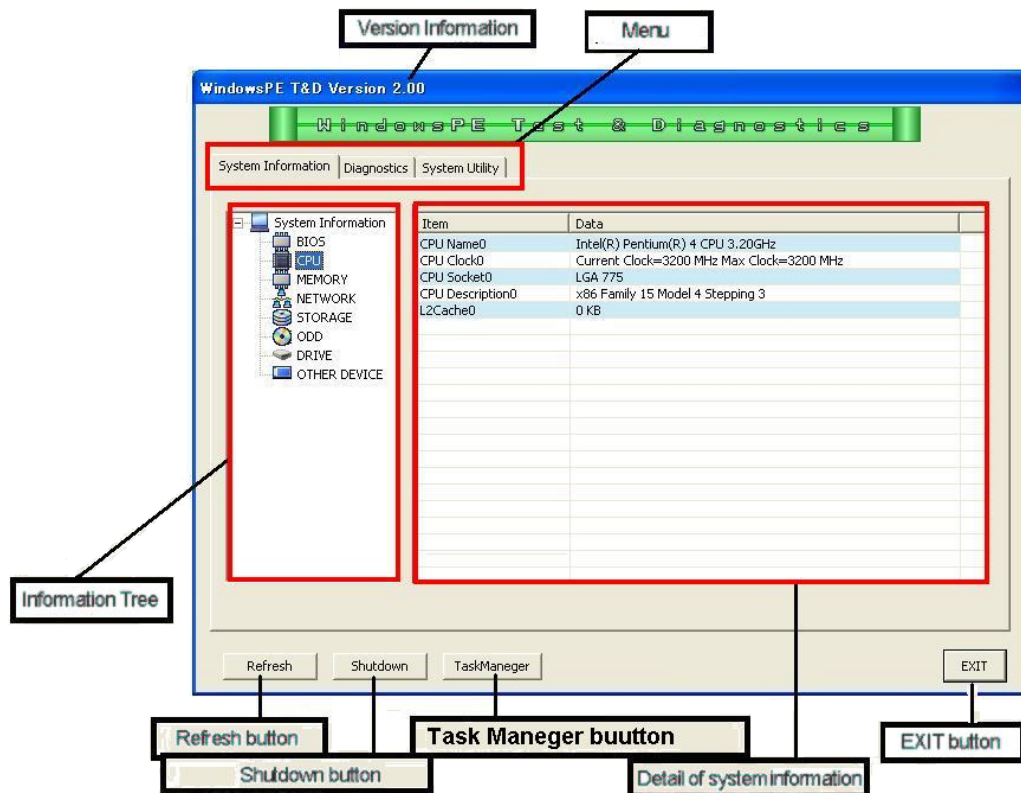

#### 3.34.3.1 Explanation of each item

- ▼ [Refresh] button Obtains system information again, redispays it, rejudges the grayed test item(s) of the test menu and displays the test menu.
- ▼ [Shutdown] button Shuts down WindowsPE.
- ▼ [EXIT] button Terminates this application.
- ▼ Version information Displays the version of WinPE T&D.
- ▼ Menu Indicates tabs for selecting PC information, Diagnostics to set test items or conduct tests, Tool to extract T&D to USB memory and System Utility to provide SMART information.
- ▼ Information tree Displays detailed information of the item selected from Detail of System Information if you click a desired item of the System Information displayed in Information tree.
- ▼ Detail of system information Displays detailed information of the item selected in Information tree. The detailed information will be given in section 3-3-2.



### 3.34.3.2 Details of the system information displayed on an information tree

The details of the system information item displayed on each information tree are shown below.

- BIOS

The following items display DMI and BIOS information of the PC.

Item	Description
Manufacturer	Displays Manufacturer of the PC
Product Name	Displays Product Name of the PC
Part Number	Displays Part Number of the PC.
Serial Number	Displays Serial Number of the PC.
UUID	Displays UUID of the PC.
BIOS Version	Displays BIOS Version of the PC.
BIOS OEM String	Displays OEM String of the PC.

- CPU

The following items display CPU information of the PC.

Item	Description
CPU Name0 - 1	Displays the name of the CPU mounted on the PC.
CPU Clock0 - 1	Displays Current Clock (MHz) and Max Clock (MHz) of the CPU.
CPU Socket0 - 1	Displays Socket Name of the CPU.
CPU Description0-1	Displays Processor Name of the CPU and CPUID (Family, Model, Stepping).
L2 Cache0 - 1	Displays the second cache (KB) of the CPU

- MEMORY

The following item displays memory information of the PC.

Item	Description
Physical Memory	Displays the capacity (GB) of the physical memory on the PC

- NETWORK

The following items displays network card information of the PC.

If more than one network card is connected, the information of up to 4 network cards are displayed.

Item	Description
Network0 - 3	Displays the name of the LAN card connected to the PC.
MAC Address0 - 3	Displays MAC address of the LAN card.

- STORAGE

The following items display IDE, IEEE1394-HDD and USB memory storage information of the PC. If more than one HDD is connected, the information of up to 4 HDDs are displayed

Item	Description
IDE HDD0 - 3	Displays the name and the capacity (GB) of IDE HDD connected to the PC.
USB Flash Disk0 - 3	Displays the name and the capacity (GB) of USB Flash Disk connected to the PC.
1394 Disk0 - 3	Displays the name and the capacity (GB) of IEEE1394-HDD connected to the PC.
Other Disk0 - 3	Displays the name and the capacity (GB) of the HDD other than the above three  HDD types which is connected to the PC

- ODD

The following item displays ODD information of the PC. If more than one ODD is connected, the information of up to 4 ODDs are displayed.

Item	Description
ODD0 - 3	Displays the name and the media type of the ODD connected to the PC. Media type is information of the media used, such as CD-ROM, DVD-RW and etc.

- Drive

The following item displays Drive information of the PC. If more than one ODD is connected, the information of up to 4 ODDs are displayed.

Item	Description
Drive	The information on the assigned logical drive is displayed. Type, volume name, free disk spaces (free size), and used disk spaces (used size) is displayed.


- OTHER DEVICE

The following items display other device information of the PC.

Item	Description
FDD	Displays the name of the FDD connected to the PC.
Key Board0 - 3	Displays the name of the Keyboard connected to the PC. If more than one keyboard is connected, the information of up to 4 keyboards are displayed.
Mouse0 - 3	Displays the name of the mouse connected to the PC. For the touchpad, (Touchpad) follows the mouse name.

### 3.34.4 Test Menu

This section explains the Diagnostics screen.

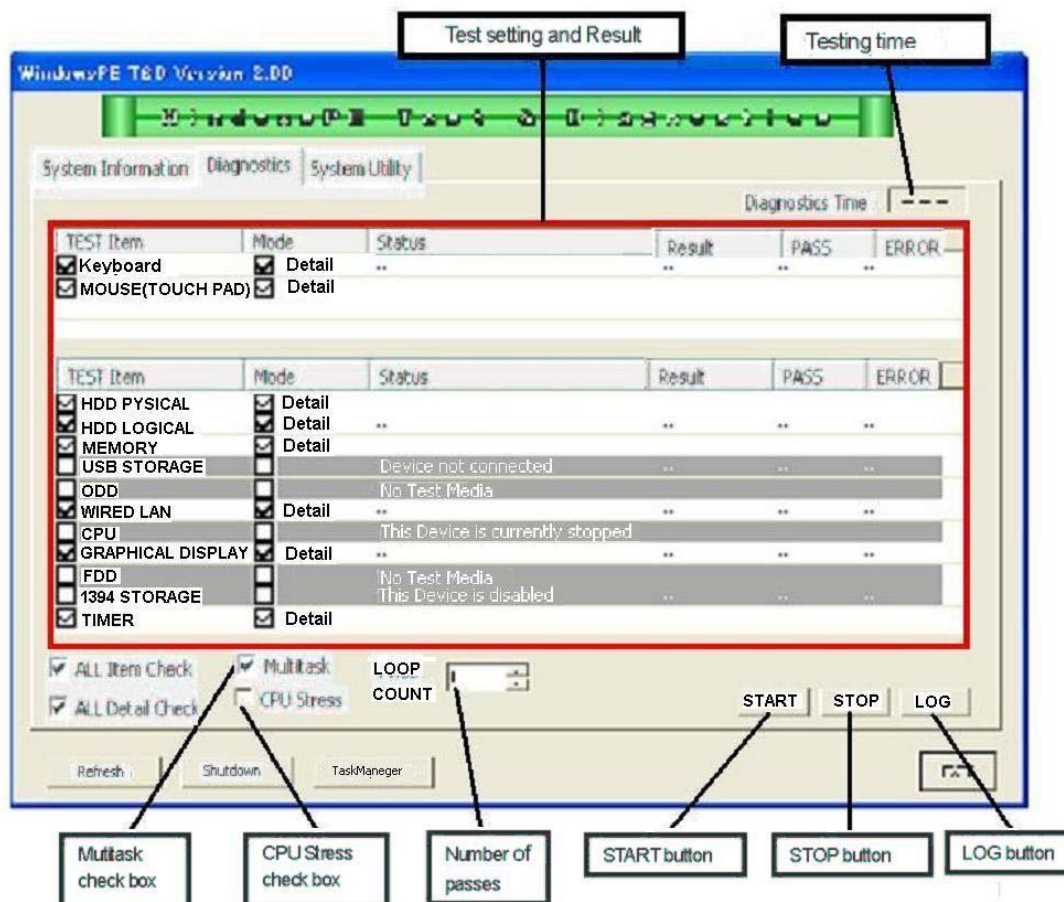

#### 3.34.4.1 Explanation of each item

- ▼ [Multitask] check box Checking this box activates each test as multi-task.
- ▼ [CPU Stress] check box Checking this box applies any stress to the CPU during the test.  
Restriction: If the test is conducted, uncheck Multitask in the Simple mode before the test because of too much stress to be applied to the CPU. Also, USB and TIMER of TEST Item cannot be supported.
- ▼ [LOOP COUNT] number of passes Sets the number of times of a test, which allows you to specify from 1 to 999.
- ▼ [START] button Starts the test.
- ▼ [LOG] button Displays the test result or the menu to save it. The detailed explanation will be given in section 3-4-5.
- ▼ [STOP] button Stops the test during the execution of it.

- ▼ Testing time Updates the testing time and displays it in real time during the execution of the test.
- ▼ Test setting and Result This will be explained in section 3-4-2.

### 3.34.4.2 Test setting and Result

Test Items	Test mode	Status	Test result	PASS	ERROR
TEST Item	Mode	Status	Result	PASS	ERROR
<input checked="" type="checkbox"/> KEYBOARD	<input checked="" type="checkbox"/> Detail	--	--	--	--
<input checked="" type="checkbox"/> MOUSE(TOUCH PAD)	<input checked="" type="checkbox"/> Detail	--	--	--	--
TEST Item	Mode	Status	Result	PASS	ERROR
<input checked="" type="checkbox"/> HDD PHYSICAL	<input checked="" type="checkbox"/> Detail	--	--	--	--
<input checked="" type="checkbox"/> HDD LOGICAL	<input checked="" type="checkbox"/> Detail	--	--	--	--
<input checked="" type="checkbox"/> MEMORY	<input checked="" type="checkbox"/> Detail	--	--	--	--
<input type="checkbox"/> USB STORAGE	<input type="checkbox"/>	Device not connected	--	--	--
<input type="checkbox"/> ODD	<input type="checkbox"/>	No Test Media	--	--	--
<input checked="" type="checkbox"/> WIRED LAN	<input checked="" type="checkbox"/> Detail	--	--	--	--
<input type="checkbox"/> CPU	<input type="checkbox"/>	This Device is currently stopped	--	--	--
<input checked="" type="checkbox"/> GRAPHICAL DISPLAY	<input checked="" type="checkbox"/> Detail	--	--	--	--
<input type="checkbox"/> FDD	<input type="checkbox"/>	No Test Media	--	--	--
<input type="checkbox"/> 1394 STORAGE	<input type="checkbox"/>	This Device is disabled	--	--	--
<input checked="" type="checkbox"/> TIMER	<input checked="" type="checkbox"/> Detail	--	--	--	--

- ▼ TEST Item Checks the check box of the item to be tested.
- ▼ Mode Sets the test mode for each test item.
- ▼ Status The following table explains status information of each test item (test device).Status Description

Status	Description
--	Ready for the test prior to the start of it.
*****	Gray out. It is indicated when the test environment is not ready. Refer to the following items for details.
TESTING	The test is running.
SKIP	The test was skipped.
DONE	The test finished

**Note:** The test item grayed out indicates that the test environment is not ready and its explanation is displayed in the Status field.  
The following table lists the statuses to be displayed on the screen and explains their meanings.

Status	Description
Device not connected	Peripheral device necessary for the test is not connected. USB flash memory, FDD and others may be connected to the PC.
Device has a problem	Failure occurred in the device driver.
This Device is disabled	The device has been removed.
This Device is currently stopped	The device is in the STOPPED state.
IP Address cannot be acquired	The IP address is not able to be obtained.  The LAN cable may not be connected.
No Test Media	Test media is not inserted. Please insert the test media to the ODD or the FDD.
Space Size Error	This device is insufficient of free disk spaces required for a test.
No partition or file	A partition is not in devices, such as HDD, USB, and IEEE1394. Or the file does not exist in HDD.

- ▼ Test result ... The test results to be displayed on the screen are as follows:
- ▼ PASS ... Updates the number of passes of each test in real time during a test and displays it.

Status	Description
--	This is displayed before the start of every test or if the test is skipped.
OK	The test was successful
NG	The test failed

- ▼ ERROR ... Updates the number of error occurrences in each test in real time during a test and displays it.

### 3.34.4.3 Test Procedure


This section describes operation procedure of WinPE T&D.

- 1) Select the test item to run from Test Item and check it. (If you put a check mark in the ALL Item Check check box, all test items are checked.)
- 2) Select the test mode of each test.  
(If you put a check mark in the ALL Detail Check check box, all tests are performed in the Detail mode.)
- 3) Set the number of LOOP CONT, Multitask and CPU Stress.
- 4) Click on the [START] button and the test starts.
- 5) When "Multitask" is checked and a test is started, the test of Keyboard and Mouse is done once first. Next, other tests are started.
- 6) If PASS of each test reaches the value set to [LOOP COUNT] the number of pass times, the test is terminated, or if the [STOP] button is clicked, the test is terminated

**Note:** The test item grayed out indicates that the test is not ready yet and you cannot select it.

### 3.34.4.4 Display of Test Result

If the test ends successfully or the [STOP] button is clicked, the following Result screen is displayed.

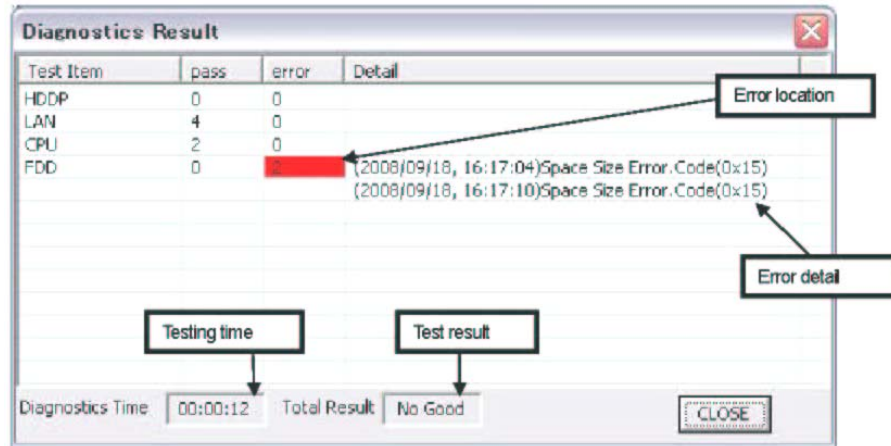


After confirming the result, click the [CLOSE] button to close the screen.

After the display of the test result screen, the test result logs are saved to X drive.

**Note:** WinPE is extracted on the RAM disk on drive X. Therefore, if the PC is shut down, the log files will be lost. It is recommended that necessary log files should be stored in an external media according to the procedure described in section 3-4-5.

### 3.34.4.5 Test Log Management Screen

If you press the [LOG] button on the Diagnostics screen, the following log management screen opens. This function saves test log files to the specified storage.

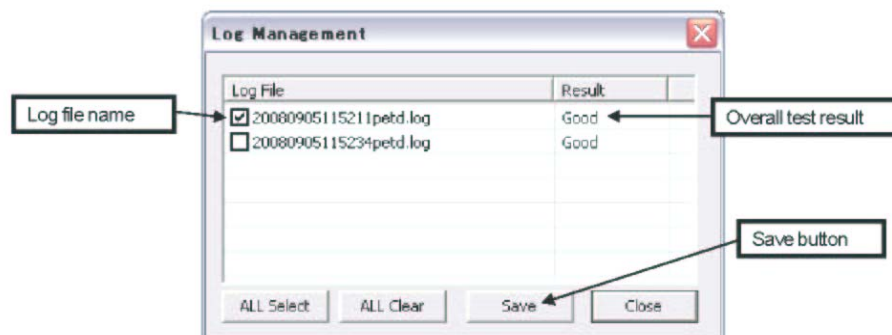

#### 1) Display of log file

If you click on the log file name displayed on the screen, the content of the log file is displayed in the text format.



## 2) How to save log files

The following is the procedure to save log files to an external media

Test logs in the text format and HTML log files are saved to the external media.


2-1) Click the check box of the log file to save.

If you click the [ALL Select] button, all the check boxes of the log files are checked.

Also, if you click the [ALL Clear] button, all the checkmarks in the check boxes are cleared.


2-2) If you click the [Save] button, the destination selection screen is displayed. Select the destination and click the [OK] button.

**Note:** The storages to be displayed as output destination is only USB memory and floppy drive.

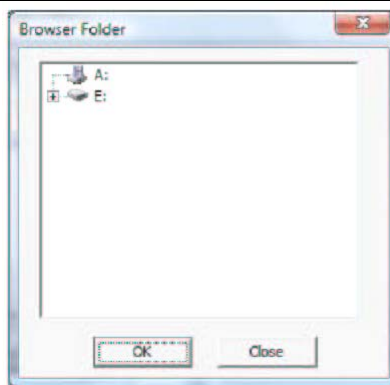

### Warning Message


If no log file is selected, the following warning message appears on the screen,

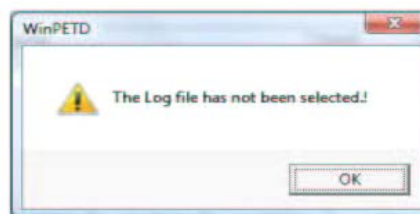

If the [OK] button is clicked without selecting a destination, the following warning message appears on the screen.



2-3) If a destination confirmation message is displayed, click the [OK] button.

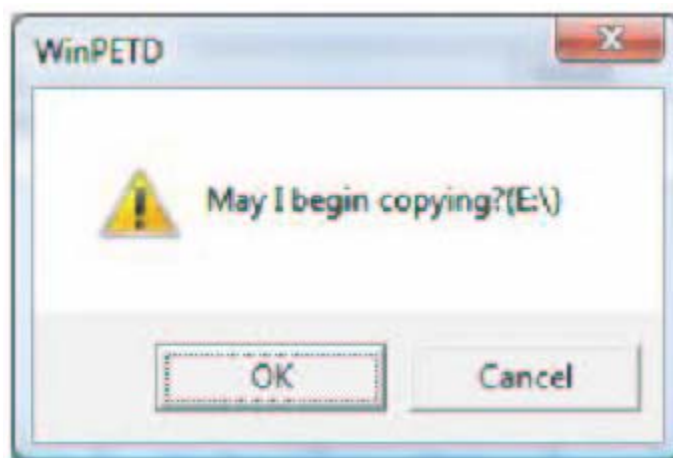


2-4) If the log file is successfully saved to the destination, the following confirmation screen is displayed and click the [OK] button.



2-5) After saving the log files, click the [Close] button to close the Management screen.

### 3.34.5 System Utility Menu

This section explains System Utility screen.

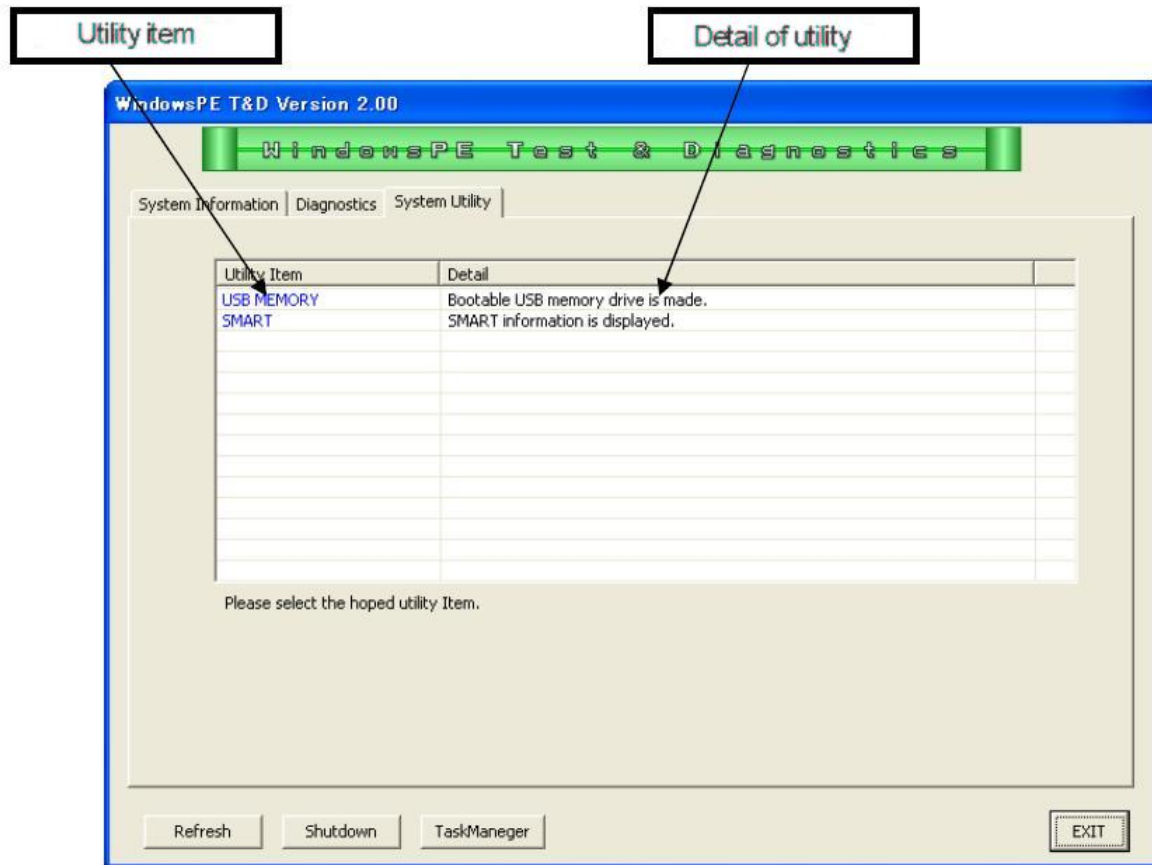


#### 3.34.5.1 Explanation of Each Item

- ▼ Utility Item ... A list of the utilities that this T&D supports
- ▼ Detail ... Explanation of each utility is described.

If you point to the utility which you wish to execute and click it, the utility starts. Utility item  
Detail of utility

### 3.34.5.2 USB Memory Creation Tool

If the system is booted using the USB memory created in 3-5-2, the following screen is displayed.

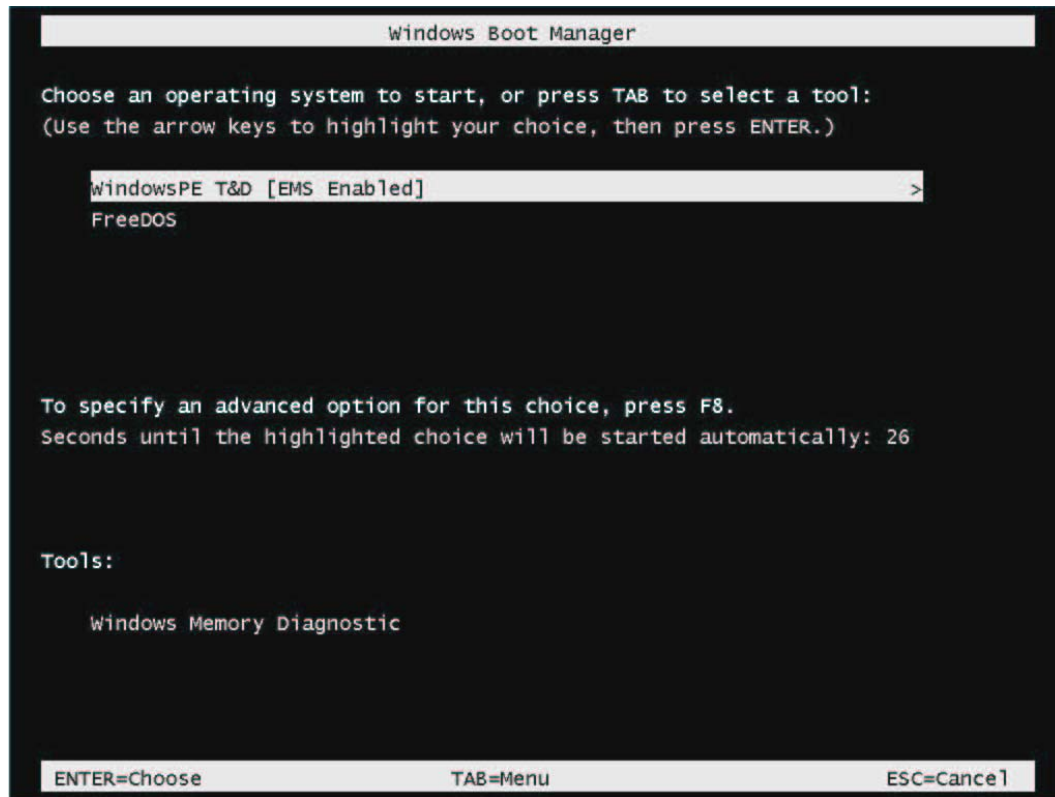

Press the arrow keys to operate on the multi-boot screen.  
Move the cursor to the desired item and press the Enter key.

**[WindowsPE T&D]:** Starts up WindowsPE and then starts WinPE T&D.


**[FreeDOS]** : Displays the following screen if FreeDOS is selected.



Use the arrow keys to operate on the screen. Move the cursor to [FreeDOS for TD] and press the Enter key. If [reboot] is selected, the PC is rebooted.

This utility extracts the contents of TOSHIBA Test & Diagnostic to the specified USB memory to provide the environment which allows you to start the test from the USB memory and conduct it. If the utility is executed, the following screen is displayed.

**Note:** If this tool is run, the content of the USB memory is cleared. Use the USB memory with 512MB or more.

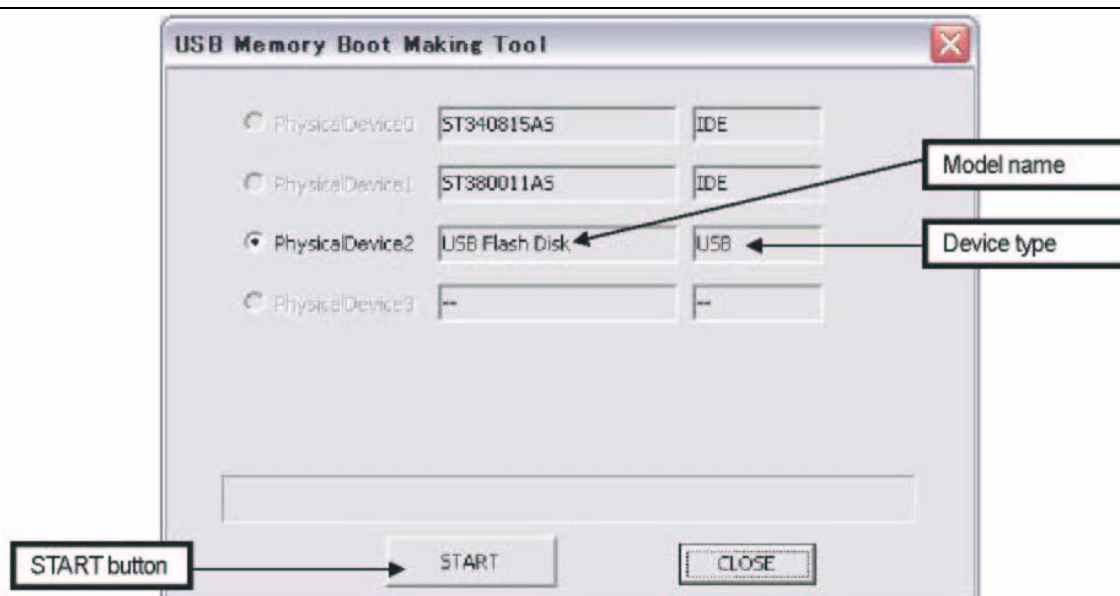

### Operational Procedure

- 1) The device type checks the USB device.
- 2) Click the [START] button.
- 3) Creation of the USB memory for TOSHIBA Test & Diagnostic is started.


Error Message	Description
There is no WinPE folder.	The folder to be copied does not exist. Reading from the CD may have failed.
DISKPART failed.!	The DISKPART command failed. Check whether the USB memory is normal.
It failed in the copy!	The file copy failed. Check whether the USB memory is normal

### 3.34.5.3 Display of SMART Information

This utility lists the SMART information on the screen. Attribute and Worst values for each ID are also displayed.

Since some HDDs do not have ID, these information are not displayed in that case.

The following screen displays the SMART information of the first HDD.

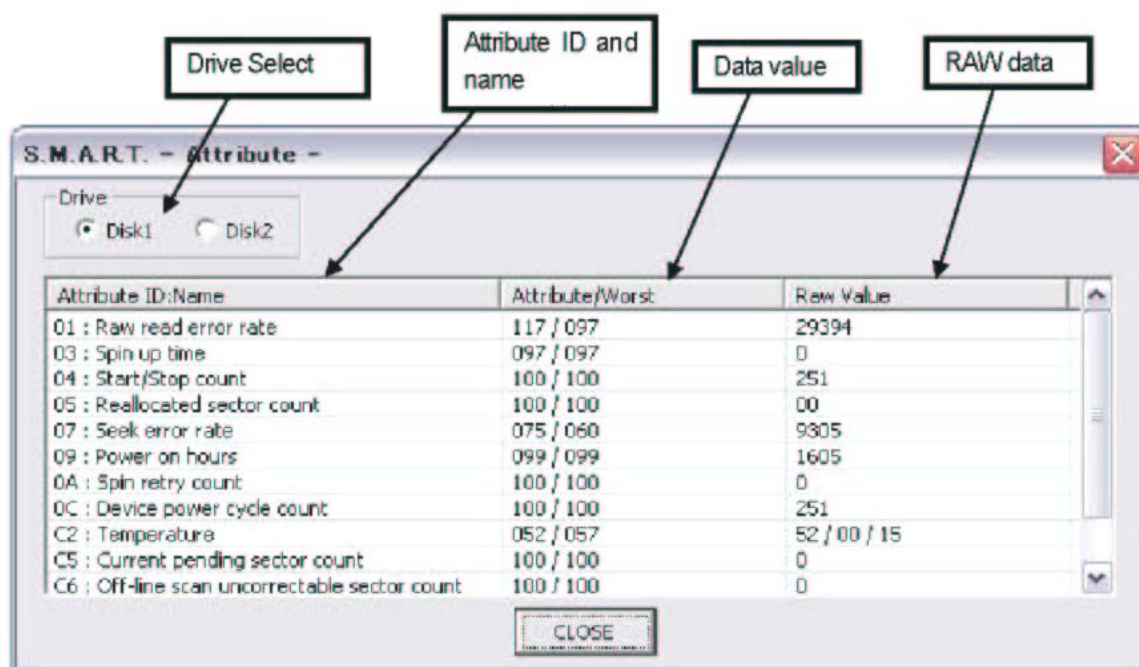

When two HDDs are connected and the current checkbox is changed to Disk2, the SMART information of the second HDD is displayed.

- ▼ [Drive Select] ... Checkbox for selecting a HDD
- ▼ Attribute ID and Name ... Displays Attribute ID and the content of the Attribute IDs.
- ▼ Data value ... Displays Attribute value and Worst value.
- ▼ RAW data ... Displays raw data.

**Note:** The SMART information is only for reference.

Each ID and its details are listed in the following table.

<b>ID</b>	<b>Attribute Name</b>	<b>Description</b>
1h	Raw read error rate	Read error rate Rate of errors which occur when the HDD reads data.
2h	Throughput performance	Throuput performance
3h	Spin up time	Start-up time of spindle mortar Averate time from turning the power on to starting spinning
4h	Start/Stop count	Number of stops of the spindle morotr after the factory setting
5h	Reallocated sector count	Number of defective sectors for which alternative processing was performed.
7h	Seek error rate	Rate of seek errors
8h	Seek time Performance	Processing time of sequential seek and random seek
9h	Power on hours	Power-on hour after the factory setting
Ah	Spin retry count	Number of retires of spinning up within the prescribed rate
Ch	Device power cycle count	Number of power-on/power-off operations of HDD
C1h	Load/Unload cycle count	Number of head loads
C2h	Temperature	Past maximum temperature, past minimum temperature, current temperature
C4h	Reallocation event count	Number of alternative sector events
C5h	Current pending sector count	Number of currently defective sectors
C6h	Off-line scan uncorrectable sector count	Number of sectors that could not be corrected during Off-line scan

C7h	UltraDMA CRC error count	Number of CRC errors occurred during data transference in the UltraDMA mode
DFh	Load/Unload retry count	Number of reloads of more than a certain amount of times



### 3.34.6 Details of Each Test Function

#### 3.34.6.1 HDD Physical Test

##### 1) Test content

This test handles the HDDs to the PC as physical unit and conducts read test to the target HDD to check whether it works or not.

Up to first four HDDs connected to the PC can be the target of the test.


##### ■ Simple Mode

This test mode performs a read test to all the data indicated by 1000 addresses picked out between the first address and the last address.

##### ■ Detail Mode

This test mode performs a read test to all the data indicated by 5000 addresses picked out between the first address and the last address.

##### 2) Test screen

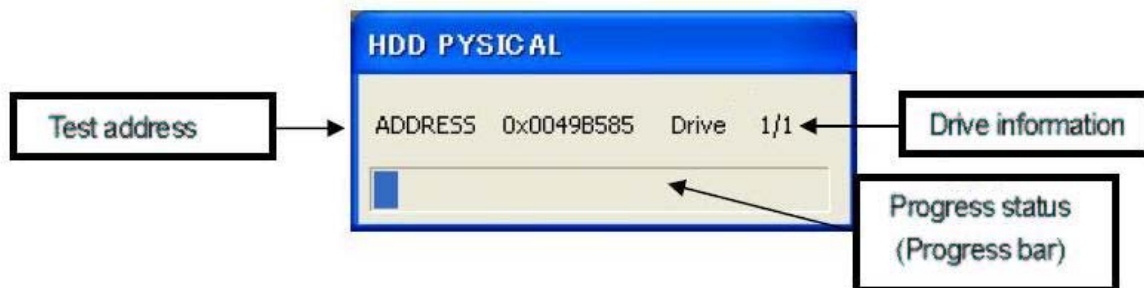

▼ Test address: Displays the address (LBA) of the test currently performed.

▼ Drive information: Displays the drive number of the test currently performed.

▼ Progress status: Displays the progress status of the test with the progress bar.

##### 3) Result judgment

This test regards as 1PASS when every read test of all of the HDDs connected to the PC is successful.

If an error occurs even in an HDD, the error count is incremented.

##### ■ In the case of PASS

The Pass Count on the test screen is zoomed in and (OK) is displayed in the Result field on the WinPE T&D screen.

**■ In the case of FAIL**

The Error Count on the test screen is zoomed in and (NG) is displayed in the Result field on the WinPE T&D screen.

The detail of the error is printed to the log of WinPE T&D. Move details are as shown below.

Message	Explanation	Remarks
Read Hdd Create File Error.Address=XX	Failed in opening of HDD driver. XX is LAB value.	The HDD driver may not be normal or installed.
Read Hdd Set File Pointer Error.Address=XX	Failed in the HDD file pointer setting command. XX is LAB value.	It indicates that a read error occurred with the specified value
Read Hdd Command Error.Address=XX	Failed in the HDD read command. XX is LAB value.	
Read Hdd Check Size Error Address=XX	The size read by the HDD read command does not correspond to the specified size. XX is LAB value.	

### 3.34.6.2 HDD Logical Test

#### 1) Test content

This test first verifies that the files which exist on the drive recognized as the built-in HDD are read normally.

During the verification operation, the status update is performed sequentially (display of file names in File Name) and when the verification reaches the last file, it is terminated.

#### ■ Simple Mode


This test mode performs the read test to the first 400 files on the drive.

#### ■ Detail Mode

This test mode performs the read test to first 2000 files on the drive.

#### 2) Test screen

▼ File Name: Displays the name of the file being verified with full path.

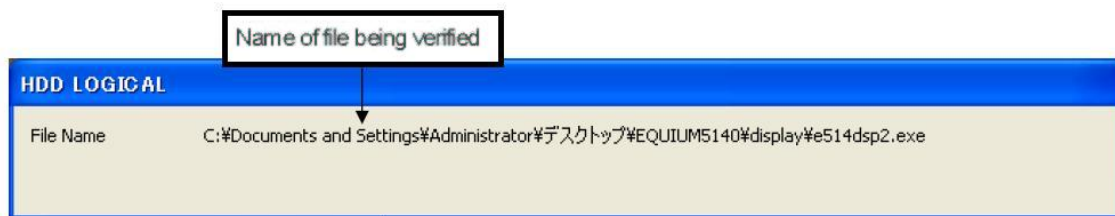

#### 3) Result judgment

Both of PASS and FAIL are not displayed anywhere on the HDDL screen.

The result is reflected to the log on the WinPE T&D screen.

#### ■ In the case of PASS

The result is displayed as (OK) in the Result field on the WinPE T&D screen.

#### ■ In the case of FAIL

The result is displayed as (NG) in the Result field on the WinPE T&D screen.

The file name of the file in which an error occurred is printed to the log of WinPE T&D. (The following example indicates the case where an error was found in file A.)

Name of file being verified

```
[HDDL]
ERROR0000=(2008/09/10, 12:00:00) C:\file-A
```

### 3.34.6.3 Memory Test

#### 1) Test content

This test reserves free memory area in the main memory and performs Write, Read and Compare operation to the area to verify data validity. A test using burst transfer is also performed.


#### ■ Simple Mode

This test mode only executes Address Test and Stack High/Low test.

#### ■ Detail Mode

This test mode also executes Address Test and Stack High/Low test as well as Bust Transfer test.

#### 2) Test screen

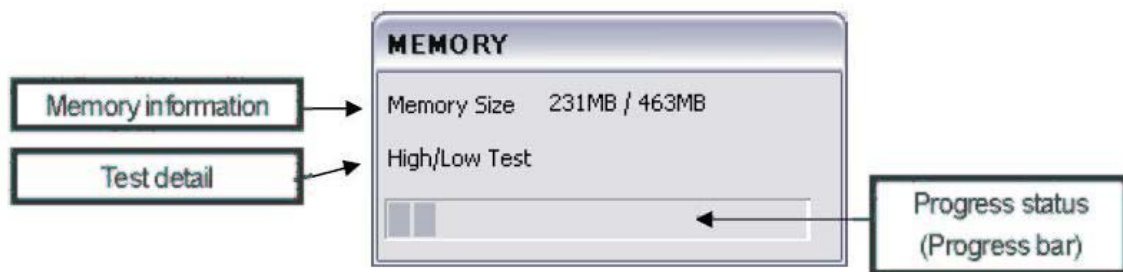

- ▼ Memory information: Displays the memory capacity reserved for the test and the total free memory
- ▼ Test detail: Displays the detail of the test being executed in the order of Address Test, Stack Hight/Low Test and Burst Transfer Test.
- ▼ Progress status: Displays the progress status of the test with the progress bar.

### 3) Result judgment

■In the case of PASS

The PASS Count on the test screen is zoomed in and (OK) is displayed in the Result field on the WinPE T&D screen.

■In the case of FAIL

The PASS Count on the test screen is zoomed in and (NG) is displayed in the Result field on the WinPE T&D screen.

The detail of the error is printed to the log of WinPE T&D. More details are as shown below.

Message	Explanation	Remarks
Memory Compar Error ( Address Test)	An error occurred during Address Test.	
Memory Compar Error ( Stack High/Low Test )	An error occurred during Stack High/Low Test	
Memory Compar Error ( Burst Transfer Test )	An error occurred during Burst Transfer Test.	

### 3.34.6.4 USB Test

#### 1) Test content

This test accesses a file on the disk in the USB device (USB Flash Memory) to verify the file validity.

Create a file with the specified size in the USB device and delete the file after creating it.

#### ■ Simple Mode

This test mode creates a 4 MB file (Write), reads the file and compares it with the original file.

#### ■ Detail Mode

This test mode creates a 12 MB file (Write), reads the file and compares it with the original file.

In the case of the following drive configuration, this test is performed only to the F drive.

Name	Disk Type	Drive Type
3.5 –inch FD (A :)	3.5-inch floppy disk	FDD
Local disk (C :)	Local disk	HDD
DVD drive (D :)	CD drive	CD
Local disk (E :)	Local disk	HDD
Removal disk (F :)	Removal disk	USB
SD storage device (G :)	Removal disk	SD

#### 2) Test screen



▼ Test detail: The drive under test execution is displayed..

▼ Progress status: Displays the progress status of the test with the progress bar.

3) Result judgment

This test is regarded as 1PASS when every access to the files in all of the devices connected to the PC is successful.

If an error occurs even in a device, the error count is incremented.

■ In the case of PASS

The PASS Count on the test screen is zoomed in and (OK) is displayed in the Result field on the WinPE T&D screen.

■ In the case of FAIL

The Error Count on the test screen is zoomed in and (NG) is displayed in the Result field on the WinPE T&D screen.

The detail of the error is printed to the log of WinPE T&D. More details are as shown below.

Message	Explanation	Remarks
File Access Error.xx:	Failed in the file access. xx indicates drive name.	
Space size Error. Code (xx :)	There is no sufficient free space for thefile size. xx indicates drive name.	

### 3.34.6.5 ODD Test

#### 1) Test content

This test reads the test data in the CD inserted on the CD drive (External CD driver is also possible) to verify the data integrity. During the verification operation, update of the read address is performed (displayed on the right side of the Addressing Data) and when the verification reaches the end of the data, it is terminated.


#### ■ Simple Mode

This test mode reads 64MB data and compares it with the original data.

#### Detail Mode

This test mode reads 192MB data and compares it with the original data.

#### 2) Test screen

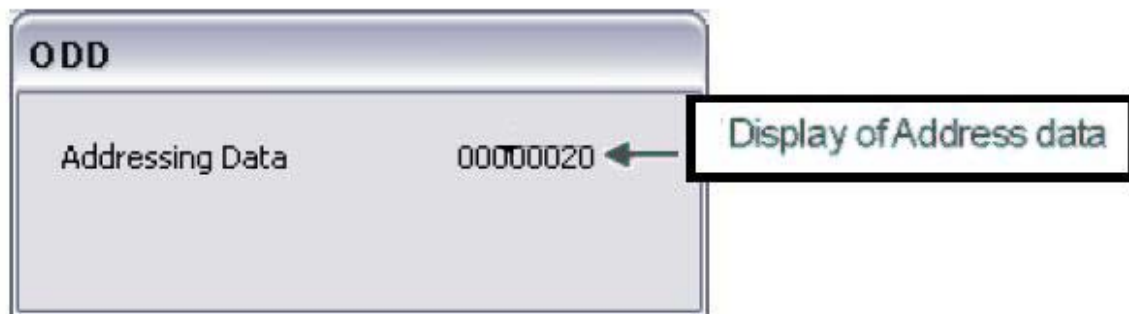

#### ▼ Addressing Data display: Displays the memory address of the test data.

The test data is a collection of data blocks separated by 32K bytes and the display ranges from the data address (00000001) to the Simple test mode (000007FF) or the Detail test mode (000017FF) is the address of a data block

#### 3) Result judgment

Both of PASS and FAIL are not displayed anywhere on the ODD screen..  
The result is reflected to the log on the WinPE T&D screen.



■ In the case of PASS

The PASS Count on the test screen is zoomed in and (OK) is displayed in the Result field on the WinPE T&D screen.

■ In the case of FAIL

The Error Count on the test screen is zoomed in and (NG) is displayed in the Result field on the WinPE T&D screen.

The Addressing data of the data in which an error occurred is printed to the log of WinPE T&D. (When an error occurs at 000007FF )

**[ODD]**

**ERROR0000=(2008/09/10, 12:00:00)000007FF**

### 3.34.6.6 WIRED LAN Test

#### 1) Test content

This test checks that normal communication can be performed with the built-in LAN card. To execute the test, it is necessary that Mac address for the LAN card should have been set and IP address should have been given to the machine.

##### ■ Simple Mode

transmit 32 packet sizes data via the LAN line and confirm that a response can be received normally.

##### ■ Detail Mode

transmit 198 packet sizes data via the LAN line and confirm that a response can be received normally.

#### 2) Test Screen



- ▼ LAN Card information: Displays the name of LAN card, MAC address and IP address.
- ▼ Progress status: Displays the progress status of the test with the progress bar.

#### 3) Result Decision

##### ■ In the case of PASS

The PASS Count display on the test screen is zoomed in and (OK) is displayed in the Result field on the WinPE T&D screen.

■ In the case of FAIL

The Error Count on the test screen is zoomed in and (NG) is displayed in the Result field on the WinPE T&D screen.

The detail of the error is printed to the log of WinPE T&D. More details are as shown below.

Message	Explanation	Remarks
An IP address does not understand one.	IP address cannot be obtained.	This error occurs when IP is not assigned or the test is conducted with a LAN card.
WSAStartup failed: xx	In-use API error xx indicates error code.	This is a message caused by an error of Windows Socket API used in the test.
failed to set recv timeout: xx	In-use API error xx indicates error code.	
failed to set send timeout: xx	In-use API error xx indicates error code.	
Invalid in-address: xx	In-use API error xx indicates IP address	
send to failed: xx	In-use API error xx indicates error code.	
Wrote xx bytes	Communication data size unmatched xx indicates reception size	
recvfrom failed: xx	In-use API error xx indicates error code.	
timed out.	Time out occurred.	

### 3.34.6.7 CPU Test

#### 1) Test content

This test performs arithmetic operation test to the CPU to verify the CPU operation. The test processes ALU and FPU operations and allows you to check that the results are correct.

#### ■ Simple Mode / Detail Mode

Conduct the same test in both Simple mode and Detail mode.

The test content is to process the ALU and FPU operations and check that the results are correct.

#### 2) Test screen



- ▼ Test detail: The test details under execution are displayed. It displays in order of ALU TEST and FPU TEST.
- ▼ Progress status: Displays the progress status of the test with the progress bar.

#### 3) Result judgment

Check whether the calculation result is the same as expected one.

#### ■ In the case of PASS

The PASS Count display on the test screen is zoomed in and (OK) is displayed in the Result field on the WinPE T&D screen.

#### ■ In the case of FAIL

The Error Count on the test screen is zoomed in and (NG) is displayed in the Result field on the WinPE T&D screen.

The detail of the error is printed to the log of WinPE T&D. More details are as shown below.

Message	Explanation	Remarks
The ALU test made an error.	An error occurred during processing of ALU.	
The FPU test made an error.	An error occurred during processing of FPU.	

### 3.34.6.8 VIDEO Test

#### 1) Test content


This test displays red, green, blue, white and black colors, circles, line gradation, ASCII characters and H pattern full screen.

##### ■ Simple Mode

This test mode displays red, green, blue, white and black colors, circles, line gradation, ASCII characters and H pattern full screen. ■ Detail Mode

This test mode performs display of test items in the Simple mode as well as random drawing of circles, squares and lines.

#### 2) Test screen

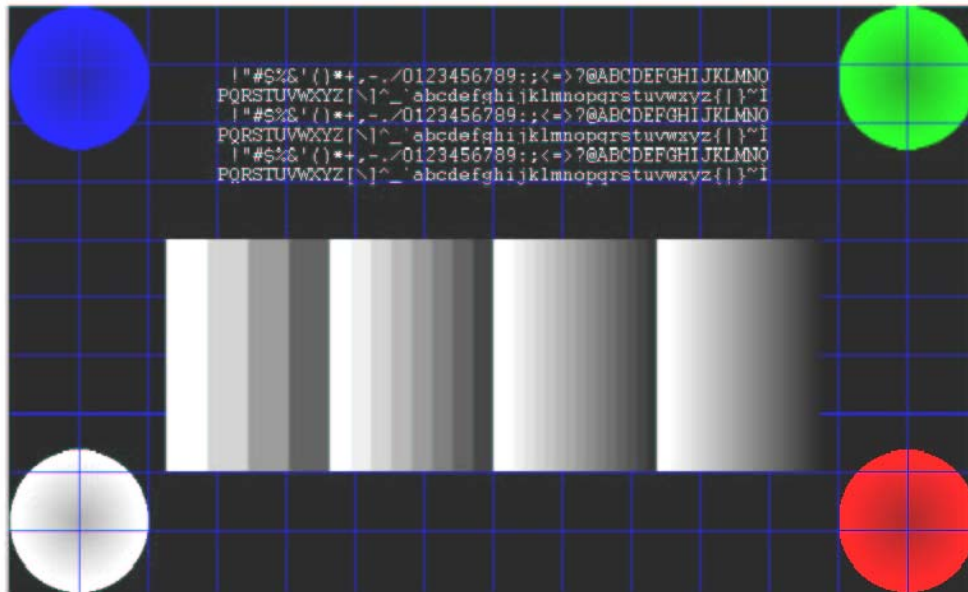

Example of a test screen

#### 3) Result judgment

The operator judges PASS or FAILE by visual check. However, unless program error occurs, OK is displayed in the Result field on the WinPE T&D screen.

##### ■ In the case of PASS

The PASS Count display on the test screen is zoomed in and (OK) is displayed in the Result field on the WinPE T&D screen.

##### ■ In the case of FAIL

This test only performs gradation display by visual check and does not execute error judgment.

### 3.34.6.9 FDD Test

#### 1) Test content

This test accesses a file on a floppy disk and verifies that the access can be made correctly. Create a file with the specified size on a floppy disk and delete the file after creating it. Perform the test after inserting a floppy disk to the drive.


#### ■ Simple Mode

This test mode creates a 128 KB file (Write), reads the file and compares it with the original file.

#### ■ Detail Mode

This test mode creates a 384 KB file (Write), reads the file and compares it with the original file.

#### 2) Test screen

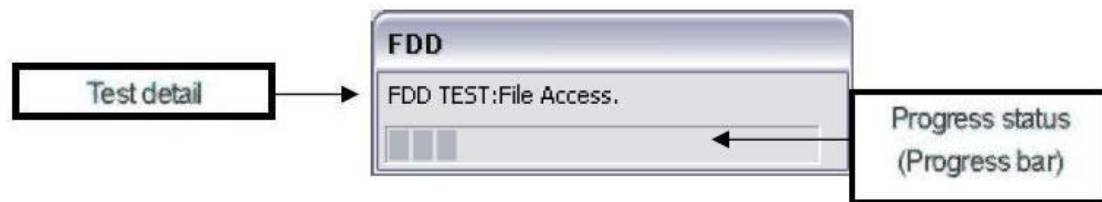

▼ Test detail: The drive under test execution is displayed..

▼ Progress status: Displays the progress status of the test with the progress bar.

#### 3) Result judgment

#### ■ In the case of PASS

The PASS Count display on the test screen is zoomed in and (OK) is displayed in the Result field on the WinPE T&D screen

#### ■ In the case of FAIL

The Error Count on the test screen is zoomed in and (NG) is displayed in the Result field on the WinPE T&D screen.

The detail of the error is printed to the log of WinPE T&D. More details are as shown below.

Message	Explanation	Remarks
Space Size Error. Code(xx)	There is no sufficient free space for the file with the specified size. xx indicates error code.	This message also appears when no floppy disk is in the floppy disk drive.
Open File Error. Code(xx)	Failed in opening the file. zx indicates file code.	
Write File Error. Code(xx).	Failed in writing to the file. zx indicates file code	

*Note: The test causes error if the floppy disk is write-protected. Make sure that the floppy disk is not write-protected.*



### 3.34.6.10 IEEE1394 Test

#### 1) Test content

This test accesses a file in the IEEE1394 device and verifies that the access can be made correctly.

Create a file with the specified size in the IEEE1394 device and delete the file after creating it


#### ■ Simple Mode

This test mode creates a 4 MB file (Write), reads the file and compares it with the original file.

#### ■ Detail Mode

This test mode creates a 12 MB file (Write), reads the file and compares it with the original file.

#### 2) Test screen

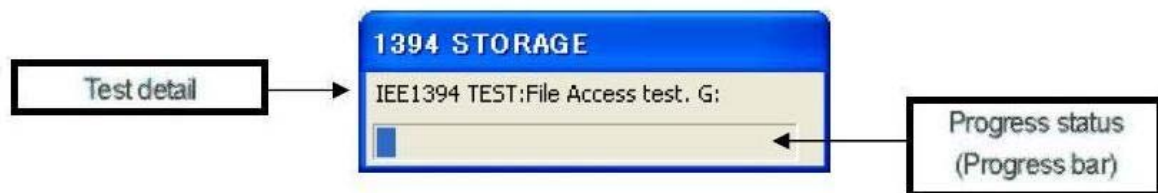

▼ Test detail: The drive under test execution is displayed..

▼ Progress status: Displays the progress status of the test with the progress bar.

#### 3) Result judgment

This test is regarded as 1PASS when every access to the files in all of the devices connected to the PC is successful.

If an error occurs even in a device, the error count is incremented.

#### ■ In the case of PASS

The PASS Count display on the test screen is zoomed in and (OK) is displayed in the Result field on the WinPE T&D screen.

#### ■ In the case of FAIL

The Error Count on the test screen is zoomed in and (NG) is displayed in the Result field on

the WinPE T&D screen.

The detail of the error is printed to the log of WinPE T&D. More details are as shown below.

Message	Explanation	Remarks
File Access Error.xx:	Failed the file access xx indicates drive name.	
Space size Error.Code(xx:)	There is no sufficient free space for the file with the specified size. xx indicates drive name.	

### 3.34.6.11 TIMER Test

#### 1) Test content


Execute the test after adjusting the internal time and verify the accuracy of the timer after it passes the year 2000.

#### ■ Simple Mode / Detail Mode

Simple Mode tests at intervals of order 5 seconds. Detail Mode tests at intervals of order 10 seconds.



The test content is to verify that there is no difference between the calculated estimated time and really taken time.

#### 2) Test screen


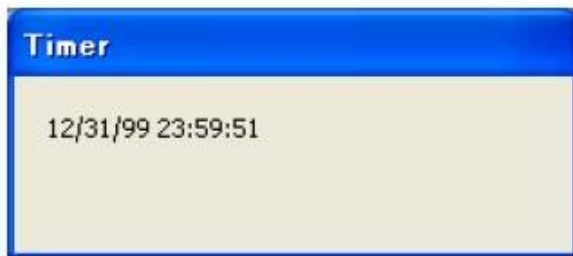


A clock will be set 10 seconds ago in 2000, and inspection will be started.

The time is displayed every one second on the screen.

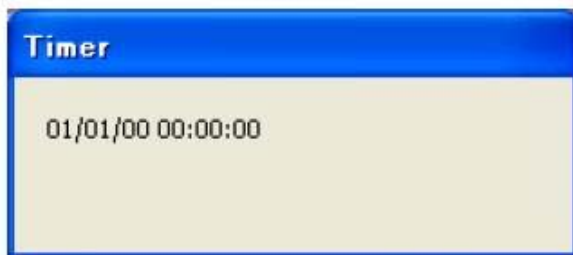

All the displays are updated at once as the time reaches the year 2000.

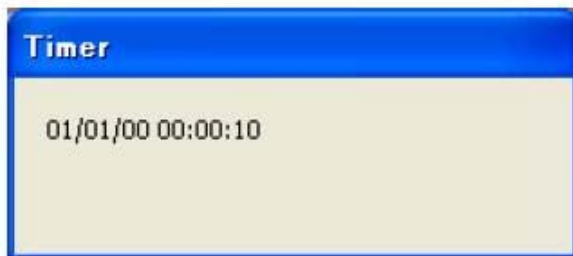

Moreover, 10 seconds later, the validity of the setting is checked Internally and the result is judged.

3) Result judgment

Both of PASS and FAIL are not displayed anywhere on the TIMER screen.

The result is reflected to the log on the WinPE T&D screen.

■ In the case of PASS

The PASS Count display on the test screen is zoomed in and (OK) is displayed in the Result field on the WinPE T&D screen.

■ In the case of FAIL

The Error Count on the test screen is zoomed in and (NG) is displayed in the Result field on the WinPE T&D screen.

The information of the time at which an error occurred is printed to the log of WinPE T&D. More details are as shown below.

(The following example indicates that a time difference of 2 seconds has occurred in the timer setting.)

**[TIMER]**

**ERROR0000=(2008/09/10, 13:11:20) (TIME-1)00:00:05 (TIME-2)00:00:07**

### 3.34.6.12 KEYBOARD Test


#### 1) Test content

The keyboard of PC is a test which judges whether it operates normally.


#### ■ Simple Mode / Detail Mode

The same operation is carried out whichever it chooses.

#### 2) Test screen

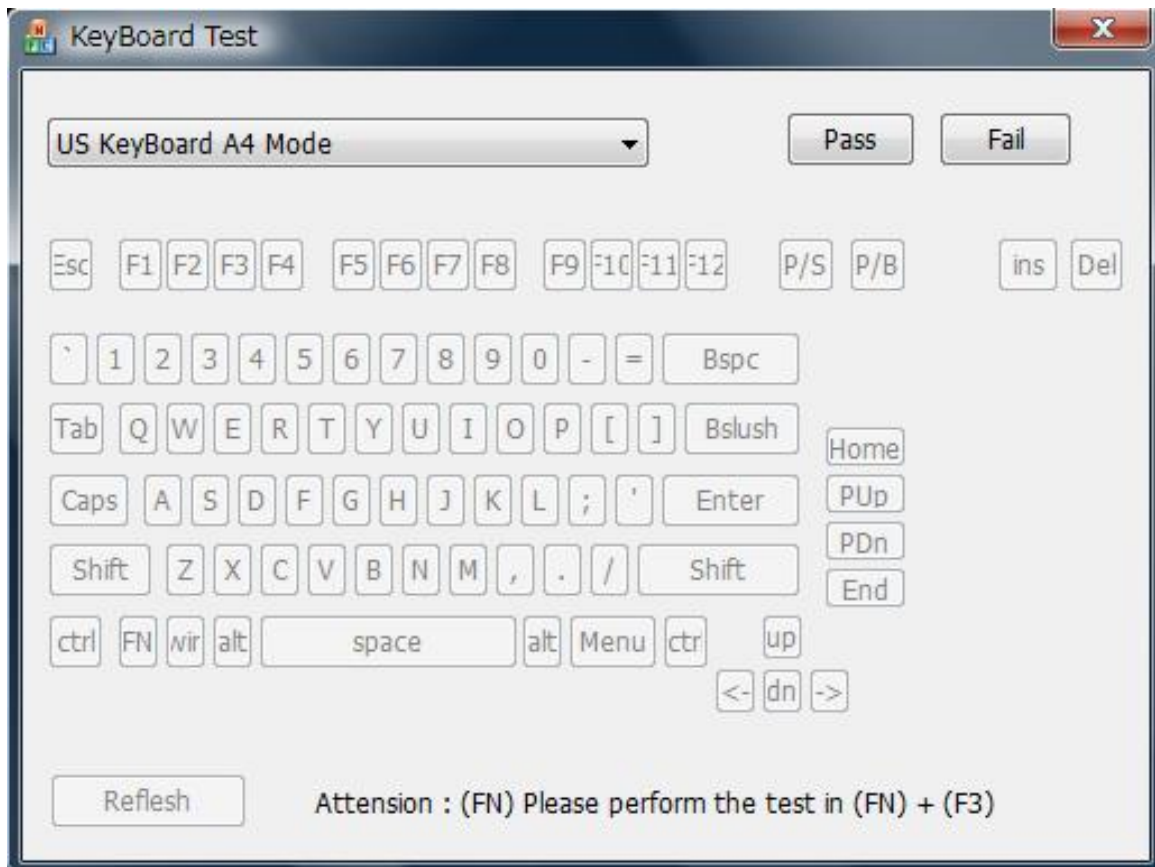


The arrangement of a keyboard is displayed on the display of PC.

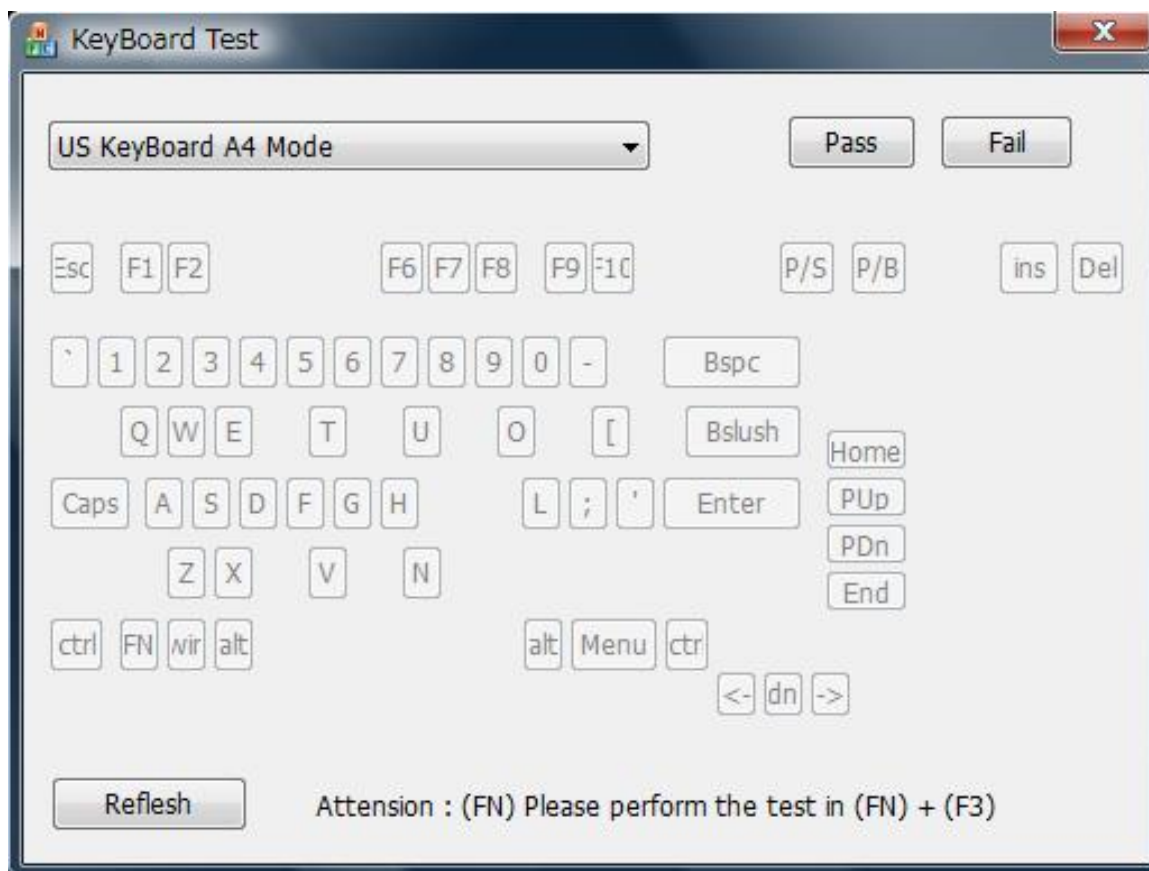

- 1) If the press of a key is recognized correctly, the object key on a display will be eliminated.
- 2) When redoing a keyboard test, the "Refresh" button arranged at the screen lower left is pressed. Next, it returns to the state immediately after starting.

*Note: The check of the "FN" key should press "FN" and "F3" simultaneously. It does not react, even if it presses only the "FN" key.*

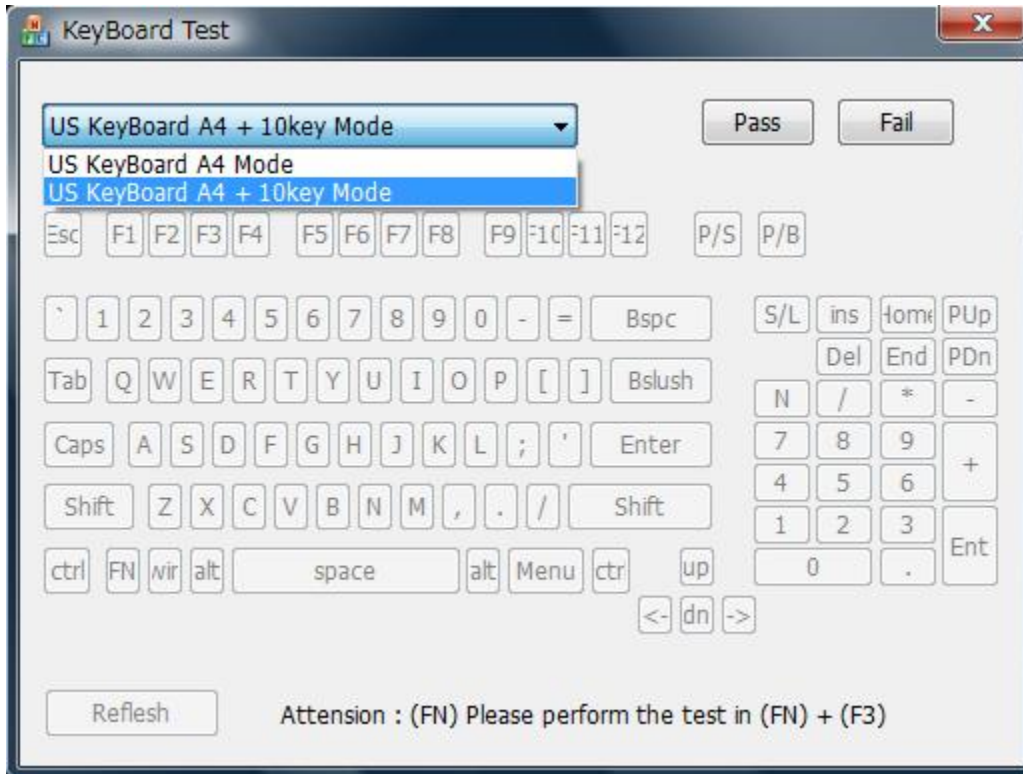


The keyboard which can be tested is two kinds, "US Keyboard A4 Mode" and "US Keyboard A4 Mode+10Key Mode."

When you test a keyboard with a ten key, choose "US Keyboard A4 Mode+10Key Mode" by the combo box of the keyboard layout upper left stage.

### 3) Result judgment

It is normal, if a keyboard test is done and all the keyboard layouts are eliminated. Press the "Pass" button with the judgment button at the upper right of a keyboard layout. Press the "Fail" button, when abnormal.

In addition, a warning message will be displayed, if the "Pass" key is pressed before all the keys are pressed. The thing in which the operator made the mistake is told.

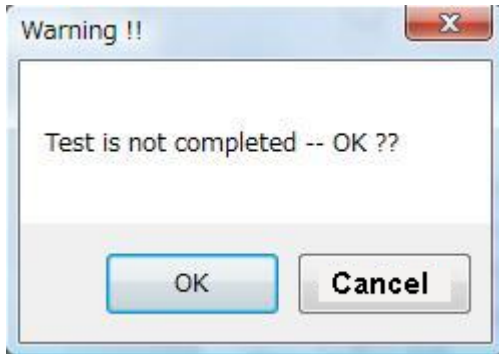

**OK:** Although the keyboard test is not ended, it is considered as success.

**Cancel:** It returns to a keyboard test screen.

If all the keys are eliminated, it becomes impossible in addition, to choose the "Fail" button.

■ In the case of PASS

The PASS Count display on the test screen is zoomed in and (OK) is displayed in the Result field on the WinPE T&D screen.

■ In the case of FAIL

The Error Count on the test screen is zoomed in and (NG) is displayed in the Result field on the WinPE T&D screen.



### 3.34.6.13 Mouse Test


#### 1) Test content

The Mouse of PC is a test which judges whether it operates normally.


#### ■ Simple Mode / Detail Mode

The same operation is carried out whichever it chooses.

#### 2) Test screen

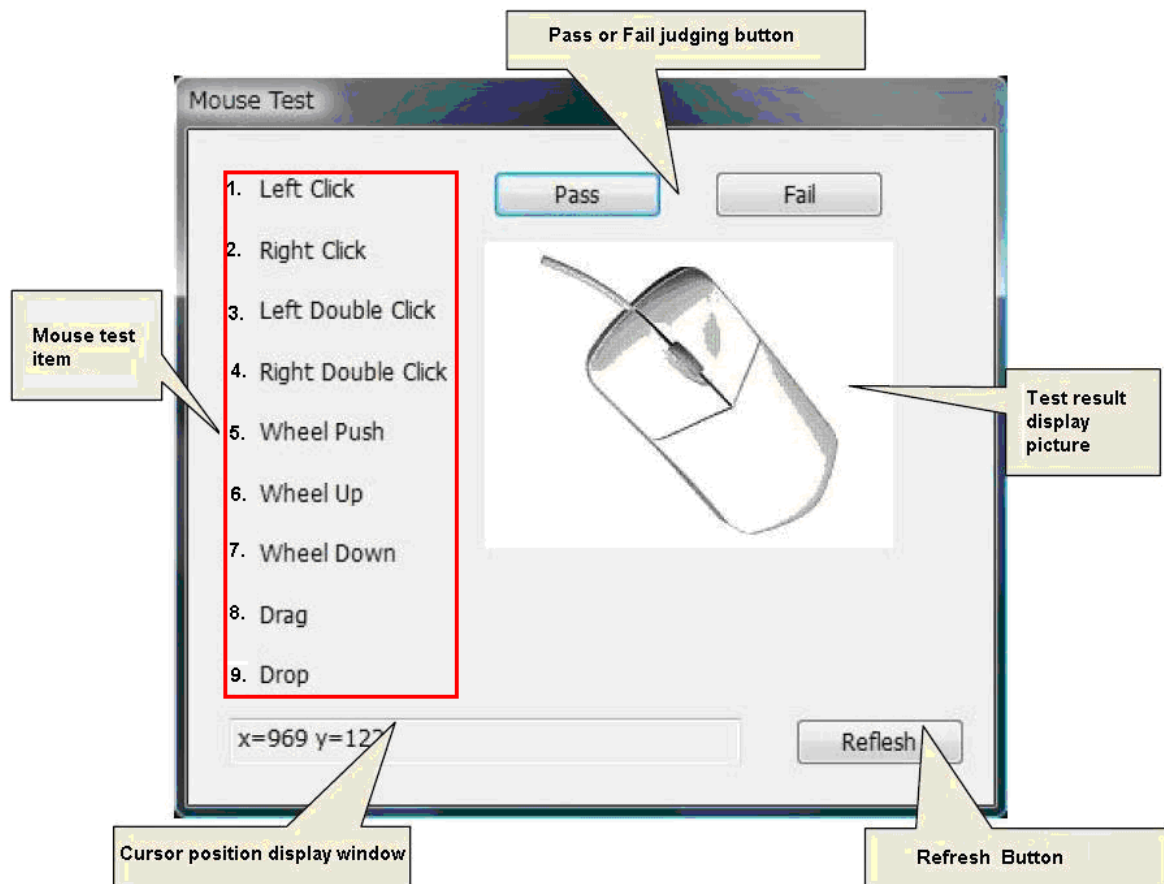

If a mouse test start is carried out, the above-mentioned screen will be displayed.

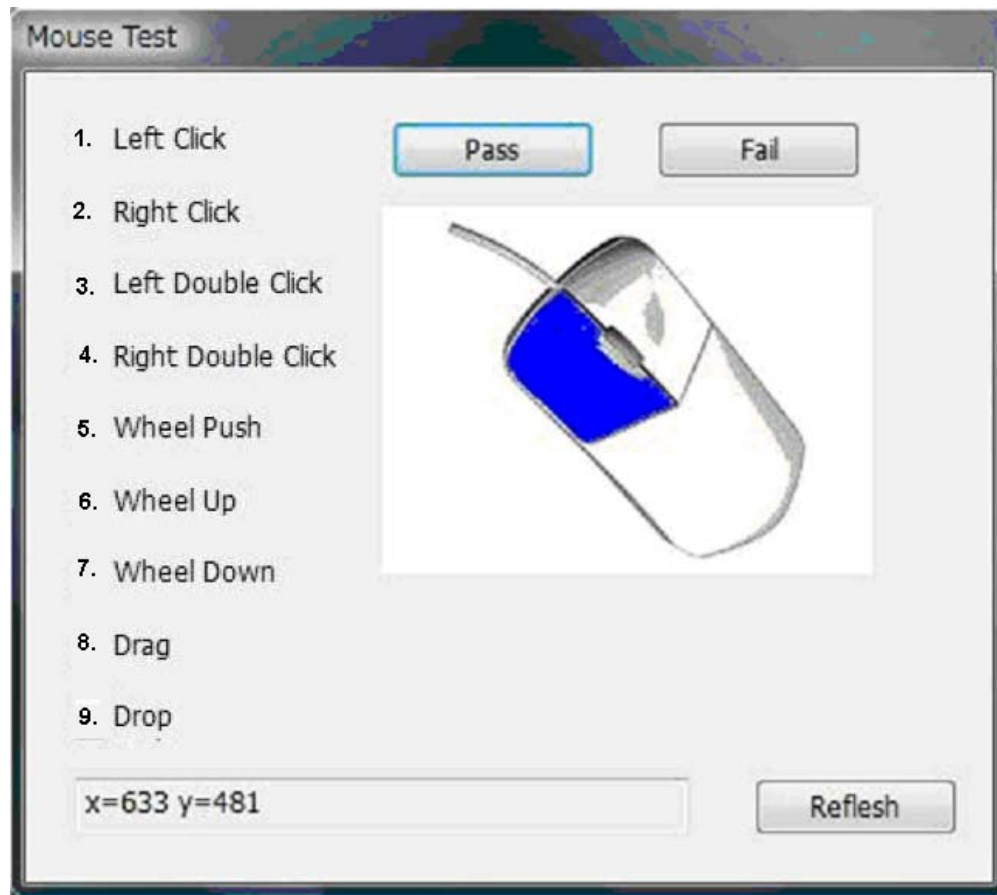


- 1) There is a test item to 1-9 of a mouse test screen. If applicable mouse operation is performed, a test item will disappear. Moreover, it is simultaneously displayed on the corresponding section of a right-hand side mouse illustration by coloring.
- 2) Press the "Refresh" button at the lower left of a screen to redo a mouse test. It returns to the initial screen of a test.
- 3) The cursor position is expressed in the lower part of a screen as X coordinates and Y coordinates.
- 4) Test items other than the cursor position become effective only on this screen.

### 3) Result judgment

When all the test items of a mouse test disappear and it is normal, Please push the "Pass" button of a mouse test screen. Press the "Fail" button, when abnormal.

A warning message is displayed, when the "Pass" button is pressed before the mouse test items 1-9 were all completed. The thing in which the operator made the mistake is told.

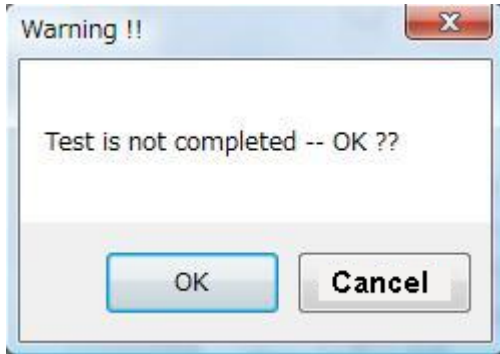

**OK:** Although the keyboard test is not ended, it is considered as success.

**Cancel:** It returns to a keyboard test screen.

When the item to the mouse tests 1-9 is eliminated, it becomes impossible moreover, to choose the "Fail" button.

#### ■ In the case of PASS

The PASS Count display on the test screen is zoomed in and (OK) is displayed in the Result field on the WinPE T&D screen.

#### ■ In the case of FAIL

The Error Count on the test screen is zoomed in and (NG) is displayed in the Result field on the WinPE T&D screen.

### 3.35 DOS T&D

#### 3.35.1 Configuration of Test Equipment

The configuration of test equipment required for executing FreeDOS T&D is as follows:


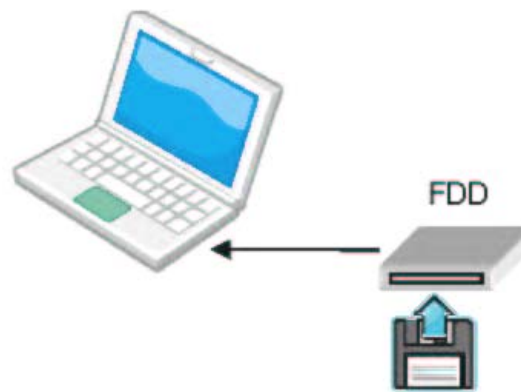


Figure: Test Environment Image

*Note: Start the machine after connecting the FDD. If the FDD is connected to the machine after FreeDOS T&D started, it does not recognize the FDD.*

##### 3.35.1.1 Test device configuration

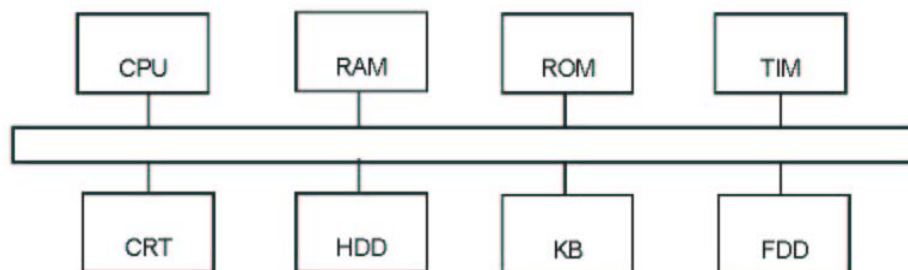

Devices to be tested and Test devices (Abbreviated names)

CPU : Central Processing Unit

RAM : Random access memory

ROM : Read only memory


TIM : Real Timer、Backup memory(128bytes)

CRT : Display unit

HDD : Hard disk drive  
KB : Keyboard  
FDD : Floppy disk drive

### 3.35.1.2 Test program configuration

This test program is configured as below:

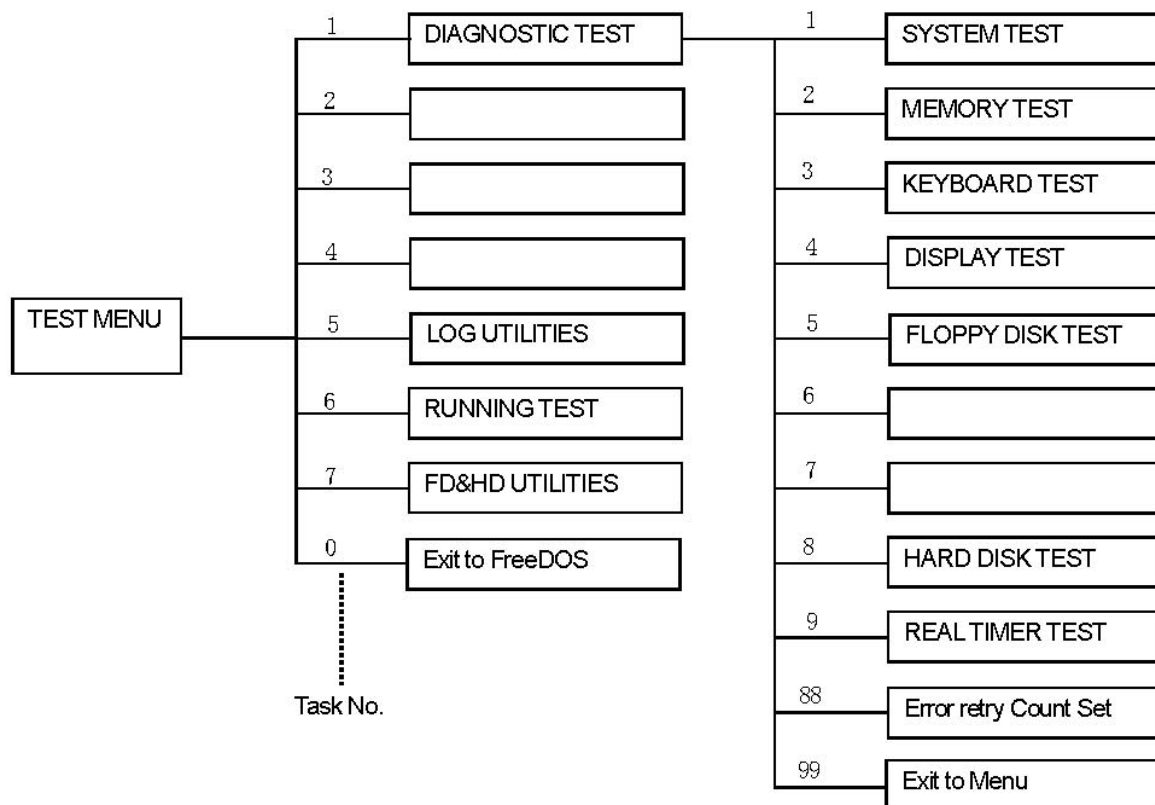

### 3.35.1.3 Test program list

The following table lists test items included in each test.


Test name	Test No.	Sub No.	Test item
SYSTEM	1	01	DMI read
MEMORY	2	01 02 03 04	Conventional memory Protected mode Cache memory(on/off) Stress test
KEYBOARD	3	01	Pressed key code display
DISPLAY	4	01 02 03 04 05	VRAM read/write for VGA Gradation for VGA Gradation for LCD Gradation & Mode test for VGA All dot on / off for LCD
FDD	5	01 02 03 04 05	Sequential read Sequential read/write Random address/data Write specified address Read specified address
---	6	---	---
---	7	---	---
HDD	8	01 02 03 04 05 06 07 08 09	Sequential read Address uniqueness Random address/data Cross talk & peak shift Partial Read Write specified address Read specified address Sequential write W-R-C specified address
REAL TIMER	9	01 02 03	Real time Backup memory Real time carry

### 3.35.2 How to start T&D

#### 3.35.2.1 Diagnostics main menu

Set the TOSHIBA Test & Diagnostic CD to the ODD drive and turn the power of the system on.

If you select FreedOS on the BOOT selection screen then the test program is loaded and the following test selection screen is displayed. (Refer to section 4.2.2 for details.)

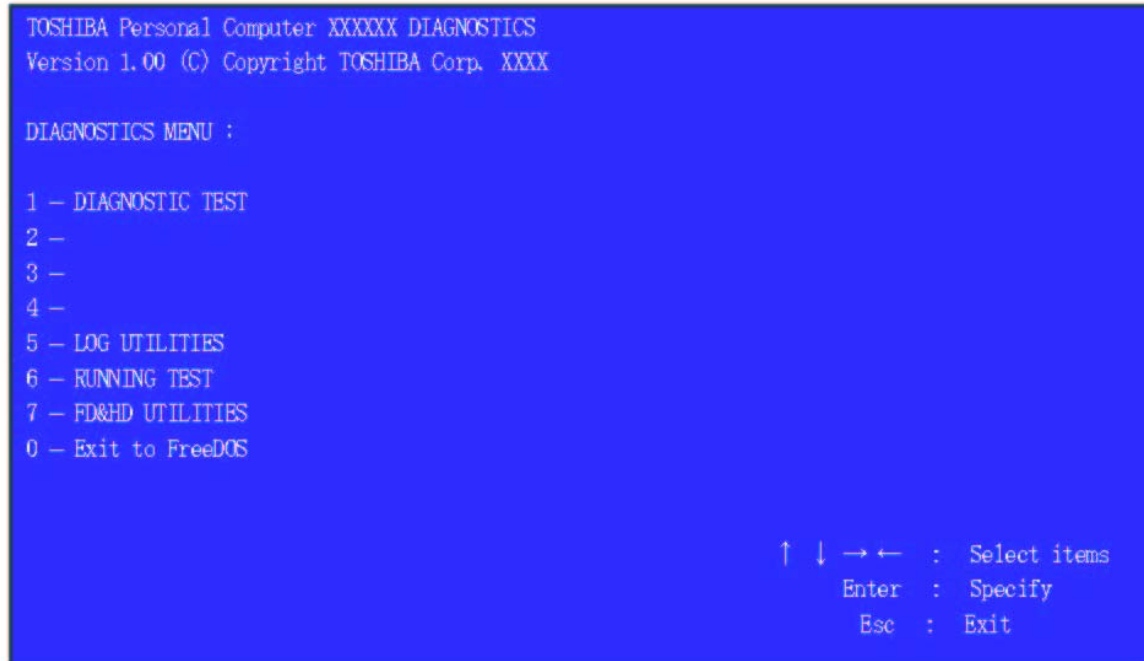

```
TOSHIBA Personal Computer XXXXXX DIAGNOSTICS
Version 1.00 (C) Copyright TOSHIBA Corp. XXXX

DIAGNOSTICS MENU :

1 - DIAGNOSTIC TEST
2 -
3 -
4 -
5 - LOG UTILITIES
6 - RUNNING TEST
7 - FD&HD UTILITIES
0 - Exit to FreeDOS

                               ↑ ↓ → ← : Select items
                               Enter : Specify
                               Esc  : Exit
```

Use the Up or Down cursor key to select your desired item and press the [Enter] key. If you select [1] on the above screen, the test menu for selecting each test is displayed. In addition, items [5] - [7] indicate the tasks to be supported by this T&D.

**Note:** Pressing the [Esc] key or selecting [0] on the screen terminates this test program and the FreeDOS command prompt appears.

### 3.35.2.2 Diagnostics test menu

If you select [1] in the main menu, the following test screen is displayed.

```

TOSHIBA Personal Computer XXXXXXXX DIAGNOSTICS
Version 1.00 (C) Copyright TOSHIBA Corp. XXXX

DIAGNOSTICS TEST MENU :

  1 - SYSTEM TEST
  2 - MEMORY TEST
  3 - KEYBOARD TEST
  4 - DISPLAY TEST
  5 - FLOPPY DISK TEST
  6 -
  7 -
  8 - HARD DISK TEST
  9 - REAL TIMER TEST
 88 - ERROR RETRY COUNT SET [ FDD & HDD ]
 99 - EXIT TO DIAGNOSTICS MENU

                                     ↑ ↓ ← → : Select items
                                     Enter : Specify
                                     Esc  : Exit

```

Use the Up or Down cursor key to select your desired test item and press the [Enter] key.

[1] - [9]: Select the subtest menu described in section 4-2-3.

[88] : Specifies the number of error retries. {0 - 255}

[99]: Redisplays the main menu screen in section 4-2-1 (Pressing [Esc] is also considered valid.)

If either test item of [5 - FLOPPY DISK TEST] or [8 - HARD DISK TEST] is executed from the test menu, the following requirements have to be set.

#### 1) FLLPPY DISK TEST

The following message will appear

```

Test Start track (Enter:0/dd:00-79)

```

Select the media mode and start track to be tested, then press Enter.



## 2) HARD DISK TEST


The following message will appear.



Test drive number select (1:HD#1, 2:HD#2, 3:HD#3, 4:HD#4, 0:HDD1-4)

Select the Hard Disk DRIVE to be tested, then press Enter.

[ 1 ] : Drive 1  
[ 2 ] : Drive 2  
[ 3 ] : Drive 3  
[ 4 ] : Drive 4  
[ 0 ] : Drives 1 to 4



Data compare error dump (1:no, 2:yes) ?

This message is used to select the error dump operation when a data compare error is detected. Select 1 or 2.

[1]: The dumped data is not displayed on the screen even if a data compare error occurs.(Only pressing the [Enter] key is also considered valid.)

[2]: The dumped data is displayed on the screen when a data compare error occurs.



Detail status display (1:no, 2:yes) ?

This message is used to select whether or not the HDD status is displayed on the screen. The HDC status is described in section 3.20. Select 1 or 2.

[1]: The detail status is not displayed. (Only pressing the [Enter] key is also considered valid.)

[2]: The detail status is displayed.

### 3.35.2.3 Sub test menu

If you select any test item from “DIAGNOSTICS TEST MENU”, the following sub menu is displayed.

TEST NAME		XXXXXXXX	XXXXXXXXX DIAGNOSTIC TEST VX. XX [Ctrl]+[Break] : test end [Ctrl]+[C] : key stop	
SUB TEST	:	XX		
PASS COUNT	:	XXXXX		ERROR COUNT : XXXXX
WRITE DATA	:	XX		READ DATA : XX
ADDRESS	:	XXXXX		STATUS : XXX
Error status name				
SUB-TEST MENU :				
XX	-	XXXXXXXXXXXXX		
		⋮		
99	-	EXIT TO DIAGNOSTICS TEST MENU		
			↑ ↓ → ← : Select items Enter : Specify Esc : Exit	

Use the Up or Down cursor key to select your desired item and press the [Enter] key. When you select any subtest item, you are taken to the test mode described in the detail of each test function in section 4-6.

Pressing the [Esc] key or selecting [99] returns to the test selection screen described in section 3-31-4-2-2T

### 3.35.3 Test Operating Procedure

If you select any test item from the subtest menu and execute it, you are required to set the test mode.

Set the test mode according to the following procedure. Use the Up and Down cursor keys to select an option for TEST LOOP and ERROR SOPT.

Specify the following as the test program execution mode for when the test finishes or an error occurs

#### 1) TEST LOOP

Move the cursor under Yes/No with the Right and Left keys to select either of Yes/No and press [Enter].

Pressing the [Esc] key returns to the subtest selection screen described in section 4.2.3.

A screenshot of a blue rectangular screen with white text. The text reads "TEST LOOP : YES/NO". The "YES" is highlighted with a white cursor bar.

[YES]: When the current test cycle is finished, the pass counter is incremented by 1 and the next test cycle stops.

[NO]: When the current test cycle is finished, the test is terminated and the subtest selection screen is redisplayed.

#### 2) ERROR STOP

A screenshot of a blue rectangular screen with white text. The text reads "ERROR STOP : YES/NO". The "YES" is highlighted with a white cursor bar.

[YES]: When an error occurs, the error status is displayed and the execution stops.(The error status name is displayed in the 8th column.)

At this time, the following operation guide is displayed on the right side of the screen.

[NO]: When an error occurs, the error status is displayed. The error counter is incremented by 1 and you are taken to the next test step.

**[ [ HALT OPERATION ] ]**

**1 : Test end ...The test ended. Select a subtest.**

**2 : Continue ...The next step will be executed.**

**3 : Retry ...The error step will be retried.**

3) Discontinuing a test

If you press the [Ctrl] + [Alt] + [Break] keys during a test, the test is discontinued and the screen returns to the subtest menu described in section 3-31-4.2.3.

### 3.35.4 Error Code Status

If an error occurs during any test, one of the following error codes is displayed.

Device Name	Code	Status
Common	FF	DATA COMPARE ERROR
SYSTEM	01 03 04 05 06 07 08 09 10	ROM - CHECKSUM ERROR ROM - SERIAL ID WRITE ERROR ROM - NOT SUPPORTED PS-SYSTEM ROM - SENSING ERROR(AC-ADAPT) ROM - SENSING ERROR(1st Batt) ROM - SENSING ERROR(2nd Batt) ROM - THORMISTOR ERROR(1) ROM - THORMISTOR ERROR(2) ROM - THORMISTOR ERROR(3)
MEMORY	01 02 DD	RAM - PARITY ERROR RAM - PROTECTED MODE NO CHANGE' RAM - CACHE MEMORY ERROR
KEYBOARD	FE FD F0 F1 F2 F3 F4 F5 F6 F7 F8 F9 FA EF ED	USB - GET DESCR.ERROR (FIRST) USB - SET ADDRESS ERROR HUB - GET DESCR.ERROR(Top 8B) HUB - GET DESCR.ERROR (Whole) HUB - SET CONFIGURATION ERROR HUB - GET DESCR.ERROR(DESCR.) HUB - SET FEATURE ERROR(P ON) HUB - GET STATUS ERROR HUB - SET FEATURE ERROR(RESET) HUB - CLEAR FEATURE ERROR HUB - CLEAR FEATURE1 ERROR HUB - SET FEATURE ERROR(Enab.) HUB - CLEAR FEATURE2 ERROR USB - OVER CURRENT ERROR USB - GET DESCR.ERROR(SECOND)' DISPLAY EE VRAM SIZE NOT SUPPORT
FDD	01  02  03	FDD - BAD COMMAND ERROR  FDD - ADDRESS MARK NOT FOUND  FDD - WRITE PROTECTED

	04	FDD - RECORD NOT FOUND
	08	FDD - DMA OVERRUN ERROR
	09	FDD - DMA BOUNDARY ERROR
	10	FDD - CRC ERROR
	20	FDD - FDC ERROR
	40	FDD - SEEK ERROR
	80	FDD - TIME OUT ERROR
	60	FDD - NOT DRIVE ERROR
	06	FDD - MEDIA REMOVED
	EE	FDD - WRITE BUFFER ERROR
HDD	05	HDD - HDC NOT RESET ERROR
	07	HDD - DRIVE NOT INITIALIZE
	09	HDD - DMA BOUNDARY ERROR
	0B	HDD - BAD TRACK ERROR
	BB	HDD - UNDEFINED ERROR
	08	HDD - OVERRUN ERROR (DRQ ON)
	01	HDD - BAD COMMAND ERROR
	02	HDD - ADDRESS MARK NOT FOUND
	04	HDD - RECORD NOT FOUND ERROR
	10	HDD - ECC ERROR
	20	HDD - HDC ERROR
	40	HDD - SEEK ERROR
	80	HDD - TIME OUT ERROR
	11	HDD - ECC RECOVER ENABLE
	AA	HDD - DRIVE NOT READY
	CC	HDD - WRITE FAULT
	E0	HDD - STATUS ERROR
	0A	HDD - BAD SECTOR
	EE	HDD - ACCESS TIME ERROR
	DA	HDD - NO HDD
	12	HDD - DMA CRC ERROR

### 3.35.5 Task Function

This T&D has three tasks, each of which has the following function.

#### 3.35.5.1 Log Utilities ( Task #5 )

This function logs error information generated while a test is in progress and stores the results in RAM. This function can store data on a floppy disk or USB memory

00003 ERRORS								
CNT	TS-NAME	PASS	STS	ADDR	WD	RD	HSTS	[ ERROR STATUS NAME ]
001	FDD	0001	110	24015	00	00		FDD - CRC ERROR
002	FDD	0002	110	30108	00	00		FDD - CRC ERROR
003	FDD	0003	110	23106	00	00		FDD - CRC ERROR

[[ 1:Next,2:Prev,3:Exit,4:Clear,6:B-Read,7:B-Write,8:C-Read,7:C-Write ]]

The operation guide is displayed at the bottom of the screen and the error status names are displayed on the right side of the screen.

The error information on the screen can be processed respectively with each key of the [1] to [9] keys. In the case of error retry OK, "R" is added before the error status. However, the error count is not incremented.

**6 : B-Read : FD Log Read**

**7 : B-Write : FD Log Write**

**8 : C-Read : USB Flash Memory Log Read**

**9 : C-Write : USB Flash Memory Log Writefs**

**Note:** Error logs can be saved to a FD or the USB flash memory with the name of \*ERRORLOG.TXT..

### 3.35.5.2 Running Test ( Task #6 )

This test is a continuous test to be applied to the devices capable of unattended operation. The name of test device and the number of subtest being tested are displayed on the screen during a test.


The following table indicates the test items.

Test Name	Sub test No.
Memory	01 ( Conventional Memory )
-	02 ( Protected Mode )
- -	04 ( Stress Test )
Display	01 ( VRAM read / write for VGA )
Real Timer	02 ( Backup memory )
HDD	01 ( Sequential read )



### **3.35.5.3 FD & HD Utilities ( Task #7 )**

Run the utility on the floppy disk. If you select task No. [7], the following FDD utility selection menu is displayed.

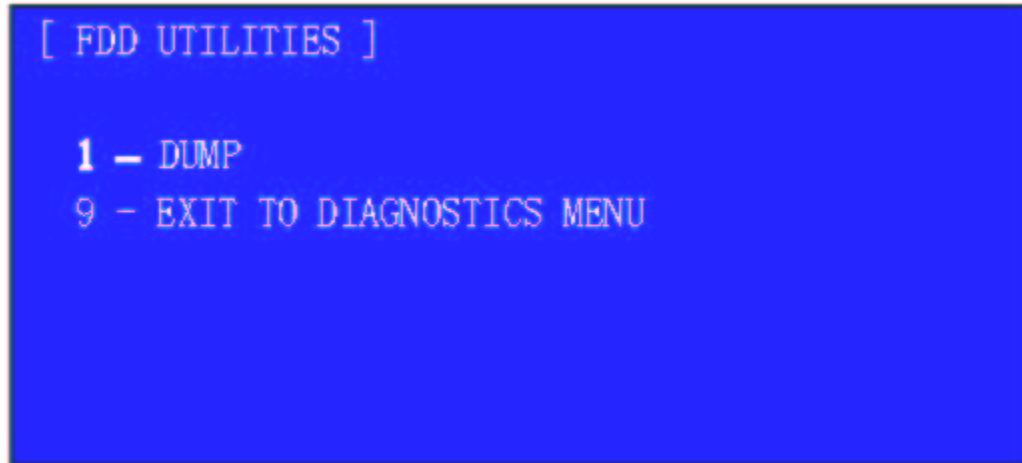

Use the Up and Down cursor keys to select your desired item and press the [Enter] key. If you press the [Esc] key or select [9], the screen returns to the main menu described in section 4.2.1.

#### **1) DUMP**

This program displays the contents of the floppy disk and the designated sectors of the hard disk on the display.

### 3.35.6 Detail of Each Test Function

#### 3.35.6.1 System Test

##### 1) DMI data read

This subtest displays the information in the Flash-ROM in the following format

<b>Model Name :</b>	<b>XXXXXXXX</b>
<b>Version Number :</b>	<b>XXXXXXXX</b>
<b>Serial Number :</b>	<b>XXXXXXXX</b>
<b>Model Number :</b>	<b>XXXXXXXX</b>
<b>PCN/BND Number :</b>	<b>XXXXXXXX</b>
<b>UUID Number :</b>	<b>XXXXXXXXXXXXXXXXXX</b>

#### 3.35.6.2 Memory test

##### 1) Conventional memory test

This subtest writes a constant data to conventional memory (0 to 640 KB), then reads the new data and compares the result with the original data.

With regard to the test memory content, save the data to the test memory before the test and restore it after the test.

Details of Test:

1-1) This subtest performs a test data write/read/compare operation to the work memory (640KB from 0000:0000 to 9000:FFFF) in the real mode. The test procedure is as follows:

##### Step 1: Byte Enable Test

Write double words of the data to the initial address of the data in 64KB units and the initial address + 4, then read the written data byte by byte and compare the result with the original data.

.

Test data = CCAA5533H, 8000000H

Step 2: Byte Enable Test

Write the data byte by byte to the initial address of the data in 64KB units and the initial data + 4, then read double words of the written data and compare the result with the original data.

Test data = CCAA5533H, 8000000H

Step 3: Data Bus Test

Write double words of the data to the initial address of the data in 64KB units and the initial address + 4, then read double words of the written data and compare the result with the original data

Test data = 1H, 2H, 4H, 8H, 10H, ..... 8000000H, 0

Step 4: Constant Data Test

Write double words of the data to the whole of the data in 64KB units, then read double words of the written data and compare the result with the original data.

Test data = FFFFFFFFh, 00000000h, 80018001h

Step 5: Address Pattern Test

Write double words of the data to the address pattern data, read double words of the written data and compare the result with the original data

Test data = 0000H, 0004H, 0008H, 000CH .....  
.. 8000H, 8004H ....FFECH

If a compare error occurs, the write data, read data and test address are displayed on the test screen.

1-2) The test information (Test address) during a test is displayed by 4 KB. Test step number is also displayed.

2) Protected Mode

This subtest writes constant data and address data (from 1MB to maximum MB), and reads the new data and compares the result with the original data.

With regard to the test memory content, save the data to the test memory before the test and restore it to the former address after the test. (Coincidence assurance of the memory content)

#### Details of Test

Step 1: Sequential Write (Fixed pattern 1 MMX version 00005555AAAAFFFFh )

: Sequential Read and Compare

Step 3: Sequential Write (Fixed pattern 2 MMX version FFFFAAAA55550000h )

: Sequential Read and Compare

Step 5: JMP + Write (Address pattern 1) 0, 1/2 increment 1/4, 3/4 decrement

: JMP + Read and Compare

Step 7: JMP + Write (Address pattern 2) 1/4. 3/4 increment 0, 1/2 decrement

: JMP + Read and Compare

### 3) Cache memory (On / off)

This subtest writes constant data to constant address 70000h in the protected mode, then reads the written data and compares the result with the original data.

With regard to the test memory content, save the data to the test memory before the test and restore it to the former address after the test. (Coincidence assurance of the memory content)

#### Details of Test:

This subtest displays the number of memory accesses within the same time in both of Cache ON and Cache OFF by the counter. Check that the benchmark speed is high when the cache is used

### 4) Stress

This subtest writes or reads constant data and address data from 1MB to the maximum MB in the protected mode and compare the results with the original data.

For the content of the test memory, save the data to the test target memory before the test and restore it to the former address after the test.

#### Details of Test:

This subtest is performed once from step 1 to step 3 and repeated 20 times from step 5 to step 8 and then it displays the total number of the test performances as Sub Step Number.

Step 1: Sequential Write (Fixed pattern 1 MMX version 00005555AAAAFFFFh )

: Sequential Read and Compare

Step 3: Sequential Write (Fixed pattern 2 MMX version FFFFAAAA55550000h )

: Sequential Read and Compare

Step 5: JMP + Write (Address pattern 1) 0, 1/2 increment 1/4, 3/4 decrement

: JMP + Read and Compare  
Step 7: JMP + Write (Address pattern 2) 1/4. 3/4 increment 0, 1/2 decrement  
: JMP + Read and Compare  
Step 11: Dword Transfer ( Data is an 32-bit shift data)  
: Step 11 bit-reversed pattern

### 3.35.6.3 Keyboard Test

#### 1) Pressed key code display

When a key is pressed, the scan code, character code, and key top name are displayed on the screen in the format shown below.

The 88 key (compatible with the 106 key) is not tested because this key operating in overseas mode uses the different character code table (Not for Japan model).

```
Scan code    = SS
Character code = C
Key top      = NNNNNN
```

```
Ins Lock  Caps Lock  Num Lock  Scroll Lock
Alt       Ctrl       Left Shift  Right Shift
```

#### 3.35.6.4 Display test

Move the highlight bar to the subtest you want to execute and press **Enter**.

1) VRAM Read / Write for VGA

This subtest writes the constant data (AAAAh and 5555h) to the video RAM. The data is read and compared to the original data.

2) Gradation for VGA

This subtest displays four colors: red, green, blue and white from left to right across the screen from black to maximum brightness.

3) Gradation for LCD

This subtest displays bands of gradations for mixed colors, then for red, green, and blue. Next, it displays eight solid colors full screen: red, semi-red, green, semi-green, blue, semi-blue, white, and semi-white. Each color displays for three seconds.

4) Gradation & Mode test for VGA

This subtest displays gradations for following modes. To change the mode, press **Enter**. It automatically judges vesa mode supported by each mode and displays gray levels for as many modes as possible.

Resolution	Screen Mode
1024 X 800	12, 13, 3, 111, 112, 114, 115, 117, 118, 165

5) All dot on / off for LCD

This subtest displays an all-white screen then an all-black screen. The display changes automatically every three seconds, then returns to the DISPLAY TEST menu.

### 3.35.6.5 Floppy Disk Test

This subtest tests floppy disks.

#### 1) Sequential read

This subtest performs a Cyclic Redundancy Check (CRC) that continuously reads all the tracks (track: 0 to 39/0 to 79) on a floppy disk.

#### 2) Sequential read / write

This subtest continuously writes data pattern B5ADADh to all the tracks (track: 0 to 39/0 to 79) on a floppy disk.

The data is then read and compared to the original data.

The number of passes is written to the first tow bytes of the data to check write missing.

Number of passes (First sector only)	A D B 5 A D A D B 5 A D A D · · · · B 5 A D A D (Repeated data after the second sector 2)
---	--

#### 3) Random address / data

This subtest writes random data to random addresses on all tracks (track: 0 to 39/0 to 79) on a floppy disk. The data is then read and compared to the original data. (20 times/pass, Test sector = 1)

#### 4) Write specified address

This subtest writes the data specified by an operator to a specified track, head, and address.

TEST DATA ??
TRACK NO ??
HEAD NO ?

#### 5) Read specified address

This subtest reads data from a track, head, and address specified by an operator.

TRACK NO ??

HEAD NO ?

*Note: The test data should be created as much as the maximum number of sectors (18 sectors in 3 mode) to test. It is because when FDD#1 becomes greater than FDD#2 in the 2FDD test, a correct data cannot be created because of insufficient test data amount. (the test data is created with the #1 sector size.)*



[ FDC Status ]

	0	1	2	3	4	5	6
<b>FDC Status</b>	=	XX	XX	XX	XX	XX	XX

- 0 : Result Status 0
- 1 : Result Status 1
- 2 : Result Status 2
- 3 : Cylinder Address
- 4 : Head Address
- 5 : Sector Address
- 6 : Number of Bytes / Sector

[ Result Status 0 ]

7	6	5	4	3	2	1	0
IC1	IC0	SE	EC	NR	HD	US1	US0

IC1 / IC0 : Interrupt Code bits

00 = normal , 01 = abnormal , 10 = invalid CMD

11 = abnormal ( FDD ready )

SE : Seek end

EC : Equipment check (track 0 is detected)

NR : Not ready

HD : Head address

US1 / US0 : Unit select

[ Result Status 1 ]

7	6	5	4	3	2	1	0
EN		DE	OR		ND	NW	MR

EN : End of Cylinder

DE : Data error

OR : Over run (DMAC)

ND : No data

NW : Not writable

MA : Missing address mark

[ Result Status 2 ]

7	6	5	4	3	2	1	0
	CM	DD	NC	SH	SN	BC	MD

CM : Control mark

DD : Data error (data field)

NC : No cylinder

SH : Scan equal hit

SN : Scan not satisfied

BC : Bad cylinder

MD : Missing address mark (data field)

### 3.35.6.6 Hard Disk Test

#### 1) Sequential read

This subtest performs a forward read operation (0 to Maximum) by 63 sectors.

#### 2) Address uniqueness

This subtest writes unique address data to each sector of the HDD track-by-track. The data written to each sector is then read and compared with the original data. There are three ways the HDD can be read.

- ▼ Forward sequential
- ▼ Reverse sequential
- ▼ Random

#### 3) Random address / data

This subtest writes random data in a random length to random addresses. This data is then read and compared to the original data.


#### 4) Cross talk & peak shift

This subtest writes eight types of worst pattern data (listed below) to a cylinder, then reads the data while moving from cylinder to cylinder. (Test the data interference in the neighbor track)

Worst pattern data	Cylinder
‘ B5ADAD ‘	0 cylinder
‘ 4A5252 ‘	1 cylinder
‘ EB6DB6 ‘	2 cylinder
‘ 149249 ‘	3 cylinder
‘ 63B63B ‘	4 cylinder
‘ 9C49C4 ‘	5 cylinder
‘ 2DB6DB ‘	6 cylinder
‘ D24924 ‘	7 cylinder

5) Partial read

This subtest reads 1GB data that is in minimum, middle and maximum address of the HDD area.

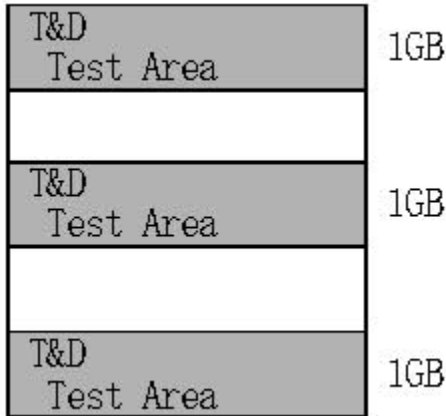

6) Write specified address

This subtest writes specified data to a specified cylinder and head on the HDD.

7) Read specified address

This subtest reads data, which has been written to a specified cylinder and head on the HDD.

8) Sequential write

This subtest writes specified 2-byte data to all of the cylinders on the HDD.

9) W-R-C specified address

This subtest writes data to a specified cylinder and head on the HDD, then reads the data and compares it to the original data.

[ **HDC Status** ]

An error occurs during the HDD test, the following message is displayed.

Note: For the serial ATA, this message is not displayed correctly.

HDC status = X X X X	HDC error register (P – 1f7h) HDC status register (P – 1f1h)
----------------------	---

[HDC Status] : P – 1F7h

<b>Bit</b>	<b>Name</b>	<b>Function</b>
7	BSY ( busy )	0: HDC is ready. 1: HDC is busy.
6	DRY ( drive ready )	0: HDD does not accept the command. 1: HDD is ready.
5	DWF ( write fault )	0: Write is successful 1: Write error
4	DSC ( seek complete )	0: Seek error 1: Seek normal termination
3	DRQ ( data request )	0: No data transfer request 1: Data transfer being requested.
2	COR ( corrected data )	0: Not used 1: Data error occurrence
1	IDX ( index )	0: Not used 1: Index detection
0	ERR ( error )	0: Normal termination 1: End with error

[Error register] P – 1F1h

Bit	Name	Function
7	BBK ( BadBlockMark )	0: Not used 1: Defective block mark detection.
6	UNC ( uncorrectable )	0: No uncorrectable data error 1: Uncorrectable data occurrence
5	---	
4	IDN ( identification )	0: Not used 1: No ID field
3	---	
2	ABT ( about )	0: Not used 1: Illegal command or command abort
1	TK0 ( track zero )	0: Track 0 detection 1: Track 0 not detection (When recalibrated)
0	0---	

### 3.35.6.7 Real timer test

#### 1) Real time

This subtest sets and displays the calendar or clock function.

#### 2) Backup memory

This subtest writes the data for 1bit ON (01, 02, 04...80h) and 1bit OFF (FE, FB, FB...7Fh) and AAh, 55h to 114 bytes of addresses from 0E to 7Fh, reads the written data and compares the result with the original data.

#### 3) Real time carry

Set the constant value as below and check carry of the timer.

Month	Date	Year	Hour	Min.	Sec.
12	- 31	- 2008	23	: 59	: 58

## 3.36 Maintenance (WinPE&FreeDos) Test Program Supplementary Information

### 3.36.1 Details of HTML Log File

This section provides details of the HTML log file stored in the storage.

#### 3.36.1.1 System Information

The following table lists system information of the PC that

Item Name	Description
Manufacturer	Manufacturer of PC
Product Name	Product name of PC
Part Number	Part number of PC
Serial Number	Serial number of PC
BIOS Version	BIOS version of PC
CPU Name0	Name of the first CPU mounted in PC
CPU Clock0	Current Clock of CPU, Max Clock
CPU Socket0	Name of CPU socket
CPU Description0	Name of CPU processor, CPUID(Family, Model, Stepping)
L2 Cache0	Second cache of CPU
CPU Name1	Name of the second CPU mounted in PC
CPU Clock1	Current Clock of CPU, Max Clock
CPU Socket1	Name of CPU socket
CPU Description1	Name of CPU processor, CPUID(Family, Model, Stepping)
L2 Cache1	Second cache of CPU



Physical Memory	Capacity (MB) of memory which is installed in PC
NetWork0	Name of LAN card. Only the first LAN card is displayed on the screen.
MAC address	Mac address of LAN card
IDE HDD	Name of the first IDE HDD and its capacity (GB)
IDE HDD	Name of the second IDE HDD and its capacity (GB)
1394 Disk	Name of HDD connected to IEEE1394 and its capacity (GB)
USB Flash Disk	Name of USB flash disk and its capacity (GB)
ODD0	Name of ODD and media type
FDD	Name of FDD
Key Board	Name of keyboard
Mouse	Name of mouse
Other Disk	Name of HDD other than IDE, IEEE1394 and USB and its capacity

### 3.36.1.2 Test conditions

The following table lists the test statuses.

Item Name	Description
T&D Version	Version of WindowsPE T&D
Test mode	Indicates the test mode. When a test is performed in Multitask, Multitask is displayed. When performed in Sequential, Sequential is displayed.
CPU Stress	If CPU stress is applied, Yes is displayed. If not applied, No is displayed.
Limit pass count	The number of passes of a test specified.

### 3.36.1.3 Test Result

The following table lists the test results. If an error occurs during a test, the line of the test on the screen is displayed in red color.

Item Name	Description
Test Name	Name of test
Test Information	Brief explanation of each test
Pass Count	Number of passes of a test
Error Count	Number of errors of a test
Simple Mode	Displays the result of the test performed in the Simple mode ● indicates that the test is OK. ▲ indicates that there is any problem in the test.
Detail Mode	Displays the result of the test performed in the Detail mode. ● indicates that the test is OK. ▲ indicates that there is any problem in the test.
Heart Run	Displays the result of heart run test. * The current version does not support it.
Comment	Displays the comment on the test result. * The current version does not support it.
Over-all judgment	Displays the results of all of the tests. ● indicates that the test is OK. ▲ indicates that there is any problem in the test.

### **3.37 Maintenance (WinPE&FreeDos) Test Program Supplementary Information**

#### **3.37.1 Outline**

Describes notices and restrictions on using this program

#### **3.37.2 Notices and Restrictions (Win PE T&D)**

##### **1) CPU Stress**

When the CPU stress checkbox is checked, it is recommended that this test be conducted in the Simple mode.

If CPU stress is applied in the TIMER Test and the USB Test in the test items, an error occurs.

##### **2) External ODD Boot**

If you run this maintenance tool from the CD, boot the system from the built-in ODD.

For the models in which ODD is not built, boot the system from the USB memory.

##### **3) VIDEO Test**

If the VIDEO test and other test are executed simultaneously (Multitasking), the test status cannot be shown on the WinPE T&D main screen due to the VIDEO test.

##### **4) LAN Test**

To conduct the LAN test, be sure to connect the LAN router with DHCP to the PC. Do not connect the LAN router to the external Network for safety reason. In addition, if the router without DHCP or Hub is connected to the PC, the test fails with an error.

##### **5) ODD、 USB Test**

Do not remove the CD containing this T&D test program or the USB memory during the test. This CD or this USB memory include an operational program for the test, if it is removed, the test cannot be continued and ends in an error.

6) Boot Media

If the system is booted from the CD when both the CD and the USB memory that contain WinPE T&D are connected to the PC, T&D in the USB memory starts up.

Also, when a bootable CD is not inserted in the CD drive when the system is booted from the USB memory, the ODD test fails with an error because the ODD test file is only contained in this CD. However, this error should be solved by inserting the bootable CD.

7) Timer Test

If the Timer test and other test are executed simultaneously (Multitasking), the error time displayed in the test log is not displayed correctly.

8) CD Boot

After Winpe is selected on the Multiboot selection screen when the system is booted from the CD, the "Press any Key to boot from CD or DVD..." message is displayed but only the [ENTER] key is valid.

### **3.37.3 Notices and Restrictions (Freedos)**

1) USB Boot

If you boot the system from the USB memory, the FDD test cannot be executed. Use CD Boot.

2) FDD Test

If the USB FDD drive or the floppy disk on the disk drive is removed during an FDD test, a time-out error occurs and then the program hangs up. Do not remove the FDD drive or the floppy disk during the FDD test.

---

## **Chapter 4**

# **Replacement Procedures**

---



---

## Chapter 4 Contents

---

4.1	Overview .....	4-1
4.2	Battery pack .....	4-10
4.3	SIM card .....	4-12
4.4	ExpressCard .....	4-13
4.5	Bridge media (SD, mini SD, Micro SD Card/MultiMedia Card).....	4-14
4.6	Memory module.....	4-15
4.7	HDD/SSD .....	4-18
4.7.1	HDD/SSD (2.5-inch) .....	4-18
4.7.2	SSD (1.8-inch) .....	4-21
4.8	Base assembly.....	4-23
4.9	ExpressCard slot .....	4-29
4.10	Battery lock.....	4-31
4.11	3G card.....	4-32
4.12	Optical disk drive (DVD-Super Multi drive)/SD board.....	4-38
4.13	Wireless LAN card .....	4-44
4.14	DC fan.....	4-46
4.15	E-SATA board .....	4-48
4.16	Fin .....	4-50
4.17	Bluetooth module.....	4-52
4.18	System board.....	4-54
4.19	Sound board .....	4-63
4.20	Speaker.....	4-69
4.21	DC-IN harness .....	4-72
4.22	Touch pad/Fingerprint sensor board.....	4-73
4.23	Keyboard.....	4-78
4.24	Cover assembly/LCD assembly.....	4-80
4.25	LCD .....	4-86
4.26	Camera module .....	4-94
4.27	Wireless LAN antenna/Bluetooth antenna/3G antenna.....	4-96
4.28	Hinge.....	4-119

### Figures

Figure 4-1	Removing the battery pack .....	4-10
Figure 4-2	Removing the SIM card .....	4-12
Figure 4-3	Removing the ExpressCard.....	4-13
Figure 4-4	Removing the Bridge media .....	4-14
Figure 4-5	Removing the memory cover.....	4-15
Figure 4-6	Removing the memory module.....	4-16
Figure 4-7	Removing HDD/SSD cover .....	4-18
Figure 4-8	Removing the HDD/SSD (2.5-inch) .....	4-19
Figure 4-9	Removing the SSD (1.8-inch) (1) .....	4-21
Figure 4-10	Removing the SSD (1.8-inch) (2) .....	4-22
Figure 4-11	Removing the base assembly (1) .....	4-23
Figure 4-12	Removing the base assembly (2) .....	4-24
Figure 4-13	Removing the base assembly (3) .....	4-25
Figure 4-14	Removing the base assembly (4) .....	4-26
Figure 4-15	Removing the ExpressCard slot.....	4-29
Figure 4-16	Removing the battery lock .....	4-31
Figure 4-17	Removing the USB 3.0 FPC .....	4-32
Figure 4-18	Removing the sound board FPC .....	4-33
Figure 4-19	Removing the 3G board (ExpressCard/Smart Card model) (1).....	4-34
Figure 4-20	Removing the 3G board (No-ExpressCard/Smart Card model) (2).....	4-35
Figure 4-21	Removing the 3G card (ExpressCard/Smart Card model) (1).....	4-36
Figure 4-22	Removing the 3G card (No-ExpressCard/Smart Card model) (2).....	4-36
Figure 4-23	Removing the optical disk drive/SD board (1) .....	4-38
Figure 4-24	Removing the optical disk drive/SD board (2) .....	4-39
Figure 4-25	Removing the optical disk drive/SD board (3) .....	4-40
Figure 4-26	Removing the optical disk drive/SD board (4) .....	4-41
Figure 4-27	Removing the wireless LAN card.....	4-44
Figure 4-28	Removing the DC fan .....	4-46
Figure 4-29	Removing the E-SATA board.....	4-48
Figure 4-30	Removing the fin.....	4-50



Figure 4-31	Removing the Bluetooth module.....	4-52
Figure 4-32	Removing the system board (1).....	4-55
Figure 4-33	Removing the system board (2).....	4-56
Figure 4-34	Removing the system board (3).....	4-57
Figure 4-35	Removing the system board (4).....	4-58
Figure 4-36	Removing the system board (HDD model) (5) .....	4-59
Figure 4-37	Removing the system board (SSD model) (6).....	4-60
Figure 4-38	Removing the sound board (1) .....	4-63
Figure 4-39	Removing the sound board (USB2.0 model) (2).....	4-64
Figure 4-40	Removing the sound board (USB3.0 model) (3).....	4-65
Figure 4-41	Removing the inner harness.....	4-66
Figure 4-42	Removing the speaker (1).....	4-69
Figure 4-43	Removing the speaker (2).....	4-70
Figure 4-44	Removing the DC-IN harness.....	4-72
Figure 4-45	Removing the touch pad/fingerprint sensor board (1).....	4-73
Figure 4-46	Removing the touch pad/fingerprint sensor board (2).....	4-74
Figure 4-47	Removing the touch pad/fingerprint sensor board (3).....	4-75
Figure 4-48	Removing the keyboard.....	4-78
Figure 4-49	Removing the cover assembly/LCD assembly .....	4-80
Figure 4-50	Removing the sensor board .....	4-81
Figure 4-51	Removing the LCD mask (1).....	4-86
Figure 4-52	Removing the LCD mask (2).....	4-87
Figure 4-53	Removing the LCD (1) .....	4-88
Figure 4-54	Removing the LCD (2) .....	4-89
Figure 4-55	Removing the camera module .....	4-94
Figure 4-56	Removing the wireless LAN antenna/Bluetooth antenna/3G antenna (3G+Bluetooth model).....	4-96
Figure 4-57	Removing the wireless LAN antenna/Bluetooth antenna/3G antenna (No-3G model).....	4-97
Figure 4-58	Removing the hinge .....	4-119




## 4.1 Overview

**CAUTION:** The case and parts of this machine are delicate (thin) because this machine is lighter than a usual machine. Handle with care of installing/removing.

This chapter describes the procedure for removing and replacing the field replaceable units (FRUs) in the PC. It may not be necessary to remove all the FRUs in order to replace one. The chart below provides a guide as to which other FRUs must be removed before a particular FRU can be removed. The numbers in the chart indicate the relevant section numbers in this manual.

In all cases when removing an FRU, the battery pack must also be removed. When repairing an FRU that is the potential cause of a computer fault, use the chart to determine the order in which FRUs need to be removed.

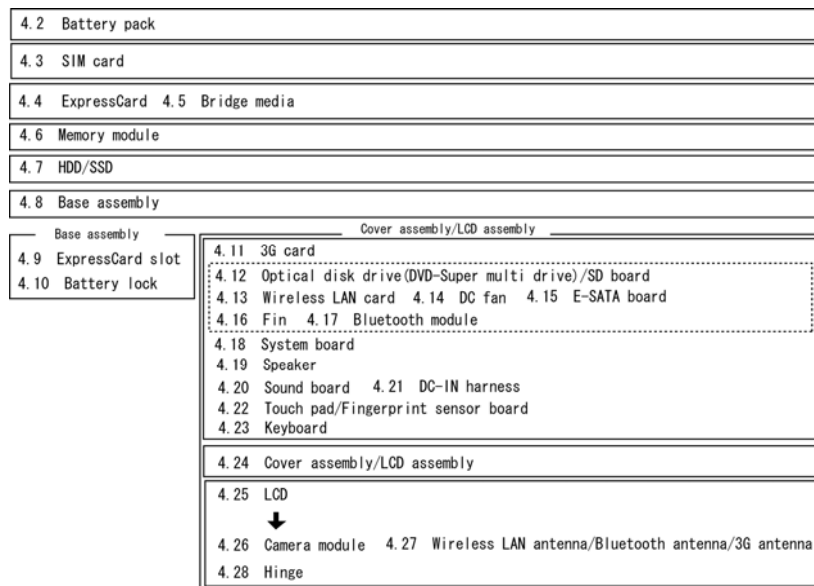


### Chart Notation

The chart shows the case for the following example:

- Removing the ExpressCard slot

All FRUs down to the “4.2 Battery pack” to “4.8 Base assembly” above the 4.9 ExpressCard slot must be removed.

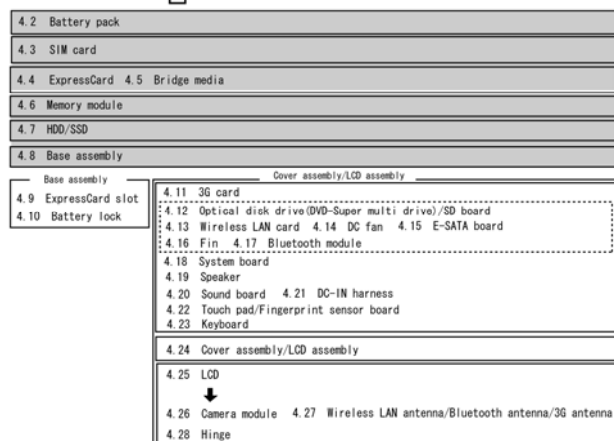

Please prepare required parts in advance, when replacing the following items.

ITEM	Parts List ITEM No	PART NAME	Quantity
COVER ASSY	60-A	COVER ASSY	1
	14	TOUCH PAD	1
	62-A	TP BTN COVER ASSY	1
	85	FINGER SENSOR BOARD (PCB ASSY FULFSx)	1
	11-A	KEYBOARD	1
	67	INSULATOR KB	1

ITEM	Parts List ITEM No	PART NAME	Quantity
LCD COVER ASSY	60-B	LCD COVER ASSY	1
	15	CAMERA MODULE	1
	24	W-LAN/WIMAX ANTENNA WITH CABLE (Main)	1
	25	W-LAN/WIMAX ANTENNA WITH CABLE (Sub)	1
	39	BLUETOOTH ANTENNA	1
	63		1
	64		1

Parts which must not be reused are (1) Touch pad, (2) Touch pad button cover, (3) Fingerprint sensor board (PCB ASSY FULFSx), (4) Keyboard, (5) INSULATOR KB, (6) Camera module, (7) Wireless LAN antenna, (8) Bluetooth antenna and (9) 3G antenna.

The main parts in this manual are indicated in the part list by the following names.

Parts List ITEM No	Manual NAME	PART NAME
01-B	System board	MOTHER BOARD ASSY
06	Optical disk drive	DVD SUPER MULTI DRIVE
07	Memory module	MEMORY DDR3 1333 2GB
12-A	Wireless LAN card	WLAN 802.16E(A/G/N)W
16	RTC battery	BUTTON N/H BATTERY
22	HDD FPC	FPC FULHDx
24	Wireless LAN antenna	W-LAN/WIMAX ANTENNA WITH CABLE
25		W-LAN/WIMAX ANTENNA WITH CABLE
30	Touch pad FFC	TP FFC
34	E-SATA board FPC	FPC FULYEx
35	ODD FPC	FPC FULOAx
37	SD board FPC	FPC FALxYAx FLEXIBLE PCB
38	Sound board FPC	FPC FULYNx
40-B	Base assembly	BASE ASSY
46	USB 3.0 FPC	FPC FALxYUx FLEXIBLE PCB
60-A	Cover assembly	COVER ASSY
62-A	Touch pad button cover	TP BTN COEVR ASSY
63	3G antenna	
64	3G antenna	
80-B	T-PAD board	TOUCH PAD SW/LED BOARD ASSY
81-B	Sensor board	LCD-SW SENSOR BOARD ASSY
82	E-SATA board	I/O PORT BOARD ASSY
83	Sound board	USB3.0/SOUND BOARD ASSY
84	SD board	SD BOARD ASSY
85	FingerPrint sensor board	FINGER SENSOR BOARD ASSY
89	3G board	
S01	M2.5x6B FLAT HEAD	SCREW(M2.5X6)WITH S-GRIP
S02	M2x4C S-THIN HEAD	SCREW M2X4
S03	M2.5x4B FLAT HEAD	SCREW(M2.5X4)WITH S-GRIP
S04	M2x3B S-THIN HEAD	SCREW M2X3BN
S05	4-40x5C UNIFIED BIND	4-40X5 UNIFIED SCREW
S06	M2x5B S-THIN HEAD	TG SCREW M2X5BNI
S08	M2x2.3B S-THIN HEAD	SCREW(M2X2.3)WITH S-GRIP
S09	M2x6B stepping	SCREW(M2X6)DANTUKI SCR
S10	M1.4x3B S-THIN HEAD	PH SCREW M1.4X3.0BN

## Safety Precautions

Please read the following safety instructions before disassembling the computer and always follow the instructions while working on the computer.

**DANGER:** 1) *Always use the genuine battery that is authorized by Toshiba or compatible with the unit. Since other battery packs have different specifications, they may be incompatible with the unit, and may burst or explode.*  
*Never heat or disassemble the battery pack, as that could cause leakage of alkaline solution. Never throw the battery pack into a fire, as that could cause the battery pack to explode.*

2) *The power supply, FL inverter and other components carry high voltages. If you need to turn on the power of a partially disassembled computer to check its operation, be very careful not to touch connectors or components, in order to avoid the risk of electric shock.*  
*Also, do not disassemble individual components in first-level maintenance.*

**WARNING:** 1) *Turn off the power and disconnect the AC adaptor from the power source, to avoid exposure to electric shock.*

2) *Batteries in the computer retain an electrical charge, so there is danger of electrical shock even when the computer is disconnected from an AC power source. Remove any metal jewelry or accessories such as necklaces, bracelets or rings, in order to reduce the risk of electric shock. Never work with wet or damp hands.*

3) *Be careful of edges and corners as these may cut.*

**CAUTION:** 1) *When you change a component, be sure the replacement component meets the required specifications. Never use foreign parts, to avoid any risk of damage to the computer.*

2) *To avoid any risk of short-circuit, fire or other internal damage, never allow any metal objects such as screws or paper clips to fall into the unit. Be sure to replace screws with the same size as those removed. Make sure all screws are securely fastened. Loose screws can cause short circuits, resulting in heat, smoke or fire.*

3) *Before lifting out an FRU or other component, make sure all cables to the component have been disconnected, in order to reduce the risk of accidental electric shock.*

4) *If you use AC power, be sure to use the cable that came with the computer or one recommended by Toshiba.*

5) *Make sure that all replacement components meet the specifications for the computer and that all cables and connectors are securely fastened, in order to avoid the risk of electric shock.*

6) *Some parts inside the computer, such as the CPU and cooling module, become very hot during operation. Conduct repair work after they have cooled. Be careful around the CPU and cooling module to avoid burns.*

**Before You Begin**

Take note of the following points before starting work. Always remove the AC adapter and battery pack before commencing any of the procedures. The procedure for removing the battery pack is described in section “4.2. Battery Pack”.

1. Do not disassemble the computer unless it is operating abnormally.
2. Use the designated tools.
3. Ensure that the environment for working on and storing parts does not contain any of the following.
  - Dust or dirt
  - Static electricity
  - Extremely hot, cold, or humid conditions
4. Perform the diagnostic tests described in Chapter 2 to determine which FRU is the cause of the fault.
5. Do not perform any unnecessary work. Always work in accordance with the disassembly and re-assembly procedures in this manual.
6. Keep parts removed from the computer in a safe place away from the computer where they will not be damaged or interfere with your work.
7. Disassembling requires the removal of a large number of screws. Keep removed screws in a safe place such that you can determine which screws belong to which part.
8. When re-assembling, ensure that you use the correct screws and fit parts in the correct position. Screw sizes are noted in the text and figures.
9. As all parts have sharp edges and corners, take care not to cut yourself.
10. After replacing an FRU, check that the computer and replaced part operate correctly.

## Disassembly Procedures

Four main types of cable connector are used.


- Pressure plate connector
- Spring connector
- Back flip connector
- Normal pin connector

For pressure plate connectors, slide the pressure plate holding tags on both sides of the plastic pressure plate on the connector and pull the cable out from the connector. When reconnecting the cable to the pressure plate connector, slide the pressure plate holding tags on both sides of the plastic pressure plate on the connector and insert the cable into the connector. Push both tags of the pressure plate such that the cable is fixed in the correct position. Pull the cable to ensure that it is securely connected.

For spring connectors, lift up the stopper frees the cable and allow it to be pulled out. To reconnect, hold the stopper in the up position and insert the cable, then lower the stopper to secure the cable. Pull the cable to ensure that it is securely connected.

For back flip connectors, lift up the flip plate frees the cable and allow it to be pulled out. To reconnect, hold the flip plate in the up position and insert the cable, then lower the flip plate to secure the cable. Pull the cable to ensure that it is securely connected.

Normal pin connectors are used for all other cables. Simply pull out or push in these connectors to disconnect or reconnect.

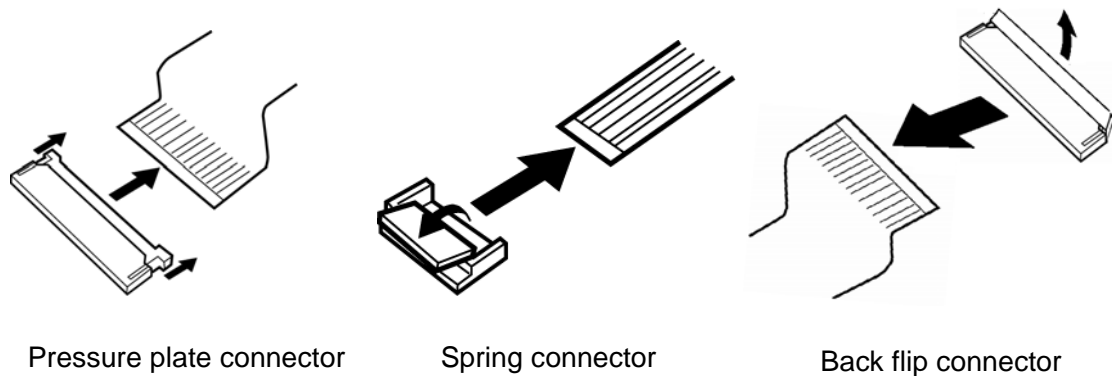



## Assembly Procedures

After the computer has been disassembled and the part that caused the fault has been repaired or replaced, the computer must be reassembled.

Take note of the following general points when assembling the computer.

- Take your time and follow the instructions carefully. Hurrying the assembly work will only introduce new problems.
- Check that all cables and connectors are securely connected.
- Before fastening FRUs or other parts in place, ensure that no cables are caught on screws or the FRU.
- Check that all latches are securely closed.
- Ensure that you have installed all FRUs correctly and do not have any screws left over. Using an incorrect screw may damage the thread or screw head and result in the FRU not being securely fastened in place.

After installing FRUs, check that the computer operates correctly.

## Tools and Equipment

The use of Electrostatic Discharge (ESD) equipment is very important for your safety and the safety of those around you. Proper use of these devices will increase the success rate of your repairs and lower the cost for damaged or destroyed parts. The following equipment is necessary to disassemble and reassemble the computer:

- One Philips screwdriver with type 0 bit (for S-THIN HEAD screws)
- One Philips screwdriver with type 1 bit (for screws other than above)
- Tweezers (for lifting screws)
- ESD mats (lay on work table or floor)
- An ESD wrist strap and heel grounder
- Anti-static carpet or flooring
- Air-ionizers in highly static sensitive areas
- Antenna coaxial cable disconnecter

## Screw Tightening Torque


When you fasten screws, be sure to follow the torque list below.

**CAUTION:** Overtightening can damage components and screws; undertightening can result in electrical shorts or other damage if screws or components come loose.

**NOTE:** Toshiba recommends that you use an electric screwdriver for quick and easy operations. (Except a M1.4 screw)  
Use a non electric screwdriver to fasten a M1.4 screw, because bosses for M1.4 screws may be broken if the screw is driven with an electric screwdriver.

- M1.4 (1.4mm) 0.098 N·m(1.0 kgf·cm)
- M2 (2mm) 0.167 N·m(1.7 kgf·cm)
- M2.5 (2.5mm) 0.294 N·m(3.0 kgf·cm)
- M3 (3mm) 0.294 N·m(3.0 kgf·cm)

**NOTE:** To prevent damage to *THIN HEAD* screws, use type 0 bit philips screwdriver. Press along the axis of the screwdriver while turning the screw. This is because the contact area between the screw and driver is less than for a pan head screw (standard pan-shaped screw head).

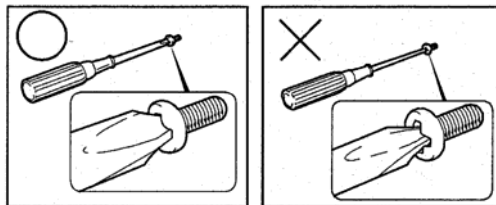

## Grip Color

Some screws have a colored grip area to help you determine the length of the screw.

[Normal grip]

- Even numbered length screws: Brown
- Odd numbered length screws: White
- Special length screw: Blue



[Special grip]

- Even numbered length screws: Yellow
- Odd numbered length screws: Pink
- Special length screw: Green

“Special length screw” means screws whose length is indicated in an integral number to the first decimal places such as 2.5 mm, 2.6 mm and so on.

## Screw Notation

To make maintenance of the computer easier, markings of the kinds of the screws including the types and lengths of the screws are indicated on the computer body.

Format:

Screw type + Screw length (mm)

Screw shape

- B: Bind screw
- F: Flat head screw
- S: Super thin head screw
- T: Tapping screw
- U: Other screws (Unique screws: pan head, stud, etc.)

Example: B6 ... 6mm BIND screw

Screw color/material

- B: Black/Nickel
- C: Silver/Non-Hexavalent Chromate
- U: Other screws (Unique screws: such as stud, etc.)

## 4.2 Battery pack

### Removing the Battery pack

To remove the battery pack, follow the steps below and refer to Figure 4-1.

**CAUTION:** When handling battery pack, be careful not to short circuit the terminals. Also do not drop, hit or apply impact, do not scratch, break, twist or bend the battery pack.

1. Turn off the power of the computer.
2. Disconnect the AC adapter and other external devices from the computer.
3. Turn the computer face down.
4. Release the **battery lock**. Pull out the **battery pack** while sliding the **battery latch** as shown in the following figure.

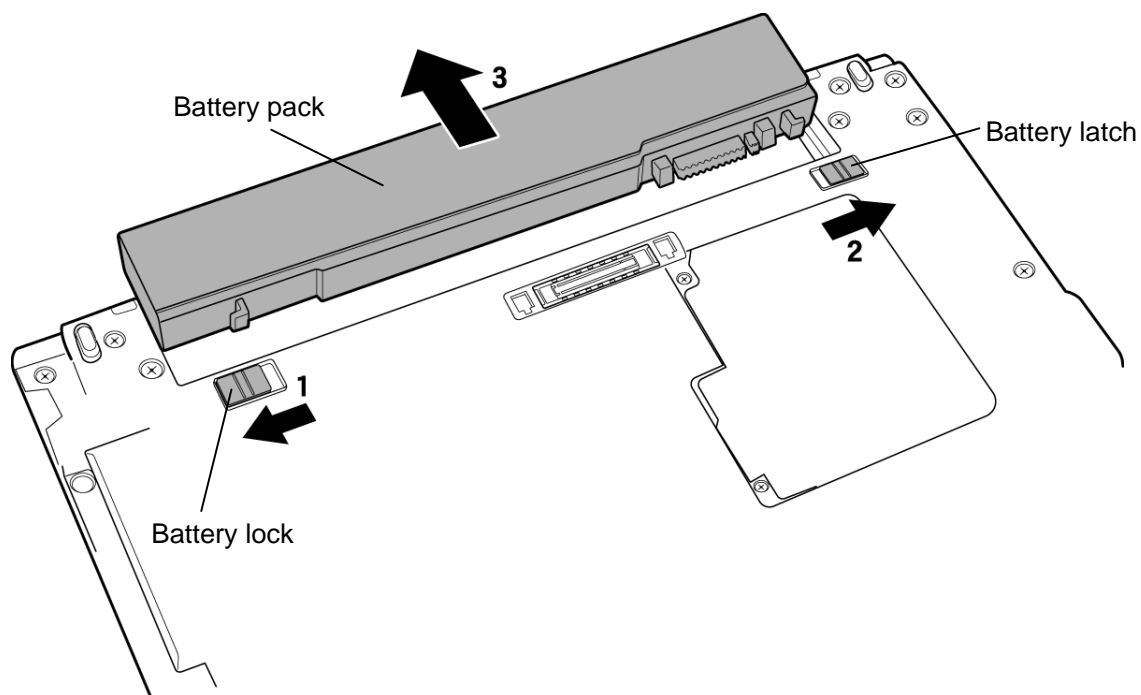


Figure 4-1 Removing the battery pack

**NOTE:** Dispose of used batteries according to the laws and ordinances of your local authority.

### Installing the Battery pack

To install the battery pack, follow the steps below and refer to Figure 4-1.

**CAUTION:** *The battery pack is a lithium ion battery, which can explode if not properly replaced, used, handled or disposed of. For environmental reasons, collect the spent battery packs. Use only batteries recommended by Toshiba for replacements.*

**NOTE:** *Check the battery's terminals visually. If they are dirty, wipe them clean with a dry cloth.*

1. Turn off the power of the computer.
2. Disconnect the AC adapter and all other external devices from the computer.
3. Install the **battery pack** into the battery slot. Make sure the battery pack is installed securely.
4. Slide the **battery lock** into the lock position.

### 4.3 SIM card

#### Removing the SIM card

To remove the SIM card, follow the steps below and refer to Figure 4-2.

1. Release the **hook**.
2. Push the **SIM card**. It will pop out partly, so pull out the card.

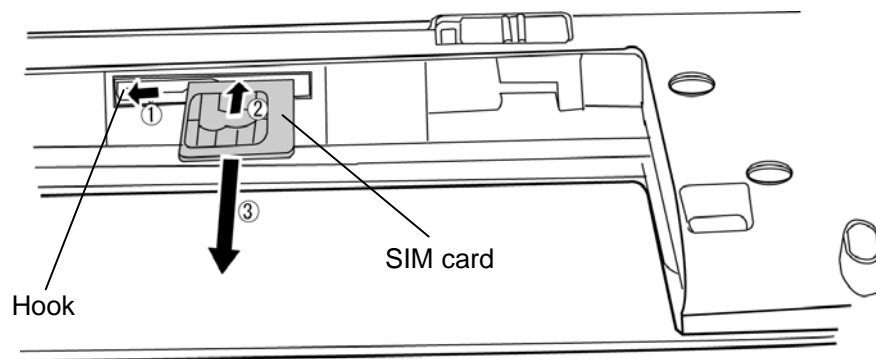


Figure 4-2 Removing the SIM card

#### Installing the SIM card

To install the SIM card, follow the steps below and refer to Figure 4-2.

1. Insert the **SIM card** and press it until it is securely connected.

## 4.4 ExpressCard

### Removing the ExpressCard

To remove the ExpressCard, follow the steps below and refer to Figure 4-3.

**CAUTION:** Before you remove the ExpressCard, refer to the card's documentation and to your operating system documentation for proper procedures and precautions.

1. Push the **ExpressCard**. It will pop out partly, so pull out the card.

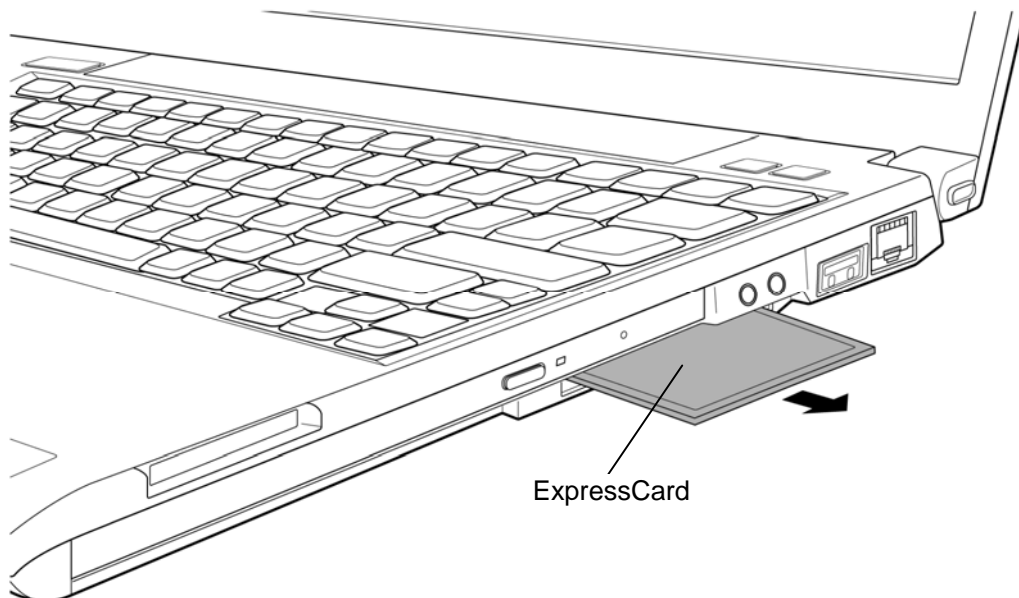


Figure 4-3 Removing the ExpressCard

### Installing the ExpressCard

To install the ExpressCard, follow the steps below and refer to Figure 4-3.

1. Insert the **ExpressCard** and press it until it is securely connected.

## 4.5 Bridge media (SD, mini SD, Micro SD Card/MultiMedia Card)

### Removing the Bridge media

To remove the Bridge media, follow the steps below and refer to Figure 4-4.

**CAUTION:** Before you remove the Bridge media, refer to the card's documentation and to your operating system documentation for proper procedures and precautions.

1. Push the **Bridge media**. It will pop out partly, so pull out the card.  
(For an instance, SD card is described in the figure 4-4.)

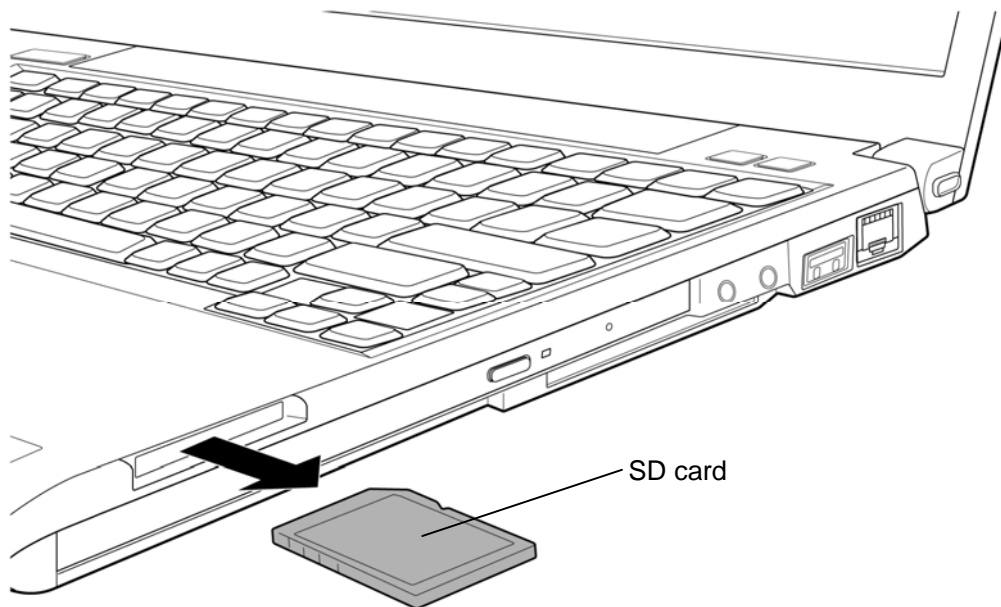


Figure 4-4 Removing the Bridge media

### Installing the Bridge media

To install the Bridge media, follow the steps below and refer to Figure 4-4.

1. Insert the **Bridge media** in the card slot and push it carefully to ensure a firm connection.



## 4.6 Memory module

### Removing the Memory module

To remove the memory module, confirm that the computer is shut down. Then follow the steps below and refer to Figure 4-5 and 4-6.

**CAUTION:** When removing the memory module, make sure the computer is powered off. Removing a memory module with the power on might damage the module or the computer itself.

Do not touch the connectors on the memory module or on the computer. Dust and stains on the connectors may cause memory access problems.

Never press hard or bend the memory module.

1. Loosen the **screws** fixing the memory cover.
2. Remove the **memory cover**.

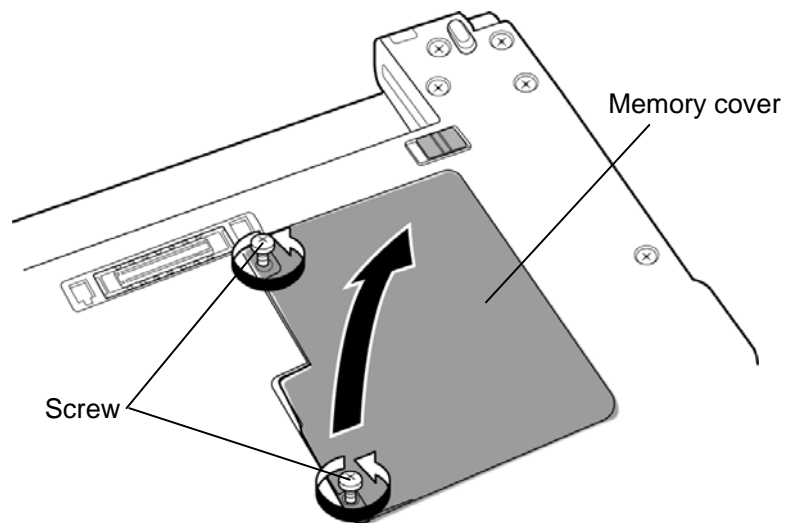


Figure 4-5 Removing the memory cover

3. Open the left and right **latches** outside and remove the **memory module**.

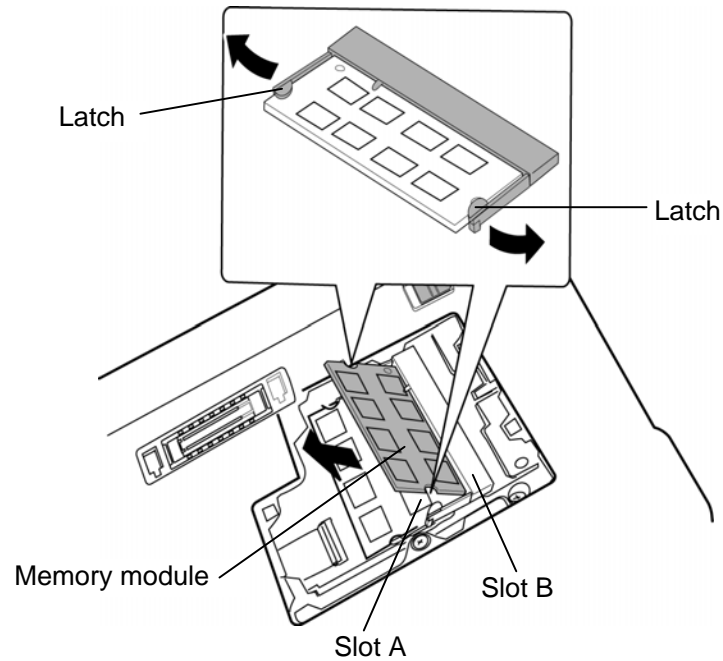


Figure 4-6 Removing the memory module

### Installing the Memory module

To install the memory module, confirm that the computer is shut down. Then follow the steps below and refer to Figure 4-5 and 4-6.

**CAUTION:** *When installing the memory module, make sure the computer is powered off. Inserting a memory module with the power on might damage the module or the computer itself.*

*Never press hard or bend a memory module.*

1. Insert the **memory module** into the connector slantwise and press it down to connect firmly.

**CAUTION:** *The slot A is reserved for the first memory module. Use the slot B for expanded memory. If only one module is installed, use the slot A.*

*After installing the memory module, make sure that the memory module is secured with the left and right latches.*

2. Set the **memory cover** and secure it with the **screws**.
3. When the power of the computer is turned on, the computer checks automatically the memory size. Confirm that the new memory is detected correctly.
4. If the memory is not detected, check if it is connected correctly.

## 4.7 HDD/SSD

**CAUTION:** Take care not to press on the top or bottom of the HDD or SSD. Pressure may cause data loss or damage to the device.

### 4.7.1 HDD/SSD (2.5-inch)

#### Removing the HDD/SSD (2.5-inch)

To remove the HDD/SSD (2.5-inch), follow the steps below and refer to Figure 4-7 and 4-8.

1. Loosen the **screws** fixing the HDD/SSD cover.
2. Remove the **HDD/SSD cover**.

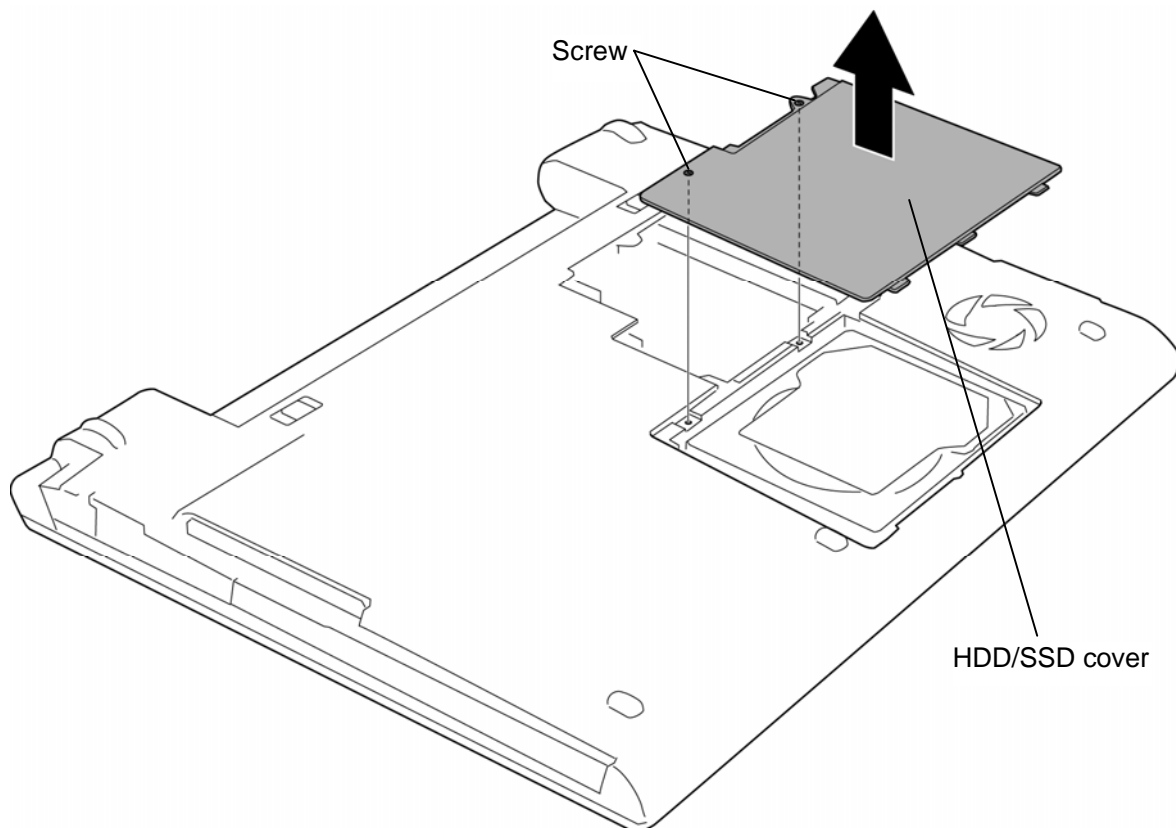


Figure 4-7 Removing the HDD/SSD cover

3. Turn up the **insulator**.
4. Lift up the **HDD/SSD** from the slot while holding the **insulator**.
5. Disconnect the **HDD/SSD** from the connector on the **HDD/SSD FPC**.

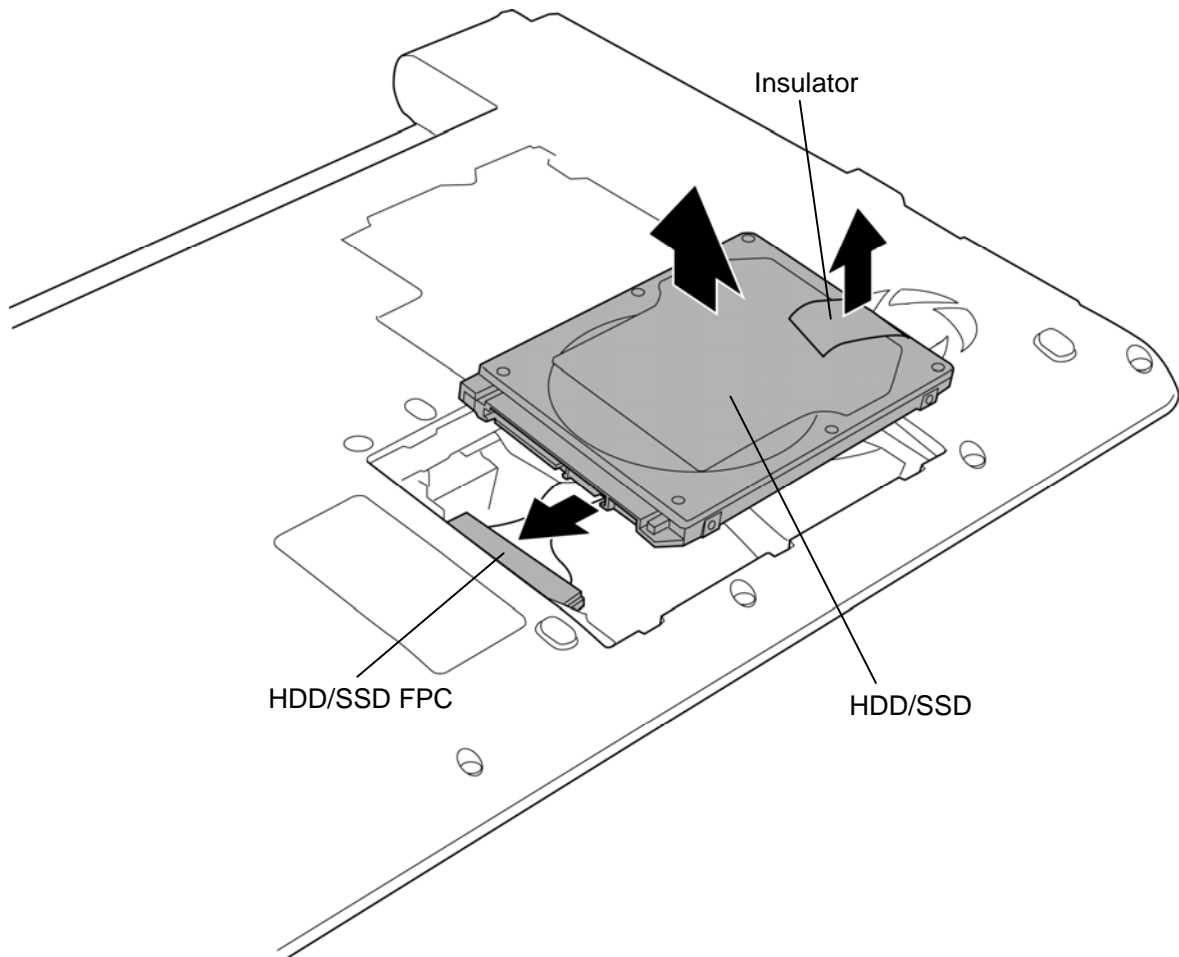



Figure 4-8 Removing the HDD/SSD (2.5-inch)

### Installing the HDD/SSD (2.5-inch)

To install the HDD/SSD (2.5-inch), follow the steps below and refer to Figure 4-7 and 4-8.

1. Connect the **HDD/SSD** to the connector on the **HDD/SSD FPC**.
2. Turn up the **insulator** and set the **HDD/SSD** into the slot.
3. Set the **HDD/SSD cover** and secure it with the **screws**.

**NOTE:** Be careful that the cushions of the HDD/SSD cover are different between the 7mm HDD and the 9.5mm HDD/SSD.

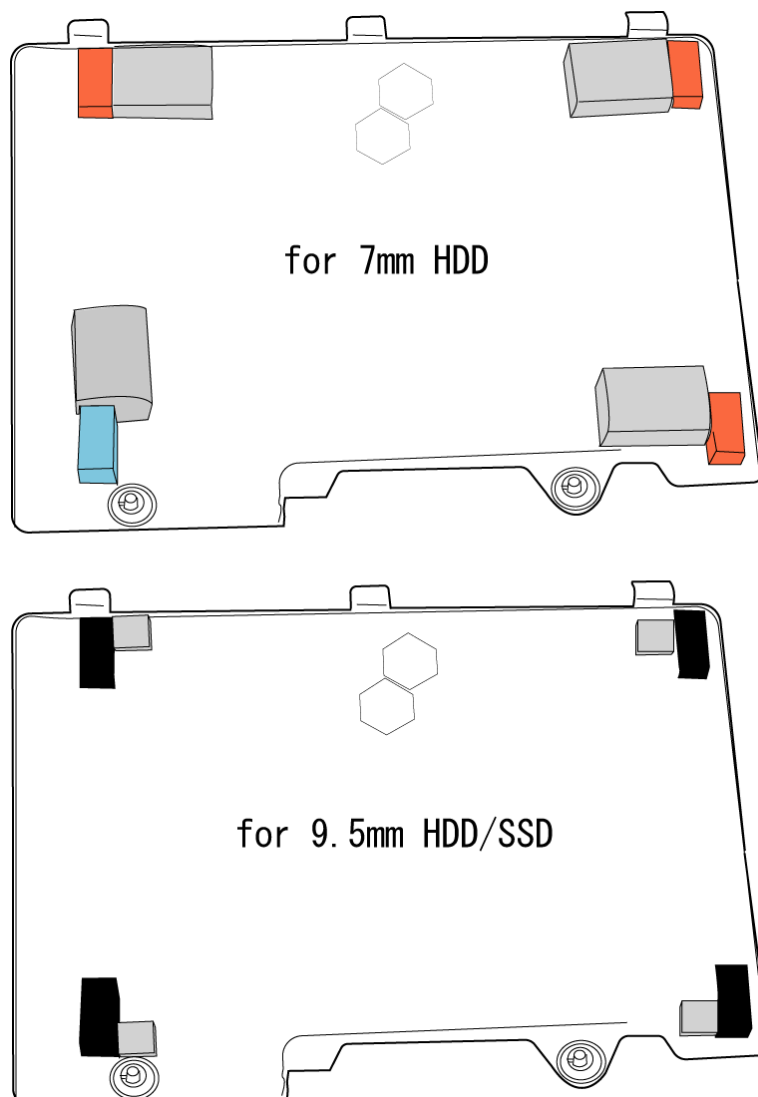

### 4.7.2 SSD (1.8-inch)

#### Removing the SSD (1.8-inch)

To remove the SSD (1.8-inch), follow the steps below and refer to Figure 4-7, 4-9 and 4-10.

1. Loosen the **screws** fixing the HDD/SSD cover.
2. Remove the **HDD/SSD cover**.
3. Peel off the **insulators** (SQUARE INSULATOR and SSD HOLD INSULATOR).
4. Disconnect the **SSD FPC** from the connector on the SSD.
5. Remove the **SSD holder** (with the SSD) from the slot.

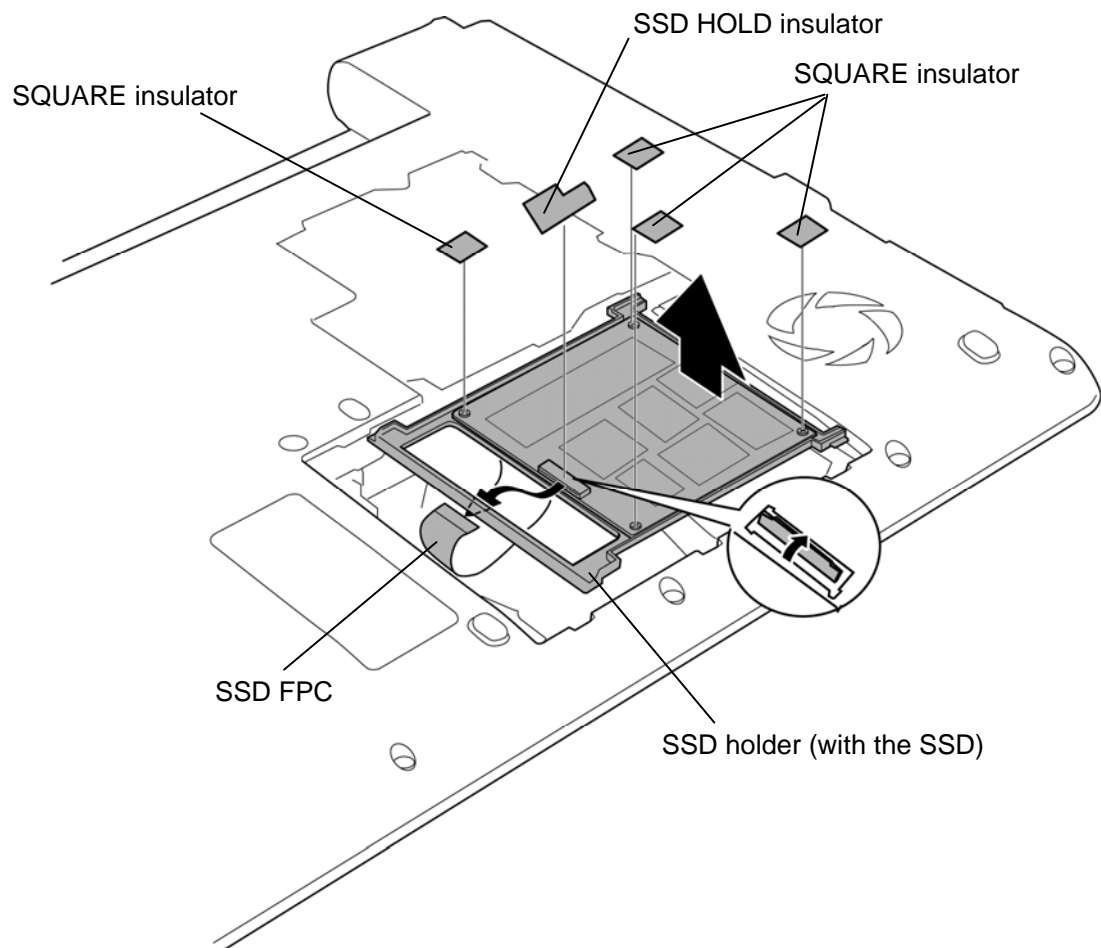


Figure 4-9 Removing the SSD (1.8-inch) (1)

6. Remove the following **screws** securing the **SSD**.

- M1.4×3B S-THIN HEAD ×4

7. Remove the **SSD** from the **SSD holder**.

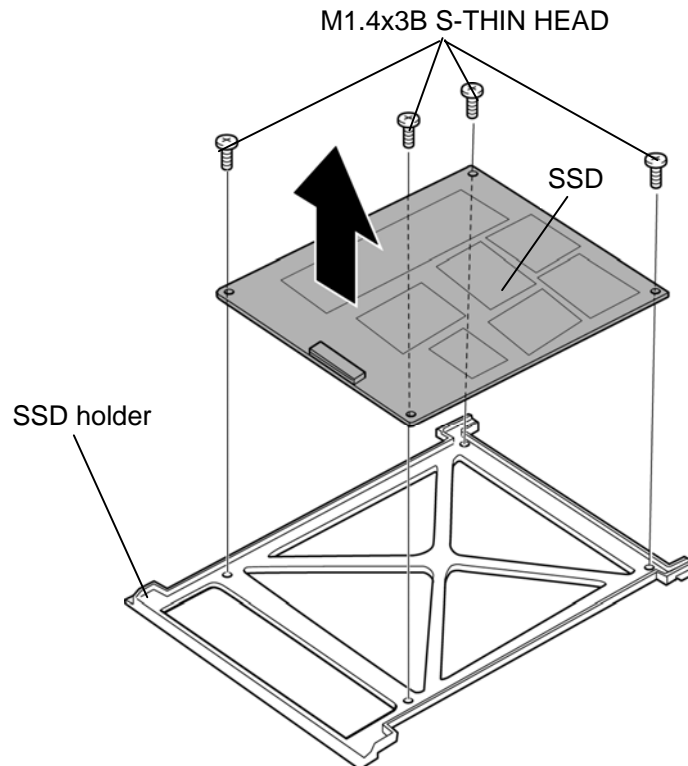


Figure 4-10 Removing the SSD (1.8-inch) (2)

### Installing the SSD (1.8-inch)

To install the SSD (1.8-inch), follow the steps below and refer to Figure 4-7, 4-9 and 4-10.

1. Set the **SSD** to the **HDD holder** and secure them with the following **screws**.

- M1.4×3B S-THIN HEAD ×4

2. Set the **SSD holder** (with the SSD) into the slot.

3. Connect the **SSD FPC** to the connector on the **SSD**.

4. Stick the **insulators** (SQUARE INSULATOR and SSD HOLD INSULATOR) in place.

5. Set the **HDD/SSD cover** and secure it with the **screws**.



## 4.8 Base assembly

### Removing the Base assembly

To remove the base assembly, follow the steps below and refer to Figure 4-11 to 4-14.

1. Take out the **tab** under the base assembly.
2. Lift up the **flip** of the connector and disconnect the **ExpressCard FPC** from the connector **CN2520** on the system board while holding the **tab**.

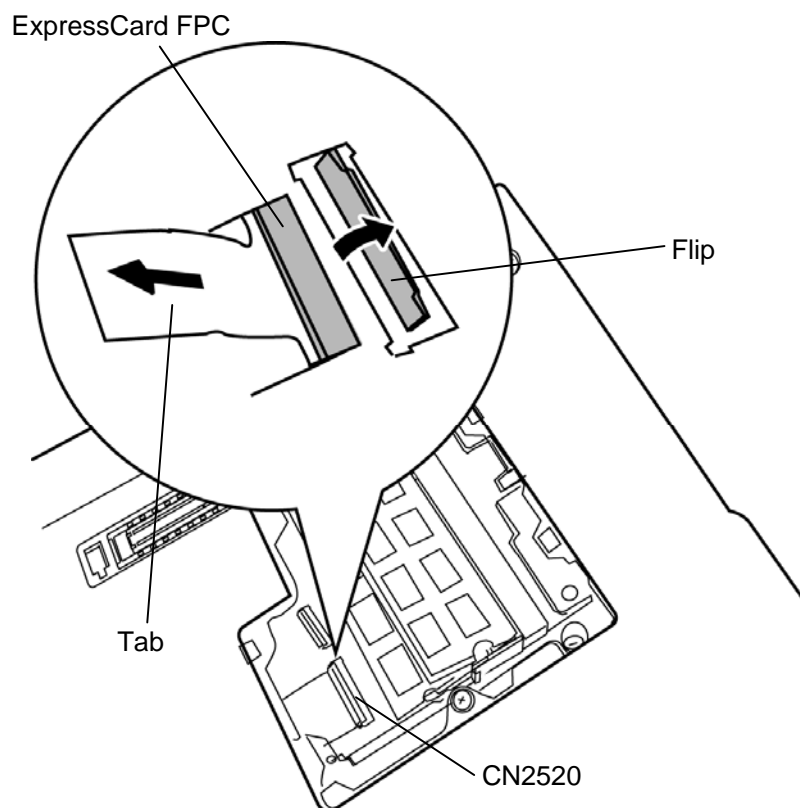


Figure 4-11 Removing the base assembly (1)

3. Remove the **dock cover** (no-dock model only) and following **screws** securing the base assembly and cover assembly.

Dock model

- M2.5×6B      FLAT HEAD screw      ×15 (Described as “6” in the figure)
- M2.5×4B      FLAT HEAD screw      ×5 (Described as “4” in the figure)

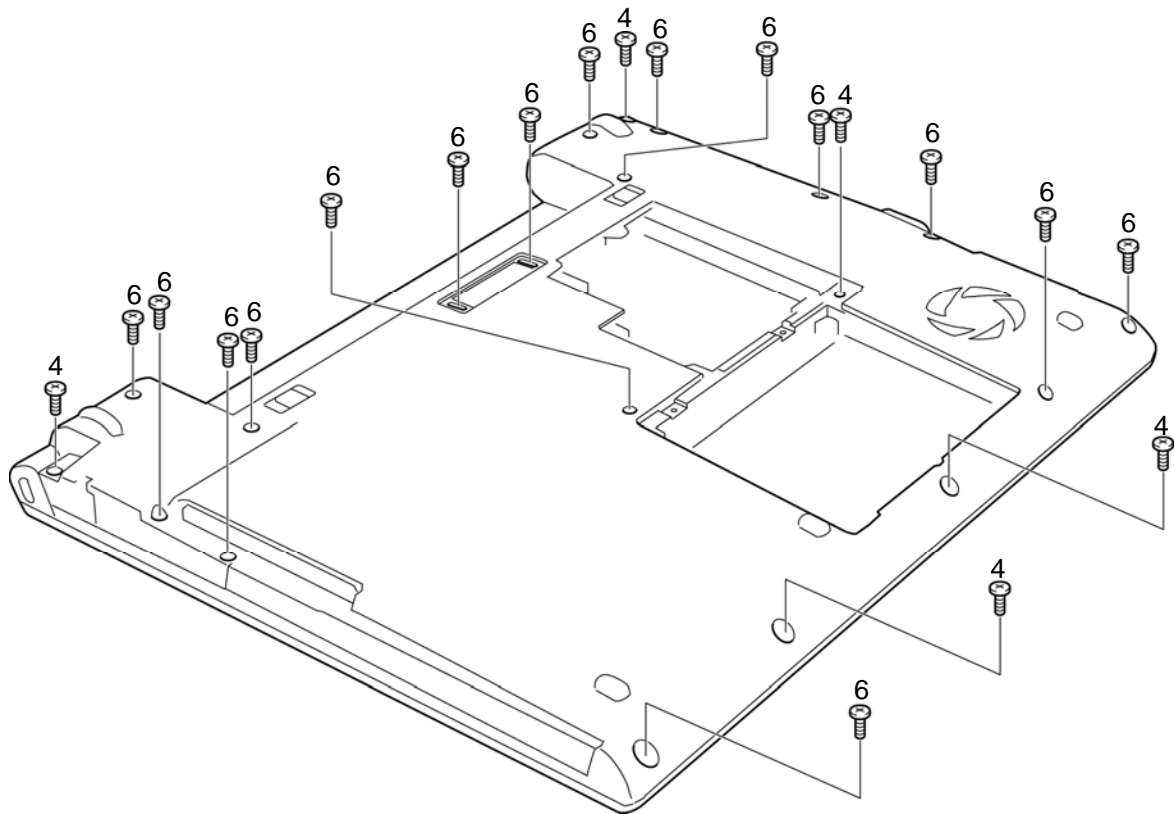


Figure 4-12 Removing the base assembly (2)

No-Dock model

- M2.5×6B FLAT HEAD screw ×13 (Described as “6” in the figure)
- M2.5×4B FLAT HEAD screw ×5 (Described as “4” in the figure)
- M2.5×12B FLAT HEAD screw ×2 (Described as “12” in the figure)

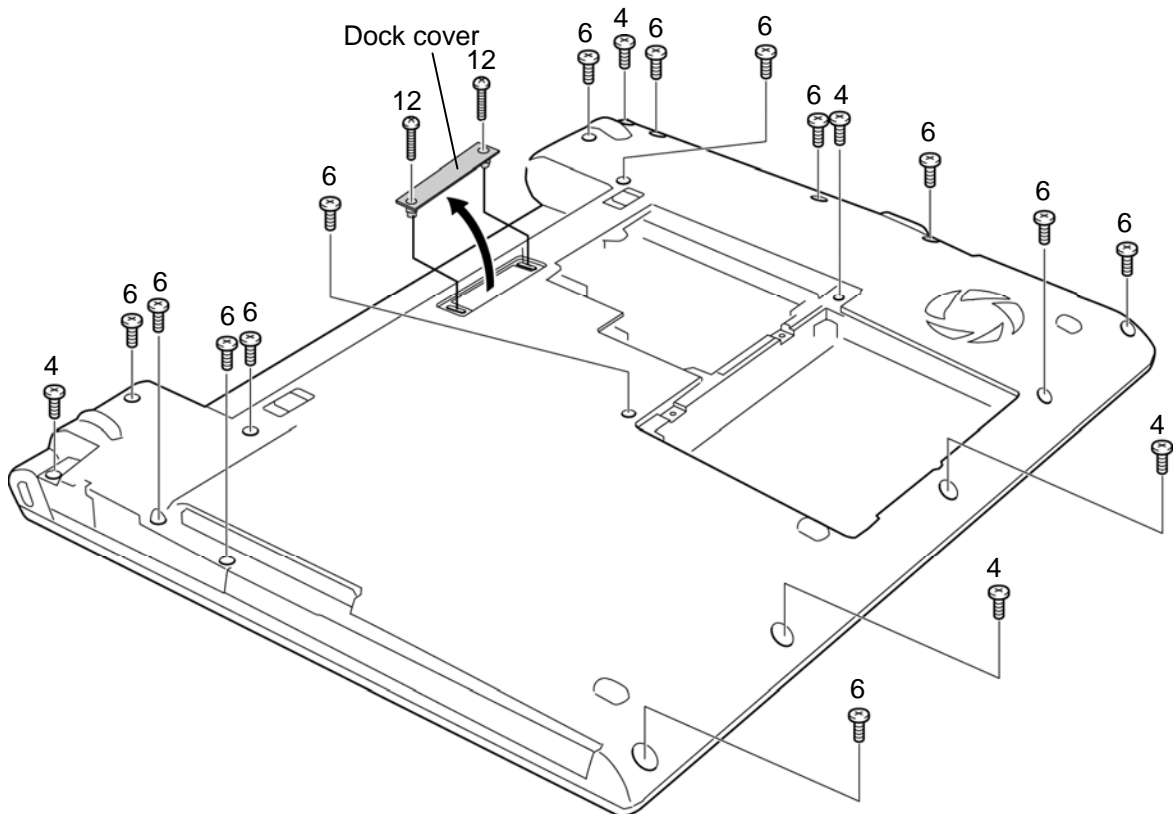


Figure 4-13 Removing the base assembly (3)

4. Remove the **base assembly** in the direction as shown in the figure below.

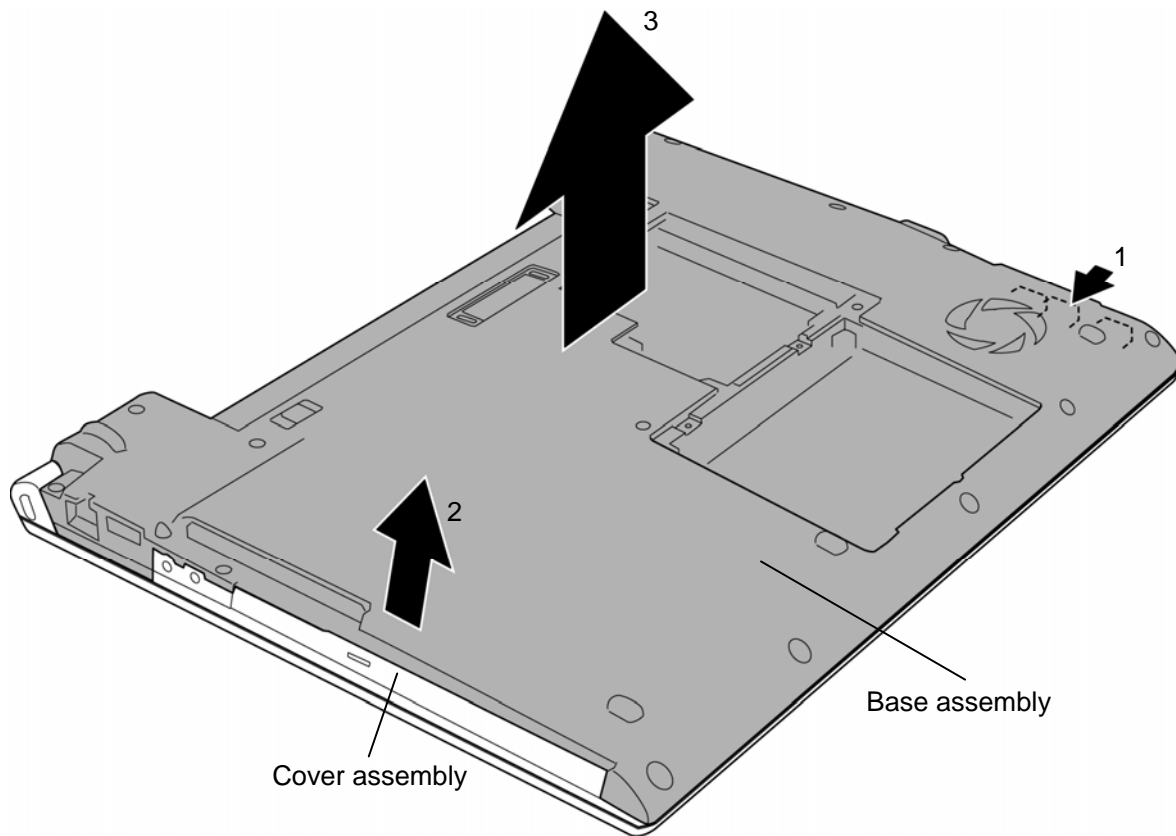



Figure 4-14 Removing the base assembly (4)

### Installing the Base assembly

To install the base assembly, follow the steps below and refer to Figure 4-11 to 4-14.

1. Set the **base assembly** to the cover assembly.

**NOTE:** Set the base assembly as shown in the figure below.

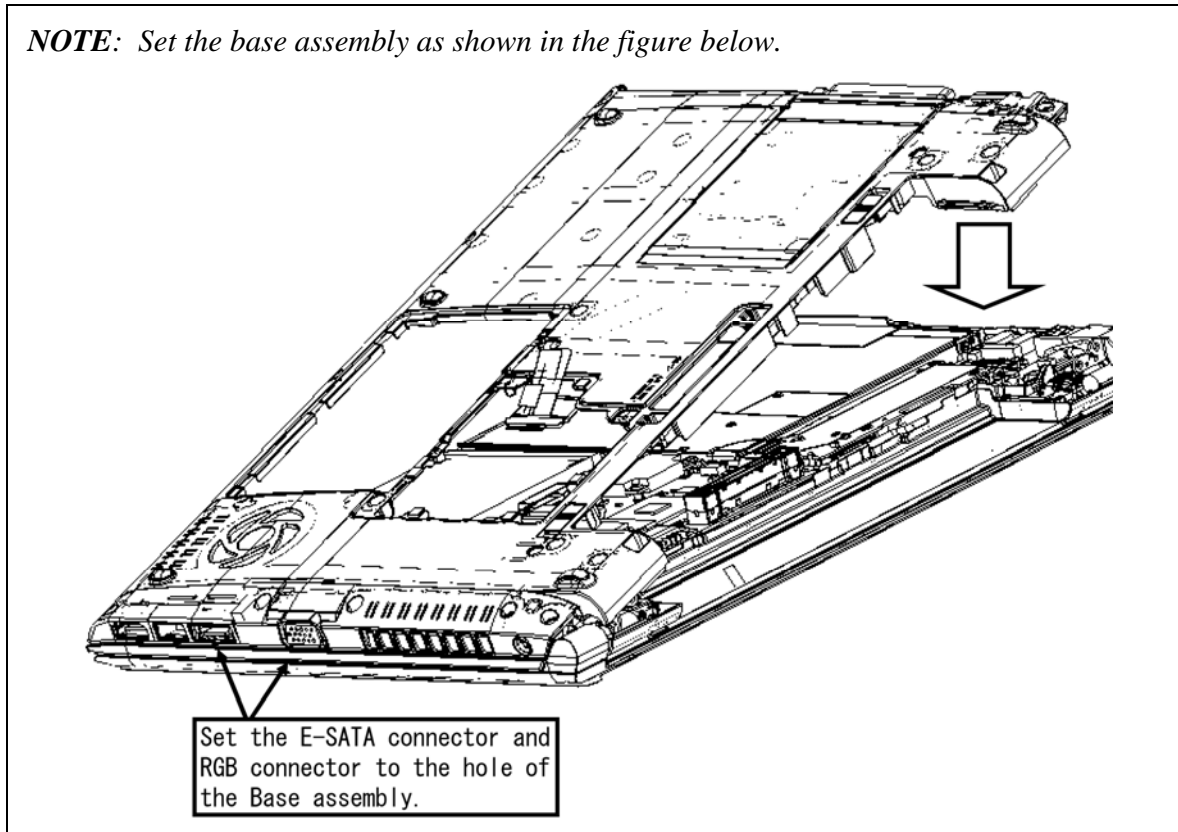

2. Secure the base assembly and cover assembly with the following **screws** and set the **dock cover** (No-dock model only) to the base assembly.

#### Dock model

- M2.5×6B FLAT HEAD screw ×15 (Described as “6” in the Figure 4-12)
- M2.5×4B FLAT HEAD screw ×5 (Described as “4” in the Figure 4-12)

#### No-Dock model

- M2.5×6B FLAT HEAD screw ×13 (Described as “6” in the Figure 4-13)
- M2.5×4B FLAT HEAD screw ×5 (Described as “4” in the Figure 4-13)
- M2.5×12B FLAT HEAD screw ×2 (Described as “12” in the Figure 4-13)

3. Connect the **ExpressCard FPC** to the connector **CN2520** on the system board and insert the **tab** under the cover.

## 4.9 ExpressCard slot

### Removing the ExpressCard slot

To remove the ExpressCard slot, follow the steps below and refer to Figure 4-15.

1. Remove the following **screws** securing the ExpressCard slot.
  - M2×4C S-THIN HEAD screw ×2
  - M2×3B S-THIN HEAD screw ×2
2. Peel the **EXP Card FPC** from the **D-stick tape** and remove the **ExpressCard slot** from the base assembly.

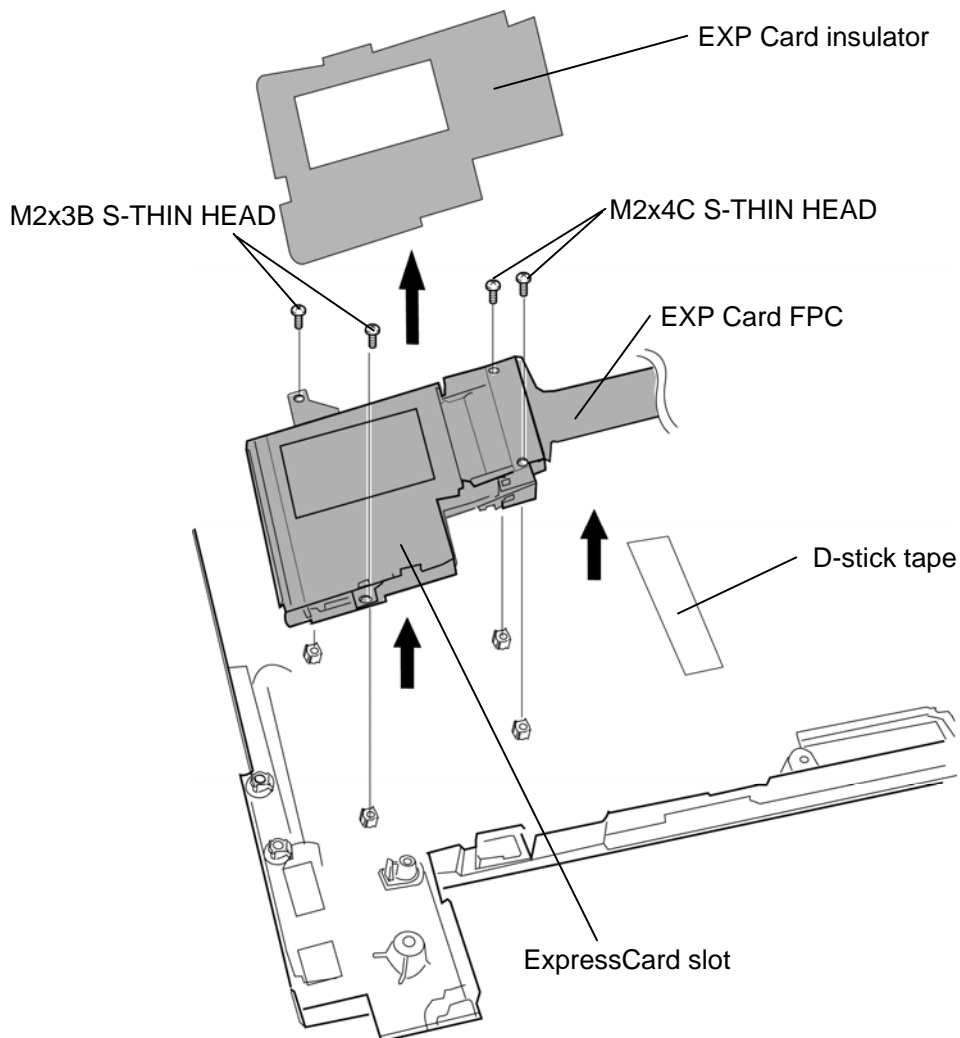


Figure 4-15 Removing the ExpressCard slot

## Installing the ExpressCard slot


To install the ExpressCard slot, follow the steps below and refer to Figure 4-15.

1. Set the **ExpressCard slot** to the base assembly and secure it with the following screws.

- M2×4C      S-THIN HEAD screw      ×2
- M2×3B      S-THIN HEAD screw      ×2


**NOTE:** When replacing the ExpressCard slot with a new one, stick the EXP Card insulator to the ExpressCard slot in place.

When replacing the base assembly with a new one, stick the cushion to the base assembly in place.

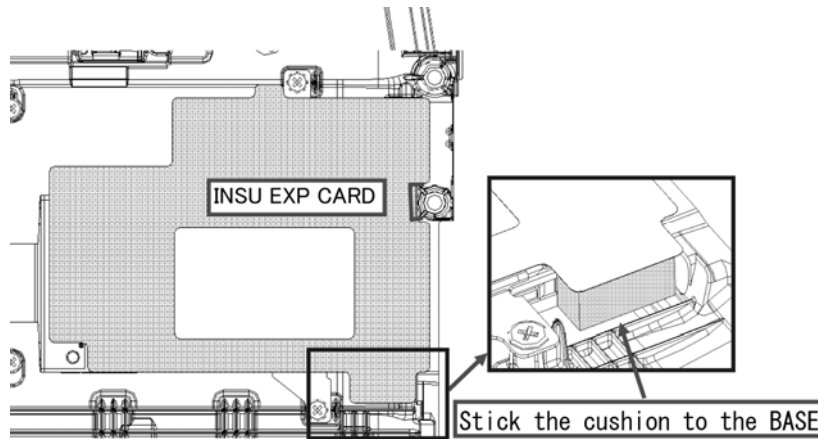

2. Stick the **ExpressCard FPC** to the base assembly (D-stick tape).

**NOTE:** Stick the ExpressCard FPC to the base assembly as shown in the figure below.

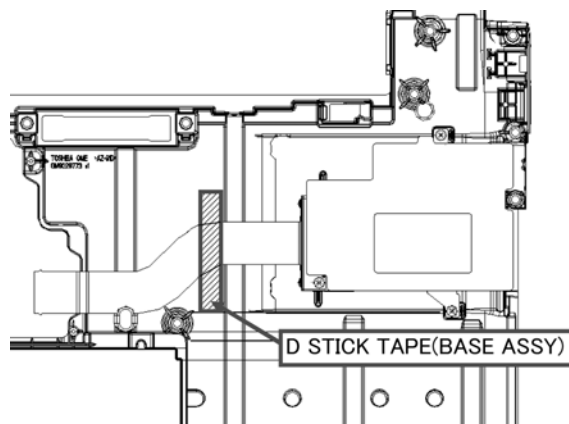



## 4.10 Battery lock

### Removing the Battery lock

To remove the battery lock, follow the steps below and refer to Figure 4-16.

1. Remove the **battery locks** while pushing hooks inside to release them.

**CAUTION:** When removing the battery lock L, be careful not to lose the battery lock spring.

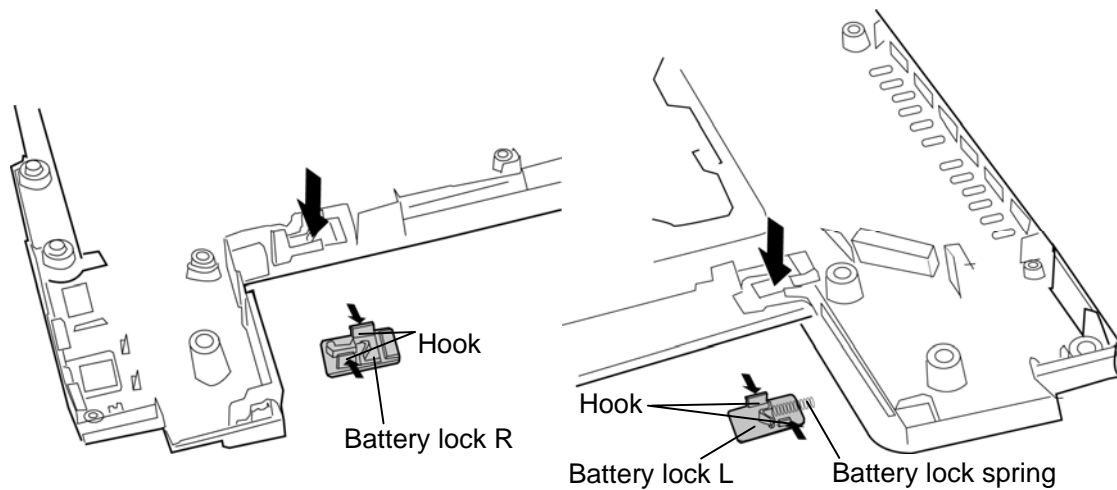


Figure 4-16 Removing the battery lock

### Installing the Battery lock

To install the battery lock, follow the steps below and refer to Figure 4-16.

1. Set (push) the **battery locks** to the base assembly from the bottom until the **hooks** are engaged.

**CAUTION:** When installing the battery locks, make sure that the direction of installing is correct. After installing, check that the battery locks are moved properly.

## 4.11 3G card

### Removing the 3G card

To remove the 3G card, follow the steps below and refer to Figure 4-17 to 4-22.

**NOTE:** In the models without the 3G card, *SQUARE CUSHION* is put on the cover assembly.

1. Disconnect the **USB 3.0 FPC** from the connector **CN9671** on the sound board and **CN9571** on the system board. (USB 3.0 model only)

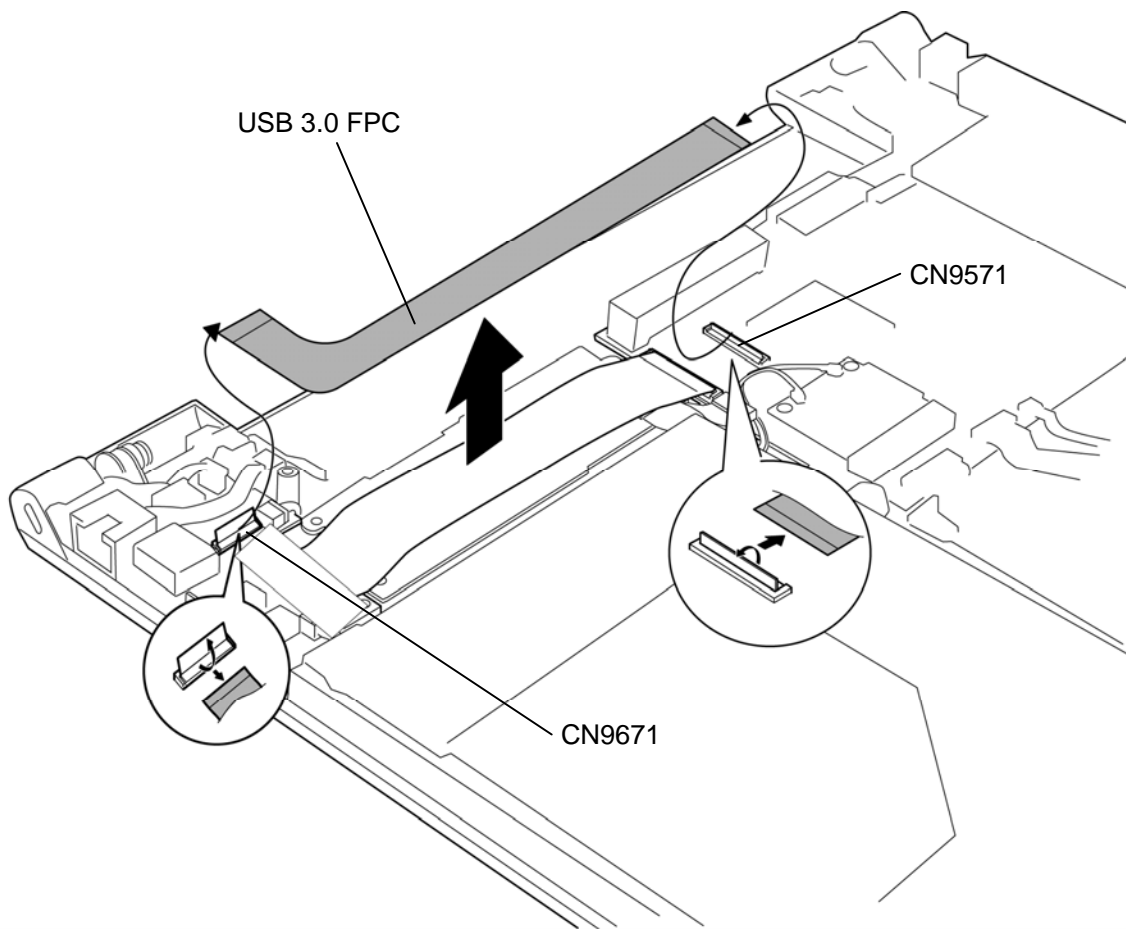


Figure 4-17 Removing the USB 3.0 FPC

2. Peel off the **acetate tape** and disconnect the **sound board FPC** from the connector **CN9670** on the sound board and **CN9570** on the system board.

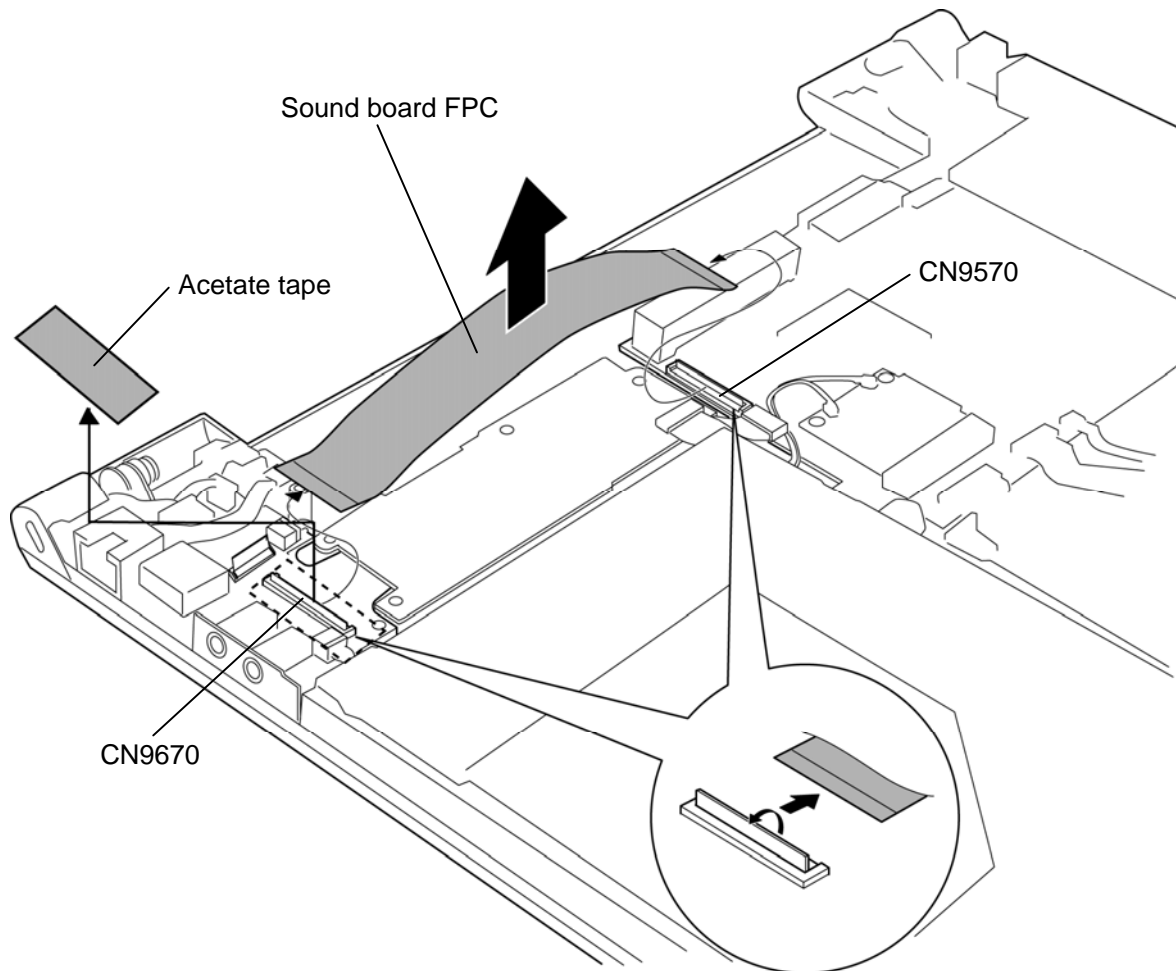


Figure 4-18 Removing the sound board FPC

3. Remove the following **screws** securing the **3G board**.

- M2×4C S-THIN HEAD screw ×3

4. Disconnect the **3G board FPC** from the connector **CN9720** on the 3G board.

<In models with 3G board and ExpressCard/Smart Card>

5. Turn over the 3G board and disconnect the **3G antenna cables** on the connectors (red cable to MAIN and blue cable to AUX) on the back of the 3G board.

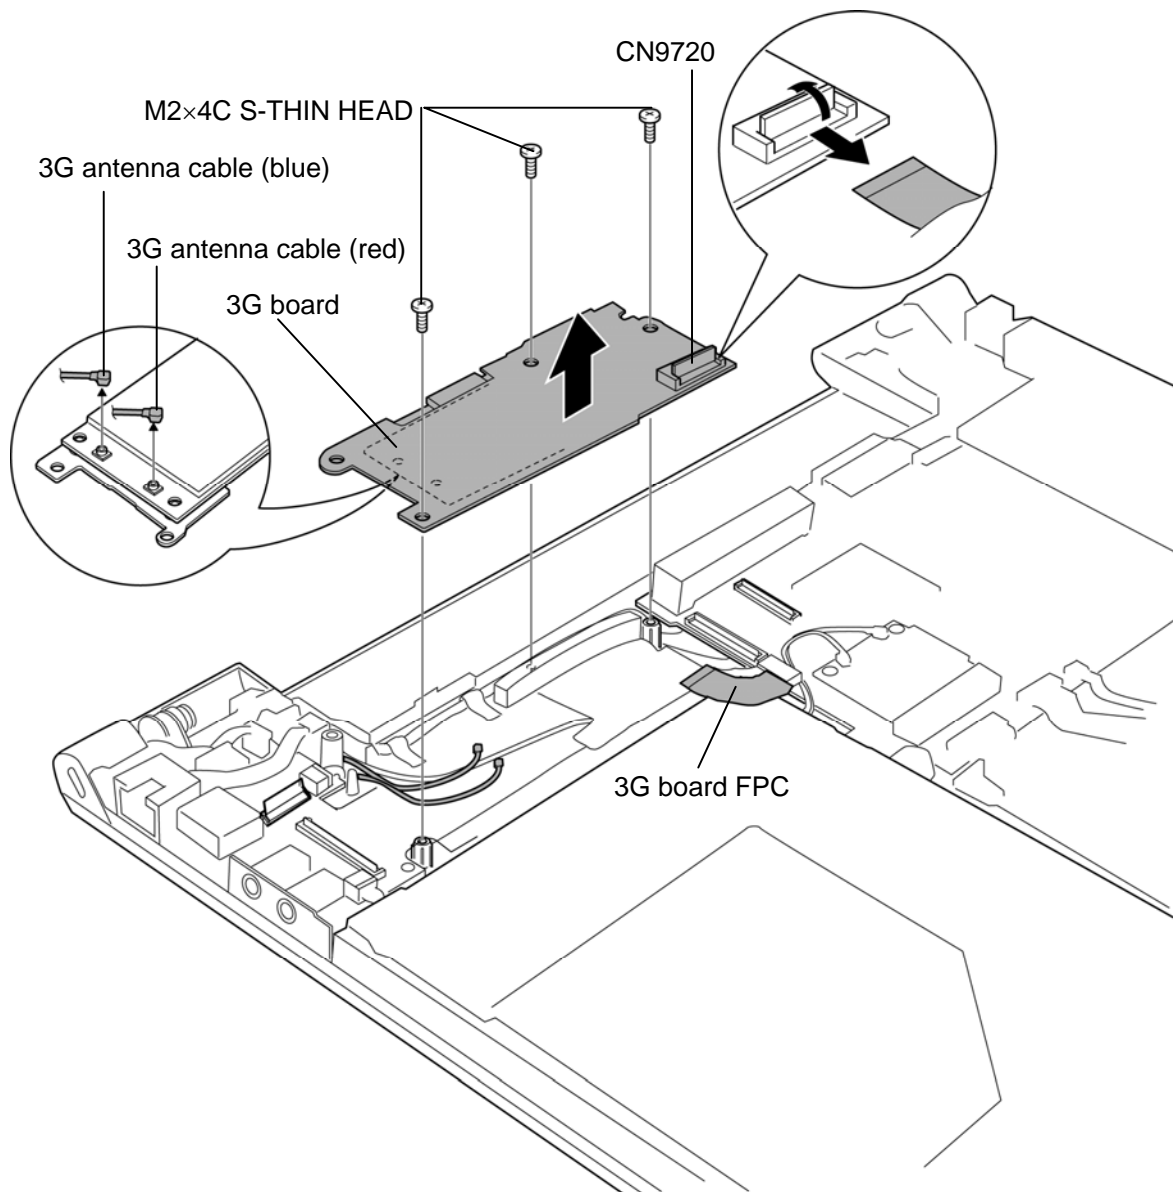


Figure 4-19 Removing the 3G board (ExpressCard/Smart Card model) (1)

<In models with 3G board and without ExpressCard/Smart Card >

5. Disconnect the **3G antenna cables** on the connectors (red cable to MAIN and blue cable to AUX) on the 3G card.

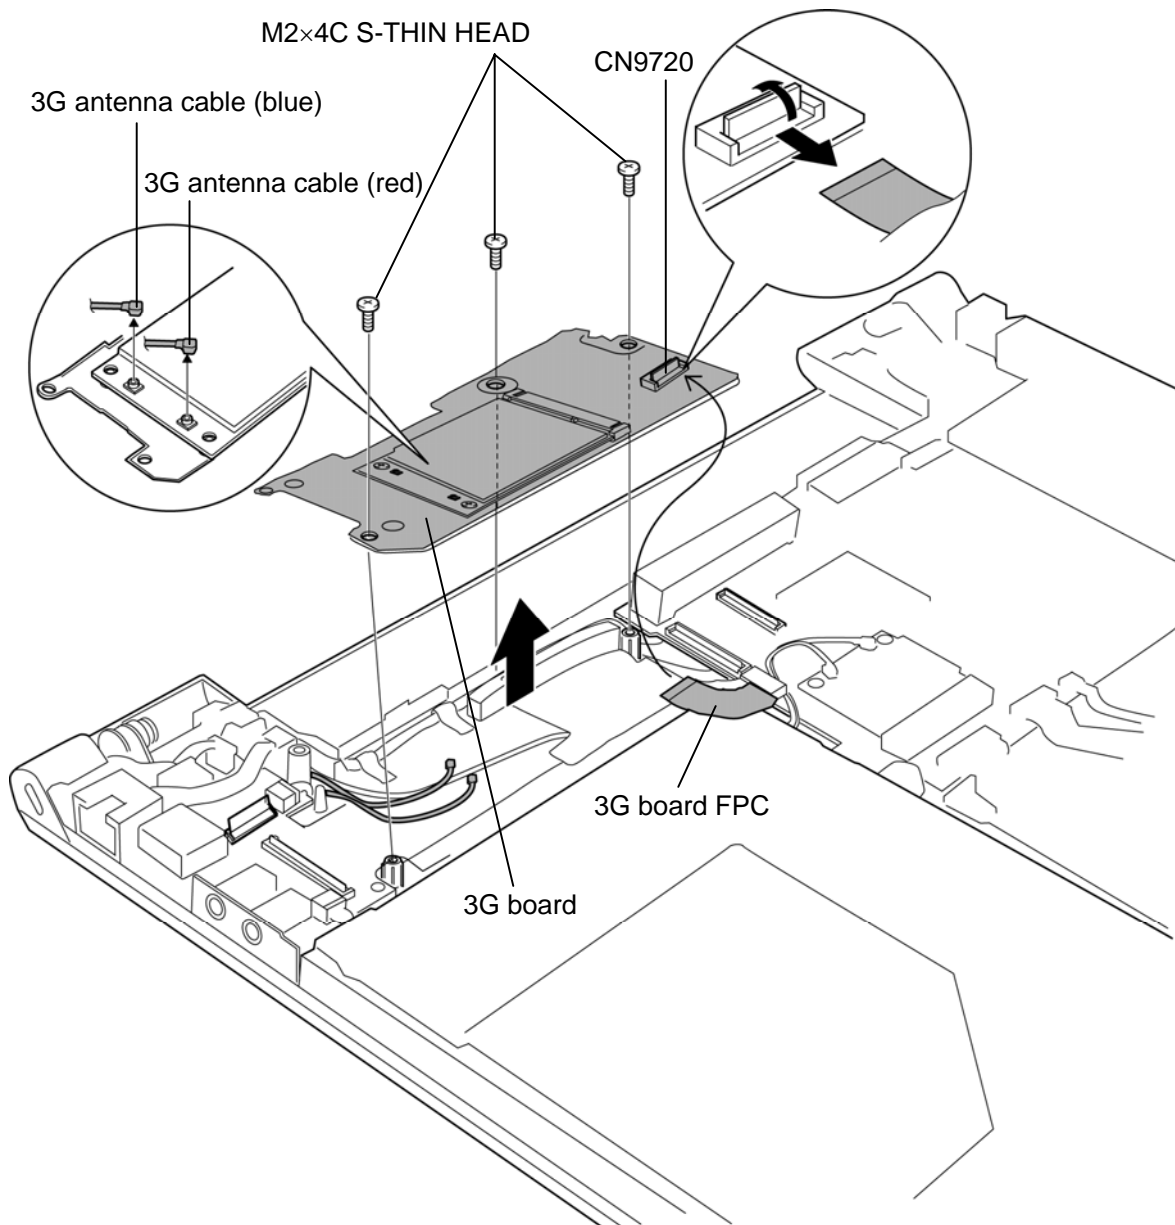


Figure 4-20 Removing the 3G board (No-ExpressCard/Smart Card model) (2)

6. Remove the following **screws** and disconnect the **3G card** from the connector on the 3G board.

- M2×3B S-THIN HEAD screw ×2

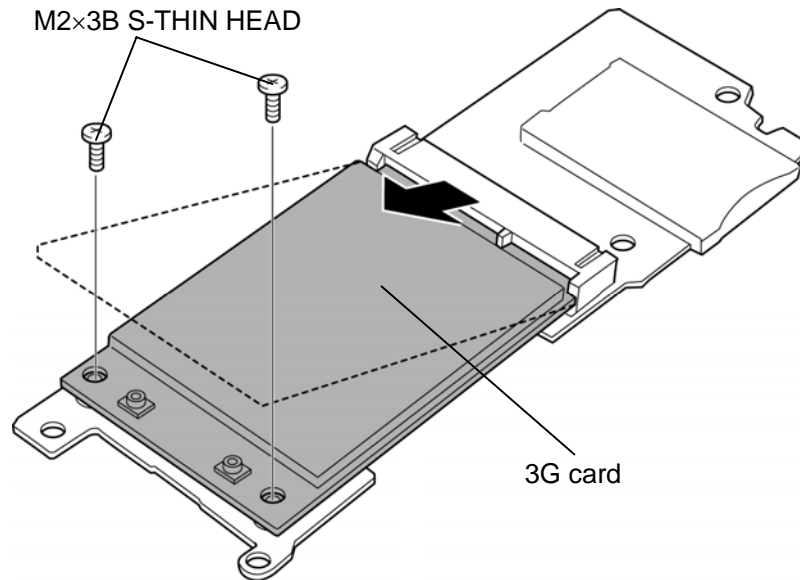


Figure 4-21 Removing the 3G card (ExpressCard/Smart Card model) (1)

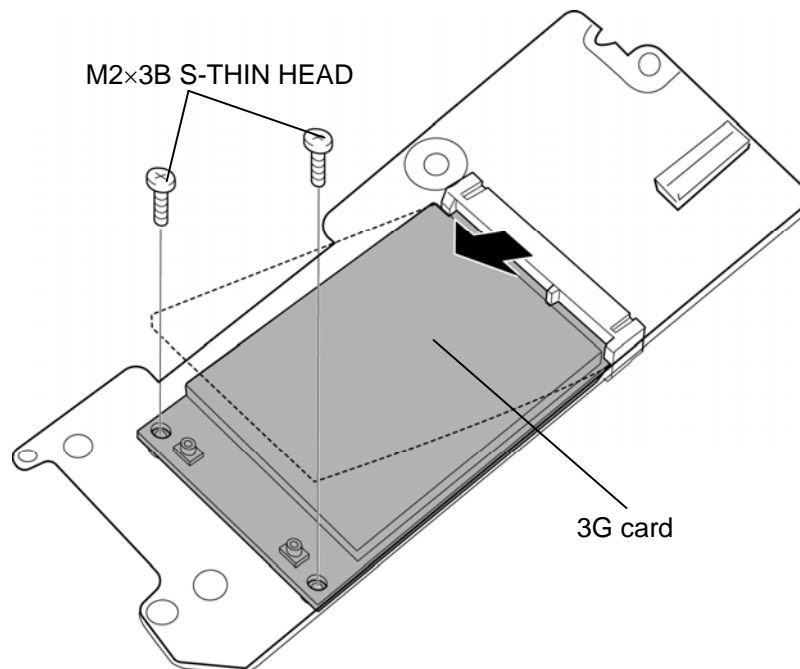


Figure 4-22 Removing the 3G card (No-ExpressCard/Smart Card model) (2)

### Installing the 3G card

To install the 3G card, follow the steps below and refer to Figure 4-17 to 4-22.

1. Insert the **3G card** to the connector on the 3G board slantwise and press it to connect firmly.
2. Secure the **3G card** with the following **screws**.
  - M2×3B          S-THIN HEAD screw          ×2
3. Connect the **3G antenna cables** to the connectors on the 3G card.
4. Turn over the 3G board. (In models with 3G board and ExpressCard/Smart Card only)
5. Set the 3G board to the cover assembly.
6. Connect the **3G board FPC** to the connector **CN9720** on the 3G board.
7. Secure the 3G board with the following **screws**.
  - M2×4C          S-THIN HEAD screw          ×3
8. Arrange the **3G antenna cables** in place.
9. Connect the **sound board FPC** to the connector **CN9670** on the sound board and **CN9570** on the system board and stick the **acetate tape** in place.
10. Connect the **USB 3.0 FPC** to the connector **CN9671** on the sound board and **CN9571** on the system board. (USB 3.0 model only)

**CAUTION:** When replacing the USB 3.0 FPC with a new one, use the USB 3.0 FPC on which “AL-S” is printed. Do not use the parts for PORTÉGÉ R700.

## 4.12 Optical disk drive (DVD-Super Multi drive)/SD board

### Removing the Optical disk drive/SD board

To remove the optical disk drive/SD board, follow the steps below and refer to Figure 4-23 to 4-26.

**CAUTION:** When the optical disk inside the optical disk drive can not be ejected because of some failure, open the disc tray by inserting a slender object (about 15 mm) such as a straightened paper clip into the eject hole near the eject button.

1. Stand the **optical disk drive**. (In models without the optical disk drive, remove the dummy ODD while releasing the latches.)

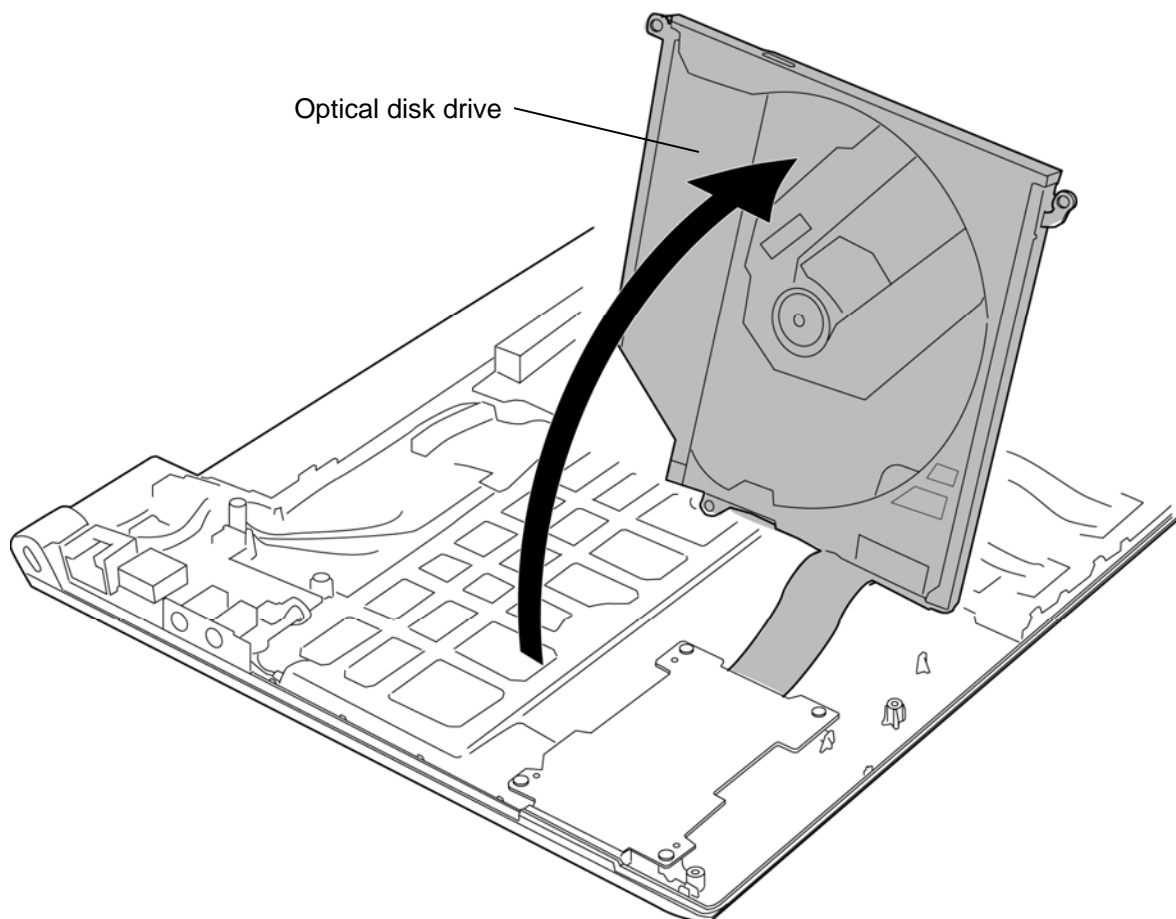


Figure 4-23 Removing the optical disk drive/SD board (1)



2. Remove the following **screws** securing the SD board.
  - M2×3B S-THIN HEAD ×4
3. Disconnect the **inner harness** from the connector **CN6070** on the back of the SD board.
4. Push the gasket and lift up the **optical disk drive** and **SD board** to remove. (SD board FPC is fixed to the cover assembly by the **double-sided tapes** (D-tape circle).)


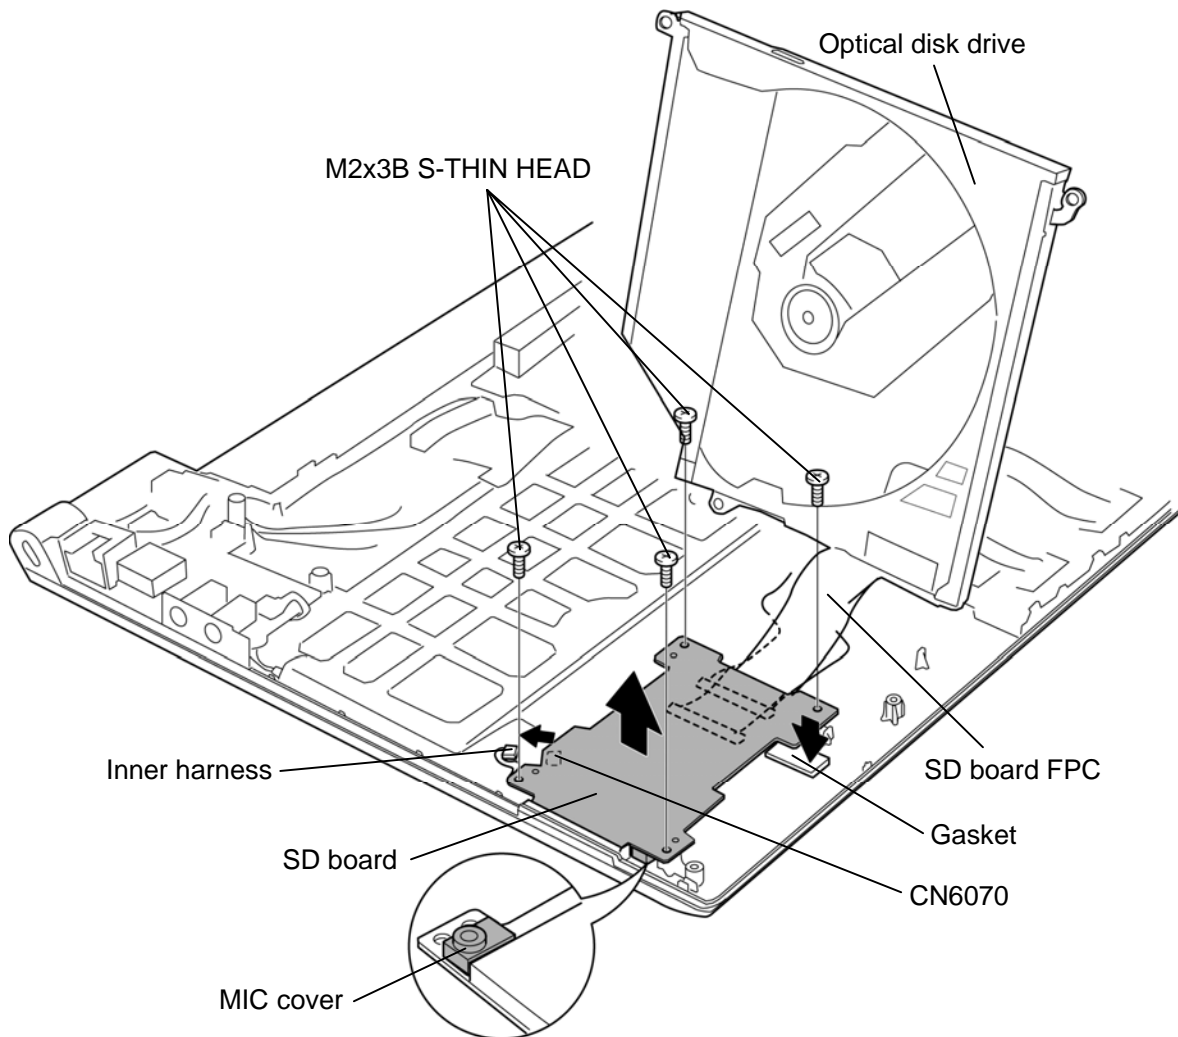


Figure 4-24 Removing the optical disk drive/SD board (2)

5. Disconnect the **SD board FPC** and **ODD FPC** from the connectors **CN9710** and **CN1820** on the SD board.

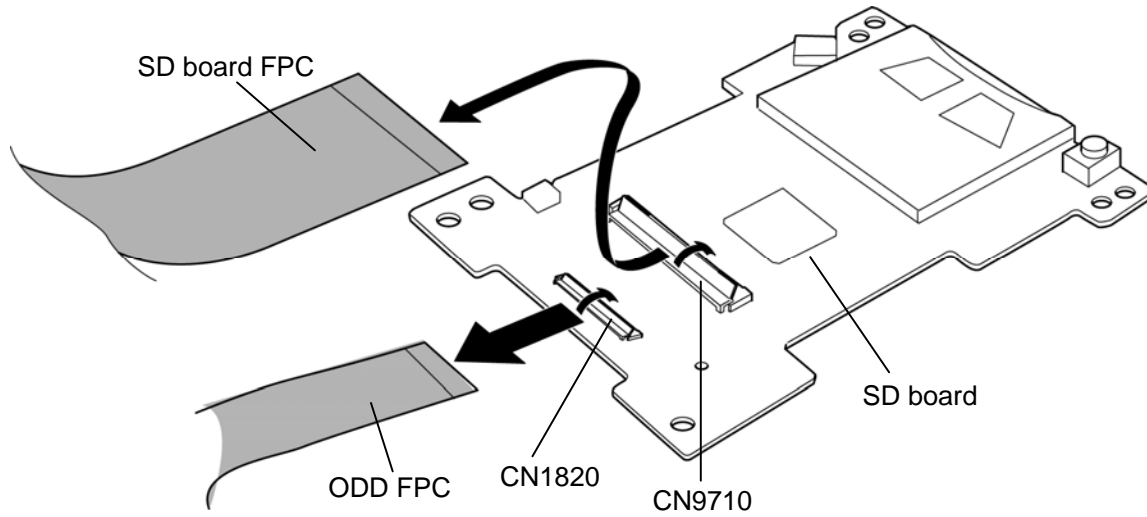

*Figure 4-25 Removing the optical disk drive/SD board (3)*

6. Remove the following screws, ODD FPC, ODD rear plate, ODD side plate and ODD side plate F.

- M2×4C S-THIN HEAD ×2
- M2×3B S-THIN HEAD ×3


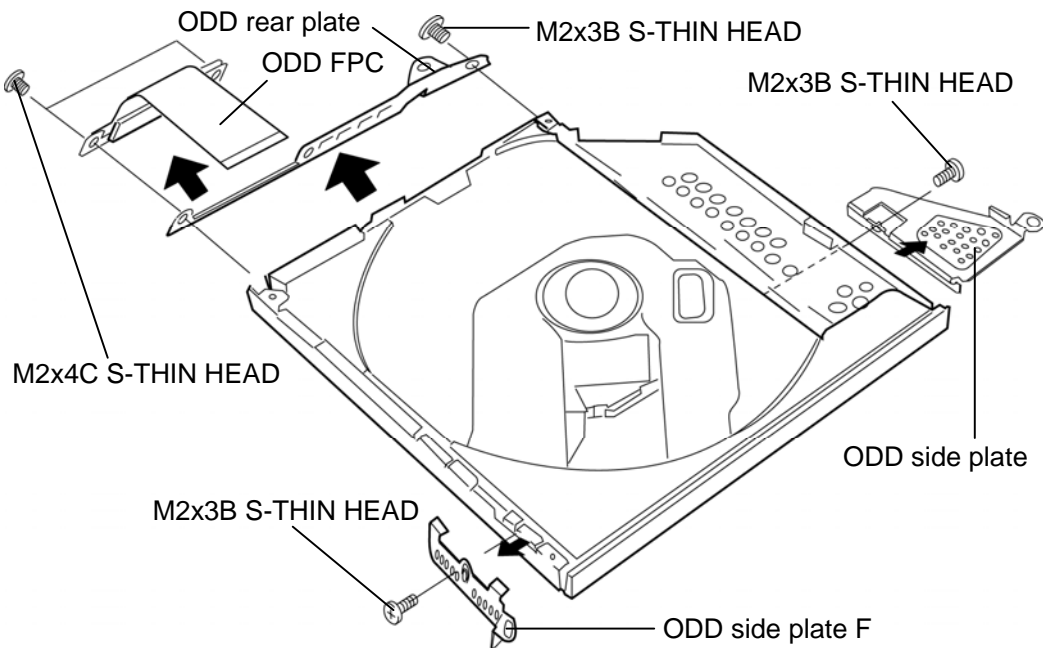


Figure 4-26 Removing the optical disk drive/SD board (4)

### Installing the optical disk drive/SD board

To install the optical disk drive/SD board, follow the steps below and refer to Figure 4-23 to 4-26.

**NOTE:** When installing a new optical disk drive, set the ODD bezel to the optical disk drive while securing the latches.

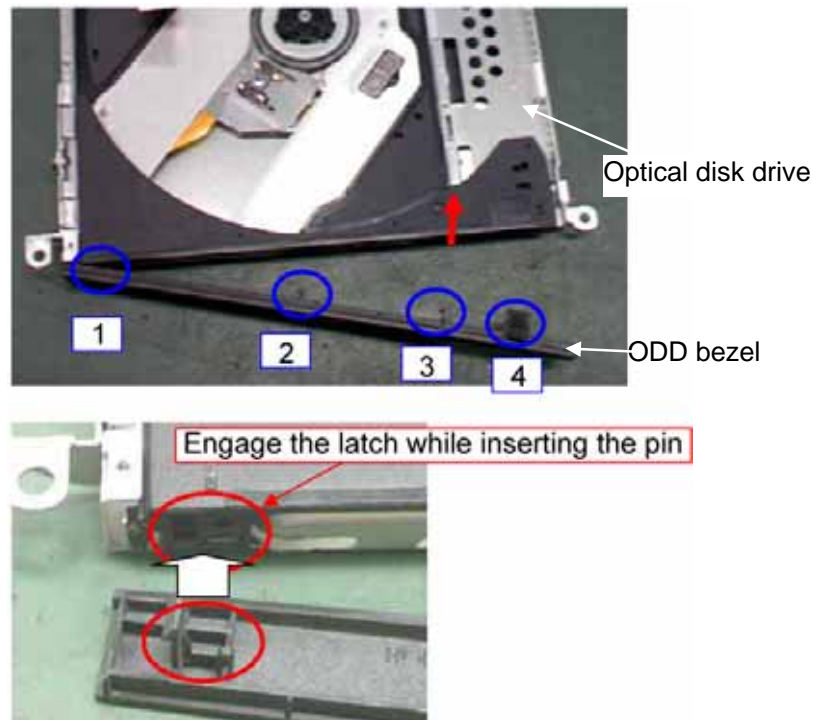

1. Set the **ODD FPC**, **ODD rear plate**, **ODD side plate** and **ODD side plate F** to the optical disk drive and secure them with the following screws.
  - M2×4C      S-THIN HEAD      ×2
  - M2×3B      S-THIN HEAD      ×3
2. Connect the **SD board FPC** and **ODD FPC** to the connectors **CN9710** and **CN1820** on the SD board.

**NOTE:** When replacing a SD board with a new one, set the **MIC cover** to the SD board in place.

**CAUTION:** When replacing the SD board FPC with a new one, use the SD board FPC on which printed "AL-S" is printed. Do not use the parts for PORTÉGÉ R700.

3. Peel off the double-side tapes (D-tape circle) on the cover assembly.
4. Stick new double-sided tapes (D-tape circle) and peel off the separators.
5. Stand the optical disk drive and set the **SD board** to the cover assembly in place.
6. Connect the **inner harness** to the connector **CN6070** on the back of the SD board.
7. Secure the SD board with the following **screws**.
  - M2×3B      S-THIN HEAD      ×4
8. Stick the **SD board FPC** on the **double-sided tapes**.
9. Set the **optical disk drive** in place.

**CAUTION:** *The laser beam goes out when turning on the power of the computer, because there is no cover on the optical disk drive. The power must be turned off when you remove or install the optical disk drive.*

## 4.13 Wireless LAN card

### Removing the Wireless LAN card

To remove the wireless LAN card, follow the steps below and refer to Figure 4-27.

1. Remove the following **screw** and disconnect the **wireless LAN card** from the connector on the system board.
  - M2×3B S-THIN HEAD screw ×1
2. Disconnect the **wireless LAN antenna cables** from the wireless LAN card (white cable from “A” or “1” and black cable from “B” or “2”) using an antenna coaxial cable disconnecter.

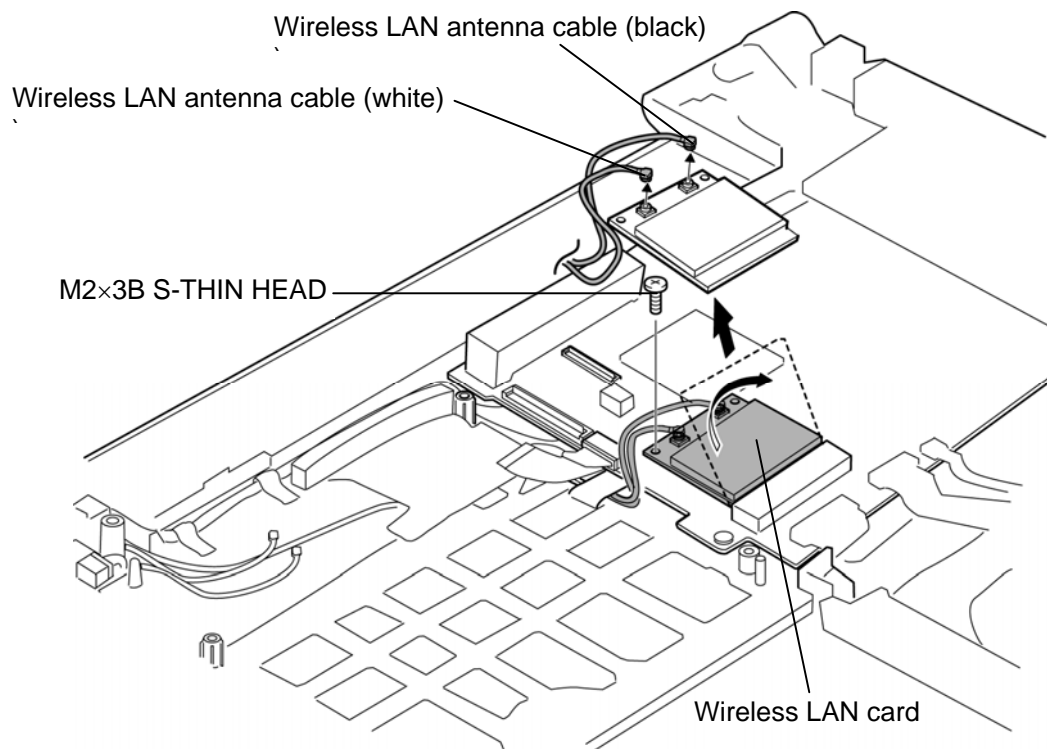


Figure 4-27 Removing the wireless LAN card

**Installing the Wireless LAN card**

To install the wireless LAN card, follow the steps below and refer to Figure 4-27.

1. Connect the **wireless LAN antenna cables** to the wireless LAN card (white cable to “**A**” or “**1**” and black cable to “**B**” or “**2**”) using an antenna coaxial cable disconnecter.
2. Insert the **wireless LAN card** to the connector on the system board slantwise.
3. Push down the wireless LAN card and secure it with the following **screw**.
  - M2×3B                      S-THIN HEAD screw                      ×1

## 4.14 DC fan

### Removing the DC fan

To remove the DC fan, follow the steps below and refer to Figure 4-28.

1. Peel off the **insulator** and remove the following **screws** securing the DC fan.
  - M2.5×4B      FLAT HEAD      ×2
2. Disconnect the **fan harness** from the connector **CN3380** on the system board.
3. Remove the **DC fan** from the slot.

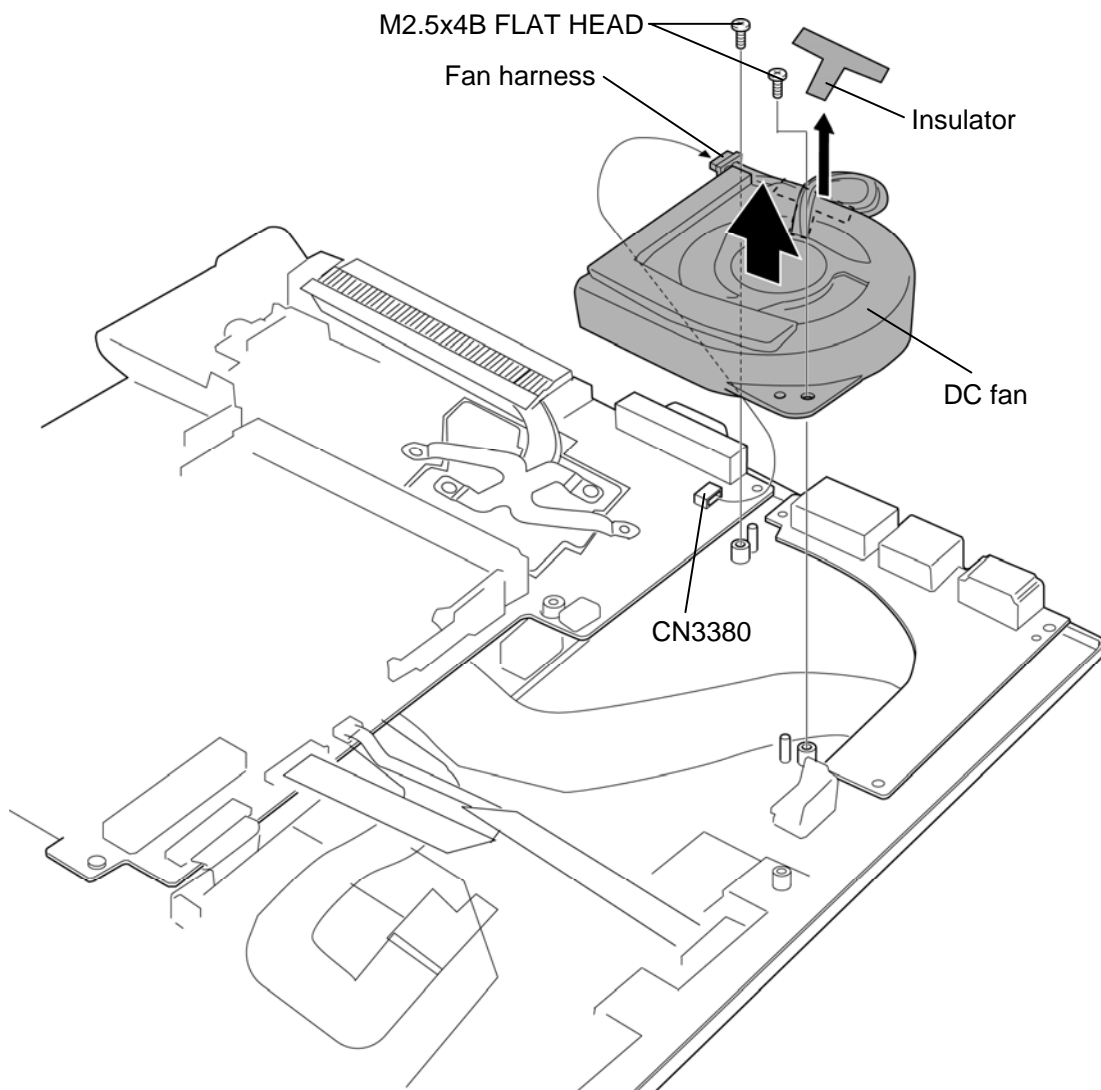


Figure 4-28 Removing the DC fan



**Installing the DC fan**

To install the DC fan, follow the steps below and refer to Figure 4-28.

1. Connect the **fan harness** to the connector **CN3380** on the system board.
2. Set the **DC fan** in place and secure it with the following **screws**.
  - M2.5×4B      FLAT HEAD      ×2
3. Stick the **insulator** in place.

## 4.15 E-SATA board

### Removing the E-SATA board

To remove the E-SATA board, follow the steps below and refer to Figure 4-29.

1. Remove the following **screw** and **E-SATA board**.
  - M2×4C S-THIN HEAD ×1
2. Disconnect the **E-SATA board FPC** from the connector **CN9640** on the back of the E-SATA board. (E-SATA board FPC is fixed to the cover assembly by the **double-sided tapes** (D-tape circle).)

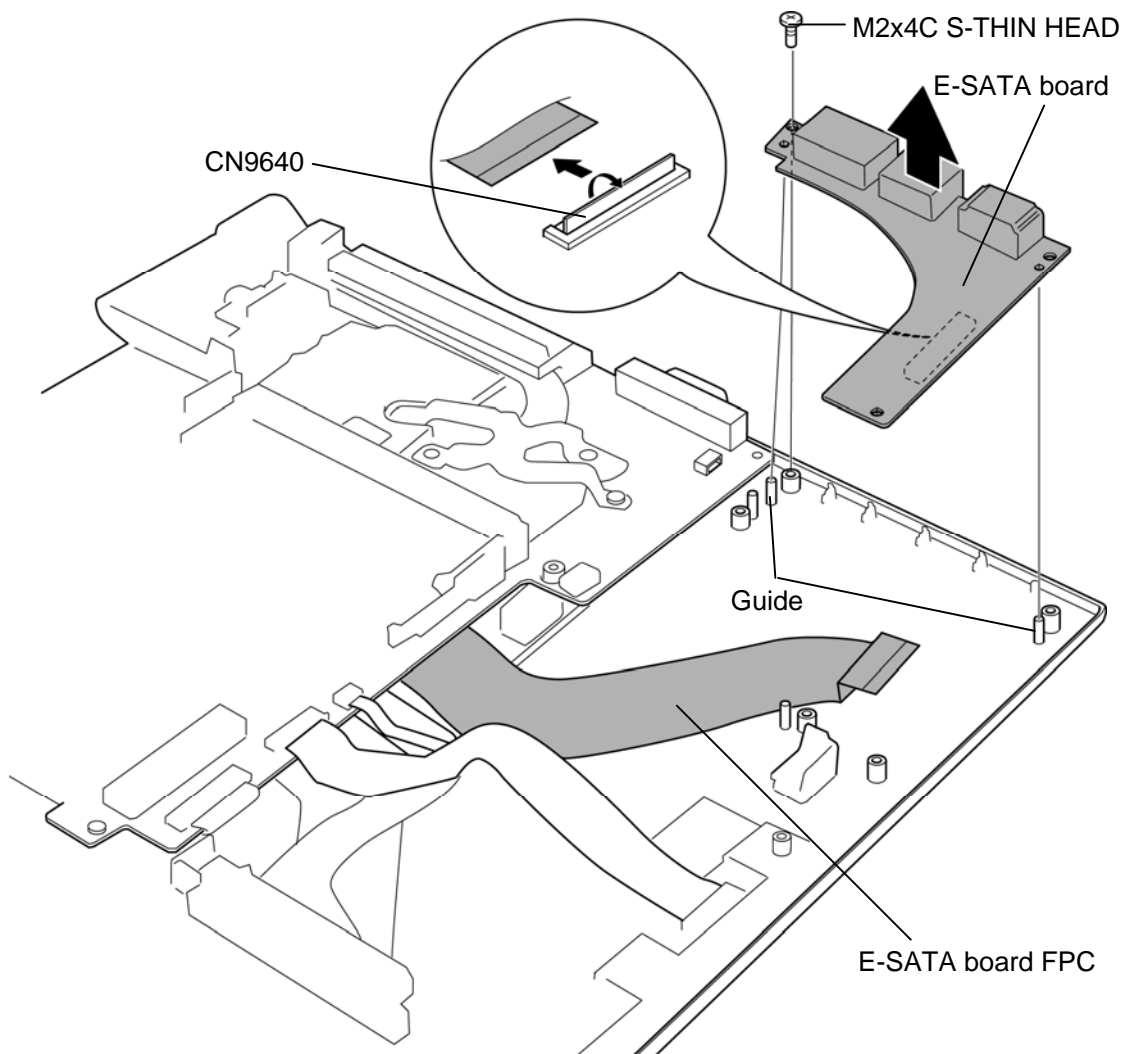


Figure 4-29 Removing the E-SATA board

**Installing the E-SATA board**

To install the E-SATA board, follow the steps below and refer to Figure 4-29.

1. Peel off the double-side tapes (D-tape circle) on the cover assembly.
2. Stick new double-sided tapes (D-tape circle) and peel off the separator.
3. Connect the **E-SATA board FPC** to the connector **CN9640** on the back of the E-SATA board.
4. Set the **E-SATA board** to the **guides** and secure it with the following **screw**.
  - M2×4C      S-THIN HEAD      ×1
5. Fix the **E-SATA board FPC** with the double sided tapes.

## 4.16 Fin

### Removing the Fin

To remove the fin, follow the steps below and refer to Figure 4-30.

1. Remove the following **screws** and **fin**.

- M2×3B S-THIN HEAD ×2

**NOTE:** When removing the fin, be sure to remove the screws in the reverse order of the number marked on the fin.

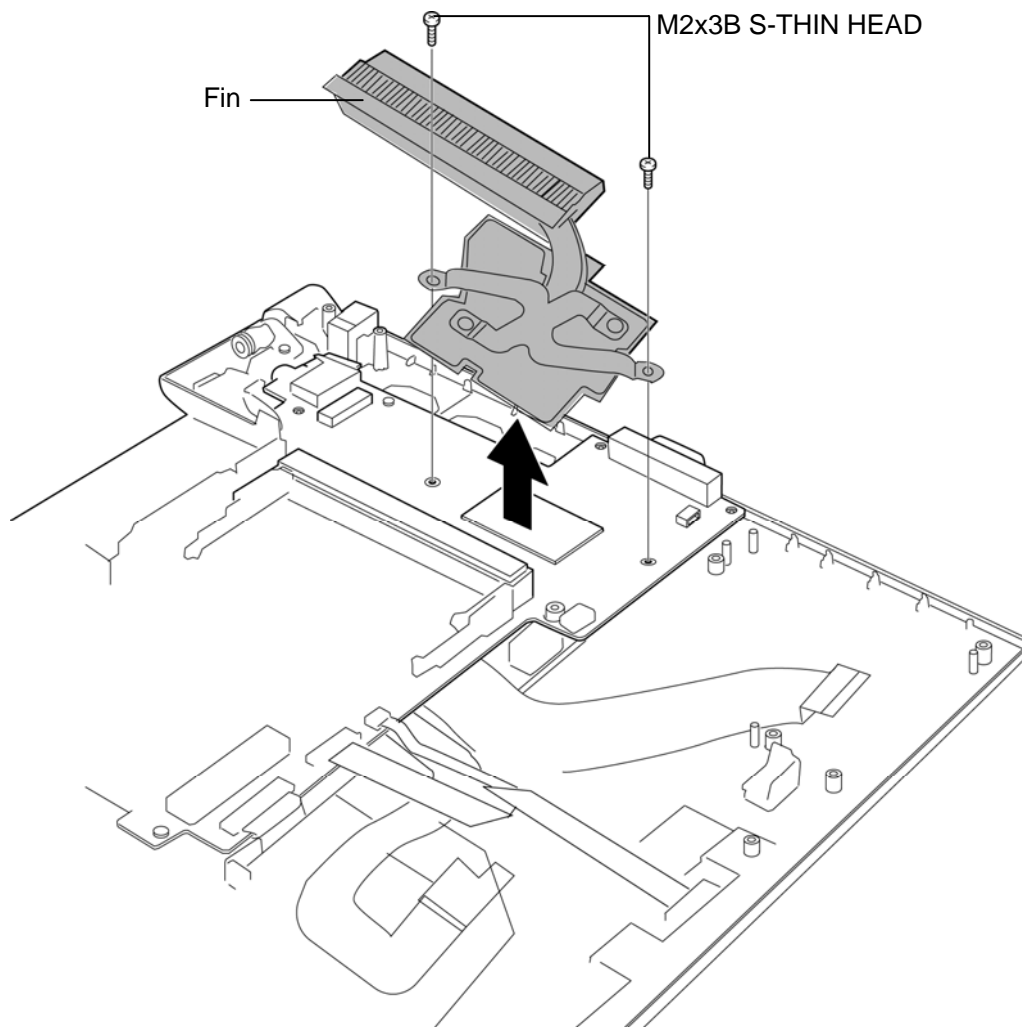


Figure 4-30 Removing the fin

### Installing the Fin

To install the fin, follow the steps below and refer to Figure 4-30.

1. When silicon grease is already applied to the CPU, wipe them off with a cloth in advance.
2. Apply new **grease** (Shin-Etsu Chemical Co. X-23-7921-5) on the CPU using a special syringe as shown in the following figure. Apply quarter of scale (0.25ml) of grease evenly on the CPU chip.
3. Set the **fin** in place and secure it with the following **screws**.

- M2×3B      S-THIN HEAD      ×2

**NOTE:** When securing the fin, be sure to secure the screws in the order of the number marked on the fin.

## 4.17 Bluetooth module

### Removing the Bluetooth module

To remove the Bluetooth module, follow the steps below and refer to Figure 4-31.

1. Turn up the **insulator**.
2. Disconnect the **Bluetooth harness** from the connector **CN4440** on the system board.
3. Disconnect the **Bluetooth antenna cable** from the connector on the back of the Bluetooth module.
4. Disconnect the **Bluetooth harness** from the connector on the Bluetooth module.

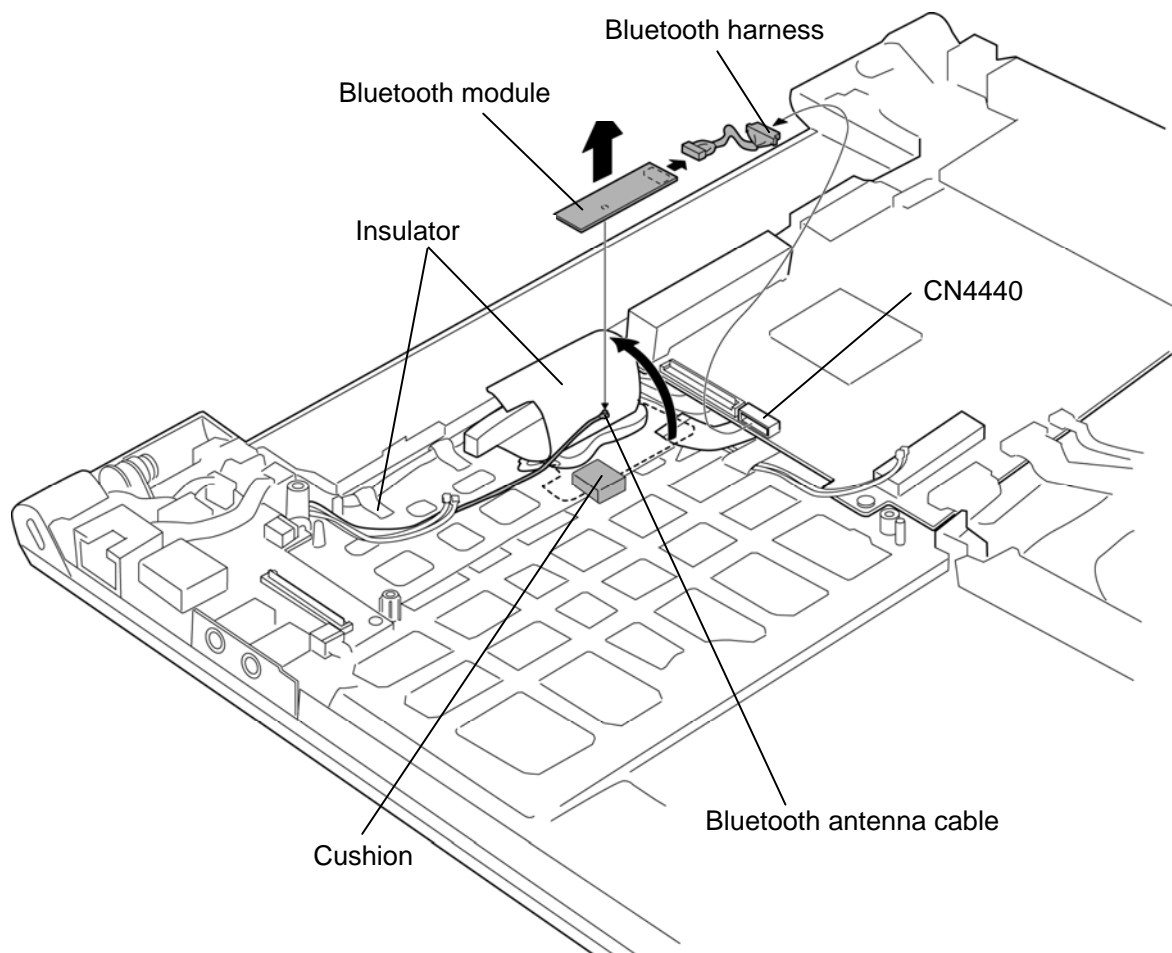


Figure 4-31 Removing the Bluetooth module

### Installing the Bluetooth module

To install the Bluetooth module, follow the steps below and refer to Figure 4-31.

1. Connect the **Bluetooth harness** to the connector on the Bluetooth module.
2. Connect the **Bluetooth antenna cable** to the connector on the back of the Bluetooth module.
3. Turn up the **insulator** and set the **Bluetooth module** in place.

<p><b>NOTE:</b> When replacing a cover assembly with a new one, stick the <b>cushion</b> to the cover assembly in place.</p>
--


4. Arrange the Bluetooth antenna cable in place.
5. Fix the Bluetooth module and Bluetooth antenna cable with the insulator.
6. Connect the **Bluetooth harness** to the connector **CN4440** on the system board.

## 4.18 System board

**CAUTION:** When replacing with a new system board, the following procedures must be executed.

- (1) Before replacing the system board, execute subtest02 “DMI information save” in 3.3 Setting of the hardware configuration of Chapter 3 Test program in order to save the DMI information from system board to floppy disk.
- (2) After replacing the system board, execute the subtest03 “DMI information recovery” and subtest01 “Entry of the DMI information” in order to copy the DMI information and system configuration information.
- (3) Also update the BIOS and EC/KBC with the latest ones according to the steps described in Appendix G and Appendix H.

When handling a system board, do not hold the area A and area B.  
When handling the RGB area of system board, handle it with both hands.

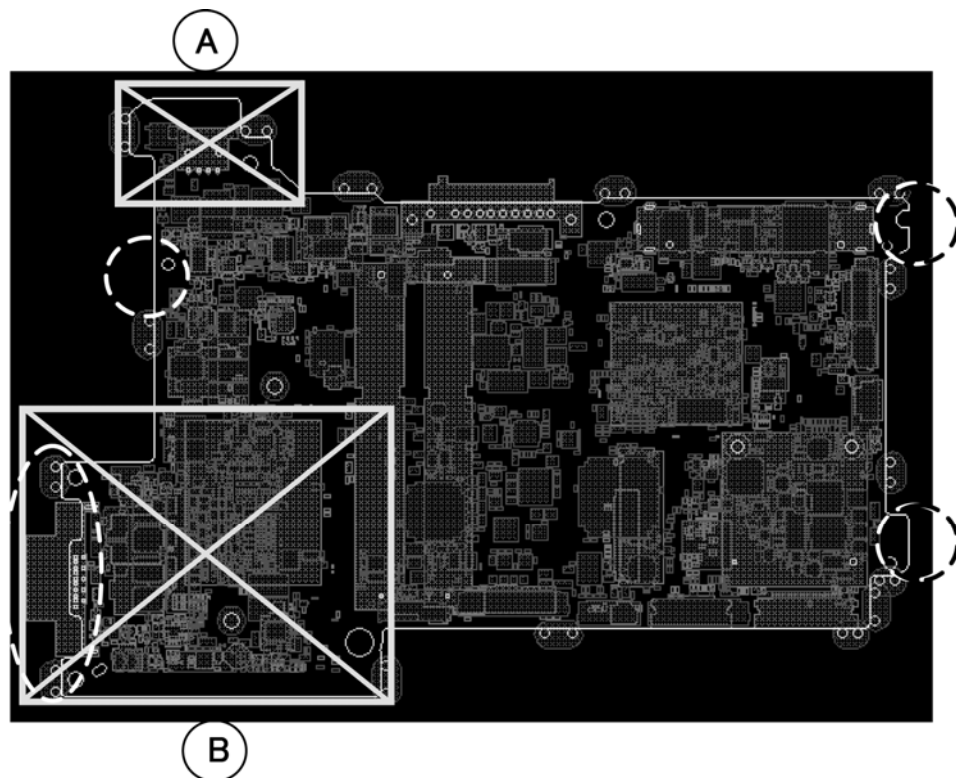



### Removing the System board

To remove the system board, follow the steps below and refer to Figure 4-32 to 4-37.

1. Peel off the **acetate tape**.
2. Turn up the **insulator** and take out the **RJ45 harness** from the slot.

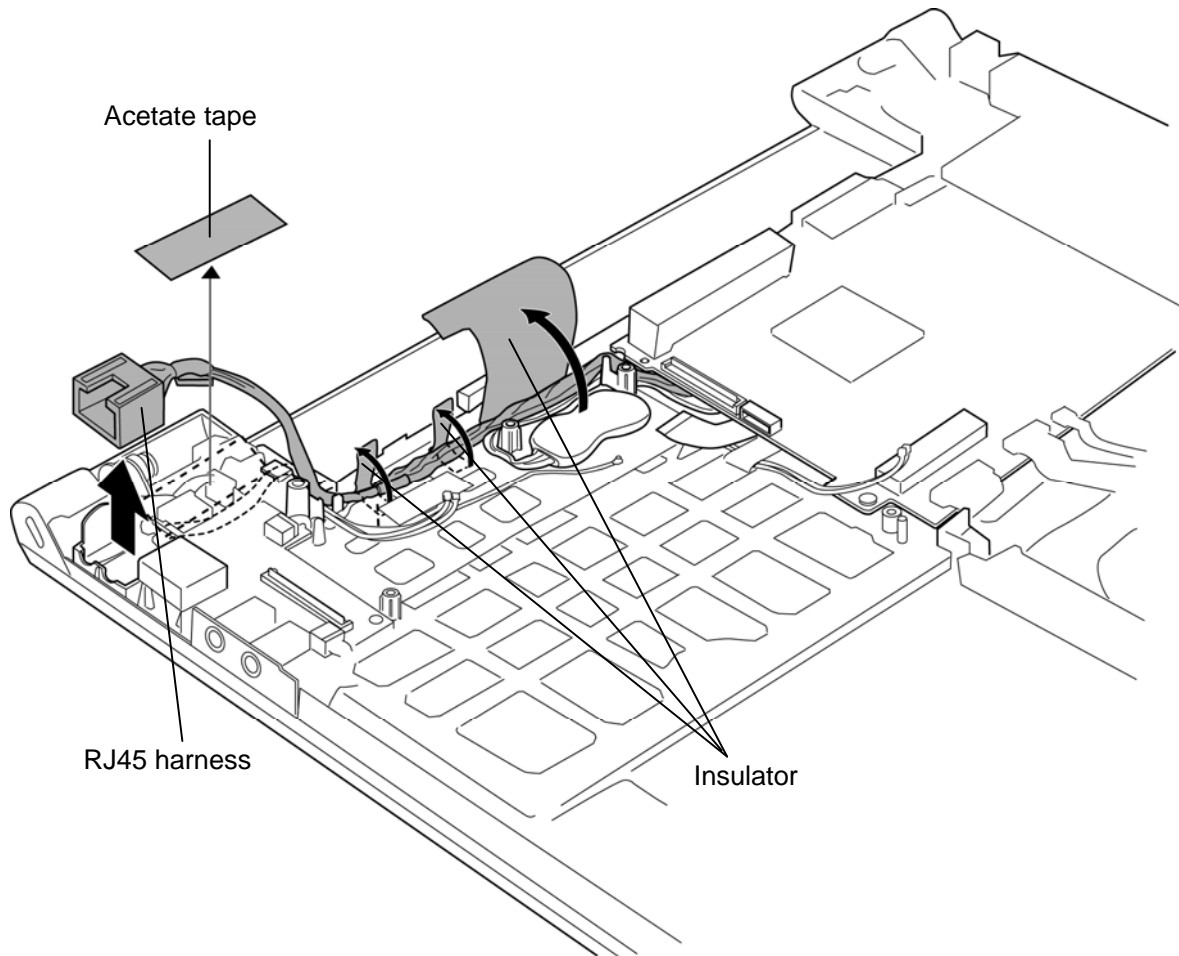


Figure 4-32 Removing the system board (1)

3. Turn up the **insulators** (LCD H GUIDE insulator and HNS HOLD L insulator) and disconnect the **LCD harness** from the connector **CN5300** on the system board.
4. Disconnect the **DC-IN harness** from the connector **CN8800** on the system board.

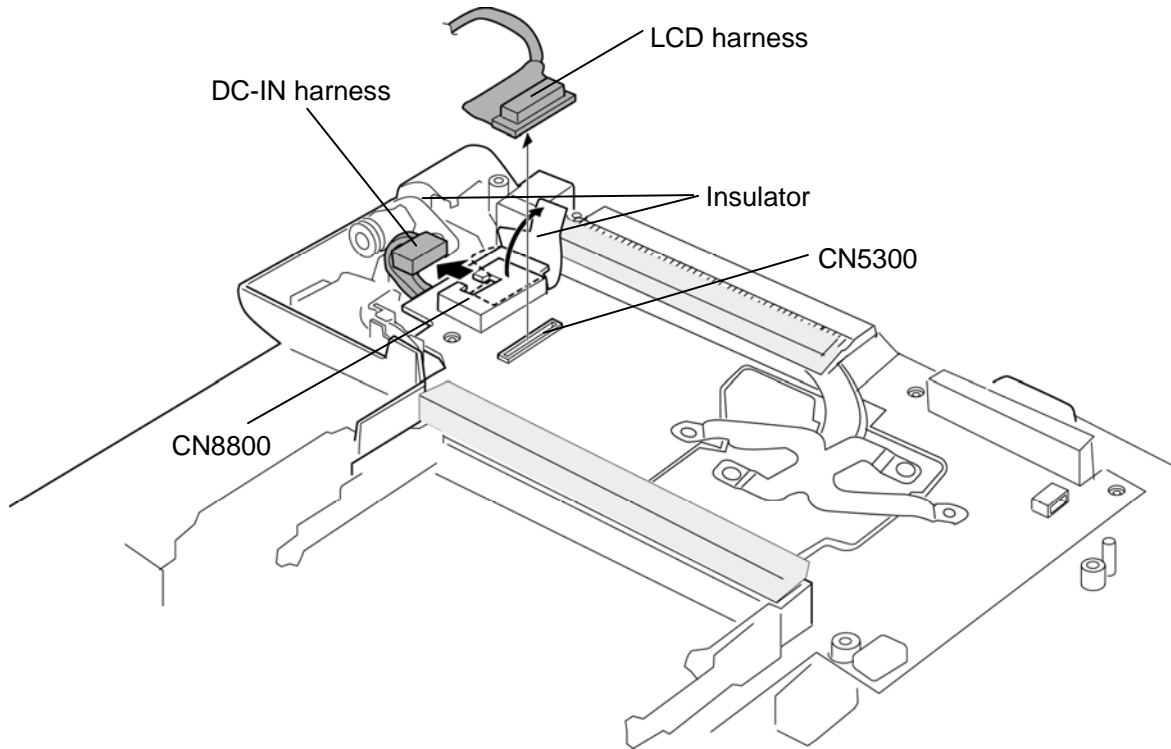


Figure 4-33 Removing the system board (2)

5. Disconnect the **keyboard FPC**, **TP SW FFC** and **fingerprint sensor board FFC** from the connectors **CN3230**, **CN9550** and **CN9551** on the system board.

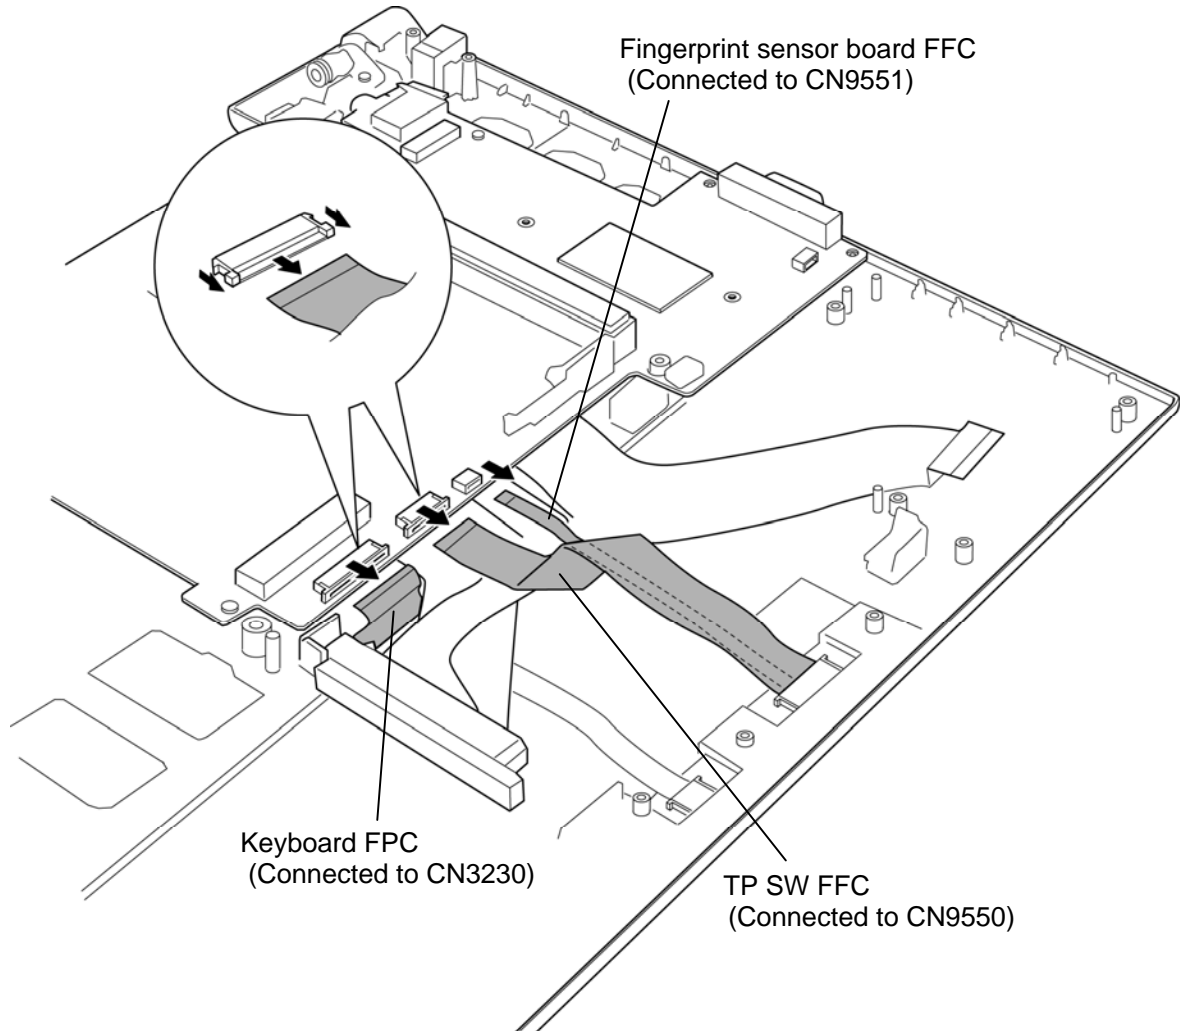


Figure 4-34 Removing the system board (3)

6. Remove the following **screws** securing the system board.

- M2x4C S-THIN HEAD ×2
- 4-40x5C UNIFIED BIND ×2

7. Remove the **system board**.

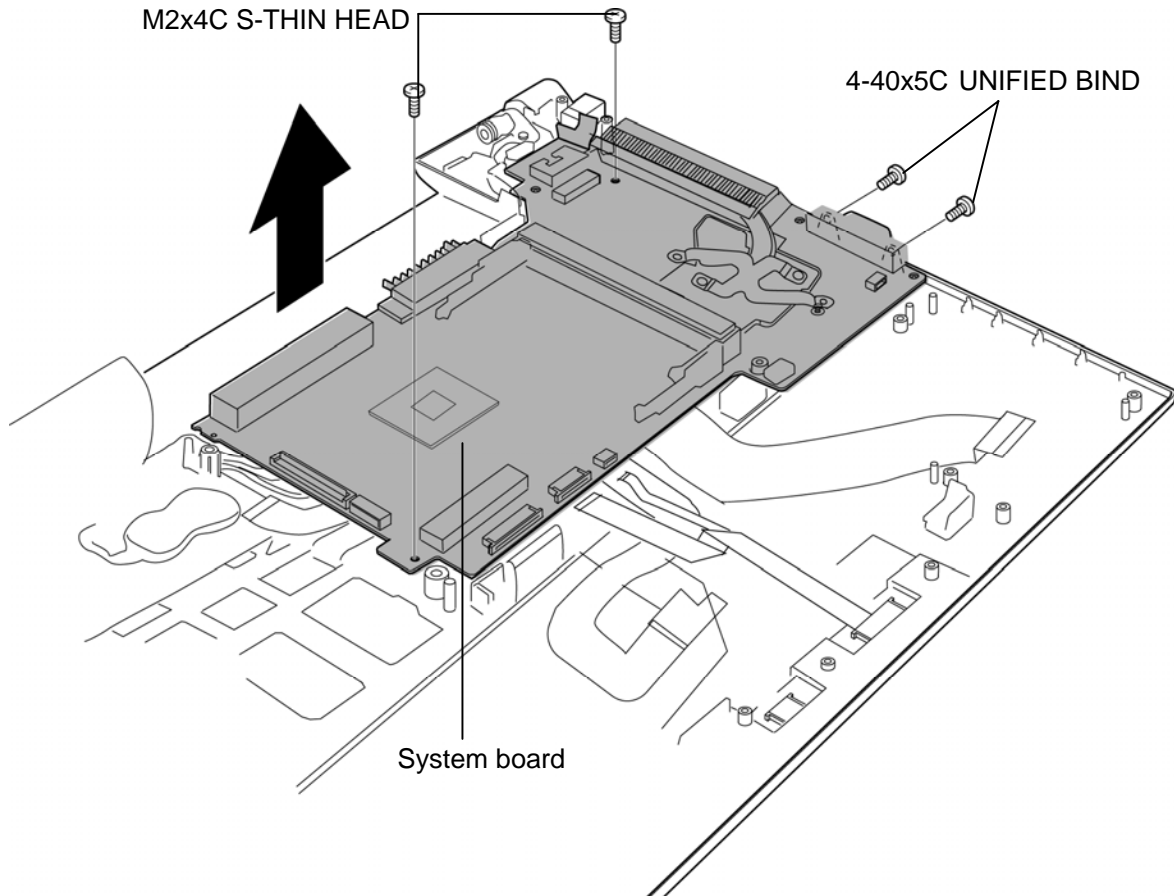


Figure 4-35 Removing the system board (4)

8. Disconnect the **SD board FPC**, **HDD FPC** (or **SSD FPC**), **E-SATA board FPC**, **RJ45 harness**, **RTC battery harness** and **3G board FPC** from the connectors **CN9770**, **CN1990**, **CN9540**, **CN4050**, **CN9300** and **CN9580** on the system board.

**CAUTION:** Risk of explosion if RTC battery is replaced by an incorrect type.  
Dispose of used RTC batteries according to the laws and ordinances of your local authority.

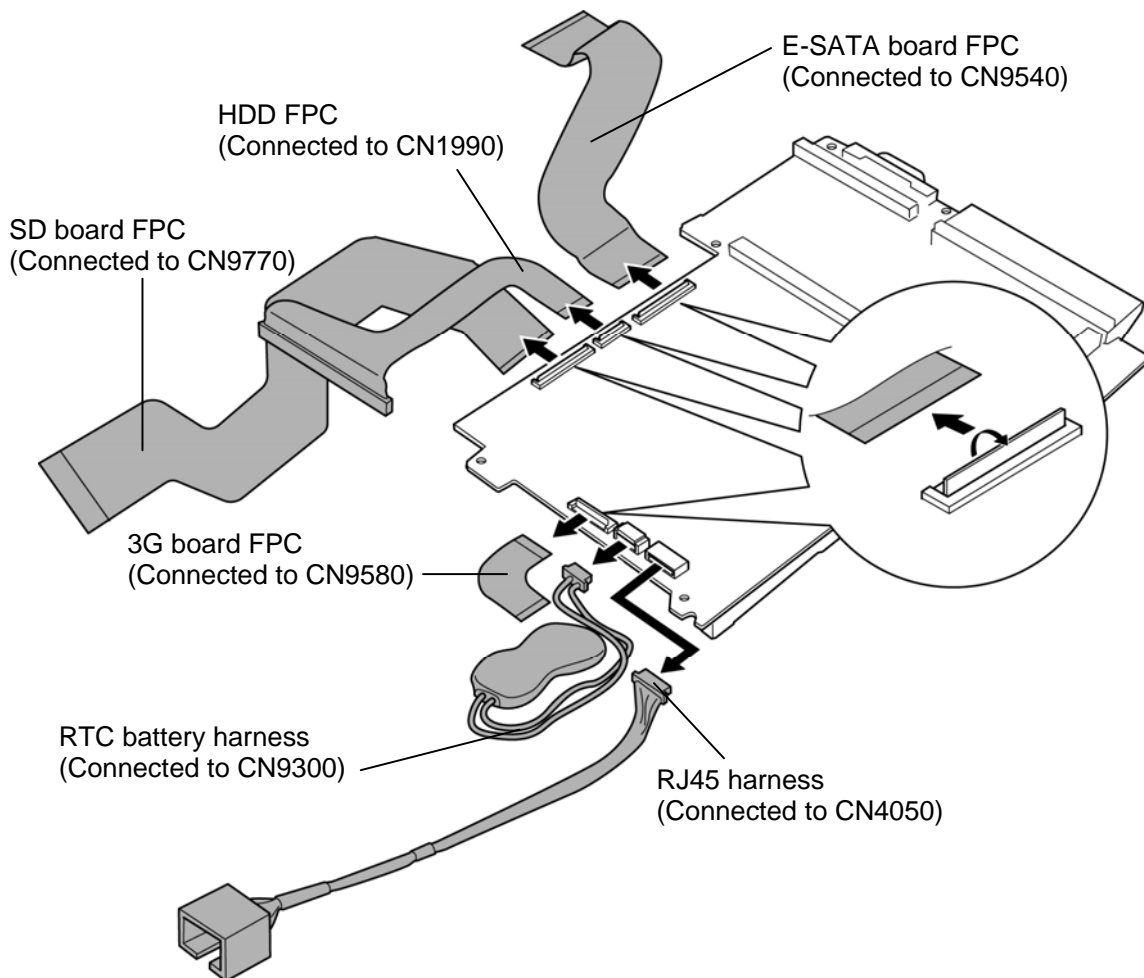


Figure 4-36 Removing the system board (HDD model) (5)

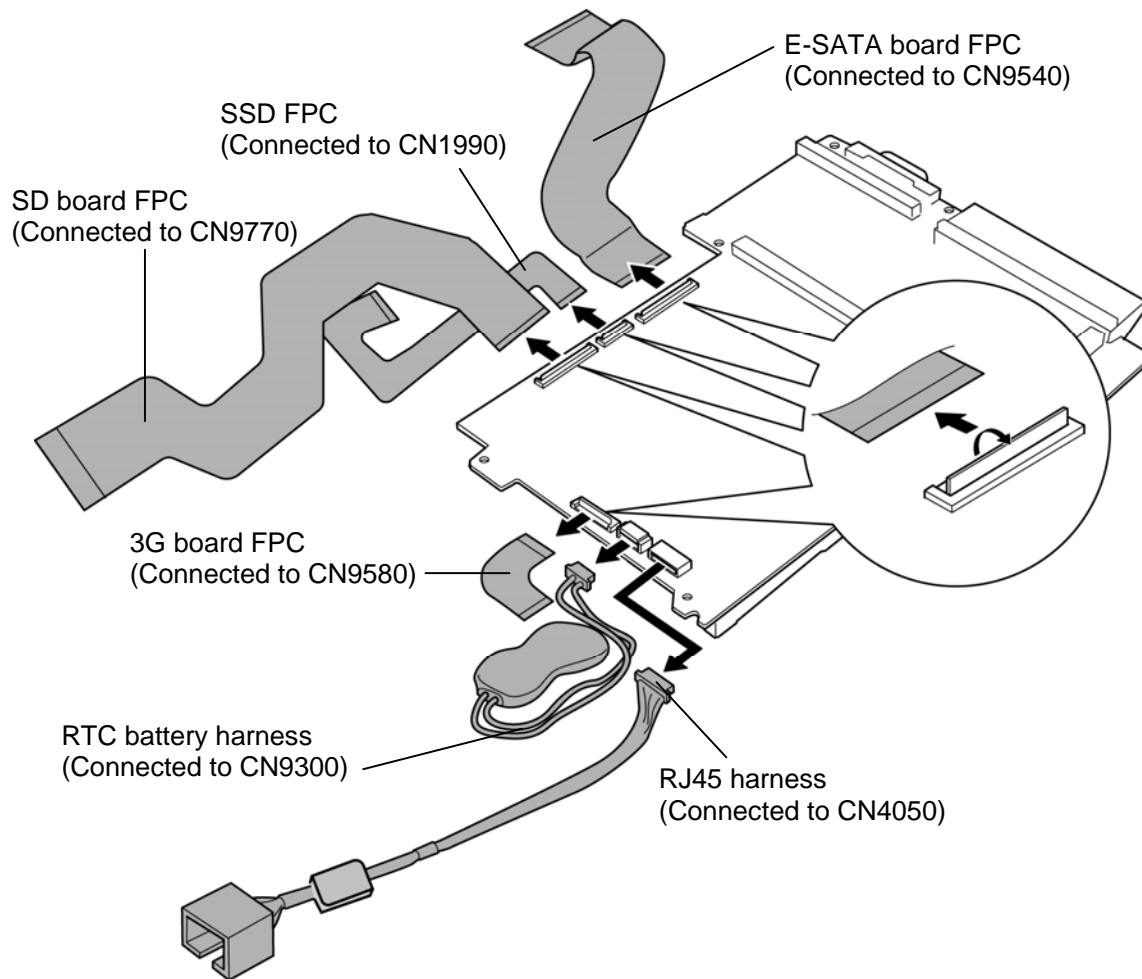


Figure 4-37 Removing the system board (SSD model) (6)

## Installing the System board

To install the system board, follow the steps below and refer to Figure 4-32 to 4-37.

1. Connect the **SD board FPC**, **HDD FPC** (or **SSD FPC**), **E-SATA board FPC**, **RJ45 harness**, **RTC battery harness** and **3G board FPC** to the connectors **CN9770**, **CN1990**, **CN9540**, **CN4050**, **CN9300** and **CN9580** on the system board.

**CAUTION:** When replacing the SD board FPC and 3G board FPC with new one, use the SD board FPC and 3G board FPC on which “AL-S” is printed on them. Do not use the parts for PORTÉGÉ R700.

2. Turn over the **system board** and set it in place.
3. Secure the system board with the following **screws**.
  - M2×4C            S-THIN HEAD            ×2
  - 4-40×5C        UNIFIED BIND            ×2
4. Connect the **keyboard FPC**, **TP SW FFC** and **fingerprint sensor board FFC** to the connectors **CN3230**, **CN9550** and **CN9551** on the system board.
5. Connect the **DC-IN harness** to the connector **CN8800** on the system board and arrange the DC-IN harness in place.
6. Turn up the **insulator** and connect the **LCD harness** to the connector **CN5300** on the system board. Arrange the LCD harness in place.

**NOTE:** When replacing the LCD harness with a new one, stick the square cushion (black) and gasket (normal LCD model AUO made LCD only in place).

7. Fix the LCD harness with the **insulators**.

**NOTE:** In the models with the gasket, put the tip of the HNS HOLD L insulator on the LCD hanress.  
In the models without the gasket, insert the tip of the HNS HOLD L insulator into the hinge portion.

8. Turn up the **insulator** and set the **RTC battery** in place.
9. Turn up the **insulator** and set the **RJ45 harness** to the slot.
10. Arrange the **RJ45 harness** in place.

11. Fix the RJ45 harness and RTC battery with the **insulator**.
12. Stick the **acetate tape** in place.



## 4.19 Sound board

### Removing the Sound board

To remove the sound board, follow the steps below and refer to Figure 4-38 to 4-41.

1. Remove the following **screw** and **speaker holder R**.
  - M2x4C S-THIN HEAD ×1
2. Peel off the **aluminum tape** and disconnect the **speaker harness** from the connector **CN6000** on the sound board.
3. Disconnect the **camera harness**, **sensor harness** and **inner harness** from the connector **CN9540**, **CN9620** and **CN6050** on the sound board.

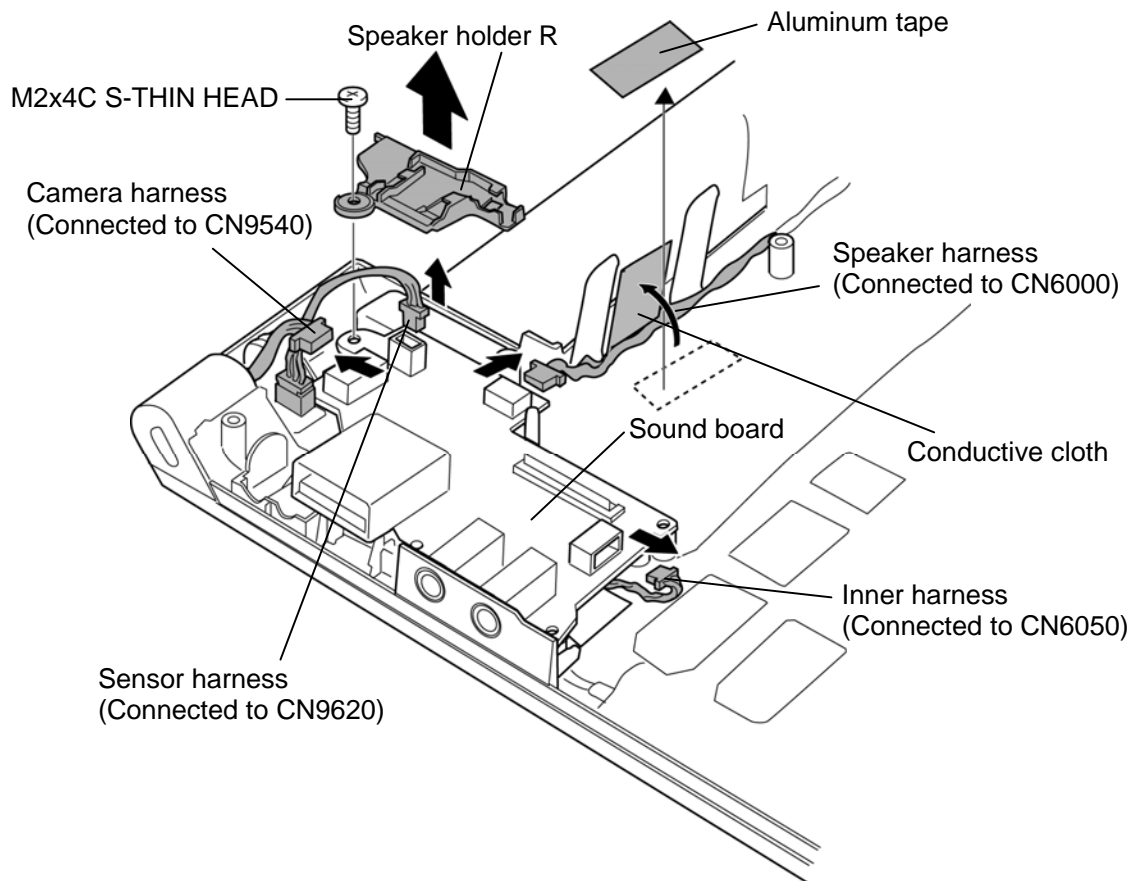


Figure 4-38 Removing the sound board (1)

4. Remove the following **screw** and **sound board**.

- M2×3B S-THIN HEAD ×1

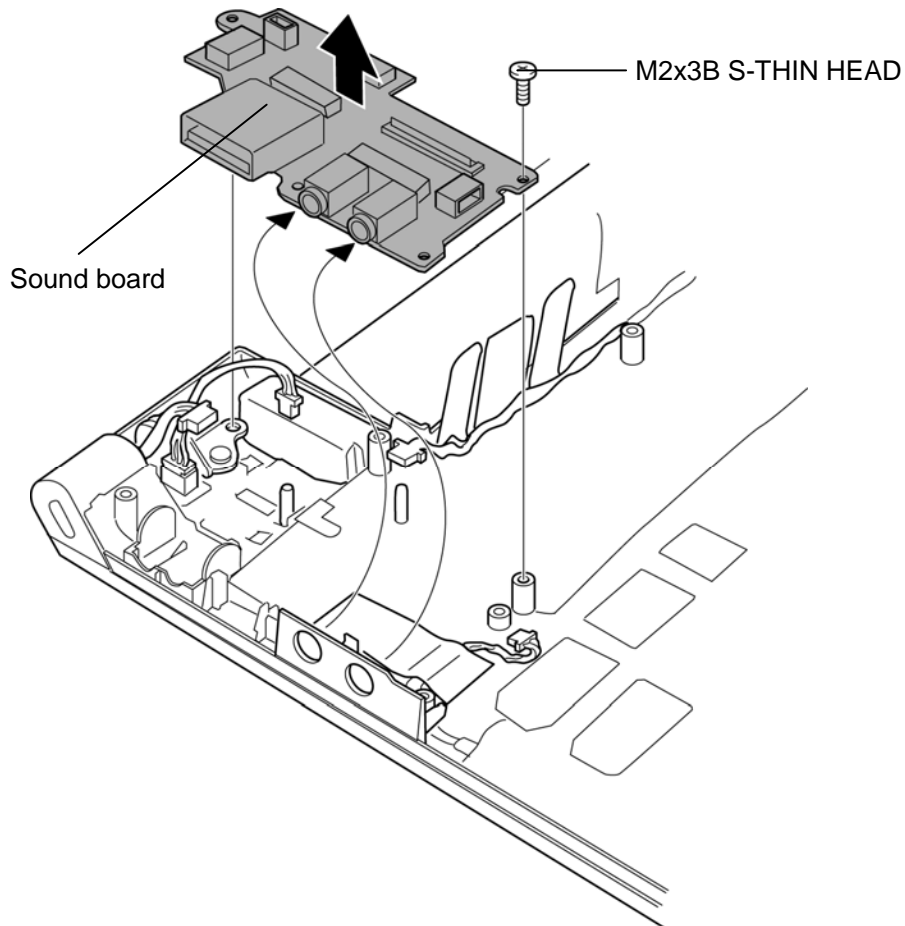


Figure 4-39 Removing the sound board (USB2.0 model) (2)

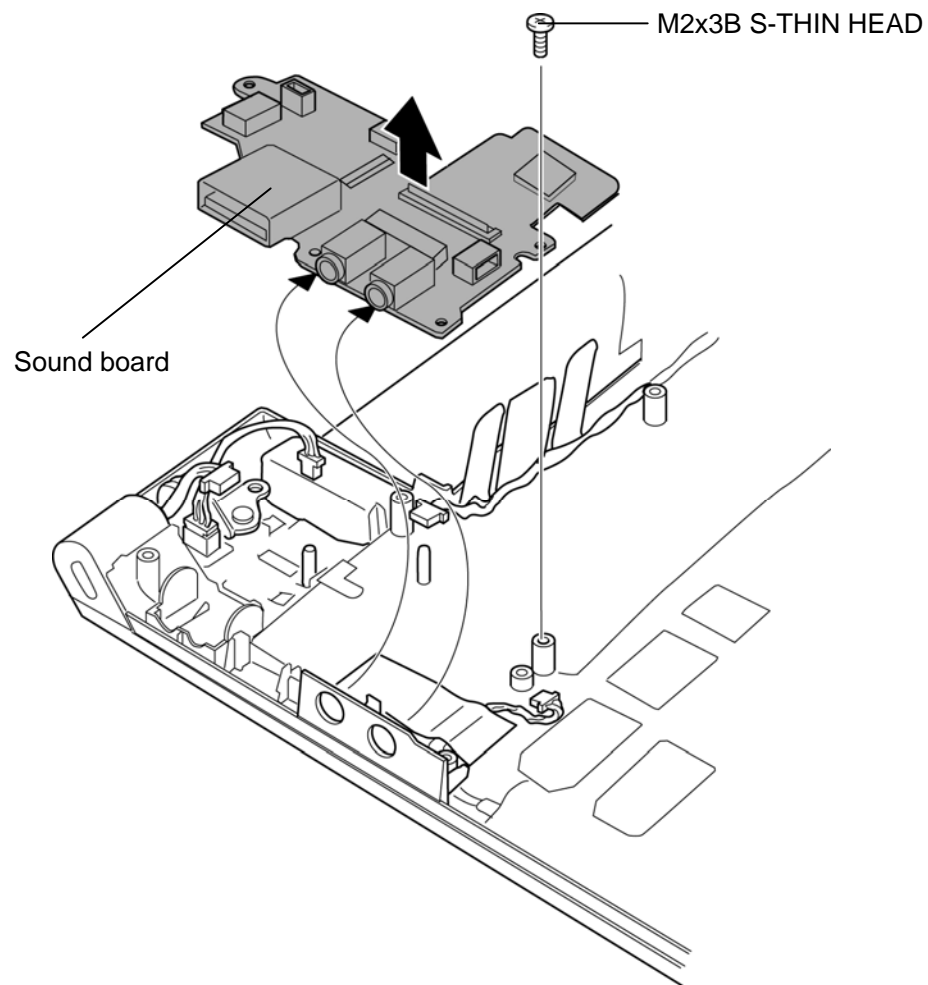


Figure 4-40 Removing the sound board (USB3.0 model) (3)

5. Peel off the **acetate tape** and turn up the **insulator**.
6. Remove the **inner harness**.

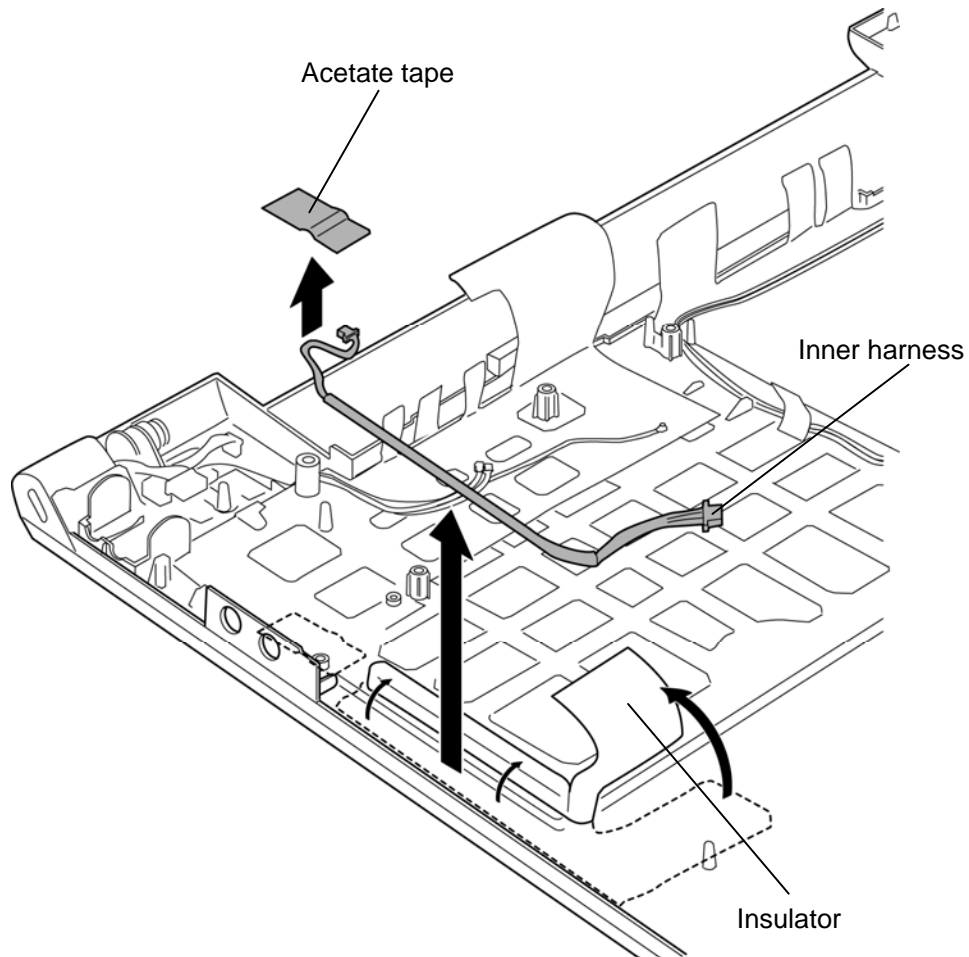


Figure 4-41 Removing the inner harness

### Installing the Sound board


To install the sound board, follow the steps below and refer to Figure 4-38 to 4-41.

1. Turning up the **insulator**, arrange the **inner harness** in place and fix it with the insulator.
2. Stick the **acetate tape** in place.
3. Set the **sound board** to the slot of the cover assembly and secure it with following **screw**.
  - M2×3B          S-THIN HEAD          ×1
4. Connect the **camera harness**, **sensor harness**, **speaker harness** and **inner harness** to the connector **CN9540**, **CN9620**, **CN6000** and **CN6050** on the sound board.

5. Set the **conductive cloth** on the cover assembly and stick the **aluminum tape** in place.


**NOTE:** Set the conductive cloth and fix it as shown in the figure below.

Position of conductive cloth

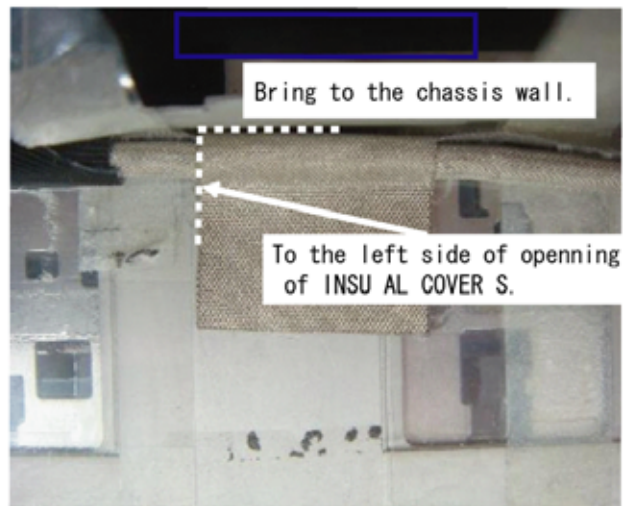

Position of INSUL COVER S

Horizontal: To the left side of edge of INSUL COVER S  
(both-sided tape)  
Vertical : To the edge of SPEAKER HNS

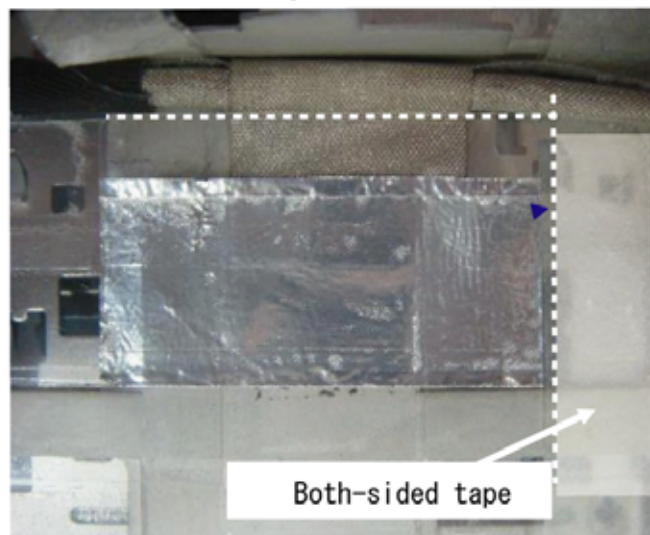

6. Set the **speaker holder R** to the slot and secure it with following screw.

- M2×4C S-THIN HEAD ×1

## 4.20 Speaker

### Removing the Speaker

To remove the speaker, follow the steps below and refer to Figure 4-42 and 4-43.

1. Turn up the **insulator** and release the **wireless LAN antenna cable** and **speaker harness**.
2. Remove the following **screw** and **speaker holder L**.
  - M2.5×6B      FLAT HEAD      ×1

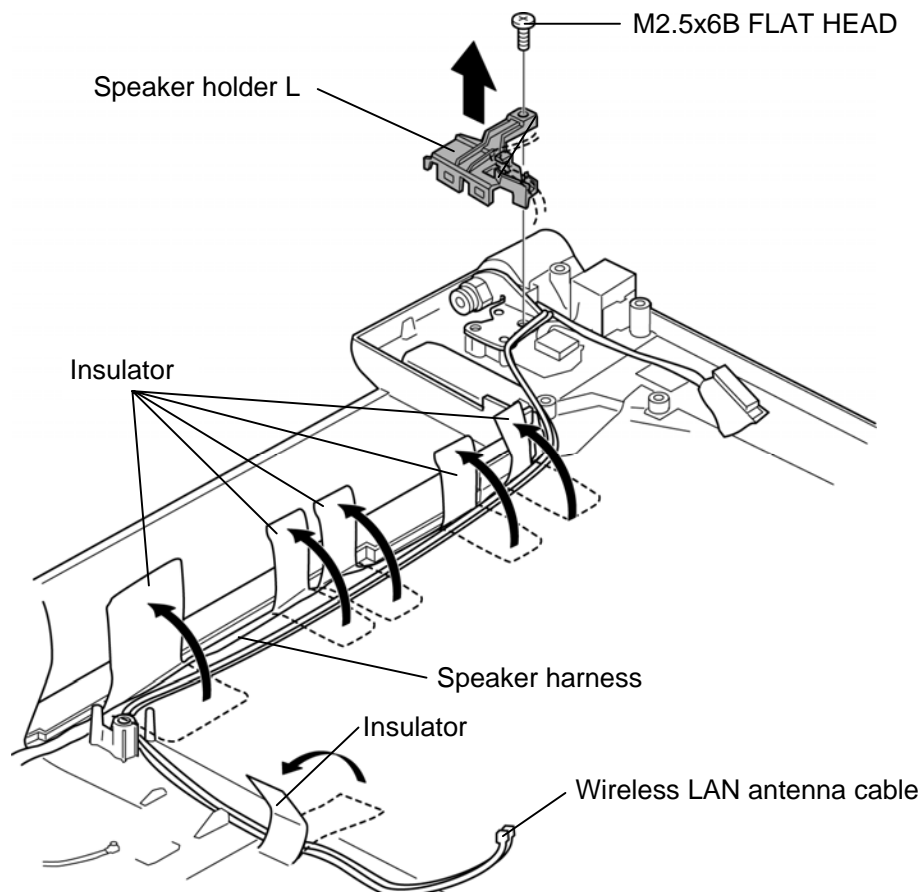


Figure 4-42 Removing the speaker (1)

3. Take out the **speaker** from the slot of the cover assembly.

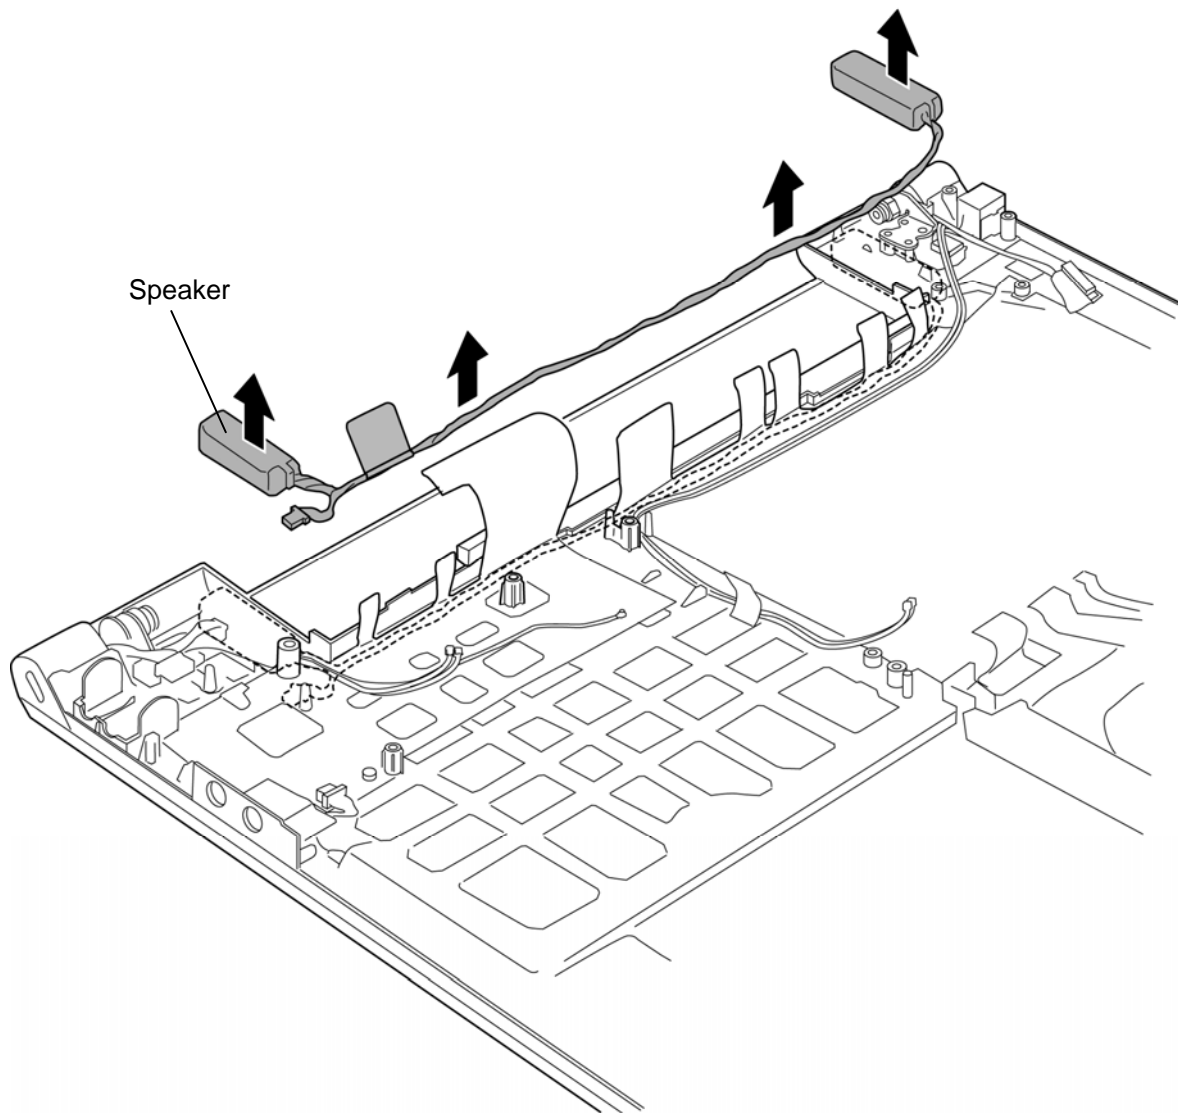


Figure 4-43 Removing the speaker (2)



**Installing the Speaker**

To install the speaker, follow the steps below and refer to Figure 4-42 and 4-43.

1. Set the **speaker** to the slot of the cover assembly.
2. Turn up the **insulator** and arrange the **speaker harness** in place.
3. Set the **speaker holder L** to the slot and secure it with following **screw**.
  - M2.5×6B      FLAT HEAD      ×1
4. Arrange the **wireless LAN antenna cable** in place.
5. Close the **insulators**.

## 4.21 DC-IN harness

### Removing the DC-IN harness

To remove the DC-IN harness, follow the steps below and refer to Figure 4-44.

1. Take out the **DC-IN harness** from the slot of the cover assembly.

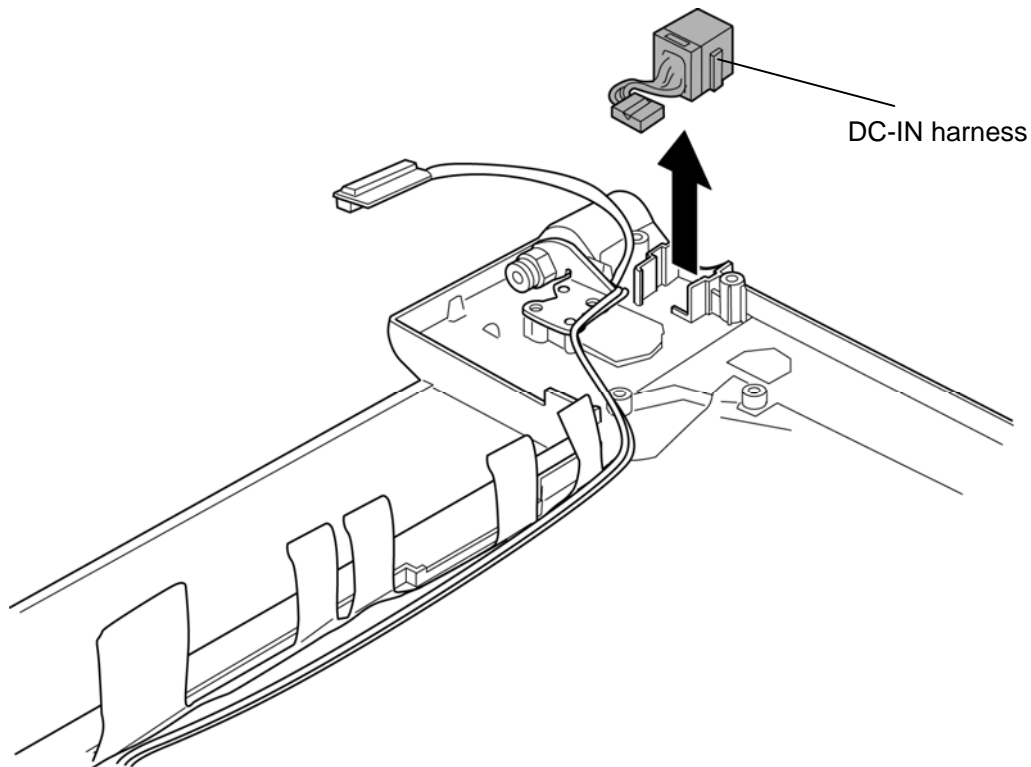


Figure 4-44 Removing the DC-IN harness

### Installing the DC-IN harness

To install the DC-IN harness, follow the steps below and refer to Figure 4-44.

1. Set the **DC-IN harness** into the slot of the cover assembly.

**NOTE:** When replacing a DC-IN harness with a new one, stick a DC-IN insulator to the DC-IN harness in place.

## 4.22 Touch pad/Fingerprint sensor board

### Removing the Touch pad/Fingerprint sensor board

To remove the touch pad/fingerprint sensor board, follow the steps below and refer to Figure 4-45 to 4-47.

1. Disconnect the **touch pad FFC** and **TP SW FFC** from the connector **CN3240** and **CN9650** on the T-PAD board.
2. Disconnect the **touch pad FFC** from the connector on the touch pad.
3. Disconnect the **fingerprint sensor board FFC** from the connector **CN3650** on the fingerprint sensor board (under the T-PAD board).

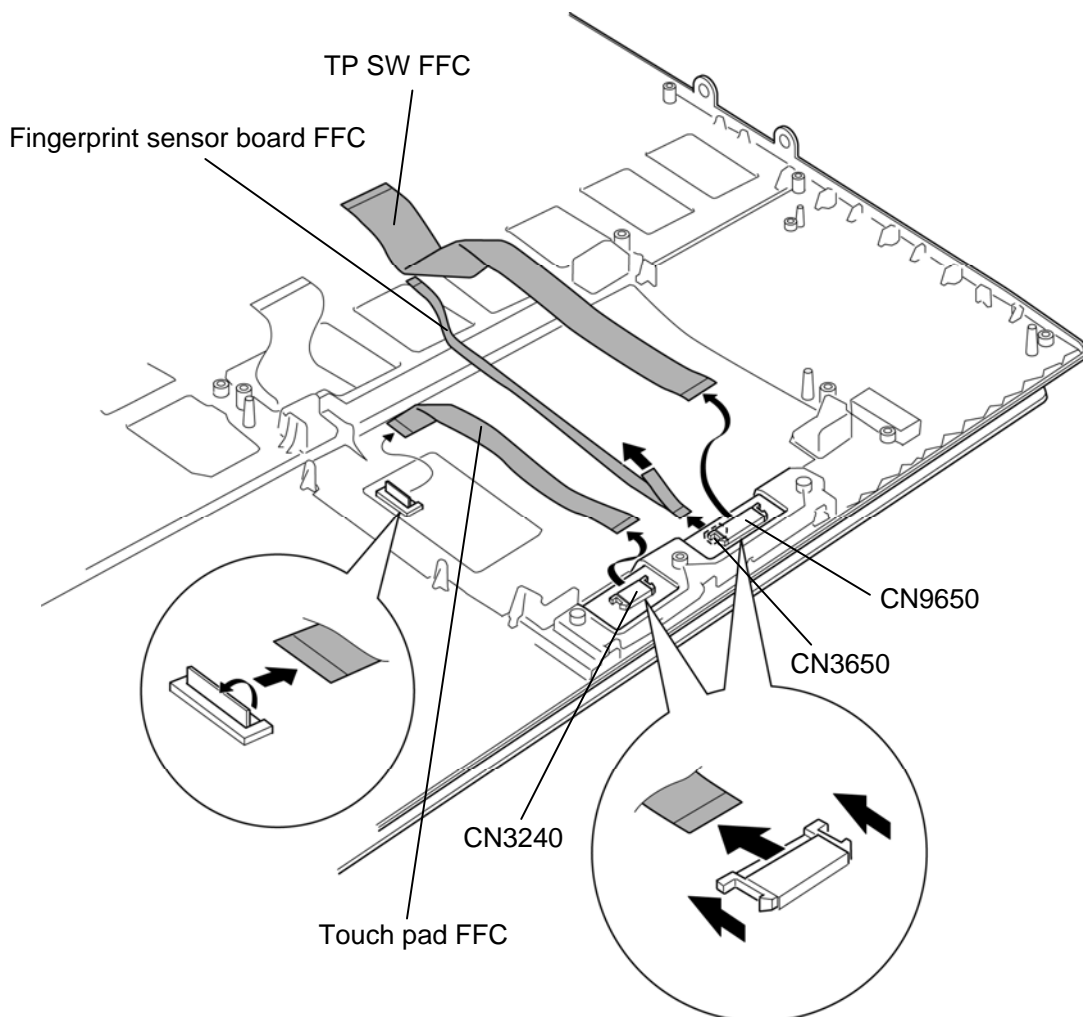


Figure 4-45 Removing the touch pad/fingerprint sensor board (1)

4. Peel off the **insulator**.
5. Release the latches and remove the **touch pad** and **touch pad button cover** adhered with the double-sided tape.

**NOTE:** Do not reuse the removed touch pad and touch pad button cover. Be sure to use new touch pad and touch pad cover.

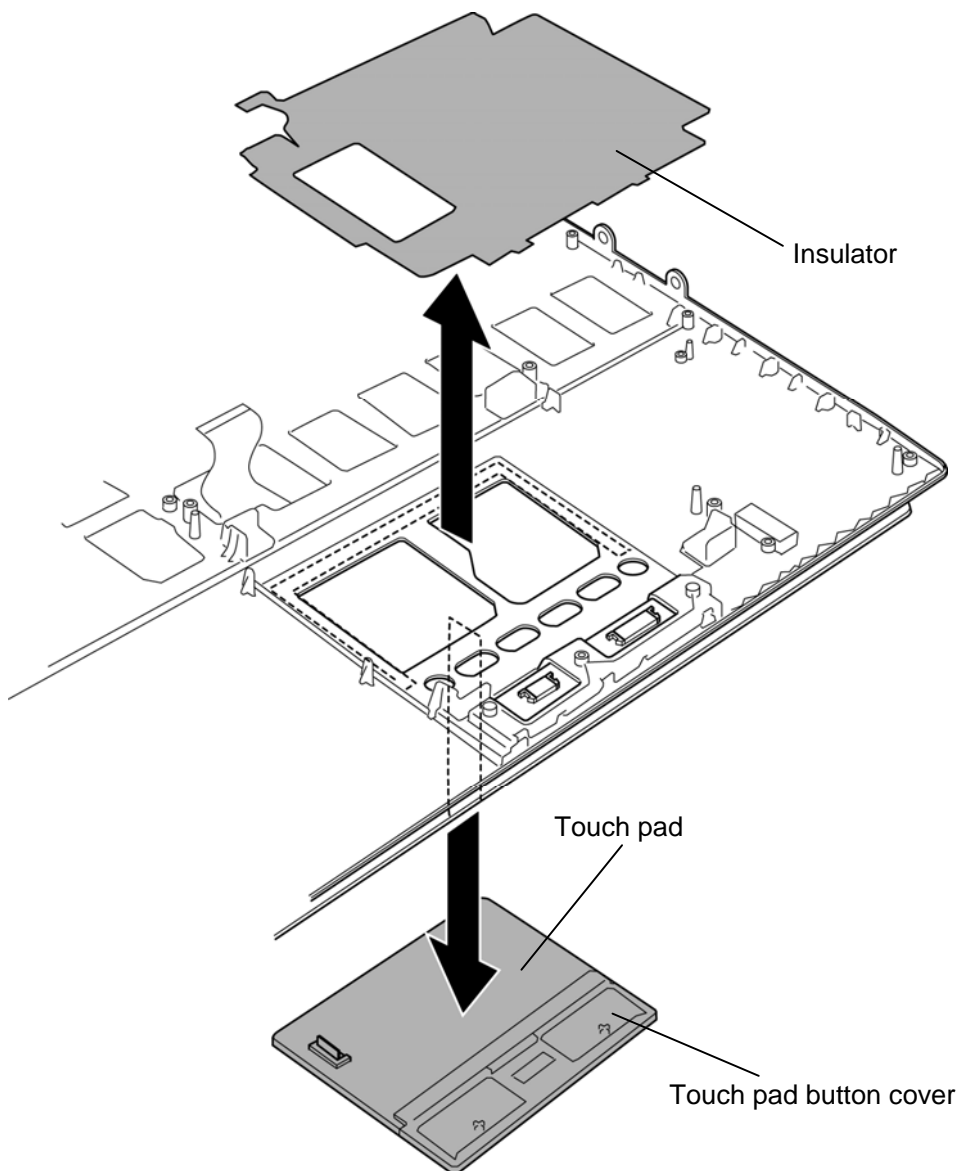


Figure 4-46 Removing the touch pad/fingerprint sensor board (2)

6. Peel off the **aluminum tape** (AL TAPE) and peel off the **fingerprint sensor board**.

7. Remove the following **screws** and **T-PAD board**.

- M2×4C S-TWIN HEAD ×2

**NOTE:** Do not reuse the removed fingerprint sensor board. Be sure to use a new fingerprint sensor board.

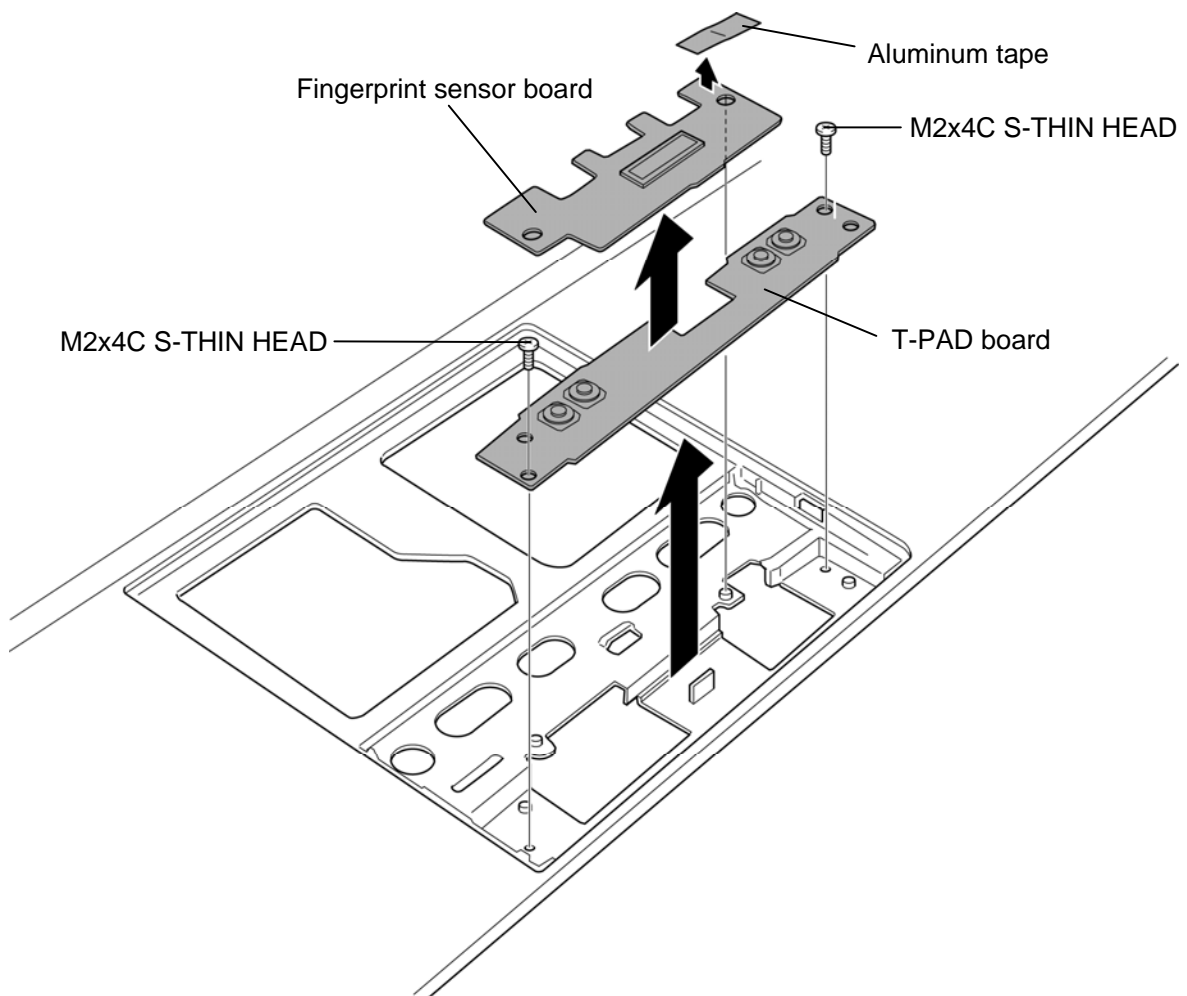


Figure 4-47 Removing the touch pad/fingerprint sensor board (3)


### Installing the Touch pad/Fingerprint sensor board

To install the touch pad/fingerprint sensor board, follow the steps below and refer to Figure 4-45 to 4-47.

1. Set the **T-PAD board** to the slot and secure it with the following **screws**.

- M2×4C      S-THIN HEAD      ×2


**NOTE:** In the models without the fingerprint sensor board, stick the **AL NONE FINGER** to the cover assembly in place.

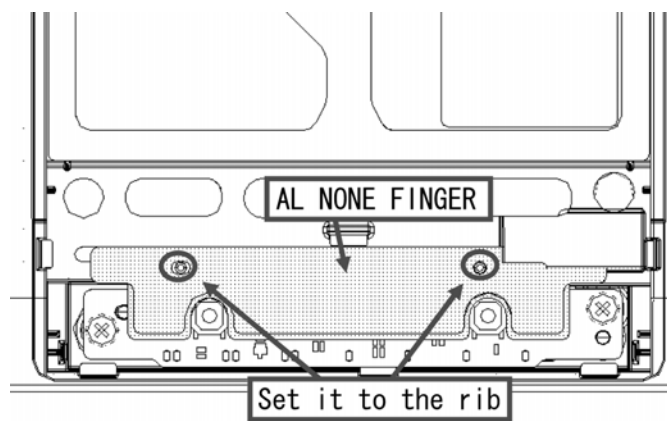

2. Peel off the separator of a new fingerprint sensor board.
3. Stick the **fingerprint sensor board** and **aluminum tape** (AL TAPE) in place.
4. Stick a new **touch pad button cover** in place and peel off the separators of the touch pad button and cover assembly (T-PAD tape).
5. Stick a new **touch pad** in place.
6. Stick the **insulator** in place.
7. Connect the **fingerprint sensor board FFC** to the connector **CN3650** on the fingerprint sensor board (under the T-PAD board).
8. Connect the **touch pad FFC** to the connector on the touch pad.
9. Connect the **touch pad FFC** and **TP SW FFC** to the connector **CN3240** and **CN9650** on the T-PAD board.

**CAUTION:** When removing (peeling) the touch pad, wipe off the double-sided tape (T-PAD tape) on the cover assembly. Stick new double-sided tape (T-PAD tape) on the cover assembly.

A new double-sided tape is stuck to a new touch pad button cover and cover assembly. The double-side tapes on the touch pad button cover and cover assembly are shown in the figure below.

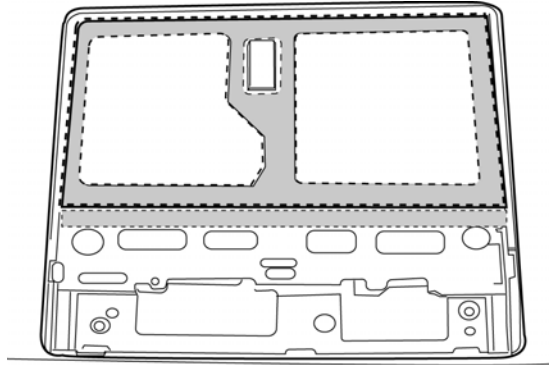

## 4.23 Keyboard

### Removing the Keyboard

To remove the keyboard, follow the steps below and refer to Figure 4-48.

1. Remove the **aluminum tape** (AL TAPE) from the back of the cover assembly. (Refer to the NOTE of the P.4-68)
2. Turn the cover assembly face up and peel off the **keyboard** adhered to the insulator.
3. Peel off the **insulator** (KB INSULATOR) from the cover assembly.

**NOTE:** Do not reuse the removed keyboard and KB insulator. Be sure to use new keyboard and KB insulator.

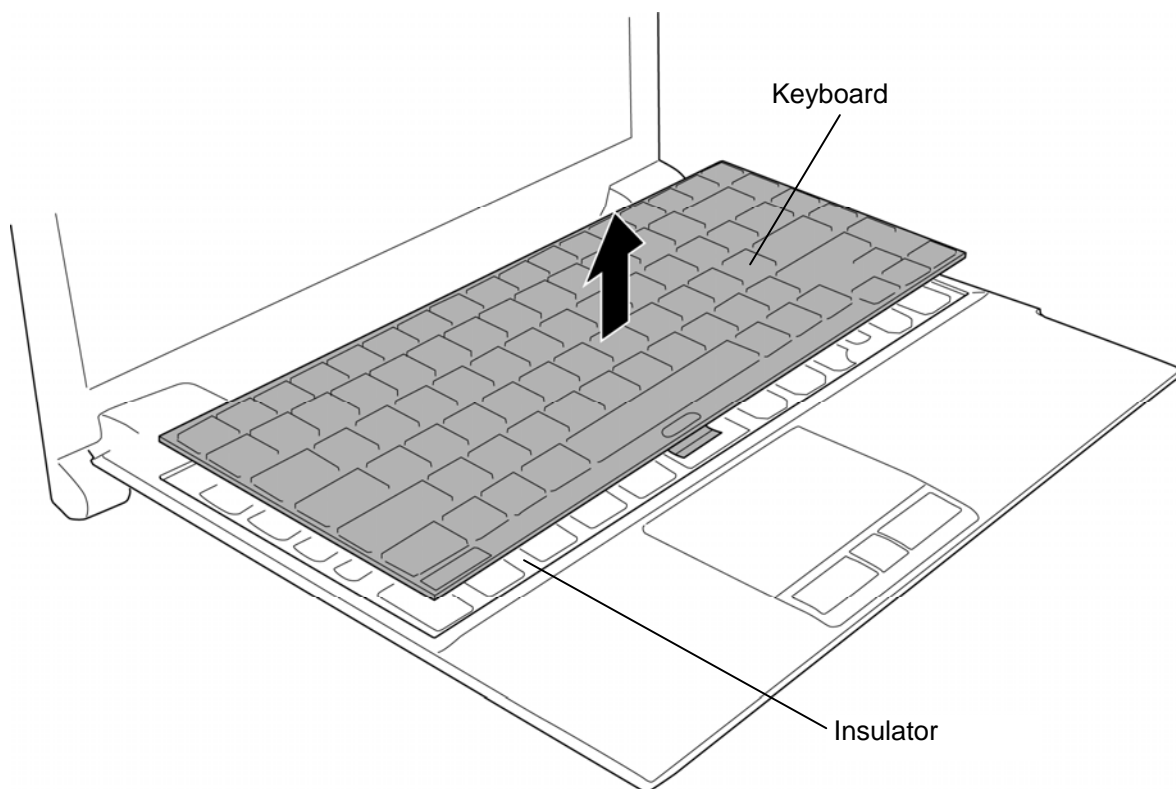


Figure 4-48 Removing the keyboard




### Installing the Keyboard

To install the keyboard, follow the steps below and refer to Figure 4-48.


1. Stick a new **insulator** (KB INSULATOR) on the cover assembly.
2. Peel off the separator of the insulator (KB INSULATOR).

**NOTE:** When sticking an INSU KB to COVER ASSY, refer to the following figure.

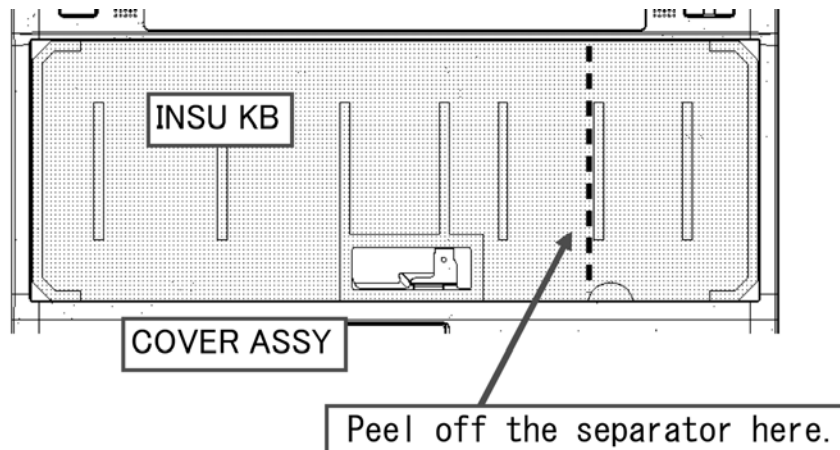

3. Stick a new **keyboard** on the insulator.
4. Stick the **aluminum tape** (AL TAPE) on the back of the cover assembly.

**NOTE:** When sticking an AL TAPE, refer to the following figure.

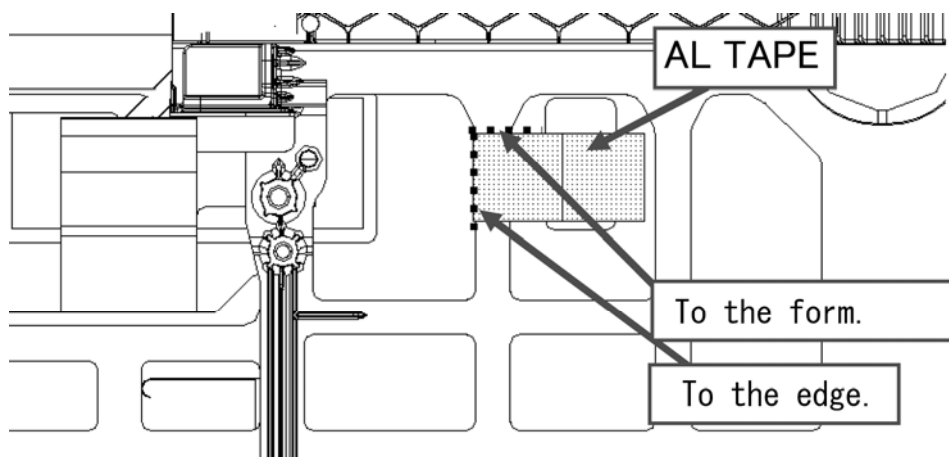

## 4.24 Cover assembly/LCD assembly

### Removing the Cover assembly/LCD assembly

To remove the cover assembly/LCD assembly, follow the steps below and refer to Figure 4-49 and 4-50.

1. Open the display 90 degrees and put the computer on the stand.
2. Turn up the **insulator**.
3. Remove the following **screw** and separate the cover assembly and LCD assembly.
  - M2.5×4B      FLAT HEAD              ×1

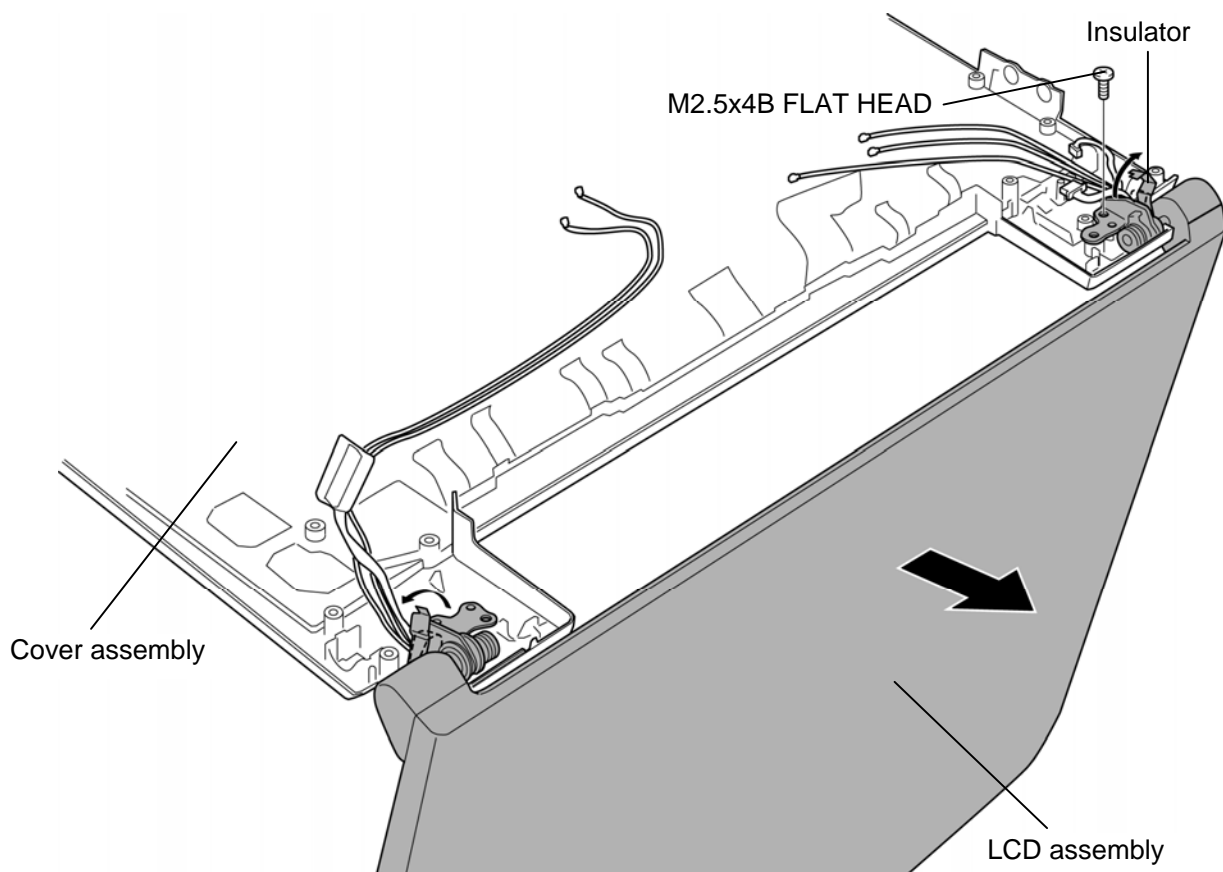


Figure 4-49 Removing the cover assembly/LCD assembly

4. Release the latch and remove the **appli button**.
5. Remove the **sensor board** and **sensor harness** from the appli button.
6. Release the latch and remove the **PW SW button**.

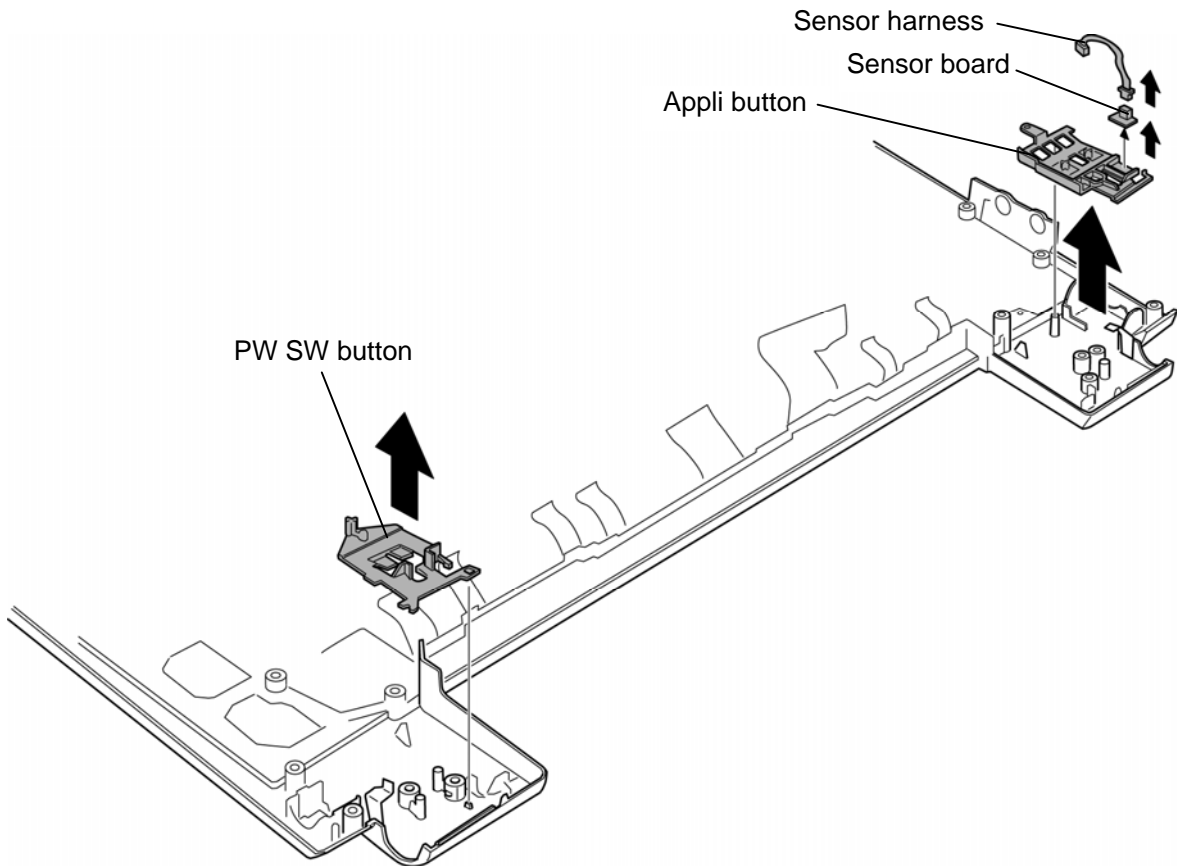



Figure 4-50 Removing the sensor board

### Installing the Cover assembly/LCD assembly



To install the cover assembly/LCD assembly, follow the steps below and refer to Figure 4-49 and 4-50.


1. Set the **PW SW button** to the cover assembly while engaging the latch.
2. Connect the **sensor harness** to the **sensor board**.
3. Set the **sensor board** to the appli button.
4. Set the **appli button** to the cover assembly while engaging the latch.
5. Set the **LCD assembly** to the **cover assembly** and secure them with following screw.
  - M2.5×4B      FLAT HEAD      ×1
6. Turn up the **insulator** and arrange the harnesses.

**NOTE:** When arranging harnesses of the left side, refer to the following figure.

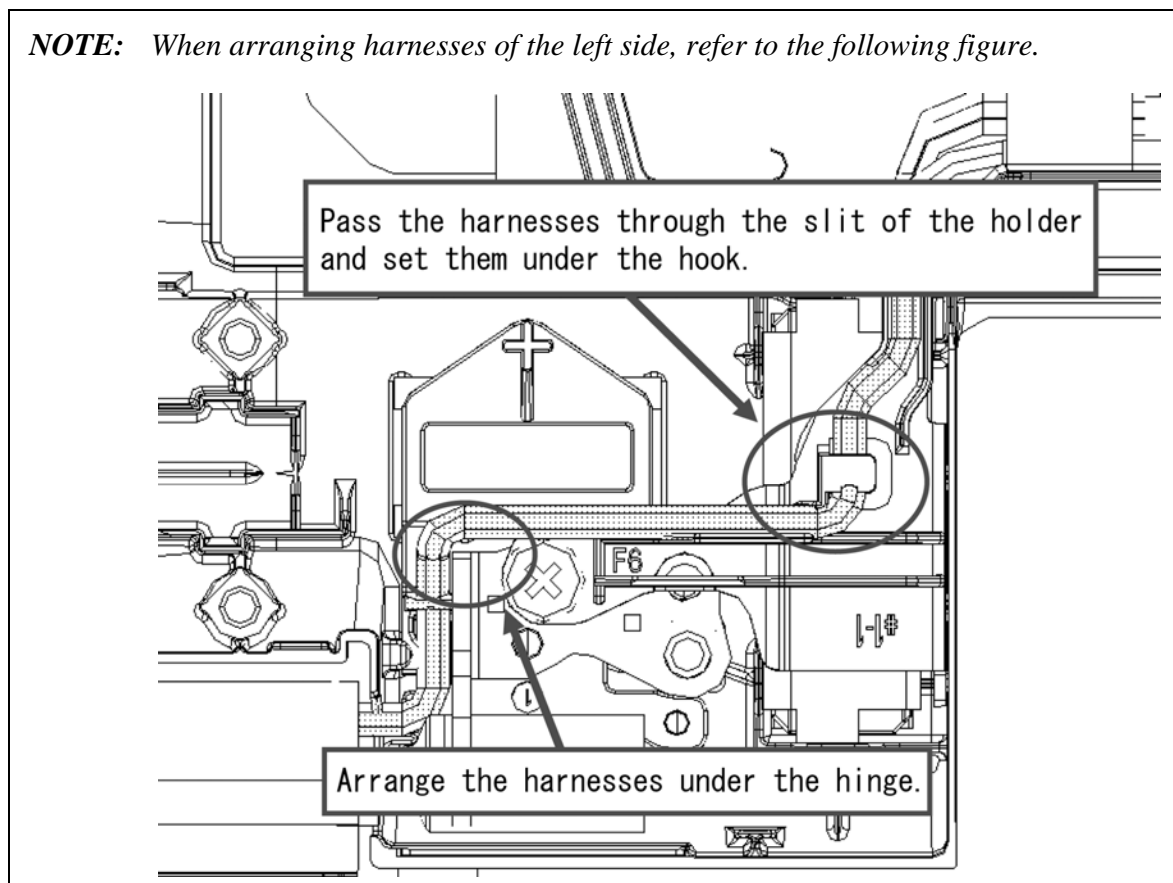

**NOTE:** When replacing a Cover ASSY with a new one, stick the **INSULATOR COVER** and **INSULATOR COVER S** to the Cover ASSY in place.

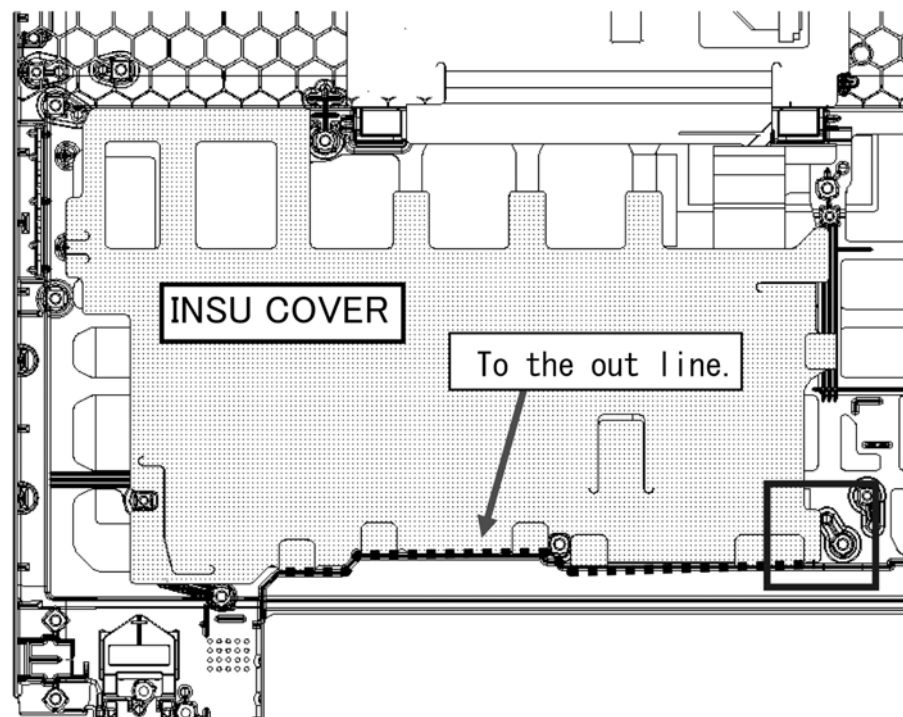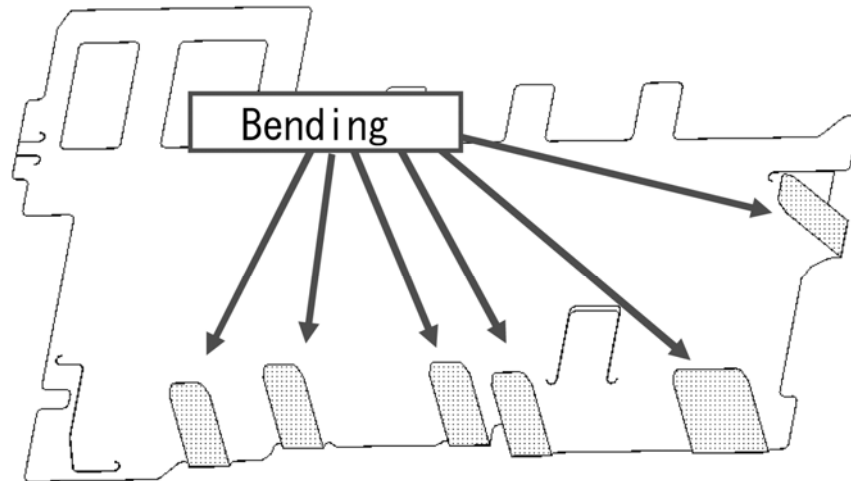

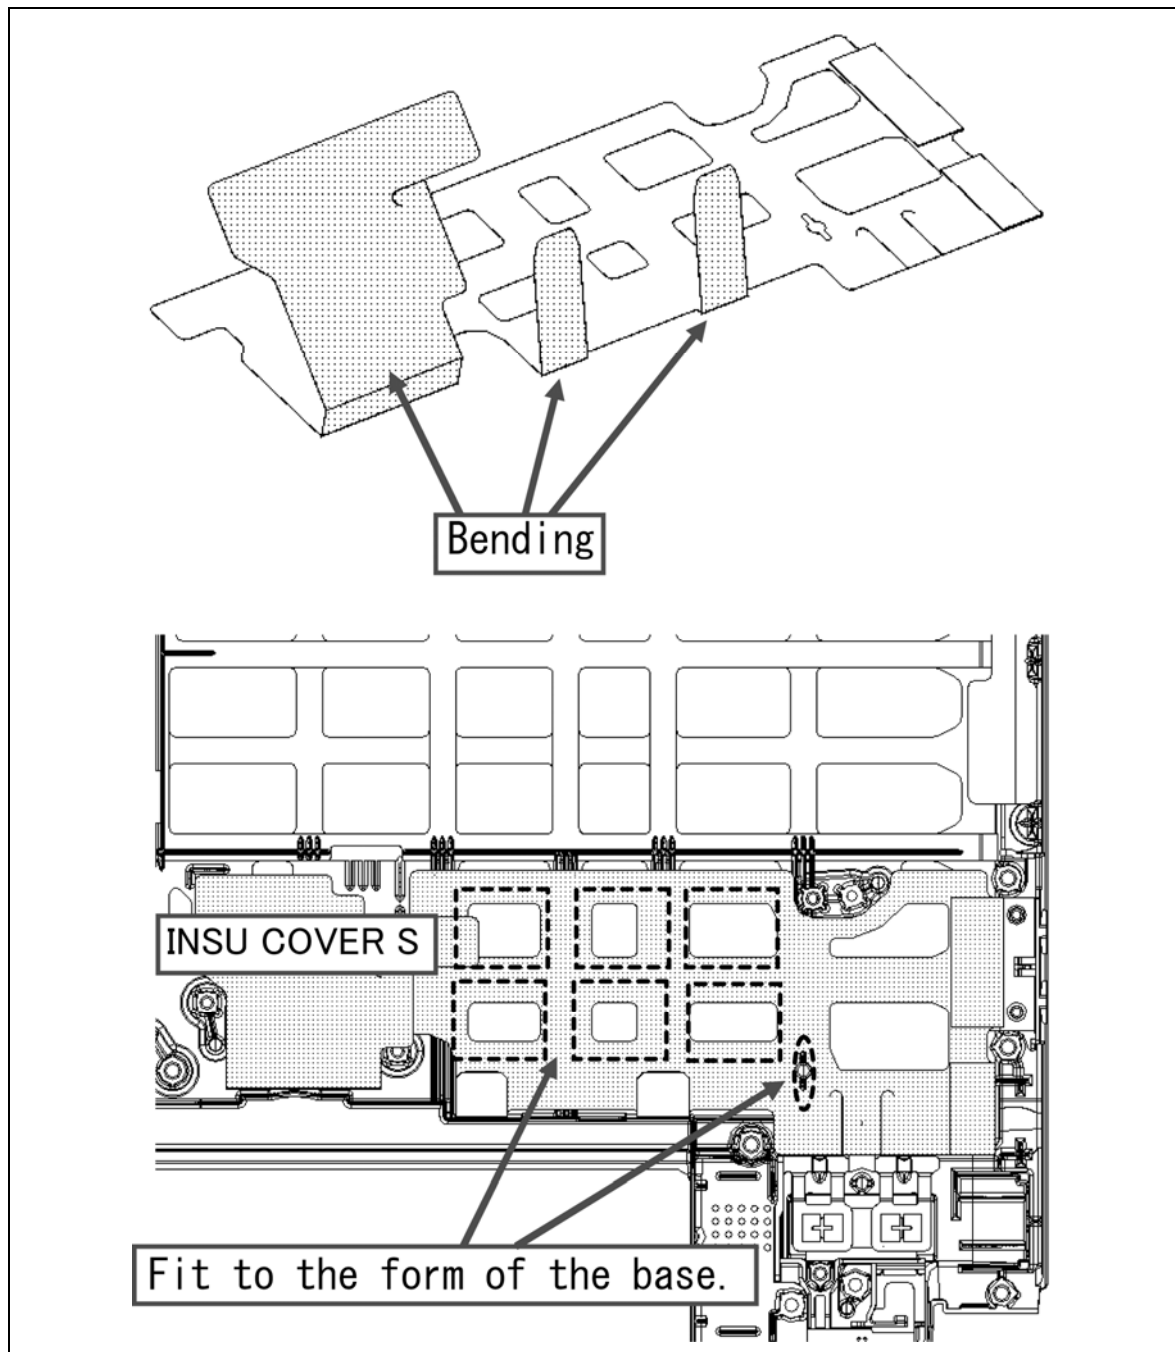

Prepare the required parts in advance, when replacing the following item.

ITEM	Parts List ITEM No	PART NAME	Quantity
COVER ASSY	60	COVER ASSY	1
	14	TOUCH PAD	1
	62	TP BTN COVER ASSY	1
	85	FINGER SENSOR BOARD	1
	11	KEYBOARD	1
	67	INSULATOR KB	1

## 4.25 LCD

### Removing the LCD

To remove the LCD, follow the steps below and refer to Figure 4-51 to 4-54.

1. Remove the **hinge cap L** and **hinge cap R** from the LCD mask.

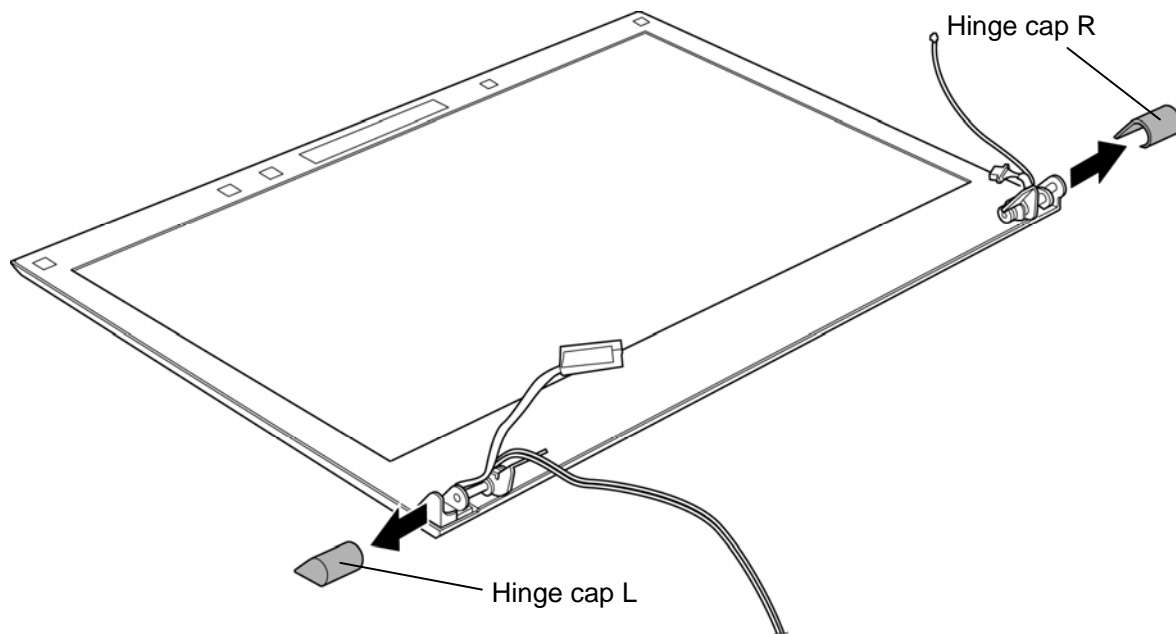


Figure 4-51 Removing the LCD mask (1)



2. Peel off three **LCD cushions** and one **LCD mask seal** from the LCD mask.
3. Remove the following **screws** securing the LCD mask.
  - M2×2.3B S-THIN HEAD screw ×4
  - M2×6B Stepping screw ×2
4. Remove the **LCD mask** while releasing the latches.

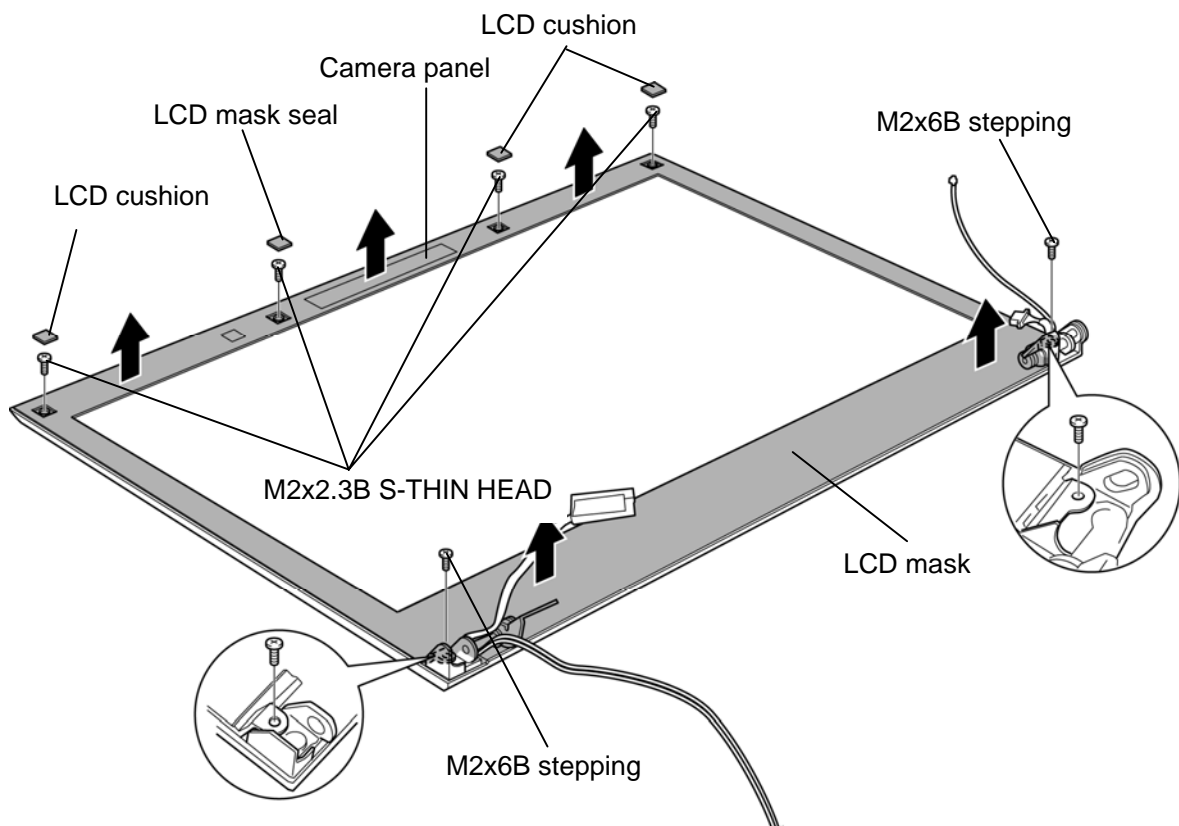


Figure 4-52 Removing the LCD mask (2)

5. Turn up the **insulator** and remove the **LCD** from the LCD cover.

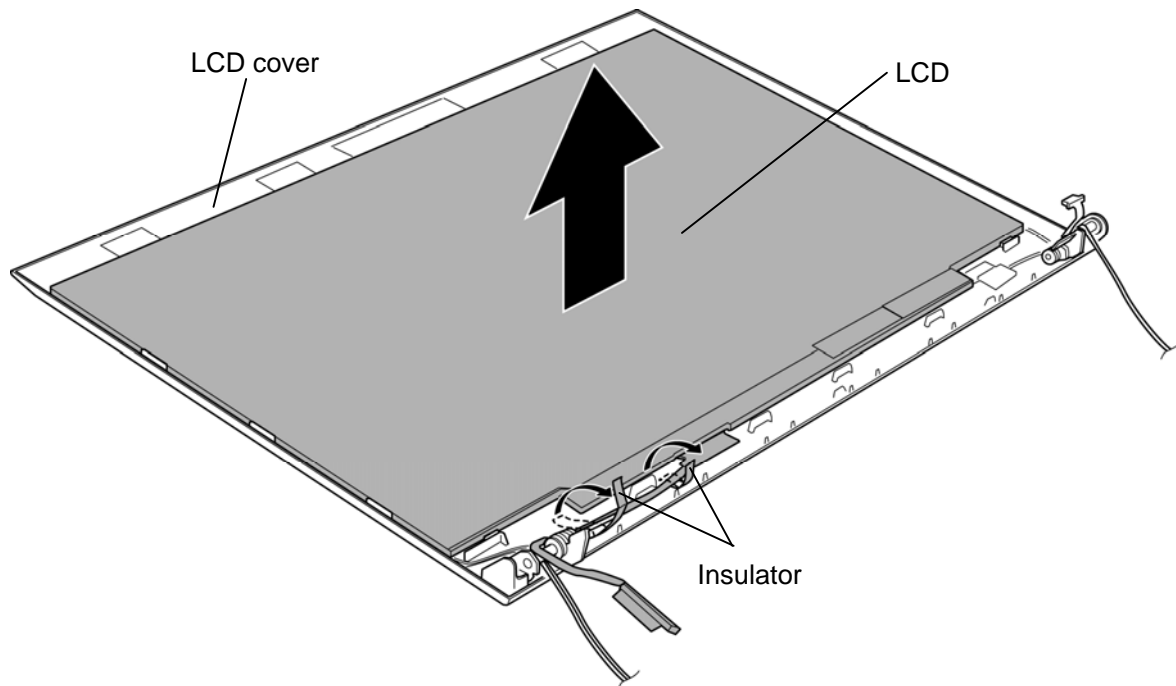


Figure 4-53 Removing the LCD (1)

6. Turn up the **insulator** and disconnect the **LCD harness** from the LCD (thick type of the LCD from the back and thin type of the LCD from the front).



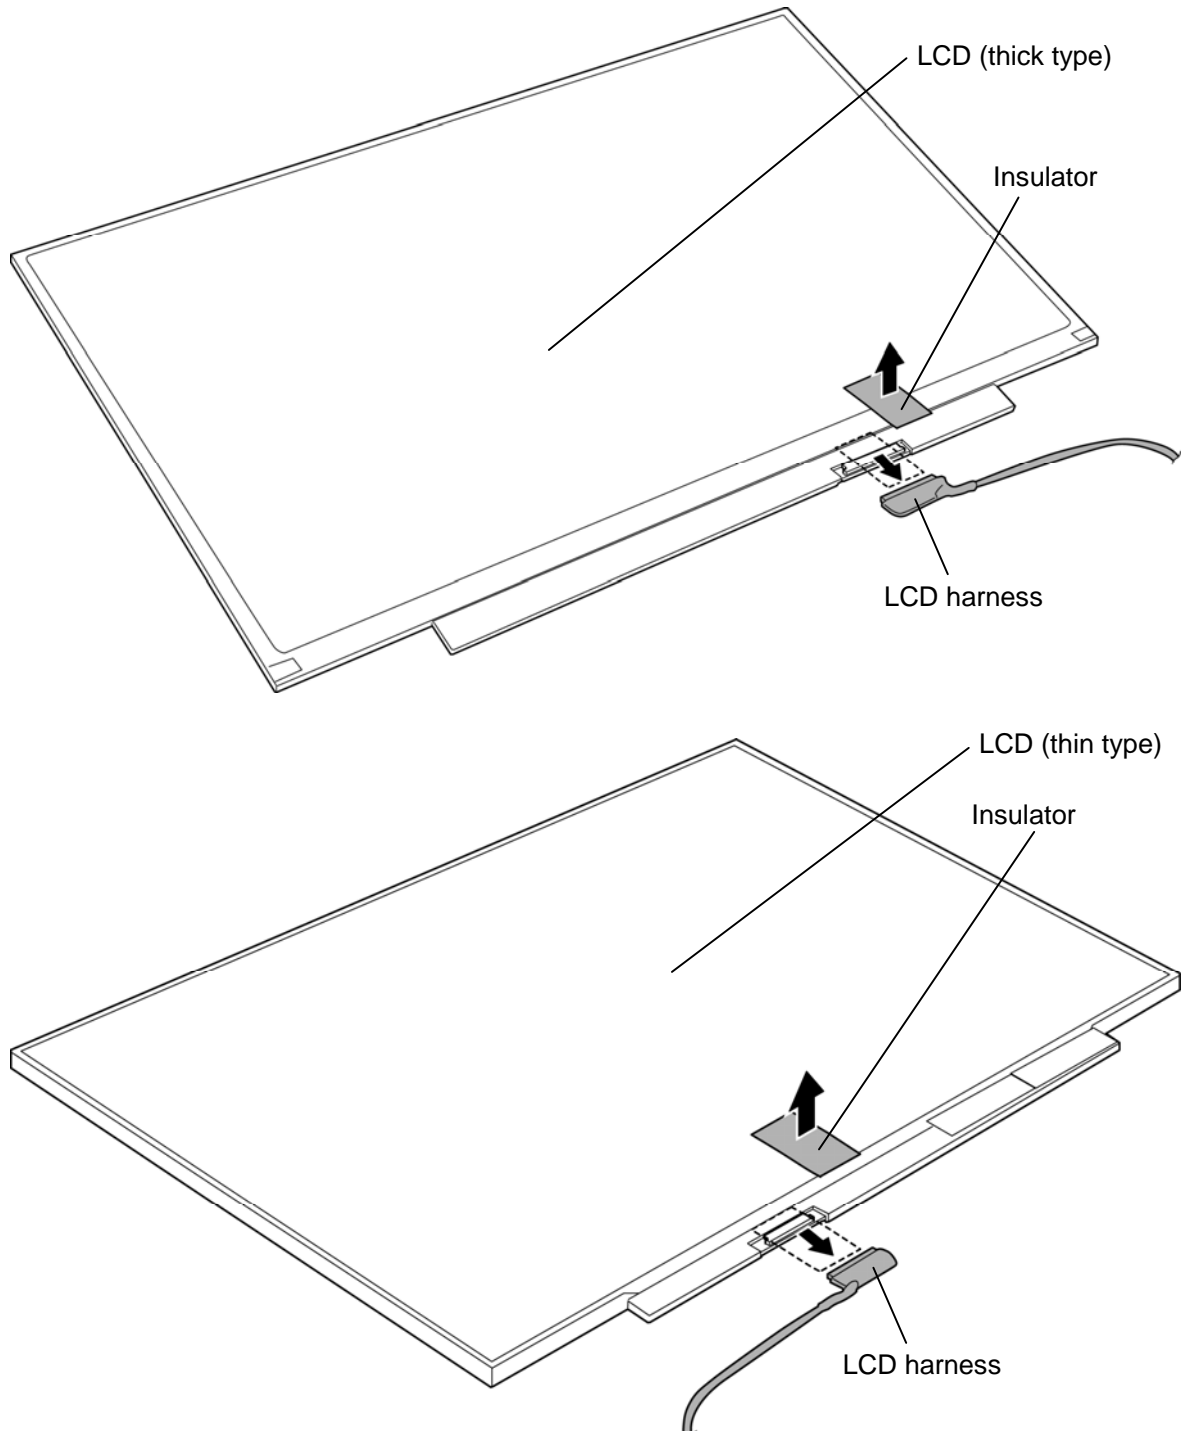


Figure 4-54 Removing the LCD (2)

### Installing the LCD


To install the LCD, follow the steps below and refer to Figure 4-51 to 4-54.

**NOTE:** When replacing the LCD (in models with normal LCD only) with a new one, stick the LCD BLIND insulator to the LCD in place.

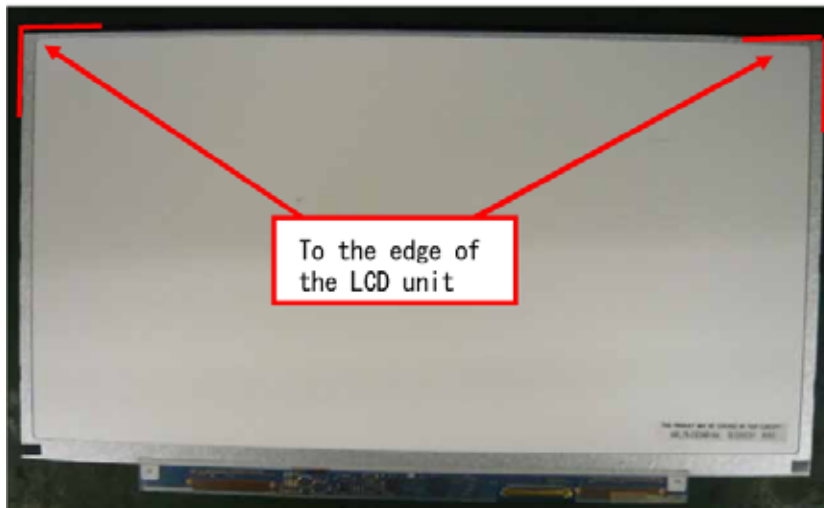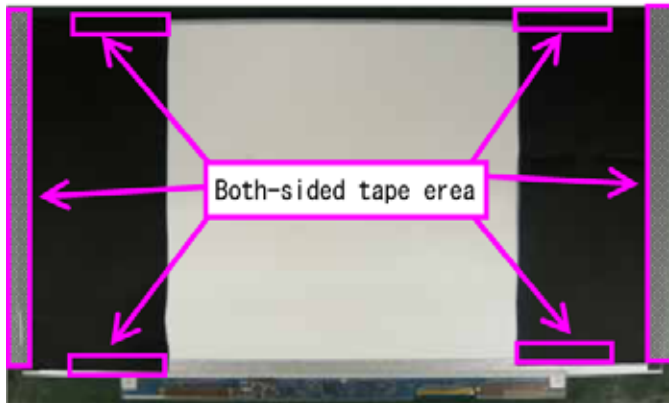

1. Connect the **LCD harness** to the connector on the LCD and stick the **insulator** on the connector (thick type of the LCD to the back and thin type of the LCD to the front).
2. Set the **LCD** to the **LCD cover** and arrange the **LCD harness** in place.
3. Fix the **LCD harness** with the **insulator**.


**NOTE:** When laying a LCD harness, refer to the following figures.

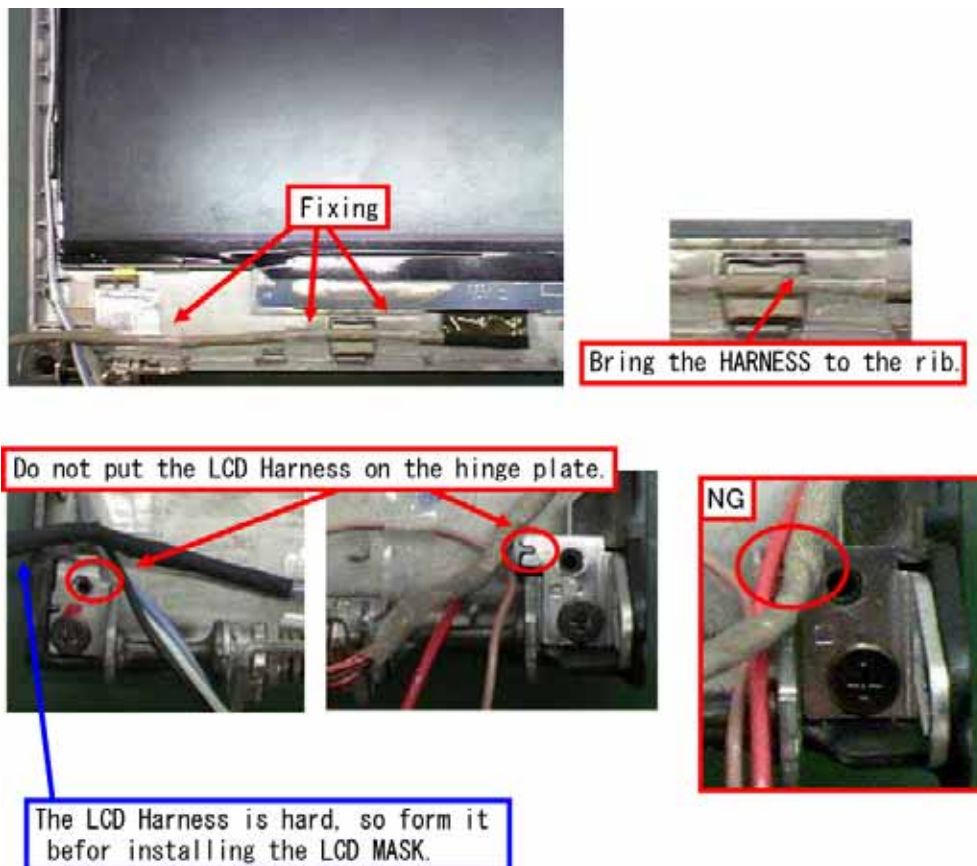


4. Set the **LCD mask** to the LCD cover while engaging the latches and secure them with the following **screws**.

- M2×2.3B      S-THIN HEAD screw      ×4
- M2×6B      Stepping screw      ×2

**NOTE:** When installing a LCD MASK, refer to the following figure.

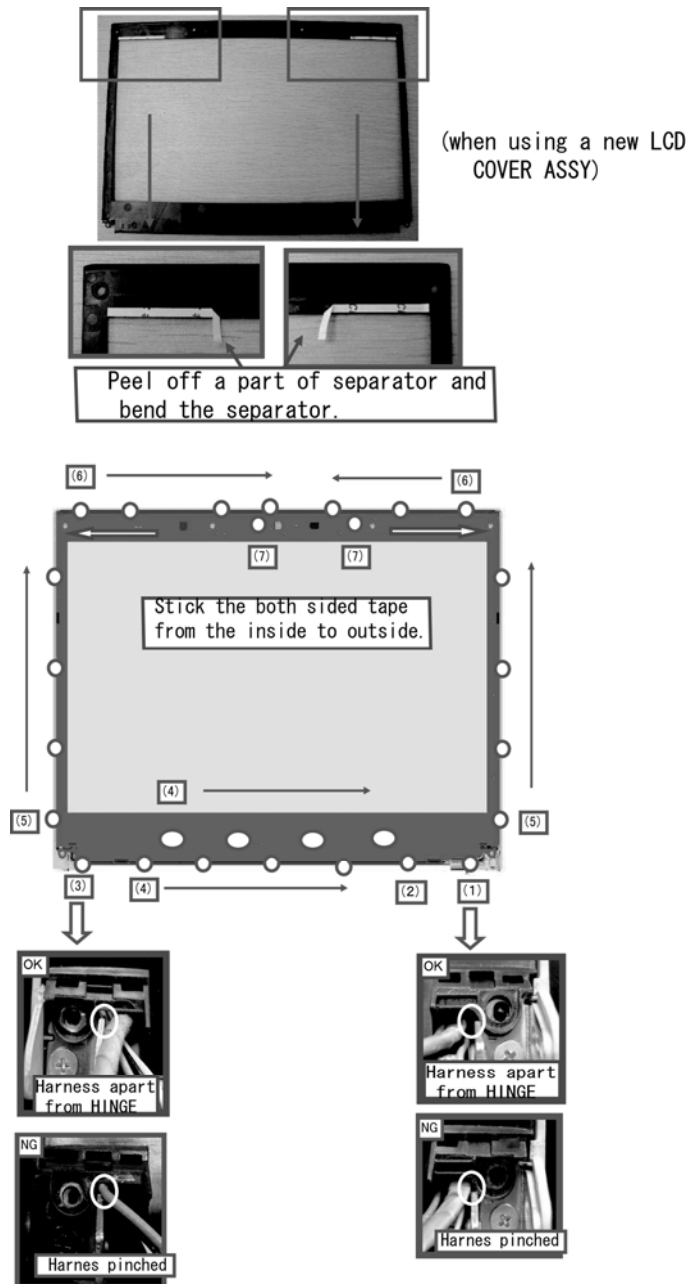

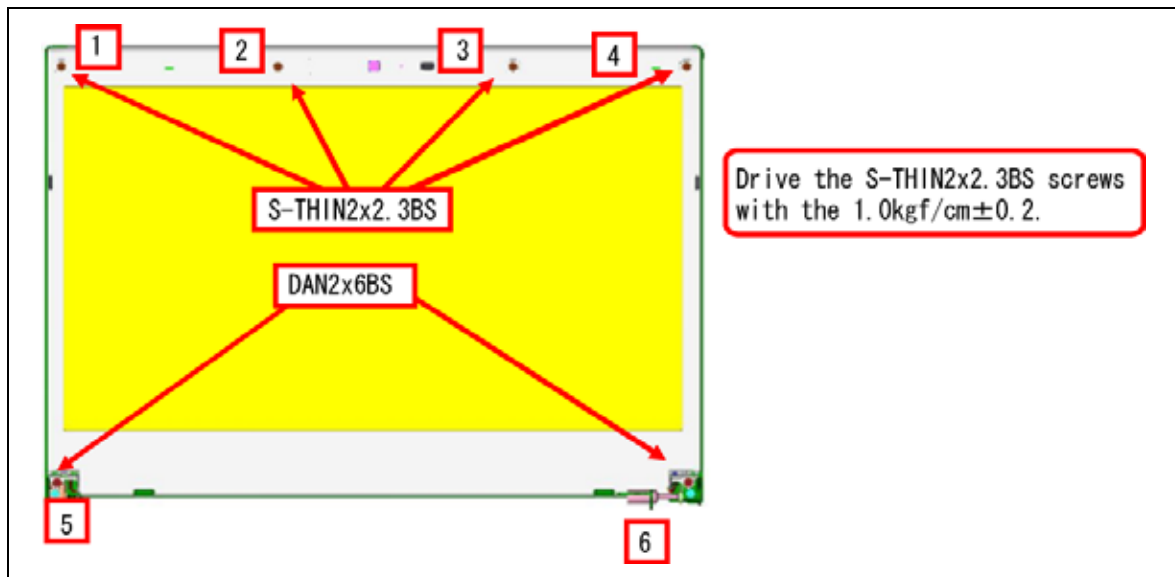

**NOTE:** When replacing the LCD mask with a new one, stick a **camera panel** to the LCD mask in place. (For the camera module model only)

5. Stick three **LCD cushions** and one **LCD mask seal** in place.
6. Set the **hinge cap L** and **hinge cap R** to the LCD mask.

## 4.26 Camera module

### Removing the Camera module

To remove the camera module, follow the steps below and refer to Figure 4-55.

1. Turn up the **insulator** and disconnect the **camera harness** from the connector on the camera module.
2. Take out the **camera module** from the slot of the LCD cover.

**NOTE:** Do not reuse the removed camera module. Be sure to use a new camera module.

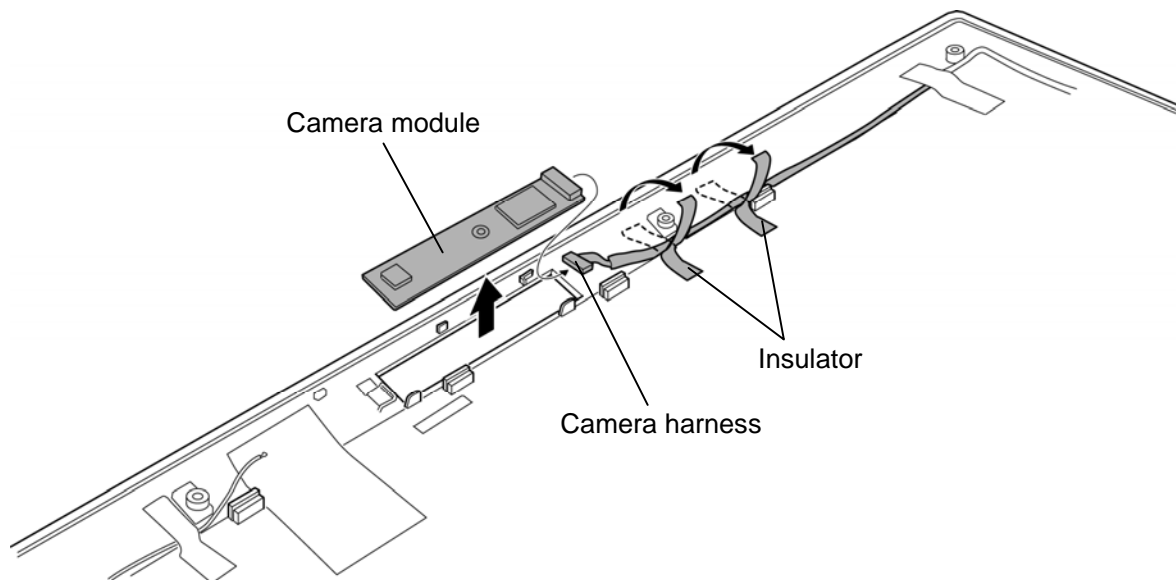


Figure 4-55 Removing the camera module




### Installing the Camera module

To install the camera module, follow the steps below and refer to Figure 4-55.

1. Stick a new **D-stick tape** to the LCD cover and peel off the separator.

**NOTE:** When replacing the LCD mask with a new one, stick a **D-stick tape** to the LCD cover in place.

When sticking the D STICK TAPE, refer to the following figure.

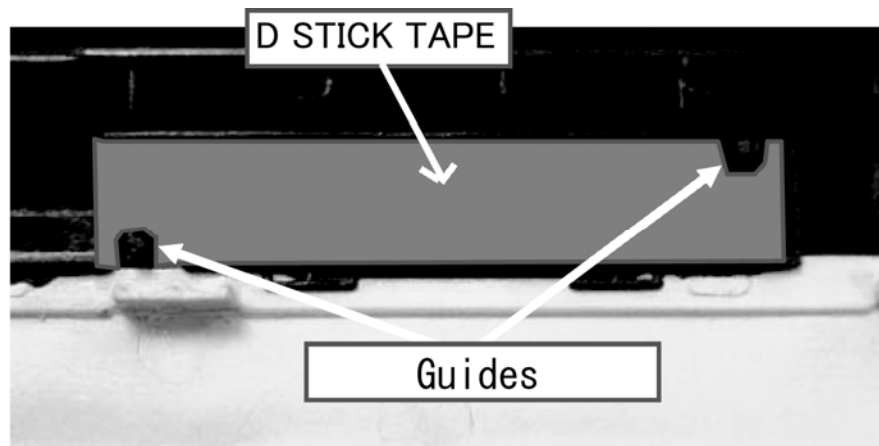

2. Connect the **camera harness** to the connector on a new camera module and stick the **camera module** to the slot of the LCD cover.
3. Arrange the **camera harness** in place and fix it with the **insulators**.

## 4.27 Wireless LAN antenna/Bluetooth antenna/3G antenna

### Removing the Wireless LAN antenna/Bluetooth antenna/3G antenna

To remove the wireless LAN antenna/Bluetooth antenna/3G antenna, follow the steps below and refer to Figure 4-56 and 4-57.

1. Turn up the **insulators** fixing the wireless LAN antennas, Bluetooth antenna, 3G antennas and camera harness.
2. Remove the **camera harness** from the LCD cover.
3. Peel off the **wireless LAN antennas/Bluetooth antenna/3G antennas** from the LCD cover.

**NOTE:** Do not reuse the removed wireless LAN antennas, Bluetooth antenna and 3G antennas. Be sure to use new wireless LAN antennas, Bluetooth antenna and 3G antennas.

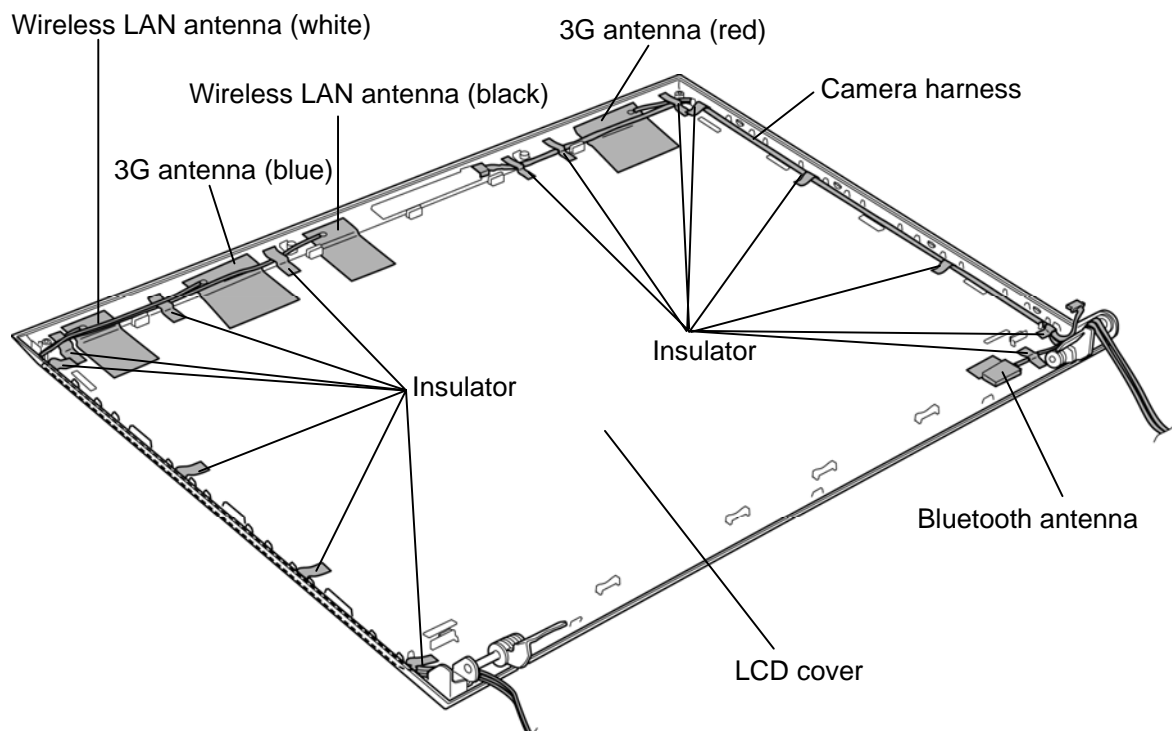


Figure 4-56 Removing the wireless LAN antenna/Bluetooth antenna/3G antenna (3G+Bluetooth model)

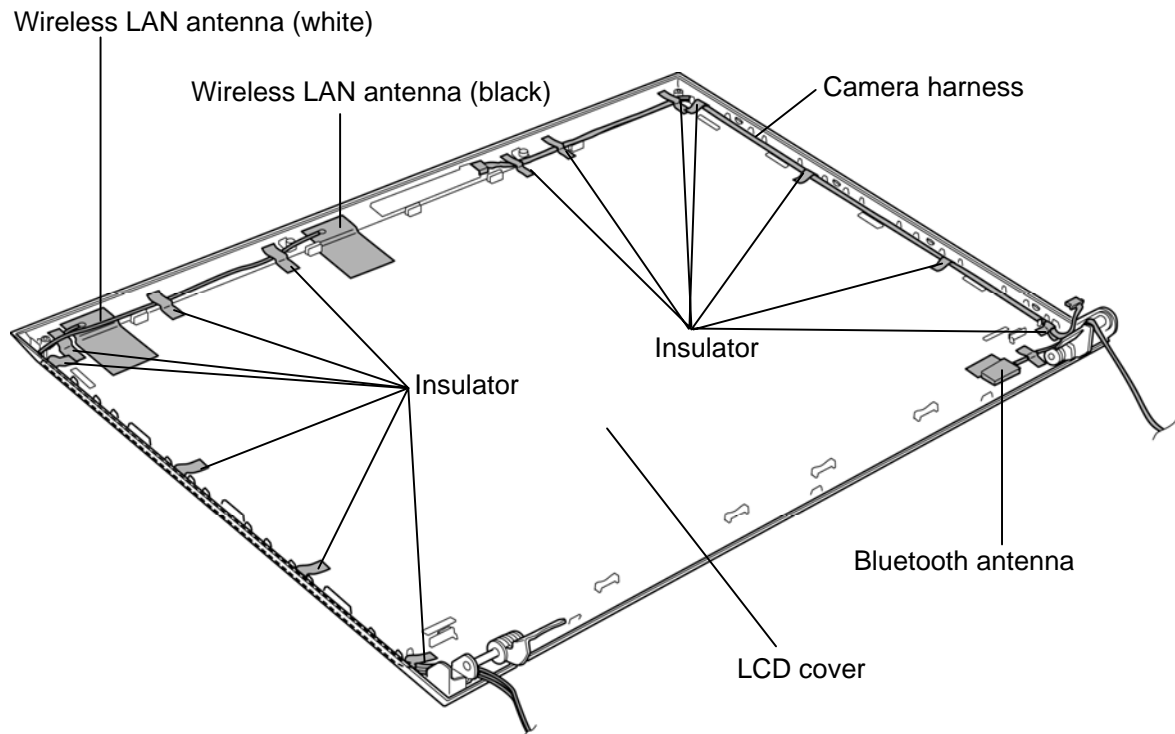


Figure 4-57 Removing the wireless LAN antenna/Bluetooth antenna/3G antenna  
(No-3G model)

Prepare required parts in advance, when replacing the following items.

ITEM	Parts List ITEM No	PART NAME	Quantity
LCD COVER ASSY	61-B	LCD COVER ASSY	1
	15	CAMERA MODULE	1
	24	W-LAN/WIMAX ANTENNA WITH CABLE (Main)	1
	25	W-LAN/WIMAX ANTENNA WITH CABLE (Sub)	1
	39	BLUETOOTH ANTENNA	1
	63		1
	64		1

**Installing the Wireless LAN antenna/Bluetooth antenna/3G antenna**

To install the wireless LAN antenna/Bluetooth antenna/3G antenna, follow the steps below and refer to Figure 4-56 and 4-57.

1. Stick the **wireless LAN antennas/Bluetooth antenna/3G antennas** on the LCD cover in place.
2. Set the **camera harness** on the LCD cover.
3. Arrange the wireless LAN antennas, Bluetooth antenna, 3G antennas and camera harness and fix them with the **insulators**.

**CAUTION:** Use the correct parts in each LCD model.

List of Parts related to LCD Cover

Model configuration		Slim LCD Model	
ODD	ANTENNA		
•No ODD Model	No WL-LAN	•LCD Harness A •LCD COVER INSU F	A: GDM900001952 F: GM9030579111 x3
	WiMAX 3G	•LCD Harness A •COVER INSU C •LCD COVER INSU F •Only for WiMAX AL TAPE H •Only for 3G ferrite sheet I	A: GDM900001994 C: GM9030580111 F: GM9030579111 x3 H: GM9020582641 I: GY3C0000X110
•9.5mm ODD Model	No WL-LAN	•LCD Harness A •LCD COVER INSU F	A: GDM900001952 F: GM9030579111 x3
	WiMAX 3G	•LCD Harness A •COVER INSU C •LCD COVER INSU F •Only for WiMAX AL TAPE H •Only for 3G ferrite sheet I	A: GDM900001994 C: GM9030580111 F: GM9030579111 x3 H: GM9020582641 I: GY3C0000X110

Model configuration		Normal LCD Model			
ODD	ANTENNA	AUO		LG	
•No ODD model	No WL-LAN				
	WiMAX 3G	•LCD Harness A •Cover Gasket B •INSU C •BASE sponge D  •No WiMAX •No 3G	A: GDM900001993 B: GDM900002035 C: GM9030580111 D: GM90210125M1	•LCD Harness A •COVER INSU C  •No WiMAX •No 3G	A: GDM900001993 C: GM9030580111
•9.5mm ODD Model	No WL-LAN	•LCD COVER Pressure rubber J Pressure rubber K	J: GM9026761231 x2 K: GM9026761251 (W-LAN) K: GM9026761261 (WiMAX/No)	•LCD COVER Pressure rubber J Pressure rubber K	J: GM9026761231 x2 K: GM9026761251 (W-LAN) K: GM9026761261 (WiMAX/No)
	WiMAX 3G	•Pressure cushion M LCD Hold Cushion GUM SHEET AUO L	M: GM9030692111 L: GM9030585111 x6	•Pressure cushion M LCD Hold Cushion SQUARE CUSHION M	M: GM9030692111 M: GM90210125H1 x6

Slim LCD model


Parts	No.	LAN only	LAN+BT	LAN+3G	LAN+CAM	LAN+CAM+3G	LAN+CAM+BT	LAN+CAM+BT+3G	LAN+BT+3G
INSU SQUARE	GM9021011991	3	4		6		7		5
INSU ANT HOLD S	GM9027155111	4				8			
Parts	No.	Non	BT only	3G only	CAM only	CAM+3G	CAM+BT	CAM+BT+3G	BT+3G
INSU SQUARE	GM9021011991	0	1		3			4	
INSU ANT HOLD S	GM9027155111	0		8	4	8	4	8	

Normal LCD model


Parts	No.	LAN only	LAN+BT	LAN+CAM	LAN+CAM+BT	LAN+3G	LAN+CAM+3G	LAN+CAM+BT+3G	LAN+BT+3G
INSU SQUARE	GM9021011991	3		4				5	
INSU ANT HOLD S	GM9027155131	0	1	2	3	4		5	
Parts	No.	Non	BT only	CAM only	CAM+BT	3G only	CAM+3G	CAM+BT+3G	BT+3G
INSU SQUARE	GM9021011991	0		1				2	
INSU ANT HOLD S	GM9027155131	0	1	2	3	4		5	

Replacing the antennas with care of the followings:


When sticking INSU ANT HOLD S, refer to the following figure.

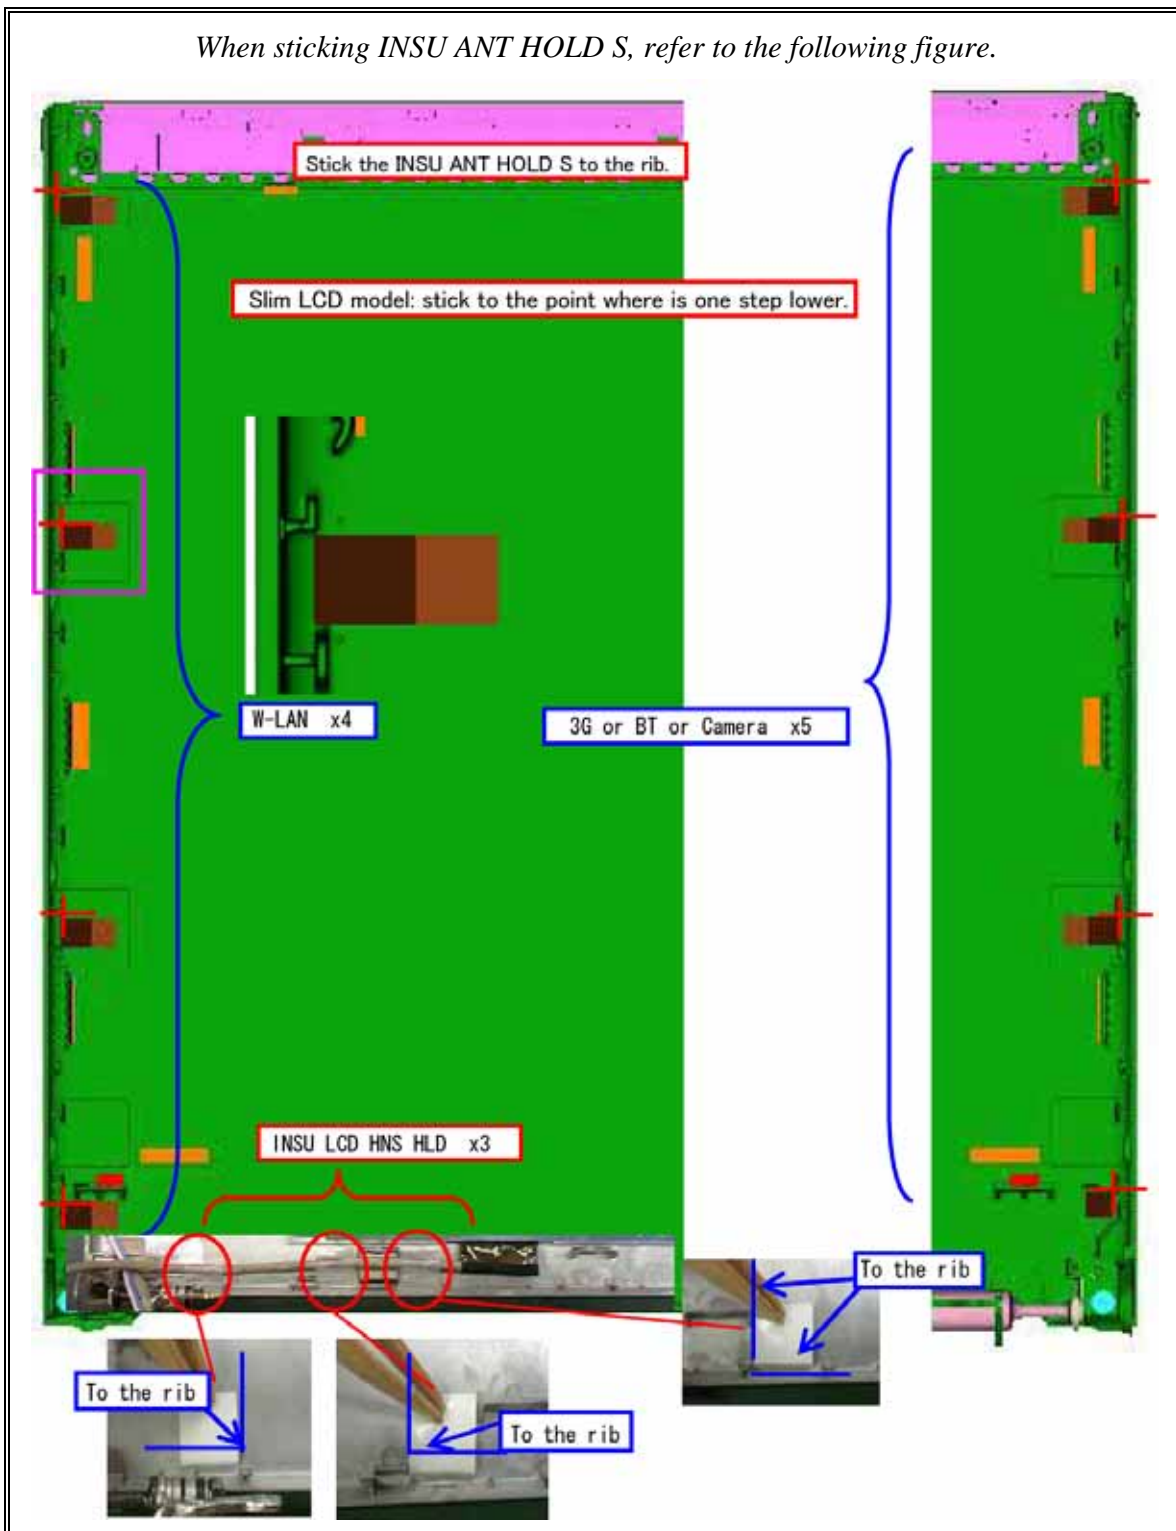

When sticking W-LAN antennas and 3G antennas, refer to the following figures.

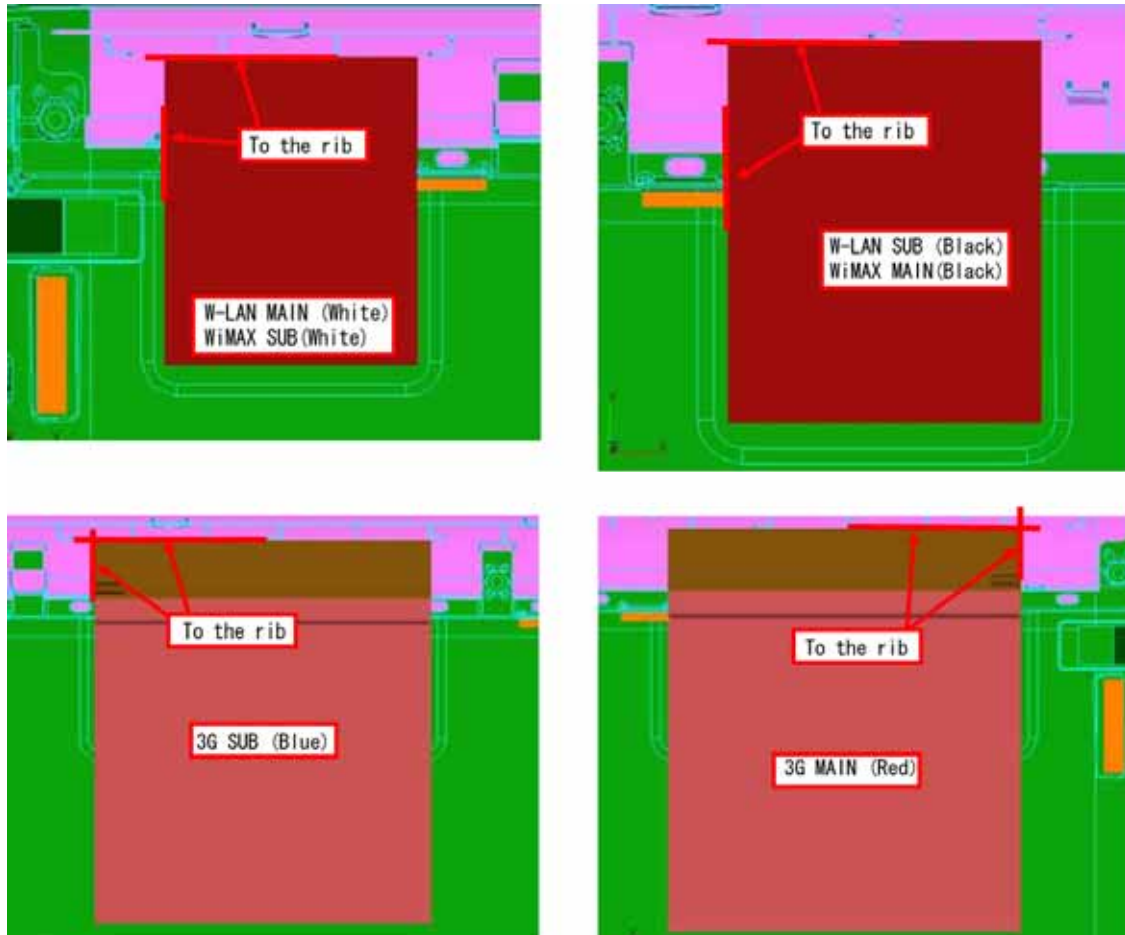

When sticking INSU SQUARE, refer to the following figures.

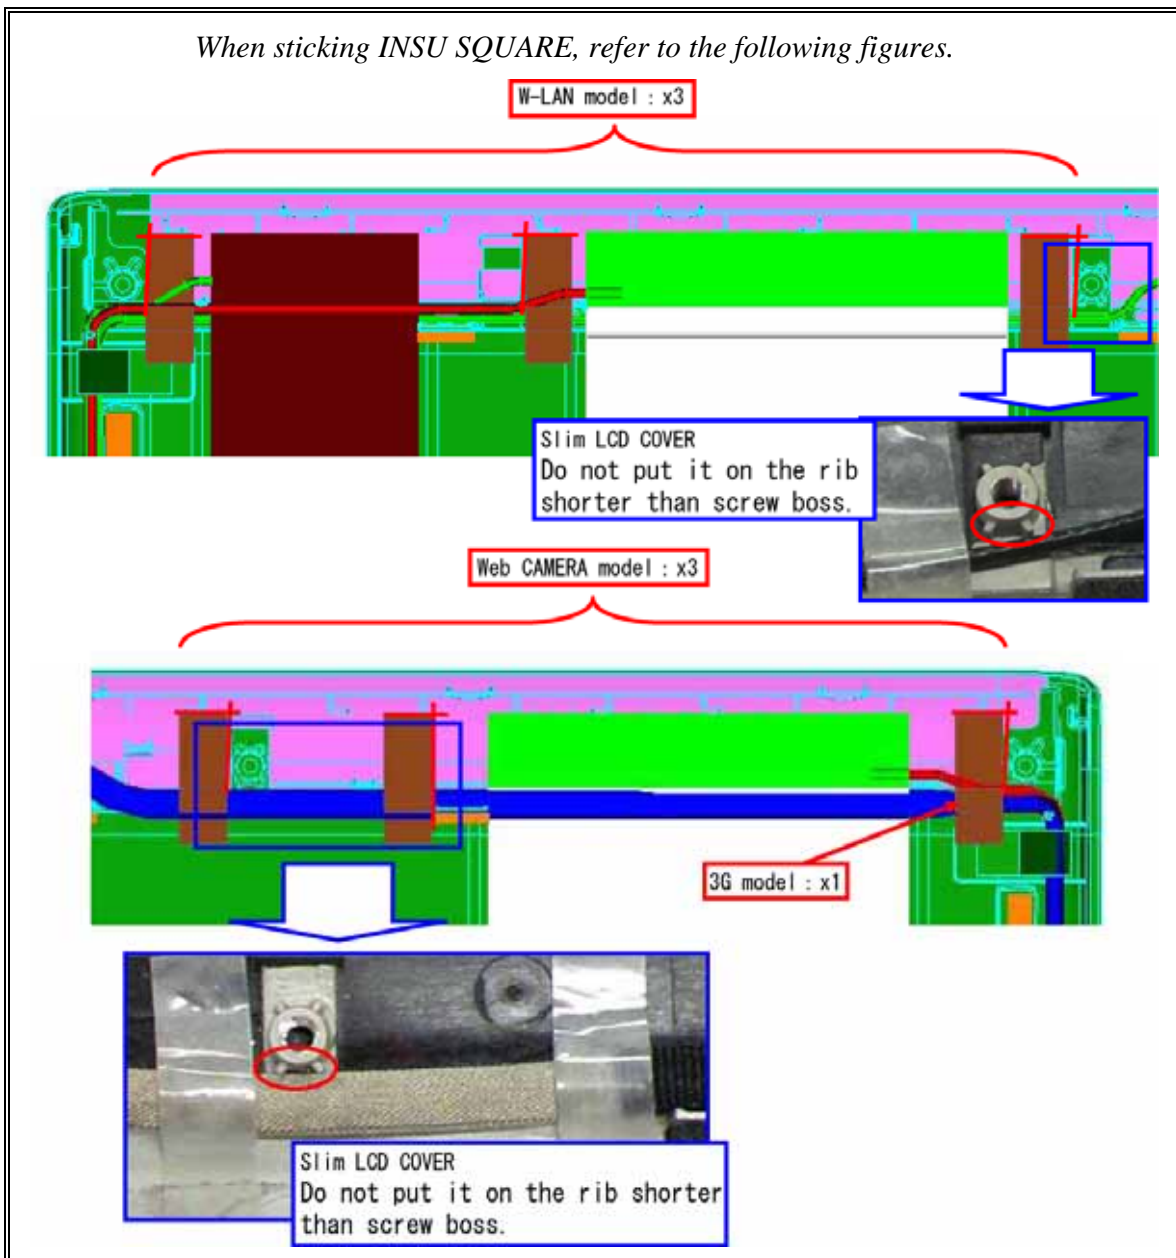



When laying and holding the cables, refer to the following figure.

Slim LCD COVER




Set the black and blue cables in parallel on the white one.




Do not let the cable on the ribs.

Lay the cables in the order of black-blue-white.



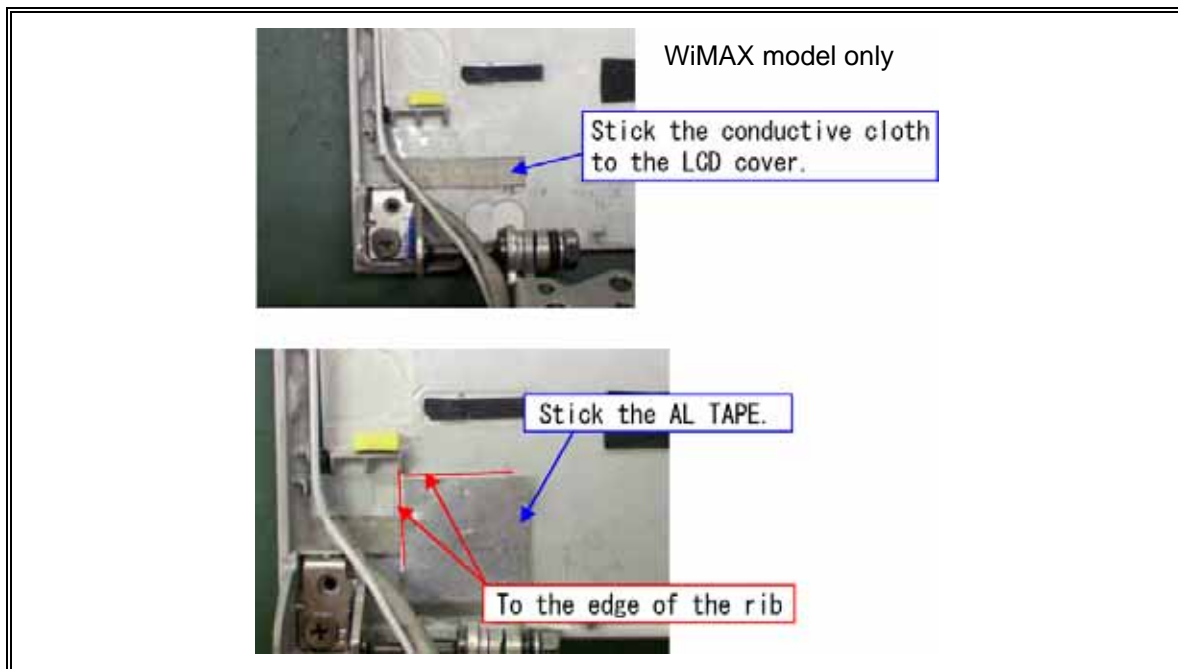

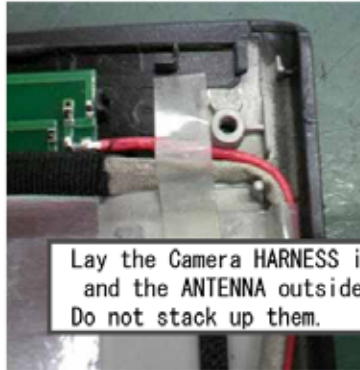
**Slim LCD COVER model**

Lay the Camera HARNESS inside  
and the ANTENNA outside.  
Do not stack up them.




Set the Camera HARNESS on the ANTENNA.  
OK, even if they are in prallel.




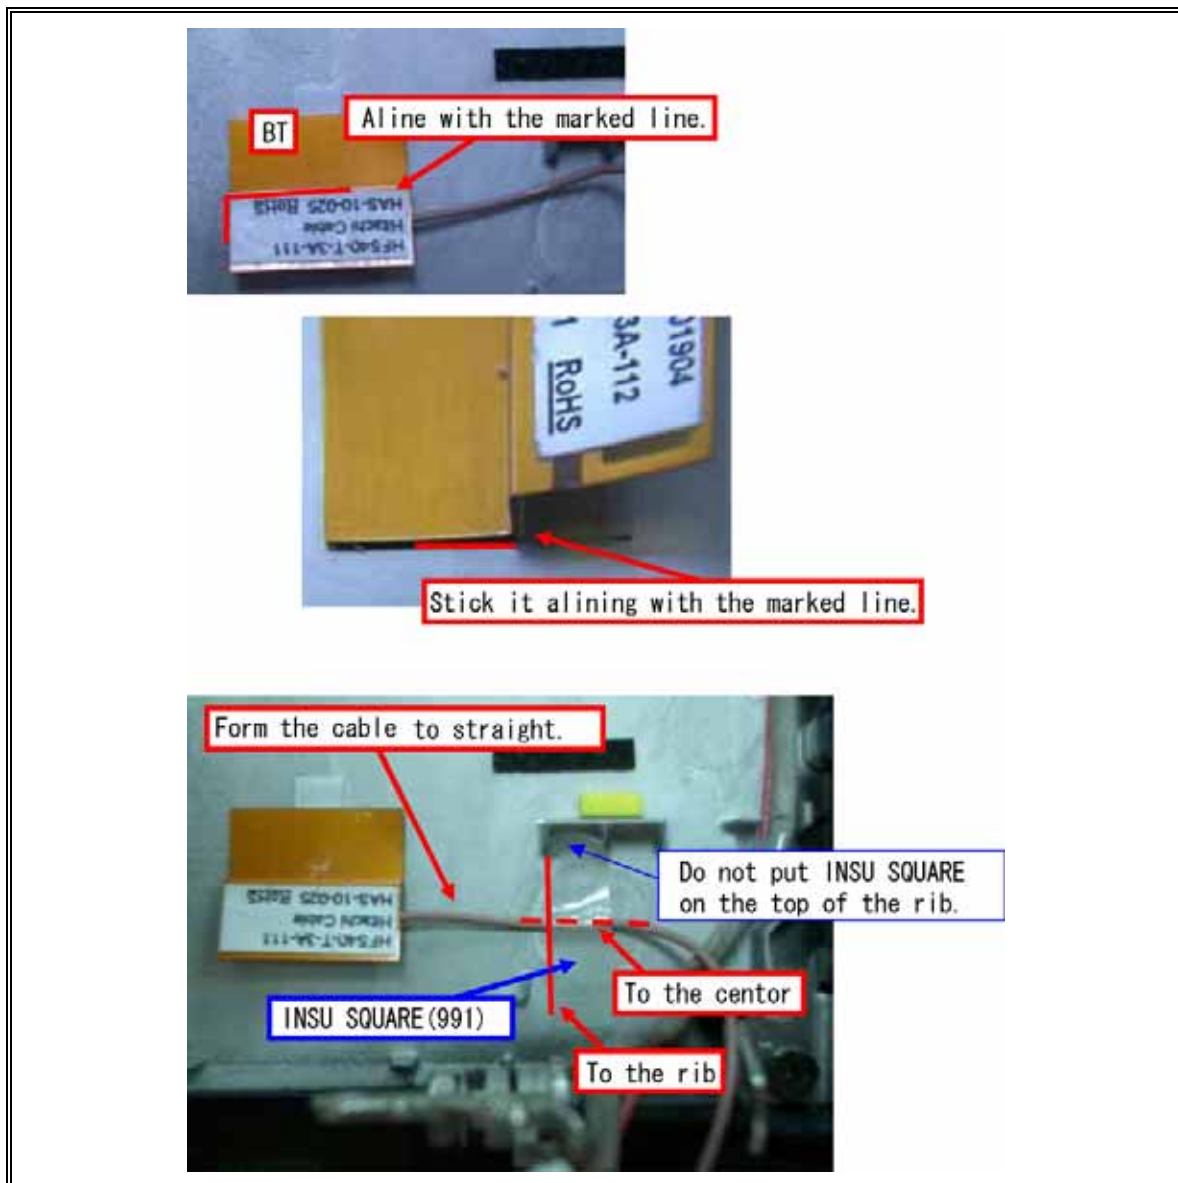


When sticking the antennas to the normal LCD cover, refer to the following figures.

- Stick INSU ANT HOLD S to LCD COVER ASSY.  
<3G Model only>
- Stick INSU ANT HOLD D to LCD COVER ASSY.

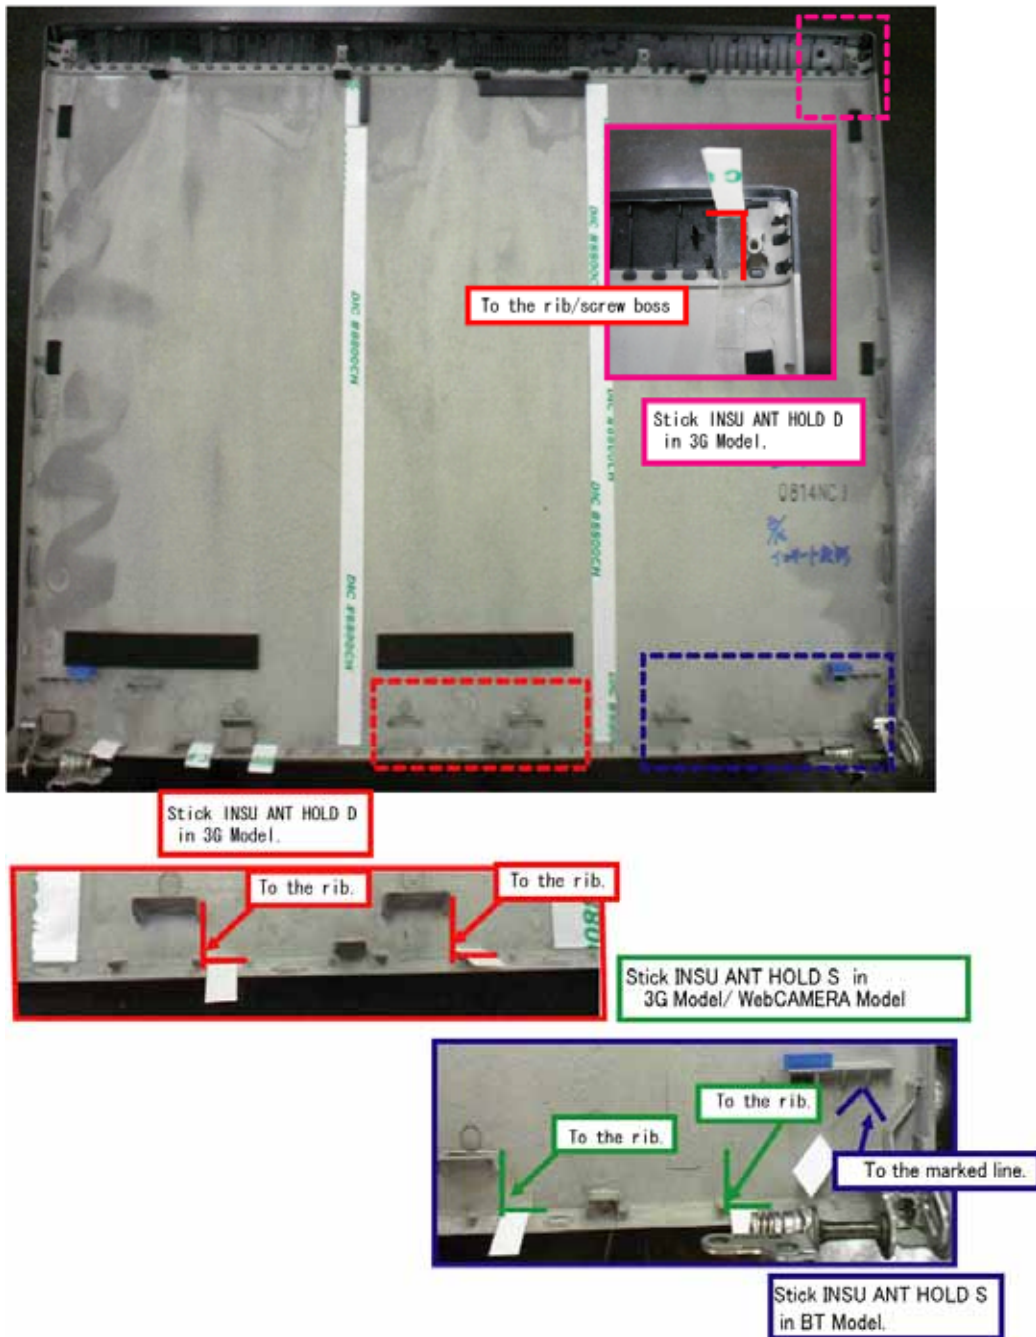

- Stick SQUARE CUSHION (6p) / GUM SHEET (6p) to LCD COVER2 ASSY and peel off the separators.  
But do not peel off the separator1/2 in no W-LAN Model and no 3G Model, separator3 in no Web CAMERA model and no 3G Model.

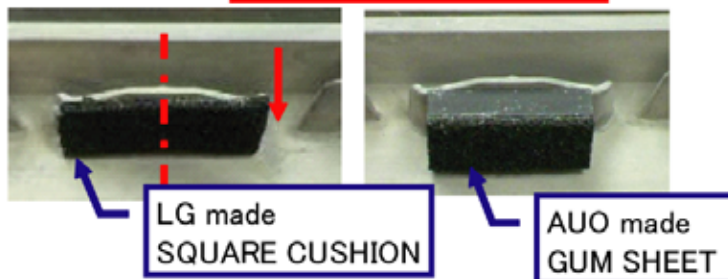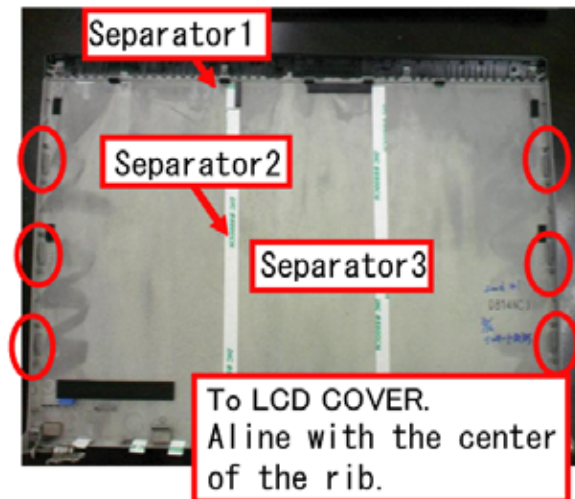





● Stick W-LAN SUB (WiMAX MAIN) ANTENNA/CABLE.



WiMAX ANTENNA





- Stick G SUB ANTENNA (blue) /W-LAN MAIN (WiMAX SUB) ANTENNA (white).

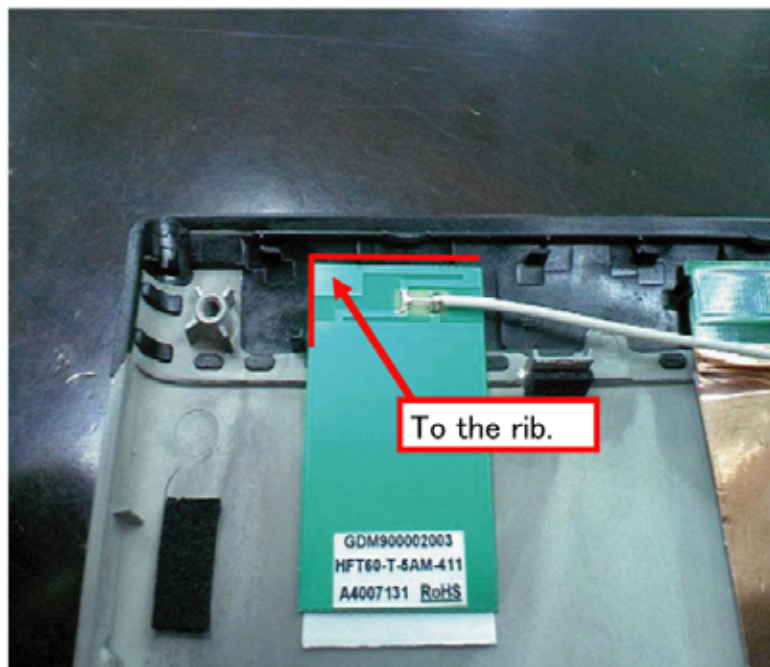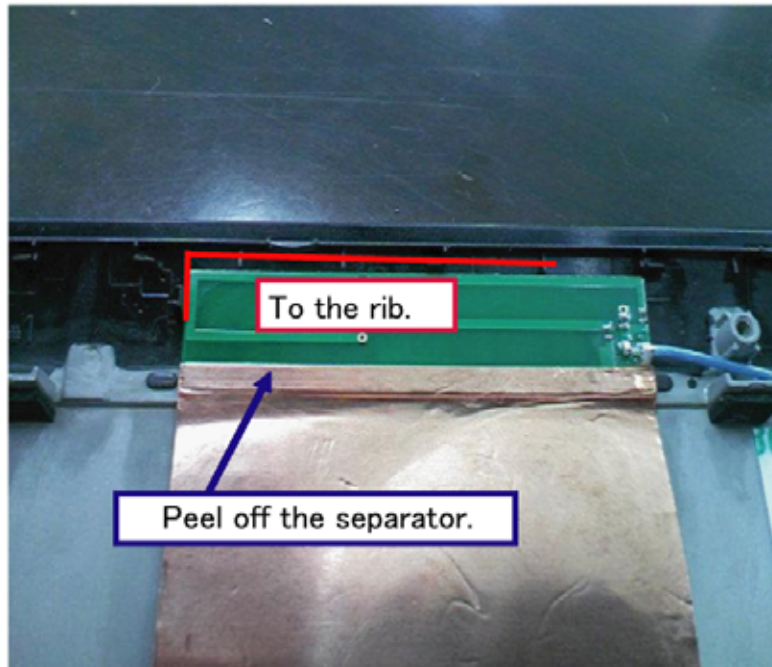





● Stick INSU SQUARE and fix ANTENNA CABLE

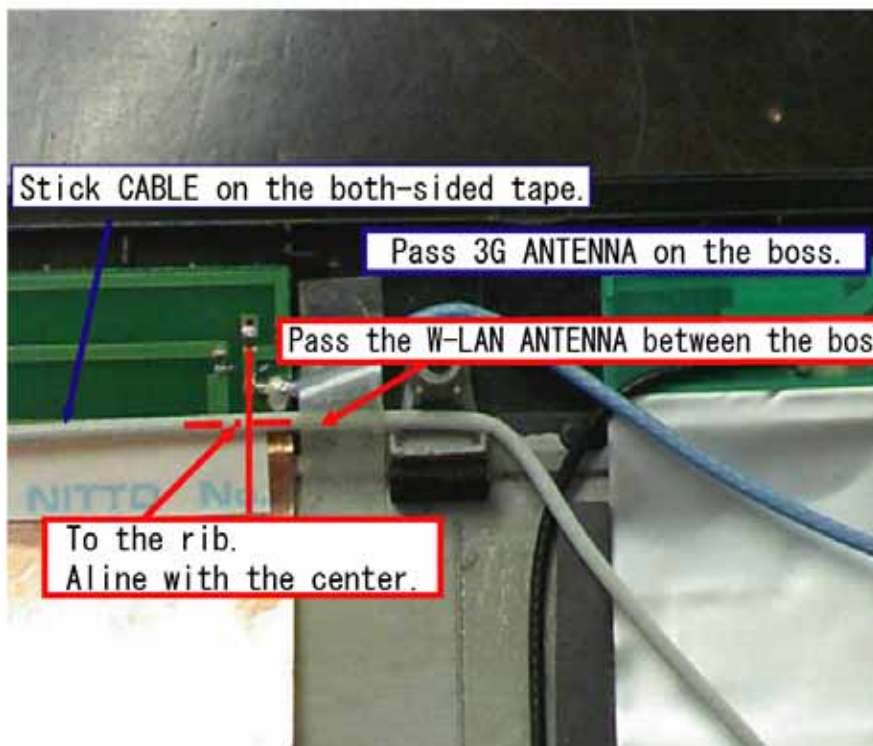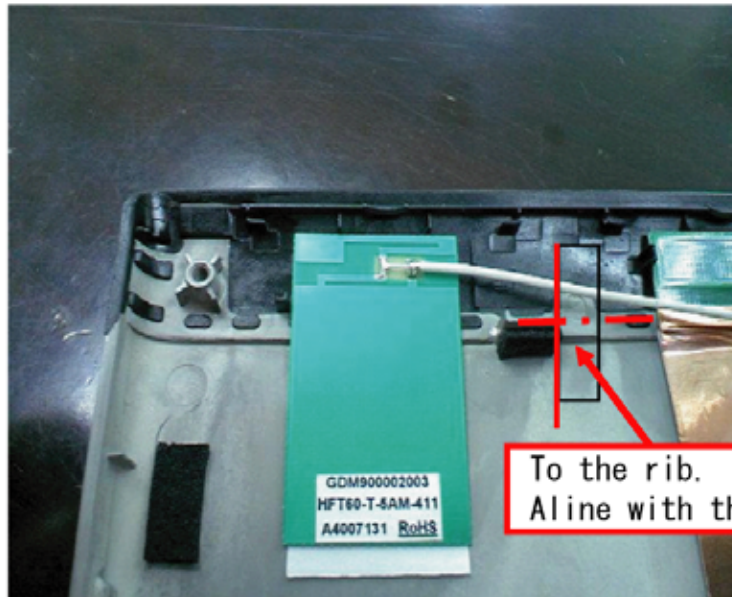


- Stick ANTENNA CABLE on the both-sided tape.

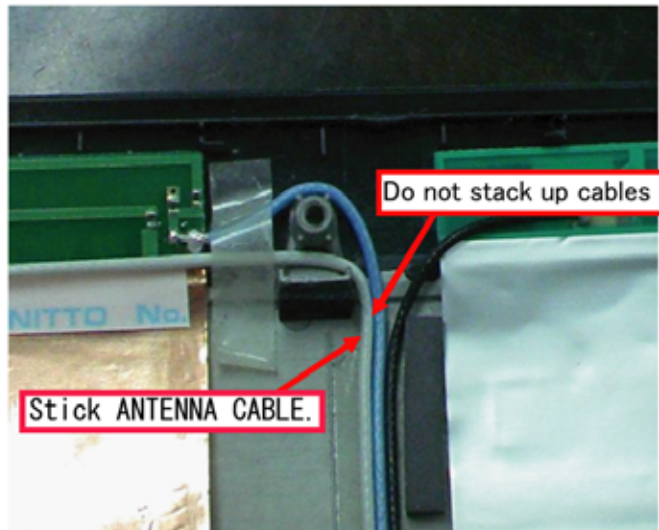



- Fix ANTENNA CABLE with INSU SQUARE.

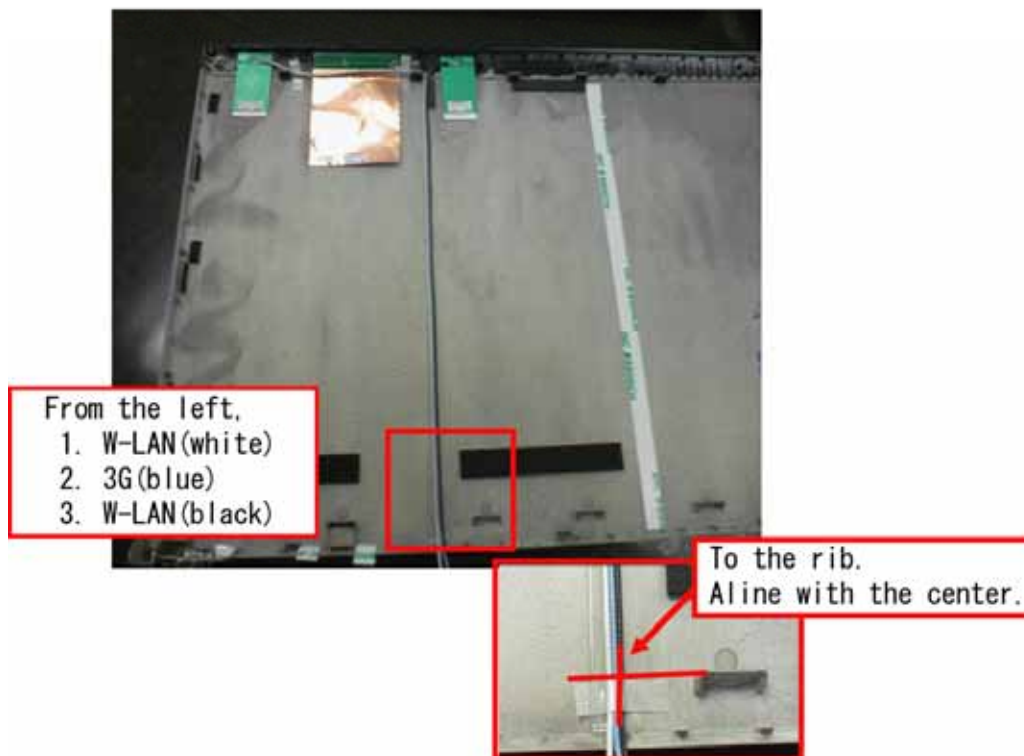

- Form W-LAN ANTENNA CABLE (white, black) toward the left side.
- Form 3G ANTENNA CABLE (blue) toward the right side and fix with two insulators.

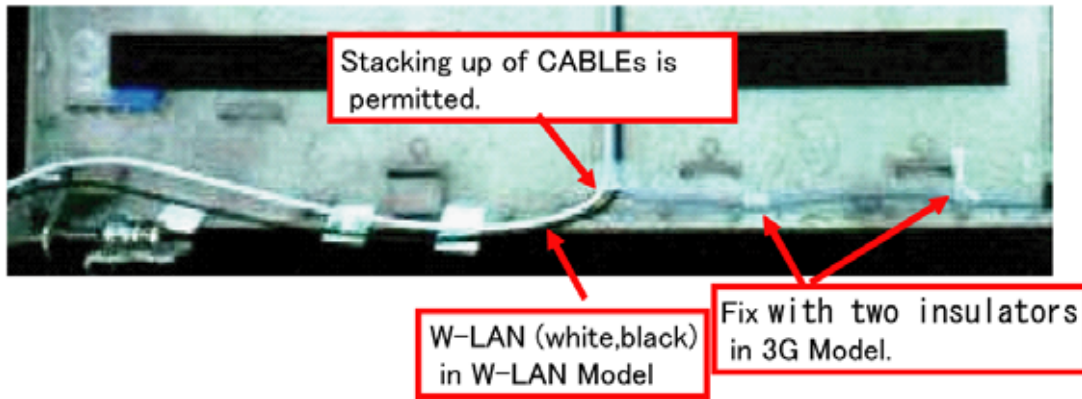


- Stick 3G MAIN ANTENNA (red) to LCD COVER2 ASSY, fix CABLE with INSU ANT HOLD D and stick CABLE on ANTENNA.

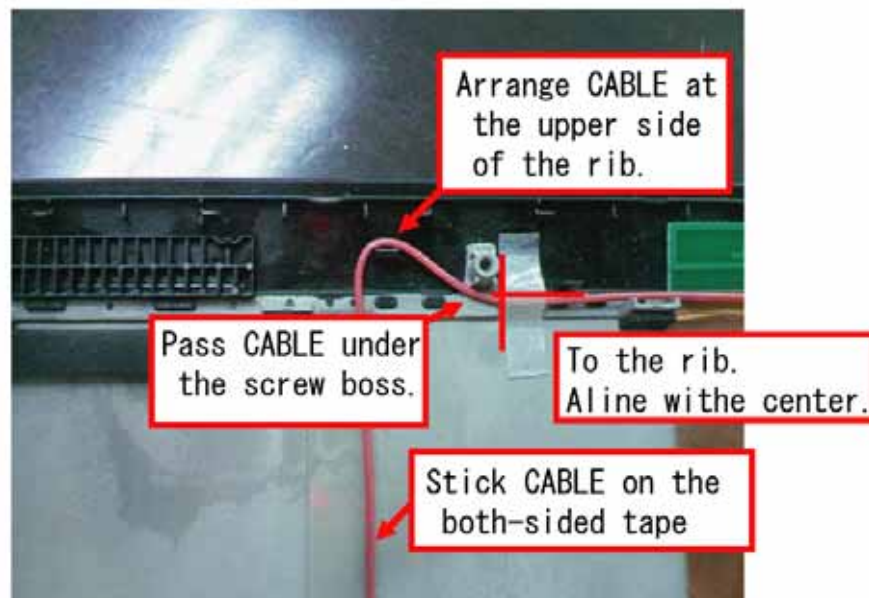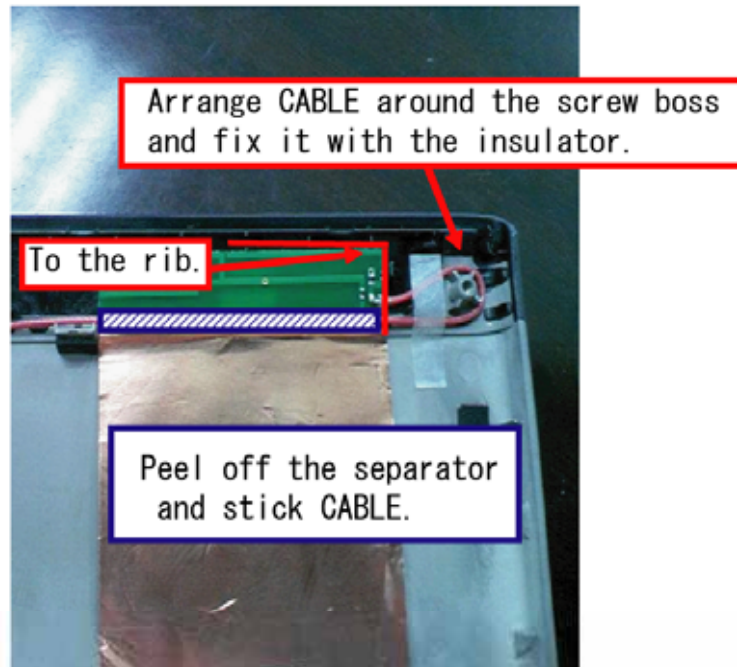





- Stick the acetate tape edge of Web CAMERA HARNESS onto the slope of LCD COVER.

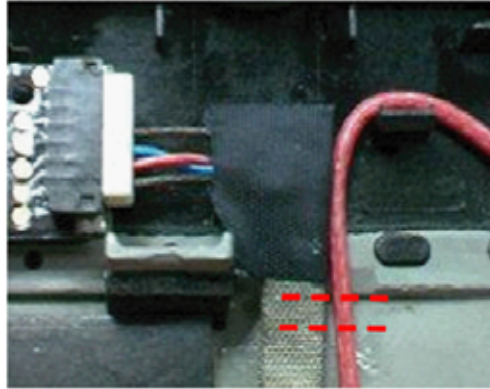


- Stick Web CAMERA HARNESS and 3G ANTENNA CABLE on the both-sided tape.

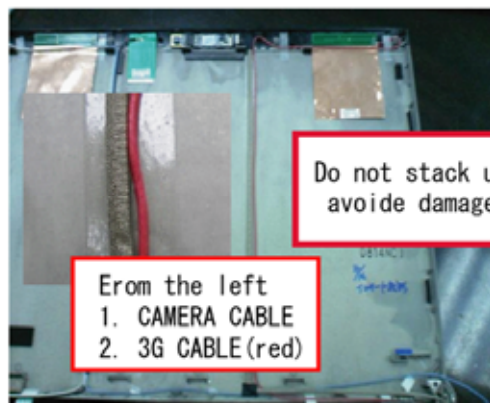


- Fix HARNESS with INSU SQUARE and INSU ANT HOLD S.

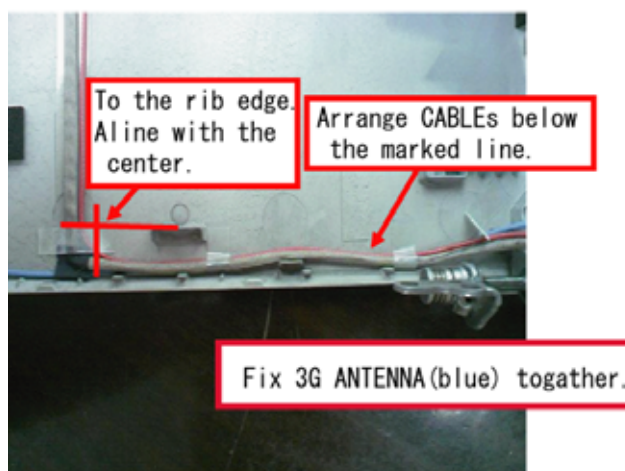


- Stick BT ANTENNA to LCD COVER alining with the marked line.

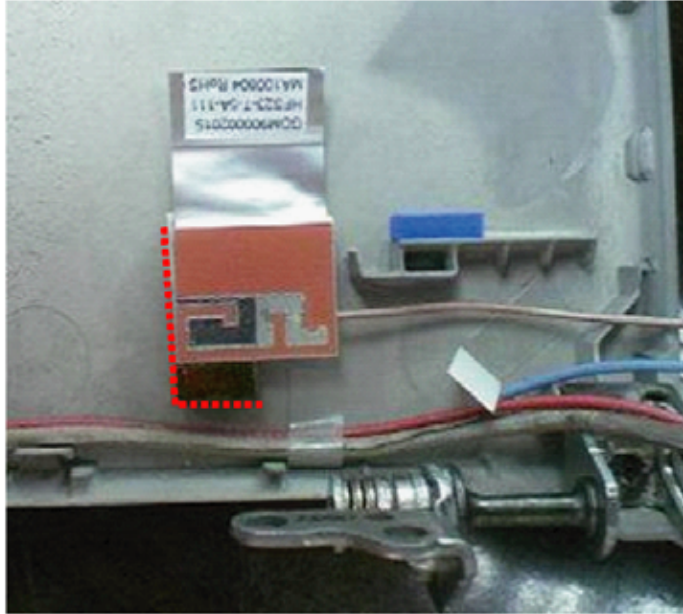



- Fix BT ANTENNA CABLE with INSU ANT HOLD S and arrange it toward the HINGE axis.

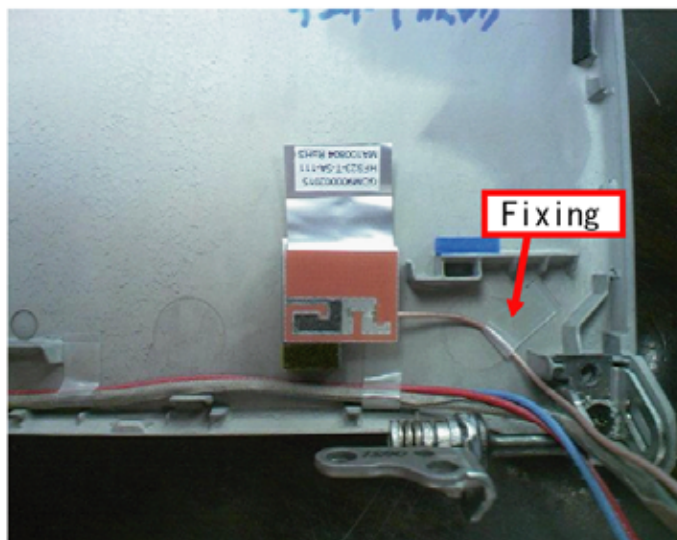




- Stick INSU SQ CUSHION(BT) onto LCD COVE

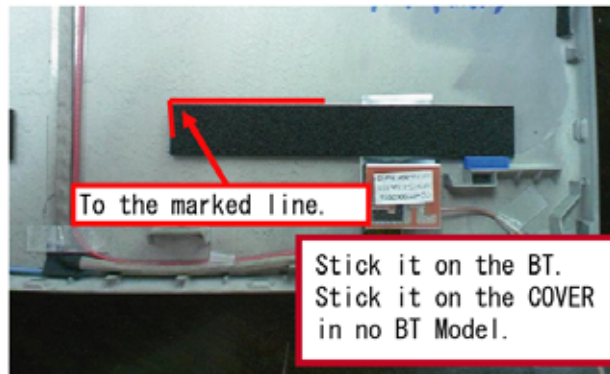

- Stick GUM SHEET (3G) 2p to LCD COVER.

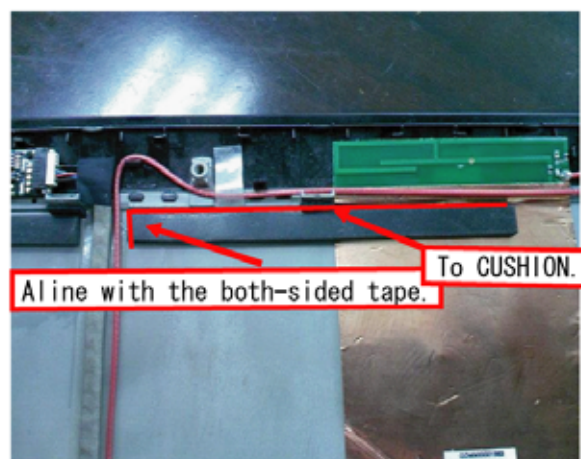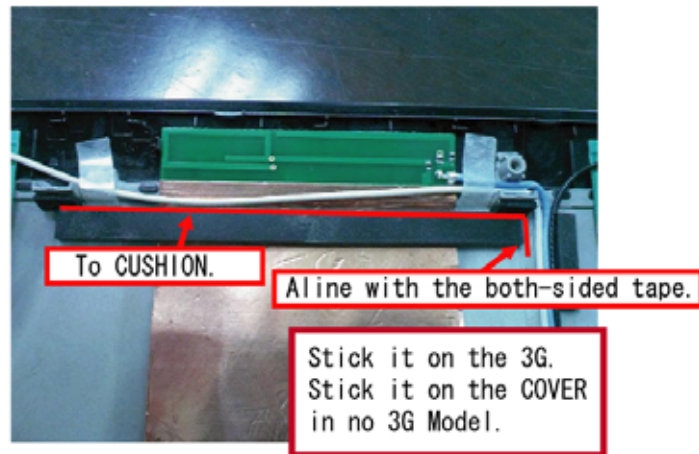

- Stick GUM SHEET (WL) onto LCD COVER.  
<WiMAX Model/ no WL Model>
- Stick GUM SHEET (Wi) onto LCD COVER.

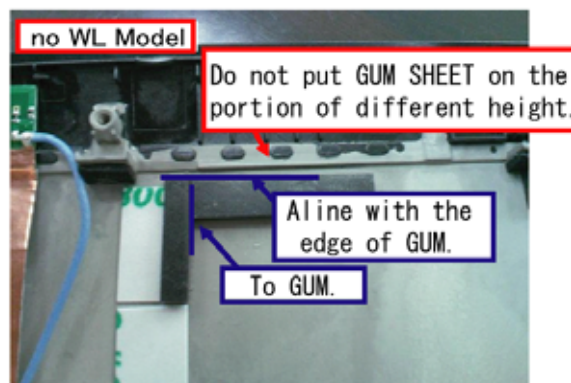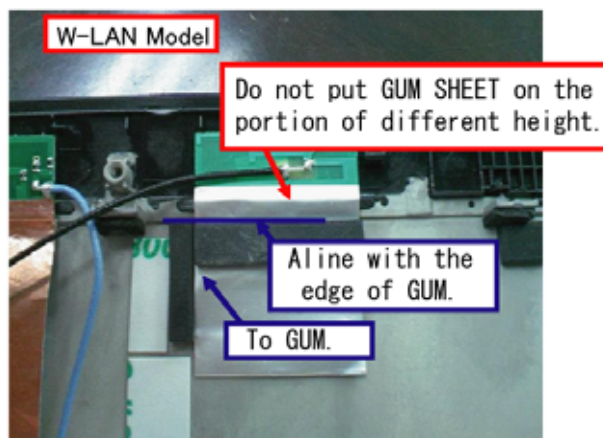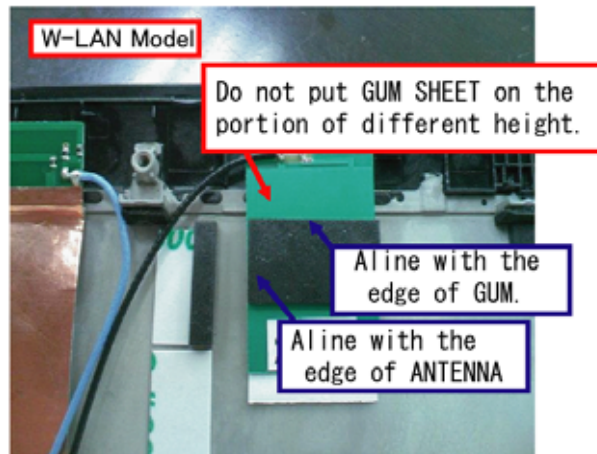



## 4.28 Hinge

### Removing the Hinge

To remove the hinge, follow the steps below and refer to Figure 4-58.

1. Remove the following **screws** securing the hinges.
  - M2×5B S-THIN HEAD ×2
2. Remove the **hinges** (right and left) and **key plate** from the LCD cover.

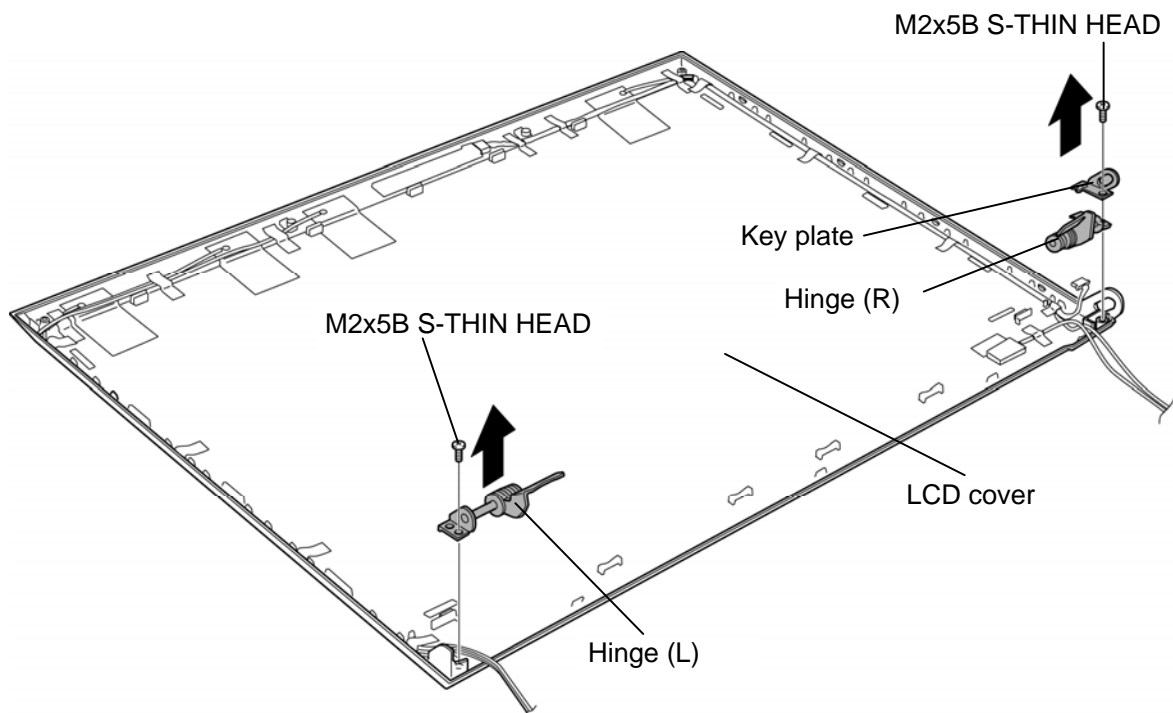


Figure 4-58 Removing the hinge

### Installing the Hinge

To install the hinge, follow the steps below and refer to Figure 4-58.

1. Set the **key plate** and **hinges** (right and left) to the LCD cover, and secure them with the following **screws**.
  - M2×5B S-THIN HEAD ×2



---

# Appendices

---



## Appendix Contents

### Appendix A Handling the LCD Module .....A-1

### Appendix B Board Layout.....B-1

B.1	System board (FAL3SY*) Front View.....	2
B.2	System board (FAL3SY*) Back View .....	4
B.3	eSATA/HDMI/USB board (FAL3ES*) View .....	6
B.4	Touch Pad/LED Button board (FAL3TP*) View .....	8
B.5	Finger sensor board (FULFS*) View.....	9
B.6	Sound/USB board (FAL3U2*) View: .....	10
B.7	3G/SIM board (FAL33G*) View: .....	12
B.8	SD/SATA ODD board (FAL3SA*) View:.....	14
B.9	GMR sensor (LID) board (FAL3PN*) View: .....	16
B.10	Sound/USB board (FAL3U3*) View: .....	17

### Appendix C Pin Assignments .....C-1

#### System board (FAL3SY\*)

C.1	CN1400 Memory A connector(200-pin).....	3
C.2	CN1410 Memory B connector (200-pin).....	6
C.3	CN1900 SATA HDD/SSD interface connector (25-pin).....	9
C.4	CN2110 PC CARD interface connector (80-pin) .....	10
C.5	CN2300 DOCKING interface connector (100-pin).....	12
C.6	CN2520 EXPRESS CARD interface connector (40-pin).....	14
C.7	CN2600 PCI-E Mini CARD interface connector (52-pin) .....	15
C.8	CN3230 Keyboard interface connector (30-pin) .....	16
C.9	CN3380 FAN interface connector (4-pin) .....	16
C.10	CN4050 LAN interface connector (8-pin).....	16
C.11	CN4440 Bluetooth interface connector (6-pin) .....	17
C.12	CN5300 LCD interface connector (35-pin) .....	17
C.13	CN5400 CRT interface connector (15-pin).....	18
C.14	CN8800 DC-IN connector (4-pin).....	18
C.15	CN8110 Battery connector (10-pin) .....	18

C.16	CN9300 RTCVCC interface connector (3-pin) .....	19
C.17	CN9540 FAL3ES* board interface connector (50-pin) .....	19
C.18	CN9550 FAL3TP* board interface connector (20-pin) .....	20
C.19	CN9551 FULFS* board interface connector (6-pin) .....	20
C.20	CN9570 FAL3U** board interface connector (50-pin).....	21
C.21	CN9580 FAL33G* board interface connector (25-pin).....	22
C.22	CN9700 FAL3SA*board interface connector (50-pin).....	23
C.23	CN9560 Smart Card interface connector (10-pin).....	24
C.24	CN9571 FAL3U3* board interface connector (25-pin).....	24

eSATA/HDMI/USB board (FAL3E\*\*)

C.25	CN9640 System board interface connector (50-pin) .....	25
C.26	CN1970 eSATA/USB interface connector (11-pin).....	26
C.27	CN5350 HDMI interface connector (19-pin) .....	26
C.28	CN4610 USB interface connector (4-pin) .....	27

Touch Pad/LED Button board (FAL3TP\*)

C.29	CN3240 Touch Pad interface connector (12-pin) .....	28
C.30	CN9650 System board interface connector (14-pin) .....	28

Finger sensor board (FULFS\*)

C.31	CN3650 System board interface connector (6-pin) .....	29
------	---	----

Sound/USB board (FAL3U2\*)

C.32	CN9670 System board interface connector (50-pin) .....	30
C.33	CN4630 USB interface connector (4-pin) .....	31
C.34	CN6000 Speaker interface connector (4-pin) .....	31
C.35	CN6050 Int-Mic interface connector (2-pin).....	31
C.36	J6051 Microphone connector (6-pin) .....	31
C.37	J6310 Headphone connector (6-pin).....	32
C.38	CN9540 WebCam interface connector (6-pin) .....	32
C.39	CN9620 FULPN* interface connector (3-pin) .....	32

### 3G/SIM board (FAL33G\*)

C.40	CN9720 System board interface connector (25-pin) .....	33
C.41	CN2610 PCI-E Mini(3G) CARD interface connector (52-pin).....	34
C.42	CN2650 PCI-E Mini(3G) CARD interface connector (52-pin).....	35
C.43	IS2620 SIM board interface connector (9-pin).....	36

### SD/SATA ODD board (FAL3SA\*)

C.44	CN9710 System board interface connector (50-pin) .....	37
C.45	CN1900 FULOA*(FPC) interface connector (25-pin).....	38
C.46	IS2130 SD Card interface connector (12-pin) .....	38
C.47	CN6070 Digital Mic interface connector (12-pin) .....	39

### GMR sensor (LID) board (FAL3PS\*)

C.48	CN3270 FAL3U2/U3* board interface connector (3-pin).....	40
------	--	----

### Sound/USB board (FAL3U3\*)

C.49	CN9670 System board interface connector (50-pin) .....	41
C.50	CN9671 System board interface connector (25-pin) .....	42
C.51	CN4530 USB3.0 interface connector (9-pin) .....	43
C.52	CN6000 Speaker interface connector (4-pin) .....	43
C.53	CN6050 Int-Mic interface connector (2-pin).....	43
C.54	J6051 Microphone connector (6-pin) .....	43
C.55	J6310 Headphone connector (6-pin).....	44
C.56	CN9540 WebCam interface connector (6-pin) .....	44
C.57	CN9620 FULPN* interface connector (3-pin) .....	44

### eSATA/HDMI/USB board (FAL3E3\*)

C.58	CN9640 System board interface connector (50-pin) .....	45
C.59	CN1970 eSATA/USB interface connector (11-pin).....	46
C.60	CN5350 HDMI interface connector (19-pin) .....	46
C.61	CN4610 USB 3.0 interface connector (4-pin) .....	47

<b>Appendix D Keyboard Scan/Character Codes .....</b>	<b>D-1</b>
<b>Appendix E Key Layout.....</b>	<b>E-1</b>
E.1 United Kingdom (UK) Keyboard .....	E-1
E.2 United States (US) Keyboard.....	E-1
<b>Appendix F Wiring Diagrams .....</b>	<b>F-1</b>
F.1 RGB Monitor Loopback Connector .....	F-1
F.2 LAN Loopback Connector.....	F-1
<b>Appendix G BIOS rewrite Procedures .....</b>	<b>G-1</b>
<b>Appendix H EC/KBC rewrite Procedures.....</b>	<b>H-1</b>
<b>Appendix I Reliability .....</b>	<b>I-1</b>

## Figures

Figure B-1 System board (FAL3SY*) layout (front) .....	2
Figure B-2 System board (FAL3SY*) layout (back).....	4
Figure B-3 eSATA/HDMI/USB board (FAL3ES*) layout (front/back).....	6
Figure B-4 Touch Pad/LED Button board (FAL3TP*) layout (front/back) .....	8
Figure B-5 USB board (FULFS*) layout (front/back) .....	9
Figure B-6 Sound/USB board (FAL3U2*) layout (front/back).....	10
Figure B-7 Sound/USB board (FAL33G*) layout (front/back).....	12
Figure B-8 SD/SATA ODD board (FAL3SA*) layout (front/back) .....	14
Figure B-9 GMR sensor (LID) board (FAL3PN*) layout (front/back).....	16
Figure B-10 Sound/USB board (FAL3U3*) layout (front/back).....	17

## Tables

Table B-1 System board (FAL3SY*) connectors and ICs (front) .....	3
Table B-2 System board (FAL3SY*) connectors and ICs (back) .....	5
Table B-3 eSATA/HDMI/USB board (FAL3ES*) connector (front/back).....	7
Table B-4 Touch Pad/LED Button board (FAL3TP*) connector (front/back) .....	8



Table B-5	USB board (FULFS*) connector (front/back).....	9
Table B-6	Sound/USB board (FAL3U2*) connector (back) .....	11
Table B-7	3G/Express board (FAL33G*) connector (front/back).....	13
Table B-8	SD/SATA ODD board (FAL3SA*) connector (front/back).....	15
Table B-9	GMR sensor (LID) board (FAL3PN*) connector (front/back).....	16
Table B-10	Sound/USB board (FAL3U3*) connector (back) .....	18

#### System board (FULSY\*)

Table C.1	CN1400 Memory A connector(200-pin) .....	3
Table C.2	CN1410 Memory B connector (200-pin) .....	6
Table C.3	CN1900 SATA HDD/SSD interface connector (25-pin).....	9
Table C.4	CN2110 PC CARD interface connector (80-pin).....	10
Table C.5	CN2300 DOCKING interface connector (100-pin) .....	12
Table C.6	CN2520 EXPRESS CARD interface connector (40-pin) .....	14
Table C.7	CN2600 PCI-E Mini CARD interface connector (52-pin).....	15
Table C.8	CN3230 Keyboard interface connector (30-pin).....	16
Table C.9	CN3380 FAN interface connector (4-pin).....	16
Table C.10	CN4050 LAN interface connector (8-pin) .....	16
Table C.11	CN4440 Bluetooth interface connector (6-pin).....	17
Table C.12	CN5300 LCD interface connector (35-pin) .....	17
Table C.13	CN5400 CRT interface connector (15-pin) .....	18
Table C.14	CN8800 DC-IN connector (4-pin) .....	18
Table C.15	CN8110 Battery connector (10-pin).....	18
Table C.16	CN9300 RTCVCC interface connector (3-pin).....	19
Table C.17	CN9540 FAL3ES* board interface connector (50-pin) .....	19
Table C.18	CN9550 FAL3TP* board interface connector (20-pin) .....	20
Table C.19	CN9551 FULFS* board interface connector (6-pin) .....	20
Table C.20	CN9570 FAL3U** board interface connector (50-pin) .....	21
Table C.21	CN9580 FAL33G* board interface connector (25-pin) .....	22
Table C.22	CN9700 FAL3SA*board interface connector (50-pin).....	23
Table C.23	CN9560 Smart Card interface connector (10-pin) .....	24
Table C.24	CN9571 FAL3U3* board interface connector (25-pin) .....	24

eSATA/HDMI/USB board (FAL3E\*\*)

Table C.25	CN9640 System board interface connector (50-pin).....	25
Table C.26	CN1970 eSATA/USB interface connector (11-pin) .....	26
Table C.27	CN5350 HDMI interface connector (19-pin).....	26
Table C.28	CN4610 USB interface connector (4-pin).....	27

Touch Pad/LED Button board (FAL3TP\*)

Table C.29	CN3240 Touch Pad interface connector (12-pin).....	28
Table C.30	CN9650 System board interface connector (14-pin).....	28

Finger sensor board (FULFS\*)

Table C.31	CN3650 System board interface connector (6-pin).....	29
------------	--	----

Sound/USB board (FAL3U2\*)

Table C.32	CN9670 System board interface connector (50-pin).....	30
Table C.33	CN4630 USB interface connector (4-pin).....	31
Table C.34	CN6000 Speaker interface connector (4-pin) .....	31
Table C.35	CN6050 Int-Mic interface connector (2-pin) .....	31
Table C.36	J6051 Microphone connector (6-pin).....	31
Table C.37	J6310 Headphone connector (6-pin) .....	32
Table C.38	CN9540 WebCam interface connector (6-pin).....	32
Table C.39	CN9620 FULPN* interface connector (3-pin).....	32

3G/SIM board (FAL33G\*)

Table C.40	CN9720 System board interface connector (25-pin).....	33
Table C.41	CN2610 PCI-E Mini(3G) CARD interface connector (52-pin) .....	34
Table C.42	CN2650 PCI-E Mini(3G) CARD interface connector (52-pin) .....	35
Table C.43	IS2620 SIM board interface connector (9-pin) .....	36

SD/SATA ODD board (FAL3SA\*)

Table C.44	CN9710 System board interface connector (50-pin).....	37
------------	---	----

Table C.45	CN1900 FULOA*(FPC) interface connector (25-pin) .....	38
Table C.46	IS2130 SD Card interface connector (12-pin) .....	38
Table C.47	CN6070 Digital Mic interface connector (12-pin).....	39

#### GMR sensor (LID) board (FAL3PS\*)

Table C.48	CN3270 FAL3U2/U3* board interface connector (3-pin) .....	40
------------	---	----

#### Sound/USB board (FAL3U3\*)

Table C.49	CN9670 System board interface connector (50-pin).....	41
Table C.50	CN9671 System board interface connector (25-pin).....	42
Table C.51	CN4530 USB3.0 interface connector (9-pin).....	43
Table C.52	CN6000 Speaker interface connector (4-pin) .....	43
Table C.53	CN6050 Int-Mic interface connector (2-pin) .....	43
Table C.54	J6051 Microphone connector (6-pin).....	43
Table C.55	J6310 Headphone connector (6-pin) .....	44
Table C.56	CN9540 WebCam interface connector (6-pin).....	44
Table C.57	CN9620 FULPN* interface connector (3-pin).....	44

#### eSATA/HDMI/USB board (FAL3E3\*)

Table C.58	CN9640 System board interface connector (50-pin).....	45
Table C.59	CN1970 eSATA/USB interface connector (11-pin) .....	46
Table C.60	CN5350 HDMI interface connector (19-pin).....	46
Table C.61	CN4610 USB 3.0 interface connector (4-pin).....	47

Table D-1	Scan codes (set 1 and set 2) .....	D-1
Table D-2	Scan codes with left Shift key .....	D-5
Table D-3	Scan codes in Numlock mode .....	D-6
Table D-4	Scan codes with Fn key .....	D-6
Table D-5	Scan codes in overlay mode .....	D-7
Table D-6	No.124 key scan code.....	D-7
Table D-7	No.126 key scan code.....	D-8


Table I-1	MTBF .....	I-1
-----------	------------	-----

## Appendix A Handling the LCD Module

### Precautions for handling the LCD module

The LCD module can be easily damaged during assembly or disassembly. Observe the following precautions when handling the LCD module:

1. When installing the LCD module in the LCD cover, be sure to seat it so that it is properly aligned and maximum visibility of the display is maintained.

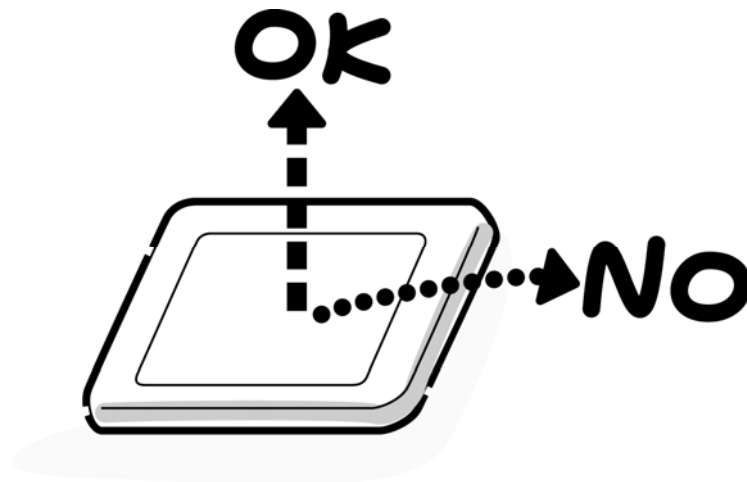

2. Be careful to align the holes at the four corners of the LCD module with the corresponding holes in the LCD cover before securing the module with screws. Do not force the module into place, because stress can affect its performance.

Also, the panel's polarized surface is easily scarred, so be careful when handling it.



3. If the panel's surface gets dirty, wipe it with cotton or a soft cloth. If it is still dirty, try breathing on the surface to create a light condensate and wipe it again.


If the surface is very dirty, we recommend a CRT cleaning agent. Apply the agent to a cloth and then wipe the panel's surface. Do not apply cleanser directly to the panel.




4. If water or other liquid is left on the panel's surface for a long period, it can change the screen's tint or stain it. Be sure to quickly wipe off any liquid.



5. Glass is used in the panel, so be careful not to drop it or let it strike a hard object, which could cause breakage or cracks.

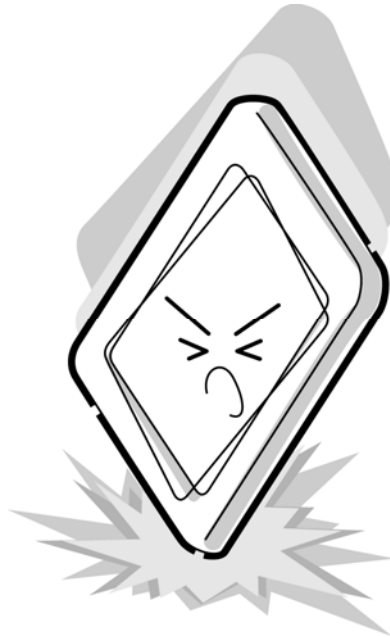


6. CMOS-LSI circuits are used in the module, so guard against damage from electrostatic discharge. Be sure to wear a wrist or ankle ground when handling the module.

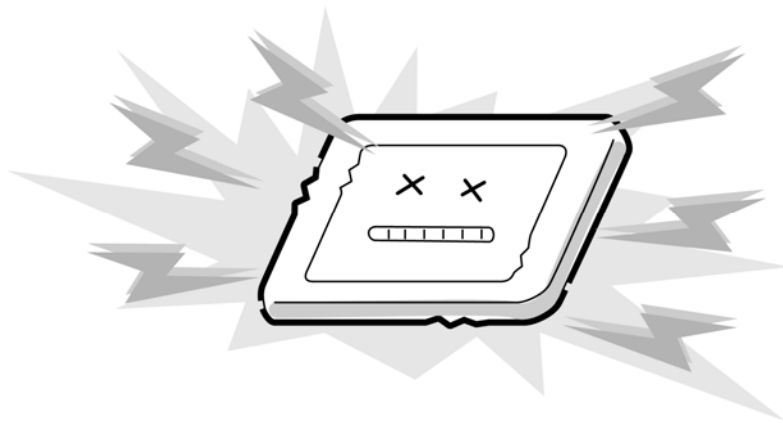


7. Do not expose the module to direct sunlight or strong ultraviolet rays for long periods.



8. Do not store the module at temperatures below specifications. Cold can cause the liquid crystals to freeze, lose their elasticity or otherwise suffer damage.

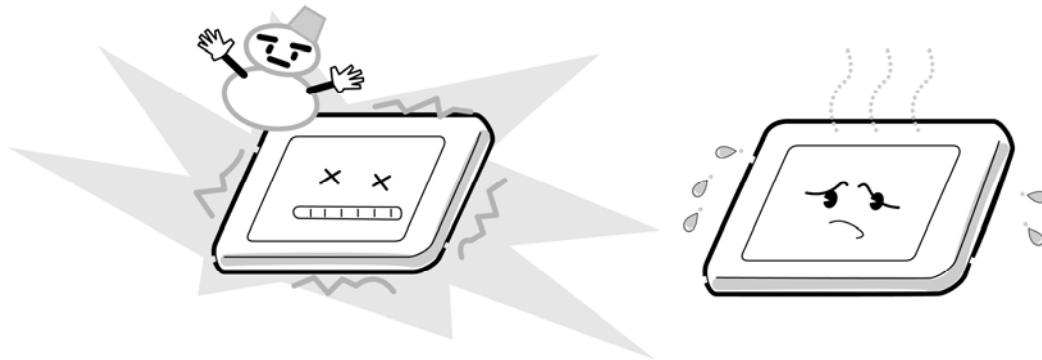


9. Do not disassemble the LCD module. Disassembly can cause malfunctions.

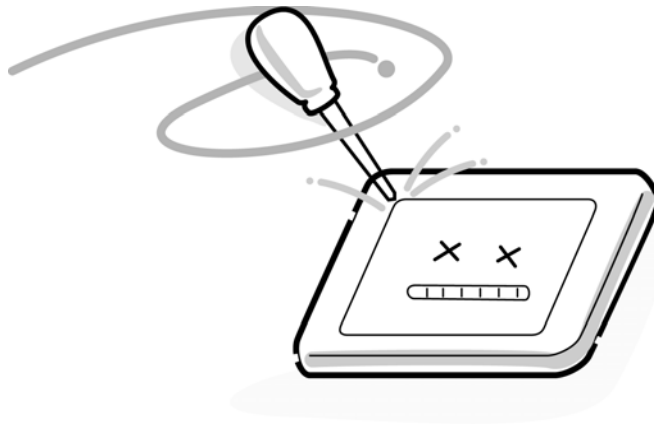



10. If you transport the module, do not use packing material that contains epoxy resin (amine) or silicon glue (alcohol or oxide). These materials can release gas that can damage the panel's polarization.

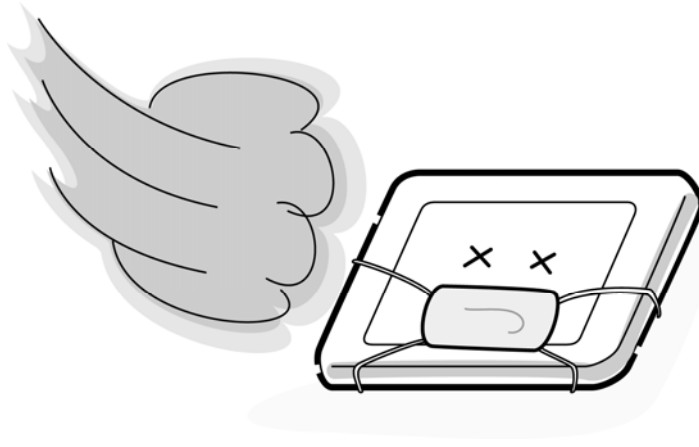



## Appendix B Board Layout

B.1	System board (FAL3SY*) Front View .....	2
B.2	System board (FAL3SY*) Back View .....	4
B.3	eSATA/HDMI/USB board (FAL3ES*) View .....	6
B.4	Touch Pad/LED Button board (FAL3TP*) View .....	8
B.5	Finger sensor board (FULFS*) View .....	9
B.6	Sound/USB board (FAL3U2*) View: .....	10
B.7	3G/SIM board (FAL33G*) View:.....	12
B.8	SD/SATA ODD board (FAL3SA*) View: .....	14
B.9	GMR sensor (LID) board (FAL3PN*) View:.....	16
B.10	Sound/USB board (FAL3U3*) View: .....	17

Figure B-1	System board (FAL3SY*) layout (front) .....	2
Figure B-2	System board (FAL3SY*) layout (back) .....	4
Figure B-3	eSATA/HDMI/USB board (FAL3ES*) layout (front/back).....	6
Figure B-4	Touch Pad/LED Button board (FAL3TP*) layout (front/back) .....	8
Figure B-5	USB board (FULFS*) layout (front/back).....	9
Figure B-6	Sound/USB board (FAL3U2*) layout (front/back).....	10
Figure B-7	Sound/USB board (FAL33G*) layout (front/back).....	12
Figure B-8	SD/SATA ODD board (FAL3SA*) layout (front/back).....	14
Figure B-9	GMR sensor (LID) board (FAL3PN*) layout (front/back) .....	16
Figure B-10	Sound/USB board (FAL3U3*) layout (front/back).....	17

Table B-1	System board (FAL3SY*) connectors and ICs (front) .....	3
Table B-2	System board (FAL3SY*) connectors and ICs (back) .....	5
Table B-3	eSATA/HDMI/USB board (FAL3ES*) connector (front/back) .....	7
Table B-4	Touch Pad/LED Button board (FAL3TP*) connector (front/back) .....	8
Table B-5	USB board (FULFS*) connector (front/back) .....	9
Table B-6	Sound/USB board (FAL3U2*) connector (back).....	11
Table B-7	3G/Express board (FAL33G*) connector (front/back).....	13
Table B-8	SD/SATA ODD board (FAL3SA*) connector (front/back) .....	15
Table B-9	GMR sensor (LID) board (FAL3PN*) connector (front/back).....	16

Table B-10 Sound/USB board (FAL3U3*) connector (back) .....	18
---	----

## B.1 System board (FAL3SY\*) Front View

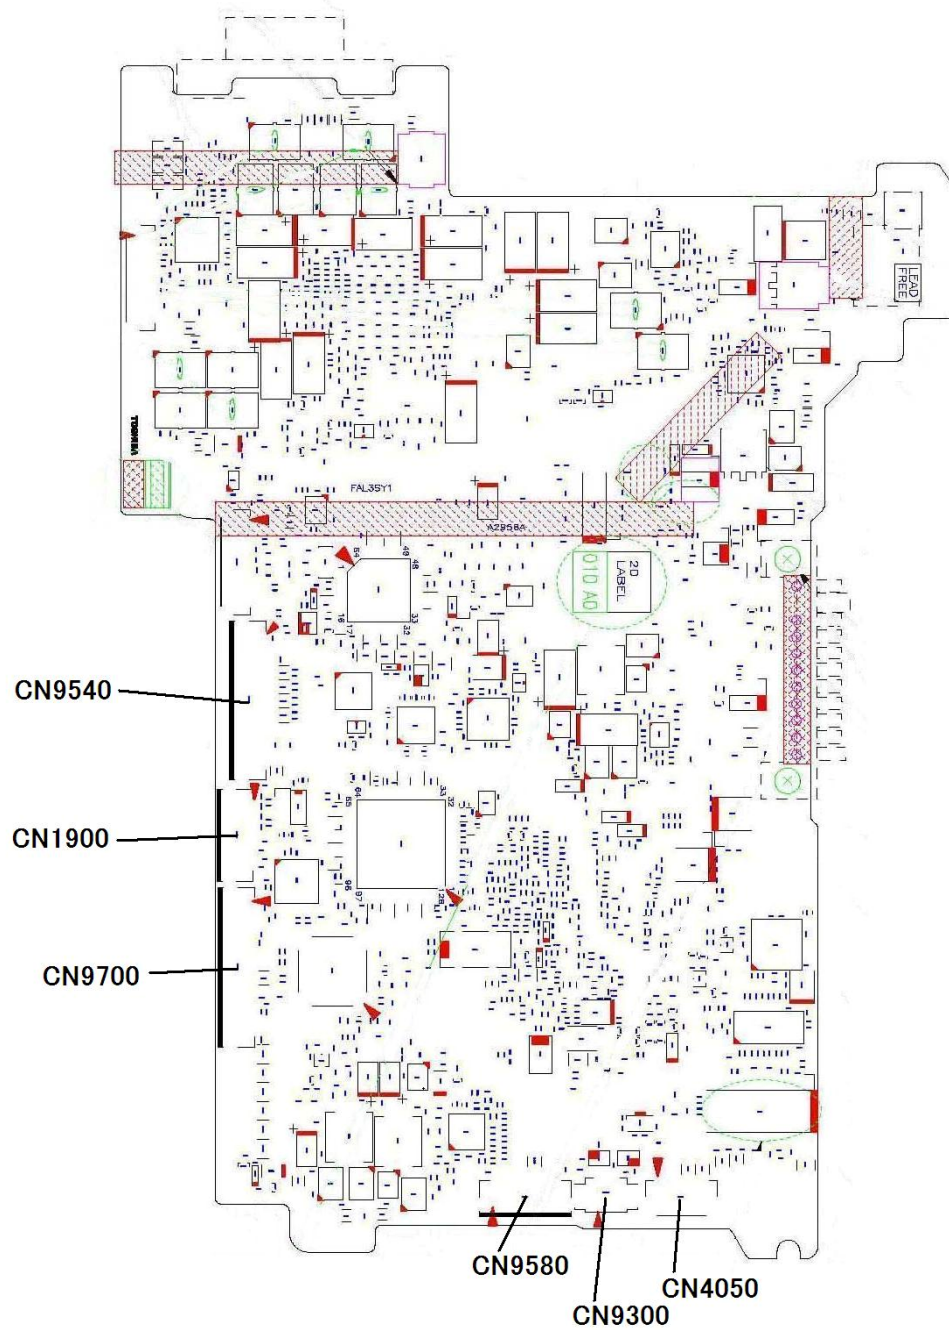


Figure B-1 System board (FAL3SY\*) layout (front)

*Table B-1 System board (FAL3SY\*) connectors and ICs (front)*

Number	Name
CN1900	SATA HDD interface connector
CN4050	LAN interface connector
CN9300	RTCVCC interface connector
CN9540	FAL3ES*/E3* board interface connector
CN9580	FAL33G* board interface connector
CN9700	FAL3SA*board interface connector

## B.2 System board (FAL3SY\*) Back View

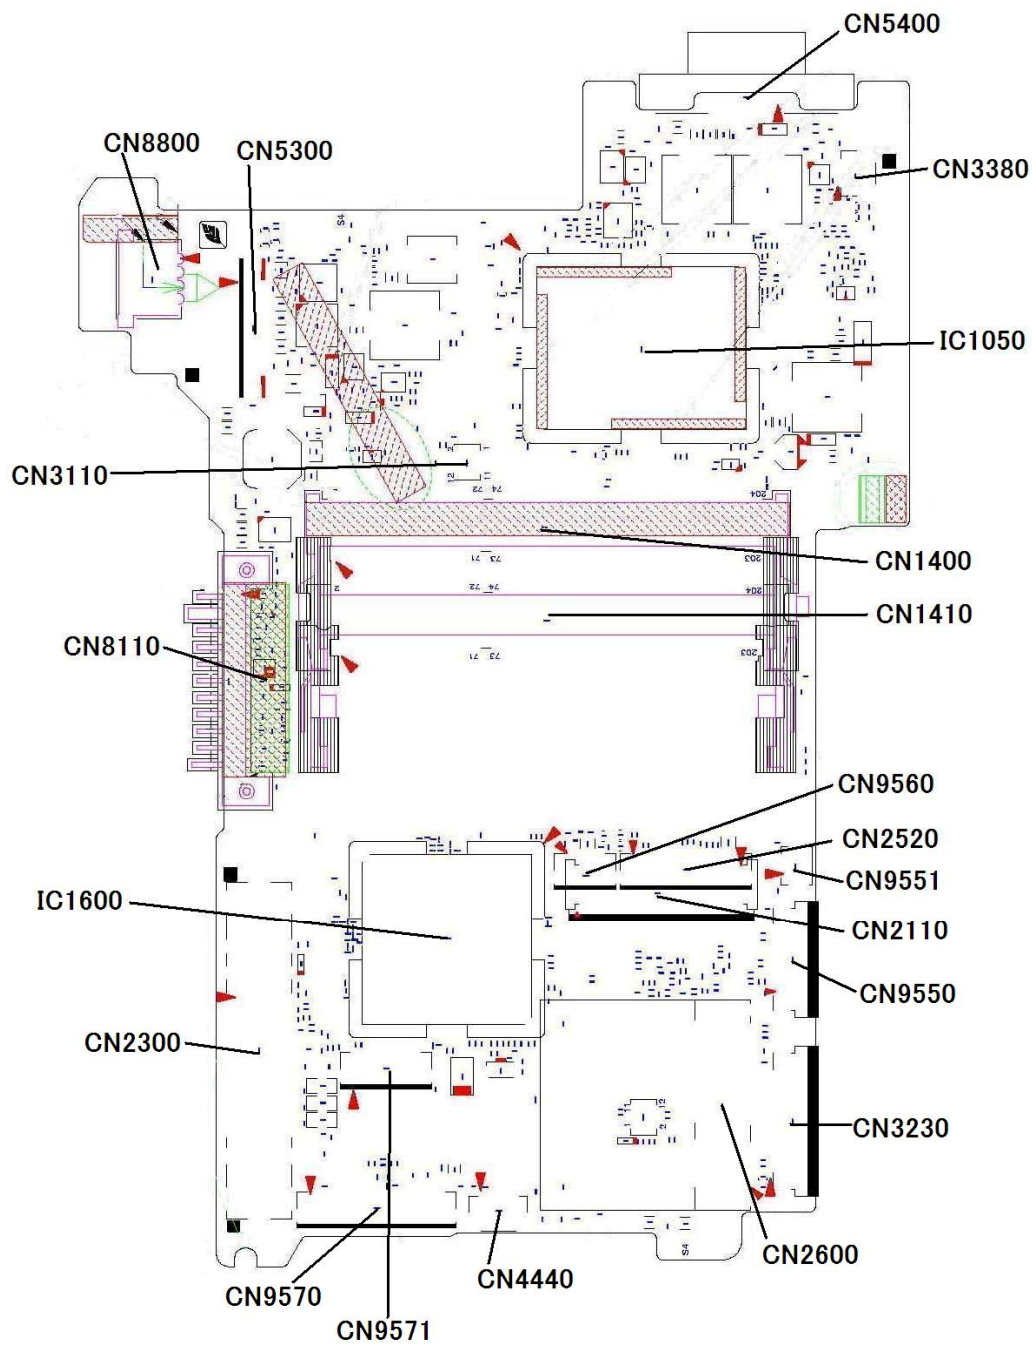


Figure B-2 System board (FAL3SY\*) layout (back)

Table B-2 System board (FAL3SY\*) connectors and ICs (back)

Number	Name
CN1400	Memory A connector
CN1410	Memory B connector
CN5300	LCD interface connector
CN2110	PC CARD interface connector
CN2520	EXPRESS CARD interface connector
CN2300	DOCKING interface connector
CN2600	PCI-E MINI CARD interface connector
CN4440	Bluetooth interface connector
CN3230	KB interface connector
CN3380	FAN interface connector
CN5400	CRT interface connector
CN8800	DC-IN interface connector
CN8110	Battery connector
CN9550	FAL3TP* board interface connector
CN9551	FULFS* board interface connector
CN9570	FAL3U2*/U3* board interface connector
CN9571	FAL3U3* board interface connector
IC1600	Cougar Point (chip set)
IC5000	GPU
CN3110	It is debugging port for development only







*Table B-3 eSATA/HDMI/USB board (FAL3ES\*) connector (front/back)*

Number	Name
CN1970	eSATA/USB interface connector
CN5350	HDMI interface connector
CN4610	USB interface connector
CN9640	System board interface connector

## B.4 Touch Pad/LED Button board (FAL3TP\*) View

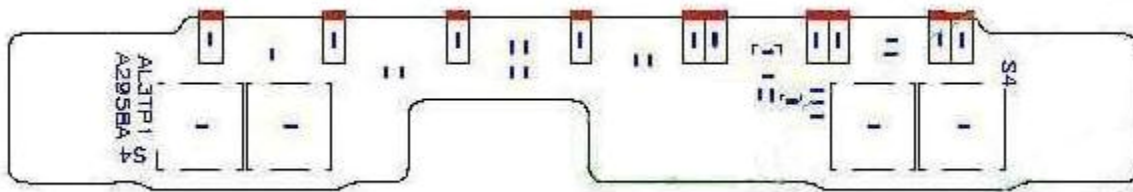

(front)

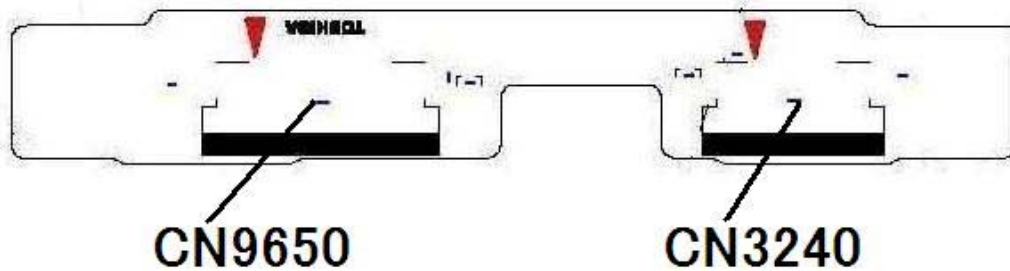

(back)

Figure B-4 Touch Pad/LED Button board (FAL3TP\*) layout (front/back)

Table B-4 Touch Pad/LED Button board (FAL3TP\*) connector (front/back)

Number	Name
CN3240	Touch pad interface connector
CN9650	System board interface connector

## B.5 Finger sensor board (FULFS\*) View

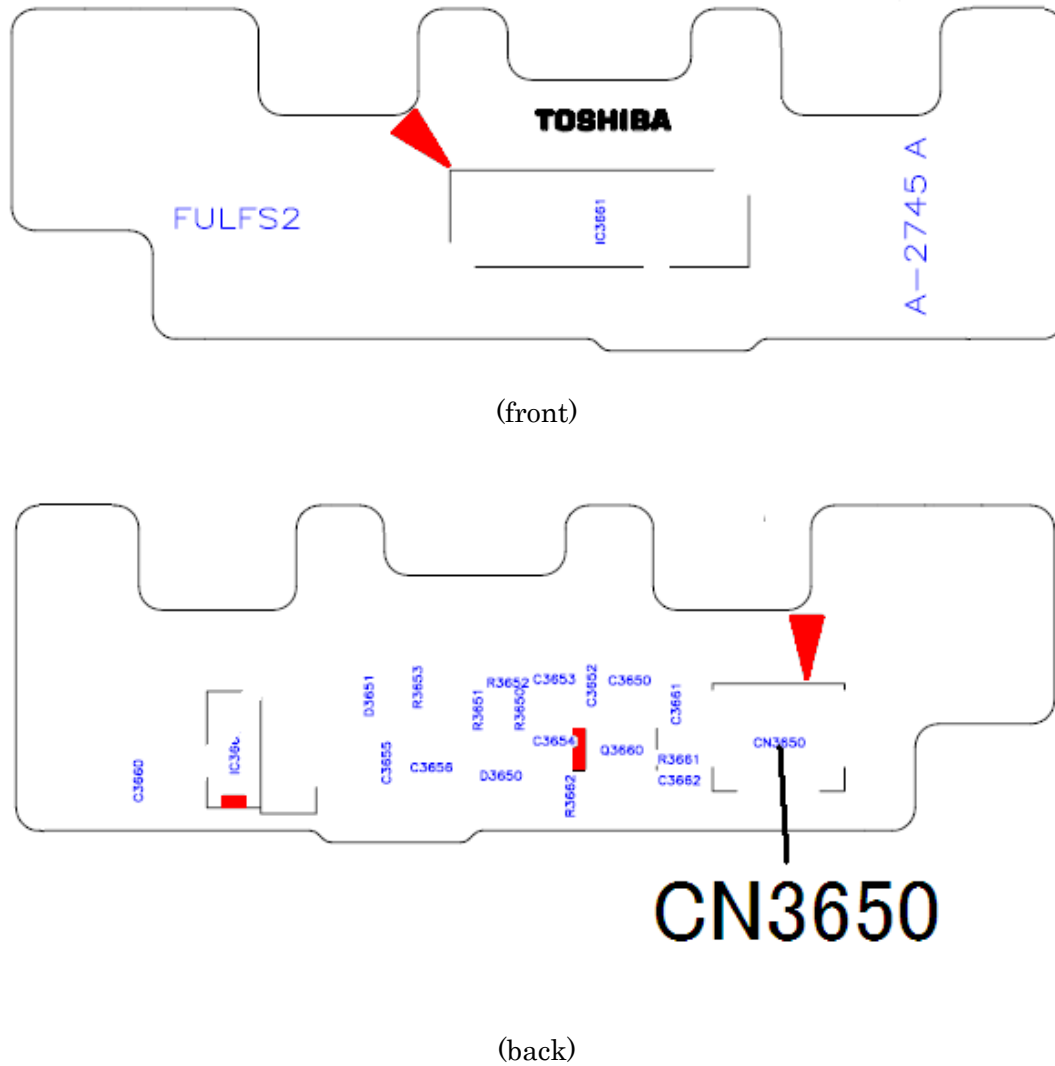


Figure B-5 USB board (FULFS\*) layout (front/back)

Table B-5 USB board (FULFS\*) connector (front/back)

Number	Name
CN3650	System board interface connector



*Table B-6 Sound/USB board (FAL3U2\*) connector (back)*

Number	Name
CN4630	USB interface connector
CN6000	Speaker interface connector
CN6050	Int-Mic interface connector
J6051	Microphone connector
J6310	Headphone connector
CN9540	WebCam interface connector
CN9620	FAL3PN* interface connector
CN9670	System board interface connector



*Table B-7 3G/Express board (FAL33G\*) connector (front/back)*

Number	Name
CN2610	3G card interface connector
CN2650	3G card interface connector (Back side)
IS2620	SIM board interface connector
CN9720	System board interface connector






*Table B-8 SD/SATA ODD board (FAL3SA\*) connector (front/back)*

Number	Name
CN1900	SATA ODD interface connector
IS2130	SD Card interface connector
CN6070	Digital Mic interface connector
CN9710	System board interface connector

## B.9 GMR sensor (LID) board (FAL3PN\*) View:



(front)

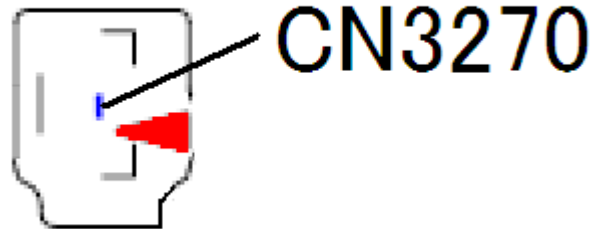


(back)


*Figure B-9 GMR sensor (LID) board (FAL3PN\*) layout (front/back)*

*Table B-9 GMR sensor (LID) board (FAL3PN\*) connector (front/back)*

Number	Name
CN3270	FAL3U2"/U3* board interface connector

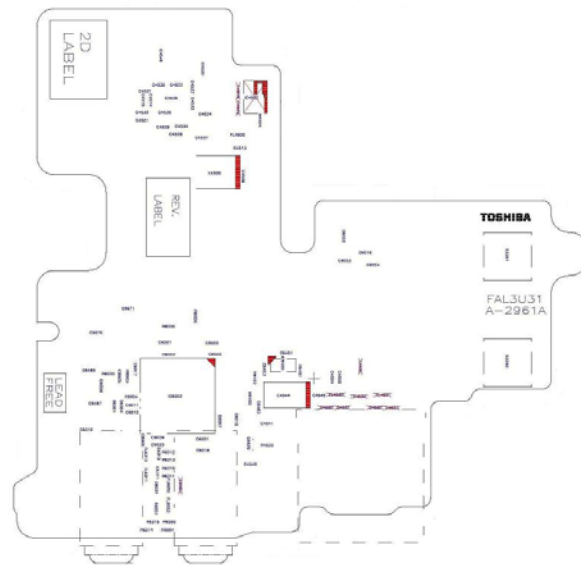**B.10 Sound/USB board (FAL3U3\*) View:**

(front)

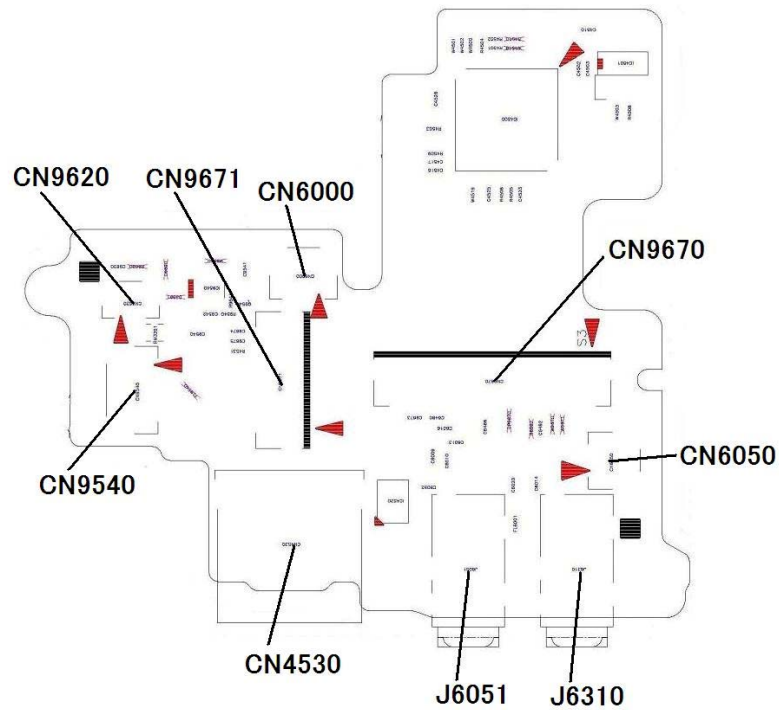

(back)

*Figure B-10 Sound/USB board (FAL3U3\*) layout (front/back)*

*Table B-10 Sound/USB board (FAL3U3\*) connector (back)*

Number	Name
CN4530	USB 3.0 interface connector
CN6000	Speaker interface connector
CN6050	Int-Mic interface connector
J6051	Microphone connector
J6310	Headphone connector
CN9540	WebCam interface connector
CN9620	FAL3PN* interface connector
CN9671	System board interface connector
CN9670	System board interface connector



## Appendix C Pin Assignments

C.1	CN1400 Memory A connector(200-pin) .....	3
C.2	CN1410 Memory B connector (200-pin) .....	6
C.3	CN1900 SATA HDD/SSD interface connector (25-pin) .....	9
C.4	CN2110 PC CARD interface connector (80-pin) .....	10
C.5	CN2300 DOCKING interface connector (100-pin).....	12
C.6	CN2520 EXPRESS CARD interface connector (40-pin) .....	14
C.7	CN2600 PCI-E Mini CARD interface connector (52-pin).....	15
C.8	CN3230 Keyboard interface connector (30-pin).....	16
C.9	CN3380 FAN interface connector (4-pin) .....	16
C.10	CN4050 LAN interface connector (8-pin) .....	16
C.11	CN4440 Bluetooth interface connector (6-pin).....	17
C.12	CN5300 LCD interface connector (35-pin) .....	17
C.13	CN5400 CRT interface connector (15-pin) .....	18
C.14	CN8800 DC-IN connector (4-pin) .....	18
C.15	CN8110 Battery connector (10-pin) .....	18
C.16	CN9300 RTCVCC interface connector (3-pin).....	19
C.17	CN9540 FAL3ES* board interface connector (50-pin).....	19
C.18	CN9550 FAL3TP* board interface connector (20-pin).....	20
C.19	CN9551 FULFS* board interface connector (6-pin).....	20
C.20	CN9570 FAL3U** board interface connector (50-pin) .....	21
C.21	CN9580 FAL33G* board interface connector (25-pin).....	22
C.22	CN9700 FAL3SA*board interface connector (50-pin) .....	23
C.23	CN9560 Smart Card interface connector (10-pin) .....	24
C.24	CN9571 FAL3U3* board interface connector (25-pin).....	24
C.25	CN9640 System board interface connector (50-pin).....	25
C.26	CN1970 eSATA/USB interface connector (11-pin) .....	26
C.27	CN5350 HDMI interface connector (19-pin) .....	26
C.28	CN4610 USB interface connector (4-pin).....	27
C.29	CN3240 Touch Pad interface connector (12-pin) .....	28
C.30	CN9650 System board interface connector (14-pin).....	28
C.31	CN3650 System board interface connector (6-pin).....	29
C.32	CN9670 System board interface connector (50-pin).....	30
C.33	CN4630 USB interface connector (4-pin).....	31
C.34	CN6000 Speaker interface connector (4-pin).....	31
C.35	CN6050 Int-Mic interface connector (2-pin).....	31
C.36	J6051 Microphone connector (6-pin) .....	31

C.37	J6310 Headphone connector (6-pin) .....	32
C.38	CN9540 WebCam interface connector (6-pin) .....	32
C.39	CN9620 FULPN* interface connector (3-pin) .....	32
C.40	CN9720 System board interface connector (25-pin) .....	33
C.41	CN2610 PCI-E Mini(3G) CARD interface connector (52-pin).....	34
C.42	CN2650 PCI-E Mini(3G) CARD interface connector (52-pin).....	35
C.43	IS2620 SIM board interface connector (9-pin) .....	36
C.44	CN9710 System board interface connector (50-pin) .....	37
C.45	CN1900 FULOA*(FPC) interface connector (25-pin) .....	38
C.46	IS2130 SD Card interface connector (12-pin) .....	38
C.47	CN6070 Digital Mic interface connector (12-pin).....	39
C.48	CN3270 FAL3U2/U3* board interface connector (3-pin) .....	40
C.49	CN9670 System board interface connector (50-pin) .....	41
C.50	CN9671 System board interface connector (25-pin) .....	42
C.51	CN4530 USB3.0 interface connector (9-pin) .....	43
C.52	CN6000 Speaker interface connector (4-pin).....	43
C.53	CN6050 Int-Mic interface connector (2-pin) .....	43
C.54	J6051 Microphone connector (6-pin) .....	43
C.55	J6310 Headphone connector (6-pin) .....	44
C.56	CN9540 WebCam interface connector (6-pin) .....	44
C.57	CN9620 FULPN* interface connector (3-pin) .....	44
C.58	CN9640 System board interface connector (50-pin) .....	45
C.59	CN1970 eSATA/USB interface connector (11-pin).....	46
C.60	CN5350 HDMI interface connector (19-pin) .....	46
C.61	CN4610 USB 3.0 interface connector (4-pin) .....	47

**System board (FAL3SY\*)****C.1 CN1400 Memory A connector(200-pin)***Table C- 1 Memory A connector (200-pin) (1/3)*

Pin No.	Signal Name	Pin No.	Signal Name
1	MR0R75-B0	2	GND
3	GND	4	ADQ01-B1P
5	ADQ05-B1P	6	ADQ00-B1P
7	ADQ04-B1P	8	GND
9	GND	10	ADQS0-B1N
11	GND	12	ADQS0-B1P
13	GND	14	GND
15	ADQ02-B1P	16	ADQ07-B1P
17	ADQ03-B1P	18	ADQ06-B1P
19	GND	20	GND
21	ADQ08-B1P	22	ADQ09-B1P
23	ADQ12-B1P	24	ADQ13-B1P
25	GND	26	GND
27	ADQS1-B1N	28	GND
29	ADQS1-B1P	30	MSMRST-B1N
31	GND	32	GND
33	ADQ15-B1P	34	ADQ10-B1P
35	ADQ11-B1P	36	ADQ14-B1P
37	GND	38	GND
39	ADQ21-B1P	40	ADQ17-B1P
41	ADQ22-B1P	42	ADQ20-B1P
43	GND	44	GND
45	ADQS2-B1N	46	GND
47	ADQS2-B1P	48	GND
49	GND	50	ADQ16-B1P
51	ADQ23-B1P	52	ADQ18-B1P
53	ADQ19-B1P	54	GND
55	GND	56	ADQ24-B1P
57	ADQ29-B1P	58	ADQ28-B1P
59	ADQ25-B1P	60	GND



Table C-1 Memory A connector (200-pin) (2/3)

Pin No.	Signal Name	Pin No.	Signal Name
61	GND	62	ADQS3-B1N
63	GND	64	ADQS3-B1P
65	GND	66	GND
67	ADQ30-B1P	68	ADQ26-B1P
69	ADQ31-B1P	70	ADQ27-B1P
71	GND	72	GND
73	ACKE0-B1P	74	ACKE1-B1P
75	1R5-B1V	76	1R5-B1V
77	NC	78	AMA15-B1P
79	ABS2-B1P	80	AMA14-B1P
81	1R5-B1V	82	1R5-B1V
83	AMA12-B1P	84	AMA11-B1P
85	AMA09-B1P	86	AMA07-B1P
87	1R5-B1V	88	1R5-B1V
89	AMA08-B1P	90	AMA06-B1P
91	AMA05-B1P	92	AMA04-B1P
93	1R5-B1V	94	1R5-B1V
95	AMA03-B1P	96	AMA02-B1P
97	AMA01-B1P	98	AMA00-B1P
99	1R5-B1V	100	1R5-B1V
101	XACK0-B1P	102	XACK1-B1P
103	XACK0-B1N	104	XACK1-B1N
105	1R5-B1V	106	1R5-B1V
107	AMA10-B1P	108	ABS1-B1P
109	ABS0-B1P	110	ARAS-B1N
111	1R5-B1V	112	1R5-B1V
113	AWE-B1N	114	ACS0-B1N
115	ACAS-B1N	116	AODT0-B1P
117	1R5-B1V	118	1R5-B1V
119	AMA13-B1P	120	AODT1-B1P
121	ACS1-B1N	122	NC
123	1R5-B1V	124	1R5-B1V
125	NC (TEST)	126	MRVREF—B0V
127	GND	128	GND
129	ADQ33-B1P	130	ADQ32-B1P
131	ADQ37-B1P	132	ADQ36-B1P

Table C-1 Memory A connector (200-pin) (3/3)

Pin No.	Signal Name	Pin No.	Signal Name
133	GND	134	GND
135	ADQS4-B1N	136	GND
137	ADQS4-B1P	138	GND
139	GND	140	ADQ38-B1P
141	ADQ35-B1P	142	ADQ34-B1P
143	ADQ39-B1P	144	GND
145	GND	146	ADQ42-B1P
147	ADQ44-B1P	148	ADQ45-B1P
149	ADQ40-B1P	150	GND
151	GND	152	ADQS5-B1N
153	GND	154	ADQS5-B1P
155	GND	156	GND
157	ADQ41-B1P	158	ADQ43-B1P
159	ADQ46-B1P	160	ADQ47-B1P
161	GND	162	GND
163	ADQ52-B1P	164	ADQ49-B1P
165	ADQ48-B1P	166	ADQ53-B1P
167	GND	168	GND
169	ADQS6-B1N	170	GND
171	ADQS6-B1P	172	GND
173	GND	174	ADQ50-B1P
175	ADQ51-B1P	176	ADQ54-B1P
177	ADQ55-B1P	178	GND
179	GND	180	ADQ60-B1P
181	ADQ57-B1P	182	ADQ56-B1P
183	ADQ61-B1P	184	GND
185	GND	186	ADQS7-B1N
187	GND	188	ADQS7-B1P
189	GND	190	GND
191	ADQ59-B1P	192	ADQ62-B1P
193	ADQ63-B1P	194	ADQ58-B1P
195	GND	196	GND
197	GND	198	NC
199	P3V	200	SMBDTA-P3P
201	GND	202	SMBCKA-P3P
203	0R75-P0V	204	0R75-P0V
1T	GND	2T	GND

**C.2 CN1410 Memory B connector (200-pin)***Table C- 2 Memory B connector (200-pin) (1/3)*

Pin No.	Signal Name	Pin No.	Signal Name
1	MRVREF-B0V	2	GND
3	GND	4	BDQ04-B1P
5	BDQ01-B1P	6	BDQ05-B1P
7	BDQ00-B1P	8	GND
9	GND	10	BDQS0-B1N
11	GND	12	BDQS0-B1P
13	GND	14	GND
15	BDQ03-B1P	16	BDQ02-B1P
17	BDQ06-B1P	18	BDQ07-B1P
19	GND	20	GND
21	BDQ13-B1P	22	BDQ09-B1P
23	BDQ08-B1P	24	BDQ12-B1P
25	GND	26	GND
27	BDQS1-B1N	28	GND
29	BDQS1-B1P	30	MSMRST-B1
31	GND	32	GND
33	BDQ10-B1P	34	BDQ15-B1P
35	BDQ14-B1P	36	BDQ11-B1P
37	GND	38	GND
39	BDQ16-B1P	40	BDQ20-B1P
41	BDQ17-B1P	42	BDQ21-B1P
43	GND	44	GND
45	BDQS2-B1N	46	GND
47	BDQS2-B1P	48	GND
49	GND	50	BDQ23-B1P
51	BDQ18-B1P	52	BDQ19-B1P
53	BDQ22-B1P	54	GND
55	GND	56	BDQ28-B1P
57	BDQ25-B1P	58	BDQ29-B1P
59	BDQ24-B1P	60	GND

Table C-2 Memory B connector (200-pin) (2/3)

Pin No.	Signal Name	Pin No.	Signal Name
61	GND	62	BDQS3-B1N
63	GND	64	BDQS3-B1P
65	GND	66	GND
67	BDQ27-B1P	68	BDQ30-B1P
69	BDQ31-B1P	70	BDQ26-B1P
71	GND	72	GND
73	BCKE0-B1P	74	BCKE1-B1P
75	1R5-B1V	76	1R5-B1V
77	NC	78	BMA15-B1P
79	BBS2-B1P	80	BMA14-B1P
81	1R5-B1V	82	1R5-B1V
83	BMA12-B1P	84	BMA11-B1P
85	BMA09-B1P	86	BMA07-B1P
87	1R5-B1V	88	1R5-B1V
89	BMA08-B1P	90	BMA06-B1P
91	BMA05-B1P	92	BMA04-B1P
93	1R5-B1V	94	1R5-B1V
95	BMA03-B1P	96	BMA02-B1P
97	BMA01-B1P	98	BMA00-B1P
99	1R5-B1V	100	1R5-B1V
101	XBCK0-B1P	102	XBCK1-B1P
103	XBCK0-B1N	104	XBCK1-B1N
105	1R5-B1V	106	1R5-B1V
107	BMA10-B1P	108	BBS1-B1P
109	BBS0-B1P	110	BRAS-B1N
111	1R5-B1V	112	1R5-B1V
113	BWE-B1N	114	BCS0-B1N
115	BCAS-B1N	116	BODT0-B1P
117	1R5-B1V	118	1R5-B1V
119	BMA13-B1P	120	BODT1-B1P
121	BCS1-B1N	122	NC
123	1R5-B1V	124	1R5-B1V
125	NC (TEST)	126	MRVREF—B0V
127	GND	128	GND
129	BDQ33-B1P	130	BDQ32-B1P
131	BDQ37-B1P	132	BDQ36-B1P

Table C-2 Memory B connector (200-pin) (3/3)

Pin No.	Signal Name	Pin No.	Signal Name
133	GND	134	GND
135	BDQS4-B1N	136	GND
137	BDQS4-B1P	138	GND
139	GND	140	BDQ39-B1P
141	BDQ34-B1P	142	BDQ35-B1P
143	BDQ38-B1P	144	GND
145	GND	146	BDQ44-B1P
147	BDQ40-B1P	148	BDQ45-B1P
149	BDQ41-B1P	150	GND
151	GND	152	BDQS5-B1N
153	GND	154	BDQS5-B1P
155	GND	156	GND
157	BDQ47-B1P	158	BDQ46-B1P
159	BDQ43-B1P	160	BDQ42-B1P
161	GND	162	GND
163	BDQ48-B1P	164	BDQ52-B1P
165	BDQ49-B1P	166	BDQ53-B1P
167	GND	168	GND
169	BDQS6-B1N	170	GND
171	BDQS6-B1P	172	GND
173	GND	174	BDQ55-B1P
175	BDQ51-B1P	176	BDQ54-B1P
177	BDQ50-B1P	178	GND
179	GND	180	BDQ60-B1P
181	BDQ61-B1P	182	BDQ57-B1P
183	BDQ56-B1P	184	GND
185	GND	186	BDQS7-B1N
187	GND	188	BDQS7-B1P
189	GND	190	GND
191	BDQ58-B1P	192	BDQ63-B1P
193	BDQ59-B1P	194	BDQ62-B1P
195	GND	196	GND
197	GND	198	NC
199	P3V	200	SMBDTA-P3P
201	P3V	202	SMBCKA-P3P
203	0R75-P0V	204	0R75-P0V
1T	GND	2T	GND

**C.3 CN1900 SATA HDD/SSD interface connector (25-pin)***Table C- 3 SATA HDD/SSD interface connector (25-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	GND	2	ZSTTHD-P1P
3	ZSTTHD-P1N	4	GND
5	GND	6	ZSTRHD-P1N
7	ZSTRHD-P1P	8	GND
9	GND	10	GND
11	GND	12	GND
13	GND	14	NC
15	P3V	16	P3V
17	P3V	18	P3V
19	P3V	20	NC
21	P5V	22	P5V
23	P5V	24	P5V
25	P5V		
1T	GND	2T	GND

## C.4 CN2110 PC CARD interface connector (80-pin)

Table C- 4 PC CARD interface connector (80-pin) (1/2)

Pin No.	Signal Name	Pin No.	Signal Name
1	GND	2	GND
3	ACAD00-PYP	4	ACCD1-P3N
5	ACAD01-PYP	6	ACAD02-PYP
7	ACAD03-PYP	8	ACAD04-PYP
9	ACAD05-PYP	10	ACAD06-PYP
11	ACAD07-PYP	12	GND
13	ACD14-PYP	14	ACCBEO-PYN
15	ACAD08-PYP	16	ACAD09-PYP
17	ACAD10-PYP	18	ACAD11-PYP
19	ACVS1-P3P	20	GND
21	ACAD12-PYP	22	ACAD13-PYP
23	ACAD14-PYP	24	ACAD15-PYP
25	ACCBEO-PYN	26	ACAD16-PYP
27	ACPAR-PYP	28	GND
29	ACA18-PYP	30	ACPERR-PYN
31	ACLOCK-PYN	32	ACGNT-PYN
33	ACSTOP-PYN	34	ACINT-PYN
35	ACDEVS-PYN	36	MCVCCA-PYV
37	MCVCCA-PYV	38	MCVCCA-PYV
39	MCVCCA-PYV	40	MCVCCA-PYV
41	MCVPPA-PYV	42	MCVPPA-PYV
43	MCVPPA-PYV	44	MCVPPA-PYV
45	MCVPPA-PYV	46	ACCLK-PYP
47	ACTRDY-PYN	48	ACIRDY-PYN
49	ACFRAM-PYN	50	ACCBEO-PYN
51	ACAD17-PYP	52	ACAD18-PYN
53	ACAD19-PYP	54	GND
55	ACAD20-PYP	56	ACVS2-P3P
57	ACAD21-PYP	58	ACRST-PYN
59	ACAD22-PYP	60	ACSERR-PYN
61	ACAD23-PYP	62	GND
63	ACREQ-PYN	64	ACAD24-PYP
65	ACCBEO-PYN	66	ACAD25-PYP
67	ACAUDI-PYP	68	ACAD26-PYP
69	ACSTSC-PYP	70	GND

*Table C-4 PC CARD interface connector (80-pin) (2/2)*

Pin No.	Signal Name	Pin No.	Signal Name
71	ACAD27-PYP	72	ACAD28-PYP
73	ACAD29-PYP	74	ACAD30-PYP
75	ACD02-PYP	76	ACAD31-PYP
77	ACCLKR-PYN	78	ACCD2-P3N
79	GND	80	GND



## C.5 CN2300 DOCKING interface connector (100-pin)

Table C- 5 DOCKING interface connector (100-pin) (1/2)

Pin No.	Signal Name	Pin No.	Signal Name
1	DCOUT	2	DOCDT2-S3N
3	DCOUT	4	DCFG10-P3P
5	DCOUT	6	BT2VD
7	DCOUT	8	DDPPOC-P3N
9	DCOUT	10	PSCL-S5P
11	DCOUT	12	PSDA-S5P
13	NC	14	DHDPC0-P3P
15	NC	16	DHDPC1-P3P
17	DKDPM-D-P3P	18	EJCTRQ-S3N
19	GND	20	DPCHPD-P3P
21	DCPVON-S3P	22	PWRSW-S3N
23	DSNDON-S3P	24	PEWAKE-E3N
25	GND	26	DCKXRQ-E3N
27	DDPPON-P3N	28	DCCNFE-S5P
29	DSRLON-S3P	30	DHDPEQ-P3P
31	GND	32	GND
33	DHDMIJ-P3N	34	DOCSEL-P3N
35	UPDRST-E3P	36	DU3SMI-E3N
37		38	GND
39	XPEDCK-P0P	40	ZUSBDC-E3P
41	XPEDCK-P0N	42	ZUSBDC-E3N
43	GND	44	GND
45	ZETDCK-P1P	46	ZERDCK-P1P
47	ZETDCK-P1N	48	ZERDCK-P1N
49	GND	50	GND
51	ZDKDP0-P1P	52	ZDKDP1-P1P
53	ZDKDP0-P1N	54	ZDKDP1-P1N
55	GND	56	GND
57	ZDKDP2-P1P	58	ZDKDP3-P1P
59	ZDKDP2-P1N	60	ZDKDP3-P1N
61	GND	62	GND
63	DRED-PXP	64	ZDDKAU-PYP
65	GND	66	ZDDKAU-PYN
67	GND	68	GND

Table C-5 DOCKING interface connector (100-pin) (2/2)

Pin No.	Signal Name	Pin No.	Signal Name
69	DGREEN-PXP	70	DCRSDA-P3P
71	GND	72	DCRSCL-P3P
73	GND	74	GND
75	DBLUE-PXP	76	DVSYNC-P3P
77	GND	78	DHSYNC-P3P
79	GND	80	GND
81	LINK-E3N	82	ACT-E3N
83	DOCDT1-S3N	84	LAN-E3V
85	-	86	-
87	-	88	-
89	-	90	-
91	-	92	-
93	ZBIDAP-EXP	94	ZBIDBP-EXP
95	ZBIDAN-EXN	96	ZBIDBN-EXN
97	ZBIDCP-EXP	98	ZBIDDP-EXP
99	ZBIDCN-EXN	100	ZBIDDN-EXN
P1	DSKDC	P2	GND
P3	DSKDC	P4	GND
		1T	GND
		2T	GND
		3T	GND
		4T	GND
		5T	GND
		6T	GND

## C.6 CN2520 EXPRESS CARD interface connector (40-pin)

Table C- 6 EXPRESS CARD interface connector (40-pin)

Pin No.	Signal Name	Pin No.	Signal Name
1	GND	2	GND
3	GND	4	GND
5	ZETCRD-P1P	6	ZETCRD-P1N
7	GND	8	GND
9	GND	10	GND
11	ZERCRD-P1P	12	ZERCRD-P1N
13	GND	14	GND
15	GND	16	GND
17	XPECRD-P0P	18	XPECRD-P0N
19	NC	20	CPPE-E3N
21	CRDCRQ-E3N	22	CRD-P3V
23	CRD-P3V	24	CRD-P3V
25	CRDRST-E3N	26	CRD-E3V
27	PEWAKE-E3N	28	CRD1R5-P1V
29	CRD1R5-P1V	30	CRD-E3V
31	CRD-E3V	32	NC
33	NC	34	CPUSB-E3N
35	ZUSBEX-E3P	36	ZUSBEX-E3N
37	GND	38	GND
39	GND	40	GND
1T	GND	2T	GND

**C.7 CN2600 PCI-E Mini CARD interface connector (52-pin)***Table C- 7 PCI-E Mini CARD interface connector (52-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	PEWAKE-E3N	2	WLAN-E3V
3	NC	4	GND
5	BTRFON-S3N	6	NC
7	WLXRQ-E3N	8	NC
9	GND	10	NC
11	XPEWL-P0N	12	NC
13	XPEWL-P0P	14	NC
15	GND	16	NC
17	NC	18	GND
19	NC	20	WLRFON-S3N
21	GND	22	IC2601-4 / PLTRS3-E3N
23	ZERWL-P1N	24	WLAN-E3V
25	ZERWL-P1P	26	WLDET-P3N
27	GND	28	NC
29	GND	30	NC
31	ZETWL-P1N	32	NC
33	ZETWL-P1P	34	GND
35	GND	36	ZUSBWM-E3N
37	GND	38	ZUSBWM-E3P
39	WLAN-E3V	40	GND
41	WLAN-E3V	42	WMLED-E3P
43	GND	44	NC
45	XCLCK1-E1P	46	NC
47	CLDAT1-E1P	48	NC
49	CLRST1-E3N	50	GND
51	BTRFON-S3N	52	WLAN-E3V
1T	GND	2T	GND

## C.8 CN3230 Keyboard interface connector (30-pin)

Table C- 8 Keyboard interface connector (30-pin)

Pin No.	Signal Name	Pin No.	Signal Name
1	GND	2	TPONOF-S3N
3	CAPLED-S3P	4	P5V
5	NC	6	KBRT06-S3N
7	KBRT02-S3N	8	KBRT03-S3N
9	KBRT05-S3N	10	KBRT01-S3N
11	KBRT04-S3N	12	KBRT07-S3N
13	KBRT00-S3N	14	NC
15	KBSC00-S3N	16	KBSC09-S3N
17	KBSC03-S3N	18	KBSC02-S3N
19	KBSC05-S3N	20	KBSC04-S3N
21	KBSC06-S3N	22	KBSC08-S3N
23	KBSC10-S3N	24	KBSC01-S3N
25	KBSC11-S3N	26	KBSC07-S3N
27	KBSC15-S3N	28	KBSC12-S3N
29	KBSC13-S3N	30	KBSC14-S3N
1T	GND	2T	GND

## C.9 CN3380 FAN interface connector (4-pin)

Table C- 9 FAN interface connector (4-pin)

Pin No.	Signal Name	Pin No.	Signal Name
1	FAN-P5V	2	FANG0-P3P
3	GND	4	FPWM0-S3P
1T	GND	2T	GND

## C.10 CN4050 LAN interface connector (8-pin)

Table C- 10 LAN interface connector (8-pin)

Pin No.	Signal Name	Pin No.	Signal Name
1	ZBIDAP-EXP	2	ZBIDAN-EXN
3	ZBIDBP-EXP	4	ZBIDBN-EXN
5	ZBIDCP-EXP	6	ZBIDCN-EXN
7	ZBIDOP-EXP	8	ZBIDON-EXN

**C.11 CN4440 Bluetooth interface connector (6-pin)***Table C- 11 Bluetooth2 interface connector (6-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	P3V	2	GND
3	ZUSBBT-E3P	4	ZUSBBT-E3N
5	BTRFON-S3N	6	BTMDL-E3N

**C.12 CN5300 LCD interface connector (35-pin)***Table C- 12 LCD interface connector (35-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	NC	2	PNL-P3V
3	PNL-P3V	4	P3V
5	NC	6	TSCL-P3P
7	TSDA-P3P	8	ZITDA0-PYN
9	ZITDA0-PYP	10	GND
11	ZITDA1-PYN	12	ZITDA1-PYP
13	GND	14	ZITDA2-PYN
15	ZITDA2-PYP	16	GND
17	XITXCA-PYN	18	XITXCA-PYP
19	GND	20	NC
21	NC	22	GND
23	NC	24	NC
25	GND	26	GND
27	GND	28	GND
29	NC	30	BKLPWM-P3P
31	BLN-E3P	32	NC
33	GND	34	GND
35	GND		
1T	GND	2T	GND

### C.13 CN5400 CRT interface connector (15-pin)

Table C-13 CRT interface connector (15-pin)

Pin No.	Signal Name	Pin No.	Signal Name
1	MRED-PXP	2	MGREEN-PXP
3	MBLUE-PXP	4	NC
5	GND	6	GND
7	GND	8	GND
9	P5V	10	GND
11	NC	12	CRTSDA-P5P
13	MHSYNC-P3P	14	MVSYNC-P3P
15	CRTSCL-P5P		
1T	GND	2T	GND

### C.14 CN8800 DC-IN connector (4-pin)

Table C- 14 DC-IN connector (4-pin)

Pin No.	Signal Name	Pin No.	Signal Name
1	ADPDC 19V	2	ADPDC 19V
3	GND	4	GND
1T	GND	2T	GND

### C.15 CN8110 Battery connector (10-pin)

Table C- 15 Battery connector (10-pin)

Pin No.	Signal Name	Pin No.	Signal Name
1	Q8811-1pin	2	BTMP1
3	Q8811-4pin	4	M5V
5	PSCL-S5P	6	PSDA-S5P
7	GND	8	DBT10V-S5N
9	GND	10	GND

**C.16 CN9300 RTCVCC interface connector (3-pin)***Table C- 16 RTCVCC interface connector (3-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	R3V	2	NC
3	GND		
1T	GND	2T	GND

**C.17 CN9540 FAL3ES\* board interface connector (50-pin)***Table C- 17 FAL3ES\* board interface connector (50-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	PDROPV	2	NC
3	GND	4	GND
5	GND	6	GND
7	TP-HDMMDLZ	8	GND
9	IDBSDA-P3P	10	GND
11	IDBSCL-P3P	12	GND
13	ZIDPB2-P1P	14	ZIDPB2-P1N
15	GND	16	ZIDPB1-P1P
17	ZIDPB1-P1N	18	GND
19	ZIDPB0-P1P	20	ZIDPB0-P1N
21	GND	22	XIDPBC-P1P
23	XIDPBC-P1N	24	GND
25	ZSATT3-P1P	26	ZSATT3-P1N
27	GND	28	ZSATR3-P1N
29	ZSATR3-P1P	30	GND
31	ZUSBP1-E3P	32	ZUSBP1-E3N
33	GND	34	ZUSSES-E3P
35	ZUSSES-E3N	36	GND
37	HPDETI-P3P	38	ESATEN-P3N
39	1R8-P1V	40	USBOC1-E3N
41	P3V	42	USBOC0-E3N
43	USBON1-E5N	44	P5V
45	USBON0-E5N	46	E5V
47	E5V	48	E5V
49	E5V	50	E5V
1T	GND	2T	GND



**C.18 CN9550 FAL3TP\* board interface connector (20-pin)***Table C- 18 FULTP\*board interface connector (20-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	P5V	2	P5V
3	IPDDAT-P5P	4	GND
5	IPDCLK-P5P	6	GND
7	DCINOR-S5N	8	M5V
9	DCINGR-S5N	10	PWLEOR-S3P
11	PWLEGR-S3P	12	BAT1OR-S5N
13	BAT1GR-S5N	14	GND
15	SATLED-P3N	16	P3V
17	FMCLED-P3N	18	FMC-P3V
19	RFLED-S3P	20	WANLED-E3P
1T	GND	2T	GND

**C.19 CN9551 FULFS\* board interface connector (6-pin)***Table C- 19 FULFS\*board interface connector (6-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	GND	2	ZUSBFS-E3P
3	ZUSBFS-E3N	4	GND
5	FGSPON-S3N	6	A-E3V
1T	GND	2T	GND

**C.20 CN9570 FAL3U\*\* board interface connector (50-pin)***Table C- 20 FULSN\* board interface connector (50-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	P5V	2	P5V
3	P5V	4	P5V
5	P5V	6	PVON-S5P
7	SND-GND	8	SND-GND
9	SND-GND	10	SND-GND
11	SND-GND	12	GND
13	GND	14	GND
15	CAMDET-P3N	16	CAMPON-E3N
17	GPBTNB-S3N	18	GPBTNA-S3N
19	GND	20	AZSDI0-P3P
21	GND	22	AZRST0-E3N
23	GND	24	AZSDO0-E3P
25	GND	26	AZSYC0-E3P
27	GND	28	XAZBC0-E3P
29	GND	30	TP-PCBEEP
31	GND	32	ATBEEP-P3P
33	P3V	34	SNDMUT-S3N
35	S3V	36	PNLOFF-S3N
37	GND	38	ZUSBCM-E3P
39	ZUSBCM-E3N	40	GND
41	ZUSBP9-E3P	42	ZUSBP9-E3N
43	GND	44	US3OC2-E3N
45	US3ON-E3N	46	E5V
47	E5V	48	E5V
49	E5V	50	E5V
1T	GND	2T	GND

**C.21 CN9580 FAL33G\* board interface connector (25-pin)***Table C- 21 FAL33G\* board interface connector (25-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	3GON-S3N	2	E5V
3	E5V	4	E5V
5	E5V	6	E5V
7	E5V	8	3GLED-E3P
9	TMP3G-GND	10	TMP3G-SXP
11	MINDET-P3N	12	3GRFON-S3N
13	GND	14	ZUSB3G-E3N
15	ZUSB3G-E3P	16	GND
17	ZUSSIM-E3N	18	ZUSSIM-E3P
19	GND	20	GND
21	GND	22	GND
23	SMBDT1-E3P	24	GND
25	SMBCK1-E3P		
1T	GND	2T	GND

**C.22 CN9700 FAL3SA\*board interface connector (50-pin)***Table C- 22 FAL3SA\* board interface connector (50-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	E5V	2	E5V
3	E5V	4	E5V
5	E5V	6	E5V
7	E5V	8	E5V
9	SBVON-E5N	10	P3V
11	P3V	12	P3V
13	PODDDET-P3N	14	ODDATT-S3N
15	GND	16	ZSTROD-P1N
17	ZSTROD-P1P	18	GND
19	ZSTTOD-P1N	20	ZSTTOD-P1P
21	GND	22	GND
23	GND	24	GND
25	GND	26	GND
27	GND	28	GND
29	ZUSBTS-E3P	30	ZUSBTS-E3N
31	GND	32	SODDET-P3N
33	P3V	34	P3V
35	P3V	36	FMC-P3V
37	FMCLED-P3N	38	GND
39	IC9700-4	40	FMCXRQ-P3N
41	GND	42	XPEFMC-P0P
43	XPEFMC-P0N	44	GND
45	ZERFMC-P1N	46	ZERFMC-P1P
47	GND	48	ZETFCMC-P1N
49	ZETFCMC-P1P	50	GND
1T	GND	2T	GND

**C.23 CN9560 Smart Card interface connector (10-pin)***Table C- 23 Smart Card interface connector (10-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	GND	2	GND
3	GND	4	GND
5	GND	6	SCRMDL-P3N
7	GND	8	ZUSBSC-E3P
9	ZUSBSC-E3N	10	GND
11	PLTRS3-E3N	12	P3V
13	NC	14	P5V
1T	GND	2T	GND

**C.24 CN9571 FAL3U3\* board interface connector (25-pin)***Table C- 24 FAL3U2\* board interface connector (25-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	E3V	2	US3XRQ-E3N
3	1R05-E1V	4	1R05-E1V
5	PEWAKE-E3N	6	PLTRST-N
7	US3SMI-E3N	8	GND
9	XPEUS3-P0P	10	XPEUS3-P0N
11	GND	12	ZERUS3-P1P
13	ZERUS3-P1N	14	GND
15	ZETUS3-P1P	16	ZETUS3-P1N
17	GND	18	US3MDL-P3N
19	RSMRST-N	20	GND
21	GND	22	GND
23	GND	24	GND
25	GND		
1T	GND	2T	GND

**eSATA/HDMI/USB board (FAL3E\*\*)****C.25 CN9640 System board interface connector (50-pin)***Table C- 25 System board interface connector (50-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	E5V	2	E5V
3	E5V	4	E5V
5	E5V	6	USBON0-E3N
7	P5V	8	USBON1-E3N
9	USBOC0-E3N	10	P3V
11	USBOC1-E3N	12	1R5-P1V
13	ESATEN-P3N	14	DPBHPD-P3P
15	GND	16	ZUSAES-E3N
17	ZUSAES-E3P	18	GND
19	ZUSBP1-E3N	20	ZUSBP1-E3P
21	GND	22	ZSATR3-P1P
23	ZSATR3-P1N	24	GND
25	ZSATT3-P1N	26	ZSATT3-P1P
27	GND	28	XIDPBC-P1N
29	XIDPBC-P1P	30	GND
31	ZIDPB0-P1N	32	ZIDPB0-P1P
33	GND	34	ZIDPB1-P1N
35	ZIDPB1-P1P	36	GND
37	ZIDPB2-P1N	38	ZIDPB2-P1P
39	GND	40	IDBSCL-P3P
41	GND	42	IDBSDA-P3P
43	GND	44	TP-HDMMDLZ
45	GND	46	GND
47	GND	48	GND
49	NC	50	PDROPV
1T	GND	2T	GND

## C.26 CN1970 eSATA/USB interface connector (11-pin)

Table C- 26 eSATA/USB interface connector (11-pin)

Pin No.	Signal Name	Pin No.	Signal Name
P1	USB1PS-E5V	P2	ZUSAES-E3N
P3	ZUSAES-E3P	P4	GND
P5	GND	P6	ZSTTES-P1P
P7	ZSTTES-P1N	P8	GND
P9	ZSTRES-P1N	P10	ZSTRES-P1P
P11	GND		
1T	GND	2T	GND
3T	GND	4T	GND

## C.27 CN5350 HDMI interface connector (19-pin)

Table C- 27 HDMI interface connector (19-pin)

Pin No.	Signal Name	Pin No.	Signal Name
1	ZIDTX2-P3P	2	GND
3	ZIDTX2-P3N	4	ZIDTX1-P3P
5	GND	6	ZIDTX1-P3N
7	ZIDTX0-P3P	8	GND
9	ZIDTX0-P3N	10	XIDCLK-P3P
11	GND	12	XIDCLK-P3N
13	NC	14	NC
15	IHDSCL-PYP	16	IHDSDA-PYP
17	GND	18	CEC-S5V
19	HPDETI-P3P		
1T	GND	2T	GND
3T	GND	4T	GND

**C.28 CN4610 USB interface connector (4-pin)***Table C- 28 USB interface connector (4-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	USB0PS-E5V	2	ZUSBP1-E3N
3	ZUSBP1-E3P	4	GND
1T	GND	2T	GND
3T	GND		



**Touch Pad/LED Button board (FAL3TP\*)****C.29 CN3240 Touch Pad interface connector (12-pin)***Table C- 29 Touch Pad interface connector (12-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	P5V	2	P5V
3	IPDDAT-P5P	4	IPDCLK-P5P
5	GND	6	GND
7	TPBTNR-P5N	8	NC
9	NC	10	NC
11	NC	12	TPBTNL-P5N
1T	GND	2T	GND

**C.30 CN9650 System board interface connector (14-pin)***Table C- 30 System board interface connector (14-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	WANLED-E3P	2	RFLED-S3P
3	FMC-P3V	4	FMCLED-P3N
5	P3V	6	SATLED-P3N
7	GND	8	BAT1GR-S5N
9	BAT1OR-S5N	10	PWLEGR-S3P
11	PWLEOR-S3P	12	DCINGR-S5N
13	M5V	14	DCINOR-S5N
15	GND	16	IPDCLK-P5P
17	GND	18	IPDDAT-P5P
19	P5V	20	P5V
1T	GND	2T	GND

**Finger sensor board (FULFS\*)****C.31 CN3650 System board interface connector (6-pin)***Table C- 31 System board interface connector (6-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	A-E3V	2	FGSPON-S3N
3	GND	4	ZUSBFS-E3N
5	ZUSBFS-E3P	6	GND
1T	GND	2T	GND

**Sound/USB board (FAL3U2\*)****C.32 CN9670 System board interface connector (50-pin)***Table C- 32 System board interface connector 50(-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	E5V	2	E5V
3	E5V	4	E5V
5	E5V	6	US3ON-E3N
7	US3OC2-E3N	8	GND
9	ZUSBP9-E3N	10	ZUSBP9-E3P
11	GND	12	ZUSBCM-E3N
13	ZUSBCM-E3P	14	GND
15	PNLOFF-S3N	16	S3V
17	SNDMUT-S3N	18	P3V
19	ATBEEP-P3P	20	GND
21	TP-PCBEEP	22	GND
23	XAZBC0-E3P	24	GND
25	AZSYC0-E3P	26	GND
27	AZSDO0-E3P	28	GND
29	AZRST0-E3N	30	GND
31	AZSDI0-P3P	32	GND
33	GPBTNA-S3N	34	GPBTNB-S3N
35	CAMPON-E3N	36	CAMDET-P3N
37	GND	38	GND
39	GND	40	SND-GND
41	SND-GND	42	SND-GND
43	SND-GND	44	SND-GND
45	PVON-S5P	46	P5V
47	P5V	48	P5V
49	P5V	50	P5V
1T	GND	2T	GND

**C.33 CN4630 USB interface connector (4-pin)***Table C- 33 USB interface connector (4-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	US3PS1-E5V	2	ZUSBP9-E3N
3	ZUSBP9-E3P	4	GND
1T	GND	2T	GND
3T	GND		

**C.34 CN6000 Speaker interface connector (4-pin)***Table C- 34 Speaker interface connector (4-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	SPOTL-PXN	2	SPOTL-PXP
3	SPOTR-PXP	4	SPOTR-PXN

**C.35 CN6050 Int-Mic interface connector (2-pin)***Table C- 35 Int-Mic interface connector (2-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	DMICIN-PXP	2	XDMCLK-PXP
3	GND		

**C.36 J6051 Microphone connector (6-pin)***Table C- 36 Microphone connector (6-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	EMICB-P2V	2	-
3	EMICB-P2V	4	EMICIN-PXP
5	A-GND	6	DETCTA-P4N

**C.37 J6310 Headphone connector (6-pin)***Table C- 37 Headphone connector (6-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	HEADR-PXP	2	-
3	NC	4	HEADL-PXP
5	A-GND	6	DETCTA-P4N

**C.38 CN9540 WebCam interface connector (6-pin)***Table C- 38 WebCam interface connector (6-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	CAM-P3V	2	ZUSBCM-E3N
3	ZUSBCM-E3P	4	GND
5	GND	6	CAMDET-P3N

**C.39 CN9620 FULPN\* interface connector (3-pin)***Table C- 39 FULPN\* interface connector (3-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	S3V	2	PNLOFF-S3N
3	GND		
1T	GND	2T	GND

**3G/SIM board (FAL33G\*)****C.40 CN9720 System board interface connector (25-pin)***Table C- 40 System board interface connector (25-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	E3V	2	E3V
3	E3V	4	E3V
5	E3V	6	E3V
7	E3V	8	3GLED-E3P
9	TMP3G-GND	10	TMP3G-SXP
11	MINDET-P3N	12	3GRFON-S3N
13	GND	14	ZUSB3G-E3N
15	ZUSB3G-E3P	16	GND
17	ZUSSIM-E3N	18	ZUSB3G-E3P
19	GND	20	GND
21	GND	22	GND
23	SMBDT1-E3P	24	GND
25	SMBCK1-E3P		
1T	GND	2T	GND

**C.41 CN2610 PCI-E Mini(3G) CARD interface connector (52-pin)***Table C- 41 PCI-E Mini(3G) CARD interface connector (52-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	NC	2	3G-E3V
3	NC	4	GND
5	NC	6	NC
7	NC	8	UIMPWR-E3V
9	GND	10	UIMDAF-E3P
11	NC	12	UIMCLF-E3P
13	NC	14	UIMRSF-E3P
15	GND	16	NC
17	NC	18	GND
19	NC	20	WDISAB-E3N
21	GND	22	NC
23	NC	24	3G-E3V
25	NC	26	MINDET-P3N
27	GND	28	NC
29	GND	30	SMBCKF-E3P
31	NC	32	SMBDTF-E3P
33	NC	34	GND
35	GND	36	ZUSB3G-E3N
37	GND	38	ZUSB3G-E3P
39	3G-E3V	40	GND
41	3G-E3V	42	3GLED-E3P
43	GND	44	NC
45	NC	46	NC
47	NC	48	NC
49	NC	50	GND
51	NC	52	3G-E3V
1T	GND	2T	GND

**C.42 CN2650 PCI-E Mini(3G) CARD interface connector (52-pin)***Table C- 42 PCI-E Mini(3G) CARD interface connector (52-pin) ( Back slot)*

Pin No.	Signal Name	Pin No.	Signal Name
1	NC	2	3G-E3V
3	NC	4	GND
5	NC	6	NC
7	NC	8	UIMPWR-E3V
9	GND	10	UIMDAB-E3P
11	NC	12	UIMCLB-E3P
13	NC	14	UIMRSB-E3P
15	GND	16	NC
17	NC	18	GND
19	NC	20	WDISAB-E3N
21	GND	22	NC
23	NC	24	3G-E3V
25	NC	26	MINDET-P3N
27	GND	28	NC
29	GND	30	SMBCKB-E3P
31	NC	32	SMBDTB-E3P
33	NC	34	GND
35	GND	36	ZUSB3G-E3N
37	GND	38	ZUSB3G-E3P
39	3G-E3V	40	GND
41	3G-E3V	42	3GLED-E3N
43	GND	44	NC
45	NC	46	NC
47	NC	48	NC
49	NC	50	GND
51	NC	52	3G-E3V
1T	GND	2T	GND



**C.43 IS2620 SIM board interface connector (9-pin)***Table C- 43 SIM board interface connector (9-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	UIMPWR-E3V	2	UIMRSF-E3P
3	UIMCLF-E3P	4	ZUSSIM-E3P
5	GND	6	NC
7	UIMDAF-E3P	8	ZUSSIM-E3N
9	NC		
1T	GND	2T	GND
3T	GND	4T	GND
5T	GND	6T	GND

**SD/SATA ODD board (FAL3SA\*)****C.44 CN9710 System board interface connector (50-pin)***Table C- 44 System board interface connector (50-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	GND	2	ZETPMC-P1P
3	ZETPMC-P1N	4	GND
5	ZETPMC-P1P	6	ZETPMC-P1N
7	GND	8	XPEPMC-P0N
9	XPEPMC-P0P	10	GND
11	FMCXRQ-P3N	12	PLTRS0-E3N
13	GND	14	FMCLED-P3N
15	FMC-P3V	16	P3V
17	P3V	18	P3V
19	SODDET-P3N	20	GND
21	ZUSBTS-E3N	22	ZUSBTS-E3P
23	GND	24	GND
25	GND	26	GND
27	GND	28	GND
29	GND	30	GND
31	ZSTTOD-P1P	32	ZSTTOD-P1N
33	GND	34	ZSTROD-P1
35	ZSTROD-P1N	36	GND
37	ODDATT-S3N	38	(TP)
39	P3V	40	P3V
41	P3V	42	SBVON-E5N
43	E5V	44	E5V
45	E5V	46	E5V
47	E5V	48	E5V
49	E5V	50	E5V
1T	GND	2T	GND

## C.45 CN1900 FULOA\*(FPC) interface connector (25-pin)

Table C- 45 FULOA\*(FPC) interface connector (25-pin)

Pin No.	Signal Name	Pin No.	Signal Name
1	GND	2	GND
3	GND	4	GND
5	GND	6	GND
7	GND	8	ODEJRQ-S3N
9	ODD-E5V	10	ODD-E5V
11	ODD-E5V	12	ODD-E5V
13	ODD-E5V	14	ODD-E5V
15	ODD-E5V	16	ODD-E5V
17	NC	18	SODDET-P3N
19	GND	20	ZSTROD-P1P
21	ZSTROD-P1N	22	GND
23	ZSTTOD-P1N	24	ZSTTO+D-P1P
25	GND		—
1T	GND	2T	GND

## C.46 IS2130 SD Card interface connector (12-pin)

Table C-46 SD Card interface connector (12-pin)

Pin No.	Signal Name	Pin No.	Signal Name
1	SDAT3-P3P	2	SDCMD-P3P
3	GND	4	FMC-P3V
5	SDCLK-P3P	6	GND
7	SDAT0-P3P	8	SDAT1-P3P
9	SDAT2-P3P	10	SDCD-P3N
11	GND	12	SDWP-P3P
1T	GND	2T	GND

**C.47 CN6070 Digital Mic interface connector (12-pin)***Table C-47 Digital Mic interface connector (12-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	DMICIN-PXP	2	XDMCLK-PXP
3	GND		

## GMR sensor (LID) board (FAL3PS\*)

### C.48 CN3270 FAL3U2/U3\* board interface connector (3-pin)

*Table C- 48 FAL3U2/U3\* board interface connector (3-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	S3V	2	PNLOFF-S3N
3	GND		
1T	GND	2T	GND

**Sound/USB board (FAL3U3\*)****C.49 CN9670 System board interface connector (50-pin)***Table C- 49 System board interface connector (50-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	E5V	2	E5V
3	E5V	4	E5V
5	E5V	6	US3ON-E3N
7	US3OC2-E3N	8	GND
9	ZUSBP9-E3N	10	ZUSBP9-E3P
11	GND	12	ZUSBCM-E3N
13	ZUSBCM-E3P	14	GND
15	PNLOFF-S3N	16	S3V
17	SNDMUT-S3N	18	P3V
19	ATBEEP-P3P	20	GND
21	TP-PCBEEP	22	GND
23	XAZBC0-E3P	24	GND
25	AZSYC0-E3P	26	GND
27	AZSDO0-E3P	28	GND
29	AZRST0-E3N	30	GND
31	AZSDI0-P3P	32	GND
33	GPBTNA-S3N	34	GPBTNB-S3N
35	CAMPON-E3N	36	CAMDET-P3N
37	GND	38	GND
39	GND	40	SND-GND
41	SND-GND	42	SND-GND
43	SND-GND	44	SND-GND
45	PVON-S5P	46	P5V
47	P5V	48	P5V
49	P5V	50	P5V
1T	GND	2T	GND

**C.50 CN9671 System board interface connector (25-pin)***Table C- 50 System board interface connector (25-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	GND	2	GND
3	GND	4	GND
5	GND	6	GND
7	RSMRST-S3N	8	US3MDL-P3N
9	GND	10	ZETUS3-P1N
11	ZETUS3-P1P	12	GND
13	ZERUS3-P1N	14	ZERUS3-P1P
15	GND	16	XPEUS3-P0N
17	XPEUS3-P0P	18	GND
19	US3SMI-E3N	20	PLTRS0-E3N
21	PEWAKE-E3N	22	1R05-E1V
23	1R05-E1V	24	US3XRQ-E3N
25	E3V		
1T	GND	2T	GND

**C.51 CN4530 USB3.0 interface connector (9-pin)***Table C- 51 USB3.0 interface connector (9-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	US3PS1-E5V	2	ZU2DP1-E3N
3	ZU2DP1-E3P	4	GND
5	ZU3RP1-E1N	6	ZU3RP1-E1P
7	GND	8	ZU3TP1-E1N
9	ZU3TP1-E1P		
1T	GND	2T	GND
3T	GND		

**C.52 CN6000 Speaker interface connector (4-pin)***Table C- 52 Speaker interface connector (4-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	SPOTL-PXN	2	SPOTL-PXP
3	SPOTR-PXP	4	SPOTR-PXN

**C.53 CN6050 Int-Mic interface connector (2-pin)***Table C- 53 Int-Mic interface connector (2-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	DMICIN-PXP	2	XDMCLK-PXP
3	GND		

**C.54 J6051 Microphone connector (6-pin)***Table C- 54 Microphone connector (6-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	EMICB-P2V	2	-
3	EMICB-P2V	4	EMICIN-PXP
5	A-GND	6	DETCTA-P4N



**C.55 J6310 Headphone connector (6-pin)***Table C- 55 Headphone connector (6-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	HEADR-PXP	2	-
3	NC	4	HEADL-PXP
5	A-GND	6	DETCTA-P4N

**C.56 CN9540 WebCam interface connector (6-pin)***Table C- 56 WebCam interface connector (6-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	CAM-P3V	2	ZUSBCM-E3N
3	ZUSBCM-E3P	4	GND
5	GND	6	CAMDET-P3N

**C.57 CN9620 FULPN\* interface connector (3-pin)***Table C- 57 FULPN\* interface connector (3-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	S3V	2	PNLOFF-S3N
3	GND		
1T	GND	2T	GND

**eSATA/HDMI/USB board (FAL3E3\*)****C.58 CN9640 System board interface connector (50-pin)***Table C- 58 System board interface connector (50-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	E5V	2	E5V
3	E5V	4	E5V
5	E5V	6	USBON0-E3N
7	P5V	8	USBON1-E3N
9	USBOC0-E3N	10	P3V
11	USBOC1-E3N	12	1R5-P1V
13	ESATEN-P3N	14	DPBHPD-P3P
15	GND	16	ZUSAES-E3N
17	ZUSAES-E3P	18	GND
19	ZUSBP1-E3N	20	ZUSBP1-E3P
21	GND	22	ZSATR3-P1P
23	ZSATR3-P1N	24	GND
25	ZSATT3-P1N	26	ZSATT3-P1P
27	GND	28	XIDPBC-P1N
29	XIDPBC-P1P	30	GND
31	ZIDPB0-P1N	32	ZIDPB0-P1P
33	GND	34	ZIDPB1-P1N
35	ZIDPB1-P1P	36	GND
37	ZIDPB2-P1N	38	ZIDPB2-P1P
39	GND	40	IDBSCL-P3P
41	GND	42	IDBSDA-P3P
43	GND	44	TP-HDMMDLZ
45	GND	46	GND
47	GND	48	GND
49	NC	50	PDROPV
1T	GND	2T	GND

**C.59 CN1970 eSATA/USB interface connector (11-pin)***Table C- 59 eSATA/USB interface connector (11-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
P1	USB1PS-E5V	P2	ZUSAES-E3N
P3	ZUSAES-E3P	P4	GND
P5	GND	P6	ZSTTES-P1P
P7	ZSTTES-P1N	P8	GND
P9	ZSTRES-P1N	P10	ZSTRES-P1P
P11	GND		
1T	GND	2T	GND
3T	GND	4T	GND

**C.60 CN5350 HDMI interface connector (19-pin)***Table C- 60 HDMI interface connector (19-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	ZIDTX2-P3P	2	GND
3	ZIDTX2-P3N	4	ZIDTX1-P3P
5	GND	6	ZIDTX1-P3N
7	ZIDTX0-P3P	8	GND
9	ZIDTX0-P3N	10	XIDCLK-P3P
11	GND	12	XIDCLK-P3N
13	NC	14	NC
15	IHDSCL-PYP	16	IHSDA-PYP
17	GND	18	CEC-S5V
19	HPDETI-P3P		
1T	GND	2T	GND
3T	GND	4T	GND

**C.61 CN4610 USB 3.0 interface connector (4-pin)***Table C- 61 USB interface connector (4-pin)*

Pin No.	Signal Name	Pin No.	Signal Name
1	USB0PS-E5V	2	ZUSBP1-E3N
3	ZUSBP1-E3P	4	GND
1T	GND	2T	GND
3T	GND		



Appendix D

## Appendix D Keyboard Scan/Character Codes

### D.1 Scan Codes

Table D-1 Scan codes (set 1 and set 2) (1/4)

Cap No.	Keytop	Code set 1		Code set 2			Note	
		Make	Break	Make	Break			
01	‘ ~	29	A9	0E	F0	0E		
02	1 !	02	82	16	F0	16		
03	2 @	03	83	1E	F0	1E		
04	3 #	04	84	26	F0	26		
05	4 \$	05	85	25	F0	25		
06	5 %	06	86	2E	F0	2E		
07	6 ^	07	87	36	F0	36		
08	7 &	08	88	3D	F0	3D		*2
09	8 *	09	89	3E	F0	3E		*2
10	9 (	0A	8A	46	F0	46		*2
11	0 )	0B	8B	45	F0	45		
12	- _	0C	8C	4E	F0	4E		
13	= +	0D	8D	55	F0	55		
15	BkSp	0E	8E	66	F0	66		
16	Tab	0F	8F	0D	F0	0D		
17	Q	10	90	15	F0	15		
18	W	11	91	1D	F0	1D		
19	E	12	92	24	F0	24		
20	R	13	93	2D	F0	2D		
21	T	14	94	2C	F0	2C		
22	Y	15	95	35	F0	35		
23	U	16	96	3C	F0	3C		*2
24	I	17	97	43	F0	43		*2
25	O	13	98	44	F0	44		*2
26	P	19	99	4D	F0	4D		*2
27	[ {	1A	9A	54	F0	54		
28	] }	1B	9B	5B	F0	5B		

Table D-1 Scan codes (set 1 and set 2) (2/4)

Cap No.	Keytop	Code set 1		Code set 2			Note
		Make	Break	Make	Break		
29	\	2B	AB	5D	F0	5D	*5
30	Caps Lock	3A	BA	58	F0	58	
31	A	1E	9E	1C	F0	1C	
32	S	1F	9F	1B	F0	1B	
33	D	20	A0	23	F0	23	
34	F	21	A1	2B	F0	2B	*2
35	G	22	A2	34	F0	34	
36	H	23	A3	33	F0	33	
37	J	24	A4	3B	F0	3B	
38	K	25	A5	42	F0	42	
39	L	26	A6	4B	F0	4B	*2
40	; :	27	A7	4C	F0	4C	*2
41	‘ “	28	A8	52	F0	52	*3
43	Enter	1C	9C	5A	F0	5A	
44	Shift (L)	2A	AA	12	F0	12	
45	No.102 key	56	D6	61	F0	61	
46	Z	2C	AC	1A	F0	1A	
47	X	2D	AD	22	F0	22	*2
48	C	2E	AE	21	F0	21	
49	V	2F	AF	2A	F0	2A	
50	B	30	B0	32	F0	32	
51	N	31	B1	31	F0	31	
52	M	32	B2	3A	F0	3A	*2
53	, <	33	B3	41	F0	41	*2
54	. >	34	B4	49	F0	49	*2
55	/ ?	35	B5	4A	F0	4A	*2
57	Shift (R)	36	B6	59	F0	59	

Table D-1 Scan codes (set 1 and set 2) (3/4)

Cap No.	Keytop	Code set 1		Code set 2		Note
		Make	Break	Make	Break	
58	Ctrl	1D	9D	14	F0 14	*3
60	Alt (L)	38	B8	11	F0 11	*3
61	Space	39	B9	29	F0 29	
62	ALT (R)	E0 38	E0 B8	E0 11	E0 F0 11	
75	Ins	E0 52	E0 D2	E0 70	E0 F0 70	*1
76	Del	E0 53	E0 D3	E0 71	E0 F0 71	*1
79	←	E0 4B	E0 CB	E0 6B	E0 F0 6B	*1
80	Home	E0 47	E0 C7	E0 6C	E0 F0 6C	*1
81	End	E0 4F	E0 CF	E0 69	E0 F0 69	*1
83	↑	E0 48	E0 C8	E0 75	E0 F0 75	*1
84	↓	E0 50	E0 D0	E0 72	E0 F0 72	*1
85	PgUp	E0 49	E0 C9	E0 7D	E0 F0 7D	*1
86	PgDn	E0 51	E0 D1	E0 7A	E0 F0 7A	*1
89	→	E0 4D	E0 CD	E0 74	E0 F0 74	*1
110	Esc	01	81	76	F0 76	
112	F1	3B	BB	05	F0 05	
113	F2	3C	BC	06	F0 06	
114	F3	3D	BD	04	F0 04	
115	F4	3E	BE	0C	F0 0C	
116	F5	3F	BF	03	F0 03	
117	F6	40	C0	0B	F0 0B	
118	F7	41	C1	83	F0 83	
119	F8	42	C2	0A	F0 0A	
120	F9	43	C3	01	F0 01	
121	F10	44	C4	09	F0 09	*3



Table D-1 Scan codes (set 1 and set 2) (4/4)

Cap No.	Keytop	Code set 1				Code set 2					Note
		Make		Break		Make		Break			
122	F11	57		D7		78		F0	78		*3
123	F12	58		D8		07		F0	07		*3
124	PrintSc	*6		*6		*6		*6			*6
126	Pause	*7		*7		*7		*7			*7
202	Fn	—		—		—		—			*4
203	Win	E0	5B	E0	DB	E0	1F	E0	F0	1F	
204	App	E0	5D	E0	DD	E0	2F	E0	F0	2F	

**Notes:**

1. \* Scan codes differ by mode.
2. \* Scan codes differ by overlay function.
3. \* Combined with the **Fn** key makes different codes.
4. \* **Fn** key does not generate a code by itself.
5. \* This key corresponds to key No. 42 in a 102-key model.
6. \* Refer to Table D-6, No. 124 key scan code.
7. \* Refer to Table D-7, No. 126 key scan code.

Table D-2 Scan codes with left Shift key

Cap No.	Key top	Code set 1				Code set 2					
		Make		Break		Make			Break		
55	/	E0 AA E0 35	E0 B5 E0 2A	E0 F0 12 E0 4A	E0 F0 4A E0 12						
75	INS	E0 AA E0 52	E0 D2 E0 2A	E0 F0 12 E0 70	E0 F0 70 E0 12						
76	DEL	E0 AA E0 53	E0 D3 E0 2A	E0 F0 12 E0 71	E0 F0 71 E0 12						
79	←	E0 AA E0 4B	E0 CB E0 2A	E0 F0 12 E0 6B	E0 F0 6B E0 12						
80	Home	E0 AA E0 47	E0 C7 E0 2A	E0 F0 12 E0 6C	E0 F0 6C E0 12						
81	End	E0 AA E0 4F	E0 CF E0 2A	E0 F0 12 E0 69	E0 F0 69 E0 12						
83	↑	E0 AA E0 48	E0 C8 E0 2A	E0 F0 12 E0 75	E0 F0 75 E0 12						
84	↓	E0 AA E0 50	E0 D0 E0 2A	E0 F0 12 E0 72	E0 F0 72 E0 12						
85	PgUp	E0 AA E0 49	E0 C9 E0 2A	E0 F0 12 E0 7D	E0 F0 7D E0 12						
86	PgDn	E0 AA E0 51	E0 D1 E0 2A	E0 F0 12 E0 7A	E0 F0 7A E0 12						
89	→	E0 AA E0 4D	E0 CD E0 2A	E0 F0 12 E0 74	E0 F0 74 E0 12						
203	Win	E0 AA E0 5B	E0 DB E0 2A	E0 F0 12 E0 1F	E0 F0 1F E0 12						
204	App	E0 AA E0 5D	E0 DD E0 2A	E0 F0 12 E0 2F	E0 F0 2F E0 12						

**Note :** The table above shows scan codes with the left **Shift** key. In combination with the right **Shift** key, scan codes are changed as listed below:

	With left <b>Shift</b>	With right <b>Shift</b>
Set 1	E0 AA _____	E0 B6
	E0 2A _____	E0 36
Set 2	E0 F0 12 _____	E0 F0 59
	E0 12 _____	E0 59

Table D-3 Scan codes in Numlock mode

Cap No.	Key top	Code set 1				Code set 2			
		Make		Break		Make		Break	
75	INS	E0 2A E0 52	E0 D2 E0 AA	E0 12 E0 70	E0 F0 70 E0 F0 12				
76	DEL	E0 2A E0 53	E0 D3 E0 AA	E0 12 E0 71	E0 F0 71 E0 F0 12				
79	←	E0 2A E0 4B	E0 CB E0 AA	E0 12 E0 6B	E0 F0 6B E0 F0 12				
80	Home	E0 2A E0 47	E0 C7 E0 AA	E0 12 E0 6C	E0 F0 6C E0 F0 12				
81	End	E0 2A E0 4F	E0 CF E0 AA	E0 12 E0 69	E0 F0 69 E0 F0 12				
83	↑	E0 2A E0 48	E0 C8 E0 AA	E0 12 E0 75	E0 F0 75 E0 F0 12				
84	↓	E0 2A E0 50	E0 D0 E0 AA	E0 12 E0 72	E0 F0 72 E0 F0 12				
85	PgUp	E0 2A E0 49	E0 C9 E0 AA	E0 12 E0 7D	E0 F0 7D E0 F0 12				
86	PgDn	E0 2A E0 51	E0 D1 E0 AA	E0 12 E0 7A	E0 F0 7A E0 F0 12				
89	→	E0 2A E0 4D	E0 CD E0 AA	E0 12 E0 74	E0 F0 74 E0 F0 12				
203	Win	E0 2A E0 5B	E0 DB E0 AA	E0 12 E0 1F	E0 F0 1F E0 F0 12				
204	App	E0 2A E0 5D	E0 DD E0 AA	E0 12 E0 2F	E0 F0 2F E0 F0 12				

Table D-4 Scan codes with Fn key

Cap No.	Keytop	Code set 1		Code set 2	
		Make	Break	Make	Break
43	ENT	E0 1C	E0 9C	E0 5A	E0 F0 5A
58	CTRL	E0 1D	E0 9D	E0 14	E0 F0 14
60	LALT	E0 38	E0 B8	E0 11	E0 F0 11
121	ARROW	45	C5	77	F0 77
122	NUMERIC	45	C5	77	F0 77
123	Scrl	46	C5	7E	F0 7E

Table D-5 Scan codes in overlay mode

Cap No.	Keytop	Code set 1		Code set 2	
		Make	Break	Make	Break
09	8 (8)	48	C8	75	F0 75
10	9 (9)	49	C9	7D	F0 7D
11	0 (*)	37	B7	7C	F0 7C
23	U (4)	4B	CB	6B	F0 6B
24	I (5)	4C	CC	73	F0 73
25	O (6)	4D	CD	74	F0 74
26	P (–)	4A	CA	7B	F0 7B
37	J (1)	4F	CF	69	F0 69
38	K (2)	50	D0	72	F0 72
39	L (3)	51	D1	7A	F0 7A
40	; (+)	4E	CE	79	F0 79
52	M (0)	52	D2	70	F0 70
54	. (.)	53	D3	71	F0 71
55	/ (/)	E0 35	E0 B5	40 4A	E0 F0 4A

Table D-6 No.124 key scan code

Key top	Shift	Code set 1				Code set 2			
		Make		Break		Make		Break	
Prt Sc	Common	E0 2A	E0 37	E0 B7	E0 AA	E0 12	E0 7C	E0 F0 7C	E0 F0 12
	Ctrl +	E0 37		E0 B7		E0 7C		E0 F0 7C	
	Shift +	E0 37		E0 B7		E0 7C		E0 F0 7C	
	Alt +		54	D4		84		F0 B4	

Table D-7 No.126 key scan code

Key top	Shift	Code set 1	Code set 2
		Make	Make
Pause	Common*	E1 1D 45 E1 9D C5	E1 14 77 E1 F0 14 F0 77
	Ctrl*	E0 46 E0 C6	E0 7E E0 F0 7E

\*: This key generates only make codes.

## Appendix E Key Layout

### E.1 United Kingdom (UK) Keyboard

	22	25	19	20	21	23	24	18
3	A01 (Fn)				A02 (Win)			
2		B00 (L-Shift)						B12 (R-Shift)
1			A00 (L-Ctrl)				A10 (R-Ctrl)	
5				A03 (L-Alt)		A08 (R-Alt)		
4	B01 (Z)	C01 (A)	C00 (CapsLk)	D01 (Q)	D00 (Tab)	E01 (1)	F01 (F1)	F00 (Esc)
6		E00 (`)	B02 (X)	C02 (S)	D02 (W)	E02 (2)	F02 (F2)	
8	F13		B03 (C)	C03 (D)	F05 (F5)	D03 (E)	E03 (3)	F04 (F4)
9	F14		B04 (V)		C04 (F)	F06 (F6)	D04 (R)	E04 (4)
11		B05 (B)		C05 (G)	F08 (F8)	D05 (T)	E05 (5)	F07 (F7)
12	A11 (←)	B06 (N)			C06 (H)	F09 (F9)	D06 (Y)	E06 (6)
13	B13 (I)		B07 (M)	C07 (J)		D07 (U)	E07 (7)	F10 (F10)
14	A12 (↓)		F15	B08 (,)	C08 (K)	D08 (I)	E08 (8)	F11 (F11)
15	A13 (→)		F16	B09 (.)	C09 (L)	D09 (O)	E09 (9)	F12 (F12)
10	B10 (/)		C10 (:)	D11 (;)	D10 (P)	E11 (-)	E10 (0 zero)	A05 (Space)
7		C13 (Enter)	C11 (')	D12 (')	E14 (Backspace)		E12 (=)	
16	A09 (APP)	D13 (\)	B15	C15	D15	E15		

CN番号はキーボード側から見て下図のような順番である。  
The CN numbers are arranged as the figure,  
looking from the keypad side.

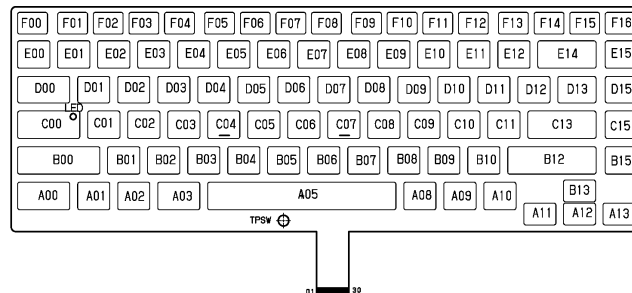


Figure E-1 UK keyboard

### E.2 United States (US) Keyboard

	22	25	19	20	21	23	24	18
3	A01 (Fn)				A02 (Win)			
2		B00 (L-Shift)						B12 (R-Shift)
1			A00 (L-Ctrl)				A10 (R-Ctrl)	
5				A03 (L-Alt)		A08 (R-Alt)		
4	B01 (Z)	C01 (A)	C00 (CapsLk)	D01 (Q)	D00 (Tab)	E01 (1)	F01 (F1)	F00 (Esc)
6		E00 (`)	B02 (X)	C02 (S)	D02 (W)	E02 (2)	F02 (F2)	
8	F13		B03 (C)	C03 (D)	F05 (F5)	D03 (E)	E03 (3)	F04 (F4)
9	F14		B04 (V)		C04 (F)	F06 (F6)	D04 (R)	E04 (4)
11		B05 (B)		C05 (G)	F08 (F8)	D05 (T)	E05 (5)	F07 (F7)
12	A11 (←)	B06 (N)			C06 (H)	F09 (F9)	D06 (Y)	E06 (6)
13	B13 (I)		B07 (M)	C07 (J)		D07 (U)	E07 (7)	F10 (F10)
14	A12 (↓)		F15	B08 (,)	C08 (K)	D08 (I)	E08 (8)	F11 (F11)
15	A13 (→)		F16	B09 (.)	C09 (L)	D09 (O)	E09 (9)	F12 (F12)
10	B10 (/)		C10 (:)	D11 (;)	D10 (P)	E11 (-)	E10 (0 zero)	A05 (Space)
7		C13 (Enter)	C11 (')	D12 (')	E14 (Backspace)		E12 (=)	
16	A09 (APP)	C12 (#)	B15	C15	D15	E15		

CN番号はキーボード側から見て下図のような順番である。  
The CN numbers are arranged as the figure,  
looking from the keypad side.

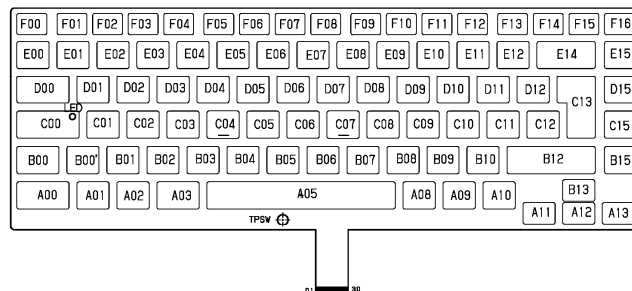


Figure E-2 US keyboard



## Appendix F Wiring diagrams

### F.1 RGB Monitor Loopback Connector

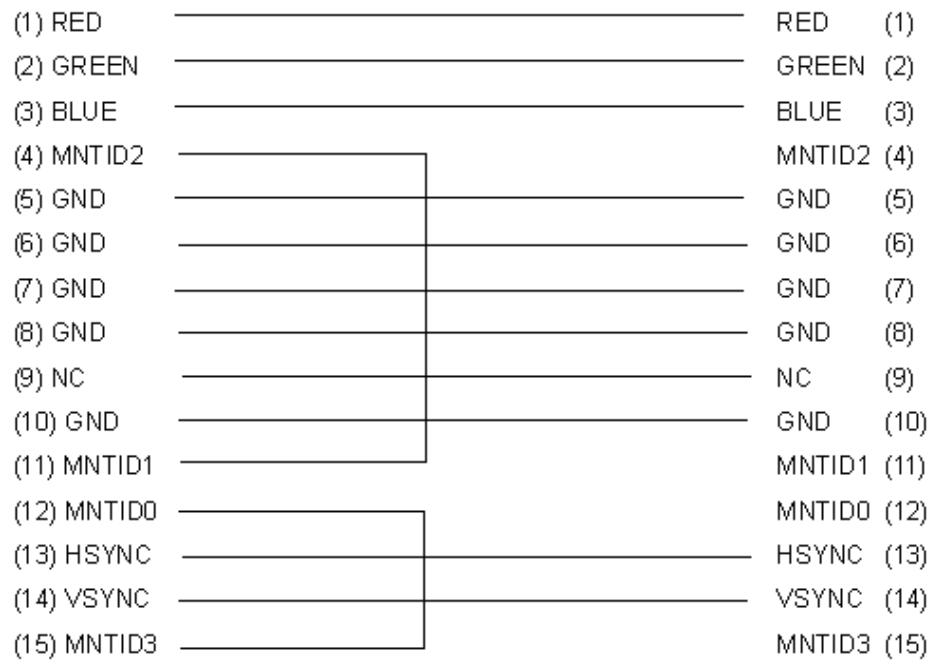


Figure F-1 RGB Monitor Loopback Connector

### F.2 LAN Loopback Connector

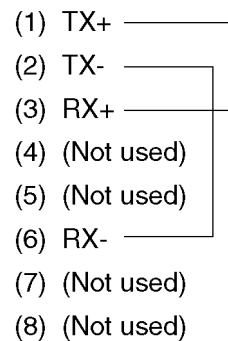


Figure F-2 LAN Loopback Connector





---

## Appendix G BIOS Rewrite Procedures

---

This Appendix explains how to rewrite the system BIOS program when you update the system BIOS.

### Tools

To rewrite the BIOS, you need the following tool:

- ❑ BIOS/EC/KBC rewriting disk

### Rewriting the BIOS

1. Set the system to boot mode.
2. Turn off the power to the computer.
3. Remove the external cables and cards.
4. Set the USB Flash Memory containing BIOS rewriting data..
5. Turn on the power while holding down the tilde character key Until LED blinks

For example



(US Keyboard)



(UK Keyboard)

(Keep holding down the key.)

6. The BIOS rewriting starts.
7. When the process is completed, it the system automatically reboots.

<p><b>NOTE:</b></p> <ol style="list-style-type: none"><li>1. <i>Connect the AC adapter and the charged battery to the computer when you rewrite the BIOS.</i></li><li>2. <i>Do not turn off the power while you are rewriting the BIOS. If the rewrite fails, it might be impossible to start up the computer.</i></li><li>3. <i>If you fail to rewrite BIOS, then when you next turn on the power, a message may be displayed that the contents of the BIOS have been erased. In this case, insert the BIOS rewriting disk and the BIOS will be rewritten.</i></li></ol>
---



## Appendix H EC/KBC Rewrite Procedures

This Appendix explains how to rewrite the EC/KBC system program when you update the EC/KBC system.

It is necessary to rewrite the EC/KBC system program when the following changes are made.

1. Replacing of system board
2. Replacing of LCD

### Tools

To rewrite the EC/KBC, you need the following tool:

- ❑ EC/KBC rewriting disk for the computer

### Rewriting the EC/KBC

**NOTE:**

1. Rewrite the EC/KBC only when instructed by a diagnostic disk release notice.
2. Connect the AC adaptor to the computer when you rewrite the EC/KBC.
3. Do not turn off the power while you are rewriting the EC/KBC.  
If the rewrite fails, it might be impossible to start up the computer.
4. If you fail to rewrite EC/KBC, then when you next turn on the power, a message may be displayed that the contents of the EC/KBC have been erased. In this case, insert the EC/KBC rewriting disk, and the EC/KBC will be rewritten.
5. Normally it takes about 30 seconds to rewrite the EC/KBC. It may take 3 minutes (maximum), depending on the conditions of the computer or ICs. The computer is not hung up. Allow sufficient time. Never reboot or turn off the power to the computer before the rewriting is completed.

1. Set the system to boot mode.
2. Turn off the power to the computer.
3. Remove the external cables and cards.
4. Set the USB Flash Memory containing EC/KBC rewriting data..
5. Turn on the power while holding down the **Tab** key. (Keep holding down the key until a beep sounds.) The EC/KBC rewriting starts.
6. When the EC/KBC rewrite is completed, the system is automatically turned off.



## Appendix I Reliability

The following table shows MTBF (Mean Time Between Failures) in maximum configuration.

*Table I-1 MTBF*

	Time (hours)
10	6673.9h
10C	6634.0h

