

# *SERVICE MANUAL*

E4105 / E4105-C

*notebook*





**Notebook Computer**

**E4105/E4105-C**

**Service Manual**

## Notice

The company reserves the right to revise this publication or to change its contents without notice. Information contained herein is for reference only and does not constitute a commitment on the part of the manufacturer or any subsequent vendor. They assume no responsibility or liability for any errors or inaccuracies that may appear in this publication nor are they in anyway responsible for any loss or damage resulting from the use (or misuse) of this publication.

This publication and any accompanying software may not, in whole or in part, be reproduced, translated, transmitted or reduced to any machine readable form without prior consent from the vendor, manufacturer or creators of this publication, except for copies kept by the user for backup purposes.

Brand and product names mentioned in this publication may or may not be copyrights and/or registered trademarks of their respective companies. They are mentioned for identification purposes only and are not intended as an endorsement of that product or its manufacturer.

Version 1.0  
July 2010

## Trademarks

**Intel, Intel Pentium, Intel Celeron** and **Intel Core** are trademarks of Intel Corporation.

**Windows®** is a registered trademark of Microsoft Corporation.

Other brand and product names are trademarks and /or registered trademarks of their respective companies.

## About this Manual

This manual is intended for service personnel who have completed sufficient training to undertake the maintenance and inspection of personal computers.

It is organized to allow you to look up basic information for servicing and/or upgrading components of the *E4105/E4105-C* series notebook PC.

The following information is included:

Chapter 1, Introduction, provides general information about the location of system elements and their specifications.  
Chapter 2, Disassembly, provides step-by-step instructions for disassembling parts and subsystems and how to upgrade elements of the system.

Appendix A, Part Lists

Appendix B, Schematic Diagrams

Appendix C, Updating the FLASH ROM BIOS

## Preface

---

### IMPORTANT SAFETY INSTRUCTIONS

Follow basic safety precautions, including those listed below, to reduce the risk of fire, electric shock and injury to persons when using any electrical equipment:

1. Do not use this product near water, for example near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electrical shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
5. This product is intended to be supplied by a Listed Power Unit with an AC Input of 100 - 240V, 50 - 60Hz, DC Output of 19V, 3.42A or 18.5V, 3.5A (65W) minimum AC/DC Adapter.

### CAUTION

**This Computer's Optical Device is a Laser Class 1 Product**


## Instructions for Care and Operation

The notebook computer is quite rugged, but it can be damaged. To prevent this, follow these suggestions:


1. **Don't drop it, or expose it to shock.** If the computer falls, the case and the components could be damaged.



2. **Keep it dry, and don't overheat it.** Keep the computer and power supply away from any kind of heating element. This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.

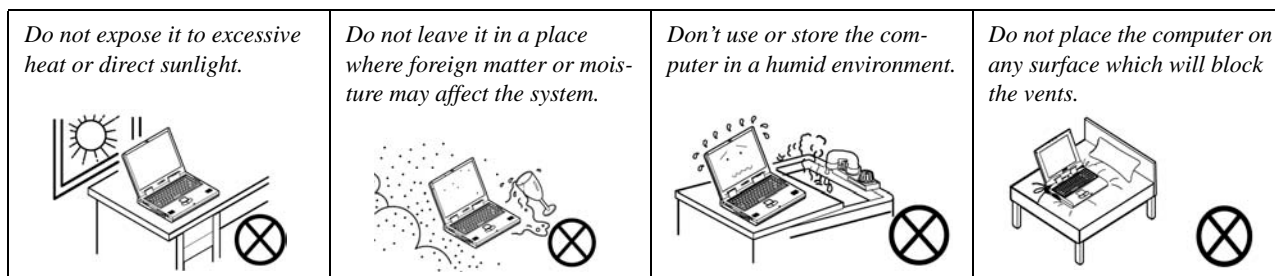


3. **Follow the proper working procedures for the computer.** Shut the computer down properly and don't forget to save your work. Remember to periodically save your data as data may be lost if the battery is depleted.

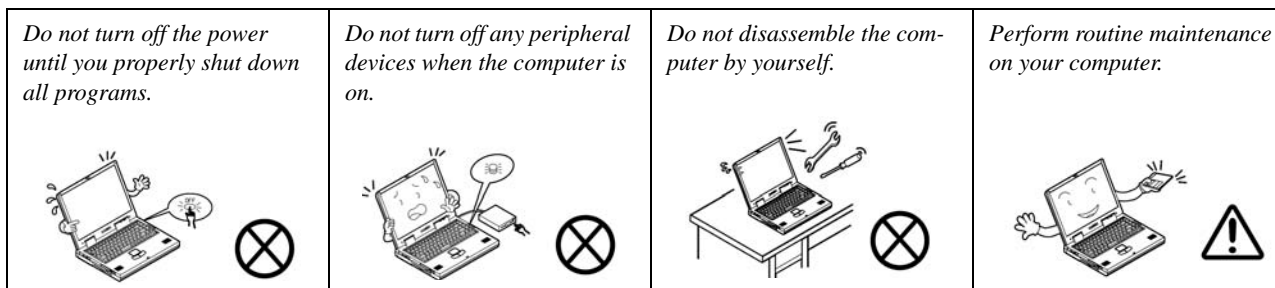

## Preface


4. **Avoid interference.** Keep the computer away from high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage your data.
5. **Take care when using peripheral devices.**

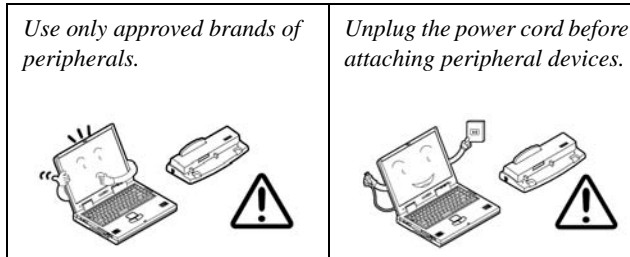

## Power Safety

The computer has specific power requirements:

- Only use a power adapter approved for use with this computer.
- Your AC adapter may be designed for international travel but it still requires a steady, uninterrupted power supply. If you are unsure of your local power specifications, consult your service representative or local power company.
- The power adapter may have either a 2-prong or a 3-prong grounded plug. The third prong is an important safety feature; do not defeat its purpose. If you do not have access to a compatible outlet, have a qualified electrician install one.
- When you want to unplug the power cord, be sure to disconnect it by the plug head, not by its wire.
- Make sure the socket and any extension cord(s) you use can support the total current load of all the connected devices.
- Before cleaning the computer, make sure it is disconnected from any external power supplies.

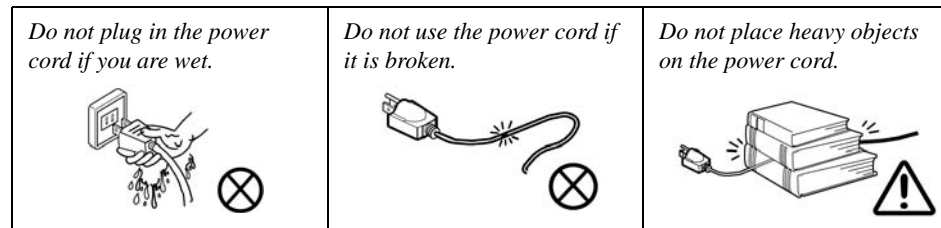

### Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.



## Battery Precautions

- Only use batteries designed for this computer. The wrong battery type may explode, leak or damage the computer.
- Do not continue to use a battery that has been dropped, or that appears damaged (e.g. bent or twisted) in any way. Even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire.
- Recharge the batteries using the notebook's system. Incorrect recharging may make the battery explode.
- Do not try to repair a battery pack. Refer any battery pack repair or replacement to your service representative or qualified service personnel.
- Keep children away from, and promptly dispose of a damaged battery. Always dispose of batteries carefully. Batteries may explode or leak if exposed to fire, or improperly handled or discarded.
- Keep the battery away from metal appliances.
- Affix tape to the battery contacts before disposing of the battery.
- Do not touch the battery contacts with your hands or metal objects.

## Battery Guidelines

The following can also apply to any backup batteries you may have.

- If you do not use the battery for an extended period, then remove the battery from the computer for storage.
- Before removing the battery for storage charge it to 60% - 70%.
- Check stored batteries at least every 3 months and charge them to 60% - 70%.




### Battery Disposal

The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

### Caution

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.

### Battery Level

Click the battery icon  in the taskbar to see the current battery level and charge status. A battery that drops below a level of 10% will not allow the computer to boot up. Make sure that any battery that drops below 10% is recharged within one week.

## Preface

### Related Documents

You may also need to consult the following manual for additional information:

#### User's Manual on CD/DVD

This describes the notebook PC's features and the procedures for operating the computer and its ROM-based setup program. It also describes the installation and operation of the utility programs provided with the notebook PC.

### System Startup

1. Remove all packing materials.
2. Place the computer on a stable surface.
3. Insert the battery and make sure it is locked in position.
4. Securely attach any peripherals you want to use with the computer (e.g. keyboard and mouse) to their ports.
5. Attach the AC/DC adapter to the DC-In jack at the rear of the computer, then plug the AC power cord into an outlet, and connect the AC power cord to the AC/DC adapter.
6. Use one hand to raise the lid/LCD to a comfortable viewing angle (do not exceed 120 degrees); use the other hand (as illustrated in <Hyperlink B n l>Figure 1) to support the base of the computer (**Note: Never** lift the computer by the lid/LCD).
7. Press the power button to turn the computer "on".

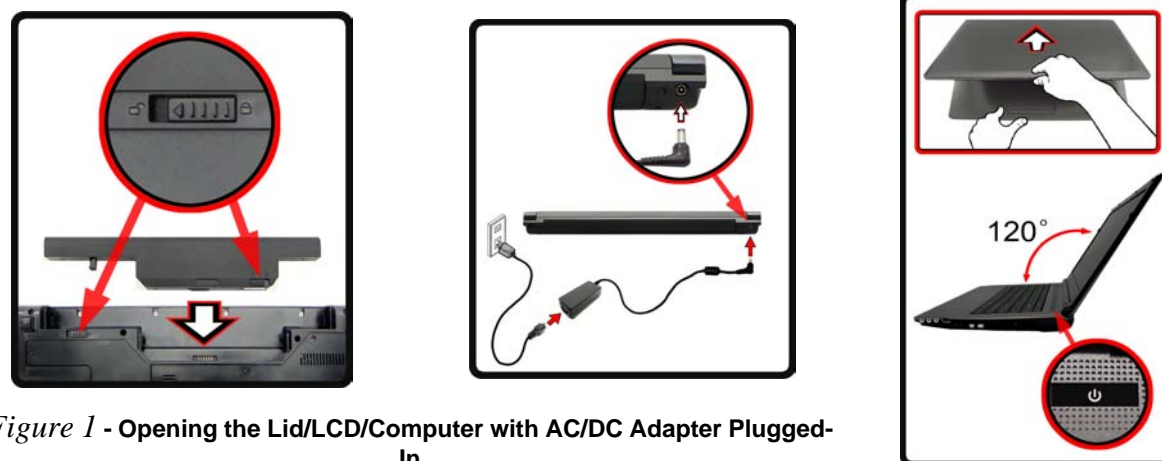


Figure 1 - Opening the Lid/LCD/Computer with AC/DC Adapter Plugged-In

# Contents

## Introduction .....1-1

Overview .....	1-1
Specifications .....	1-2
External Locator - Top View with LCD Panel Open .....	1-4
External Locator - Front & Right Side Views .....	1-5
External Locator - Left Side & Rear View .....	1-6
External Locator - Bottom View .....	1-7
Mainboard Overview - Top (Key Parts) .....	1-8
Mainboard Overview - Bottom (Key Parts) .....	1-9
Mainboard Overview - Top (Connectors) .....	1-10
Mainboard Overview - Bottom (Connectors) .....	1-11

## Disassembly .....2-1

Overview .....	2-1
Maintenance Tools .....	2-2
Connections .....	2-2
Maintenance Precautions .....	2-3
Disassembly Steps .....	2-4
Removing the Battery .....	2-5
Removing the Hard Disk Drive .....	2-6
Removing the System Memory (RAM) .....	2-8
Removing the Optical (CD/DVD) Device .....	2-10
Removing and Installing the Processor .....	2-11
Removing the Wireless LAN Module .....	2-14
Removing the Bluetooth Module .....	2-15
Removing the Keyboard .....	2-16

## Part Lists .....A-1

Part List Illustration Location .....	A-2
Top without Fingerprint .....	A-3
Bottom .....	A-4

LCD .....	A-5
-----------	-----

SATA DVD Super-Multi .....	A-6
----------------------------	-----

## Schematic Diagrams.....B-1

System Block Diagram .....	B-2
Clock Generator .....	B-3
CPU 1/7 (DMI, PEG, FDI) .....	B-4
CPU 2/7 (CLK, MISC) .....	B-5
CPU 3/7 (DDR3) .....	B-6
CPU 4/7 (Power) .....	B-7
CPU 5/7 (VGFX Power) .....	B-8
CPU 6/7 (GND) .....	B-9
CPU 7/7 (RESERVED) .....	B-10
DDR3 SO-DIMM_0 .....	B-11
DDR3 SO-DIMM_1 .....	B-12
Panel, Inverter, CRT .....	B-13
VGA PCI-E Interface .....	B-14
VGA Frame Buffer Interface .....	B-15
VGA Frame Buffer A .....	B-16
VGA Frame Buffer C .....	B-17
VGA I/O .....	B-18
VGA NVVDD Cecoupling .....	B-19
IBEXPEAK- M 1/9 .....	B-20
IBEXPEAK - M 2/9 .....	B-21
IBEXPEAK - M 3/9 .....	B-22
IBEXPEAK - M 4/9 .....	B-23
IBEXPEAK - M 5/9 .....	B-24
IBEXPEAK - M 6/9 .....	B-25
IBEXPEAK - M 7/9 .....	B-26
IBEXPEAK - M 8/9 .....	B-27
IBEXPEAK - M 9/9 .....	B-28

## Preface

New Card, Mini PCIE .....	B-29
3G, CCD, TPM .....	B-30
USB, Fan, TP, FP, Multi-Conn .....	B-31
JMC 251 Card Reader .....	B-32
SATA ODD, LED, Hotkey, LID SW .....	B-33
RJ45, Modem .....	B-34
Audio Codec ALC272 .....	B-35
KBC-ITE IT8502E .....	B-36
5VS, 3.3VS, 1.5VS, VIN1 .....	B-37
VDD3, VDD5 .....	B-38
Power 1.8V, PEX_VDD .....	B-39
Power 1.5V/0.75V .....	B-40
Power 1.1VS_VTT .....	B-41
Power VGFX_Core .....	B-42
V-Core .....	B-43
Power VGA NVVDD .....	B-44
AC_IN, Charger .....	B-45
HDMI .....	B-46
Audio Board .....	B-47
B4100 Fingerprint Board .....	B-48
B4100 Power Switch Board .....	B-49
Sequence .....	B-50

## Updating the FLASH ROM BIOS..... C-1

To update the FLASH ROM BIOS you must: C-1


Download the BIOS .....	C-1
Unzip the downloaded files to a bootable CD/DVD/ or USB Flash drive .....	C-1
Set the computer to boot from the external drive .....	C-1
Use the flash tools to update the BIOS .....	C-2
Restart the computer (booting from the HDD) .....	C-2

# Chapter 1: Introduction

## Overview

This manual covers the information you need to service or upgrade the **E4105/E4105-C** series notebook computer. Information about operating the computer (e.g. getting started, and the *Setup* utility) is in the *User's Manual*. Information about drivers (e.g. VGA & audio) is also found in the *User's Manual*. The manual is shipped with the computer.

Operating systems (e.g. *Windows Vista/ Window 7*, etc.) have their own manuals as do application softwares (e.g. word processing and database programs). If you have questions about those programs, you should consult those manuals.

The **E4105/E4105-C** series notebook is designed to be upgradeable. See [Disassembly on page 2 - 1](#) for a detailed description of the upgrade procedures for each specific component. Please take note of the warning and safety information indicated by the “” symbol.

The balance of this chapter reviews the computer's technical specifications and features.



## Introduction

# Specifications



### Latest Specification Information

The specifications listed here are correct at the time of sending them to the press. Certain items (particularly processor types/speeds) may be changed, delayed or updated due to the manufacturer's release schedule. Check with your service center for more details.



### CPU

The CPU is not a user serviceable part. Accessing the CPU in any way may violate your warranty.

### Processor Options

#### Intel® Core™ i7 Processor

**i7-620M (2.66GHz)**

4MB L3 Cache & 1066MHz FSB

#### Intel® Core™ i5 Processor

**i5-540M (2.53GHz), i5-520M (2.4GHz), i5-450M (2.4GHz), i5-430M (2.26GHz)**

3MB L3 Cache & 1066MHz FSB

#### Intel® Core™ i3 Processor

**i3-370M (2.4GHz), i3-350M (2.26GHz), i3-330M (2.13GHz)**

3MB L3 Cache & 1066MHz FSB

#### Intel® Pentium® Processor

**P6000 (1.86GHz)**

3MB L3 Cache & 1066MHz FSB

#### Intel® Celeron® Processor

**P4500 (1.86GHz)**

2MB L3 Cache & 1066MHz FSB

### Core Logic

Intel® HM55 Chipset

### BIOS

One 32Mb SPI Flash ROM

Phoenix™ BIOS

### LCD

14" (35.56cm) HD TFT LCD

### Memory

Two 204 Pin SO-DIMM Sockets Supporting **DDR3 1066MHz** Memory

Memory Expandable up to **8GB**

### Video Adapter

#### Intel® GMA HD

Shared Memory Architecture (DVM) up to **1.7GB**

Microsoft DirectX®10 Compatible

### Security

BIOS Password

Security (Kensington® Type) Lock Slot

### Audio

High Definition Audio Compliant Interface

2 \* Built-In Speakers

Built-In Microphone

### Storage

One Changeable 12.7mm(h) Super MultiOptical Device Drive

One Changeable 2.5" 9.5 mm (h) SATA HDD

### Keyboard

"WinKey" keyboard (with embedded numeric keypad)

### Pointing Device

Built-in Touchpad (scrolling key functionality integrated)

### Interface

Four USB 2.0 Ports

One eSATA Port

One HDMI-Out Port

One External Monitor Port

One Headphone-Out Jack

One Microphone-In Jack

One S/PDIF Out Jack

One RJ-45 LAN Jack

One DC-in Jack

### Half Mini Card Slots

Slot 1 for **WLAN** Module  
(**Factory Option**) Slot 2 for **3.75G/HSPA** Module

### Card Reader

Embedded 3-in-1 Card Reader  
MMC (MultiMedia Card) / RS MMC  
SD (Secure Digital) / Mini SD / SDHC/ SDXC Compatible  
MS (Memory Stick) / MS Pro / MS Duo

### Communication

Built-In Gigabit Ethernet LAN  
1.3M Pixel USB PC Camera Module  
(**Factory Option**) Bluetooth 2.1 + EDR Module  
(**Factory Option**) 3.75G/HSPA Half Mini-Card Module

#### Wireless LAN Module Options:

(**Factory Option**) Intel® WiFi Link 1000 (802.11b/g/n) Wireless LAN Half Mini-Card Module  
(**Factory Option**) Third-Party 802.11b/g/n Wireless LAN Half Mini-Card Module

### Environmental Spec

#### Temperature

Operating: 5°C - 35°C  
Non-Operating: -20°C - 60°C

#### Relative Humidity

Operating: 20% - 80%  
Non-Operating: 10% - 90%

### Power

Full Range AC/DC Adapter  
AC Input: 100 - 240V, 50 - 60Hz  
DC Output: 19V, 3.42A or 18.5V, 3.5A (**65W**)  
6 Cell Smart Lithium-Ion Battery Pack, 48.84WH  
(**Factory Option**) 6 Cell Smart Lithium-Ion Battery Pack, 62.16WH

### Dimensions & Weight

346mm (w) \* 238mm (d) \* 24.8 - 33.8mm (h)  
2.3 kg with ODD & 48.84WH Battery

## Introduction

*Figure 1*  
**Top View**

1. Built-In PC Camera
2. LCD
3. Power Button
4. LED Indicators
5. Keyboard
6. Built-In Microphone
7. Touchpad & Buttons

## External Locator - Top View with LCD Panel Open



## External Locator - Front & Right Side Views

*Figure 2*  
**Front View**

1. LED Indicators

FRONT VIEW



RIGHT SIDE VIEW



*Figure 3*  
**Right Side View**

1. Headphone-Out Jack
2. Microphone-In Jack
3. S/PDIF-Out Jack
4. USB 2.0 Port
5. Optical Device Drive Bay
6. Emergency Eject Hole

## Introduction

### External Locator - Left Side & Rear View

*Figure 4*  
**Left Side View**

1. External Monitor Port
2. RJ-45 LAN Jack
3. HDMI-Out Port
4. 3 \* USB 2.0 Ports
5. eSATA Port
6. Vent
7. 3-in-1 Card Reader

LEFT SIDE VIEW



*Figure 5*  
**Rear View**


1. Security Lock Slot
2. Battery
3. DC-In Jack

REAR VIEW





## External Locator - Bottom View

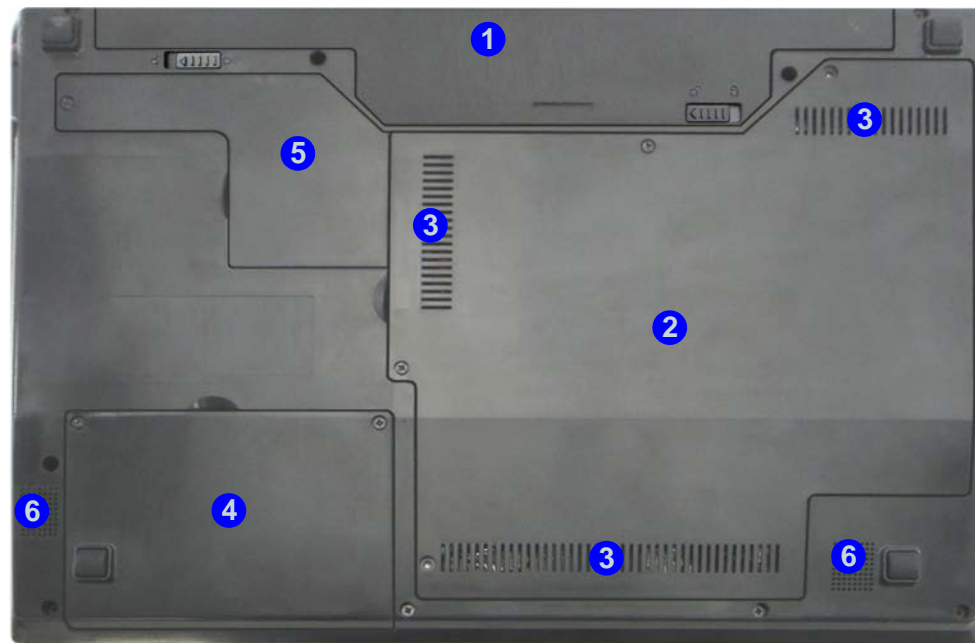

*Figure 6*  
**Bottom View**

1. Battery
2. Component Bay Cover
3. Vent
4. Hard Disk Bay Cover
5. Bluetooth Module Cover
6. Speakers



### Overheating


To prevent your computer from overheating, make sure nothing blocks any vent while the computer is in use.

## Introduction

*Figure 7*  
**Mainboard Top**  
**Key Parts**

1. JMC251
2. KBC-ITE IT8502E
3. Clock Generator
4. Azalia Codec
5. USIM Card

## Mainboard Overview - Top (Key Parts)

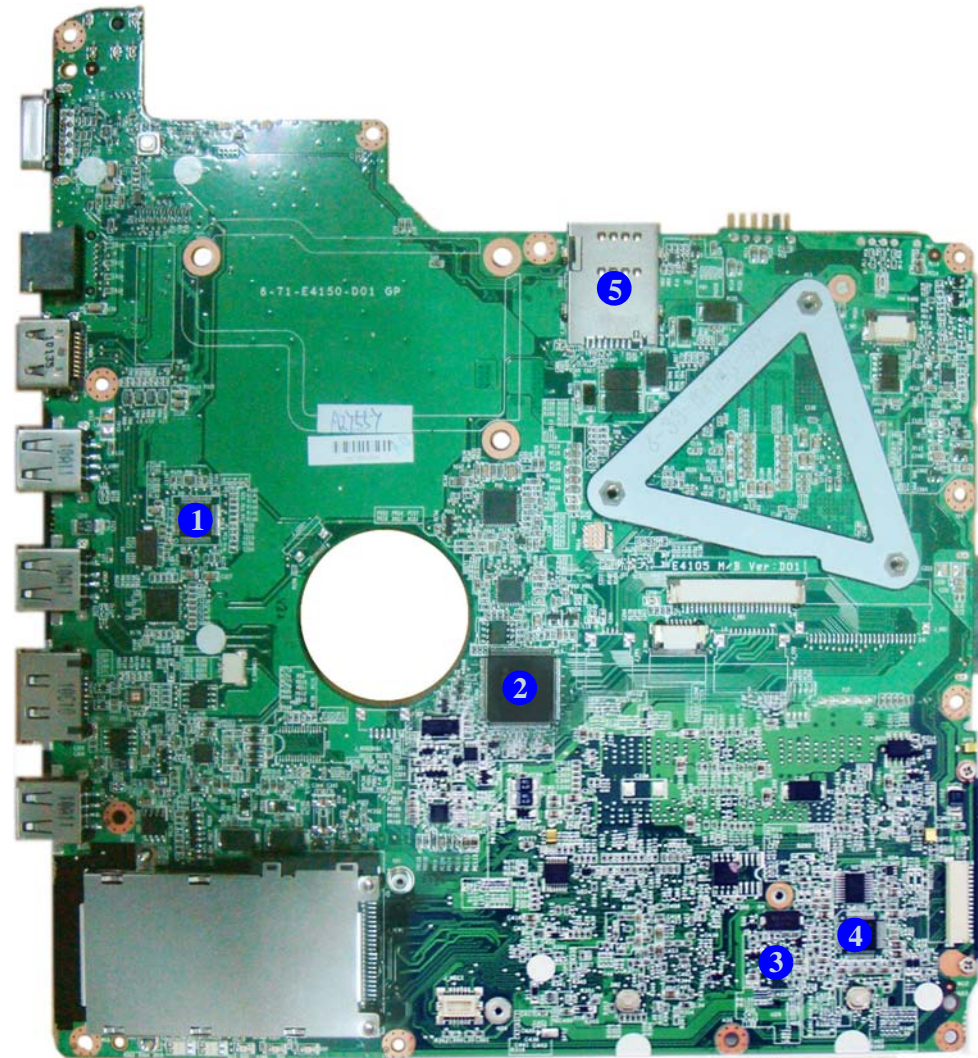

## Mainboard Overview - Bottom (Key Parts)



*Figure 8*  
**Mainboard Bottom  
Key Parts**

1. Mini-Card Connector (3.5G Module)
2. CPU Socket (no CPU installed)
3. Memory Slots (DDR3 SO-DIMM)
4. Mini-Card Connector (WLAN Module)
5. Platform Controller Hub
6. 3-in-1 Card Reader




## Introduction

*Figure 9*  
**Mainboard Top  
Connectors**

1. External Monitor Port
2. RJ-45 LAN Jack
3. HDMI-Out Port
4. USB Ports
5. eSATA Port
6. Microphone Cable Connector
7. Multi-board Connector 1
8. Audio Board Connector
9. Fingerprint Cable Connector
10. TouchPad Cable Connector
11. Keyboard Cable Connector
12. Switch Board Cable Connector

## Mainboard Overview - Top (Connectors)

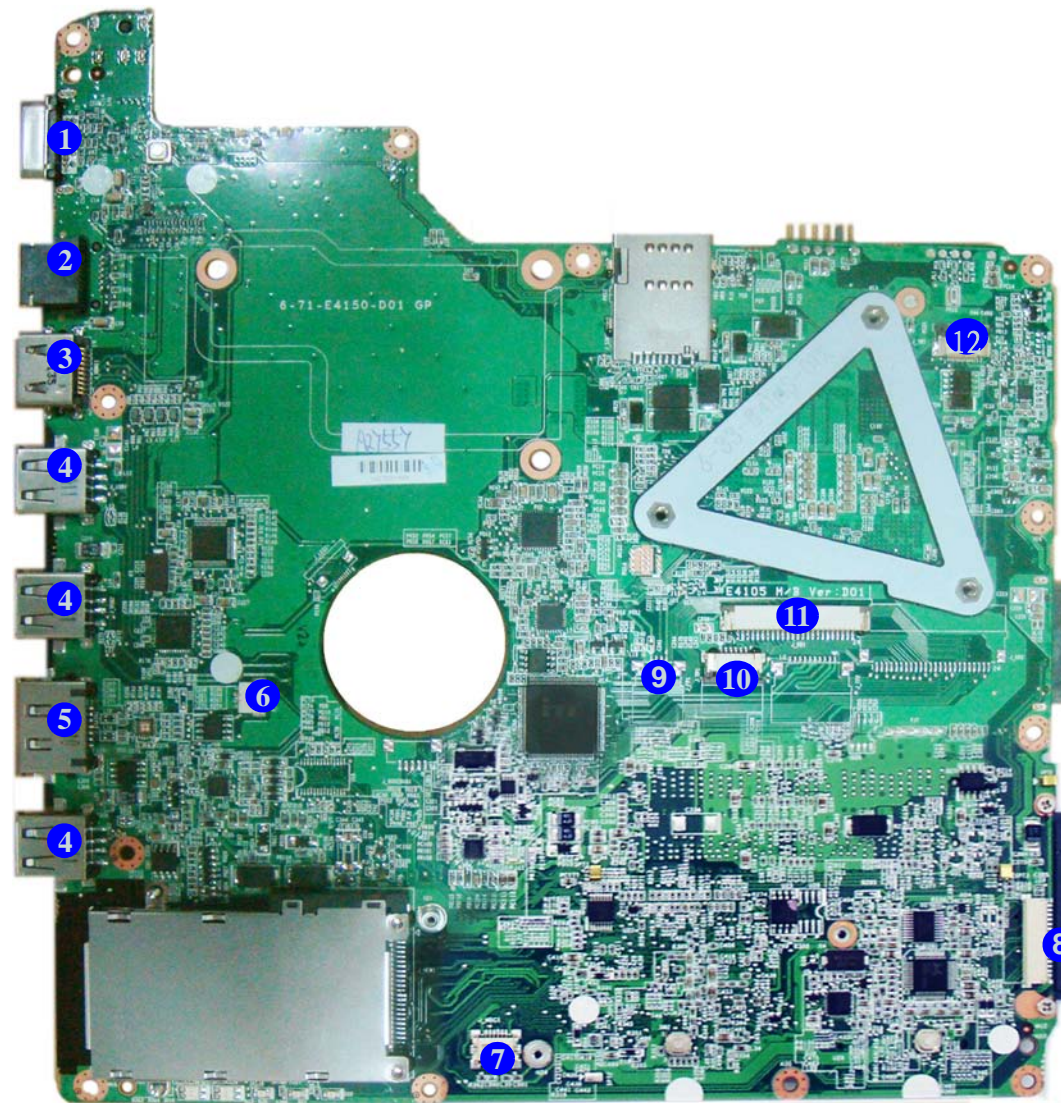

## Mainboard Overview - Bottom (Connectors)



*Figure 10*  
**Mainboard Bottom  
Connectors**

1. 3G Connector
2. Bluetooth Cable Connector
3. CD-ROM Connector
4. HDD Connector
5. CMOS Battery Connector
6. Speaker Cable Connector
7. CPU Fan Cable Connector
8. LCD Cable Connector
9. CCD Cable Connector
10. DC-In Jack






# Chapter 2: Disassembly



## Overview

This chapter provides step-by-step instructions for disassembling the *E4105/E4105-C* series notebook's parts and sub-systems. When it comes to reassembly, reverse the procedures (unless otherwise indicated).

We suggest you completely review any procedure before you take the computer apart.

Procedures such as upgrading/replacing the RAM, optical device and hard disk are included in the User's Manual but are repeated here for your convenience.

To make the disassembly process easier each section may have a box in the page margin. Information contained under the figure # will give a synopsis of the sequence of procedures involved in the disassembly procedure. A box with a  lists the relevant parts you will have after the disassembly process is complete. **Note:** The parts listed will be for the disassembly procedure listed ONLY, and not any previous disassembly step(s) required. Refer to the part list for the previous disassembly procedure. The amount of screws you should be left with will be listed here also.

A box with a  will also provide any possible helpful information. A box with a  contains warnings.

An example of these types of boxes are shown in the sidebar.

  
Information

Warning

## Disassembly

---

**NOTE:** All disassembly procedures assume that the system is turned **OFF**, and disconnected from any power supply (the battery is removed too).

### Maintenance Tools

The following tools are recommended when working on the notebook PC:

- M3 Philips-head screwdriver
- M2.5 Philips-head screwdriver (magnetized)
- M2 Philips-head screwdriver
- Small flat-head screwdriver
- Pair of needle-nose pliers
- Anti-static wrist-strap

### Connections

Connections within the computer are one of four types:

Locking collar sockets for ribbon connectors	To release these connectors, use a small flat-head screwdriver to gently pry the locking collar away from its base. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Pressure sockets for multi-wire connectors	To release this connector type, grasp it at its head and gently rock it from side to side as you pull it out. Do not pull on the wires themselves. When replacing the connection, do not try to force it. The socket only fits one way.
Pressure sockets for ribbon connectors	To release these connectors, use a small pair of needle-nose pliers to gently lift the connector away from its socket. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Board-to-board or multi-pin sockets	To separate the boards, gently rock them from side to side as you pull them apart. If the connection is very tight, use a small flat-head screwdriver - use just enough force to start.

## Maintenance Precautions

The following precautions are a reminder. To avoid personal injury or damage to the computer while performing a removal and/or replacement job, take the following precautions:

1. **Don't drop it.** Perform your repairs and/or upgrades on a stable surface. If the computer falls, the case and other components could be damaged.
2. **Don't overheat it.** Note the proximity of any heating elements. Keep the computer out of direct sunlight.
3. **Avoid interference.** Note the proximity of any high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage components and/or data. You should also monitor the position of magnetized tools (i.e. screwdrivers).
4. **Keep it dry.** This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.
5. **Be careful with power.** Avoid accidental shocks, discharges or explosions.
  - Before removing or servicing any part from the computer, turn the computer off and detach any power supplies.
  - When you want to unplug the power cord or any cable/wire, be sure to disconnect it by the plug head. Do not pull on the wire.
6. **Peripherals** – Turn off and detach any peripherals.
7. **Beware of static discharge.** ICs, such as the CPU and main support chips, are vulnerable to static electricity. Before handling any part in the computer, discharge any static electricity inside the computer. When handling a printed circuit board, do not use gloves or other materials which allow static electricity buildup. We suggest that you use an anti-static wrist strap instead.
8. **Beware of corrosion.** As you perform your job, avoid touching any connector leads. Even the cleanest hands produce oils which can attract corrosive elements.
9. **Keep your work environment clean.** Tobacco smoke, dust or other air-born particulate matter is often attracted to charged surfaces, reducing performance.
10. **Keep track of the components.** When removing or replacing any part, be careful not to leave small parts, such as screws, loose inside the computer.

## Cleaning

Do not apply cleaner directly to the computer, use a soft clean cloth.

Do not use volatile (petroleum distillates) or abrasive cleaners on any part of the computer.



### Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

### Disassembly Steps

The following table lists the disassembly steps, and on which page to find the related information. **PLEASE PERFORM THE DISASSEMBLY STEPS IN THE ORDER INDICATED.**

#### To remove the Battery:

1. Remove the battery *page 2 - 5*

#### To remove the HDD:

1. Remove the battery *page 2 - 5*
2. Remove the HDD *page 2 - 6*

#### To remove the System Memory:

1. Remove the battery *page 2 - 5*
2. Remove the system memory *page 2 - 8*

#### To remove the Optical Device:

1. Remove the battery *page 2 - 5*
2. Remove the Optical device *page 2 - 10*

#### To remove and install a Processor:

1. Remove the battery *page 2 - 5*
2. Remove the processor *page 2 - 11*
3. Install the processor *page 2 - 13*

#### To remove the Wireless LAN Module:

1. Remove the battery *page 2 - 5*
2. Remove the wireless LAN *page 2 - 14*

#### To remove the Bluetooth Module:

1. Remove the battery *page 2 - 5*
2. Remove the Bluetooth *page 2 - 15*

#### To remove the Keyboard:


1. Remove the battery *page 2 - 5*
2. Remove the keyboard *page 2 - 16*




## Removing the Battery

1. Turn the computer **off**, and turn it over.
2. Slide the latch **1** in the direction of the arrow (*Figure 1a*).
3. Slide the latch **2** in the direction of the arrow, and hold it in place (*Figure 1a*).
4. Slide the battery **3** in the direction of the arrow **4** (*Figure 1b*).

a.

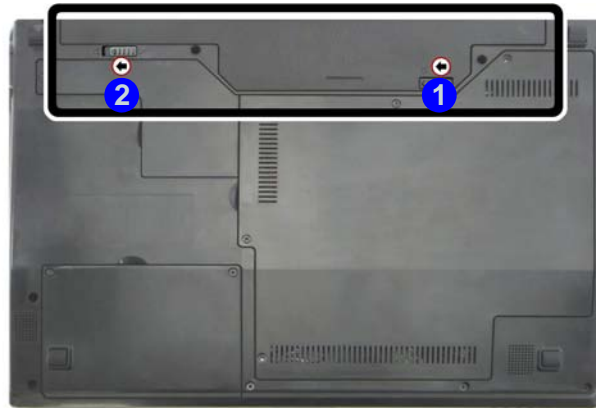

b.

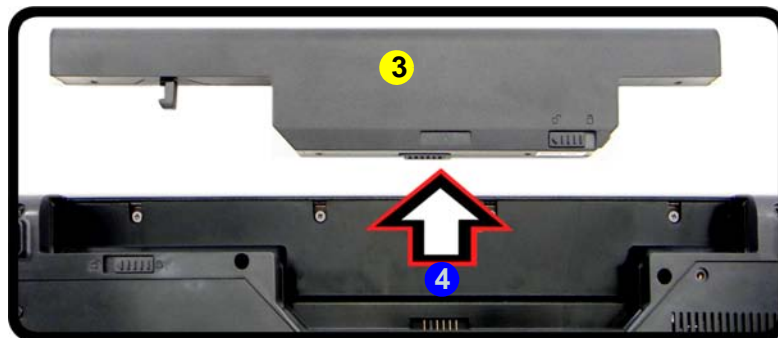

*Figure 1*  
**Battery Removal**

- a. Slide the latch and hold in place.
- b. Slide the battery in the direction of the arrow.



3. Battery

## Disassembly

*Figure 2*  
**HDD Assembly  
Removal**

- a. Locate the HDD bay cover and remove the screws.


## Removing the Hard Disk Drive

The hard disk drive can be taken out to accommodate other 2.5" serial (SATA) hard disk drives with a height of 9.5mm (h). Follow your operating system's installation instructions, and install all necessary drivers and utilities (as outlined in **Chapter 4 of the User's Manual**) when setting up a new hard disk.

### Hard Disk Upgrade Process

1. Turn **off** the computer, and remove the battery ([page 2 - 5](#)).
2. Locate the hard disk bay cover and remove screws **1** & **2** ([Figure 2a](#)).

a.

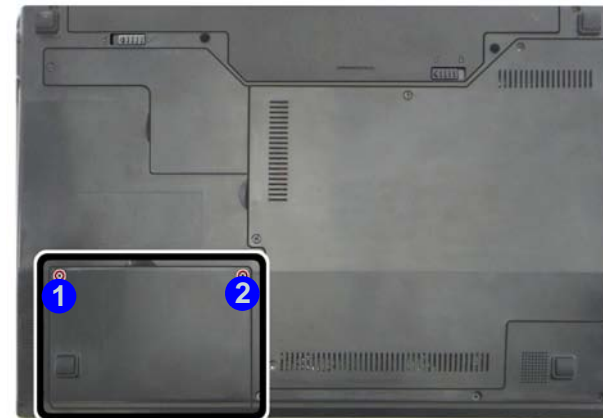

#### HDD System Warning

New HDD's are blank. Before you begin make sure:

You have backed up any data you want to keep from your old HDD.

You have all the CD-ROMs and FDDs required to install your operating system and programs.

If you have access to the internet, download the latest application and hardware driver updates for the operating system you plan to install. Copy these to a removable medium.




- 2 Screws

3. Remove the hard disk bay cover **3** (*Figure 3b*).
4. Grip the tab and slide the hard disk in the direction of arrow **4** (*Figure 3c*).
5. Lift the hard disk **5** out of the bay **6** (*Figure 3d*).
6. Remove the screws **7** - **10** and the mylar cover **11** from the hard disk **5** (*Figure 3e*).
7. Reverse the process to install a new hard disk (do not forget to replace all the screws and covers).

*Figure 3*  
**HDD Assembly**  
**Removal (cont'd.)**

- b. Remove the HDD bay cover.
- c. Grip the tab and slide the HDD in the direction of the arrow.
- d. Lift the HDD assembly out of the bay.
- e. Remove the screws and mylar cover.

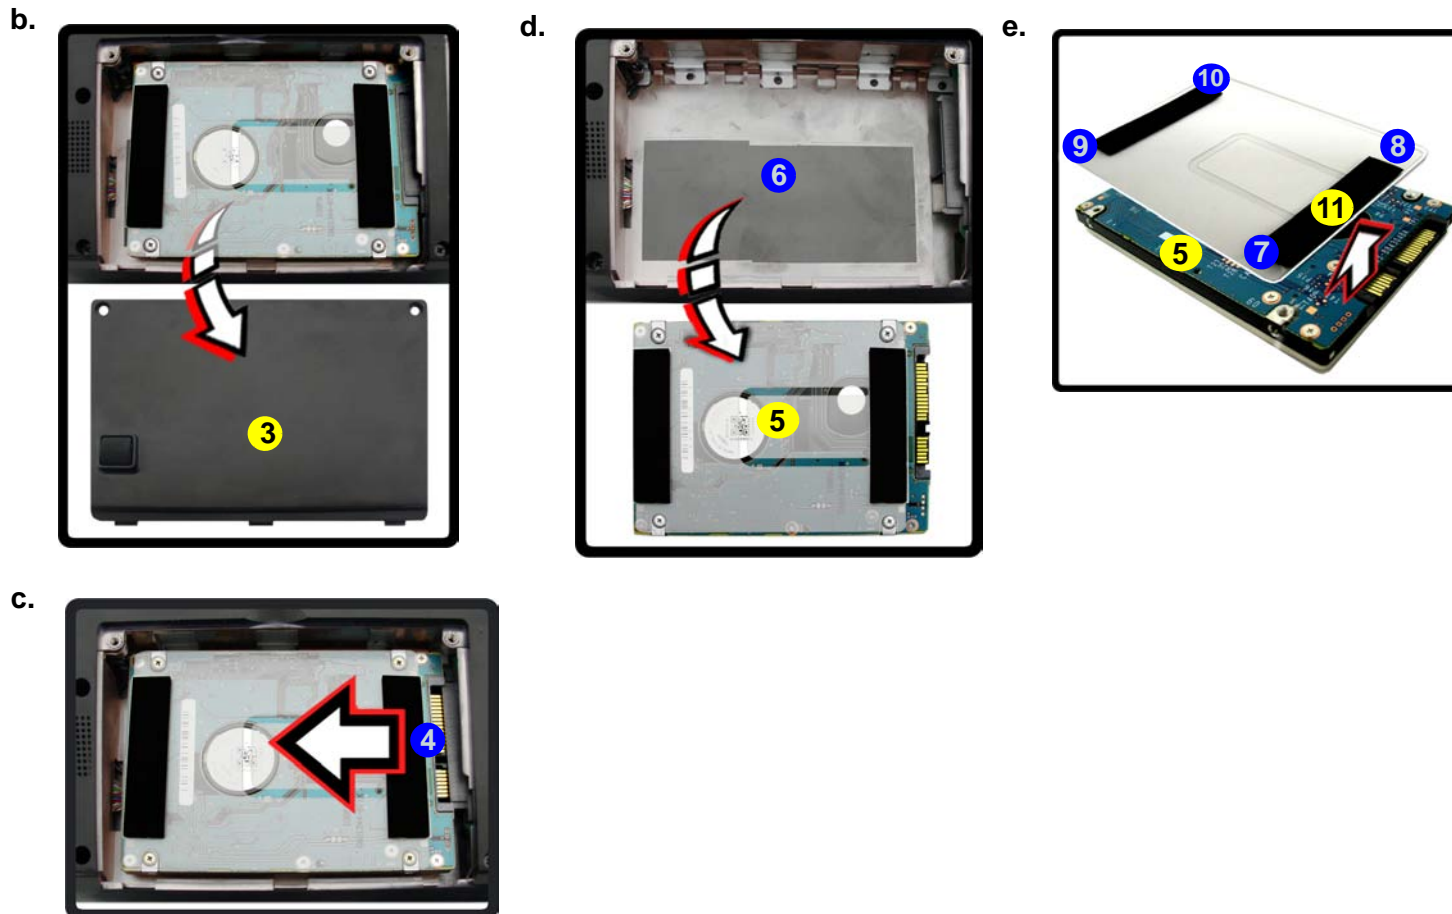



3. HDD Bay Cover  
5. HDD  
11. Mylar Cover

- 4 Screws

## Disassembly

*Figure 4*  
**RAM Module Removal**

- Remove the screws.
- Disconnect the fan cable and remove the bay cover.

## Removing the System Memory (RAM)

The computer has two memory sockets for 204 pin Small Outline Dual In-line Memory Modules (SO-DIMM) supporting DDR3 1066MHz. The main memory can be expanded up to 8GB. The SO-DIMM modules supported are 1024MB, and 2048MB and **DDRIII** Modules. The total memory size is automatically detected by the POST routine once you turn on your computer.

### Memory Upgrade Process

- Turn **off** the computer, remove the battery ([page 2 - 5](#)).
- Locate the component bay cover **1**, and remove screws **2** - **5** ([Figure 4a](#)).
- Carefully (**a fan and cable are attached to the under side of the cover**) lift up the bay cover.
- Carefully disconnect the fan cable **6**, and remove the cover **1** ([Figure 4b](#)).



#### Contact Warning


Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.




#### 1. Component Bay Cover

- 4 Screws


a.

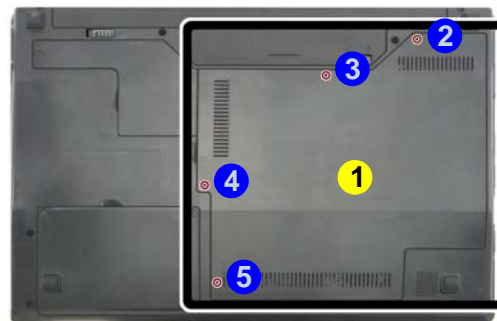

b.

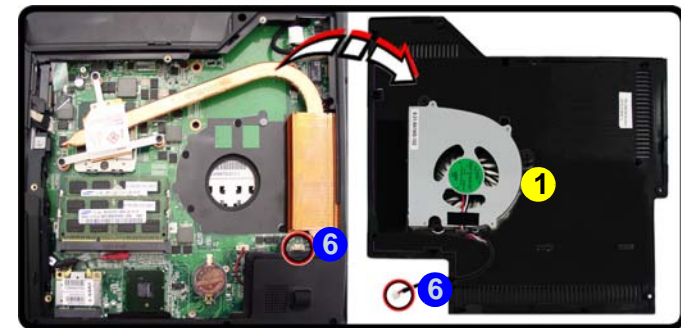

5. Gently pull the two release latches (6 - 7) on the sides of the memory socket in the direction indicated by the arrows (**Figure 5c**).

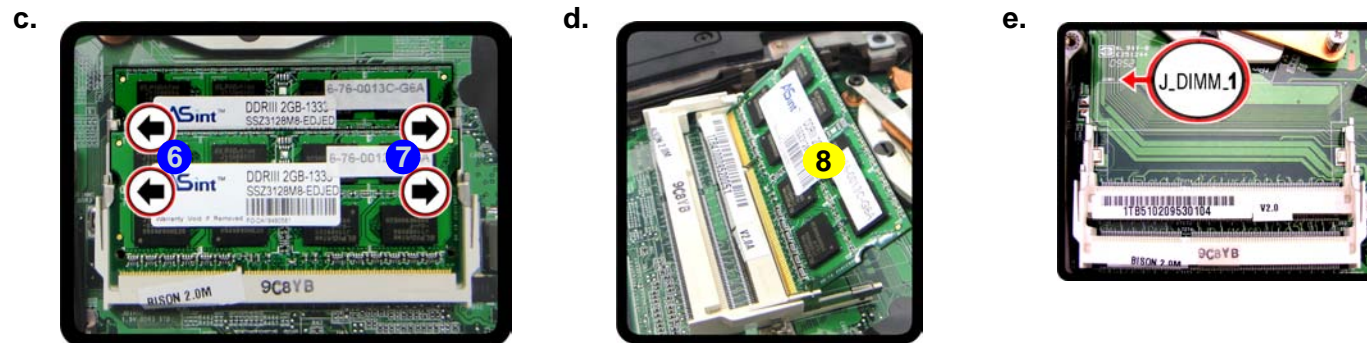

*Figure 5*  
**RAM Module Removal (cont'd.)**

- c. Pull the release latches.
- d. Remove the module(s).

6. The RAM module 8 will pop-up (**Figure 5d**), and you can then remove it.
7. Pull the latches to release the second module if necessary (**Figure 5c**).
8. Insert a new module holding it at about a 30° angle and fit the connectors firmly into the memory slot.
9. The module's pin alignment will allow it to only fit one way. Make sure the module is seated as far into the slot as it will go. **DO NOT FORCE** the module; it should fit without much pressure.
10. Press the module in and down towards the mainboard until the slot levers click into place to secure the module.
11. Replace the bay cover and screws (**make sure you reconnect the fan cable before screwing down the bay cover**).
12. Restart the computer to allow the BIOS to register the new memory configuration as it starts up.

### Single Memory Module Installation

If your computer has a single memory module, then insert the module into the **Channel 0 (J\_DIMM\_1)** socket. In this case, this is the lower memory socket (the socket closest to the mainboard) as shown in **Figure 5e**.

8. RAM Module(s)

## Disassembly


*Figure 6*  
**Optical Device  
Removal**

- a. Remove the screw.
- b. Push the optical device out off the computer at point 3.


## Removing the Optical (CD/DVD) Device

1. Turn **off** the computer, remove the battery ([page 2 - 5](#)) and the component bay cover ([page 2 - 8](#)).
2. Remove the screw at point **1** ([Figure 6a](#)), and use a screwdriver to carefully push out the optical device **2** at point **3** ([Figure 6b](#)).
3. Insert the new device and carefully slide it into the computer (the device only fits one way. **DO NOT FORCE IT**; The screw holes should line up).
4. Restart the computer to allow it to automatically detect the new device.

a.

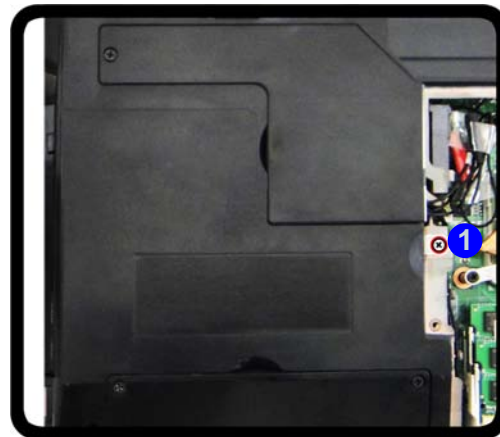

b.

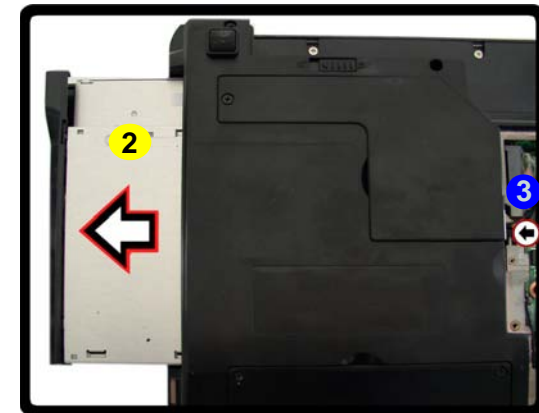

### 2. Optical Device

- 1 Screw



## Removing and Installing the Processor


### Processor Removal Procedure

1. Turn **off** the computer, remove the battery ([page 2 - 5](#)) and the component bay cover ([page 2 - 8](#)).
2. The CPU heat sink will be visible at point **A** ([Figure 7a](#)) on the mainboard.
3. Remove screws **3**, **2**, **1** ([Figure 7b](#)), the reverse order indicated on the label.
4. Carefully lift up the heat sink **B** ([Figure 7c](#)) off the computer.


a.



c.

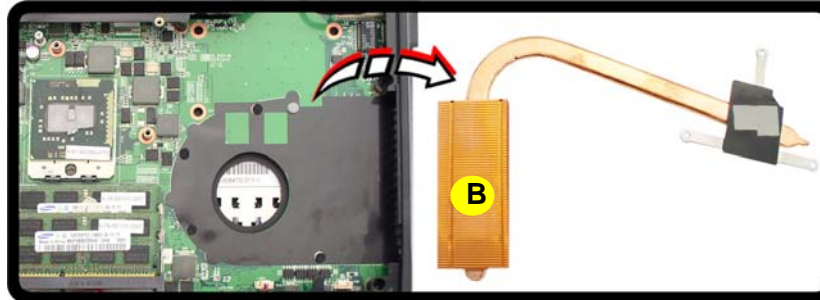

b.

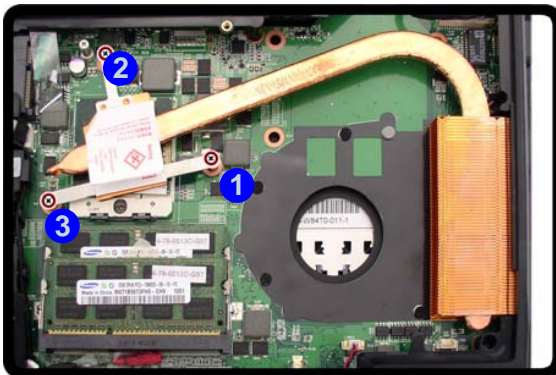

*Figure 7*  
**Processor Removal**

- a. Remove the cover and locate the heat sink.
- b. Remove the screws in the order indicated.
- c. Remove the heat sink.




B. Heat Sink

- 3 Screws



## Disassembly


*Figure 8*  
**Processor Removal**  
**(cont'd)**

5. Turn the release latch **C** towards the unlock symbol , to release the CPU (*Figure 8d*).
6. Carefully (it may be hot) lift the CPU **D** up out of the socket (*Figure 8e*).
7. See [page 2 - 13](#) for information on inserting a new CPU.
8. When re-inserting the CPU, pay careful attention to the pin alignment, it will fit only one way (DO NOT FORCE IT!).


d. Turn the release latch to unlock the CPU.

e. Lift the CPU out of the socket.

d.

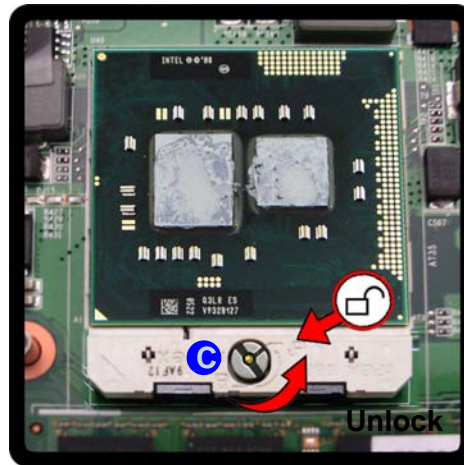

e.

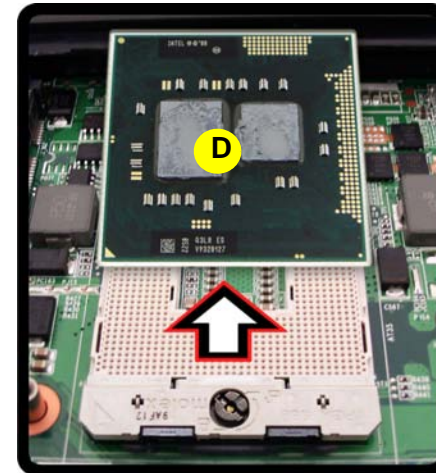


D. CPU




Caution

The heat sink, and CPU area in general, contains parts which are subjected to high temperatures. Allow the area time to cool before removing these parts.


## Processor Installation Procedure

1. Insert the CPU **A** (**Figure 9a**), pay careful attention to the pin alignment, it will fit only one way (DO NOT FORCE IT!), and turn the release latch **B** towards the lock symbol  (**Figure 9b**).
2. **Remove the stickers** **C** (**Figure 9c**) from the heat sink.
3. Insert the heat sink **D** as indicated in (**Figure 9c**).
4. Replace and tighten the screws **1** - **3** (**Figure 9d**) in the order indicated on the label.
5. Replace the component bay cover and screws (**page 2 - 8**).


a.

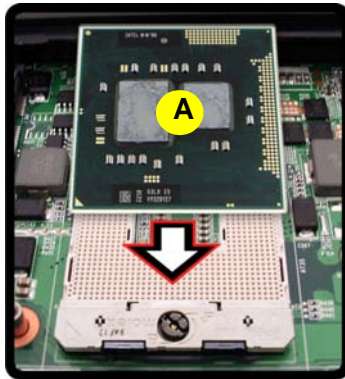


c.

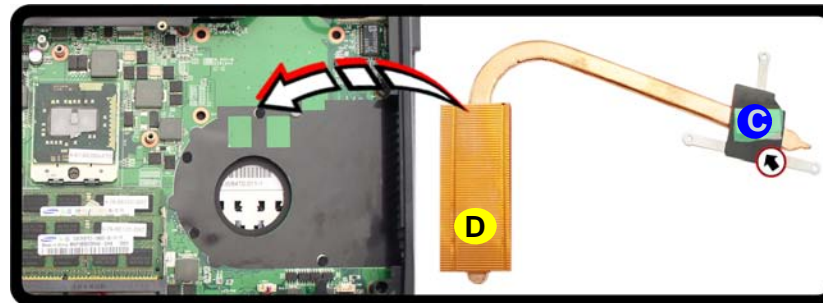

b.

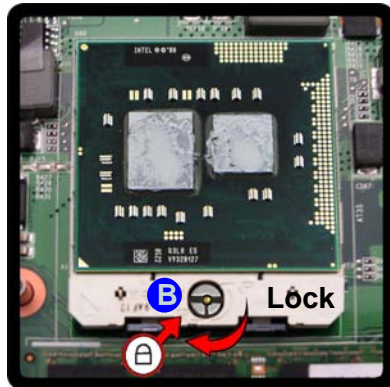

d.

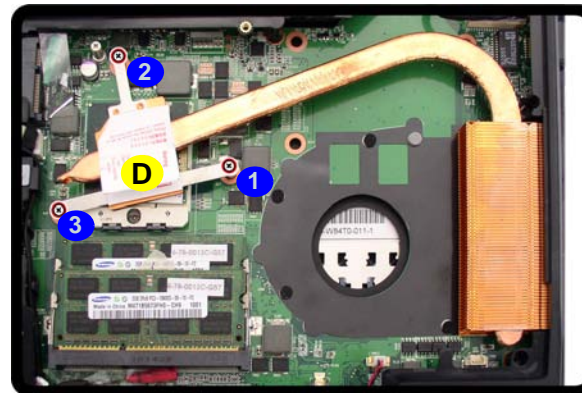

*Figure 9*  
**Processor  
Installation**

- a. Insert the CPU.
- b. Turn the release latch towards the lock symbol.
- c. Remove the stickers from the heat sink and insert the heat sink.
- d. Replace and tighten the screws in the order indicated on the label.



A. CPU  
D. Heat Sink

- 3 Screws

## Disassembly

*Figure 10*  
**Wireless LAN  
Module Removal**

- a. Remove the cover.
- b. Disconnect the cables and remove the screw.
- c. The WLAN module will pop up.
- d. Lift the WLAN module out.



Note: Make sure you reconnect the antenna cable to “1” + “2” socket (*Figure b*).

5. WLAN Module.

- 1 Screw




## Removing the Wireless LAN Module

1. Turn **off** the computer, remove the battery (*page 2 - 5*) and the component bay cover (*page 2 - 8*).
2. The Wireless LAN module will be visible at point **1** (*Figure 10a*) on the mainboard.
3. Carefully disconnect cables **2** - **3**, then remove screw **4** from the module socket (*Figure 10b*).
4. The Wireless LAN module **5** (*Figure 10c*) will pop-up.
5. Lift the Wireless LAN module (*Figure 10d*) up and off the computer.

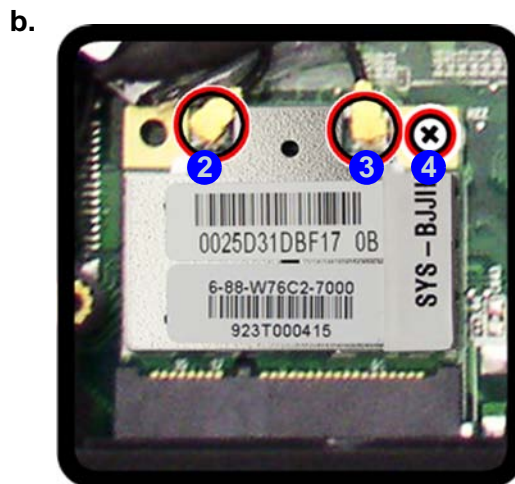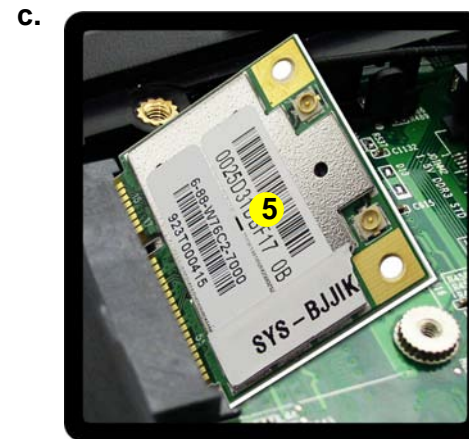

## Removing the Bluetooth Module

1. Turn **off** the computer, remove the battery ([page 2 - 5](#)).
1. Locate the Bluetooth bay cover and remove the screw at point **1** ([Figure 11a](#)).
2. Remove the Bluetooth bay cover **2** and the Bluetooth module will be visible at point **3** ([Figure 11b](#)).
3. Remove the screw **4** ([Figure 11c](#)).
4. Carefully separate the Bluetooth module from the connector **5** and disconnect the cable **6** ([Figure 11c](#)).
5. Lift the Bluetooth module **7** ([Figure 11d](#)) up and off the computer.

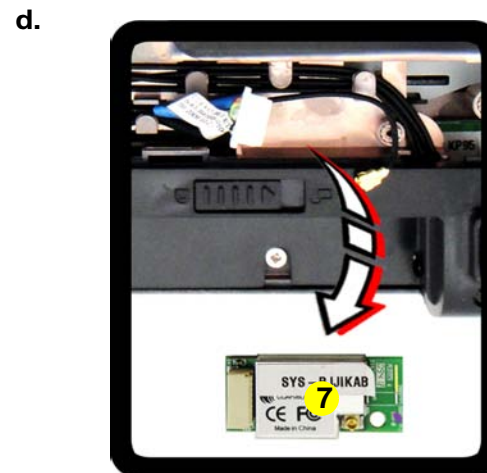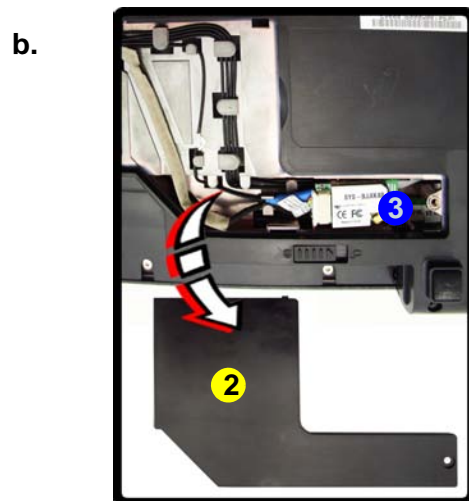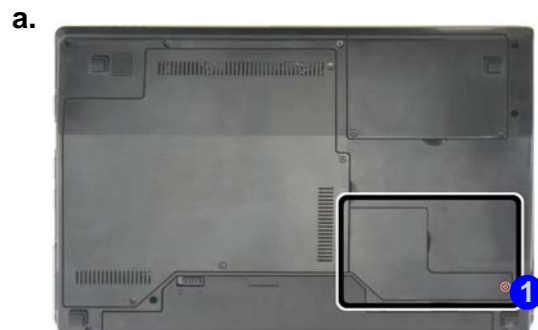

*Figure 11*  
**Bluetooth Module Removal**

- a. Locate the Bluetooth bay cover and remove the screw at point **1**.
- b. Remove the cover and locate the Bluetooth module.
- c. Remove the screw, disconnect the cable and the connector.
- d. Lift the Bluetooth module up off the socket.



- 2. Bluetooth Bay Cover
- 7. Bluetooth Module

- 2 Screws




## Disassembly


*Figure 12*  
**Keyboard Removal**

- Press the four latches to release the keyboard.
  - Lift the keyboard up and disconnect the cable from the locking collar.
  - Remove the keyboard.
- Turn **off** the computer and remove the battery ([page 2 - 5](#)).
  - Press the **four** keyboard latches **1** - **4** at the top of the keyboard to elevate the keyboard from its normal position ([Figure 12a](#)). \*You may need to use a small screwdriver to do this.
  - Carefully lift the keyboard **5** up, being careful not to bend the keyboard ribbon cable **6** ([Figure 12b](#)).
  - Disconnect the keyboard ribbon cable **6** from the locking collar socket **7** ([Figure 12b](#)).
  - Carefully lift up the keyboard **5** ([Figure 12c](#)) off the computer.

a.

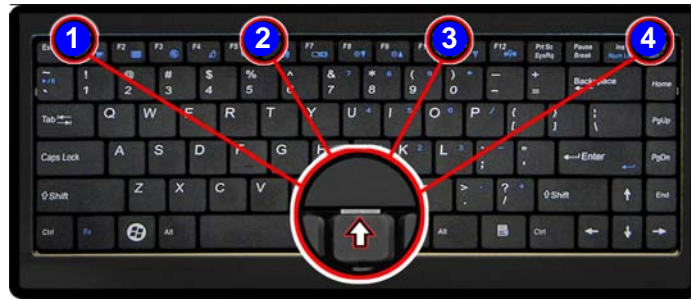

b.

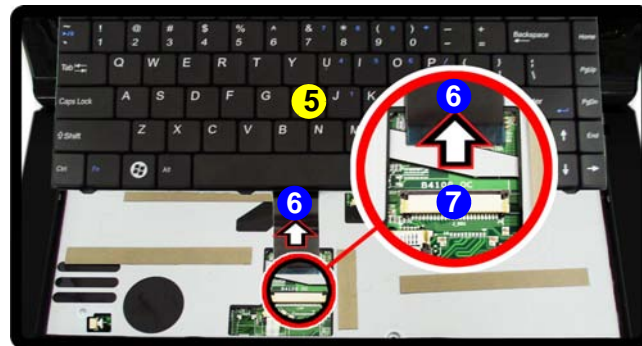

c.



### Re-Inserting the Keyboard

When re-inserting the keyboard, align first the **four** keyboard tabs ([Figure 12c](#)) that are located at the bottom, to the slots in the case.

5. Keyboard

# Appendix A:Part Lists

This appendix breaks down the *E4105/E4105-C* series notebook’s construction into a series of illustrations. The component part numbers are indicated in the tables opposite the drawings.

**Note:** This section indicates the *manufacturer’s* part numbers. Your organization may use a different system, so be sure to cross-check any relevant documentation.

**Note:** Some assemblies may have parts in common (especially screws). However, the part lists DO NOT indicate the total number of duplicated parts used.

**Note:** Be sure to check any update notices. The parts shown in these illustrations are appropriate for the system at the time of publication. Over the product life, some parts may be improved or re-configured, resulting in *new* part numbers.

## Part Lists

---

### Part List Illustration Location

The following table indicates where to find the appropriate part list illustration.

*Table A - 1*  
**Part List Illustration  
Location**

Part	E4105/E4105-C
Top without Fingerprint	<i>page A - 3</i>
Bottom	<i>page A - 4</i>
LCD	<i>page A - 5</i>
SATA DVD Super-Multi	<i>page A - 6</i>



Top without Fingerprint


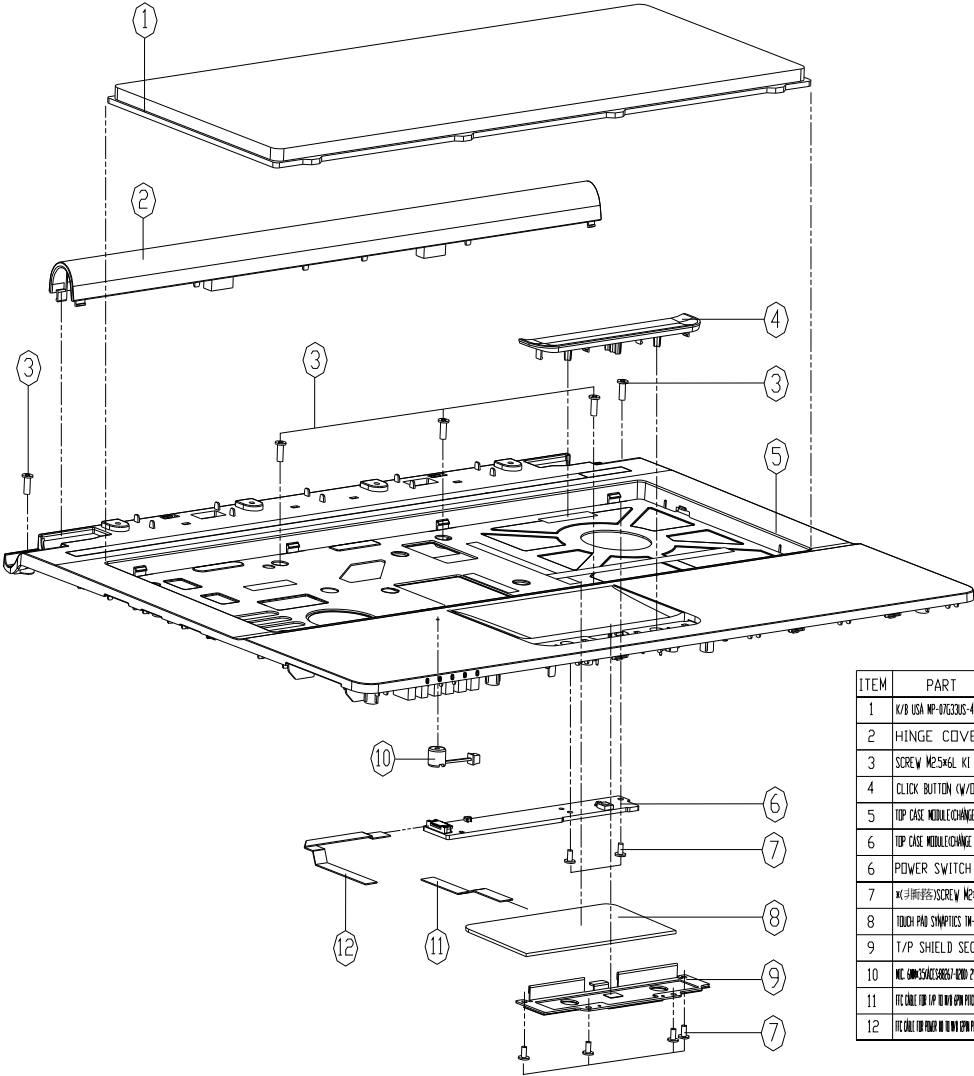


Figure A - 1  
Top without Fin-  
gerprint

ITEM	PART NAME	PART NO	REMARK
1	K/O USA HP-DESKTOP-430 W840T-011-1	6-80-W840T-011-1	
2	HINGE COVER(CABS) B4105	6-42-B4152-030	
3	SCREW M2.5x6L KT NI ICT NY (045 t=0.5)	6-35-B1125-6RB	
4	CLICK BUTTON (W/O FINGER) MODULE B4105	6-42-B4152-200	
5	TOP CASE MODULE(CHARGE ACCESSORY MATERIAL) E4105	6-39-E4152-011	
6	TOP CASE MODULE(CHARGE ACCESSORY MATERIAL) E4105-C	6-39-E4152-011-C	
6	POWER SWITCH BOARD V1.0 E4105	6-77-E4155-D01	
7	SCREW M2.5x6L KT NI ICT NY (045 t=0.5)	6-35-B1120-3RE	
8	TOUCH PAD SYMPLICS IN-HUB-405 MULTI-ESTURE C400	6-49-C4802-010	
9	T/P SHIELD SECC FOR TP B4100M	6-33-B41M2-010	
10	MC CONNECTOR(USB) 2X1 ~10V 22K W/ABLE 1-20W 4000M	6-23-EB41M-010	
11	TPC CASE TOP UP TO 10V 22K W/ABLE 1-20W 4000M	6-43-B4102-011	
12	TPC CASE TOP DOWN TO 10V 22K W/ABLE 1-20W 4000M	6-43-B4100-021-1	

Bottom

Figure A - 2  
Bottom

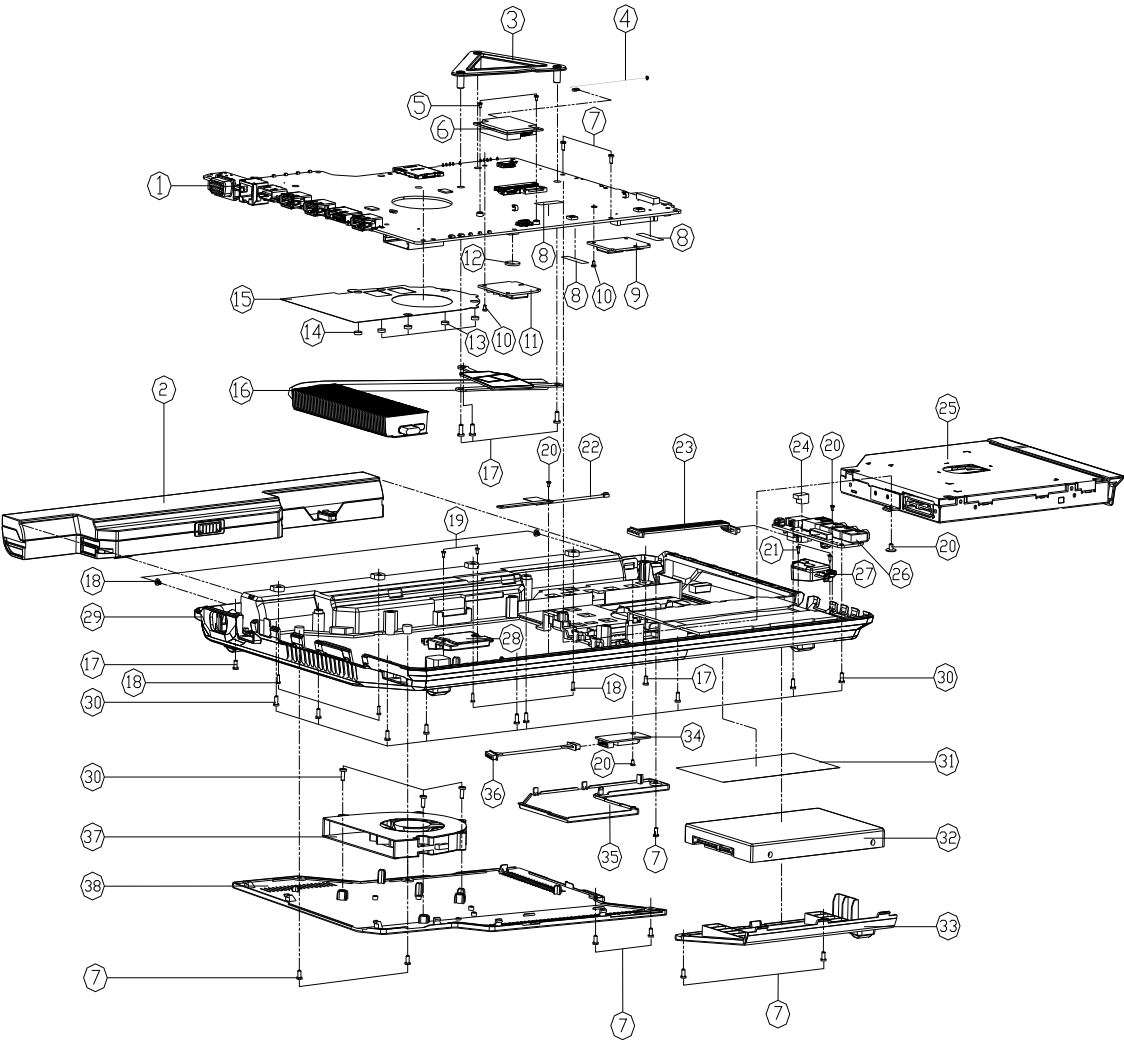

ITEM	PART NAME	PART NO	REMARK
1	MAIN BOARD V10W/3G E410S	6-77-E4150-D01	
1	MAIN BOARD V10W/D 3G E410S	6-77-E4150-D01-1	
2	IMP S10 (10V/400mA) 22P 50V/100M 90000T (C80)	6-87-C480S-4P42	(OPTION)
2	IMP S10 (10V/400mA) 22P 50V/100M 90000T (C80)	6-87-C480S-4G41	(OPTION)
2	IMP S10 (10V/400mA) 22P 50V/100M 90000T (C80)	6-87-E412S-4D7	(OPTION)
3	CPU SUPPORTER SECC B4100M	6-33-B41MS-011	
4	MOD CABLE L305MM B4100M GND	6-43-B410U-011	
5	SCREW M2*3L K1 NI ICT NY	6-35-B1120-3RA	
6	MOD BOARD L305MM B4100M GND	6-88-L3911-5301	
6	MOD BOARD L305MM B4100M GND	6-88-M76S1-8111	
7	SCREW M2*3*4L K1 BK/D ICT NY	6-35-B412S-4RA	
8	TAPE MYLAR (A7)MYLAR M550J	6-40-M55J2-010	
9	MOD BOARD L305MM B4100M GND	6-88-W76C2-8702	(OPTION)
9	MOD BOARD L305MM B4100M GND	6-88-C4802-4702	(OPTION)
9	MOD BOARD L305MM B4100M GND	6-88-W76C2-7001	(OPTION)
10	MOD BOARD L305MM B4100M GND	6-35-B1120-3RE	
11	MOD BOARD L305MM B4100M GND	6-88-S110W-8810	(OPTION)
12	BATTERY 3V 20MA CR2032 (MITSUBISHI)	6-23-6201S-607	
13	LCD FRONT COVER RUBBER SILICON DI-45MM	6-47-W76S1-030	
14	NO RUBBER SILICON DI-45MM H-15MM B4100M	6-47-B41MS-030	
15	MYLAR FOR FAN THERMAL B4100M	6-40-B41MS-010	
16	HEAT SINK E410S	6-31-E4152-010	
17	SCREW M2*5*6L K1 NI ICT NY	6-35-B112S-5RA	
18	SCREW M2*6L K1 BK/Z ICT NY	6-35-B6120-8RD	
19	SCREW M2*6L K1 BZ ICT NY	6-35-B6120-4RA	
20	MOD BOARD L305MM B4100M GND	6-35-B1120-3RD	
21	SCREW M2*6L NI ICT NY FOR SPEAKER	6-35-21120-6R2	
22	MOD BOARD L305MM B4100M GND	6-23-7B410-021	
23	PHONE JACK TO MAIN BOARD & PHONE JACK TO MAIN BOARD	6-43-B4100-012	
24	RUBBER FOR MODERN JACK/DI-45MM M720S	6-47-M72SU-010	
25	SATA DVD SUPER MULTI ASSY (OPTION)	6-79-E410500-000	
25	SATA DVD SUPER MULTI ASSY (OPTION)	6-79-B4100M0-040	
27	PHONE JACK & USB BOARD V10 E410S	6-77-E415A-D01	
27	PHONE JACK & USB BOARD V10 E410S	6-23-5B410-012	
28	PHONE JACK & USB BOARD V10 E410S	6-23-5B410-021	
29	BOTTOM CASE MODULE E410S	6-39-E4153-010	
29	BOTTOM CASE MODULE E410S-C	6-39-E4153-011-C	
30	SCREW M2*6*6L K BZ ICT NY	6-35-B212S-6RA	
31	PRODUCT LABEL FOR E410S	6-45-E4105003-010	
32	W/D HDD ASSY B4100M	6-79-B4100M0-J-010	
33	HDD COVER MODULE (MP) B4100M	6-42-B41M0-J-102	
33	HDD COVER MODULE (MP) B4100M	6-42-E4153-100-C	
34	MOD BOARD L305MM B4100M GND	6-88-M731S-3901	
34	MOD BOARD L305MM B4100M GND	6-88-M731S-5301	
35	MOD BOARD L305MM B4100M GND	6-42-B41M0-012	
35	MOD BOARD L305MM B4100M GND	6-42-E4153-010-C	
36	MOD BOARD L305MM B4100M GND	6-43-B410B-011	
37	FAN MODULE B4100M (V10 DESIGN CHANGE)	6-31-B41MS-102	
38	CPU COVER MODULE E410S	6-42-E4153-100	
38	CPU COVER MODULE E410S-C	6-42-E4153-100-C	

LCD


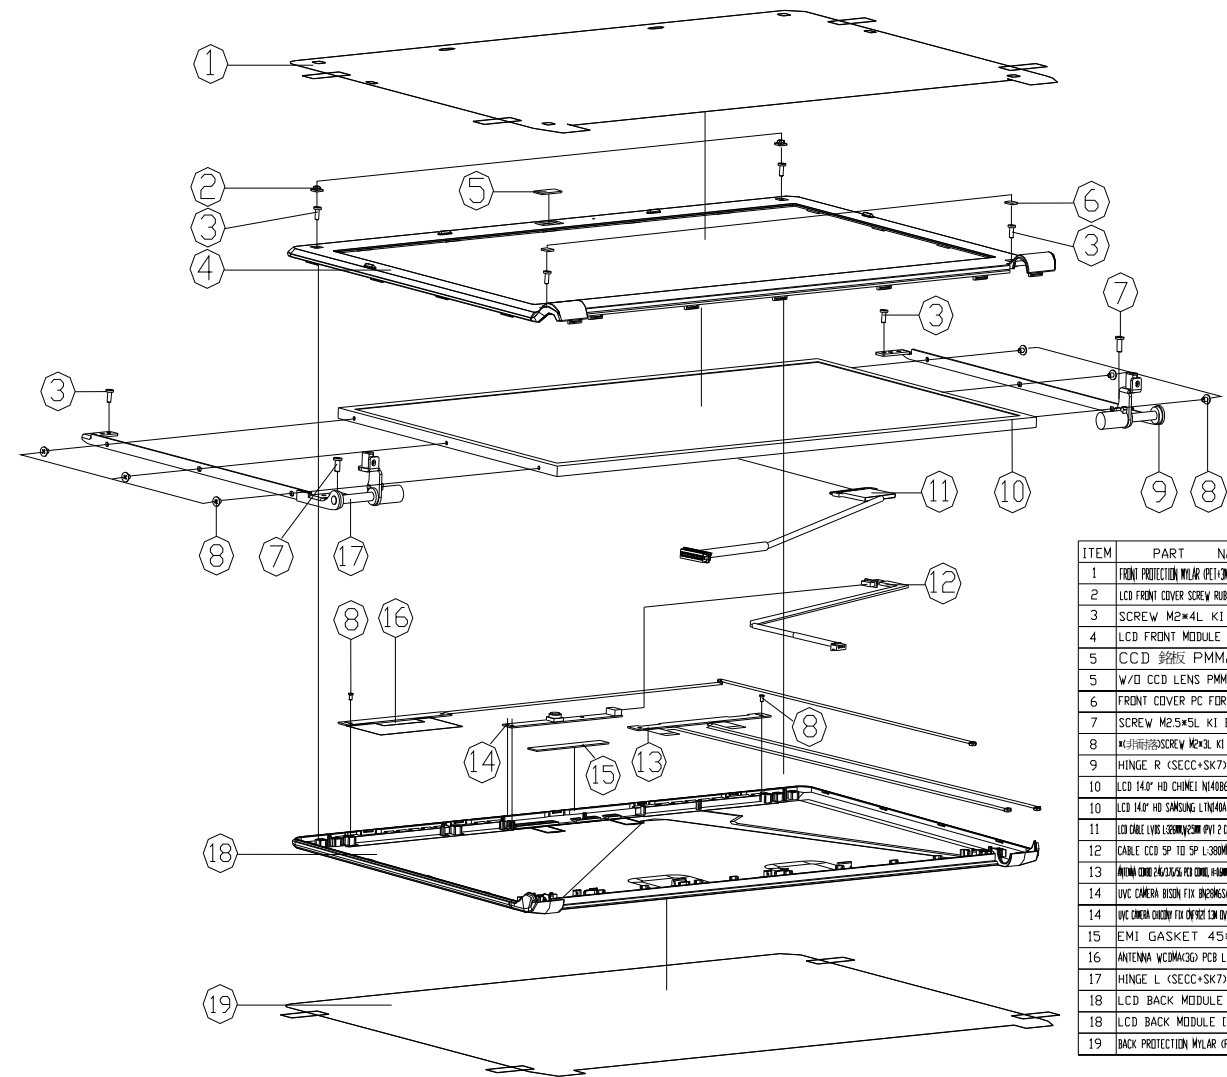


Figure A - 3  
LCD

ITEM	PART NAME	PART NO	REMARK
1	FRONT PROTECTION MYLAR (PET+38915) (PVT) 21 B4100	6-40-B41M1-012	
2	LCD FRONT COVER SCREW RUBBER (SLICING) B4100	6-47-B41M1-020	
3	SCREW M2*4L KI BZ ICT NY	6-35-B6120-4RA	
4	LCD FRONT MODULE (PVT) B4100M	6-39-B41M1-012	
5	CCD 826板 PMMA M810L	6-42-M8101-011	
5	W/D CCD LENS PMMA 0.5T C4800	6-42-C480T-010	
6	FRONT COVER PC FOR SCREW C4500	6-40-C4501-071	
7	SCREW M2.5*5L KI BK/Z ICT NY-	6-35-B6125-5RA	
8	SCREW M2*4L KI BK/Z ICT NY-	6-35-B1120-3RE	
9	HINGE R (SECC+SK7) (MPI) B4100M	6-33-B41M1-012	
10	LCD 14.0" HD CHINMET NI4086-L02 GLARE TYPE	6-50-J8152-D00	
10	LCD 14.0" HD SAMSUNG LTN40A070-H01 GLARE TYPE	6-50-J8152-M02	
11	LCD CABLE LVDS 1380MM/25MM PVT 2 CABLE FULLY-PROTECTED	6-43-B4101-012	
12	CABLE CCD SP TO SP L380MM B4100M (MPIX HL)	6-43-B410T-012	
13	ANTENNA CABLE 2400MM/50MM PVT 2 CABLE FULLY-PROTECTED	6-23-7B410-031	
14	UVC CAMERA BICONIC FIX (BIPOLAR) 400-450 V1.0 LCM M810L	6-88-M810C-4911	
14	UVC CAMERA CHASSIS FIX (BIPOLAR) 400-450 V1.0 LCM M810L	6-88-M74TC-5101	
15	EMI GASKET 45*7*1 B4100	6-47-00190-45K	
16	ANTENNA WCDMA/GSM PCB L-600MM FVC B4100	6-23-7B410-011	
17	HINGE L (SECC+SK7) (MPI) B4100M	6-33-B41M1-022	
18	LCD BACK MODULE (MPI) E4105	6-39-E4151-021	FOR E4105
18	LCD BACK MODULE (MPI) E4105-C	6-39-E4151-021-C	FOR E4105-C
19	BACK PROTECTION MYLAR (PET+38915) B4105	6-40-B4151-010	

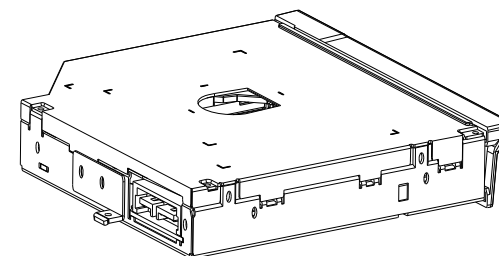

*Figure A - 4*  
**SATA DVD Super-Multi**

ITEM	PART NAME	PART NO	REMARK
1	SCREW M2X4.5 K1 BZ ICT NY (OD=4.5,DT=4)	6-35-B6120-3RD	
2	ODD BRACKET SECC W860CU	6-33-W860Z-010	
3	SMA DIO SUPER MULTI 5 VPP IN 12MM 150MS 10V 400A 100MS 1, 2ND PLDMS PLD	6-85-A078X-L05	FOR PLDS
3	SMA DIO SUPER MULTI 5 VPP IN 12MM 150MS 10V 400A 100MS 1, 2ND HLDS	6-85-A078X-506	FOR HLDS
3	SMA DIO SUPER MULTI 5 VPP IN 12MM 150MS 10V 400A 100MS 1, 2ND TSST	6-85-A078X-T08	FOR TSST
4	ODD BEZEL MODULE B4100M	6-42-B41MZ-102	
5	SUPER MULTI DIO BEZEL LABEL (SIZE: CHANCEW860CU)	6-45-W860Q-011	

# Appendix B: Schematic Diagrams

This appendix has circuit diagrams of the *E4105/E4105-C* notebook's PCB's. The following table indicates where to find the appropriate schematic diagram.

*Table B - 1*  
**SCHEMATIC  
DIAGRAMS**

Diagram - Page	Diagram - Page	Diagram - Page
<i>System Block Diagram - Page B - 2</i>	<i>VGA NVVDD Cecoupling - Page B - 19</i>	<i>KBC-ITE IT8502E - Page B - 36</i>
<i>Clock Generator - Page B - 3</i>	<i>IBEXPEAK- M 1/9 - Page B - 20</i>	<i>5VS, 3.3VS, 1.5VS, VIN1 - Page B - 37</i>
<i>CPU 1/7 (DMI, PEG, FDI) - Page B - 4</i>	<i>IBEXPEAK - M 2/9 - Page B - 21</i>	<i>VDD3, VDD5 - Page B - 38</i>
<i>CPU 2/7 (CLK, MISC) - Page B - 5</i>	<i>IBEXPEAK - M 3/9 - Page B - 22</i>	<i>Power 1.8V, PEX_VDD - Page B - 39</i>
<i>CPU 3/7 (DDR3) - Page B - 6</i>	<i>IBEXPEAK - M 4/9 - Page B - 23</i>	<i>Power 1.5V/0.75V - Page B - 40</i>
<i>CPU 4/7 (Power) - Page B - 7</i>	<i>IBEXPEAK - M 5/9 - Page B - 24</i>	<i>Power 1.1VS_VTT - Page B - 41</i>
<i>CPU 5/7 (VGFX Power) - Page B - 8</i>	<i>IBEXPEAK - M 6/9 - Page B - 25</i>	<i>Power VGFX_Core - Page B - 42</i>
<i>CPU 6/7 (GND) - Page B - 9</i>	<i>IBEXPEAK - M 7/9 - Page B - 26</i>	<i>V-Core - Page B - 43</i>
<i>CPU 7/7 (RESERVED) - Page B - 10</i>	<i>IBEXPEAK - M 8/9 - Page B - 27</i>	<i>Power VGA NVVDD - Page B - 44</i>
<i>DDR3 SO-DIMM_0 - Page B - 11</i>	<i>IBEXPEAK - M 9/9 - Page B - 28</i>	<i>AC_IN, Charger - Page B - 45</i>
<i>DDR3 SO-DIMM_1 - Page B - 12</i>	<i>New Card, Mini PCIE - Page B - 29</i>	<i>HDMI - Page B - 46</i>
<i>Panel, Inverter, CRT - Page B - 13</i>	<i>3G, CCD, TPM - Page B - 30</i>	<i>Audio Board - Page B - 47</i>
<i>VGA PCI-E Interface - Page B - 14</i>	<i>USB, Fan, TP, FP, Multi-Conn - Page B - 31</i>	<i>B4100 Fingerprint Board - Page B - 48</i>
<i>VGA Frame Buffer Interface - Page B - 15</i>	<i>JMC 251 Card Reader - Page B - 32</i>	<i>B4100 Power Switch Board - Page B - 49</i>
<i>VGA Frame Buffer A - Page B - 16</i>	<i>SATA ODD, LED, Hotkey, LID SW - Page B - 33</i>	<i>Sequence - Page B - 50</i>
<i>VGA Frame Buffer C - Page B - 17</i>	<i>RJ45, Modem - Page B - 34</i>	
<i>VGA I/O - Page B - 18</i>	<i>Audio Codec ALC272 - Page B - 35</i>	




## Version Note

The schematic diagrams in this chapter are based upon version 6-7P-E4154-001. If your mainboard (or other boards) are a later version, please check with the Service Center for updated diagrams (if required).

System Block Diagram


Sheet 1 of 49  
System Block  
Diagram

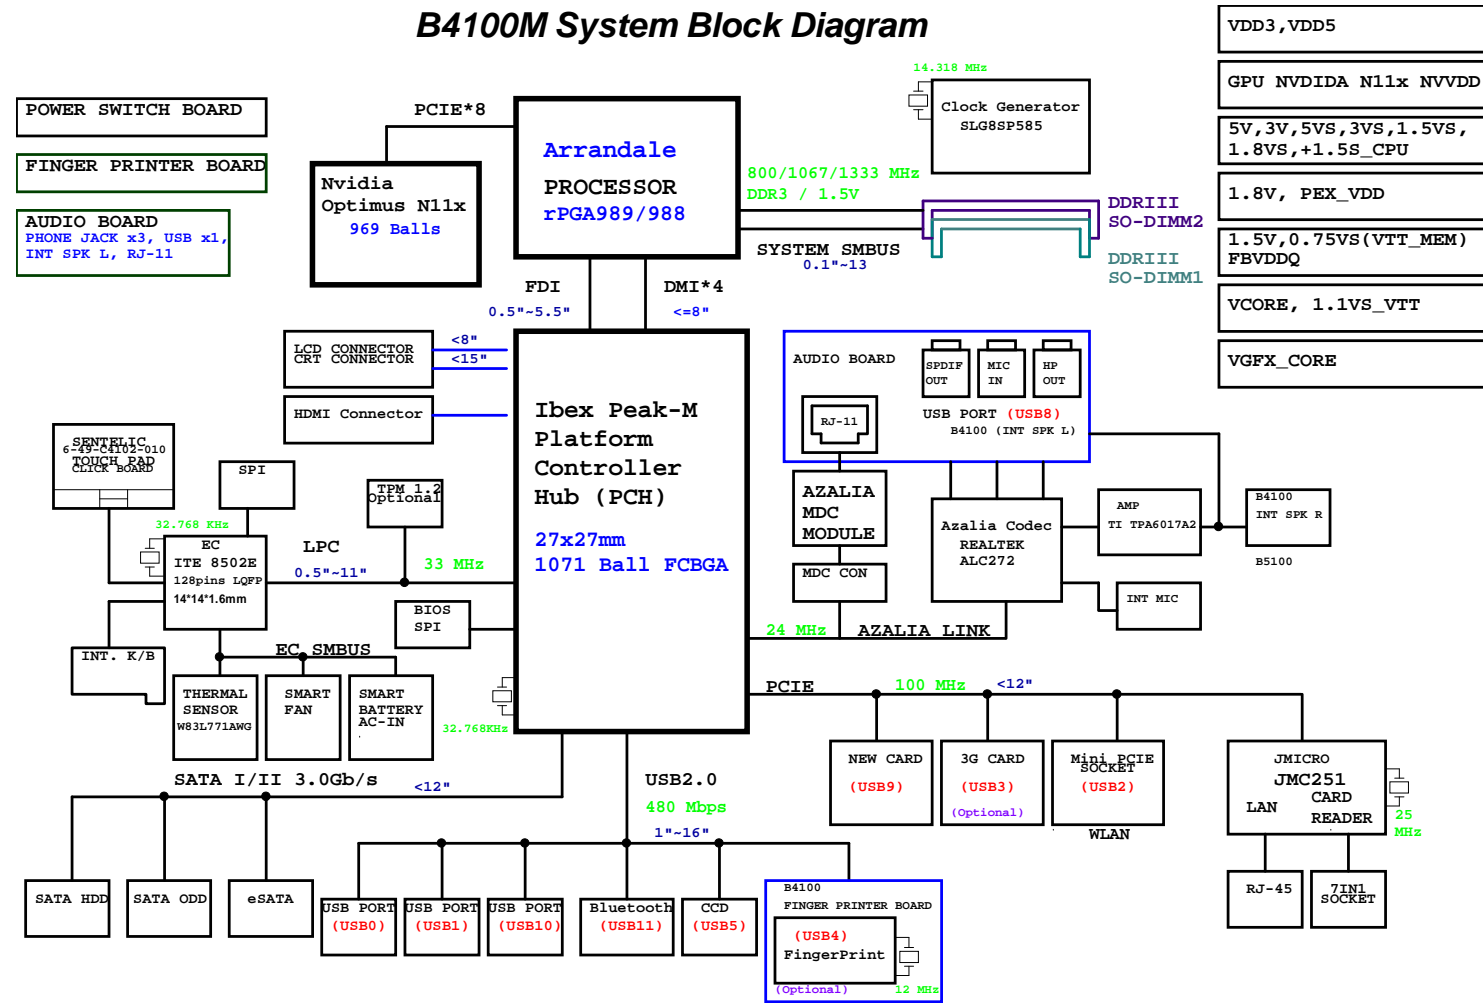

B4100-D03a




## CLOCK GENERATOR

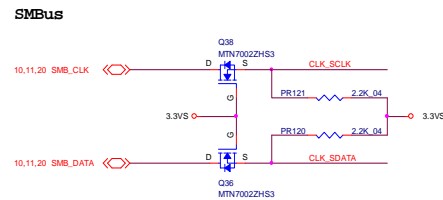

PIN_30	CPU_0	CPU_1
0(default)	133MHz	133MHz
1(0.7V-1.5V)	100MHz	100MHz

VDD\_I/O can be ranging from 1.05V to 3.3V

**EMI**




—  3.3VS 10,11,12,13,19,20,21,22,23,24,25,26,28,29,30,31,32,34,35,36,41,42,45

—  1.1VS\_VTT 4,6,7,19,20,21,24,25,26,38,40,41,42




Schematic Diagrams

CPU 1/7 (DMI, PEG, FDI)  
PROCESSOR 1/7 ( DMI,PEG,FDI )

Sheet 3 of 49  
CPU 1/7  
(DMI, PEG, FDI)

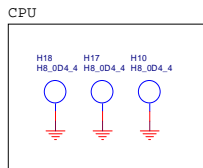

It applies to Auburndale and Clarkfield discrete graphic designs.  
If discrete graphic chip is used for Auburndale, Vaux (GFX core) rail can be connected to GND if motherboard only supports discrete graphics and also in a common motherboard design if GFX VR is not stuffed. On the other hand, if the VR is stuffed, Vaux can be left floating in a common motherboard design (GFX VR keeps Vaux from floating).  
In addition, FDI\_RXN[7:0] and FDI\_RXP[7:0] can be left floating on the PCB.  
FDI\_TX[7:0] and FDI\_TXN[7:0] can be left floating on the Auburndale.  
The GFX\_LMCK, FDI\_FSYN0[0], FDI\_FSYN0[1], FDI\_LSYN0[0], FDI\_LSYN0[1], and FDI\_INT signals should be tied to GND (through 1K ? resistors) in the common motherboard design case. Please note that if these signals are left floating, there are no functional impacts but a small amount of power (~15 mW) maybe wasted. Vaux\_SENSE and VBSAXO\_SENSE on Auburndale can be left as no connect.  
DPLL\_REF\_SCLK and DPLL\_REF\_SCLK# can be connected to GND on Auburndale directly if motherboard only supports discrete graphics. In a common motherboard design, these pins are driven via PCB (even if Graphics is disabled by BIOS) thus no external termination is required.

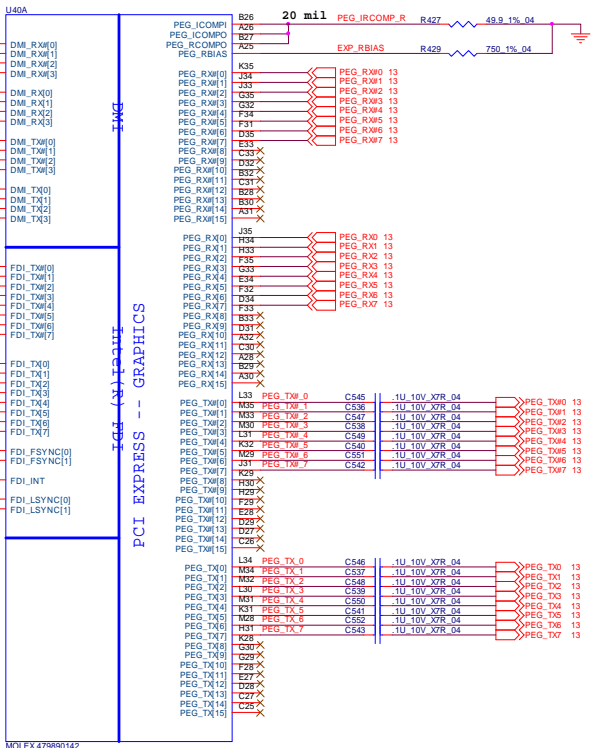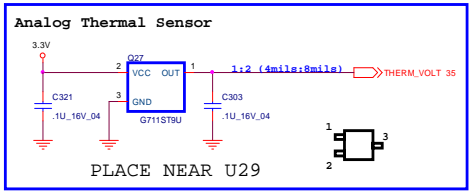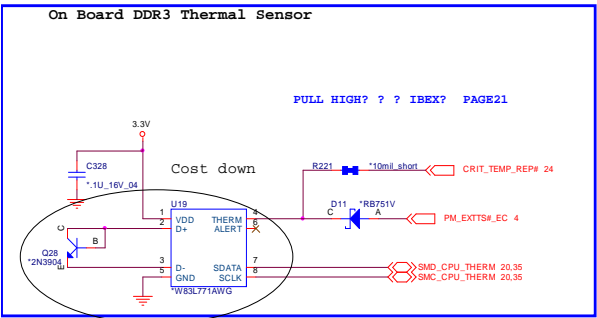


PROCESSOR 2/7 ( CLK,MISC,JTAG )




### CPU 3/7 (DDR3)

Sheet 5 of 49  
CPU 3/7  
(DDR3)

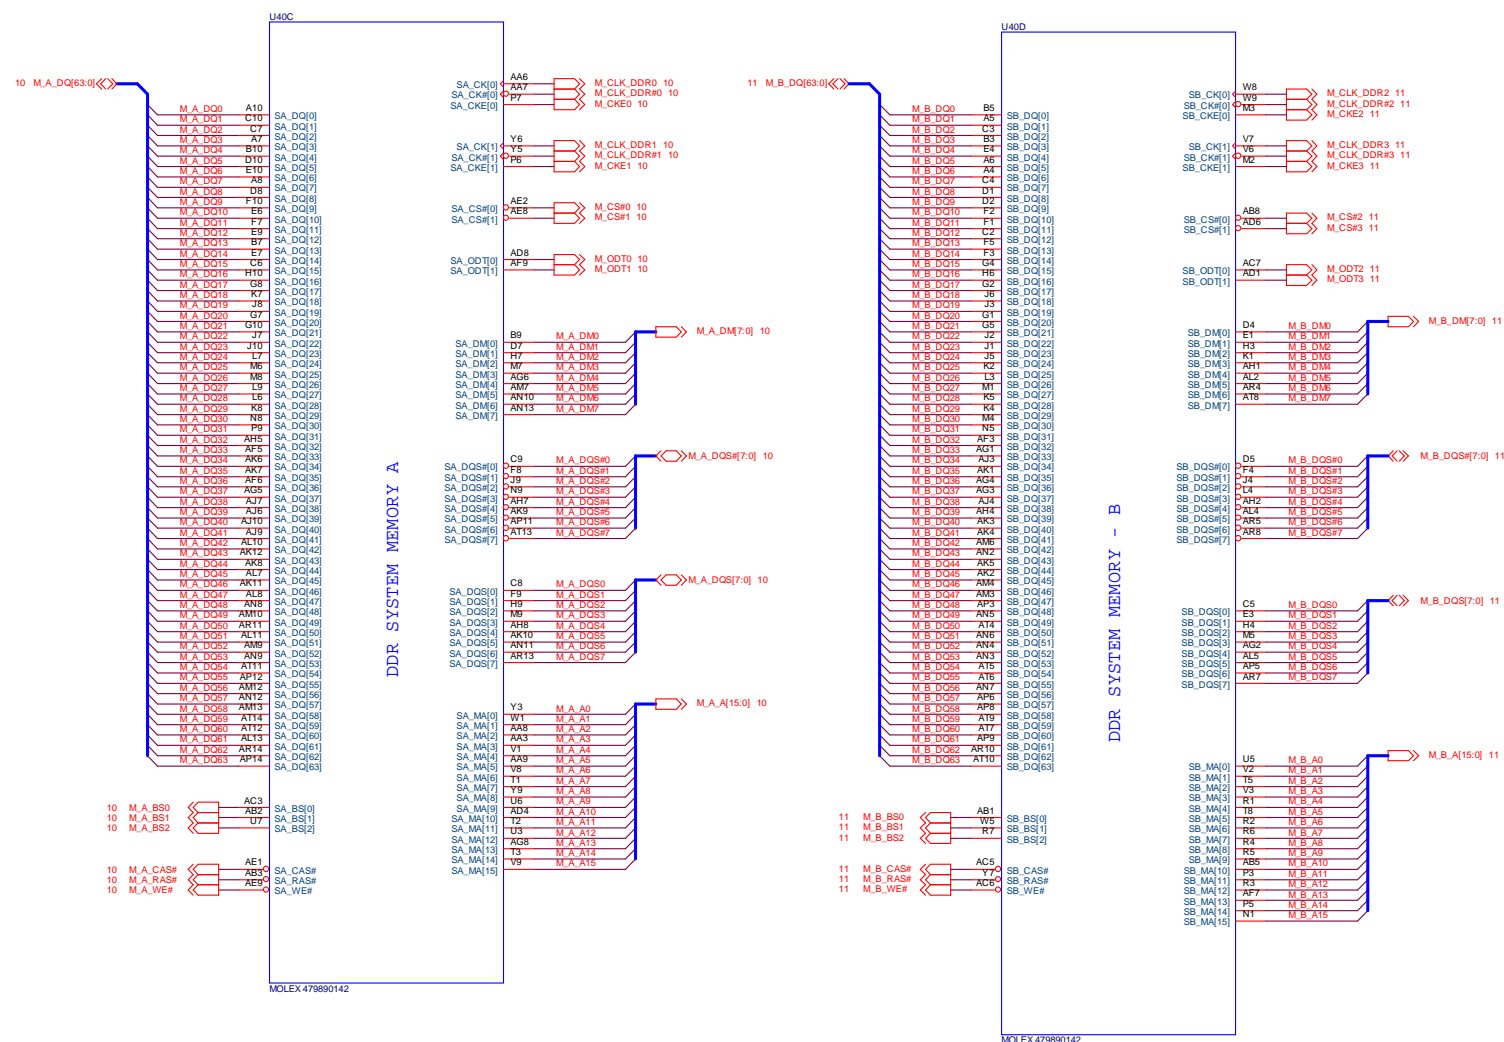

## PROCESSOR 4 / 7 ( POWER )




# CPU 5/7 (VGFX Power)

PROCESSOR 5/7 ( GRAPHICS POWER )

Sheet 7 of 49  
CPU 5/7  
(VGFX Power)

Please note that the  
VTT Rail Values are

Auburndale VTT=1.05V  
Clarkfield VTT=1.1V


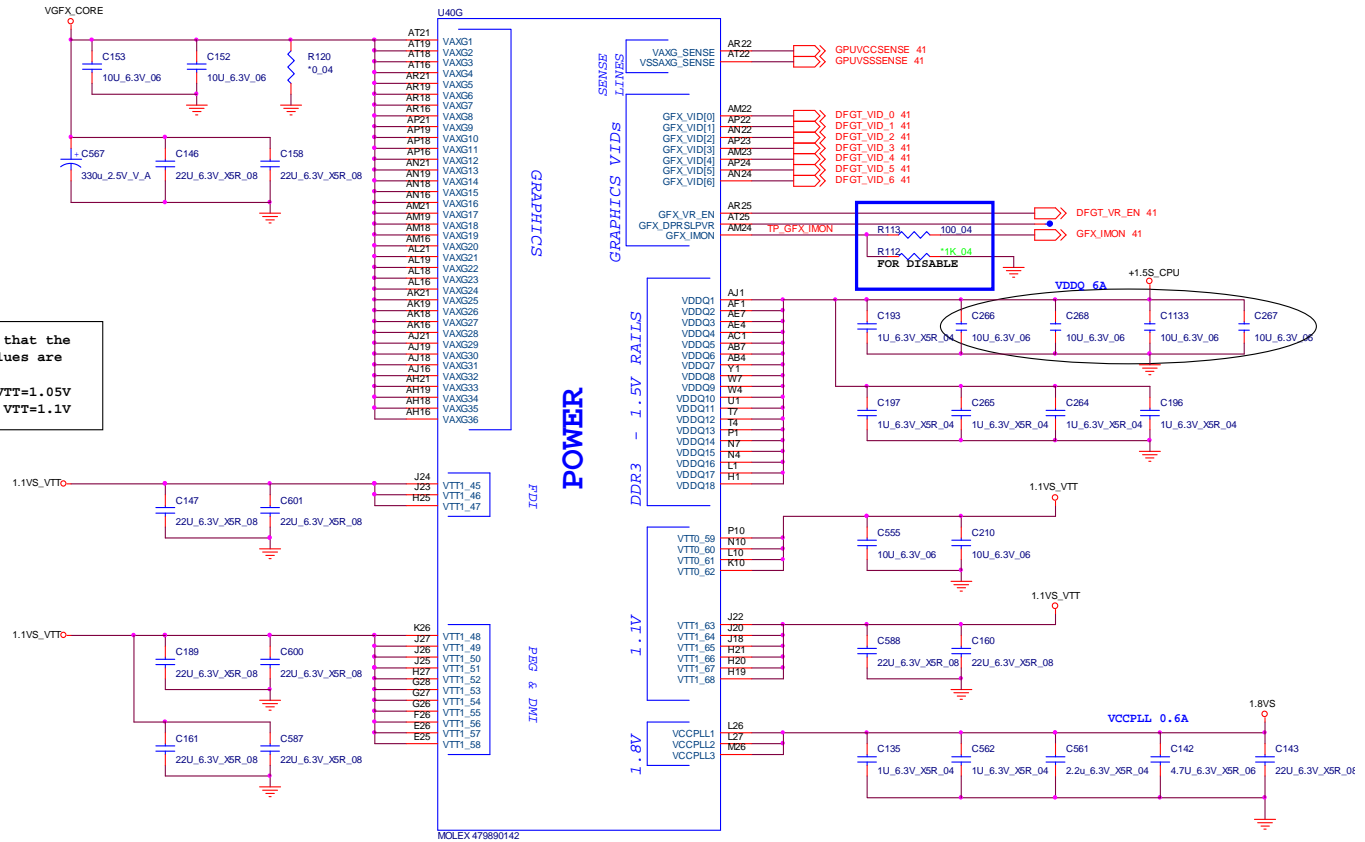


VGFX CORE 41  
1.1VS\_VTT 2,4,6,19,20,21,24,25,26,38,40,41,42  
+1.5S\_CPU 4,36  
1.8VS 25,36,38



## CPU 6/7 (GND)

## PROCESSOR 6 / 7 ( GND )

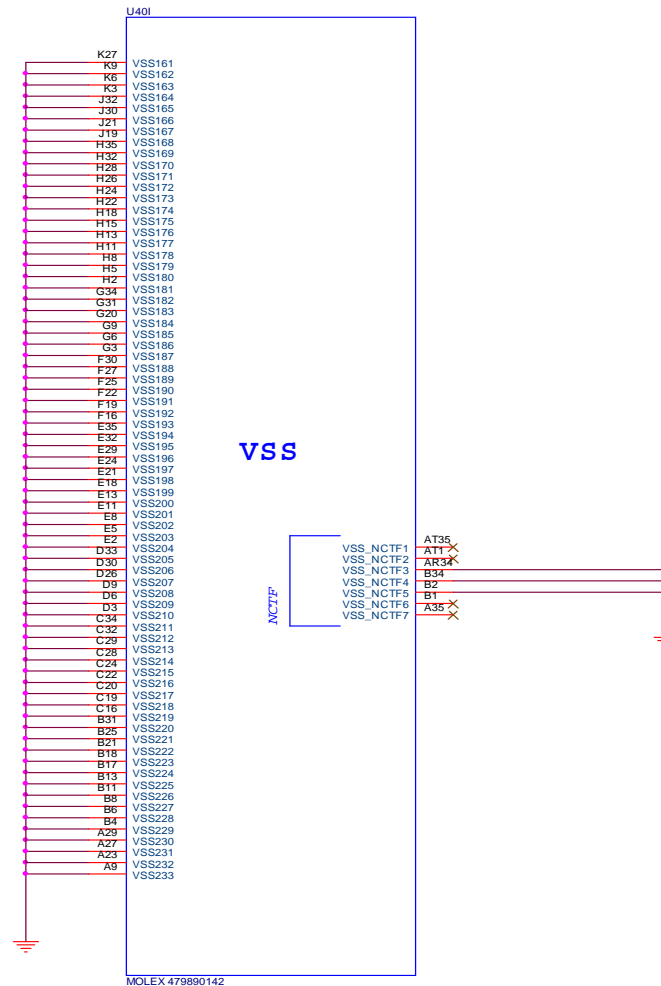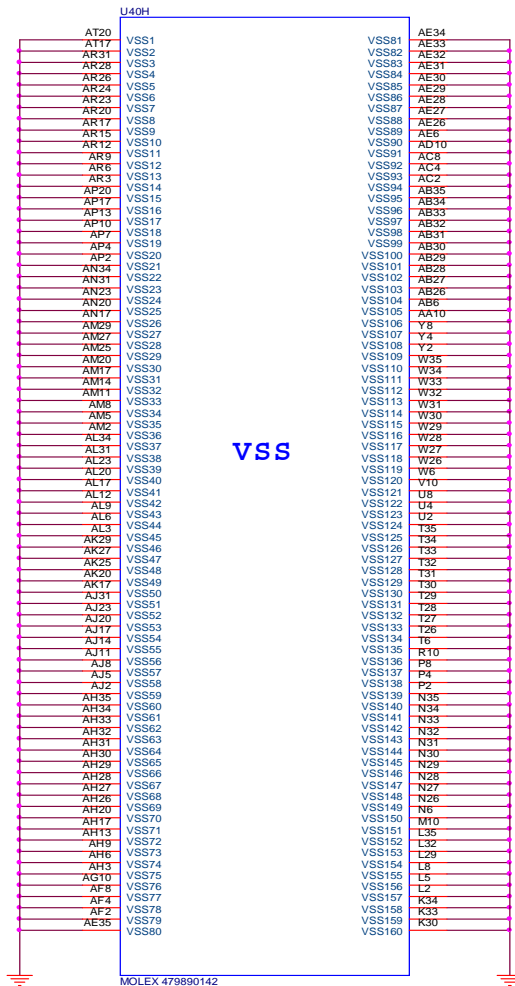

Sheet 8 of 49  
CPU 6/7 (GND)


Schematic Diagrams

CPU 7/7 (RESERVED)


PROCESSOR 7/7 ( RESERVED )

Sheet 9 of 49  
CPU 7/7  
(RESERVED)



PCI-Express Configuration Select	
CFG0	1 : Single PEG 0 : Bifurcation enable




CFG3 - PCI-Express Static Lane Reversal	
CFG3	1 : Normal Operation 0 : Lane Numbers Reversed 15 -> 0, 14 -> 1, ...



CFG4 - Display Port Presence	
CFG4	1 : Disabled; No physical Display Port attached to Embedded Display Port 0 : Enabled; An external Display Port device is connected to the Embedded isplay Port





CFG7  
Clarkfield (only for early samples  
pre-ES1) - Connect to GND with 3.01K Ohm/5%  
resistor

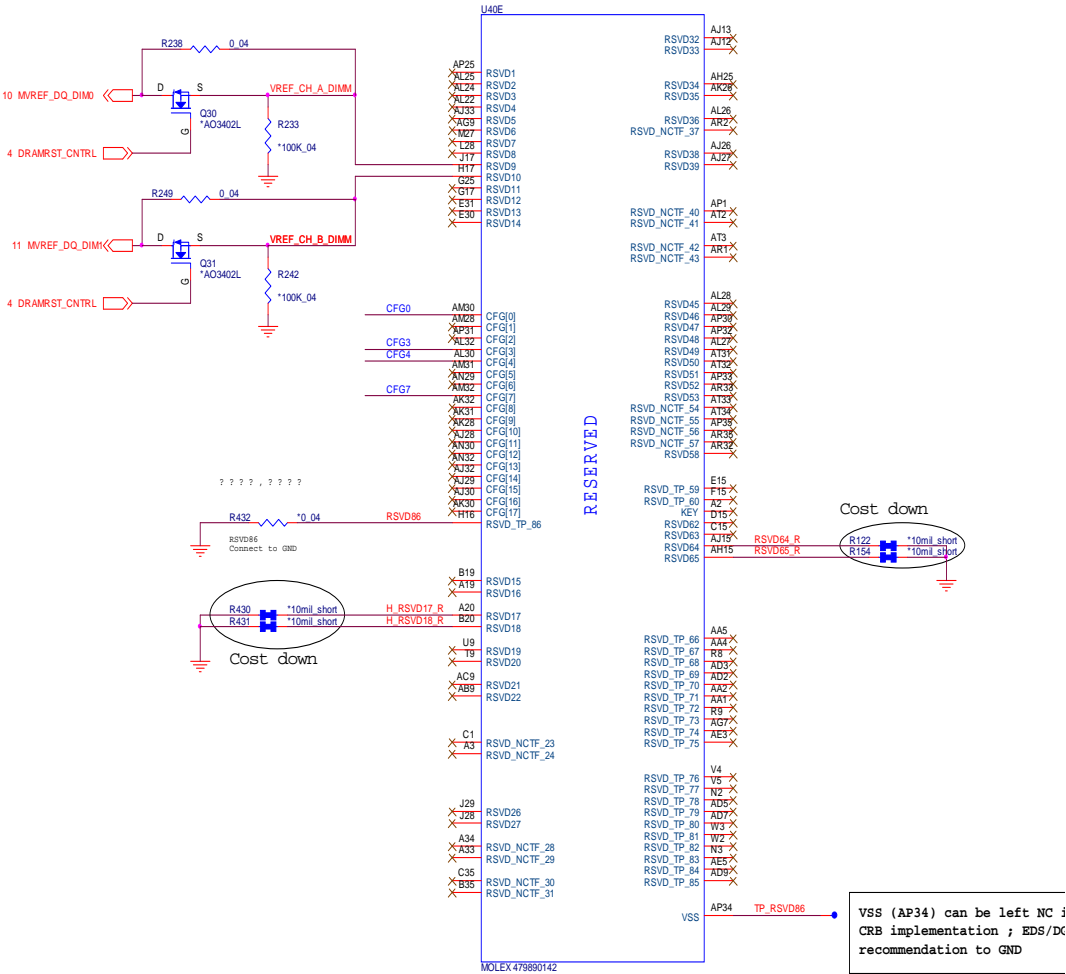

## B. Schematic Diagrams

~~SO-DIMM~~ A

**Layout Note:**  
signal/space/signal:  
8 / 4 / 8




## DDR3 SO-DIMM\_0 B - 11

## SO-DIMM B

Sheet 11 of 49  
DDR3 SO-DIMM 1




## Schematic Diagrams




## B.Schematic Diagrams

**Sheet 13 of 49**  
**VGA PCI-E**  
**Interface**

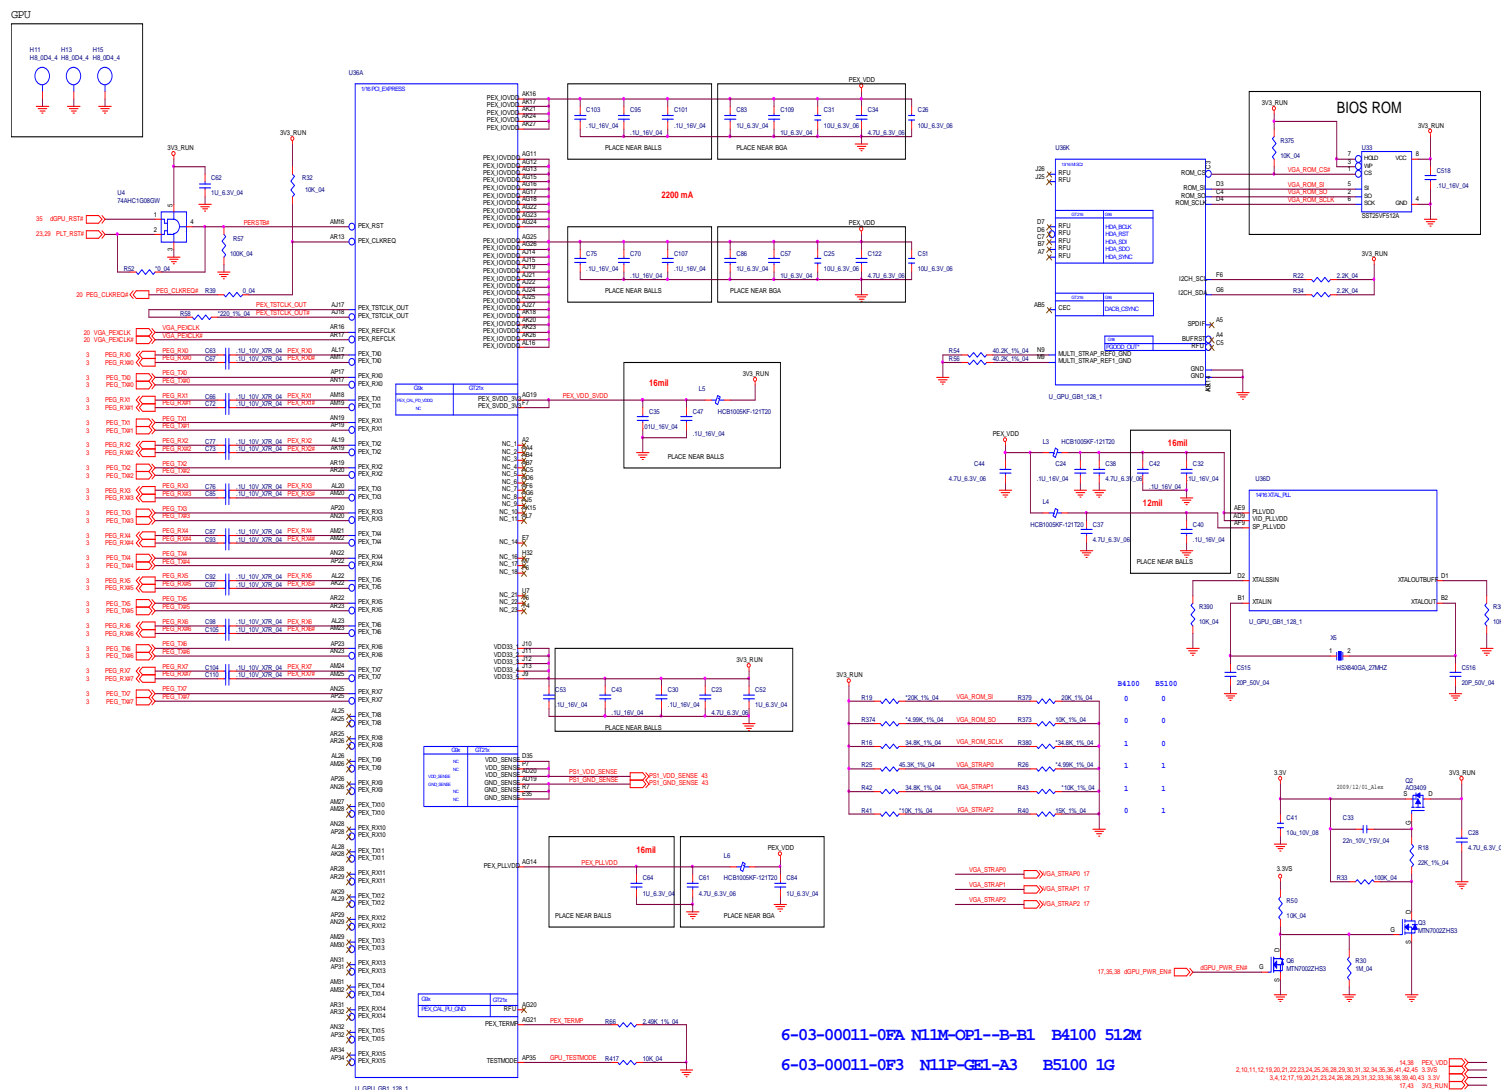




## Frame Buffer Interface

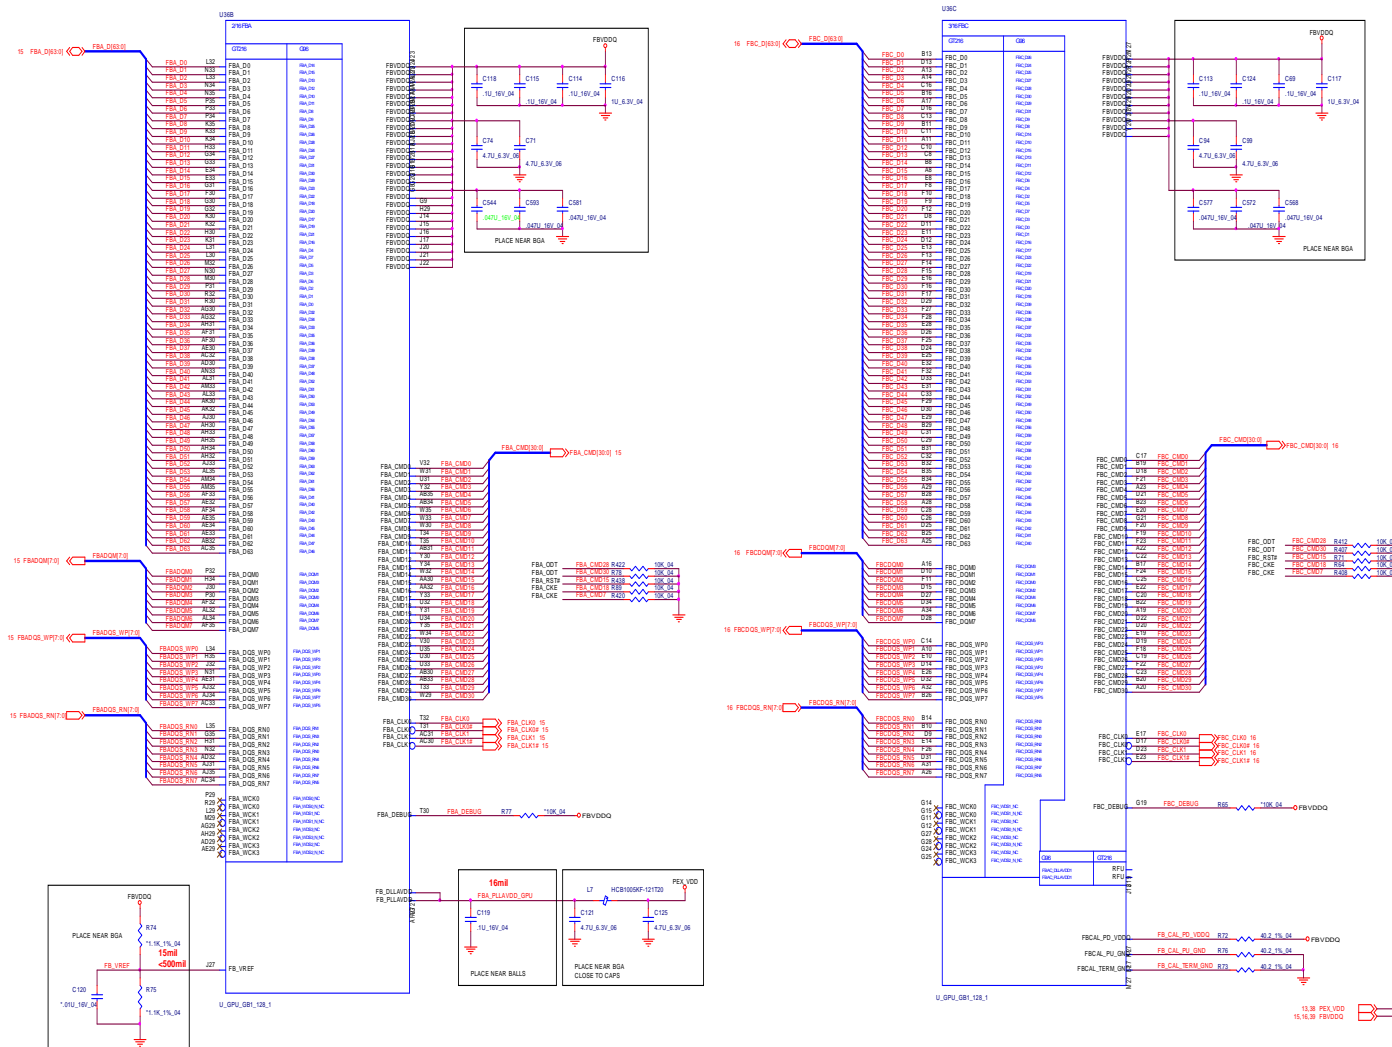

© 2006 The Authors  
Journal compilation © 2006 Blackwell Publishing Ltd

# VGA Frame Buffer A

## Frame Buffer Partition A

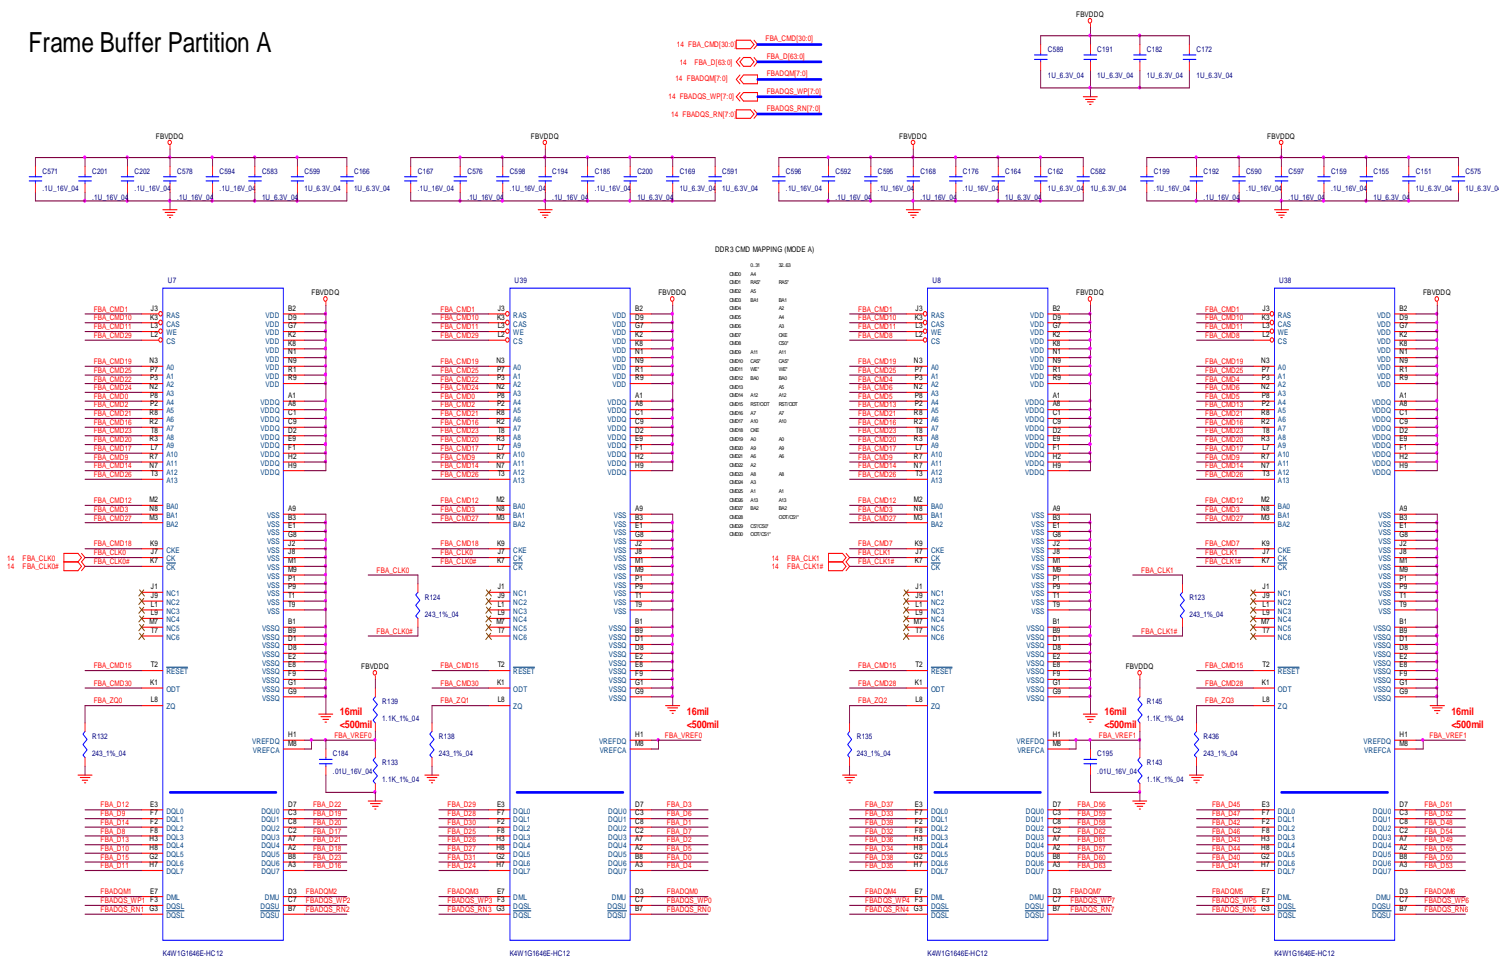

14,16,39 FBVDDQ 

### Frame Buffer Partition C





## VGA I/O

## B.Schematic Diagrams



## VGA NVVDD Cecoupling

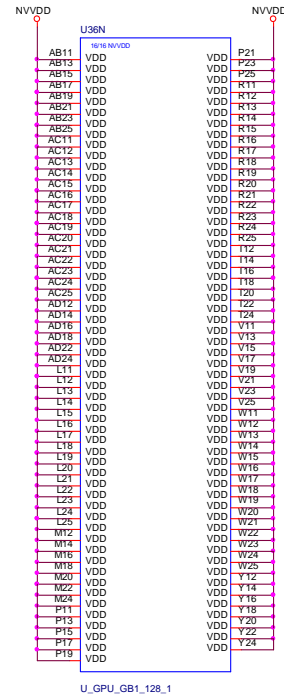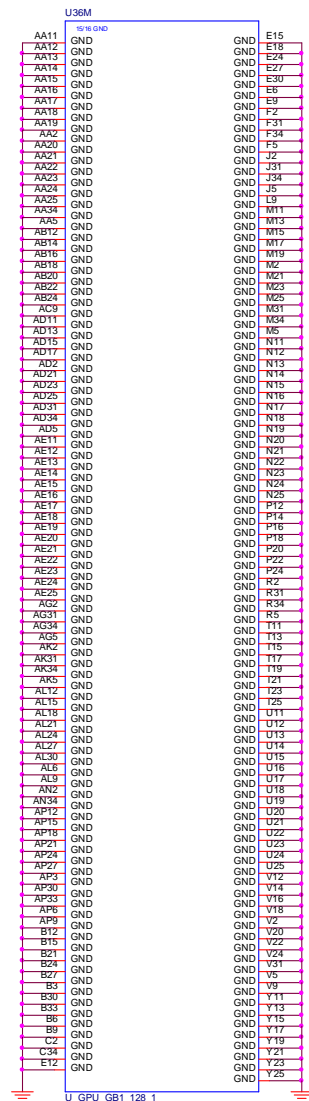


Schematic Diagrams

IBEXPEAK- M 1/9

IBEXPEAK - M (HDA,JTAG,SATA)

Sheet 19 of 49  
IBEXPEAK - M 1/9

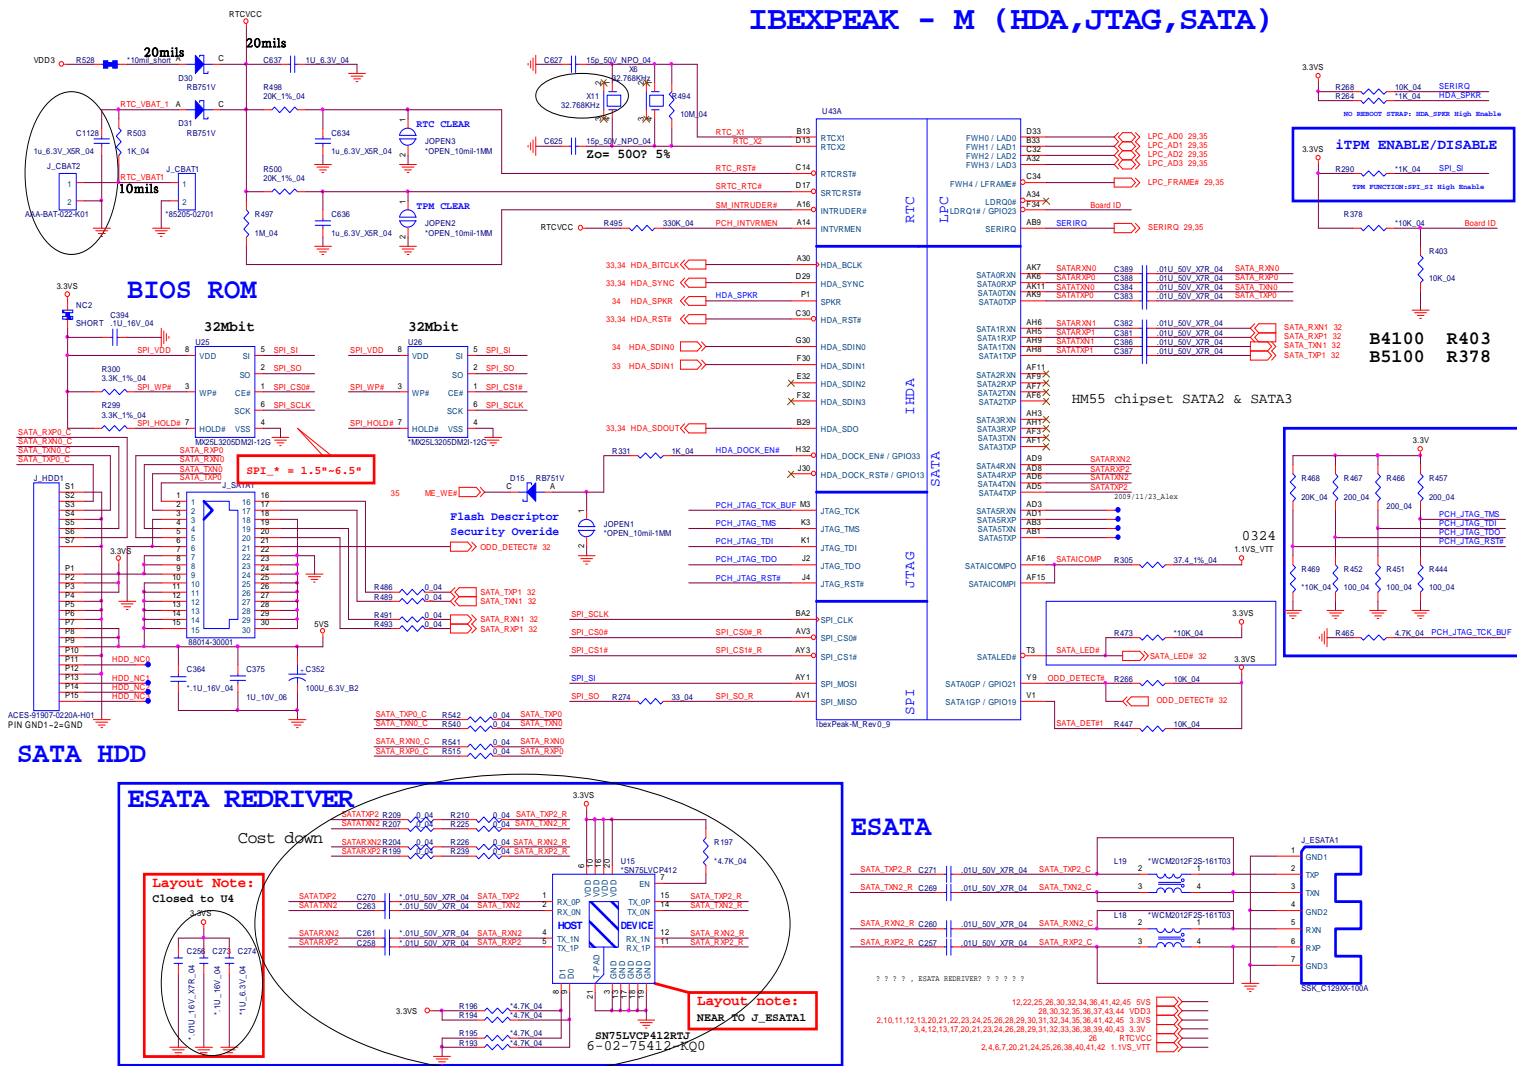



## IBEXPEAK - M (PCI-E,SMBUS,CLK)




Schematic Diagrams


IBEXPEAK - M 3/9

IBEXPEAK - M (DMI,FDI,GPIO)

Sheet 21 of 49  
IBEXPEAK - M 3/9

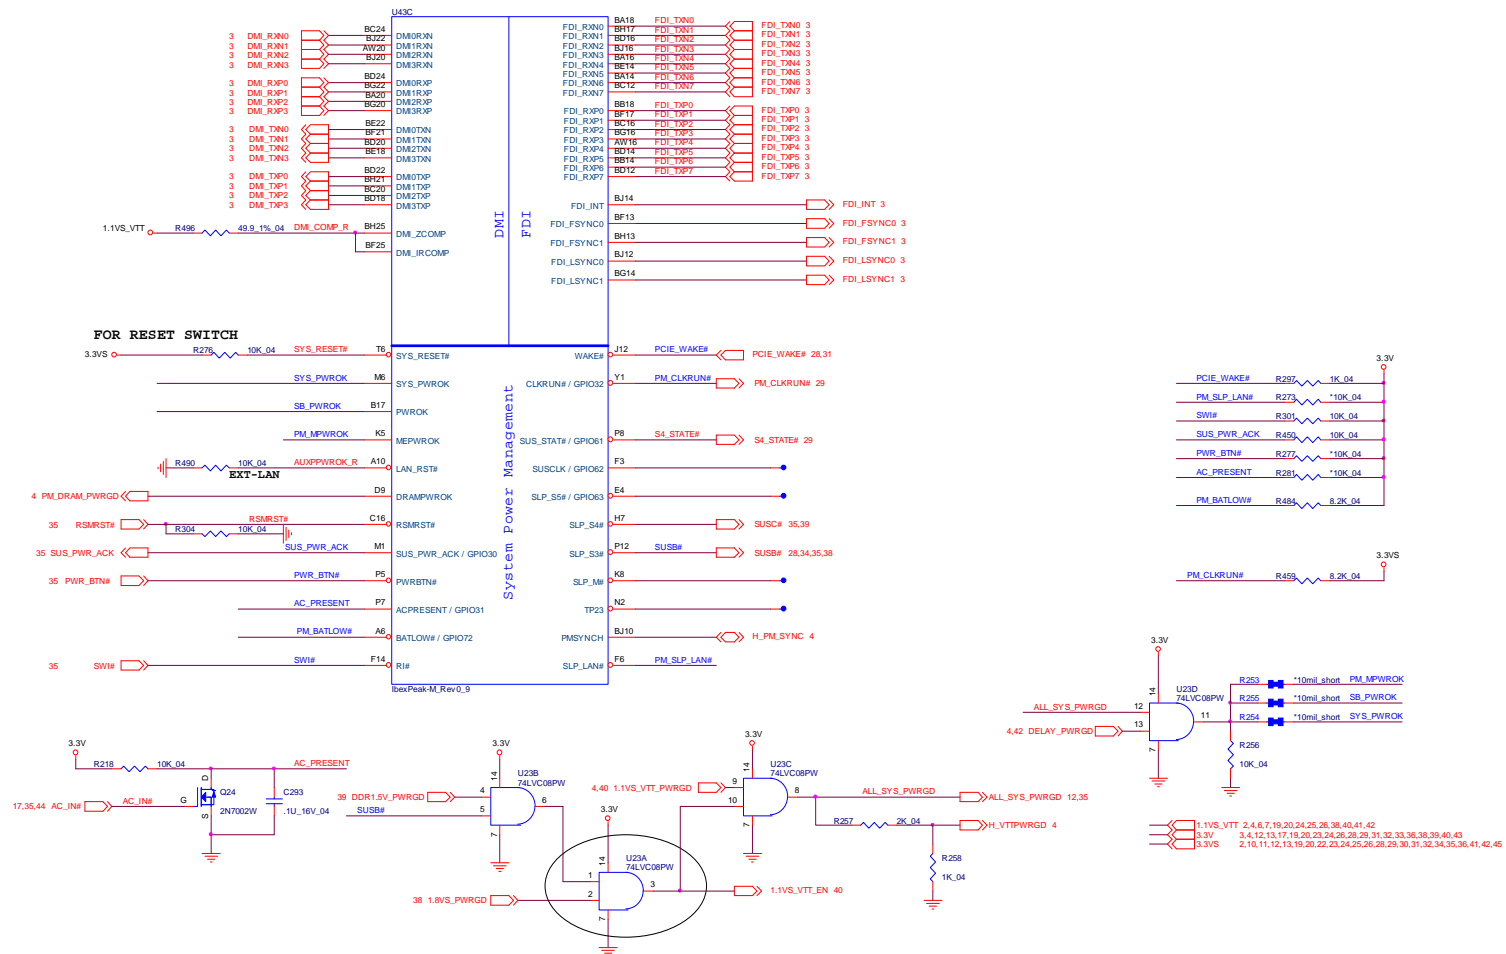

IBEXPEAK - M (LVDS,DDI)

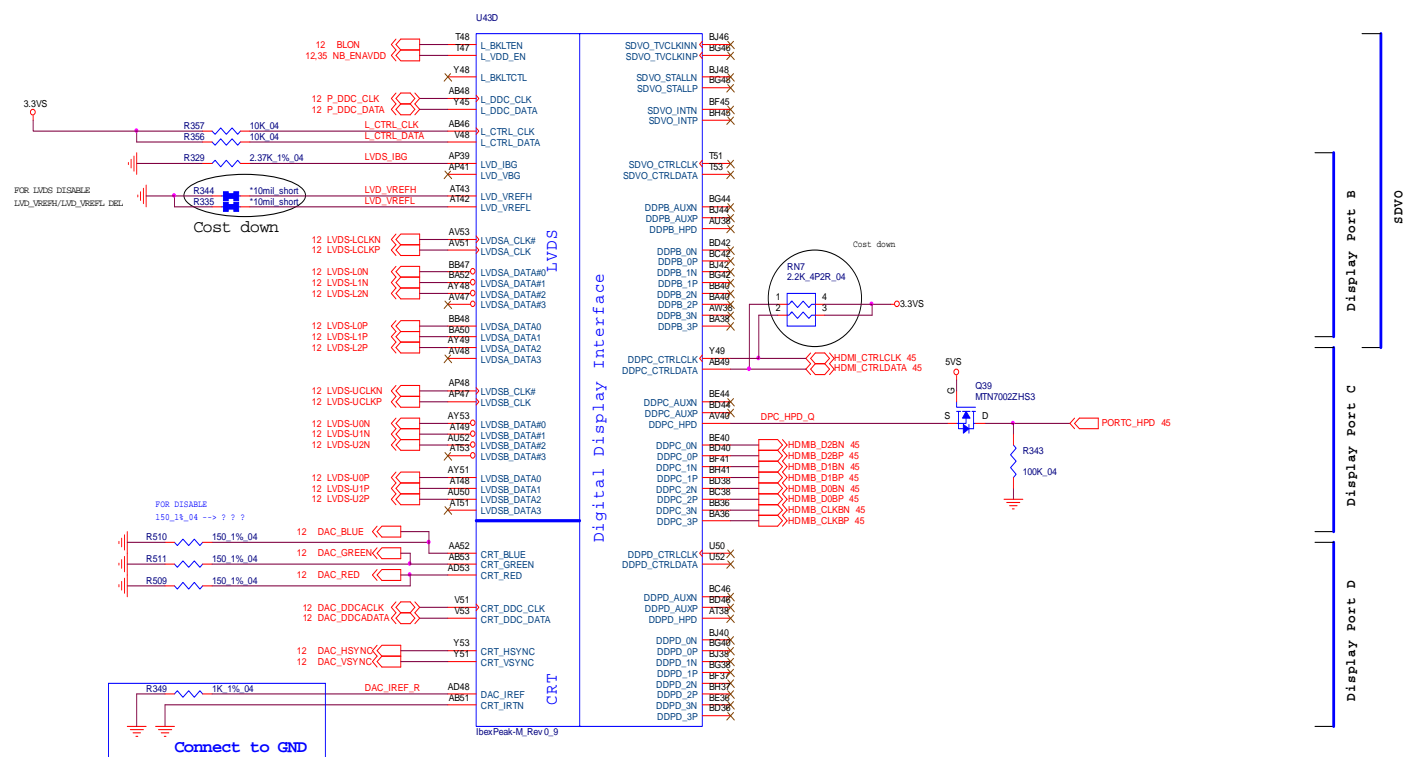


Sheet 22 of 49  
IBEXPEAK - M 4/9

IBEXPEAK - M 4/9 B - 23

## B.Schematic Diagrams

## IBEXPEAK - M (PCI,USB,NVRAM)





Understand the RED FONT define



```
graph LR; GND[Ground] --- R350[R350]; R350 --- R04[*1K_04]; R04 --- PCI_GNT#3[PCI_GNT#3]
```

3.3V/5							
		4	5	INT IRDY#			
RN9	3	6	6	PCI IRDY#			
8P4RX8_2K_O4	1	7	7	PCI FRAME#			
		1	8	PCI FRMR#			
RN4	3	9	8	PCI PERR#			
8P4RX8_2K_O4	2	10	9	PCI LOCK#			
		2	11	PCI DEVSEL#			
		1	8	PCI SERRA#			
		3	9	PCI SERRB#			
RN10	3	6	6	PCI IRDY#			
8P4RX8_2K_O4	2	7	7	INT PIROH#			
		1	8	PCI REQ#0			
		4	5	INT PIROG#			
RN6	3	6	6	INT PIROC#			
8P4RX8_2K_O4	1	7	7	INT PIROB#			
		1	8	PCI STOP#			
		4	5	INT PIROA#			
RN11	3	6	6	INT PIROF#			
8P4RX8_2K_O4	2	7	7	PCI REQ#3			
		1	8				
R504	10K_O4			DGPU_SELECT#			


BACKLIGHT CONTROL FROM IGPU/DGPU

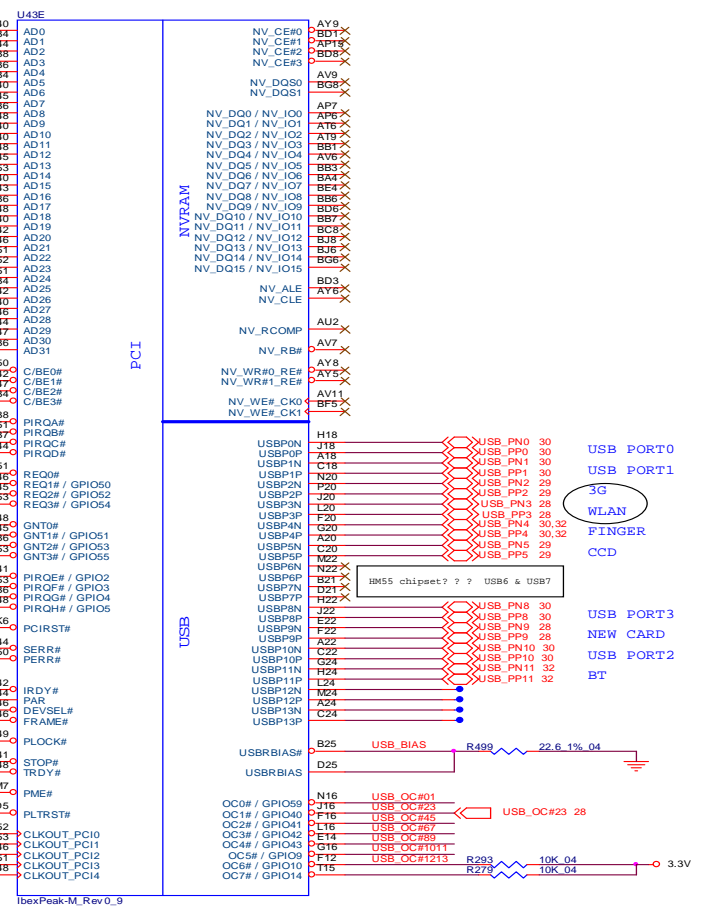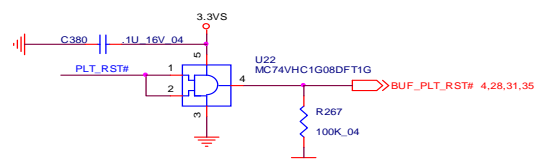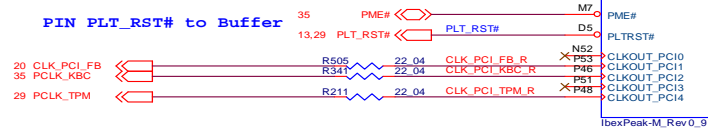

2, 10, 11, 12, 13, 19, 20, 21, 22, 24, 25, 26, 28, 29, 30, 31, 32, 34, 35, 36, 41, 42, 45 3.3VS  
3 4 12 13 17 19 20 21 24 26 28 29 31 32 33 36 38 39 40 43 3.3V

## IBEXPEAK - M 6/9

## IBEXPEAK - M (GPIO,VSS\_NCTF,RSVD)

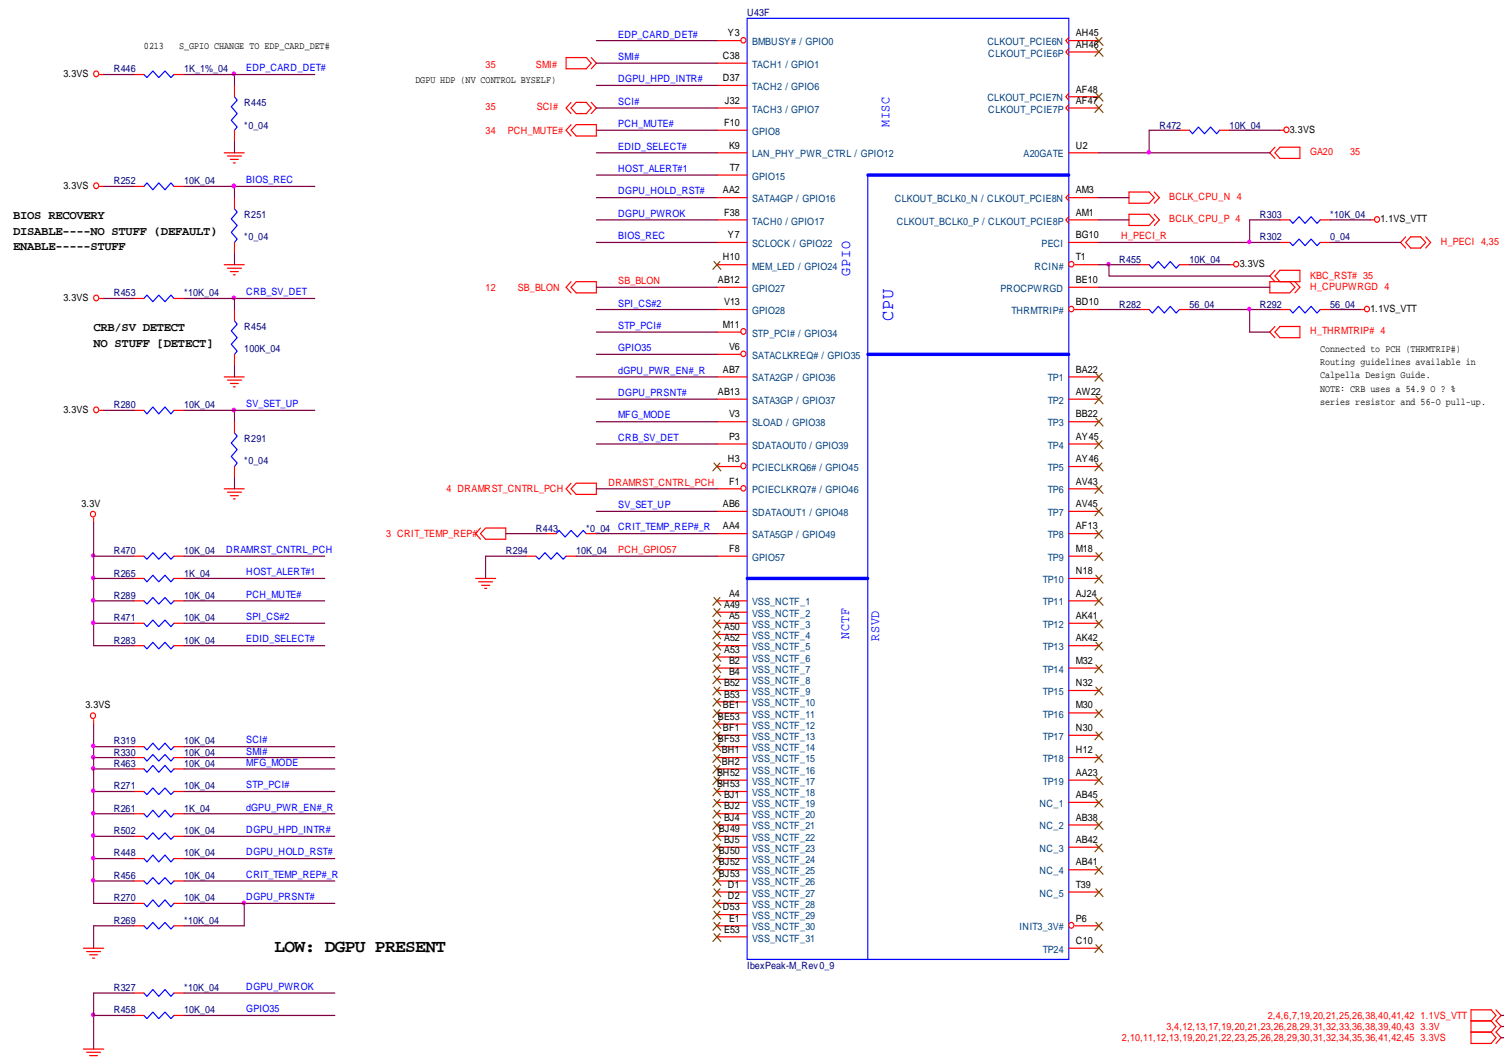


Schematic Diagrams

IBEXPEAK - M 7/9

IBEXPEAK - M (POWER)


Sheet 25 of 49  
IBEXPEAK - M 7/9

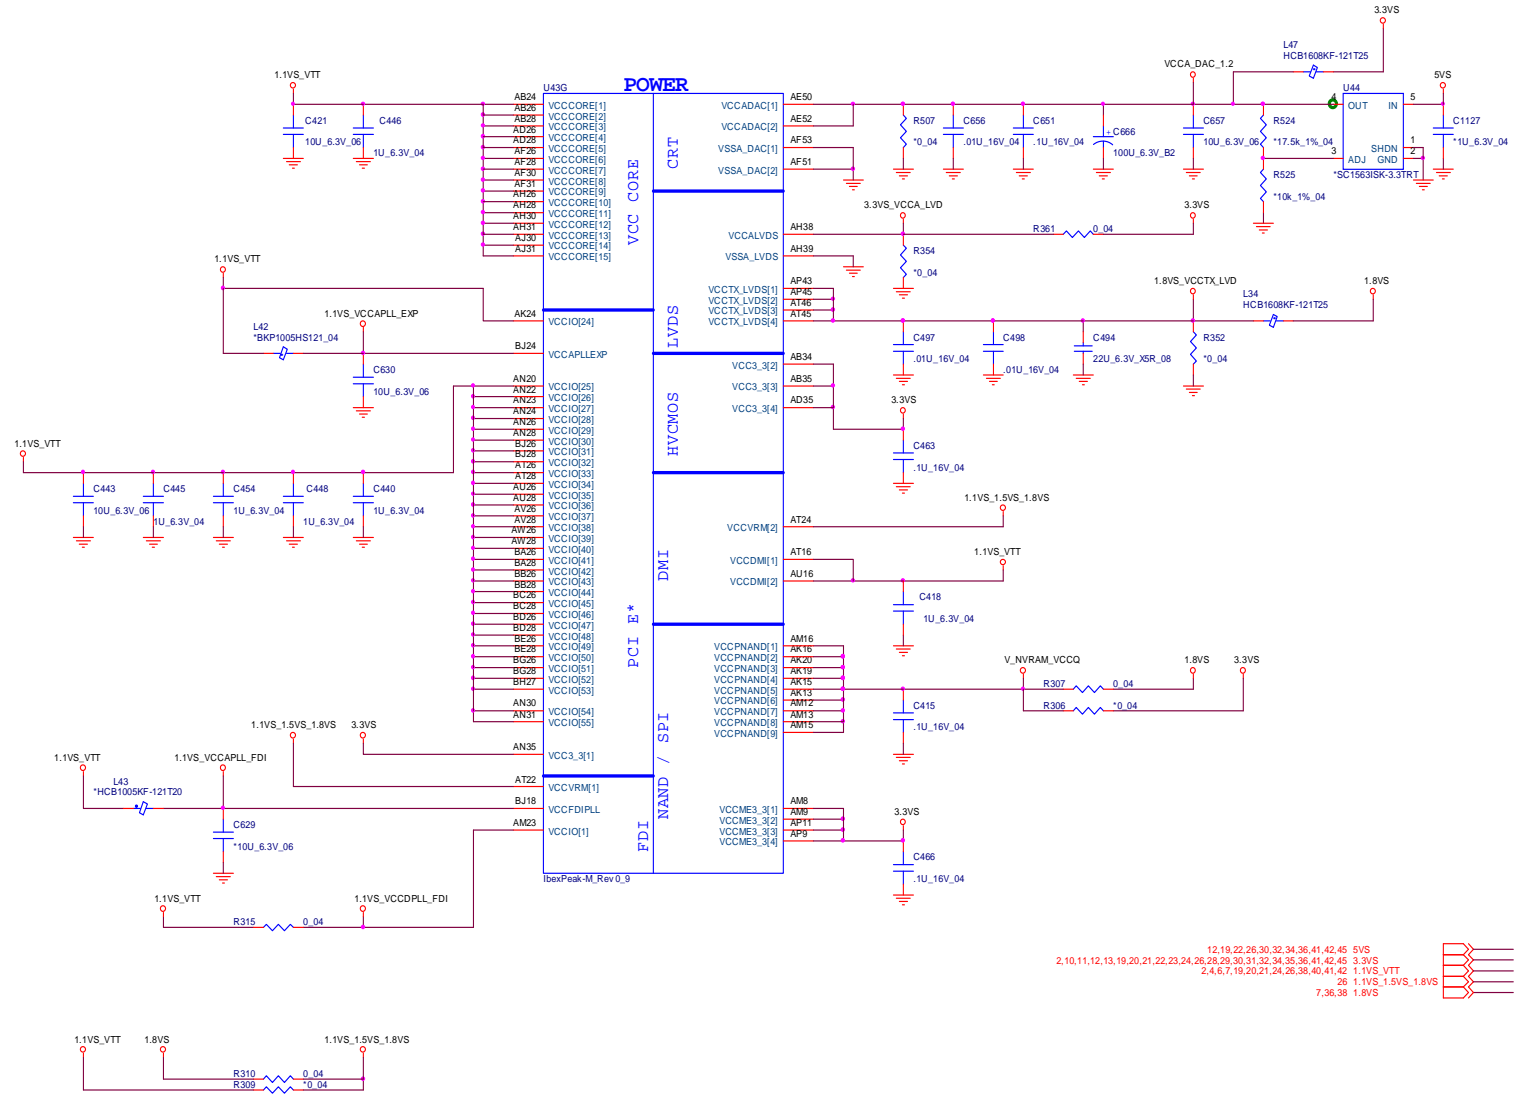



## IBEXPEAK - M 8/9

## IBEXPEAK - M (POWER)

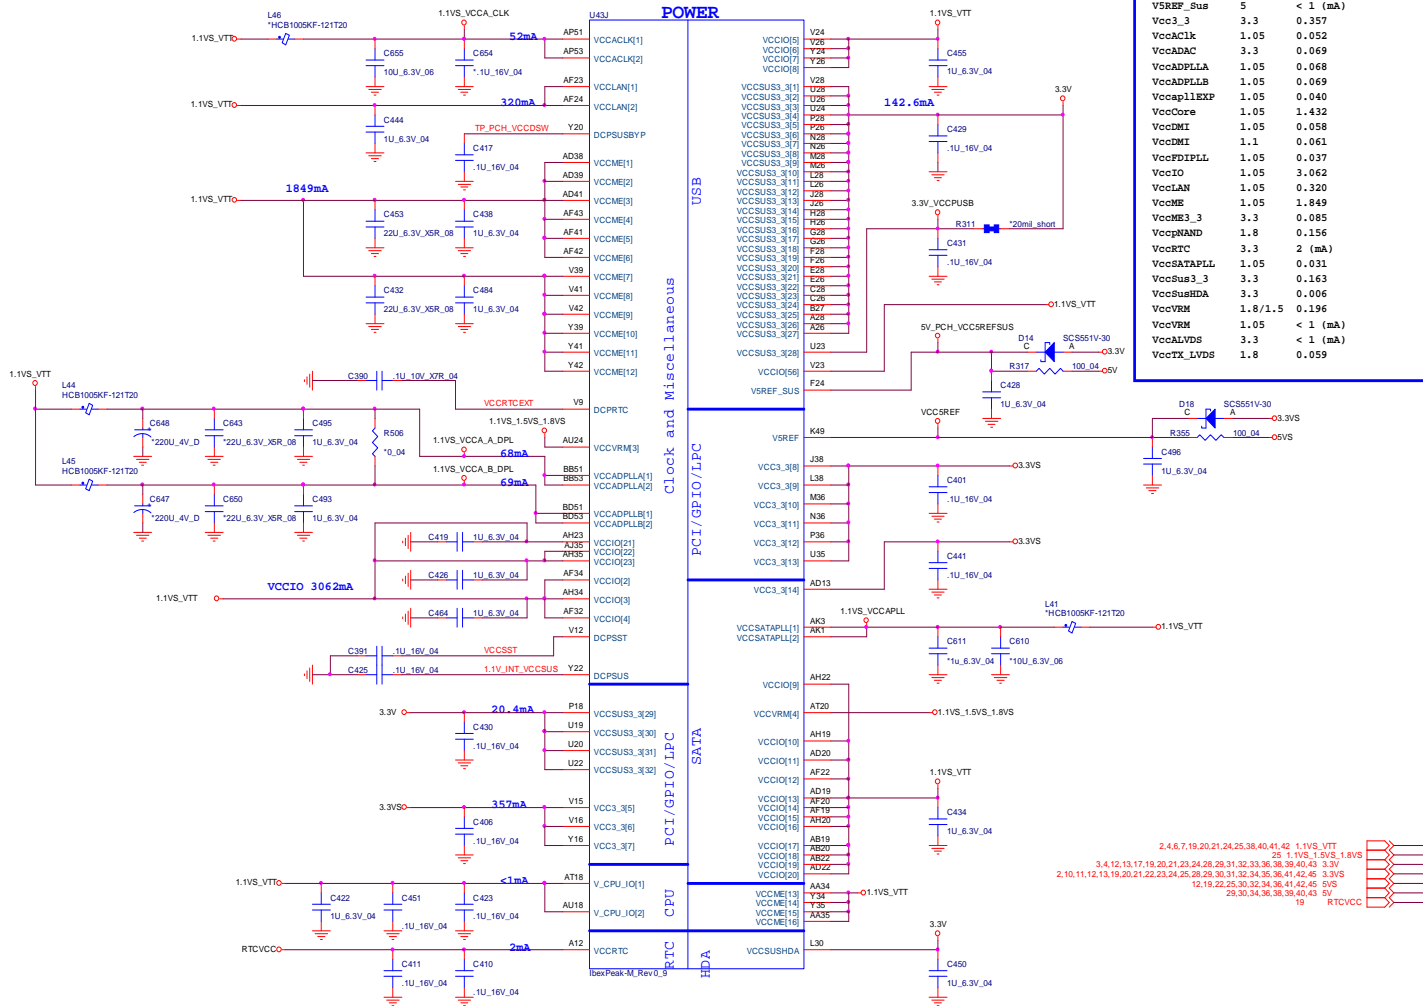



Sheet 26 of 49  
IBEXPEAK - M 8/9

Schematic Diagrams

IBEXPEAK - M 9/9


IBEXPEAK - M (GND)

Sheet 27 of 49  
IBEXPEAK - M 9/9

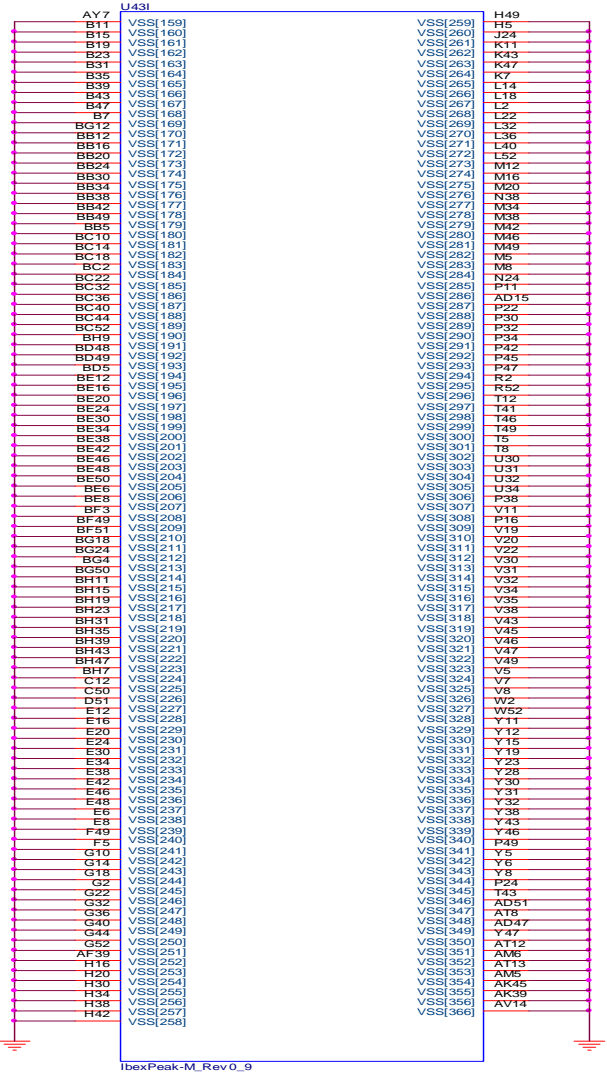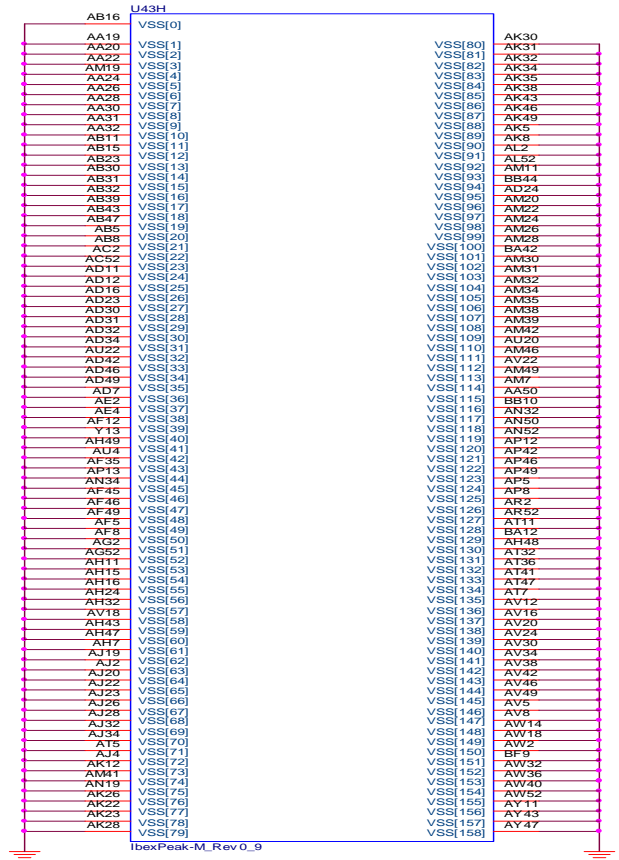


## New Card, Mini PCIE

## NEW CARD

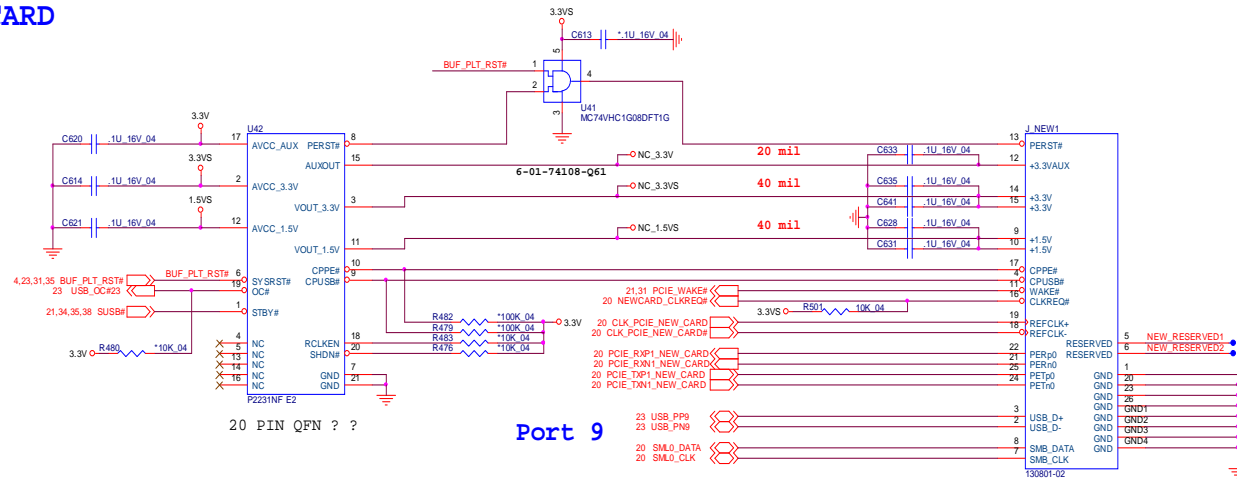


Sheet 28 of 49  
New Card, Mini PCIE



## MINI CARD

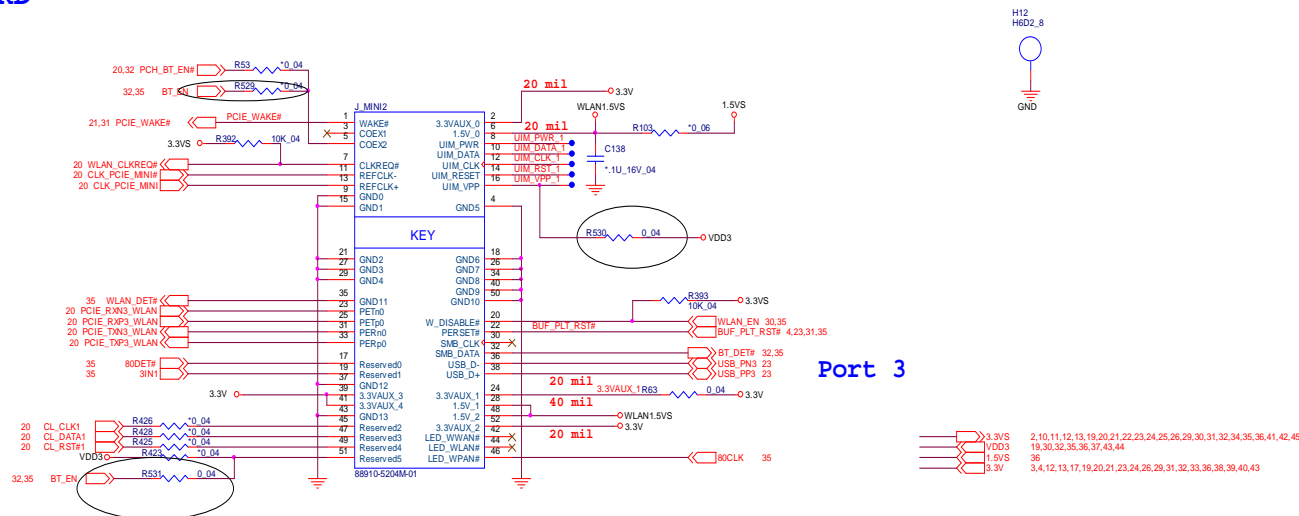

### 3G

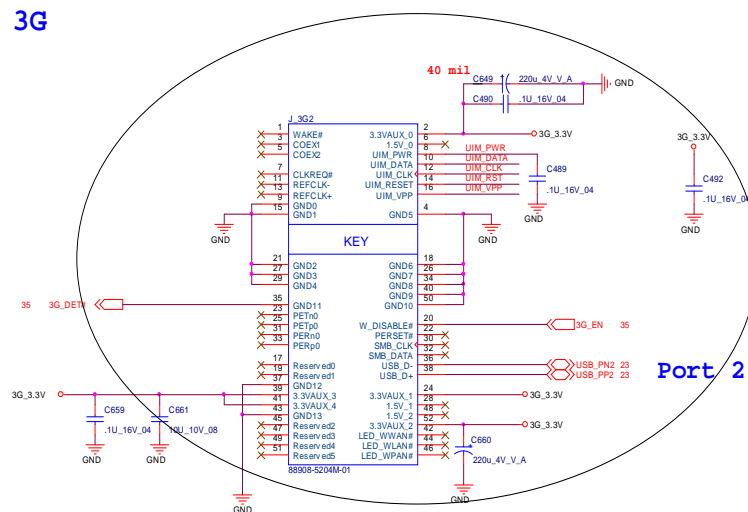



Port 2

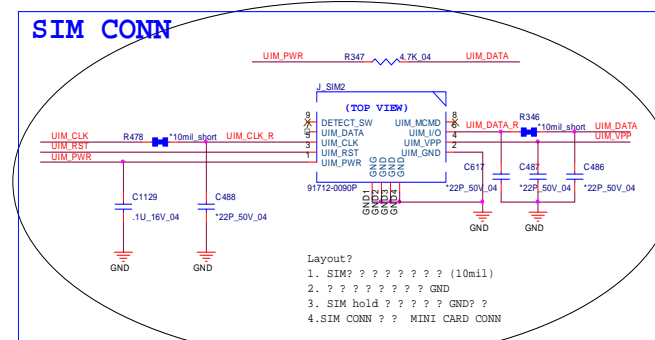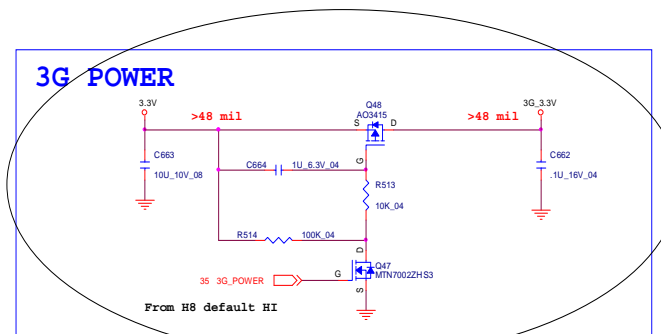

Layout?

1. SIM? ? ? ? ? ? ? ? (10mil)
2. ? ? ? ? ? ? ? ? GND
3. SIM hold ? ? ? ? ? GND? ?
4. SIM CONN ? ? MINI CARD CONN


## TPM 1.2

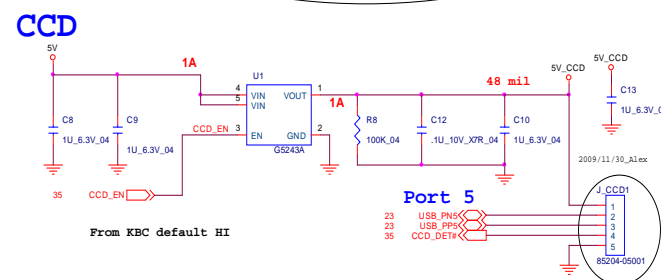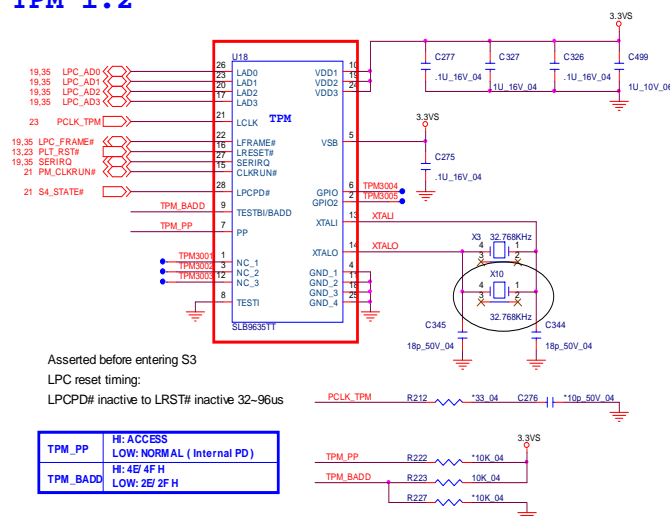


From KBC default H1




# USB, Fan, TP, FP, Multi-Conn

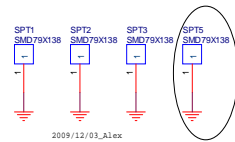


## CPU FAN CONTROL

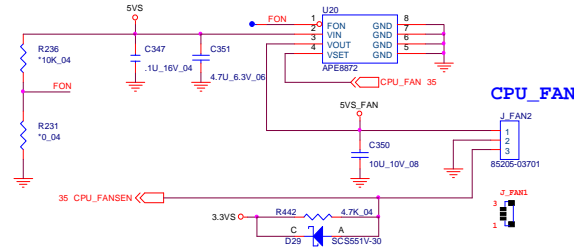


## USB PORT

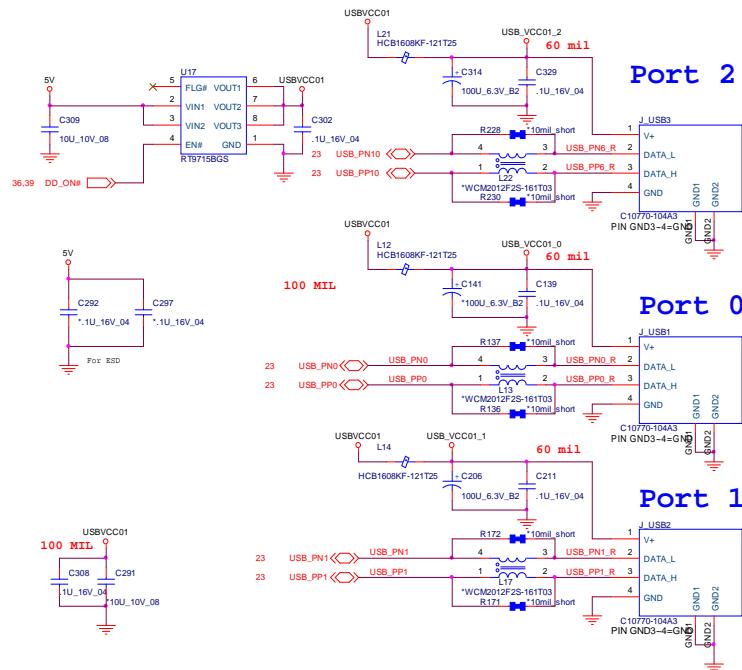


## FP CONN

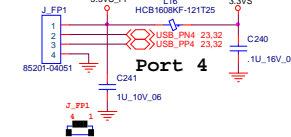

## FOR PHONE JACK BOARD

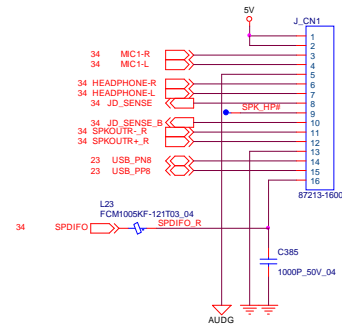

## FOR POWER SWITCH BOARD

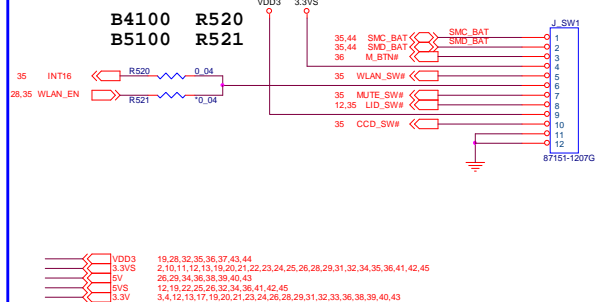

Sheet 30 of 49  
USB, Fan, TP, FP,  
Multi-Conn


JMC251







# SATA ODD, LED, Hotkey, LID SW

## SATA ODD

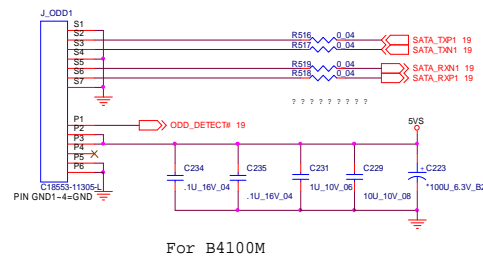


For B5100M

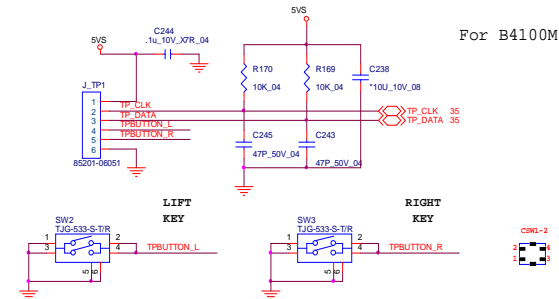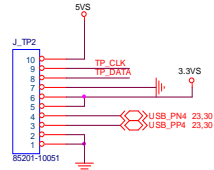


## LED

For B4100M

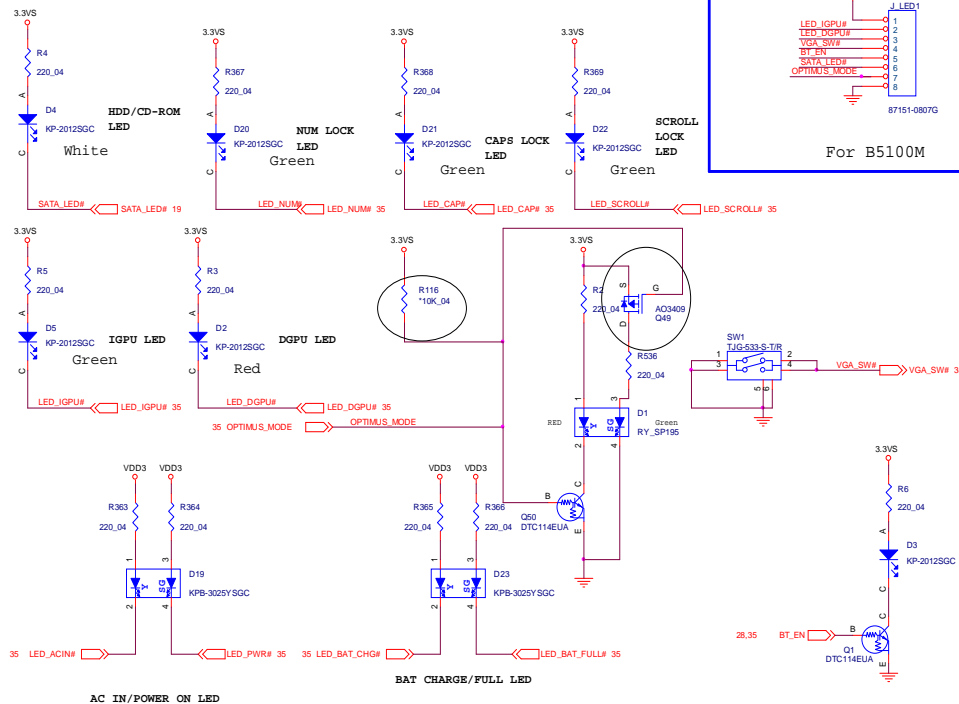

## Bluetooth

Port 11

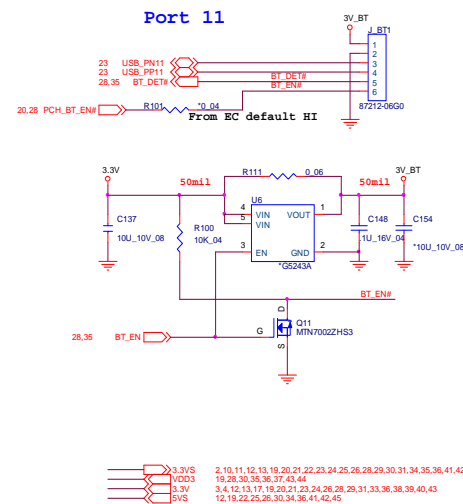

Sheet 32 of 49  
SATA ODD, LED,  
Hotkey, LID SW

## B.Schematic Diagrams


## B.Schematic Diagrams

## B.Schematic Diagrams



# Audio Codec ALC272

## CODEC ( ALC272-GR )

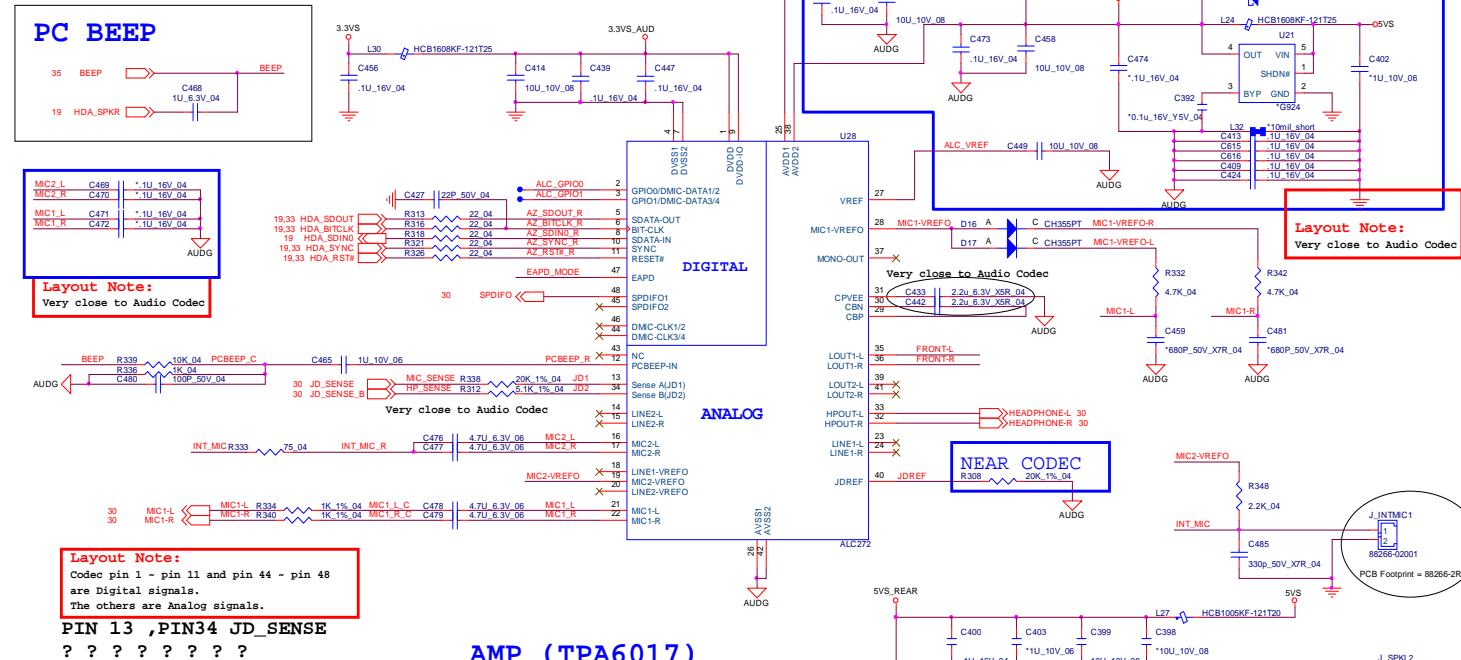


Sheet 34 of 49  
Audio Codec  
ALC272



Schematic Diagrams

KBC-ITE IT8502E

Sheet 35 of 49  
KBC-ITE IT8502E

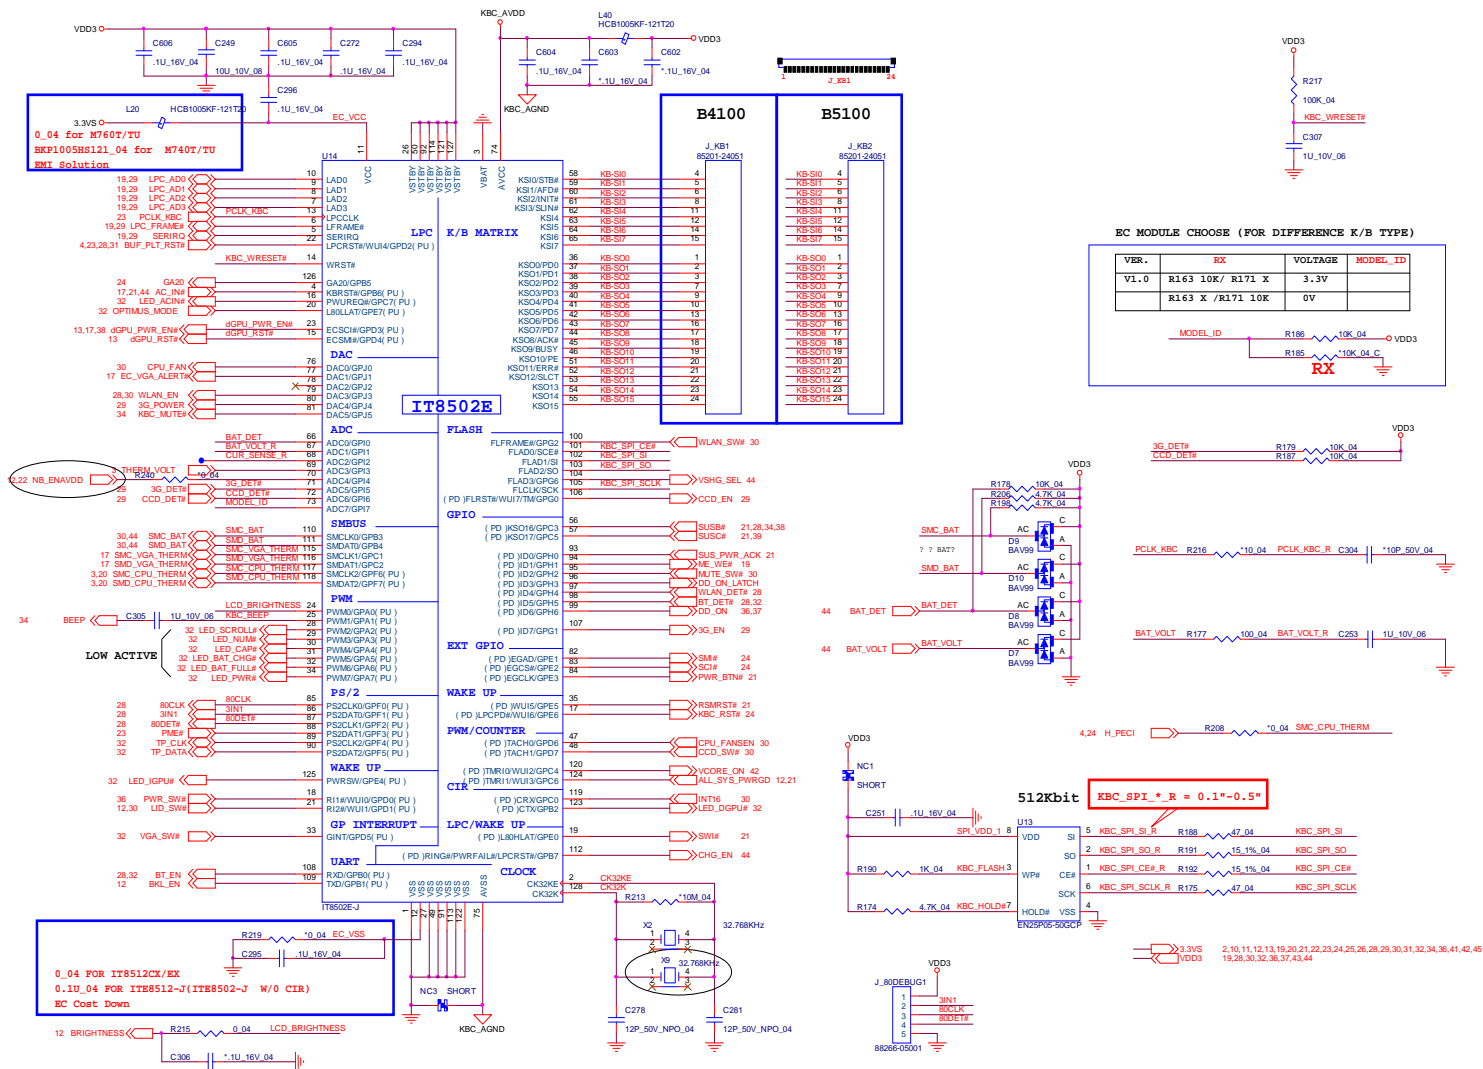


# 5VS, 3.3VS, 1.5VS, VIN1

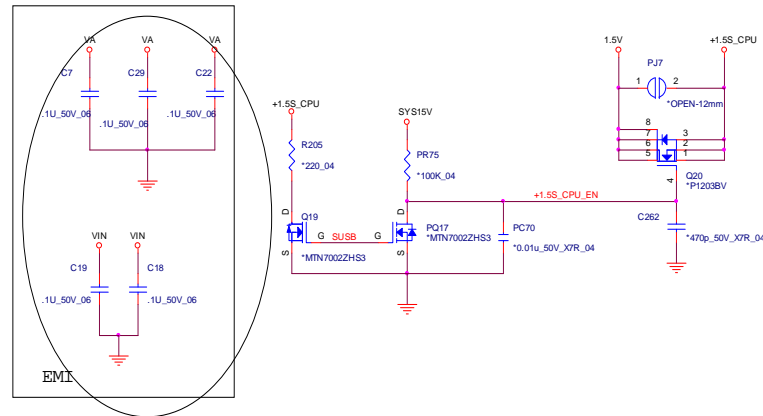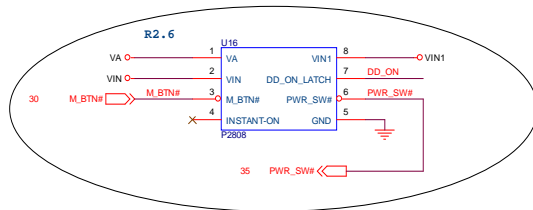


Sheet 36 of 49  
5VS, 3.3VS, 1.5VS,  
VIN1


5V

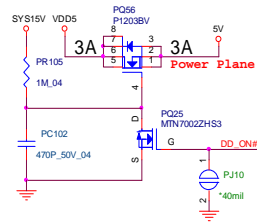


5VS

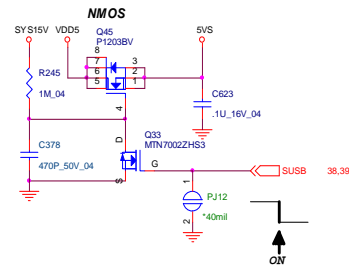


1.8VS

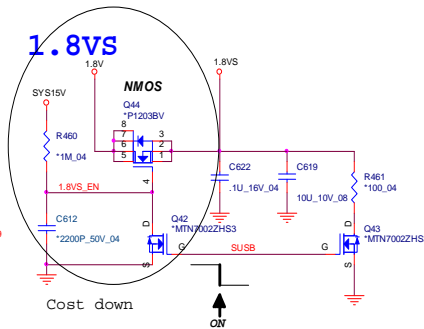



1.5VS

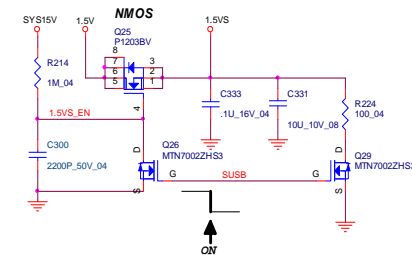

3.3V

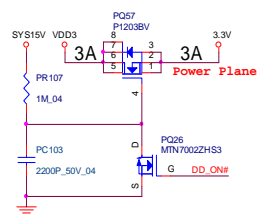

3.3VS

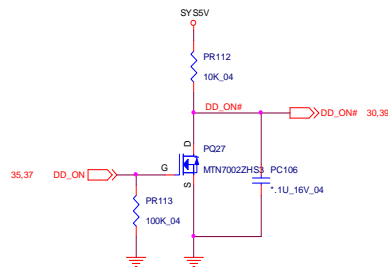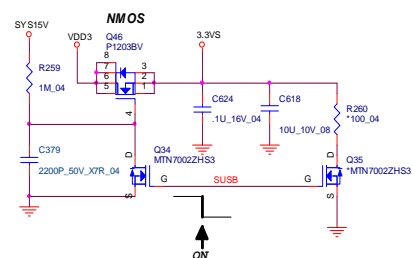


VIN1	37
VIN	12, 37, 38, 40, 41, 42, 43, 44
VA	44
5VS15V	37, 38, 39
5VS5V	37, 38
VDD5	37
5V	25, 26, 30, 34, 35, 36, 40, 43
5VS	12, 19, 22, 25, 26, 30, 32, 34, 41, 42, 45
VDD3	19, 26, 30, 32, 35, 37, 43, 44
3.3V	3, 4, 12, 15, 17, 19, 20, 21, 23, 24, 26, 28, 29, 31, 32, 33, 36, 38, 40, 43
3.3VS	2, 10, 11, 12, 15, 19, 20, 21, 22, 23, 24, 25, 26, 28, 29, 30, 31, 32, 34, 35, 41, 42, 45
1.5S_CPU	4, 7
1.5V	4, 10, 11, 39
1.5VS	28
1.8V	38
1.8VS	7, 25, 38


Schematic Diagrams

VDD3, VDD5



Sheet 37 of 49  
VDD3, VDD5

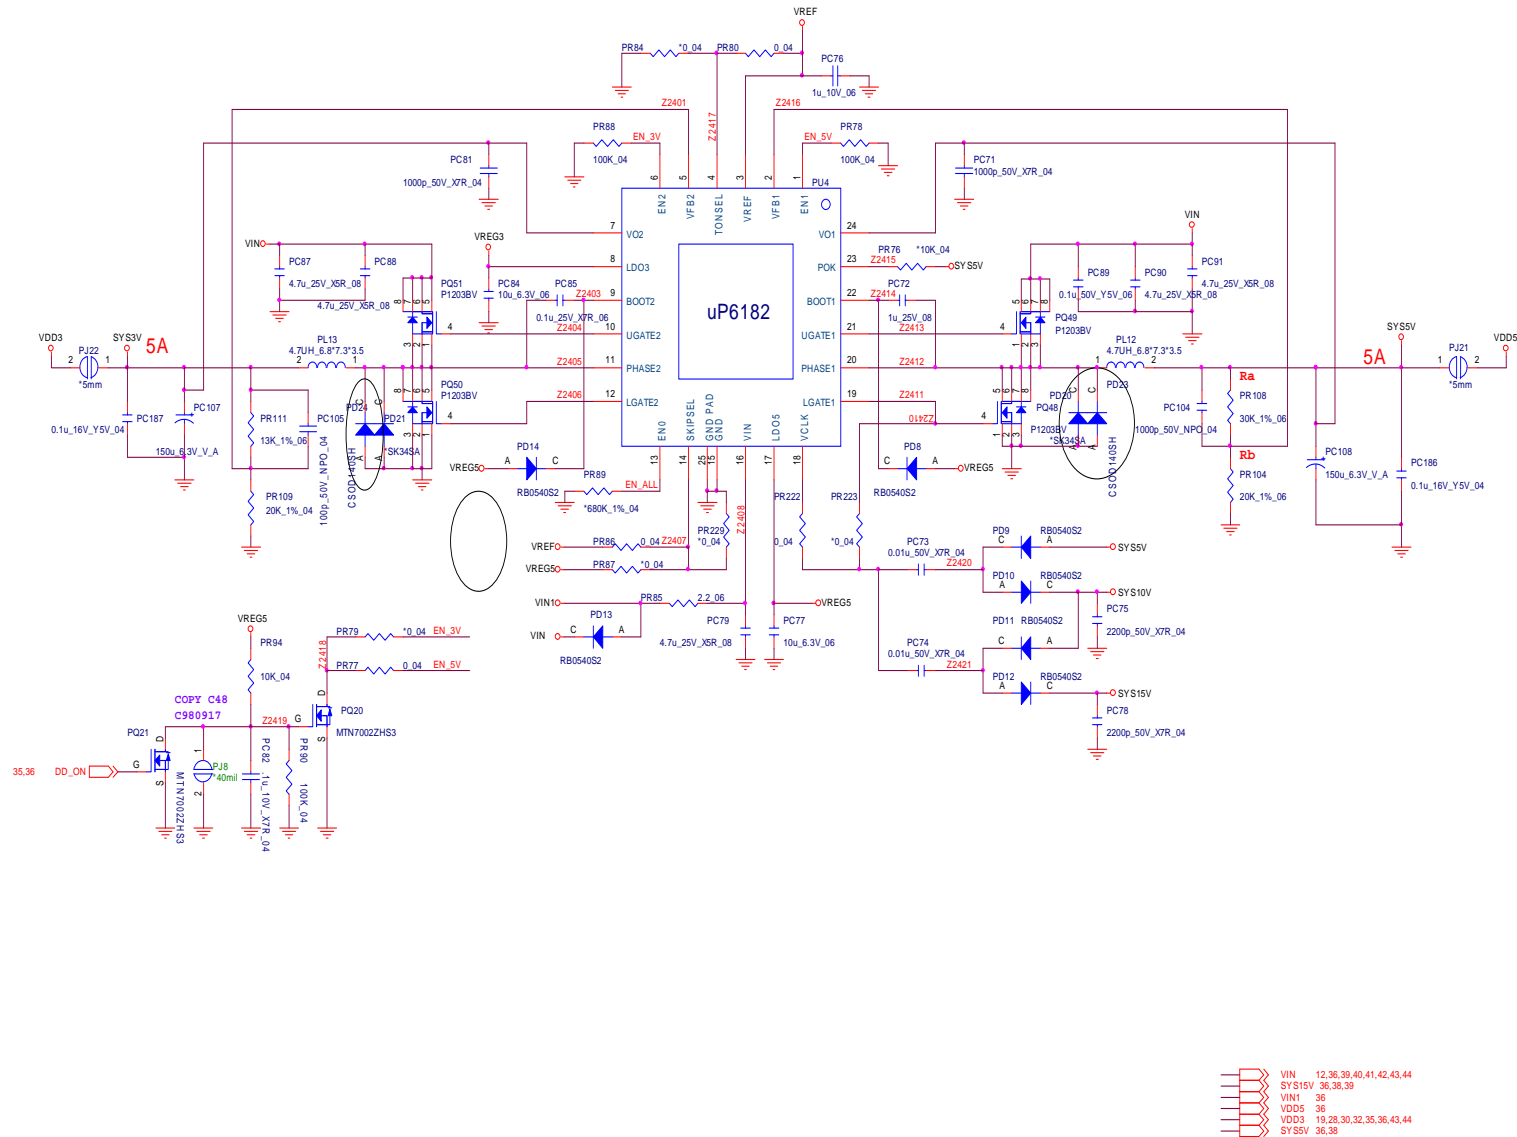

# Power 1.8V, PEX\_VDD

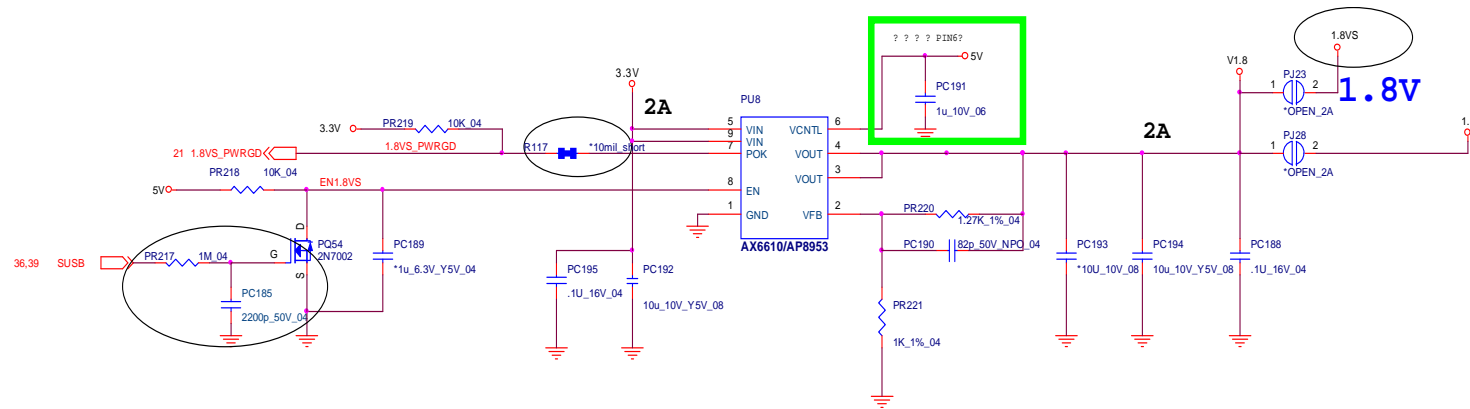

Sheet 38 of 49  
Power 1.8V,  
PEX\_VDD

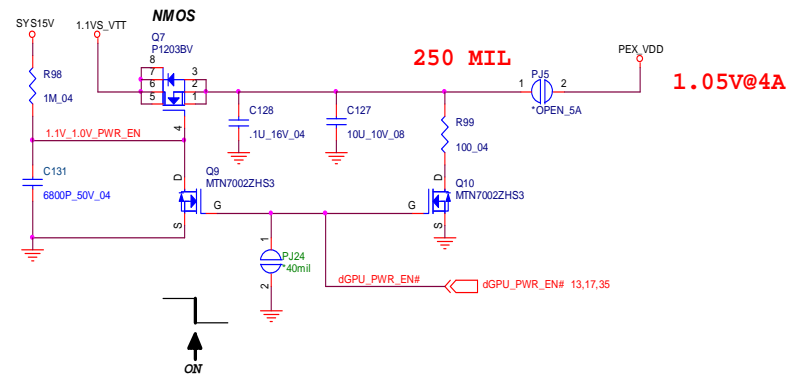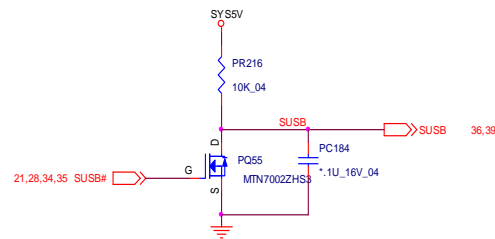


3,4,12,13,17,19,20,21,23,24,26,28,29,31,32,33,36,39,40,43	3.3V
36,37,39	SYS15V
36,37	SYS5V
12,36,37,39,40,41,42,43,44	VIN
13,14	PEX_VDD
2,4,6,7,19,20,21,24,25,26,40,41,42	1.1VS_VTT
26,29,30,34,36,39,40,43	5V
36	1.8V
7,25,36	1.8VS




## B.Schematic Diagrams

Sheet 39 of 49  
Power 1.5V/0.75V

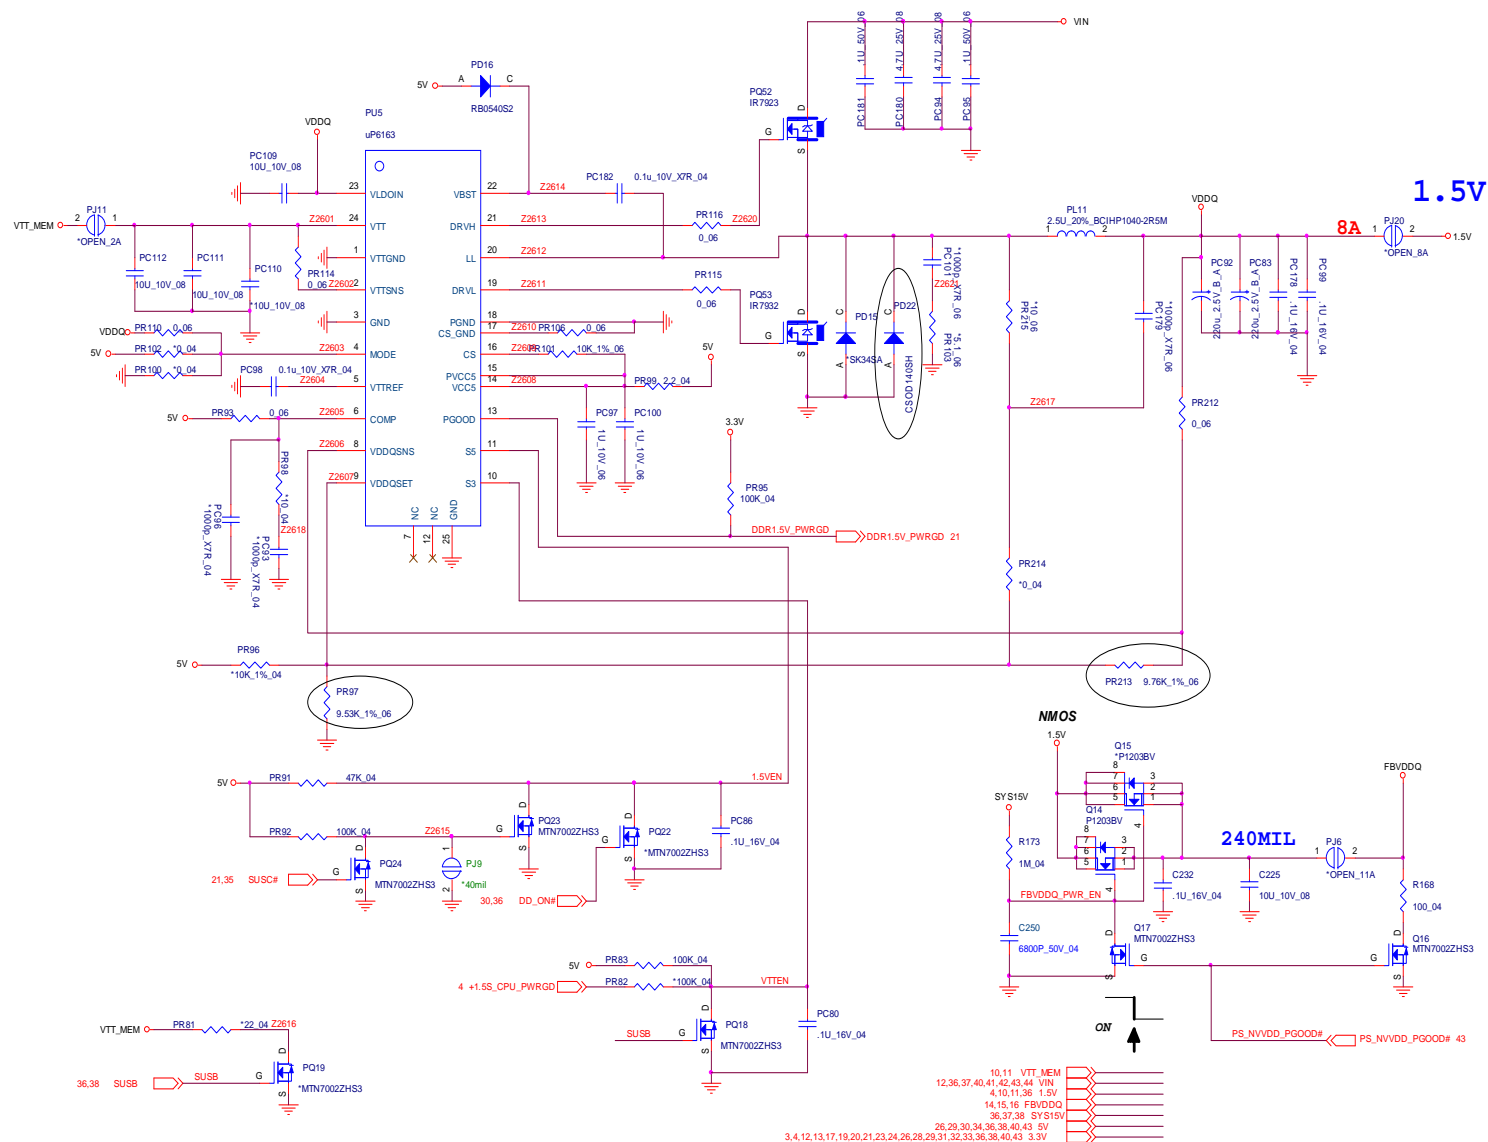


## Power 1.1VS\_VTT

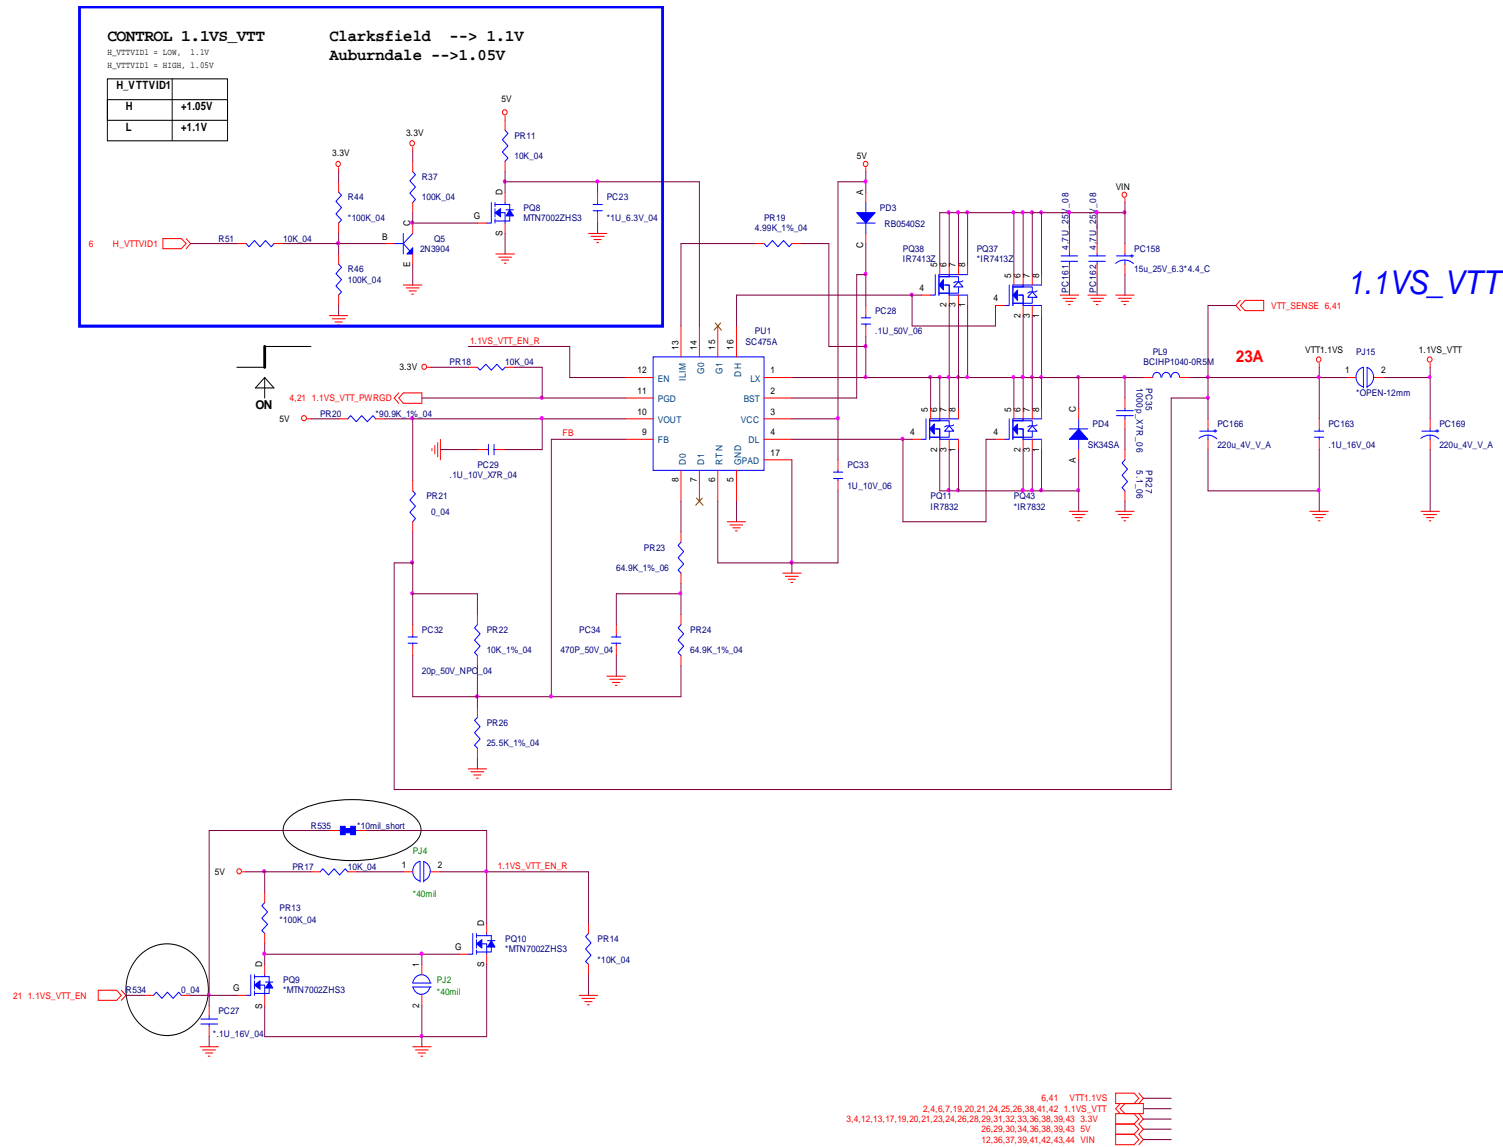


Sheet 40 of 49  
Power 1.1VS\_VTT

## Power VGFX\_Core

Sheet 41 of 49  
Power VGFX\_Core

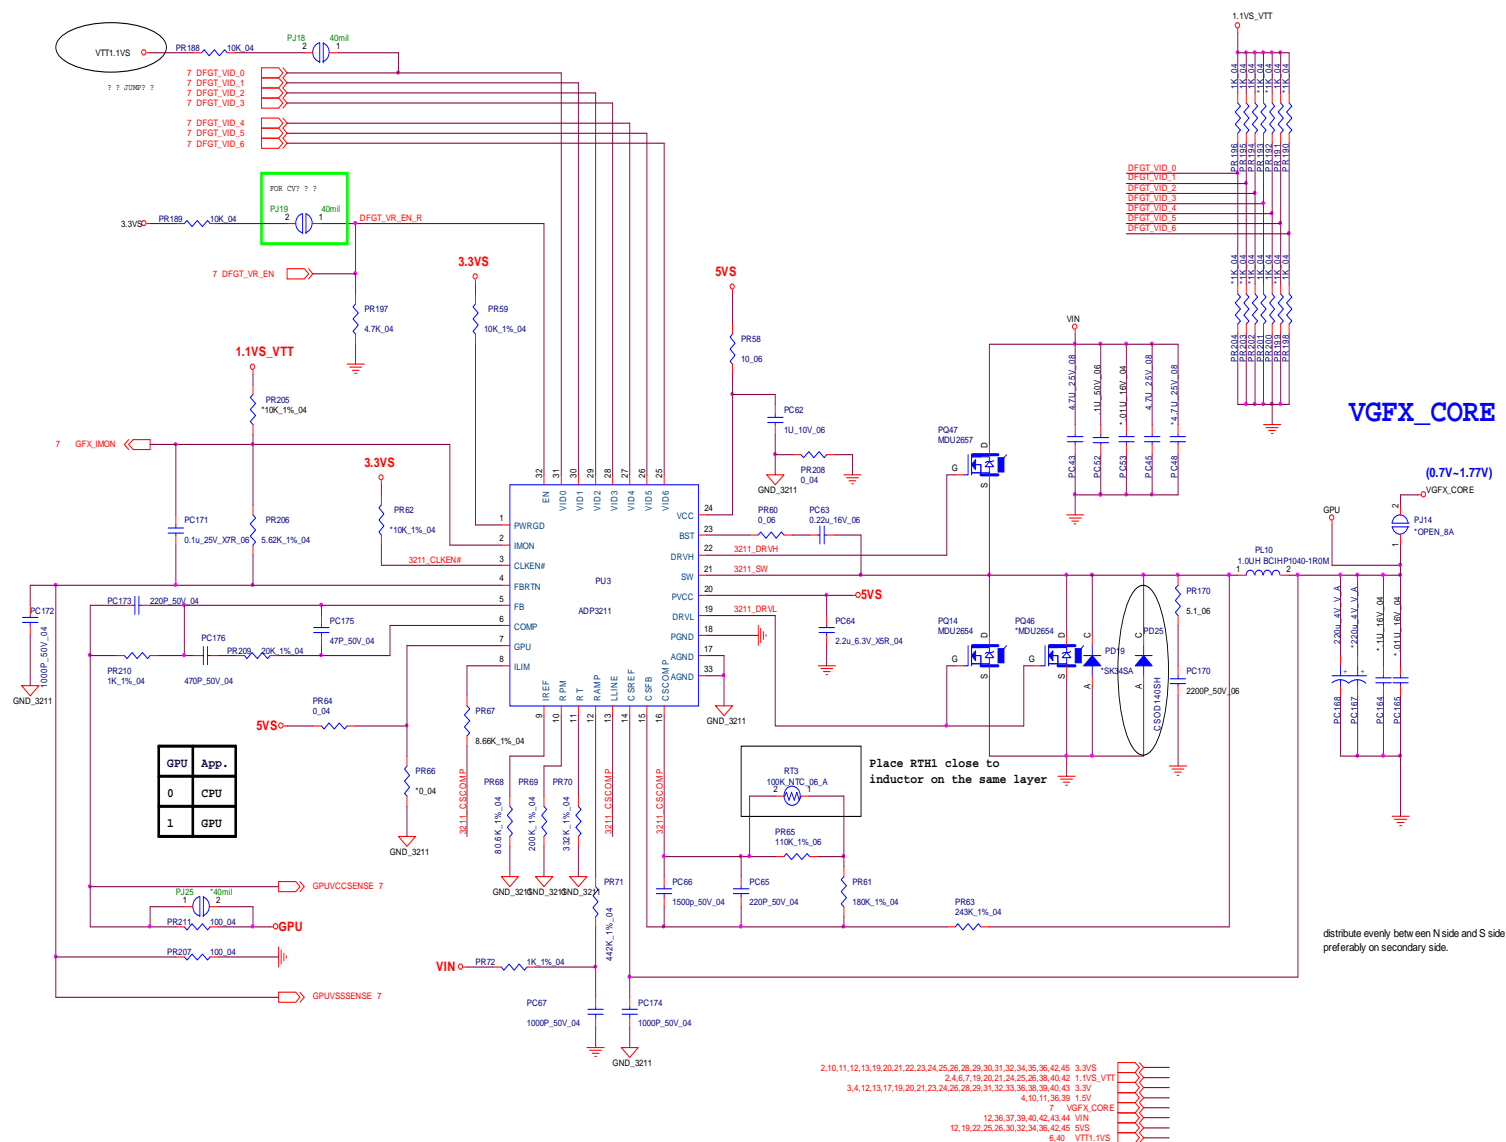

**V-Core B - 43**

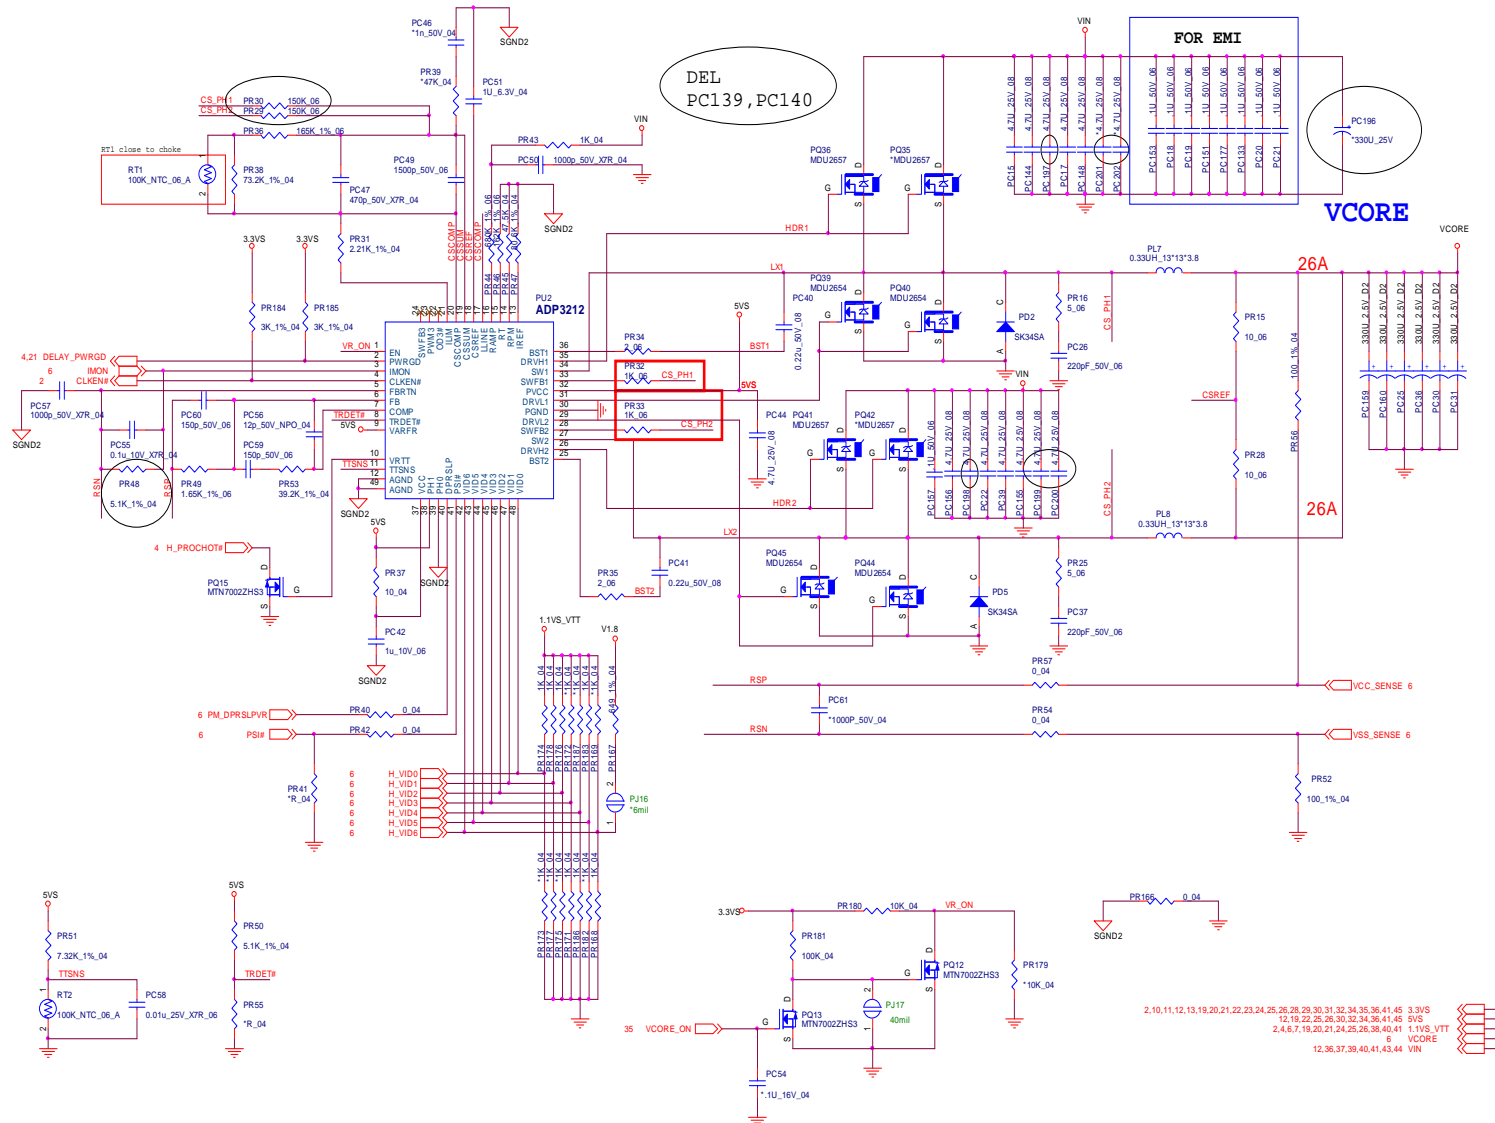

## NVIDIA N11P-GE1


	0.95V	0.90V	0.85V	0.80V
GPIO5_NVVDD_VID0	0	1	0	1
GPIO6_NVVDD_VID1	0	0	1	1

	1.03V	0.95V	0.85V	0.80V
GPIO5_NVVDD_VID0	0	1	0	1
GPIO6_NVVDD_VID1	0	0	1	1

	PR131	PR132	PR139	PR142	PR143	PR14
B4100 N11M-OP1	15K_1%	75K_1%	6.8K_1%	20K_1%	100K_1%	10K_1%
B5100 N11P-GE1	10K_1%	20K_1%	2K_1%	4.99K_1%	30K_1%	10K_1%

[illegible]

## AC\_IN, Charger


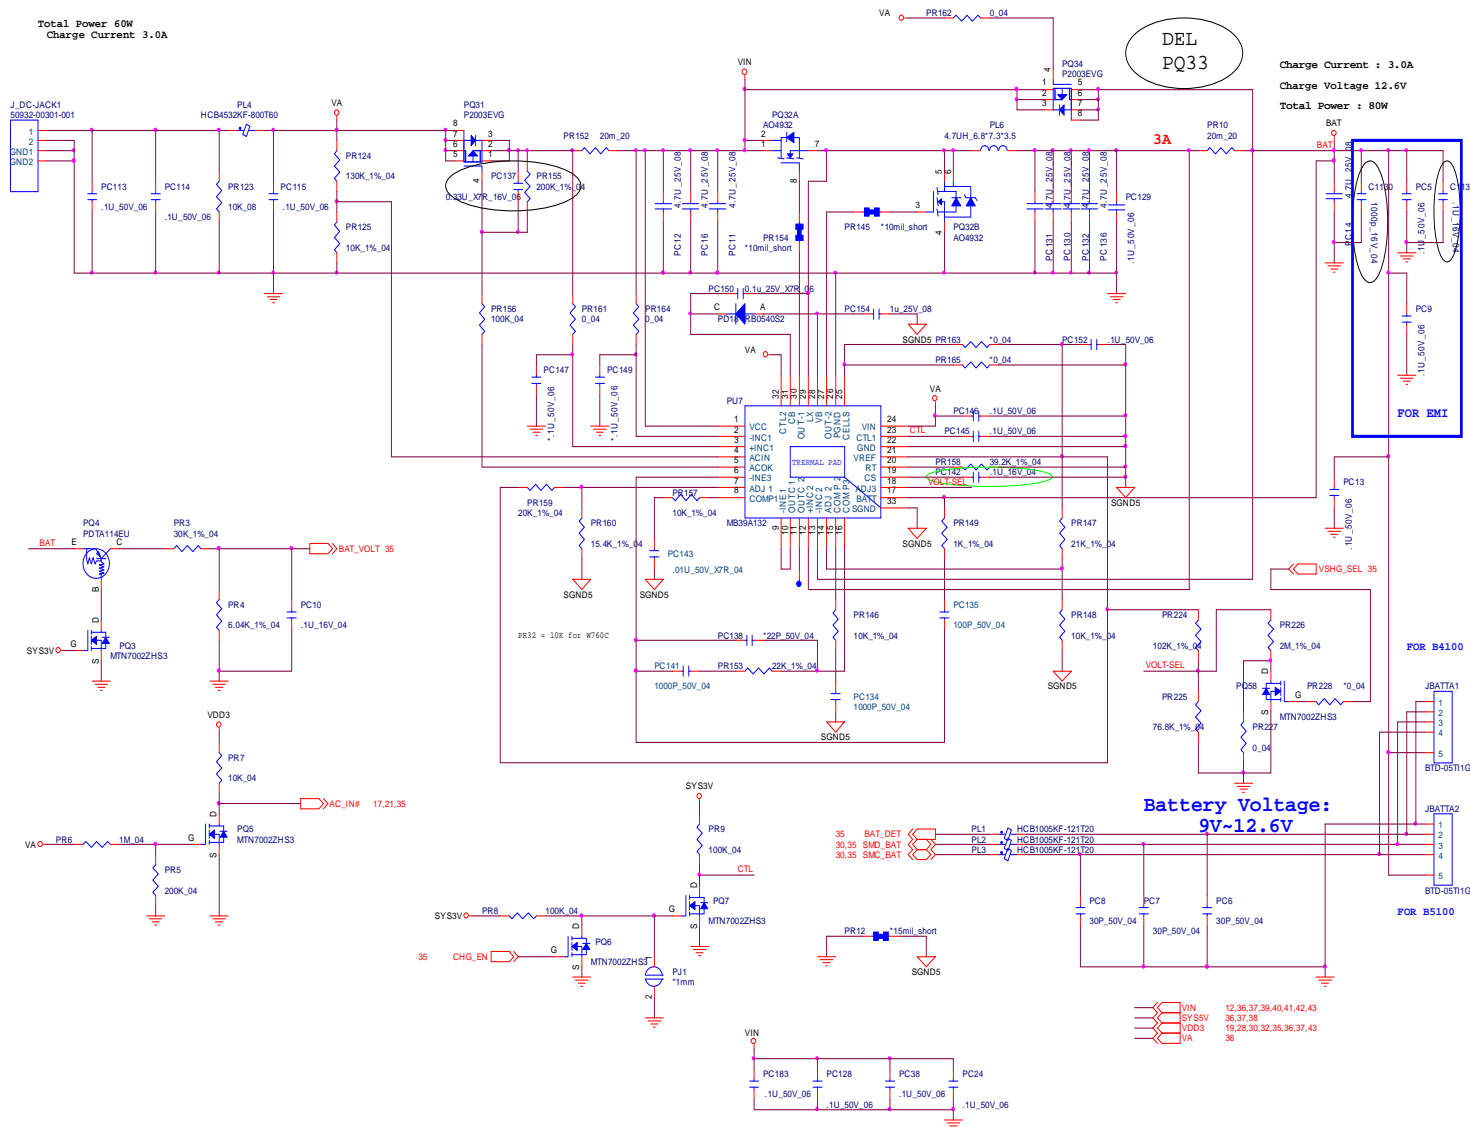


Schematic Diagrams

HDMI


HDMI CONNECTOR

2009/11/28\_alex

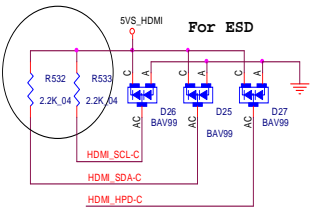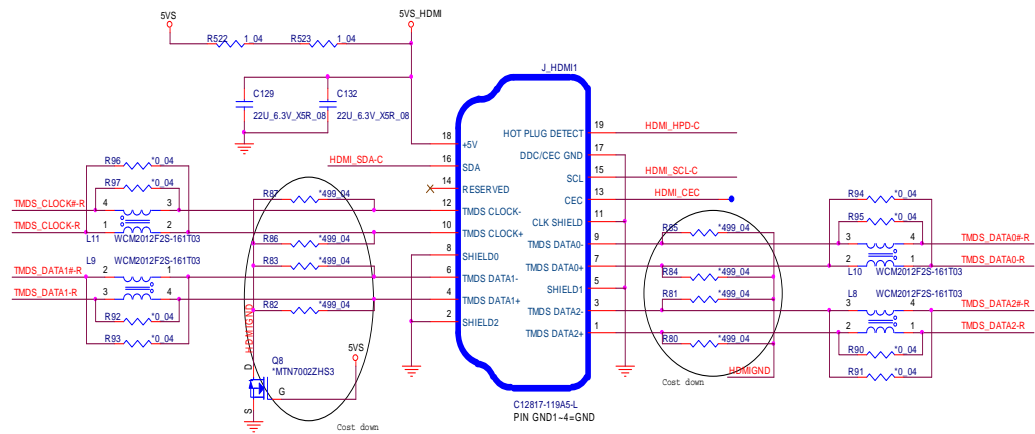

Sheet 45 of 49  
HDMI


FOR INTEL GRAPHIC

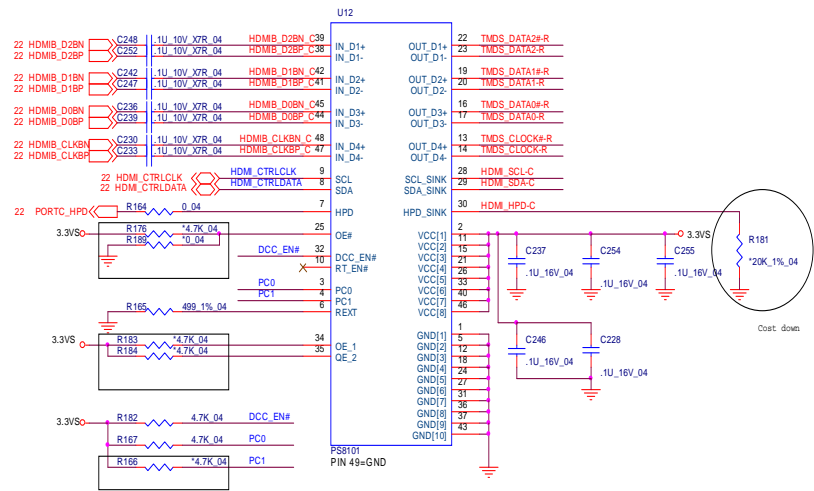

3.3VS 2,10,11,12,13,19,20,21,22,23,24,25,26,28,29,30,31,32,34,35,36,41,42  
5VS 12,19,22,25,26,30,32,34,36,41,42




## RJ-11



The left diagram illustrates a USB-to-LVDS interface. It features a 5V supply connected to a 50 mil trace leading to a USB connector (AC13). The USB connector is connected to the VIN pin of an R19701-CPL. The VOUT pin of the R19701-CPL is connected to a 50 mil trace leading to a USB connector (AC17). The circuit also includes capacitors AC15, AC16, and AC17, and a 100V\_10V\_X7R\_D4 capacitor. The ground is connected to AGND.

The right diagram illustrates a USB-to-TTL interface. It features a USB connector (AC11) connected to a USB-to-UART bridge (HCB1608KF-121T25). The bridge is connected to a 60 mil trace leading to a USB connector (AC3). The circuit also includes capacitors AC11, AC3, and C10770-104A3, and a 100V\_6.3V\_B2 capacitor. The ground is connected to AGND. The USB connector is connected to a USB-to-TTL bridge (AR6) and a USB-to-TTL bridge (AR7). The bridge is connected to a USB connector (AC3) and a USB connector (AC3).

Figure 1: Pin connections for the 87213-1600G. The diagram shows a 16-pin connector (AJ\_AUD1) connected to various components. Pin 16 is connected to A\_5V. Pin 15 is connected to AMIC1-R. Pin 14 is connected to AMIC1-L. Pin 13 is connected to AHEADPHONE-R. Pin 12 is connected to AHEADPHONE-L. Pin 11 is connected to ASPR\_HM. Pin 10 is connected to ASPP\_SENSE. Pin 9 is connected to ASPROUTER\_R. Pin 8 is connected to ASPROUTER\_L. Pin 7 is connected to AUSB\_PN6. Pin 6 is connected to AUSB\_PP6. Pin 5 is connected to ASPPOF0. Pin 4 is connected to AGND. Pin 3 is connected to AGND. Pin 2 is connected to AGND. Pin 1 is connected to AGND. The connector is labeled 87213-1600G.

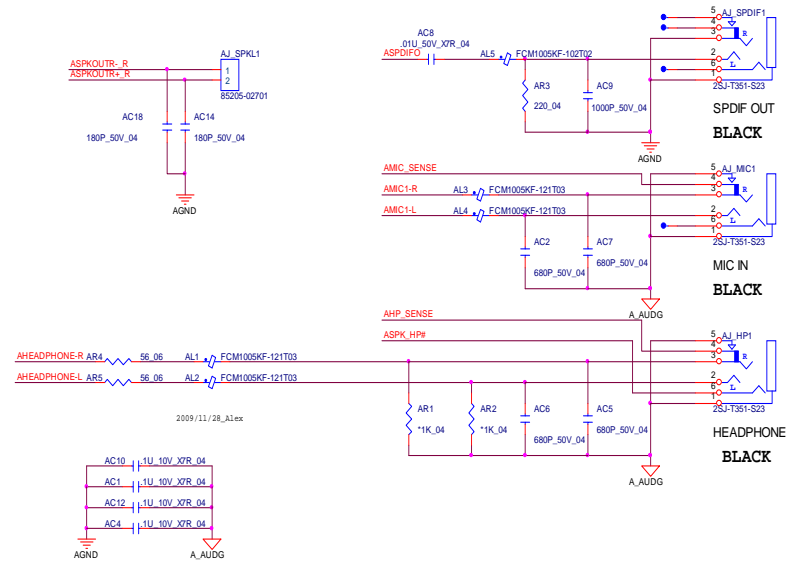


## B.Schematic Diagrams





Pin connection diagram for FCJ\_FP1:

- Pin 1: FC3.3V
- Pin 2: FCUSB\_PN10
- Pin 3: FCUSB\_PP10
- Pin 4: FCGND

**Sheet 47 of 49**  
**B4100 Fingerprint**  
**Board**





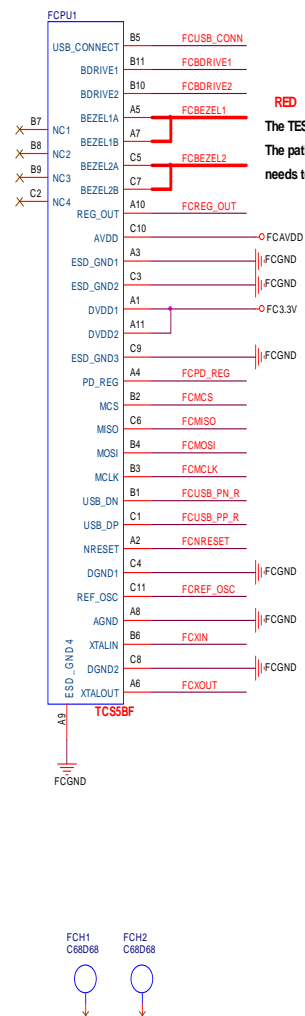


**RED**  
The TEST\_GND trace has to be wide ( $> 20\text{mil}$ )  
The path be marked in  
needs to be design to be short and at low impedance.

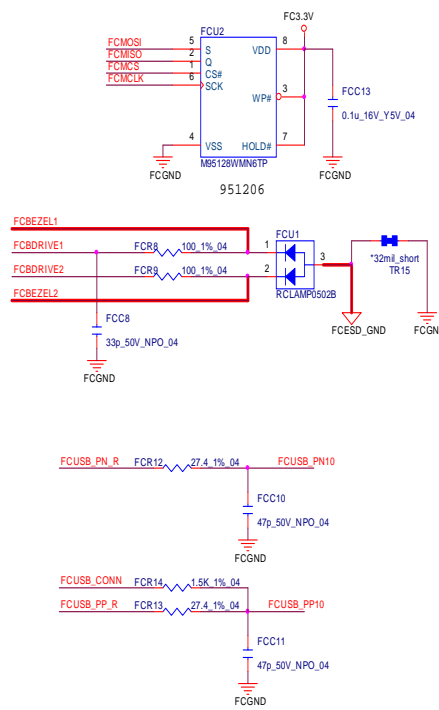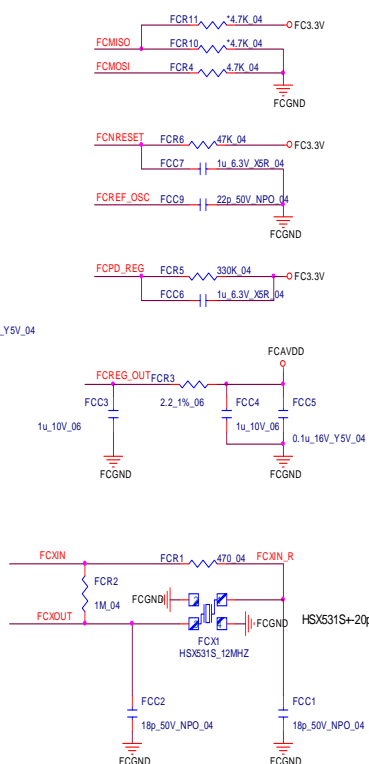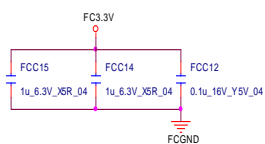

# B4100 Power Switch Board

## POWER SW & POWER LED

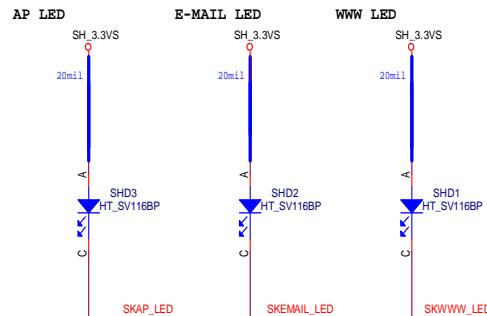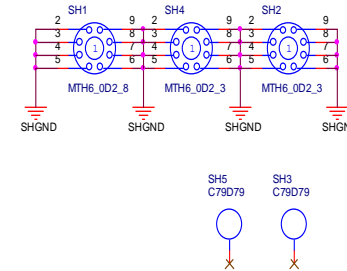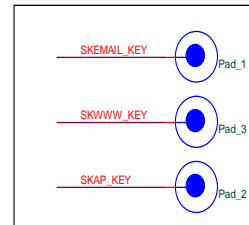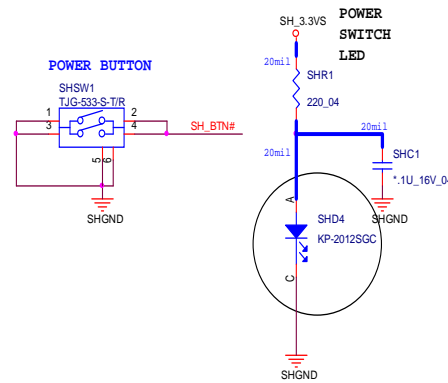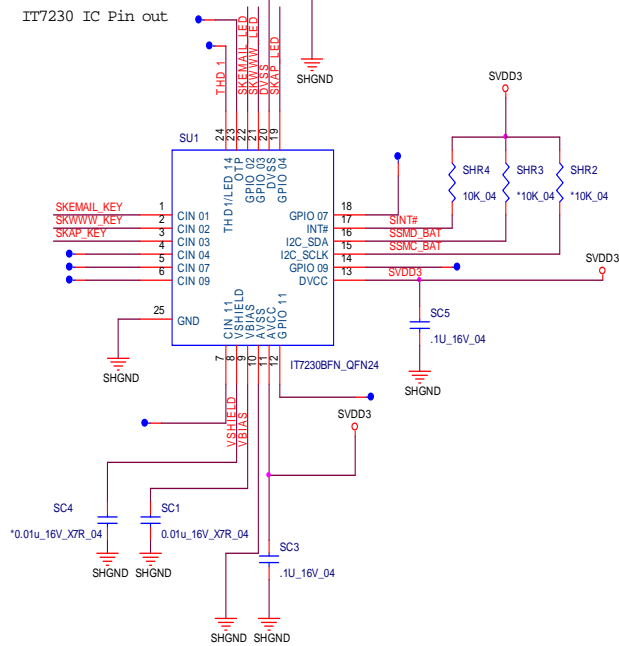


B4100M ONLY

LID SWITCH IC

Sheet 48 of 49  
B4100 Power  
Switch Board

Sequence

B 4 1 0 0 D 0 1 P O W E R S E Q U E N C E

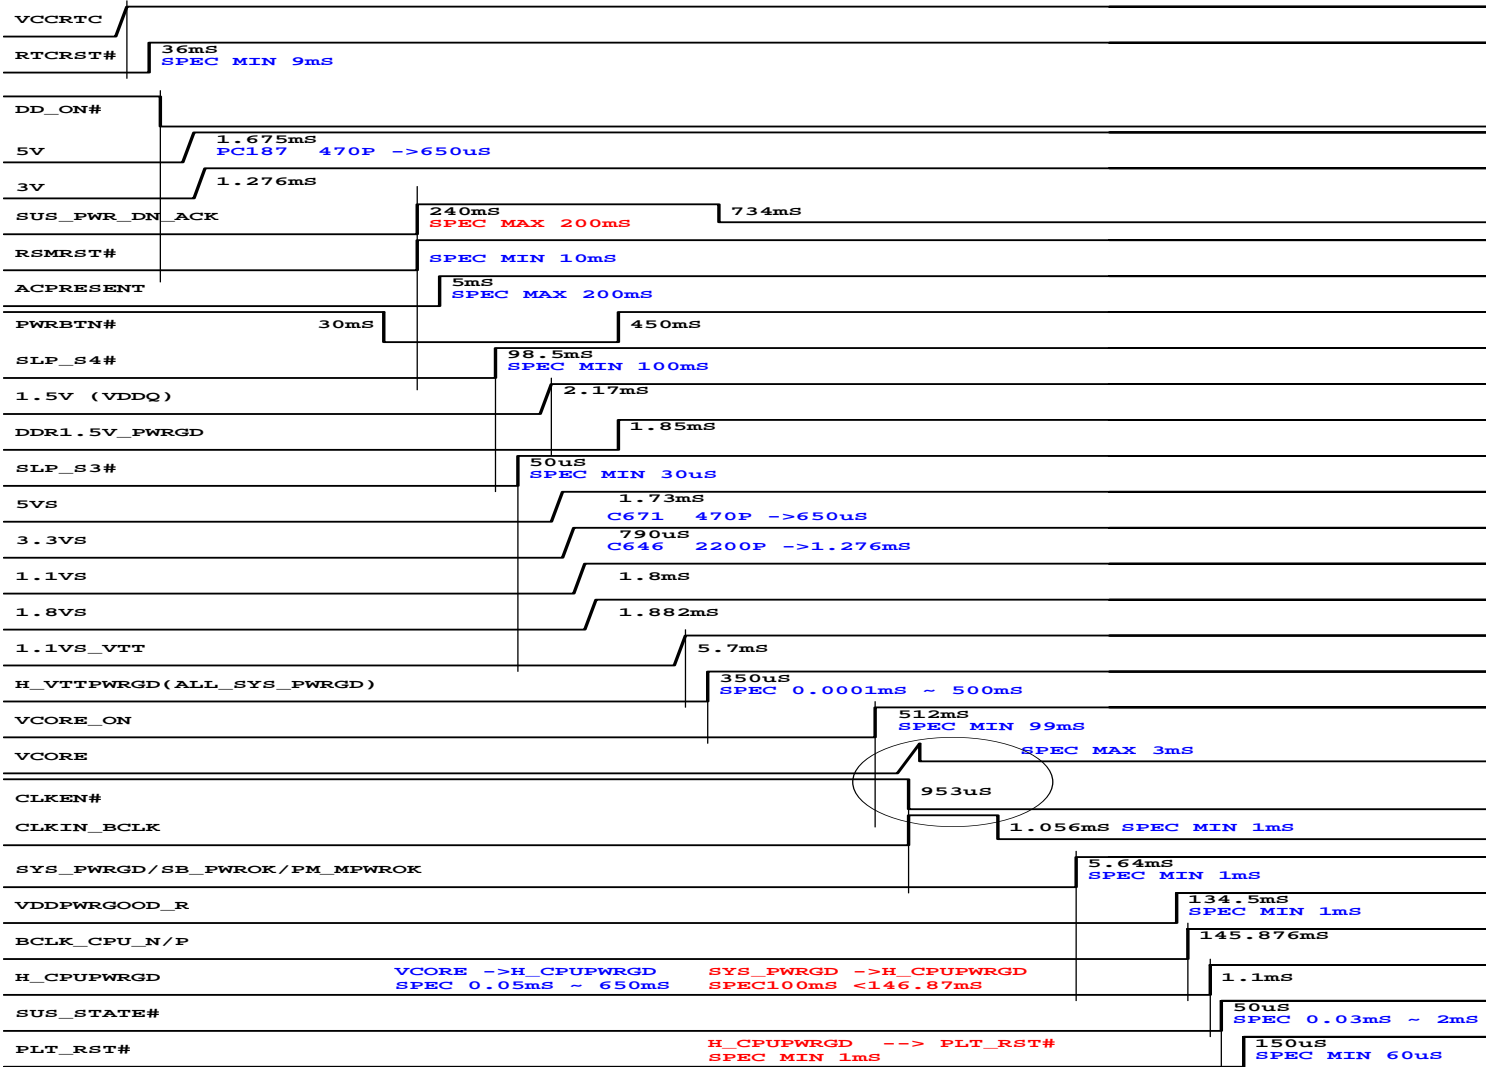

Sheet 49 of 49  
Sequence

# Appendix C: Updating the FLASH ROM BIOS

## To update the FLASH ROM BIOS you must:

- Download the BIOS update from the web site.
- Unzip the files onto a bootable CD/DVD/USB Flash Drive.
- Reboot your computer from an external CD/DVD/USB Flash Drive.
- Use the flash tools to update the flash BIOS using the commands indicated below.
- Restart the computer booting from the HDD and press **F2** at startup enter the BIOS.
- Load setup defaults from the BIOS and save the default settings and exit the BIOS to restart the computer.
- After rebooting the computer you may restart the computer again and make any required changes to the default BIOS settings.

## Download the BIOS

1. Go to [www.clevo.com.tw](http://www.clevo.com.tw) and point to **E-Services** and click **E-Channel**.
2. Use your user ID and password to access the appropriate download area (BIOS), and download the latest BIOS files (the BIOS file will be contained in a batch file that may be run directly once unzipped) for your computer model (see sidebar for important information on BIOS versions).

## Unzip the downloaded files to a bootable CD/DVD/ or USB Flash drive

1. Insert a bootable CD/DVD/USB flash drive into the CD/DVD drive/USB port of the computer containing the downloaded files.
2. Use a tool such as Winzip or Winrar to unzip all the BIOS files and refresh tools to your bootable CD/DVD/USB flash drive (you may need to create a bootable CD/DVD with the files using a 3rd party software).

## Set the computer to boot from the external drive

1. With the bootable CD/DVD/USB flash drive containing the BIOS files in your CD/DVD drive/USB port, restart the computer and press **F2** (in most cases) to enter the BIOS.
2. Use the arrow keys to highlight the **Boot** menu.
3. Use the “+” and “-” keys to move boot devices up and down the priority order.
4. Make sure that the CD/DVD drive/USB flash drive is set first in the boot priority of the BIOS.
5. Press **F10** to save any changes you have made and exit the BIOS to restart the computer.



### BIOS Version

Make sure you download the latest correct version of the BIOS appropriate for the computer model you are working on.

**You should only download BIOS versions that are V1.01.XX or higher as appropriate for your computer model.**

Note that BIOS versions are not backward compatible and therefore **you may not downgrade your BIOS to an older version** after upgrading to a later version (e.g if you upgrade a BIOS to ver 1.01.05, you **MAY NOT** then go back and flash the BIOS to ver 1.01.04).

## BIOS Update

---

### Use the flash tools to update the BIOS

1. Make sure you are not loading any memory management programs such as HIMEM by holding the **F8** key as you see the message “**Starting MS-DOS**”. You will then be prompted to give “**Y**” or “**N**” responses to the programs being loaded by DOS. Choose “**N**” for any memory management programs.
2. You should now be at the DOS prompt e.g: `DISK C:\>` (C is the designated drive letter for the CD/DVD drive/USB flash drive).
3. **Type the following command** at the DOS prompt:

**C:\> Flash.bat**

4. The utility will then proceed to flash the BIOS.
5. You should then be prompted to press any key to restart the system or turn the power off, and then on again but make sure you remove the CD/DVD/USB flash drive from the CD/DVD drive/USB port before the computer restarts.

### Restart the computer (booting from the HDD)

1. With the CD/DVD/USB flash drive removed from the CD/DVD drive/USB port the computer should restart from the HDD.
2. Press **F2** as the computer restarts to enter the BIOS.
3. Use the arrow keys to highlight the **Exit** menu.
4. Select **Load Setup Defaults** (or press **F9**) and select “**Yes**” to confirm the selection.
5. Press **F10** to save any changes you have made and exit the BIOS to restart the computer.

### Your computer is now running normally with the updated BIOS

You may now enter the BIOS and make any changes you require to the default settings.