

SERVICE MANUAL

NH77DP / NH79DP

notebook



Vinafix.com

Notebook Computer
NH77DP / NH79DP
Service Manual

Vinafix.com

Notice

The company reserves the right to revise this publication or to change its contents without notice. Information contained herein is for reference only and does not constitute a commitment on the part of the manufacturer or any subsequent vendor. They assume no responsibility or liability for any errors or inaccuracies that may appear in this publication nor are they in anyway responsible for any loss or damage resulting from the use (or misuse) of this publication.

This publication and any accompanying software may not, in whole or in part, be reproduced, translated, transmitted or reduced to any machine readable form without prior consent from the vendor, manufacturer or creators of this publication, except for copies kept by the user for backup purposes.

Brand and product names mentioned in this publication may or may not be copyrights and/or registered trademarks of their respective companies. They are mentioned for identification purposes only and are not intended as an endorsement of that product or its manufacturer.

Version 1.0
January 2021

Vinafix.com

Trademarks

Intel and Intel Core are trademarks of Intel Corporation.

Windows[®] is a registered trademark of Microsoft Corporation.

Other brand and product names are trademarks and /or registered trademarks of their respective companies.



About this Manual

This manual is intended for service personnel who have completed sufficient training to undertake the maintenance and inspection of personal computers.

It is organized to allow you to look up basic information for servicing and/or upgrading components of the **NH77DP** / **NH79DP** series notebook PC.

The following information is included:

Chapter 1, Introduction, provides general information about the location of system elements and their specifications.
Chapter 2, Disassembly, provides step-by-step instructions for disassembling parts and subsystems and how to upgrade elements of the system.

Appendix A, Part Lists

Appendix B, Schematic Diagrams

Vinafix.com

Preface

IMPORTANT SAFETY INSTRUCTIONS

Follow basic safety precautions, including those listed below, to reduce the risk of fire, electric shock and injury to persons when using any electrical equipment:

1. Do not use this product near water, for example near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electrical shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
5. This product is intended to be supplied by a Listed Power Unit as follows:
 - AC Input of 100 - 240V, 50 - 60Hz, DC Output of 19.5V, 9.23A (**180** Watts) minimum AC/DC Adapter.

Vinafix.com

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference.

This device must accept any interference received, including interference that may cause undesired operation.


Instructions for Care and Operation

The notebook computer is quite rugged, but it can be damaged. To prevent this, follow these suggestions:


1. **Don't drop it, or expose it to shock.** If the computer falls, the case and the components could be damaged.



2. **Keep it dry, and don't overheat it.** Keep the computer and power supply away from any kind of heating element. This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.

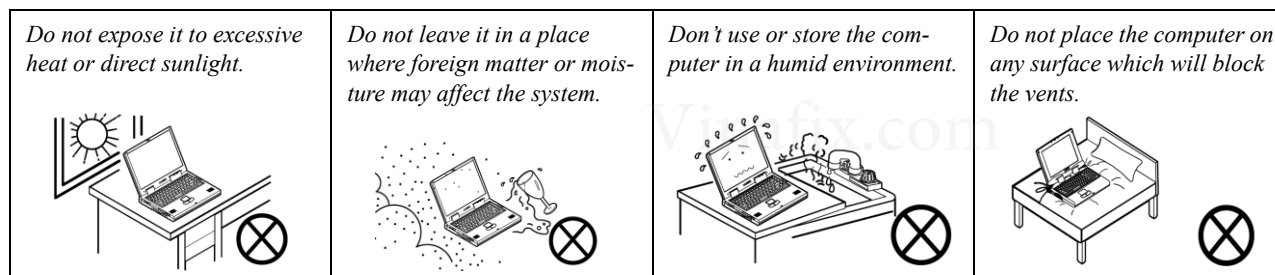


3. **Follow the proper working procedures for the computer.** Shut the computer down properly and don't forget to save your work. Remember to periodically save your data as data may be lost if the battery is depleted.

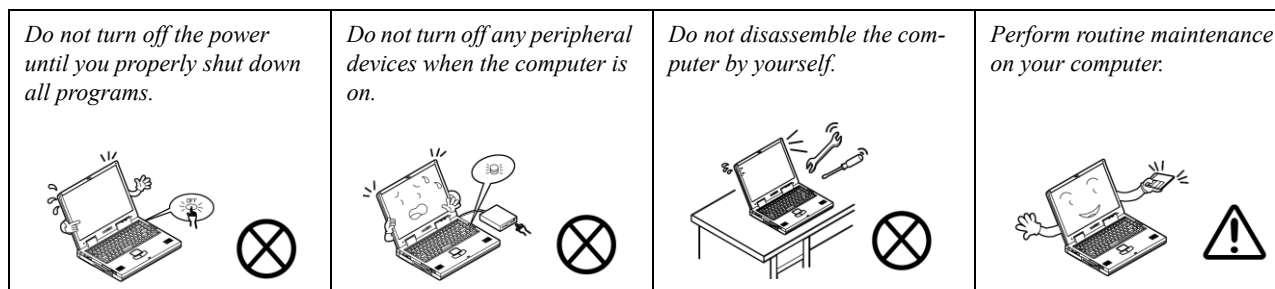

Preface


4. **Avoid interference.** Keep the computer away from high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage your data.
5. **Take care when using peripheral devices.**

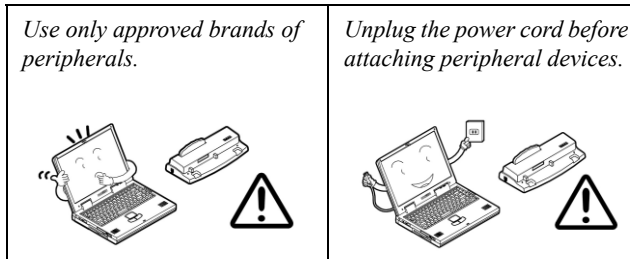

Power Safety

The computer has specific power requirements:

- Only use a power adapter approved for use with this computer.
- Your AC adapter may be designed for international travel but it still requires a steady, uninterrupted power supply. If you are unsure of your local power specifications, consult your service representative or local power company.
- The power adapter may have either a 2-prong or a 3-prong grounded plug. The third prong is an important safety feature; do not defeat its purpose. If you do not have access to a compatible outlet, have a qualified electrician install one.
- When you want to unplug the power cord, be sure to disconnect it by the plug head, not by its wire.
- Make sure the socket and any extension cord(s) you use can support the total current load of all the connected devices.
- Before cleaning the computer, make sure it is disconnected from any external power supplies.

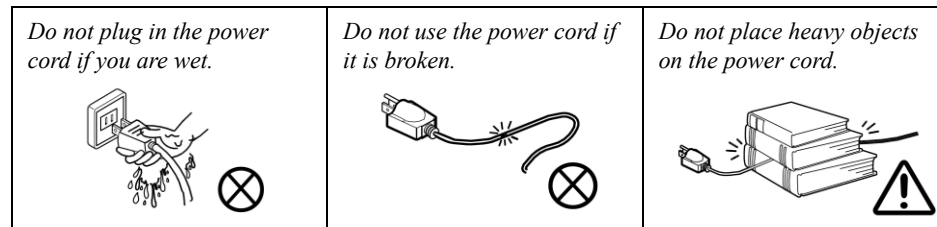

Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines and power cord). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

Battery Precautions

- Only use batteries designed for this computer. The wrong battery type may explode, leak or damage the computer.
- Do not continue to use a battery that has been dropped, or that appears damaged (e.g. bent or twisted) in any way. Even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire.
- Recharge the batteries using the notebook's system. Incorrect recharging may make the battery explode.
- Do not try to repair a battery pack. Refer any battery pack repair or replacement to your service representative or qualified service personnel.
- Keep children away from, and promptly dispose of a damaged battery. Always dispose of batteries carefully. Batteries may explode or leak if exposed to fire, or improperly handled or discarded.
- Keep the battery away from metal appliances.
- Affix tape to the battery contacts before disposing of the battery.
- Do not touch the battery contacts with your hands or metal objects.

Battery Guidelines

The following can also apply to any backup batteries you may have.

- If you do not use the battery for an extended period, then remove the battery from the computer for storage.
- Before removing the battery for storage charge it to 60% - 70%.
- Check stored batteries at least every 3 months and charge them to 60% - 70%.




Battery Disposal

The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

Caution

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.

Battery Level

Click the battery icon  in the taskbar to see the current battery level and charge status. A battery that drops below a level of 10% will not allow the computer to boot up. Make sure that any battery that drops below 10% is recharged within one week.

Related Documents

You may also need to consult the following manual for additional information:

User's Manual on CD/DVD

This describes the notebook PC's features and the procedures for operating the computer and its ROM-based setup program. It also describes the installation and operation of the utility programs provided with the notebook PC.

System Startup

1. Remove all packing materials.
2. Place the computer on a stable surface.
3. Insert the battery and make sure it is locked in position.
4. Securely attach any peripherals you want to use with the computer (e.g. keyboard and mouse) to their ports.
5. **When first setting up the computer use the following procedure** (as to safeguard the computer during shipping, the battery will be locked to not power the system until first connected to the AC/DC adapter and initially set up as below):
 - Attach the AC/DC adapter cord to the DC-In jack on the rear of the computer, then plug the AC power cord into an outlet, and connect the AC power cord to the AC/DC adapter. The battery will now be unlocked.
6. Use one hand to raise the lid/LCD to a comfortable viewing angle (do not exceed 130 degrees); use the other hand (as illustrated in Figure 1) to support the base of the computer (**Note: Never** lift the computer by the lid/LCD).
7. Press the power button to turn the computer "on".

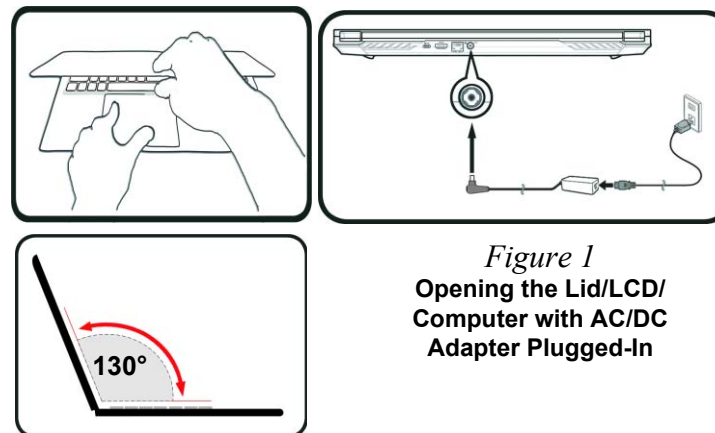



Figure 1
Opening the Lid/LCD/
Computer with AC/DC
Adapter Plugged-In


Shut Down

Note that you should always shut your computer down by choosing the **Shut down** command in **Windows** (see below). This will help prevent hard disk or system problems.

Click the icon  in the **Start Screen** and choose **Shut down** from the menu.



Or

Right-click the **Start button**  at the bottom of the **Start Screen** or the **Desktop** and choose **Shut down or sign out** > **Shut down** from the context menu.

Contents

Introduction1-1

Overview	1-1
Specifications	1-2
External Locator - Top View with LCD Panel Open	1-4
External Locator - Front & Right Side Views	1-5
External Locator - Left Side & Rear View	1-6
External Locator - Bottom View	1-7
Mainboard Overview - Top (Key Parts)	1-8
Mainboard Overview - Bottom (Key Parts)	1-9
Mainboard Overview - Top (Connectors)	1-10
Mainboard Overview - Bottom (Connectors)	1-11

Disassembly2-1

Overview	2-1
Maintenance Tools	2-2
Connections	2-2
Maintenance Precautions	2-3
Disassembly Steps	2-4
Removing the Battery	2-5
Removing the Keyboard	2-6
Removing the Hard Disk Drive	2-7
Removing the System Memory (RAM)	2-9
Removing the M.2 SSD Module	2-10
Removing the Wireless LAN Module	2-11
Wireless LAN, Combo Module Cables	2-12
Removing the CCD	2-13

Part ListsA-1

Part List Illustration Location	A-2
Top (NH77DPQ)	A-3
Top (NH79DPQ)	A-4

Bottom	A-5
Main Board	A-6
HDD	A-7
LCD (NH77DPQ)	A-8
LCD (NH79DPQ)	A-9

Schematic Diagrams.....B-1

System Block Diagram	B-2
Processor 1/6	B-3
Processor 2/6	B-4
Processor 3/6	B-5
Processor 4/6	B-6
Processor 5/6	B-7
Processor 6/6	B-8
DDR4 CHA SO-DIMM	B-9
DDR4 CHB SO-DIMM	B-10
VGA PCI Express	B-11
GPU Frame Buffer A/B	B-12
Frame Buffer A	B-13
Frame Buffer A	B-14
Frame Buffer B	B-15
Frame Buffer B	B-16
GPU Frame Buffer C/D	B-17
Frame Buffer C	B-18
Frame Buffer C	B-19
GPU GND	B-20
GPU NVVDD, FBVDDQ	B-21
GPU Decoupling 1	B-22
GPU Decoupling 2	B-23
Misc - GPIO, I2C and ROM	B-24
IFP I/O Interface	B-25

Preface


Straps and XTAL	B-26	VDD3, VDD5	B-58
NVIDIA Power Sequence	B-27	DDR 1.2V / 0.6VS, 2.5V	B-59
DGPU Power Measurement	B-28	VCC_Core, VCCGT, VCCSA	B-60
HDMI	B-29	VCore Output Stage	B-61
mDP	B-30	VCCGT & VCCSA Output Stage	B-62
Panel, Inverter	B-31	AC_In, Charger	B-63
PCH 1/9	B-32	NVVDD1	B-64
PCH 2/9	B-33	NVVDD2	B-65
PCH 3/9	B-34	PEX_VDD	B-66
PCH 4/9	B-35	FBVDDQ	B-67
PCH 5/9	B-36	1V8_AON, NV3V3, 1.5VS	B-68
PCH 6/9	B-37	Audio Board	B-69
PCH 7/9	B-38	Audio Board	B-70
PCH 8/9	B-39	Click Board	B-71
PCH 9/9	B-40	PW Board (NH50, 57)	B-72
M.2 PCIE 4X SSD	B-41	PW Board (NH55, 58)	B-73
M.2 WLAN+BT, PCIE 4X SSD	B-42	Hall Sensor, Power SW Board	B-74
USB Type-C	B-43	LED Board	B-75
PD Controller ANX7411	B-44		
Type-C	B-45		
USB Type-A	B-46		
Card Reader / LAN RTL8411B	B-47		
Audio Codec	B-48		
KBC-ITE IT5570	B-49		
RGB KB	B-50		
Per Key	B-51		
HDD, Click TP, Audio, FP	B-52		
LED, CCD, TPM, Fan	B-53		
LID, PWR SW Board	B-54		
5V, 5VS, 3.3V, 3.3VS, 3.3VA	B-55		
VCCST, STG, SFR_OC, 1.8VA	B-56		
VDD1.05V, VCCIO	B-57		

Chapter 1: Introduction

Overview

This manual covers the information you need to service or upgrade the **NH77DP / NH79DP** series notebook computer. Information about operating the computer (e.g. getting started, and the *Setup* utility) is in the *User's Manual*. Information about drivers (e.g. VGA & audio) is also found in the *User's Manual*. The manual is shipped with the computer.

Operating systems (e.g. *Windows 10*, etc.) have their own manuals as do application softwares (e.g. word processing and database programs). If you have questions about those programs, you should consult those manuals.

The **NH77DP / NH79DP** series notebook is designed to be upgradeable. See [Disassembly on page 2 - 1](#) for a detailed description of the upgrade procedures for each specific component. Please take note of the warning and safety information indicated by the “” symbol.

The balance of this chapter reviews the computer's technical specifications and features.

Introduction

Specifications



Latest Specification Information

The specifications listed here are correct at the time of sending them to the press. Certain items (particularly processor types/speeds) may be changed, delayed or updated due to the manufacturer's release schedule. Check with your service center for more details.



CPU

The CPU is not a user serviceable part. Accessing the CPU in any way may violate your warranty.

Processor Options

Intel® Core™ i7 Processor

i7-10870H (2.20GHz)

16MB Smart Cache, 14nm, DDR4-2933MHz, TDP 45W

i7-10750H (2.60GHz)

12MB Smart Cache, 14nm, DDR4-2933MHz, TDP 45W

Intel® Core™ i5 Processor

i5-10300H (2.50GHz)

8MB Smart Cache, 14nm, DDR4-2933MHz, TDP 45W

i5-10200H (2.40GHz)

8MB Smart Cache, 14nm, DDR4-2933MHz, TDP 45W

Core Logic

Mobile Intel® HM470 Express Chipset

BIOS

128Mb SPI Flash ROM

INSYDE BIOS

Memory

Dual Channel DDR4

Two 260 Pin SO-DIMM Sockets

Supporting up to **3200MHz DDR4** Memory

Memory Expandable up to **64GB**

Compatible with 8GB, 16GB or 32GB Modules

(The real memory operating frequency depends on the FSB of the processor.)

Storage

One changeable 2.5" **7.0mm (h)** **SATA** (Serial) Hard Disk Drive/Solid State Drive (SSD)

(Factory Option) One M.2 2280 **SATA** Solid State Drive (SSD)

Or

(Factory Option) Two PCIe Gen3 x4 M.2 2280 SSDs supporting RAID level 0/1

Audio

High Definition Audio Compliant Interface

Sound Blaster™ Cinema 6

Built-In Array Microphone

Two Speakers

LCD Options

17.3" (43.94cm), 16:9, FHD (1920x1080)

Video Adapter

Intel® Integrated GPU and NVIDIA® Discrete GPU

Supports Microsoft Hybrid Graphics

Intel Integrated GPU

Intel® UHD Graphics

Dynamic Frequency

Intel Dynamic Video Memory Technology

Microsoft DirectX®12 Compatible

NVIDIA® Discrete GPU

NVIDIA® GeForce RTX 3060 (GN20-E3)

6GB GDDR6 Video RAM on board

Microsoft DirectX® 12 Compatible

Security

Security (Kensington® Type) Lock Slot

BIOS Password

Intel® PTT for Systems Without TPM Hardware

(Factory Option) TPM 2.0

Keyboard

Full-size **Multi-Color** LED Keyboard (with Numeric Keypad)

Pointing Device

Built-in Touchpad (with Microsoft PTP Multi Gesture & Scrolling Functionality)

Card Reader

Embedded Multi-In-1 Card Reader
 MMC (MultiMedia Card) / RS MMC
 SD (Secure Digital) / Mini SD / SDHC/ SDXC

M.2 Slots

Slot 1 for **Combo WLAN and Bluetooth** Module
 Slot 2 for **SATA** or **PCIe Gen3 x4 SSD**
 Slot 3 for **PCIe Gen3 x4 SSD**

Interface

One USB 2.0 Port
 One USB 3.2 Gen 1 Type-A Port
 One USB 3.2 Gen 2 Type-A Port
 One DisplayPort 1.4 over USB 3.2 Gen 2 Type-C Port
 One Mini DisplayPort 1.2
 One HDMI-Out Port
 One Microphone-In Jack
 One 2- In-1 Audio Jack (Headphone and Microphone)
 One RJ-45 LAN Jack
 One DC-In Jack

Communication

Built-In 10/100/1000Mb Base-TX Ethernet LAN
 1.0M HD PC Camera Module

WLAN/ Bluetooth M.2 Modules:

(**Factory Option**) Intel® Dual Band Wi-Fi 6 AX200 Wireless LAN (**802.11ax**) + Bluetooth
 (**Factory Option**) Intel® Dual Band Wi-Fi 6 AX201 Wireless LAN (**802.11ax**) + Bluetooth
 (**Factory Option**) Intel® Dual Band Wi-Fi 6 AX210 Wireless LAN (**802.11ax**) + Bluetooth
 (**Factory Option**) Intel® Dual Band Wireless-AC 9462 Wireless LAN (**802.11ac**) + Bluetooth

Environmental Spec**Temperature**

Operating: 5°C - 35°C
 Non-Operating: -20°C - 60°C

Relative Humidity

Operating: 20% - 80%
 Non-Operating: 10% - 90%

Power

Removable 4 Cell Smart Lithium-Ion Battery Pack, 48.96WH

Full Range AC/DC Adapter
 AC Input: 100 - 240V, 50 - 60Hz
 DC Output: 19.5V, 9.23A (**180W**)

Dimensions & Weight


395.9mm (w) * 262mm (d) * 29.5mm (h)
2.5kg (Barebone with 48.96WH Battery)

Introduction

Figure 1
Top View

External Locator - Top View with LCD Panel Open

1. PC Camera
2. *Camera LED
**When the PC camera is in use, the LED will be illuminated.*
3. Built-In Array Microphone
4. Display
5. Power Button
6. Keyboard
7. Touchpad & Buttons

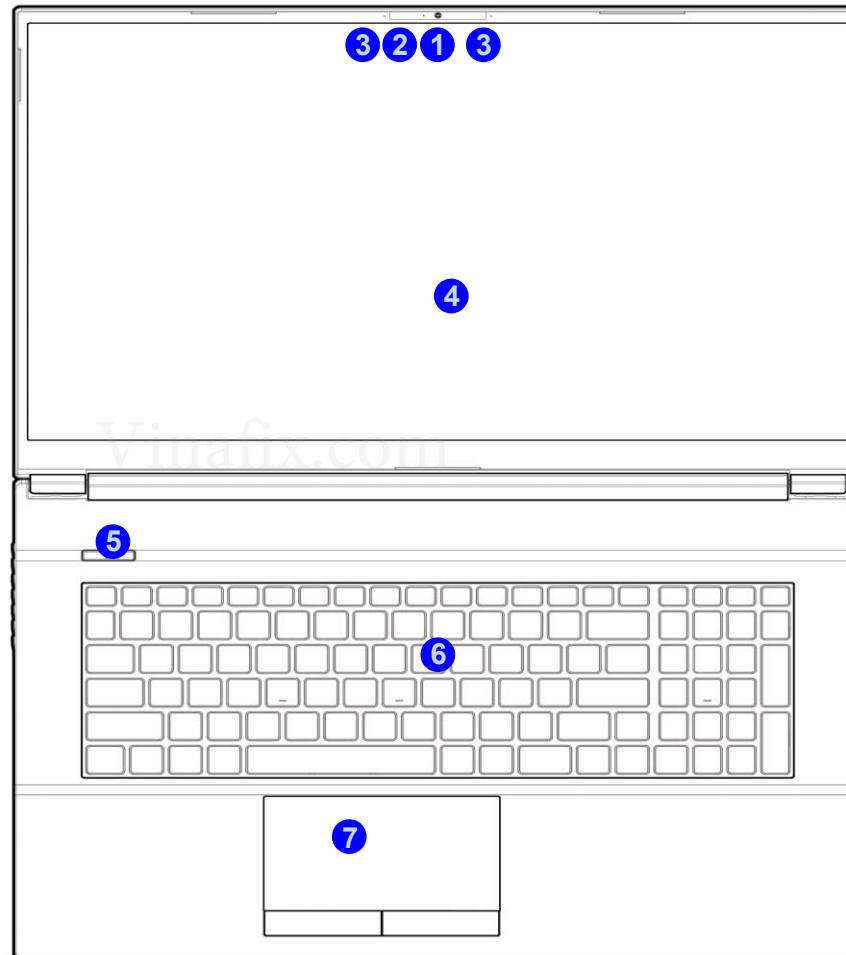

External Locator - Front & Right Side Views

Figure 2
Front View

1. LED Indicator

FRONT VIEW



Vinafix.com

RIGHT SIDE VIEW




Figure 3
Right Side View

1. USB 3.2 Gen 2 Type-A Port
2. Mini Display Port 1.2
3. Multi-in-1 Card Reader
4. Vent

Introduction


External Locator - Left Side & Rear View

Figure 4

Left Side View

1. Security Lock Slot
2. Vent
3. USB 3.2 Gen 1 Type-A Port
4. USB 2.0 Port
5. Microphone-In Jack
6. 2-In-1 Audio Jack (Headphone and Microphone)

LEFT SIDE VIEW



Vinafix.com

REAR VIEW



Figure 5


Rear View

1. Vent
2. Display Port 1.4 over USB 3.2 Gen 2 Type-C Port
3. HDMI-Out Port
4. RJ-45 LAN Jack
5. DC-In Jack

External Locator - Bottom View

Figure 6
Bottom View

1. Battery
2. Vent
3. Speakers

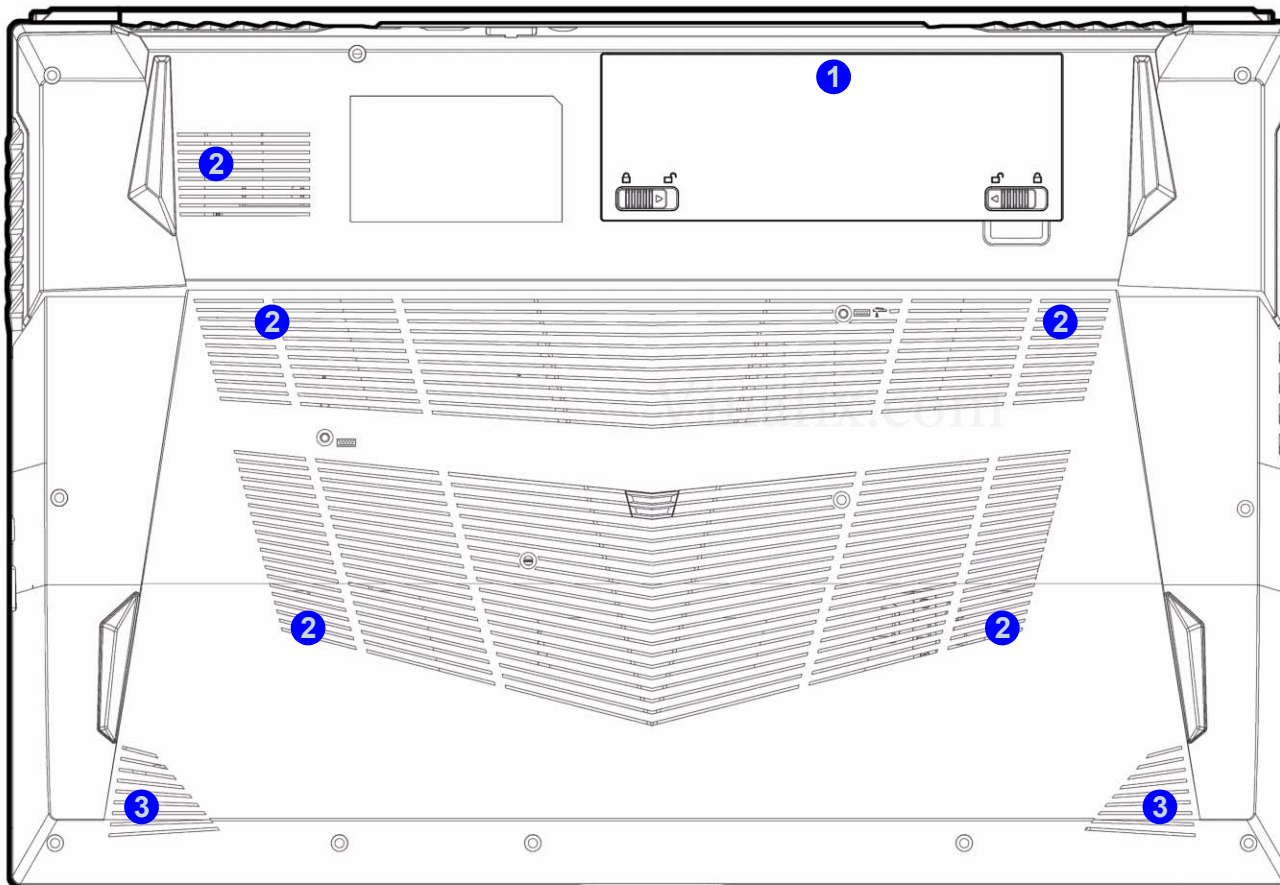


Overheating

To prevent your computer from overheating, make sure nothing blocks any vent while the computer is in use.

Figure 7
**Mainboard Top
Key Parts**

1. KBC-ITE IT5570

Mainboard Overview - Top (Key Parts)

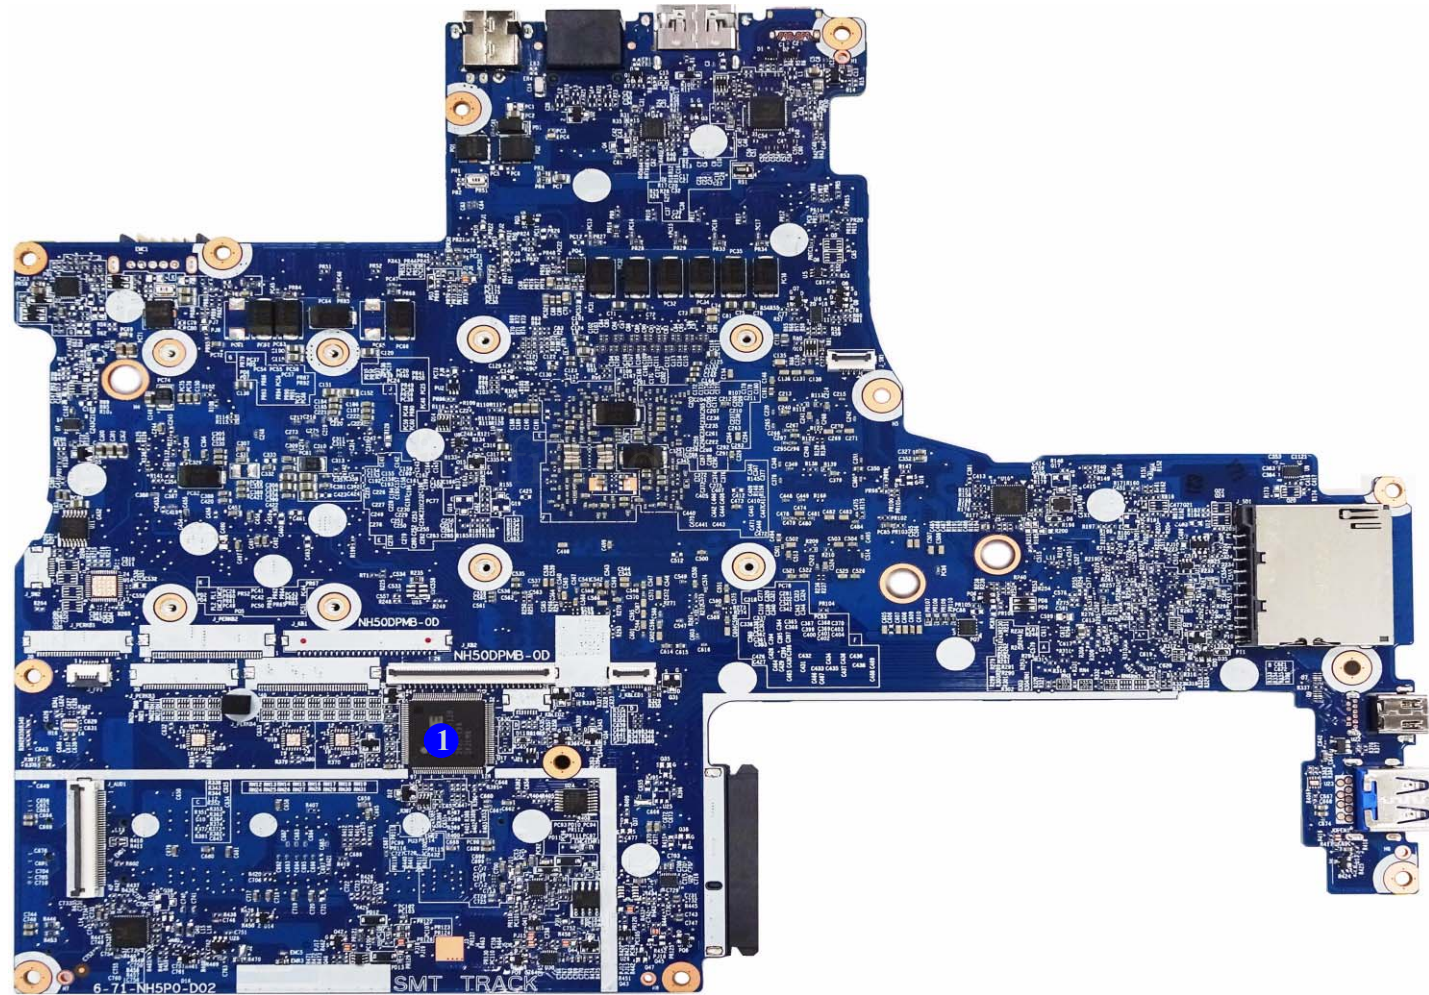

Mainboard Overview - Bottom (Key Parts)

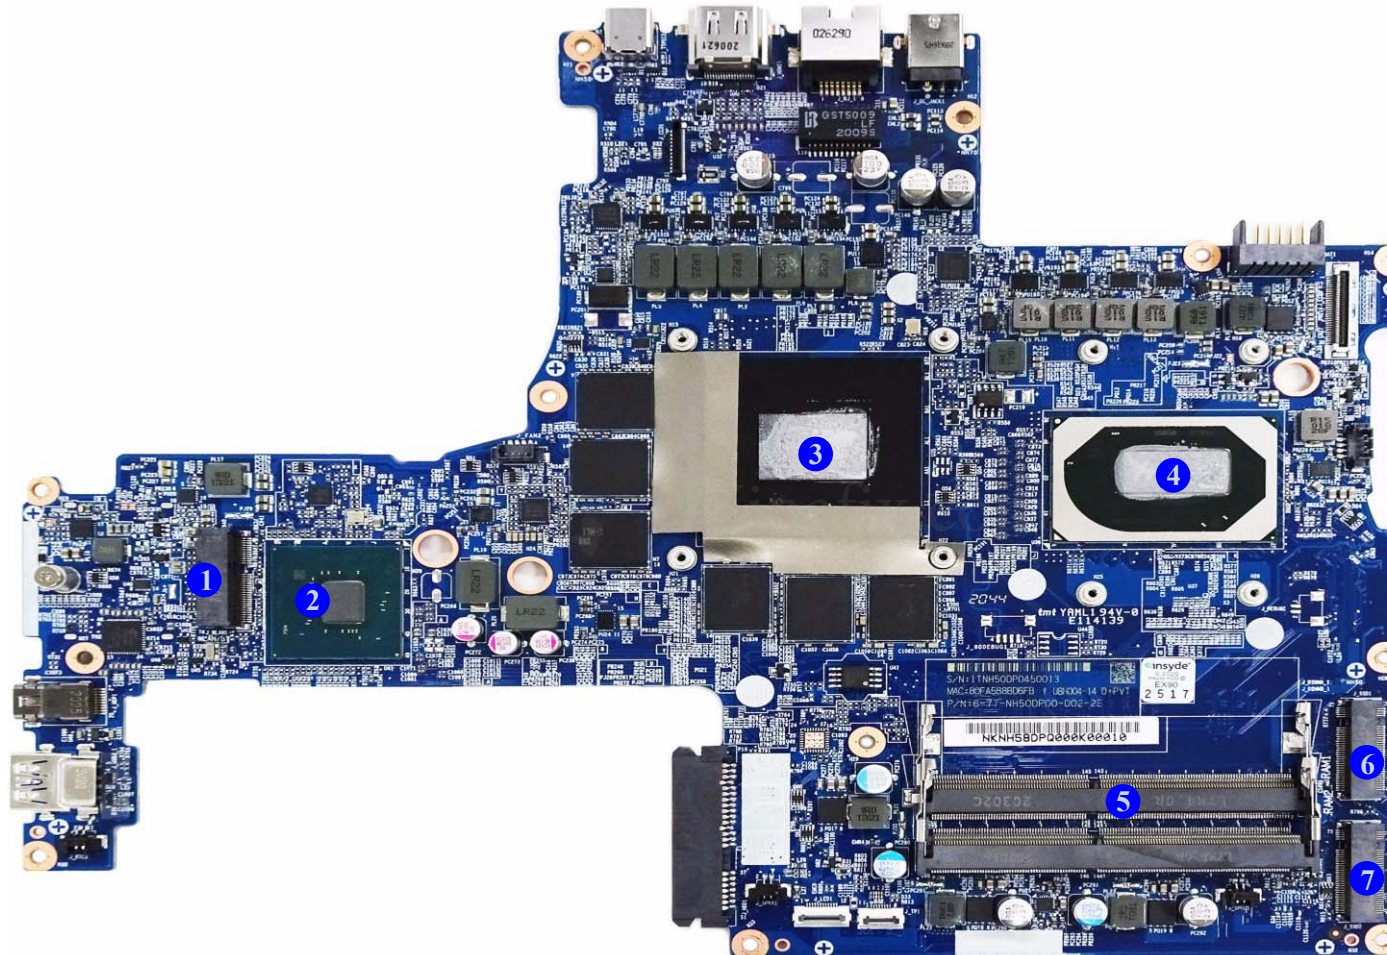


Figure 8
**Mainboard Bottom
Key Parts**


1. Mini-Card Connector (WLAN Module)
2. PCH
3. GPU
4. CPU
5. Memory Slots (DDR4 SO-DIMM)
6. M.2 Card Connector (SATA/PCIE SSD)
7. M.2 Card Connector (PCIE SSD only)

Introduction

Figure 9
**Mainboard Top
Connectors**

1. USB Connector
2. Keyboard Cable Connector
3. KB LED Connector
4. Multi-in-1 Card Reader
5. Mini Display Port
6. USB 3.2 Gen 2 Type-A Port

Mainboard Overview - Top (Connectors)

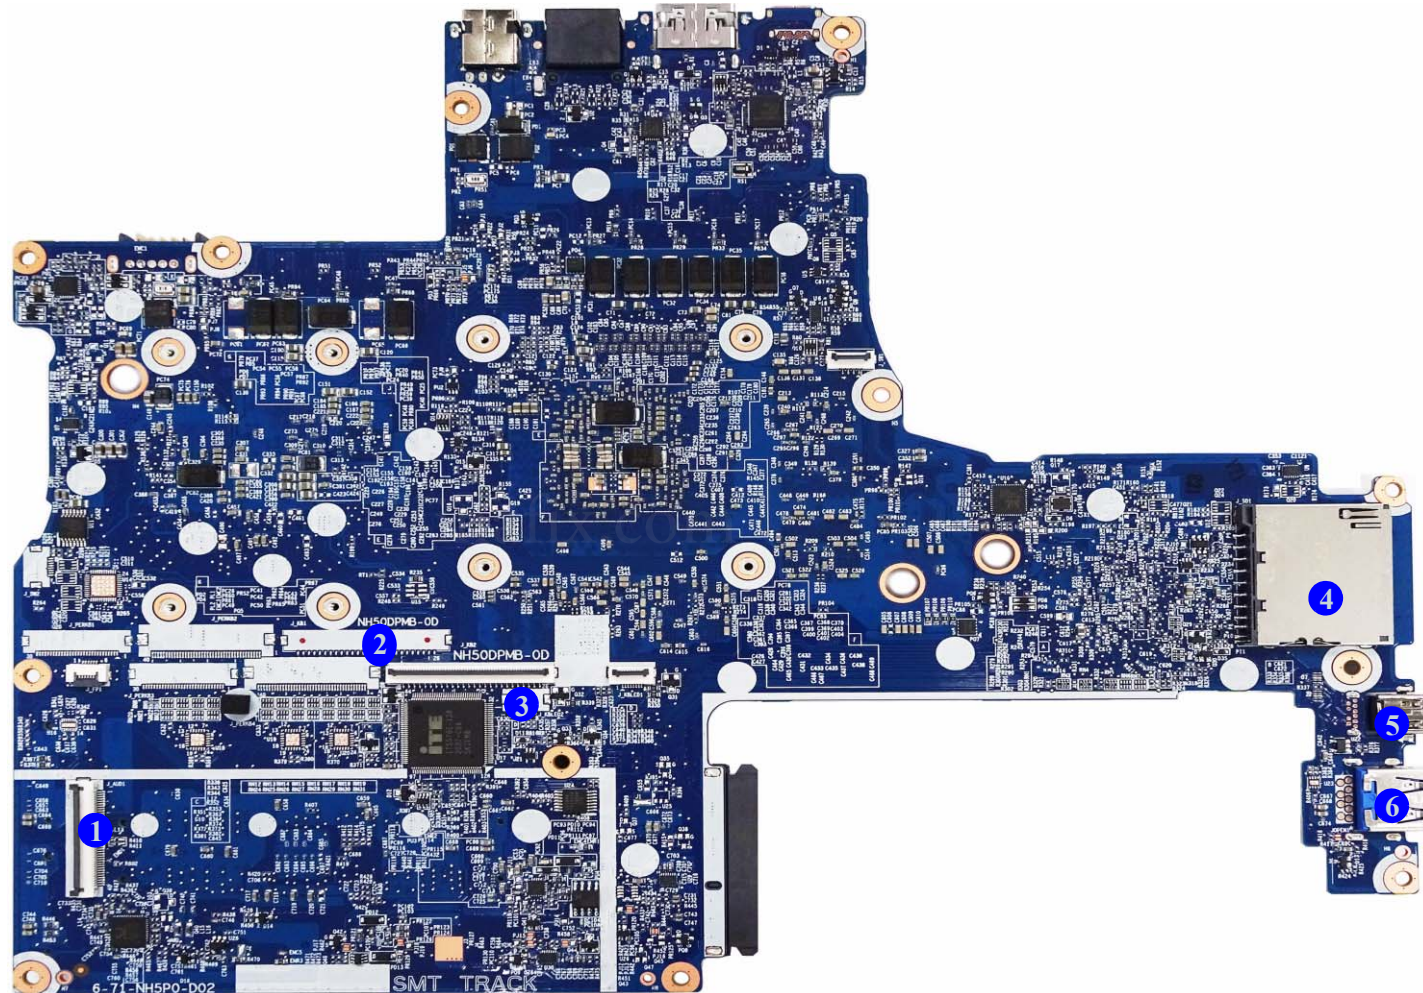

Mainboard Overview - Bottom (Connectors)

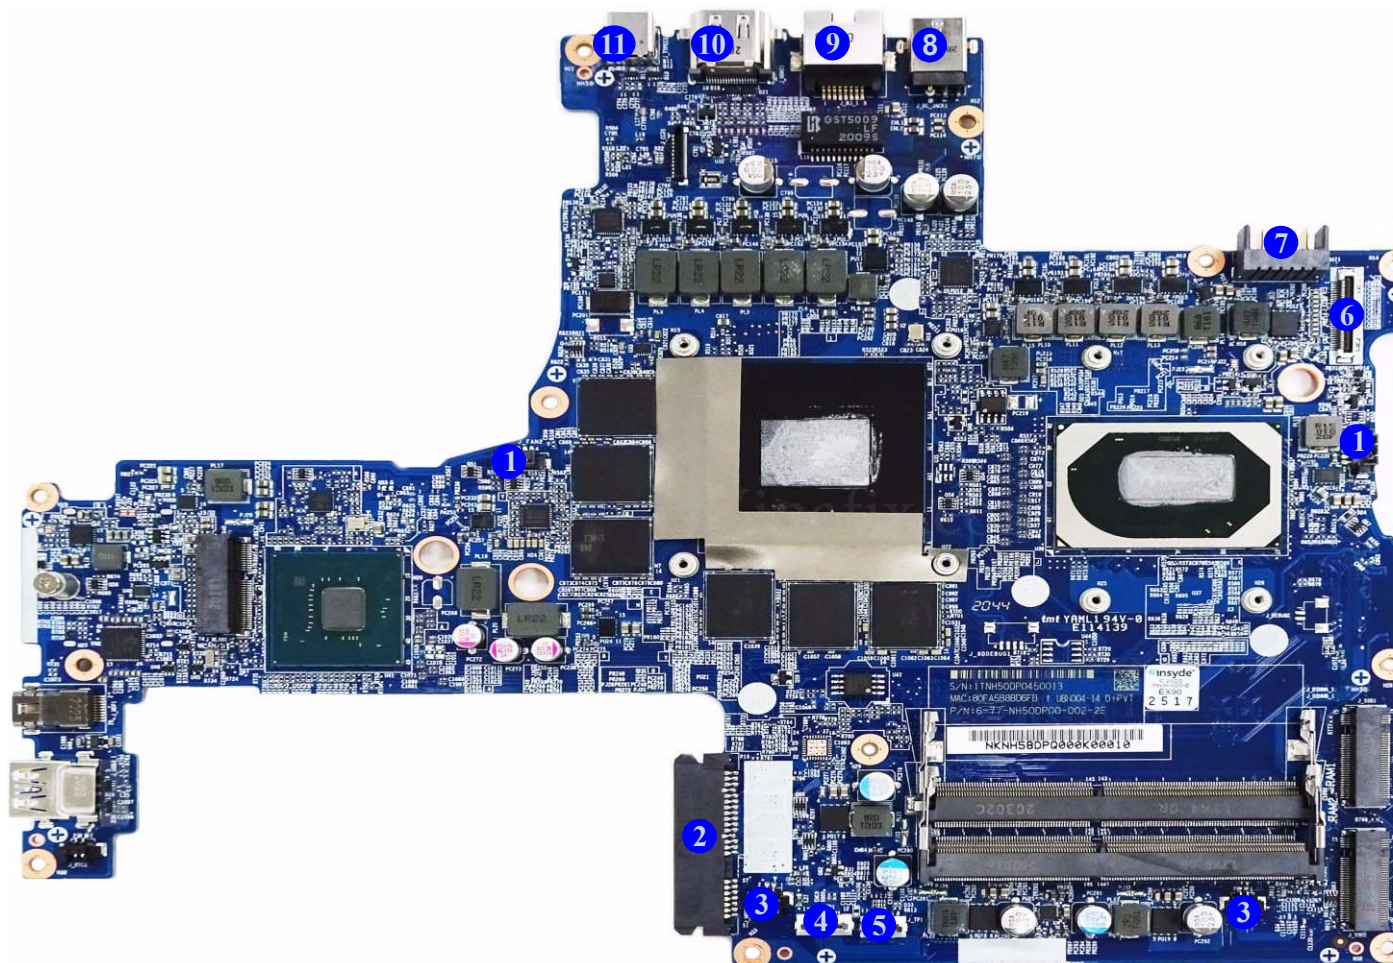


Figure 10
**Mainboard Bottom
Connectors**

1. Fan Connector
2. HDD Connector
3. Speaker Connector
4. LED Connector
5. Touchpad Connector
6. LCD Connector
7. Battery Connector
8. DC-In Jack
9. RJ-45 LAN Jack
10. HDMI-Out Port
11. Display Port 1.4 over USB 3.2 Gen 2 Type-C Port

Vinafix.com

Chapter 2: Disassembly



Disassembly


Note that for the disassembly of any key parts, **the bottom case must be properly closed before opening the upper part of the LCD** to avoid any damage caused by the nature of the structure.



Overview

This chapter provides step-by-step instructions for disassembling the **NH77DP / NH79DP** series notebook's parts and subsystems. When it comes to reassembly, reverse the procedures (unless otherwise indicated).

We suggest you completely review any procedure before you take the computer apart.

Procedures such as upgrading/replacing the RAM, optical device and hard disk are included in the User's Manual but are repeated here for your convenience.

To make the disassembly process easier each section may have a box in the page margin. Information contained under the figure # will give a synopsis of the sequence of procedures involved in the disassembly procedure. A box with a  lists the relevant parts you will have after the disassembly process is complete. **Note:** The parts listed will be for the disassembly procedure listed ONLY, and not any previous disassembly step(s) required. Refer to the part list for the previous disassembly procedure. The amount of screws you should be left with will be listed here also.

A box with a  will also provide any possible helpful information. A box with a  contains warnings.

An example of these types of boxes are shown in the sidebar.



Information



Warning

Disassembly

NOTE: All disassembly procedures assume that the system is turned **OFF**, and disconnected from any power supply (the battery is removed too).

Maintenance Tools

The following tools are recommended when working on the notebook PC:

- M3 Philips-head screwdriver
- M2.5 Philips-head screwdriver (magnetized)
- M2 Philips-head screwdriver
- Small flat-head screwdriver
- Pair of needle-nose pliers
- Anti-static wrist-strap



Connections

Connections within the computer are one of four types:

Locking collar sockets for ribbon connectors

To release these connectors, use a small flat-head screwdriver to gently pry the locking collar away from its base. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.

Pressure sockets for multi-wire connectors

To release this connector type, grasp it at its head and gently rock it from side to side as you pull it out. Do not pull on the wires themselves. When replacing the connection, do not try to force it. The socket only fits one way.

Pressure sockets for ribbon connectors

To release these connectors, use a small pair of needle-nose pliers to gently lift the connector away from its socket. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.

Board-to-board or multi-pin sockets

To separate the boards, gently rock them from side to side as you pull them apart. If the connection is very tight, use a small flat-head screwdriver - use just enough force to start.

Maintenance Precautions

The following precautions are a reminder. To avoid personal injury or damage to the computer while performing a removal and/or replacement job, take the following precautions:

1. **Don't drop it.** Perform your repairs and/or upgrades on a stable surface. If the computer falls, the case and other components could be damaged.
2. **Don't overheat it.** Note the proximity of any heating elements. Keep the computer out of direct sunlight.
3. **Avoid interference.** Note the proximity of any high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage components and/or data. You should also monitor the position of magnetized tools (i.e. screwdrivers).
4. **Keep it dry.** This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.
5. **Be careful with power.** Avoid accidental shocks, discharges or explosions.
 - Before removing or servicing any part from the computer, turn the computer off and detach any power supplies.
 - When you want to unplug the power cord or any cable/wire, be sure to disconnect it by the plug head. Do not pull on the wire.
6. **Peripherals** – Turn off and detach any peripherals.
7. **Beware of static discharge.** ICs, such as the CPU and main support chips, are vulnerable to static electricity. Before handling any part in the computer, discharge any static electricity inside the computer. When handling a printed circuit board, do not use gloves or other materials which allow static electricity buildup. We suggest that you use an anti-static wrist strap instead.
8. **Beware of corrosion.** As you perform your job, avoid touching any connector leads. Even the cleanest hands produce oils which can attract corrosive elements.
9. **Keep your work environment clean.** Tobacco smoke, dust or other air-born particulate matter is often attracted to charged surfaces, reducing performance.
10. **Keep track of the components.** When removing or replacing any part, be careful not to leave small parts, such as screws, loose inside the computer.

Cleaning

Do not apply cleaner directly to the computer, use a soft clean cloth.

Do not use volatile (petroleum distillates) or abrasive cleaners on any part of the computer.

(For Computer Models Supplied with Light Blue Cleaning Cloth) Some computer models in this series come supplied with a light blue cleaning cloth. To clean the computer case with this cloth follow the instructions below.

- Power off the computer and peripherals.
- Disconnect the AC/DC adapter from the computer.
- Use a little water to dampen the cloth slightly.
- Clean the computer case with the cloth.
- Dry the computer with a dry cloth, or allow it time to dry before turning on.
- Reconnect the AC/DC adapter and turn the computer on.



Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines and power cord). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

Disassembly Steps

The following table lists the disassembly steps, and on which page to find the related information. **PLEASE PERFORM THE DISASSEMBLY STEPS IN THE ORDER INDICATED.**

To remove the Battery:

1. Remove the battery *page 2 - 5*

To remove the Keyboard:

1. Remove the keyboard *page 2 - 6*

To remove the HDD:

1. Remove the battery *page 2 - 5*
2. Remove the HDD *page 2 - 7*

To remove the System Memory:

1. Remove the battery *page 2 - 5*
2. Remove the HDD *page 2 - 7*
3. Remove the system memory *page 2 - 9*

To remove the M.2 SSD:

1. Remove the battery *page 2 - 5*
2. Remove the HDD *page 2 - 7*
3. Remove the SSD *page 2 - 10*

To remove the Wireless LAN Module:

1. Remove the battery *page 2 - 5*
2. Remove the HDD *page 2 - 7*
3. Remove the WLAN *page 2 - 11*

To remove the CCD Module:

1. Remove the battery *page 2 - 5*
2. Remove the HDD *page 2 - 7*
3. Remove the CCD module *page 2 - 13*

Removing the Battery

1. Turn the computer **off**, and turn it over.
2. Slide the latch **1** in the direction of the arrow (*Figure 1a*).
3. Slide the latch **2** in the direction of the arrow.
4. While holding the latch **2**, lift the battery **3** (*Figure 1b*) out of the compartment (*Figure 1c*).

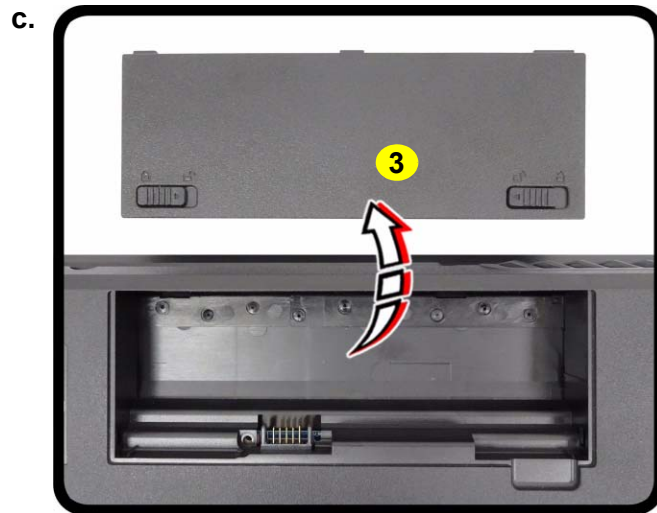


Figure 1
Battery Removal

- a. Slide the latch **1** in the direction of the arrow, and slide the latch **2** in the direction of the arrow.
- b. Lift the battery.
- c. Remove the battery.



3. Battery




Disassembly

Vinafix.com

Figure 2

Keyboard Removal

- a. Remove the screws from the bottom of the computer and then eject the keyboard using a special eject stick to push the keyboard out while releasing the keyboard as shown.
 - b. Lift the keyboard up and disconnect the keyboard ribbon cable from the locking collar socket.
 - c. Remove the keyboard.
1. Turn **off** the computer, turn it over.
 2. Remove screws **1** - **2** from the bottom of the computer.
 3. Open it up with the LCD on a flat surface before pressing at point **3** to release the keyboard module (use the special eject stick **4** to do this) while releasing the keyboard in the direction of the arrow **5** as shown (**Figure 2a**).
 4. Carefully lift the keyboard **6** up, being careful not to bend the keyboard ribbon cable **7**. Disconnect the keyboard ribbon cable **7** from the locking collar socket by using a flat-head screwdriver to pry the locking collar pins **8** away from the base (**Figure 2b**).
 5. Carefully lift the keyboard **6** off the computer (**Figure 2c**).

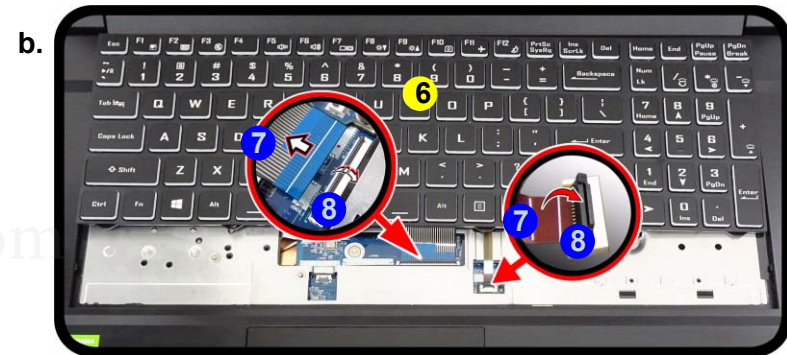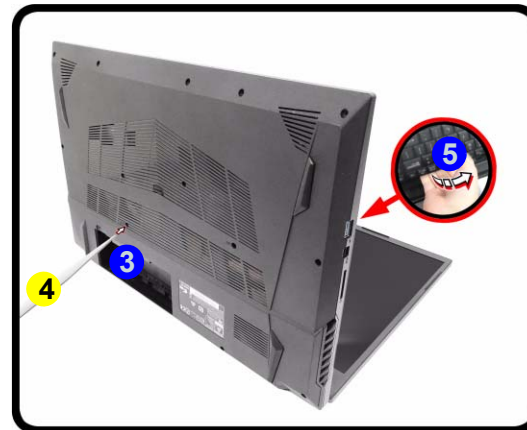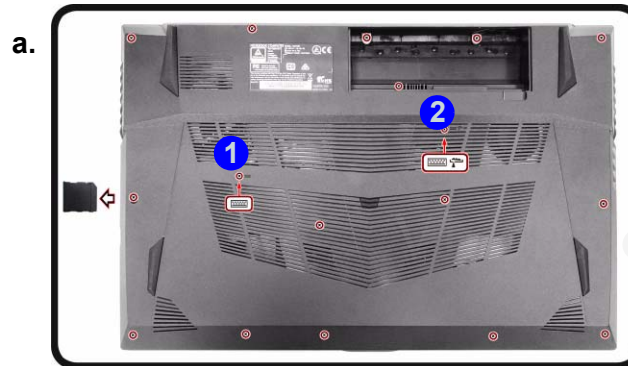

Re-inserting the Keyboard

When re-inserting the keyboard firstly, align the keyboard tabs at the bottom of the keyboard with the slots in the case.



4. Eject Stick
6. Keyboard

- 2 Screws

Removing the Hard Disk Drive


The hard disk drive can be taken out to accommodate other 2.5" serial (SATA) hard disk drives with a height of 7mm (h). Follow your operating system's installation instructions, and install all necessary drivers and utilities (as outlined in **Chapter 4 of the User's Manual**) when setting up a new hard disk.

Hard Disk Disassembly Process

1. Turn **off** the computer, and remove the battery ([page 2 - 5](#)).
2. Remove the SD card cover **1** and screws **2** - **16**. Note that screws **5** & **6** should be remove at a 30 degree angle as shown ([Figure 3a](#)).
3. Open it up with the LCD on a flat surface, release the bottom case **17** at point **18** - **19** and remove it ([Figure 3b](#)).
4. The HDD will be visible at point **20** on the mainboard ([Figure 3c](#)).

Figure 3
HDD Assembly Removal

- a. Remove the SD card cover and screws.
- b. Remove the bottom case.
- c. Locate the HDD.

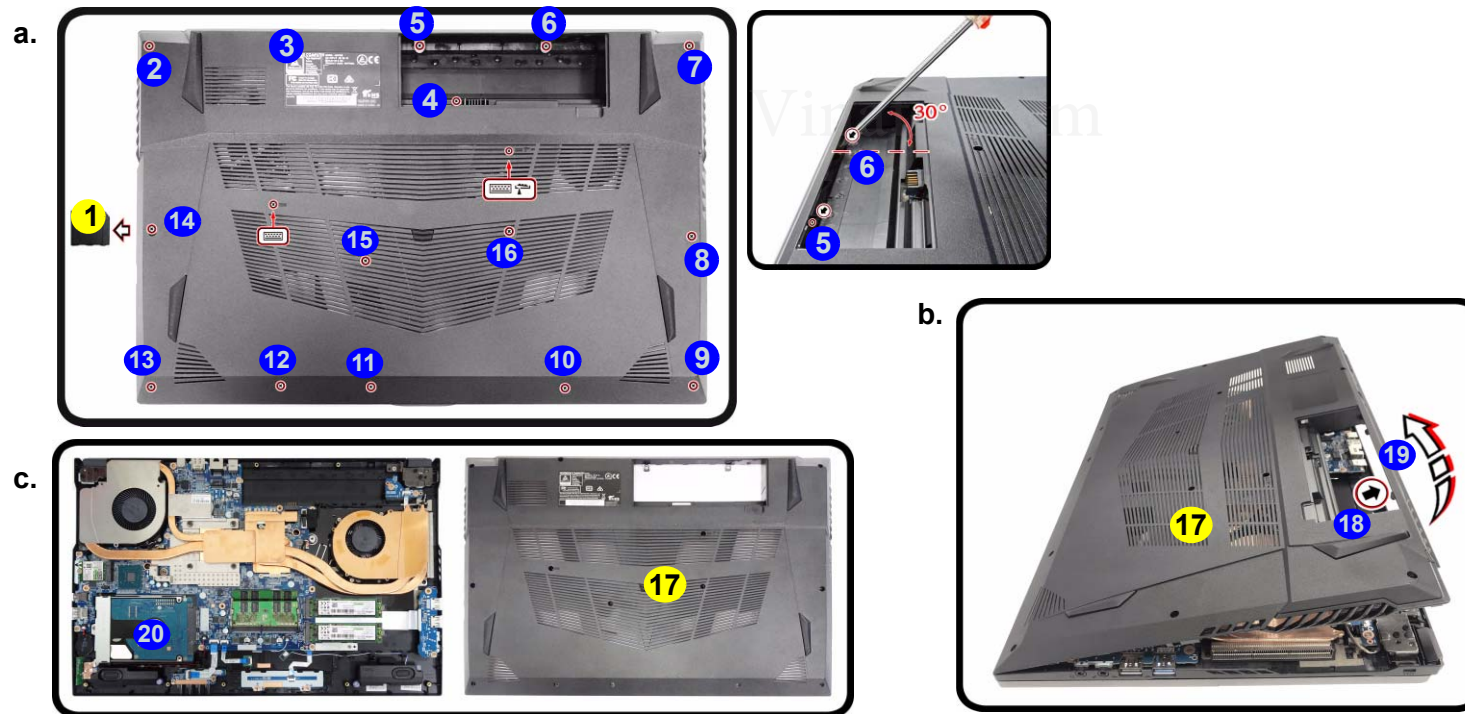


Disassembly

Figure 4
**HDD Assembly
Removal (cont'd.)**

- d. Remove the screw.
- e. Slightly lift and pull the HDD in the direction of the arrow.
- f. Lift the HDD assembly out of the bay.
- g. Remove the screws and bracket from the HDD.

5. Remove the screw **21** from the HDD assembly (*Figure 4d*).
6. Slightly lift and pull up the tab **22** out to release the hard disk assembly (*Figure 4e*).
7. Lift the hard disk assembly **23** out of the bay **24** (*Figure 4f*).
8. Remove screws **25** - **26** and bracket **27** from the hard disk **28** (*Figure 4g*).
9. Reverse the process to install a new hard disk (***make sure to properly press to seal all sides of the bottom case especially near the vent area*** and do not forget to replace the screws).


d.

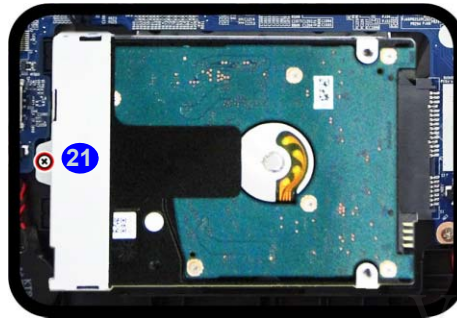


e.



f.

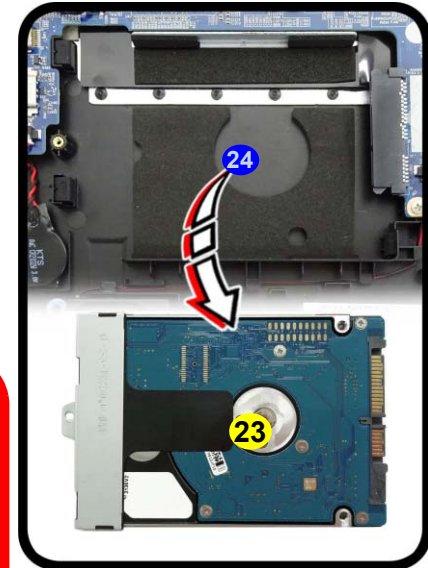

g.

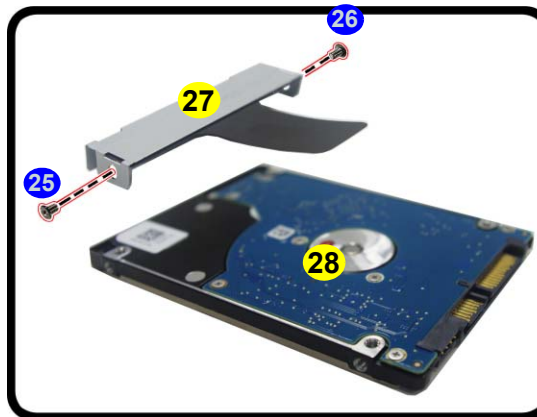

HDD System Warning

New HDD's are blank. Before you begin make sure:

You have backed up any data you want to keep from your old HDD.

You have all the CD-ROMs and FDDs required to install your operating system and programs.

If you have access to the internet, download the latest application and hardware driver updates for the operating system you plan to install. Copy these to a removable medium.



23. HDD Assembly
27. Bracket
28. HDD

- 3 Screws

Removing the System Memory (RAM)

The computer has two memory sockets for 260 pin Small Outline Dual In-line Memory Modules (SO-DIMM) supporting DDR4 up to 3200 MHz. The main memory can be expanded up to 32GB. The total memory size is automatically detected by the POST routine once you turn on your computer.

Memory Upgrade Process

1. Turn **off** the computer, turn it over, remove the battery ([page 2 - 5](#)).
2. The RAM modules will be visible at point **1** on the mainboard ([Figure 5a](#)).
3. Gently pull the two release latches (**2** & **3**) on the sides of the memory socket in the direction indicated by the arrows ([Figure 5b](#)). The RAM module **4** will pop-up ([Figure 5c](#)), and you can then remove it.
4. Pull the latches to release the second module if necessary.
5. Insert a new module (**for single module only** - make sure to install it in the top slot "J_DIMMB_1" as shown in [Figure 5c](#)) by holding it at about a 30° angle and fit the connectors firmly into the memory slot.
6. The module will only fit one way as defined by its pin alignment. Make sure the module is seated as far into the slot as it will go. **DO NOT FORCE IT**; it should fit without much pressure.
7. Press the module in and down towards the mainboard until the slot levers click into place to secure the module.
8. Replace the bottom cover and the screws (see [page 2 - 7](#)).
9. Restart the computer to allow the BIOS to register the new memory configuration as it starts up.

Figure 5
RAM Module Removal

- a. The RAM modules will be visible at point **1** on the mainboard.
- b. Pull the release latches.
- c. Remove the module.




Contact Warning

Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.



4. RAM Module

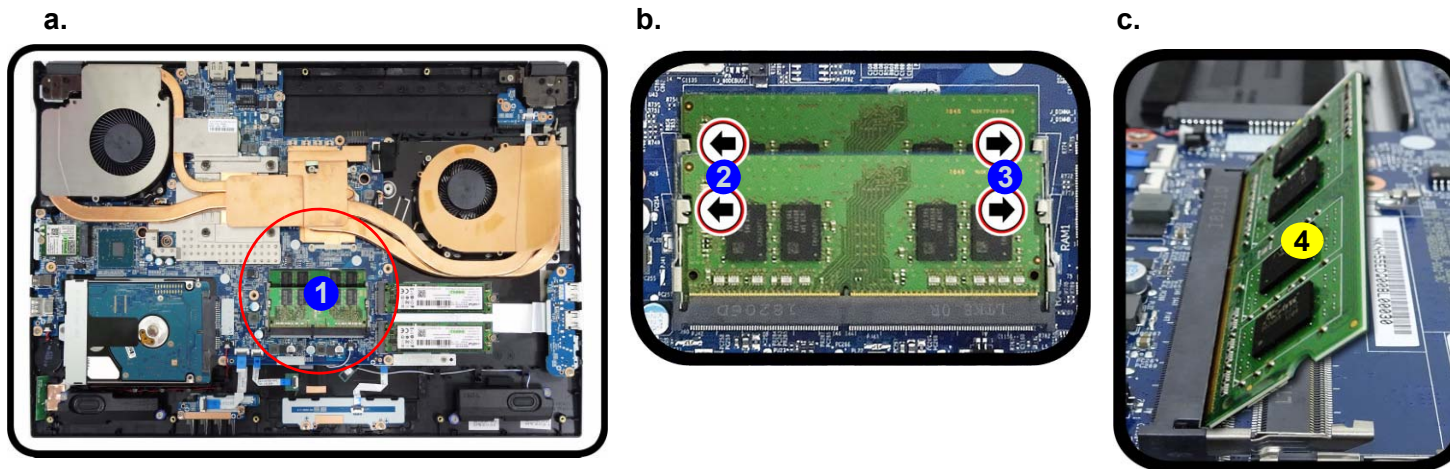

Disassembly



Figure 6
M.2 SSD Module Removal

- a. Locate the M.2 SSD.
- b. Remove the screw.
- c. The M.2 SSD module will pop up.

Removing the M.2 SSD Module

M.2 SSD Module Removal Procedure

1. Turn **off** the computer, turn it over, remove the battery ([page 2 - 5](#)).
2. The M.2 SSD module will be visible at point **1** on the mainboard ([Figure 6a](#)).
3. Remove the screw **2** ([Figure 6b](#)).
4. The M.2 SSD module **3** ([Figure 6c](#)) will pop-up, and you can remove it from the computer.

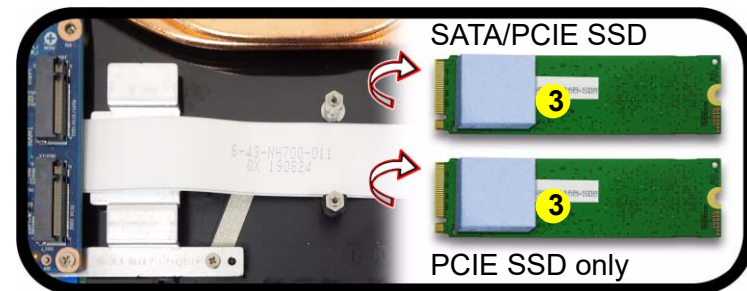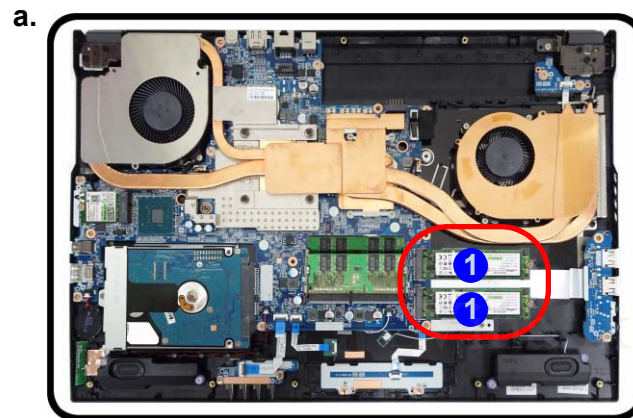

3.M2 SSD Module

- 1 Screw

Removing the Wireless LAN Module

1. Turn **off** the computer, turn it over, remove the battery ([page 2 - 5](#)).
2. The Wireless LAN module will be visible at point **1** on the mainboard ([Figure 7a](#)).
3. Carefully disconnect the cables **2** & **3**, and then remove the screw **4** ([Figure 7b](#)).
4. The Wireless LAN module **5** ([Figure 7c](#)) will pop-up, and you can remove it from the computer.

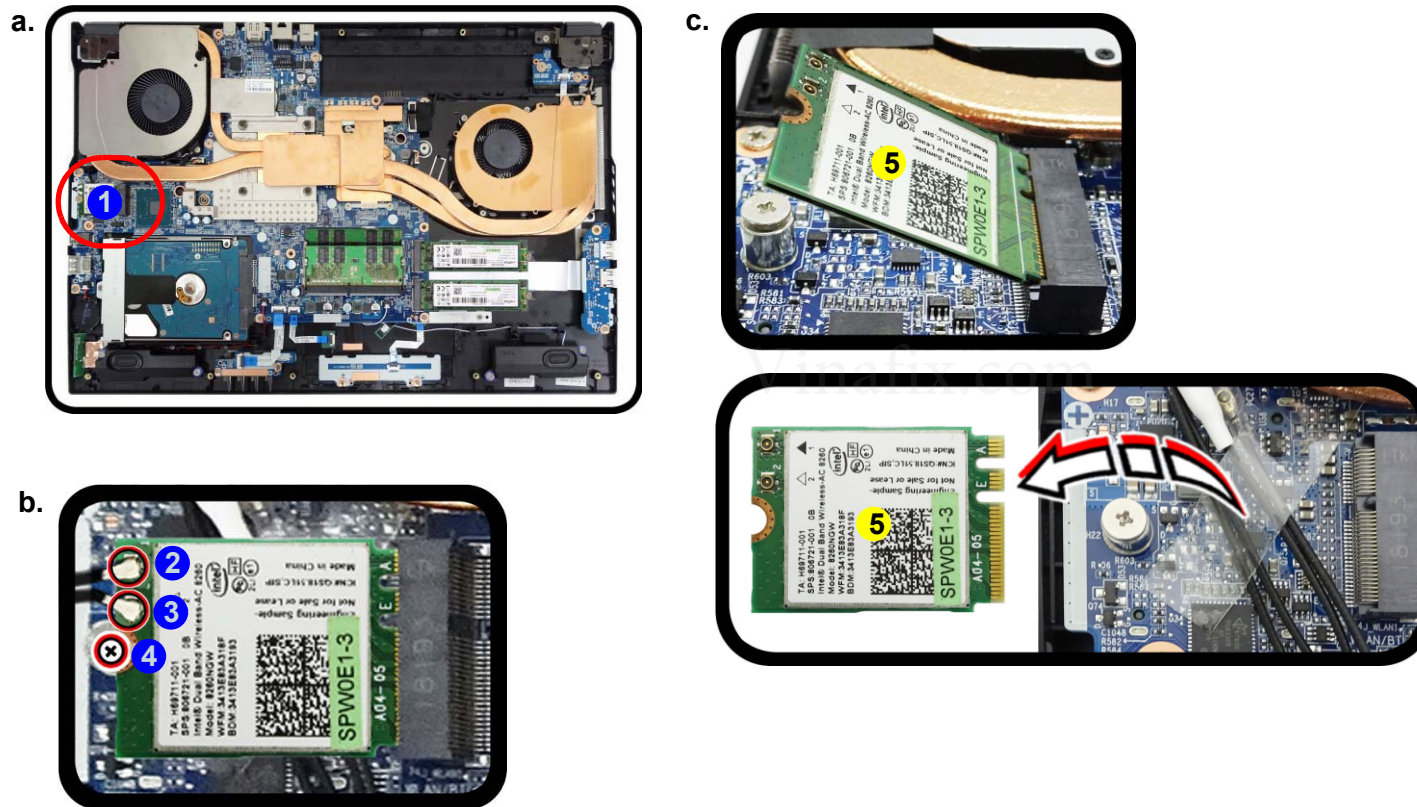


Figure 7
**Wireless LAN
Module Removal**

- Locate the WLAN.
- Disconnect the cables and remove the screw.
- The WLAN module will pop up.

Note: Make sure you reconnect the antenna cable to the “1 + 2” socket ([Figure 7b](#)).



5. Wireless LAN Module

- 1 Screw

Wireless LAN, Combo Module Cables

Note that the cables for connecting to the antennae on WLAN, WLAN & Bluetooth Combo modules are not labelled. The cables/covers (each cable will have either a black or transparent cable cover) are color coded for identification as outlined in the table below.

Module Type	Antenna Type	Cable Color	Cable Cover Type
WLAN/WLAN & Bluetooth Combo	WL 1	Black	Transparent
	WL 2	Black	White

Cable 1 is usually connected to antenna 1 on the module, and cable 2 to antenna 2.

Vinafix.com

Removing the CCD

1. Turn **off** the computer, turn it over to remove the battery ([page 2 - 5](#)).
2. Lay the computer down on a flat surface with the top case up forming a 90 degree angle.
3. Carefully run your fingers around the inner frame of the LCD panel to lift at points **1** - **4** as indicated by the arrows ([Figure 8a](#)).
4. Remove the LCD front cover mylar **5** ([Figure 8b](#)).

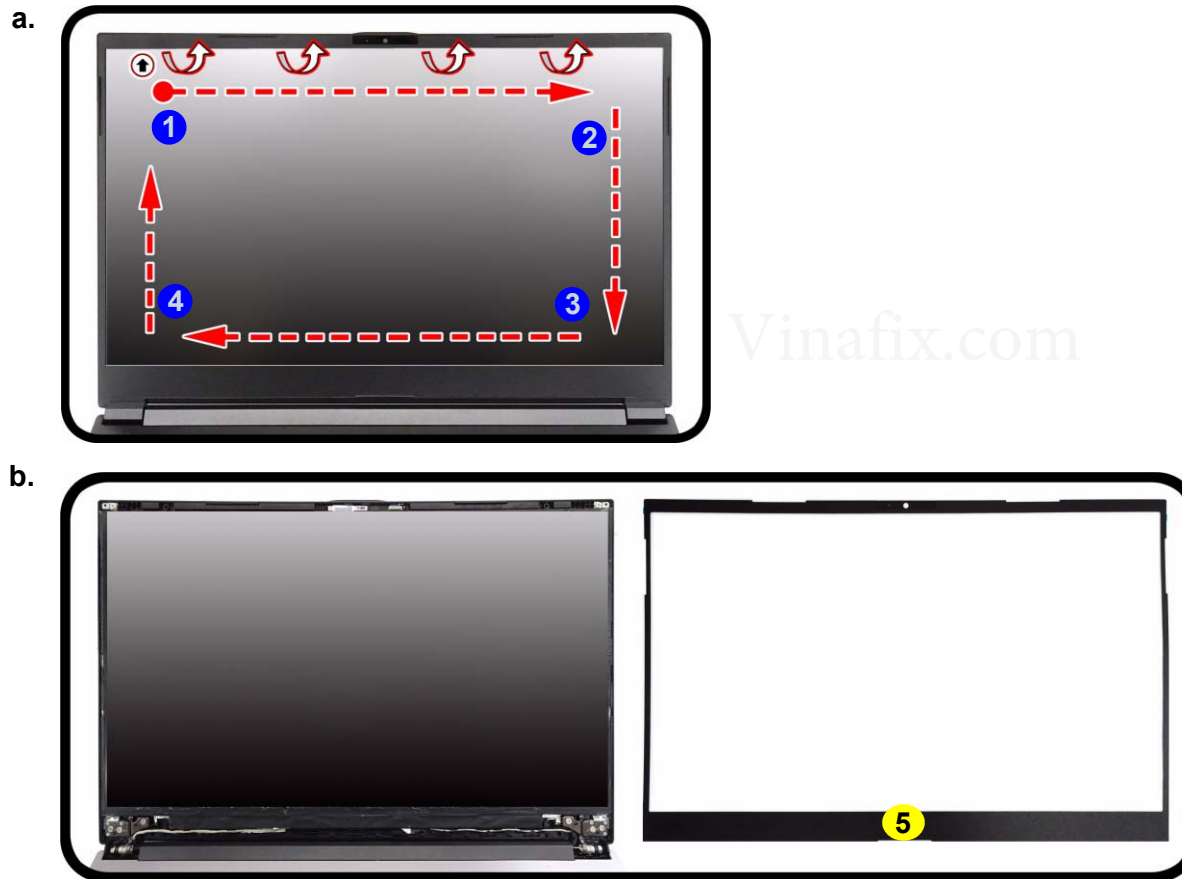


Figure 8
CCD Removal

- a. Carefully release the inner frame of the LCD panel at the points indicated by the arrows.
- b. Remove the LCD front cover mylar.




Disassembly

Figure 9
CCD Removal
(cont'd)

- c. Disconnect the cable from the locking collar socket.
- d. Remove the CCD module.

- 5. Disconnect the cable ⑥ from the locking collar socket by using a flat-head screwdriver to pry the locking collar pins ⑦ away from the base (*Figure 9c*).
- 6. Remove the CCD module ⑧ (*Figure 9d*).
- 7. Reverse the process to install a new CCD module.

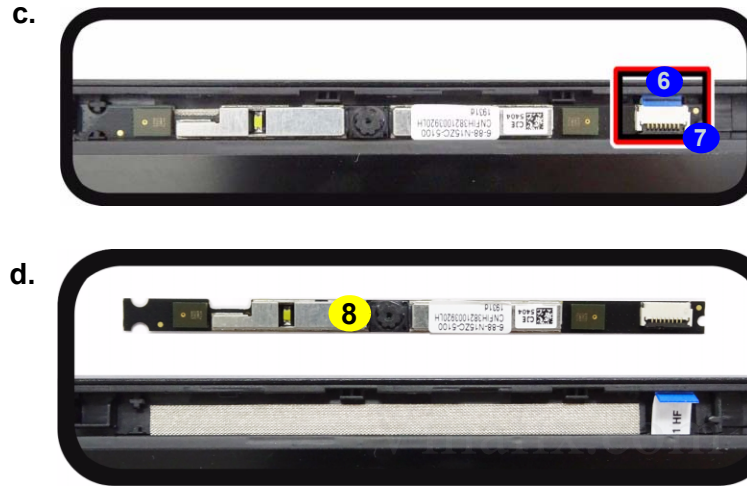

8. CCD Module

Appendix A: Part Lists

This appendix breaks down the *NH77DP / NH79DP* series notebook's construction into a series of illustrations. The component part numbers are indicated in the tables opposite the drawings.

Note: This section indicates the *manufacturer's* part numbers. Your organization may use a different system, so be sure to cross-check any relevant documentation.

Note: Some assemblies may have parts in common (especially screws). However, the part lists DO NOT indicate the total number of duplicated parts used.

Note: Be sure to check any update notices. The parts shown in these illustrations are appropriate for the system at the time of publication. Over the product life, some parts may be improved or re-configured, resulting in *new* part numbers.

Vinafix.com

Part List Illustration Location


The following table indicates where to find the appropriate part list illustration.

Table A - 1
**Part List Illustration
Location**

Part	NH77DPQ	NH79DPQ
Top	<i>page A - 3</i>	<i>page A - 4</i>
Bottom	<i>page A - 5</i>	
Main Board	<i>page A - 6</i>	
HDD	<i>page A - 7</i>	
LCD	<i>page A - 8</i>	<i>page A - 9</i>

Vinafix.com

Top (NH77DPQ)

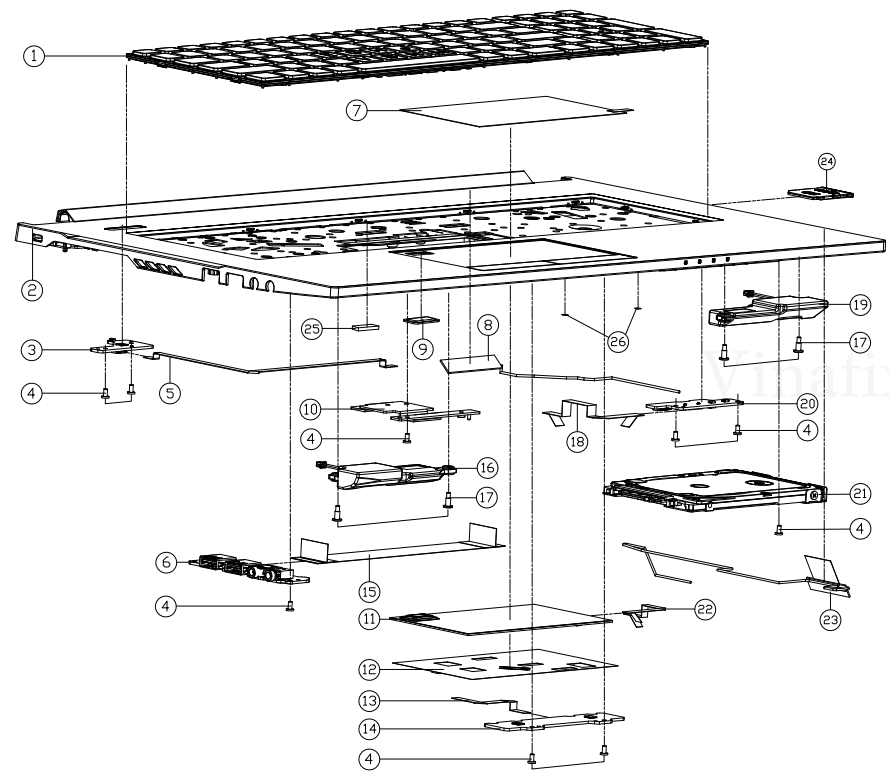


ITEM	PART NAME	PART NO	REMARK
1	KB FOR LED PER KEY KB US SERIES NH70EDQ	6-NH70EDQ-KB-LPK-US	FOR LED PER KEY KB SERIES
1	KB FOR MULTI ISC BL KB US SERIES NH70EDQ	6-NH70EDQ-KB-MCL-US	FOR MULTI ISC BL KB SERIES
1	MCJ (OPTION) NH77DBQ	6-NH77DPQ-CUSTOM-MCJ	FOR MCJ
2	TOP CASE MODULE NH77DCQ	6-39-NH772-012	
2	TOP CASE MODULE NH77DCQ-Y	6-39-NH772-012-Y	
3	HALL SENSOR & POWER SW BOARD V2.0 NH77DPQ	6-77-NH771-D12	
4	SCREW M2*4L KT NI ICT NY (DD-#4.5,DT-0.8)	6-35-B1120-4RC	
5	FFC POWER TO MB L=195MM 3.3V 8P (QX) NH77DCQ	6-43-NH770-021-1	
6	AUDIO BOARD V2.0 NH50DP	6-77-NH5P8-D02	
6	AUDIO BOARD (REDRIVER) V2.0 NH50DP	6-77-NH5P8-D12	
7	TP MYLAR APPEARANCE W/O-FFP NH77DCQ	6-40-NH772-040	
8	ANTENNA PEEM W/LN W/T W/L PCB DL 400MM 24G/5G W/L-150MM NH77DCQ	6-23-7NH77-011	
9	TP W/O FP RUBBER (17.9*10.2*1.2) SILICONE NIS02U	6-47-N15Z2-090	
10	MB SUPPORT BKT AL1050 NH70EDQ	6-33-NH702-011	
11	TOUCH PAD ELAN S4861D-6701C0846140.86MM NH50DC	6-49-NH5D3-011	
12	TP MYLAR PET (BLACK PET1009657*HUBBER6107) (HS-S) NH77DCQ	6-40-NH772-030	
13	FFC TP TO MB L=73MM 3.3V 8P (QX)NH70EDQ	6-43-NH700-040	
14	CLICK BOARD V2.0 NH50DP	6-77-NH5P2-D02	
15	FFC AUDIO TO MB L=140.5MM 5V 40P (QX)NH70EDQ	6-43-NH700-011	
16	SPK CABLE L 167*23 2W 4P L190 MM DG-25H-ML-12-HF N50UT	6-23-5N95T-0L1	
17	SCREW M2*6.2L NI ICT NY FOR SPEAKER	6-35-Z1120-6R2	
18	FFC LED TO MB L=87MM 3.3V 12P (QX) NH77DCQ	6-43-NH770-010-1	
19	SPK CABLE L25*44 2W 4P L 200MM DG-25H-ML-12-HF N50UT	6-23-5NB70-0R1	
20	LED BOARD V2.0 NH77DPQ	6-77-NH5P4-D02-A	
21	W/O HDD ASS'Y NH70EDQ	6-79-NH70EDQJ-010	
21	W/HDD ASS'Y NH70EDQ	6-79-NH70EDQJ-020	
22	FFC CABLE CLICK TO TP L=6MM 3V 4PIN (QX) NH50ED	6-43-NH500-051	
23	ANTENNA PEEM W/LN W/T W/L PCB AR 24G/5G W/L-200MM NH77DCQ	6-23-7NH77-020	
24	DUMMY ZONE NON PUSH TYPE PCB ARS (C223P-700C030RNC) W970SW	6-42-W9708-011	
25	MLCC THERMAL PAD NH50DD2	6-48-NH5D2-010	
26	WASHER Ø6*Ø3*0.3t (MYLAR)	6-37-02000-601	

Figure A - 1
Top (NH77DPQ)

Top (NH79DPQ)

Figure A - 2
Top (NH79DPQ)

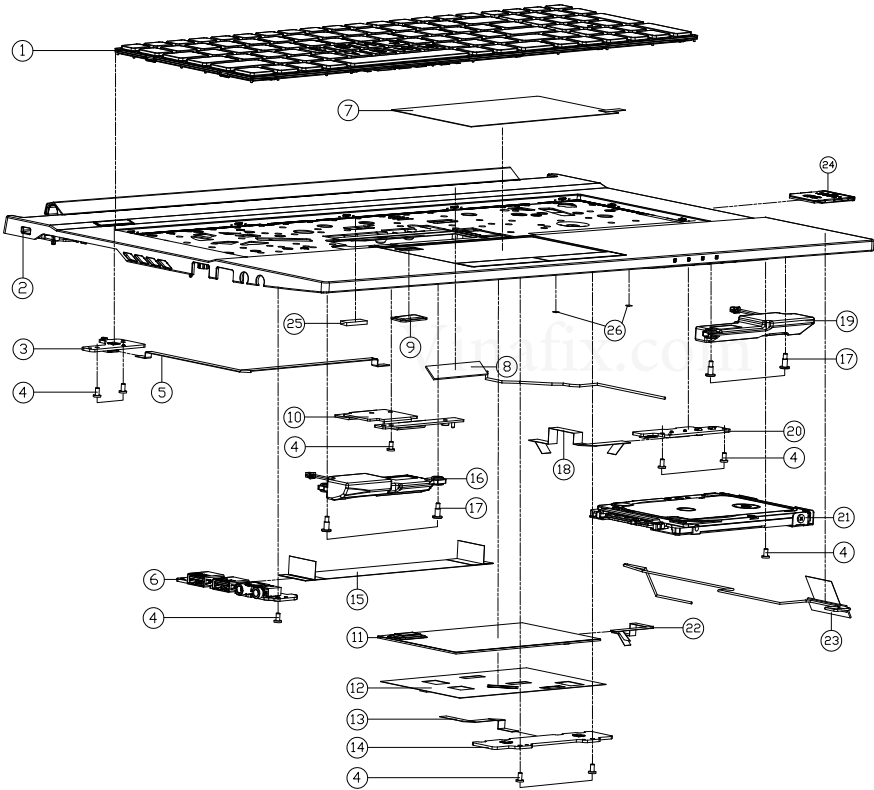

ITEM	PART NAME	PART NO	REMARK
1	KB FOR LED PER KEY KB US SERIES NH70EDQ	6-NH70EDQ-KB-LPK-US	
1	KB FOR MULTI ISC BL KB US SERIES NH70EDQ	6-NH70EDQ-KB-MCL-US	
1	MCJ <OPTION> NH79DBQ	6-NH79DPQ-CUSTOM-MCJ	
2	TOP CASE MODULE NH79DCQ	6-39-NH792-010	
3	HALL SENSOR & POWER SW BOARD V2.0 NH77DPQ	6-77-NH771-D12	
4	SCREW M2*4L K1 NI ICT NY (DD-04.5,DT-0.8)	6-35-B1120-4RC	
5	FFC POWER TO MB L=195MM 3.3V 8P (CNUS) NH77DCQ	6-43-NH770-021	
6	AUDIO BOARD V2.0 NH50DP	6-77-NH5P8-D02	
6	AUDIO BOARD (REDRIVER) V2.0 NH50DP	6-77-NH5P8-D12	
7	W/D FP TP MYLAR AG32 NH79DCQ	6-40-NH792-010	
8	ANTENNA TPX4 WLAN VGT WL PCB IL 400MM 2.4G/5G WL-150MM NH77DCQ	6-23-7NH77-011	
9	TP W/D FP RUBBER (17.9*11.2*1.2T) SILICONE NH50ZU	6-47-N1522-090	
10	MB SUPPORT BKT AL1050 NH70EDQ	6-33-NH702-011	
11	TOUCH PAD ELAN SA861D-670X108*61*0.86MM NH50DC	6-49-NH5D3-011	
12	TP MYLAR PET (BLACK PET) (0.9X6.7)*RUBBER (GND) (JIS-S) NH77DCQ	6-40-NH772-030	
13	FFC TP TO MB L=73MM 3.3V 8P (GX) NH70EDQ	6-43-NH700-040	
14	CLICK BOARD V2.0 NH50DP	6-77-NH5P2-D02	
15	FFC AUDIO TO MB L=140.5MM 5V 40P (GX) NH70EDQ	6-43-NH700-011	
16	SPK CABLE L 167*23 2W 4Ω 1190 MM US-2534-ML-02-HF NH50TF	6-23-5N95T-OL1	
17	SCREW M2*6.2L NI ICT NY FOR SPEAKER	6-35-Z1120-6R2	
18	FFC LED TO MB L=87MM 3.3V 12P (GX) NH77DCQ	6-43-NH770-010-1	
19	SPK CABLE L 25*14 2W 4Ω 1200MM US-2534-ML-02-HF NH70LJ	6-23-5NB70-0R1	
20	LED BOARD V2.0 NH77DPQ	6-77-NH5P4-D02-A	
21	W/D HDD ASS'Y NH70EDQ	6-79-NH70EDQJ-010	
21	W/HDD ASS'Y NH70EDQ	6-79-NH70EDQJ-020	
22	FFC CABLE CLICK TO TP L=60MM 3V 4PIN (GX) NH50ED	6-43-NH500-051	
23	ANTENNA TPX4 WLAN VGT WL PCB AR 2.4G/5G WL-200MM NH77DCQ	6-23-7NH77-020	
24	DUMMY 300 NON PUSH TYPE PCB (ABS) (17.2*30*7.0) (EXCHANGED) V97030W	6-42-W9708-011	
25	MLCC THERMAL PAD NH50DD2	6-48-NH5D2-010	
26	WASHER Ø6*Ø3*0.3t (MYLAR)	6-37-02000-601	


A.Part Lists



Figure A - 3
Bottom


Main Board

Figure A - 4
Main Board

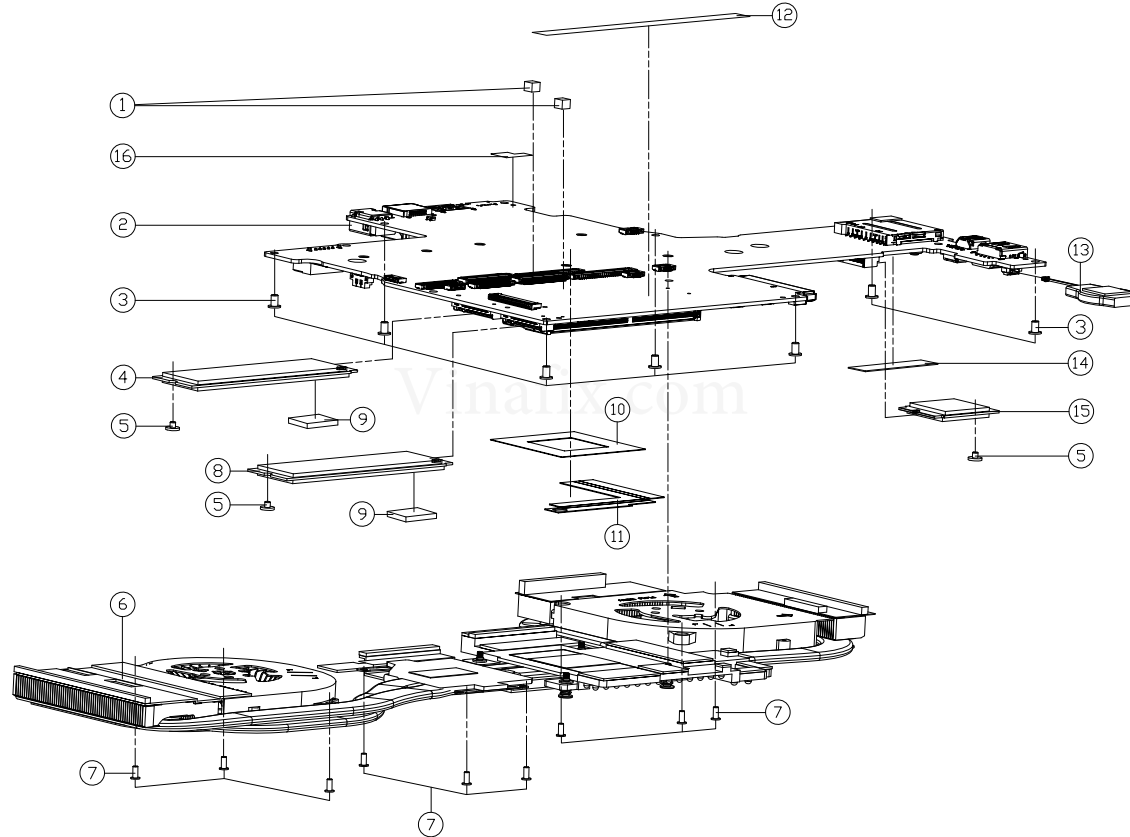

ITEM	PART NAME	PART NO	REMARK
1	RUBBER (44x137) FOR HD MOUNT	6-47-NH508-050	
2	HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-77-NH77SP00-000-18	
2	HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-77-NH77SP00-000-0C	
2	HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-77-NH77SP00-000-0E	
2	HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-77-NH77SP00-000-1F	
2	HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-77-NH77SP00-000-19	
2	HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-77-NH77SP00-000-1C	
2	HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-77-NH77SP00-000-1E	
2	HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-77-NH77SP00-000-0F	
2	HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-77-NH77SP00-000-0D	
2	HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-77-NH77SP00-000-0B	FOR MOTHERBOARD
2	HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-77-NH77SP00-000-0A	FOR MOTHERBOARD
2	HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-77-NH77SP00-000-09	FOR MOTHERBOARD
2	HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-77-NH77SP00-000-08	FOR MOTHERBOARD
2	HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-77-NH77SP00-000-07	FOR MOTHERBOARD
2	HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-77-NH77SP00-000-06	FOR MOTHERBOARD
2	HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-77-NH77SP00-000-05	FOR MOTHERBOARD
2	HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-77-NH77SP00-000-04	FOR MOTHERBOARD
2	HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-77-NH77SP00-000-03	FOR MOTHERBOARD
2	HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-77-NH77SP00-000-02	FOR MOTHERBOARD
2	HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-77-NH77SP00-000-01	FOR MOTHERBOARD
3	SCREW M2.5x4L (D=4.1-0.8) KI NI ICT NY	6-35-B1125-4RA	
4	SCREW FOR HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-85-D511T-S04	OPTION
4	SCREW FOR HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-85-D511T-S05	OPTION
4	SCREW FOR HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-85-D515B-B01	OPTION
4	SCREW FOR HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-85-D515B-W02	OPTION
4	SCREW FOR HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-85-D516R-W02	OPTION
4	SCREW FOR HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-85-D515B-K01	OPTION
4	SCREW FOR HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-85-D516R-101	OPTION
4	SCREW FOR HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-85-D516R-Z04	OPTION
4	SCREW FOR HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-85-D515B-K00	OPTION
4	SCREW FOR HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-85-NHSPQ-002-G	FOR MOTHERBOARD
4	SCREW FOR HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-85-NH77PQ-001-H	OPTION
4	SCREW FOR HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-85-NH77PQ-002-H	OPTION
4	SCREW FOR HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-85-NH77PQ-003-H	OPTION
5	SCREW M2.5x4L KI NI ICT NY (D=4.1-0.8)	6-35-B1120-2RA	
6	CPU ALGA THERMAL MODULE (M2.5x4L)	6-31-NH77N-201	
7	SCREW M2.5x4L KI NI ICT NY (D=4.1-0.8)	6-35-B1120-4RC	
8	SCREW FOR HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-85-D511T-S04	OPTION
8	SCREW FOR HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-85-D511T-S05	OPTION
8	SCREW FOR HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-85-D515B-B01	OPTION
8	SCREW FOR HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-85-D515B-W02	OPTION
8	SCREW FOR HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-85-D516R-W02	OPTION
8	SCREW FOR HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-85-D516R-Z04	OPTION
8	SCREW FOR HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-85-NHSPQ-002-G	FOR MOTHERBOARD
8	SCREW FOR HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-85-NH77PQ-001-H	OPTION
8	SCREW FOR HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-85-NH77PQ-002-H	OPTION
8	SCREW FOR HD MOUNTING BRACKET FOR EXTERNAL HDD DRIVE THE MOUNT	6-85-NH77PQ-003-H	OPTION
9	THERMAL PAD (3.2x3.2) (M2.5x4L)	6-48-NH702-011	
10	GR20 MYLAR E3 P250D3	6-40-X17K0-020	
11	END ADAPTER (3.2x3.2) (M2.5x4L)	6-47-NH5P5-010	
12	MYLAR FOR MS (2.5x3.2) (M2.5x4L)	6-40-NH772-080	
13	END ADAPTER (3.2x3.2) (M2.5x4L)	6-23-22015-TE0	
14	TAPE MYLAR (C)MYLAR M550J	6-40-M55J2-030	
15	END ADAPTER (3.2x3.2) (M2.5x4L)	6-88-NV40F-4210	OPTION
15	END ADAPTER (3.2x3.2) (M2.5x4L)	6-88-N15CF-4210	OPTION
15	END ADAPTER (3.2x3.2) (M2.5x4L)	6-88-X17KF-4210	OPTION
15	END ADAPTER (3.2x3.2) (M2.5x4L)	6-88-N24GF-4200	OPTION
15	END ADAPTER (3.2x3.2) (M2.5x4L)	6-988-N15CF-4210-G	FOR MOTHERBOARD
15	END ADAPTER (3.2x3.2) (M2.5x4L)	6-988-L148F-4210-H	OPTION
16	MYLAR (2.0x1.4x0.25) NH77DB2	6-40-NH773-030	


HDD

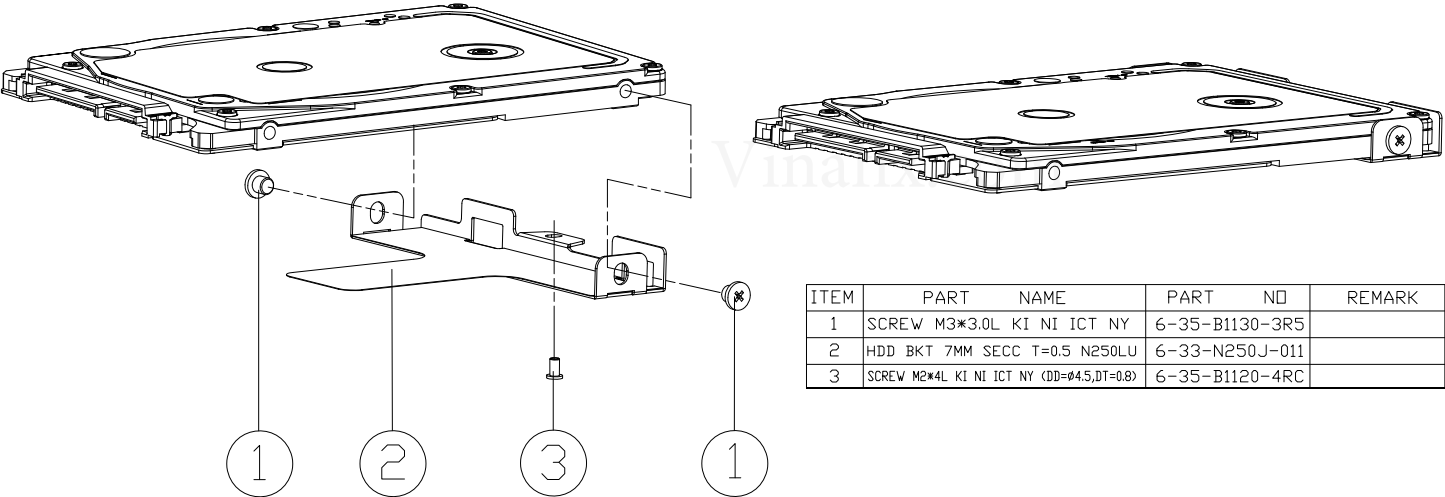

ITEM	PART	NAME	PART	NO	REMARK
1	SCREW	M3*3.0L KI NI ICT NY	6-35-B1130-3R5		
2	HDD BKT	7MM SECC T=0.5 N250LU	6-33-N250J-011		
3	SCREW	M2*4L KI NI ICT NY (DD=Ø4.5,DT=0.8)	6-35-B1120-4RC		


Figure A - 5
HDD

LCD (NH77DPQ)

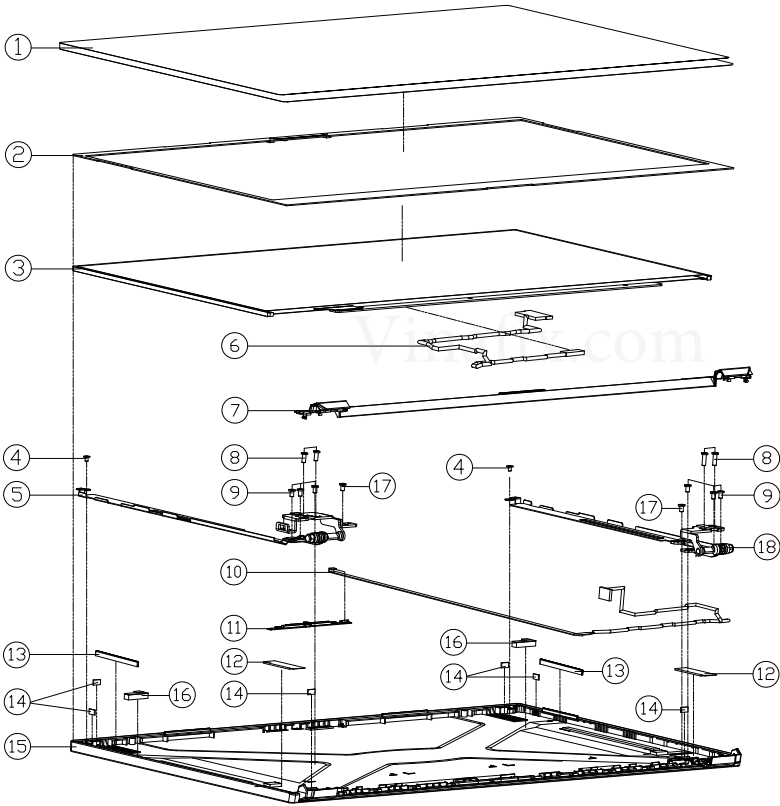

ITEM	PART NAME	PART NO	REMARK
1	LCD PROTECT NON WOVEN NH77DCQ	6-44-NH774-010	
2	MYLAR FOR FRONT COVER NH77DCQ	6-40-NH771-014	
3	LCD N17.3" FHD/VVA/144Hz/NON GT/EDP BDE NV173FHM-N49 LED 35MM	6-50-NBB35-Z010	
3	LCD N17.3" FHD/VVA/144Hz/SW G-SYNC/N17/NON GT/EDP LG LP173WFG-SPB3 35MM	6-50-NBB35-L124	
3	LCD N17.3" FHD/VVA/144Hz/N4/NON GT/EDP AU B173H4N04.9 LED 35MM	6-50-NBB35-G170	
3	LCD N17.3" FHD/VVA/144Hz/N4/NON GT/EDP AU B173H4N04.9 LED 35MM	6-50-NBB35-L020	
3	LCD N17.3" FHD/VVA/144Hz/SW G-SYNC/N17/NON GT/EDP AU B173H4N04.9 LED 35MM	6-50-NBB35-G162	
4	SCREW M2*3L KI NI ICT NY (DD=04.0,DT=0.8)	6-35-B1120-3RD	
5	HINGE L NH77DCQ	6-33-NH771-0L2	
6	WIRE CABLE FOR EDP FHD 144Hz 35MM (D 19V 40PIN HT/LV CON:VCC04-22-4T) WHITE	6-43-NH701-021-1N	
6	WIRE CABLE FOR EDP FHD 35MM (D 19V 30PIN HT/LV CON:VCC04-22-2) WHITE	6-43-NH701-012-1N	
7	LCD FRONT COVER MODULE (CNC) NH77DCQ	6-39-NH771-110	
8	SCREW M2.5*6L K BZ ICT NY	6-35-82125-6RA	
9	SCREW M2.5*4L KI(CT=0.5 D=4.5) BK/Z ICT	6-35-B6125-4R0	
10	CCD CABLE L=550MM 8PIN 30V (HT) NH70ED	6-43-NH70T-012-1	
11	IVC CAMERA CORDON FIBRE OPTIQUE 200CM (D 19V 40PIN HT/LV CON:VCC04-22-4T) WHITE	6-88-N15ZC-5100	OPTION
11	IVC CAMERA CORDON FIBRE OPTIQUE 200CM (D 19V 30PIN HT/LV CON:VCC04-22-2) WHITE	6-88-N15ZC-4900	OPTION
11	IVC CAMERA CORDON FIBRE OPTIQUE 200CM (D 19V 40PIN HT/LV CON:VCC04-22-4T) WHITE	6-88-N15ZC-5102	OPTION
12	LCD LALA SPONG (35x10x1.5T) FM92822K+CR4832 NH77DCQ	6-47-0019A-35V	
13	LCD RUBBER B NH77DCQ	6-47-NH771-040	
14	LCD RUBBER (6*3.5*0.8T) NH55EDQ	6-47-NH551-020	
15	BACK COVER MODULE NH77DCQ	6-39-NH771-022	
16	DOUBLE SIDE ELASTIC TAPE (35X10X0.5T) NH70EDQ	6-40-NH701-010-1	
17	SCREW M2.5*4L (D=4.6,T=0.8) KI NI ICT NY	6-35-B1125-4RA	
18	HINGE R NH77DCQ	6-33-NH771-0R2	

LCD (NH79DPQ)

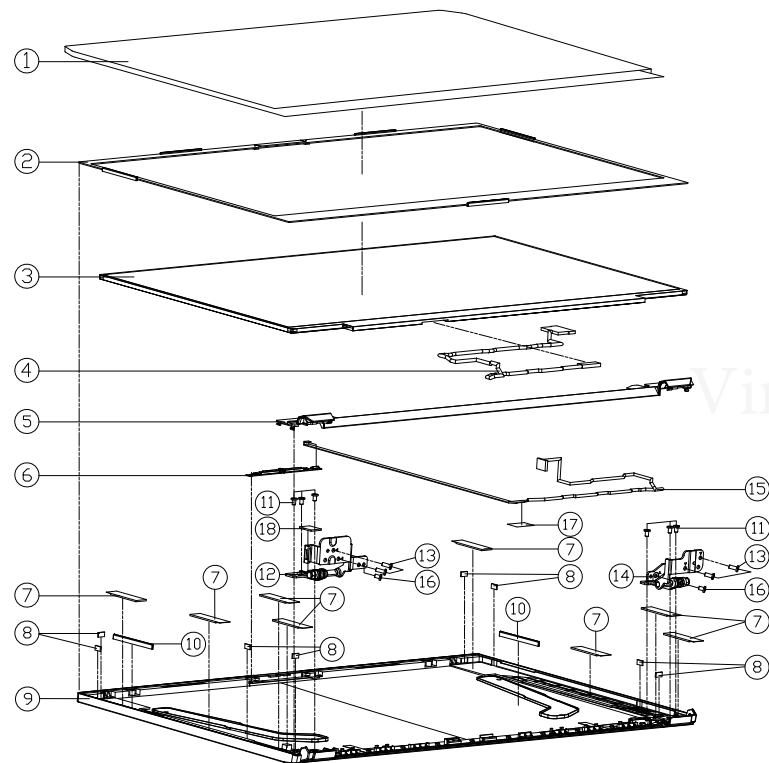

ITEM	PART NAME	PART NO	REMARK
1	LCD PROTECT NON WOVEN NH77DCQ	6-44-NH774-010	
2	MYLAR FOR FRONT COVER NH77DCQ	6-40-NH771-014	
3	LCD NH7.3" FHD/WVA/144HZ/NH/NON GT/EDP BDE NV1737FM-N49 LED 35MM	6-50-NBB35-Z010	
3	LCD NH7.3" FHD/WVA/144HZ/NH/NON GT/EDP AU B173HAN04.9 LED 35MM	6-50-NBB35-G170	
4	WIRE CABLE FOR EDP FHD 144HZ 35MM (D 19V 30PIN GHT/LV CONN.VC30H-282-H) NATEDU	6-43-NH701-021-1N	
4	WIRE CABLE FOR EDP FHD 35MM (D 19V 30PIN GHT/LV CONN.VC30H-282-D) NATEDU	6-43-NH701-012-1N	
5	LCD FRONT COVER MODULE NH77DCQ	6-39-NH771-012	
6	UNC CAMERA CCMCM F10R2D C7N12Z2205000L IN HD D19734 M250 F10R2D VWHITE-LED V10P-MCM2000V D000V V10P-F10	6-88-N15ZC-5100	OPTION
6	UNC CAMERA CCMCM F10R2D C7N12Z2205000L IN HD D19734 M250 F10R2D VWHITE-LED V10P-MCM2000V D000V V10P-F10	6-88-N15ZC-4900	OPTION
6	UNC CAMERA CCMCM F10R2D C7N12Z2205000L IN HD D19734 M250 F10R2D VWHITE-LED V10P-MCM2000V D000V V10P-F10	6-88-N15ZC-5102	OPTION
7	LCD LALA SPONG (35*10*0.75T) FM92822K+CR4832 NH58EDQ	6-47-0019A-35R-1	
8	LCD RUBBER (6*3.5*0.8T) NH55EDQ	6-47-NH551-020	
9	BACK COVER MODULE NH79DCQ	6-39-NH791-021	
10	LCD RUBBER B NH77DCQ	6-47-NH771-040	
11	SCREW M2.5*4L KI(T=0.5 D=4.5) BK/Z ICT	6-35-B6125-4R0	
12	HINGE L (SK7) NH79DCQ-H	6-33-NH791-0L0-H	
13	.SCREW M2.5*6L K BZ ICT NY	6-35-82125-6RA	
14	HINGE R (SK7) NH79DCQ-H	6-33-NH791-0R0-H	
15	CCD CABLE L=550MM 8PIN 30V (HT) NH70ED	6-43-NH70T-012-1	
16	SCREW M2.5*4L (D=4.6,T=0.8) KI NI ICT NY	6-35-B1125-4RA	
17	TOP CASE MYLAR FR83 25*7*0.05 P180HM	6-40-P1802-030	
18	SPONGE (15*10*1.5T) SM55 P970EN	6-47-P97EN-010	

Figure A - 7
LCD (NH79DPQ)

Vinafix.com

Appendix B: Schematic Diagrams

This appendix has circuit diagrams of the *NH77DP / NH79DP* notebook's PCB's. The following table indicates where to find the appropriate schematic diagram.

Diagram - Page	Diagram - Page	Diagram - Page	Diagram - Page
System Block Diagram - Page B - 2	GPU NVVDD, FBVDDQ - Page B - 21	PCH 9/9 - Page B - 40	DDR 1.2V / 0.6VS, 2.5V - Page B - 59
Processor 1/6 - Page B - 3	GPU Decoupling 1 - Page B - 22	M.2 PCIE 4X SSD - Page B - 41	VCC_Core, VCCGT, VCCSA - Page B - 60
Processor 2/6 - Page B - 4	GPU Decoupling 2 - Page B - 23	M.2 WLAN+BT, PCIE 4X SSD - Page B - 42	VCore Output Stage - Page B - 61
Processor 3/6 - Page B - 5	Misc - GPIO, I2C and ROM - Page B - 24	USB Type-C - Page B - 43	VCCGT & VCCSA Output Stage - Page B - 62
Processor 4/6 - Page B - 6	IFP I/O Interface - Page B - 25	PD Controller ANX7411 - Page B - 44	AC_In, Charger - Page B - 63
Processor 5/6 - Page B - 7	Straps and XTAL - Page B - 26	Type-C - Page B - 45	NVVDD1 - Page B - 64
Processor 6/6 - Page B - 8	NVIDIA Power Sequence - Page B - 27	USB Type-A - Page B - 46	NVVDD2 - Page B - 65
DDR4 CHA SO-DIMM - Page B - 9	DGPU Power Measurement - Page B - 28	Card Reader / LAN RTL8411B - Page B - 47	PEX_VDD - Page B - 66
DDR4 CHB SO-DIMM - Page B - 10	HDMI - Page B - 29	Audio Codec - Page B - 48	FBVDDQ - Page B - 67
VGA PCI Express - Page B - 11	mDP - Page B - 30	KBC-ITE IT5570 - Page B - 49	IV8_AON, NV3V3, 1.5VS - Page B - 68
GPU Frame Buffer A/B - Page B - 12	Panel, Inverter - Page B - 31	RGB KB - Page B - 50	Audio Board - Page B - 69
Frame Buffer A - Page B - 13	PCH 1/9 - Page B - 32	Per Key - Page B - 51	Audio Board - Page B - 70
Frame Buffer A - Page B - 14	PCH 2/9 - Page B - 33	HDD, Click TP, Audio, FP - Page B - 52	Click Board - Page B - 71
Frame Buffer B - Page B - 15	PCH 3/9 - Page B - 34	LED, CCD, TPM, Fan - Page B - 53	PW Board (NH50, 57) - Page B - 72
Frame Buffer B - Page B - 16	PCH 4/9 - Page B - 35	LID, PWR SW Board - Page B - 54	PW Board (NH55, 58) - Page B - 73
GPU Frame Buffer C/D - Page B - 17	PCH 5/9 - Page B - 36	5V, 5VS, 3.3V, 3.3VS, 3.3VA - Page B - 55	Hall Sensor, Power SW Board - Page B - 74
Frame Buffer C - Page B - 18	PCH 6/9 - Page B - 37	VCCST, STG, SFR_OC, 1.8VA - Page B - 56	LED Board - Page B - 75
Frame Buffer C - Page B - 19	PCH 7/9 - Page B - 38	VDD1.05V, VCCIO - Page B - 57	
GPU GND - Page B - 20	PCH 8/9 - Page B - 39	VDD3, VDD5 - Page B - 58	

Table B - 1
**SCHEMATIC
DIAGRAMS**




Version Note

The schematic diagrams in this chapter are based upon version 6-7P-NH5P8-002. If your mainboard (or other boards) are a later version, please check with the Service Center for updated diagrams (if required).

Schematic Diagrams


System Block Diagram

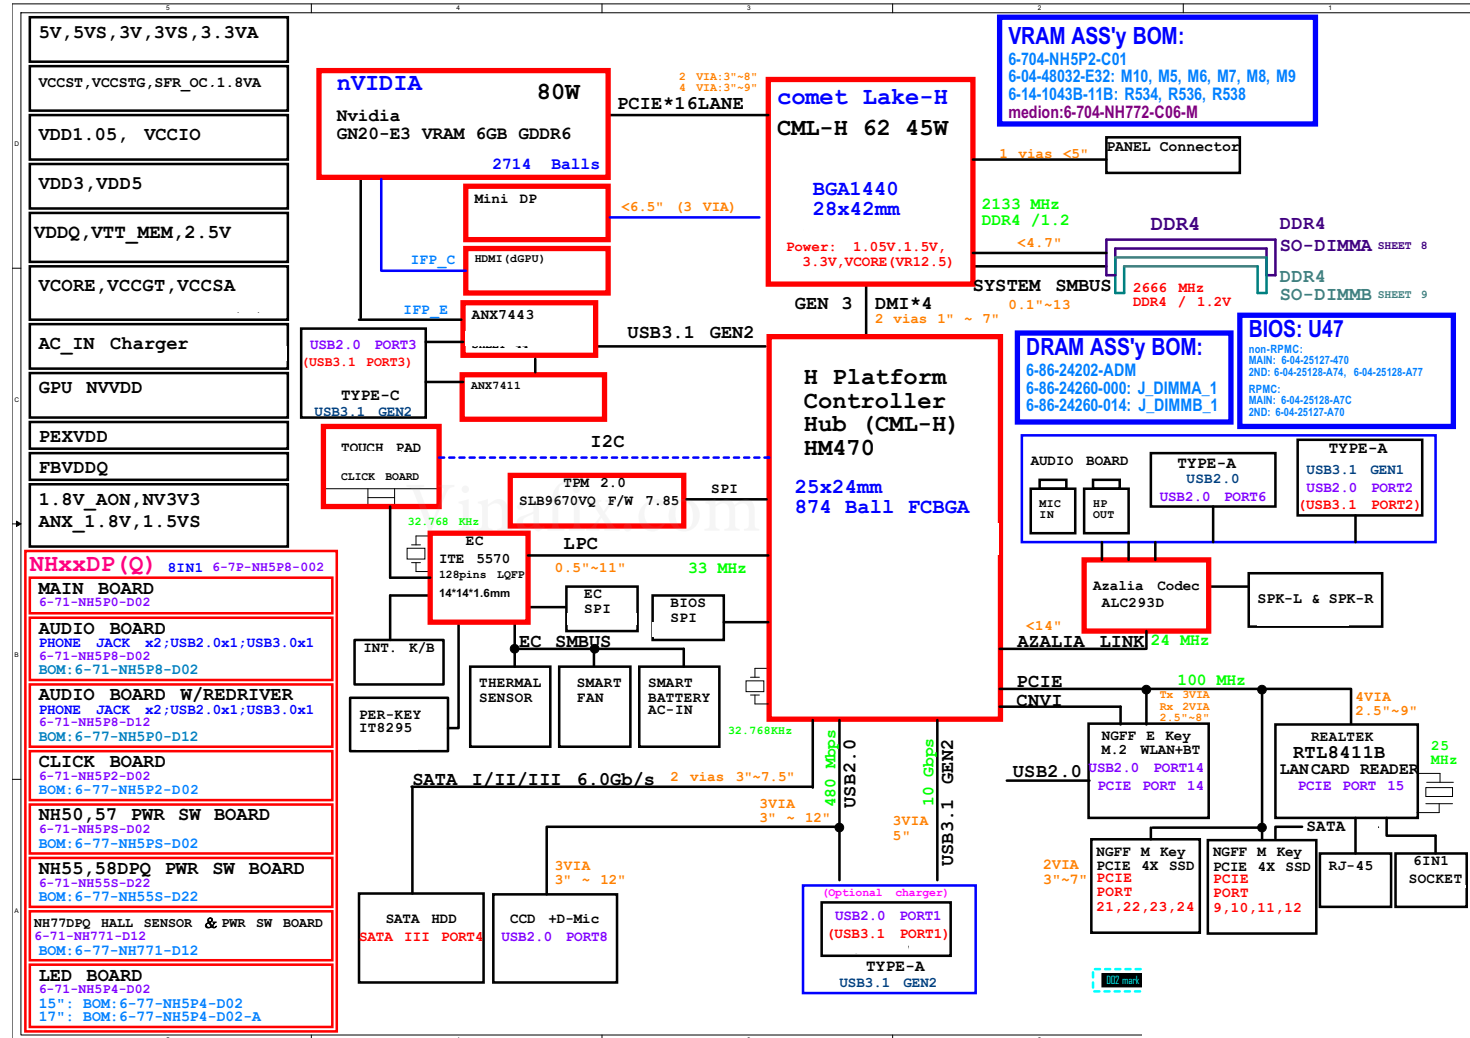

Sheet 1 of 74
System Block
Diagram

B.Schematic Diagrams


Processor 1/6

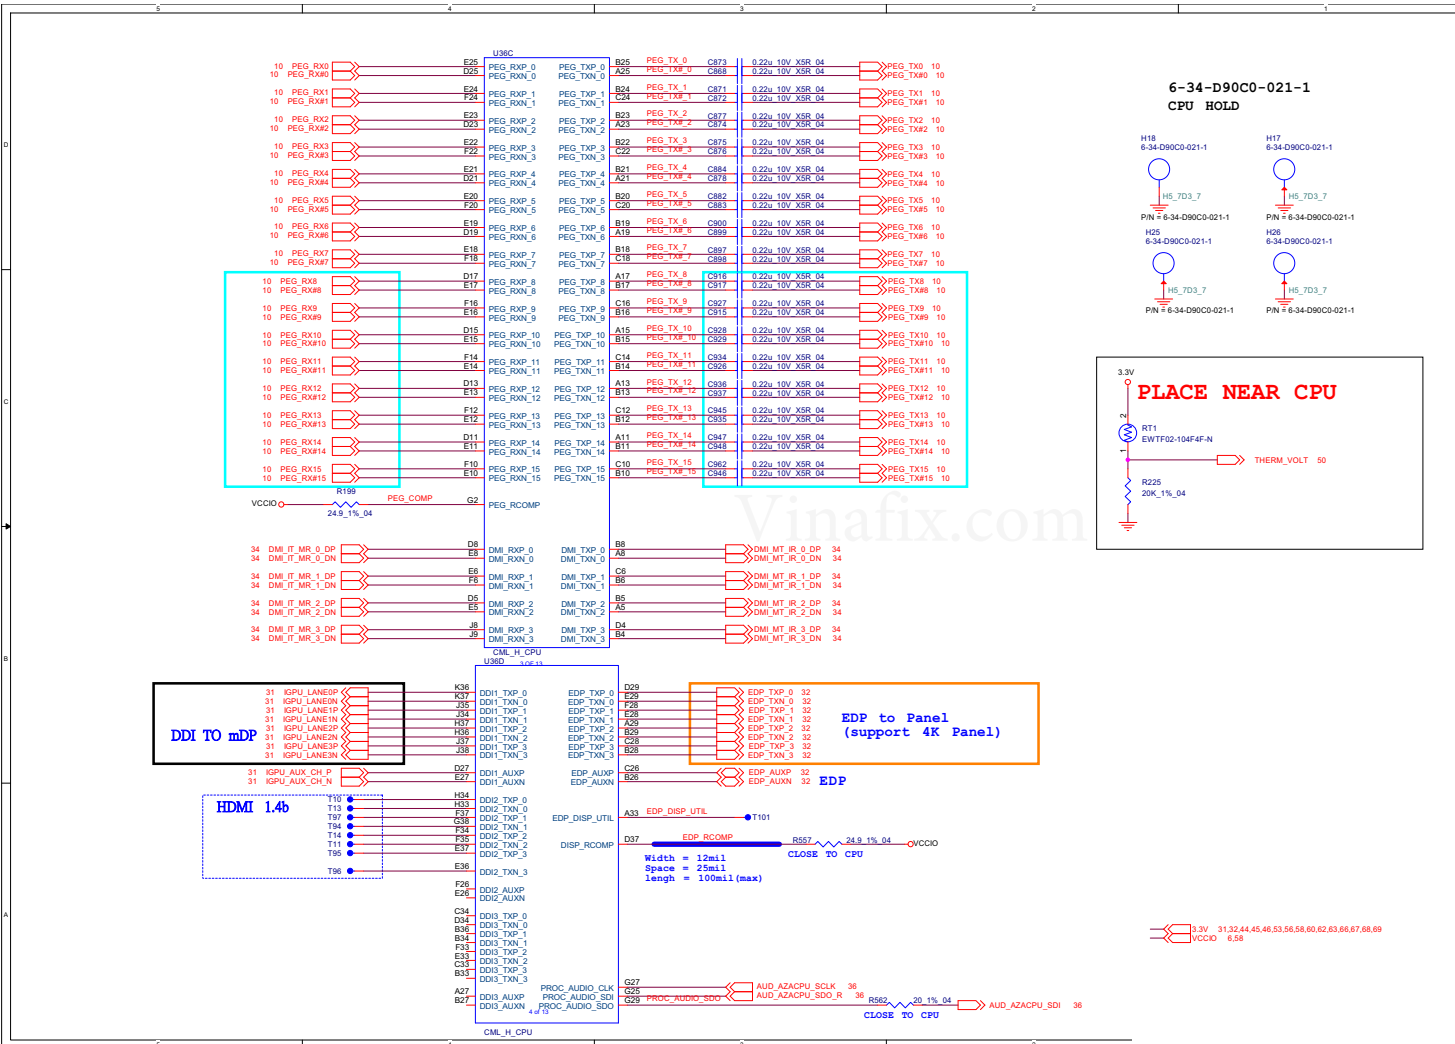

Sheet 2 of 74
Processor 1/6


Processor 2/6

Sheet 3 of 74
Processor 2/6

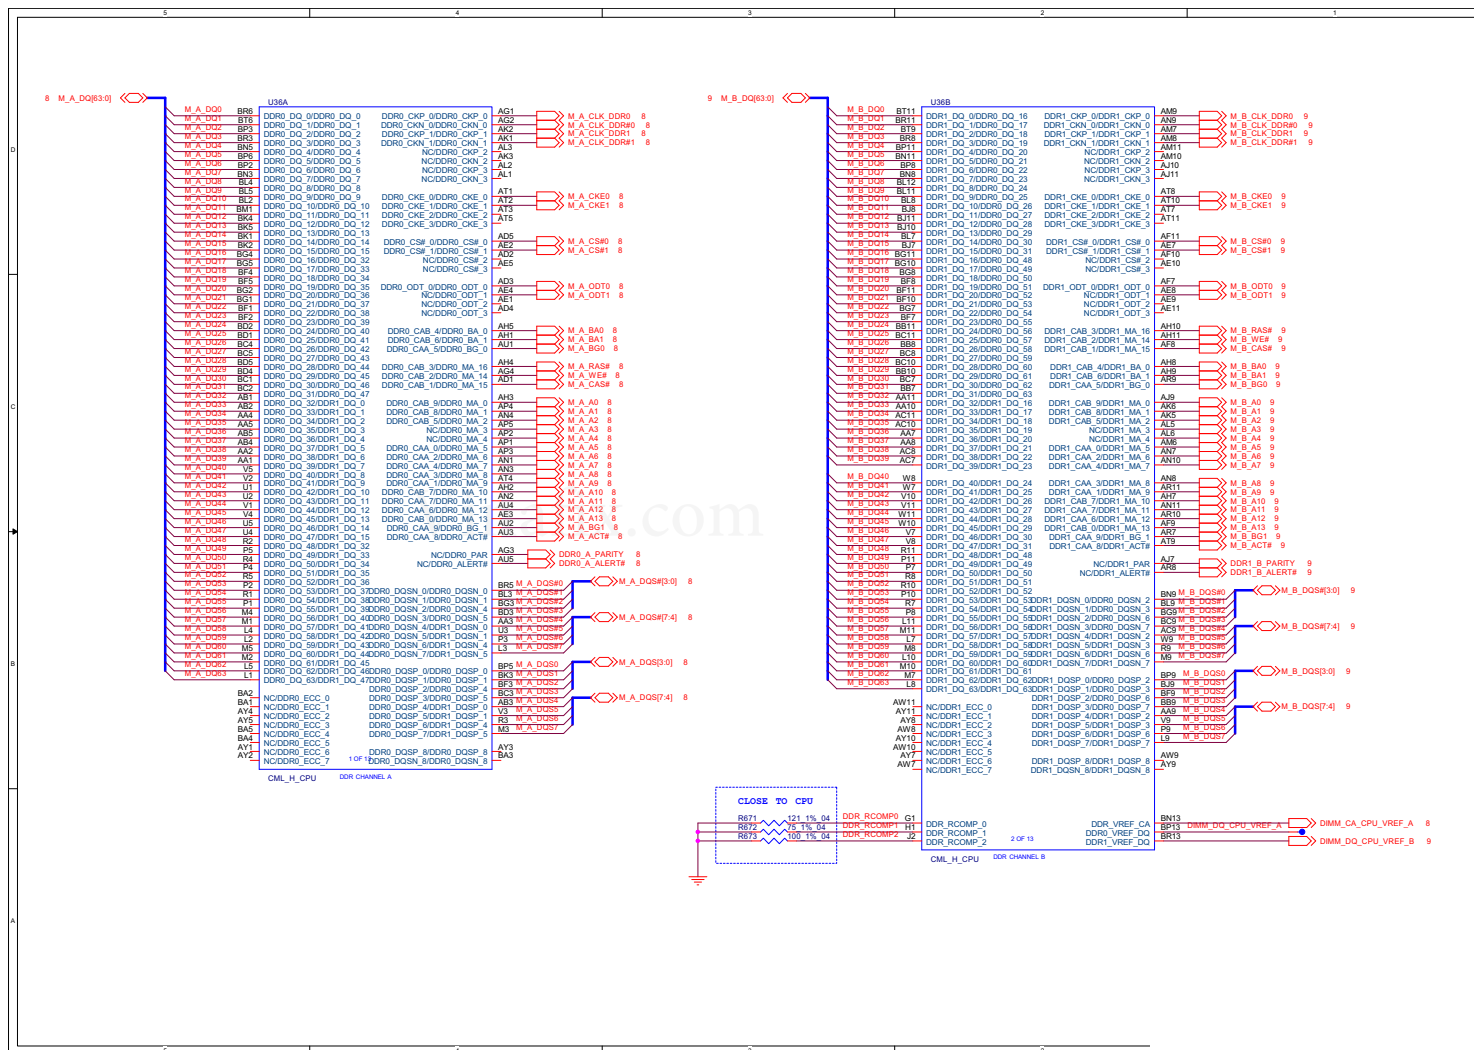

Processor 3/6


Vinafix.com

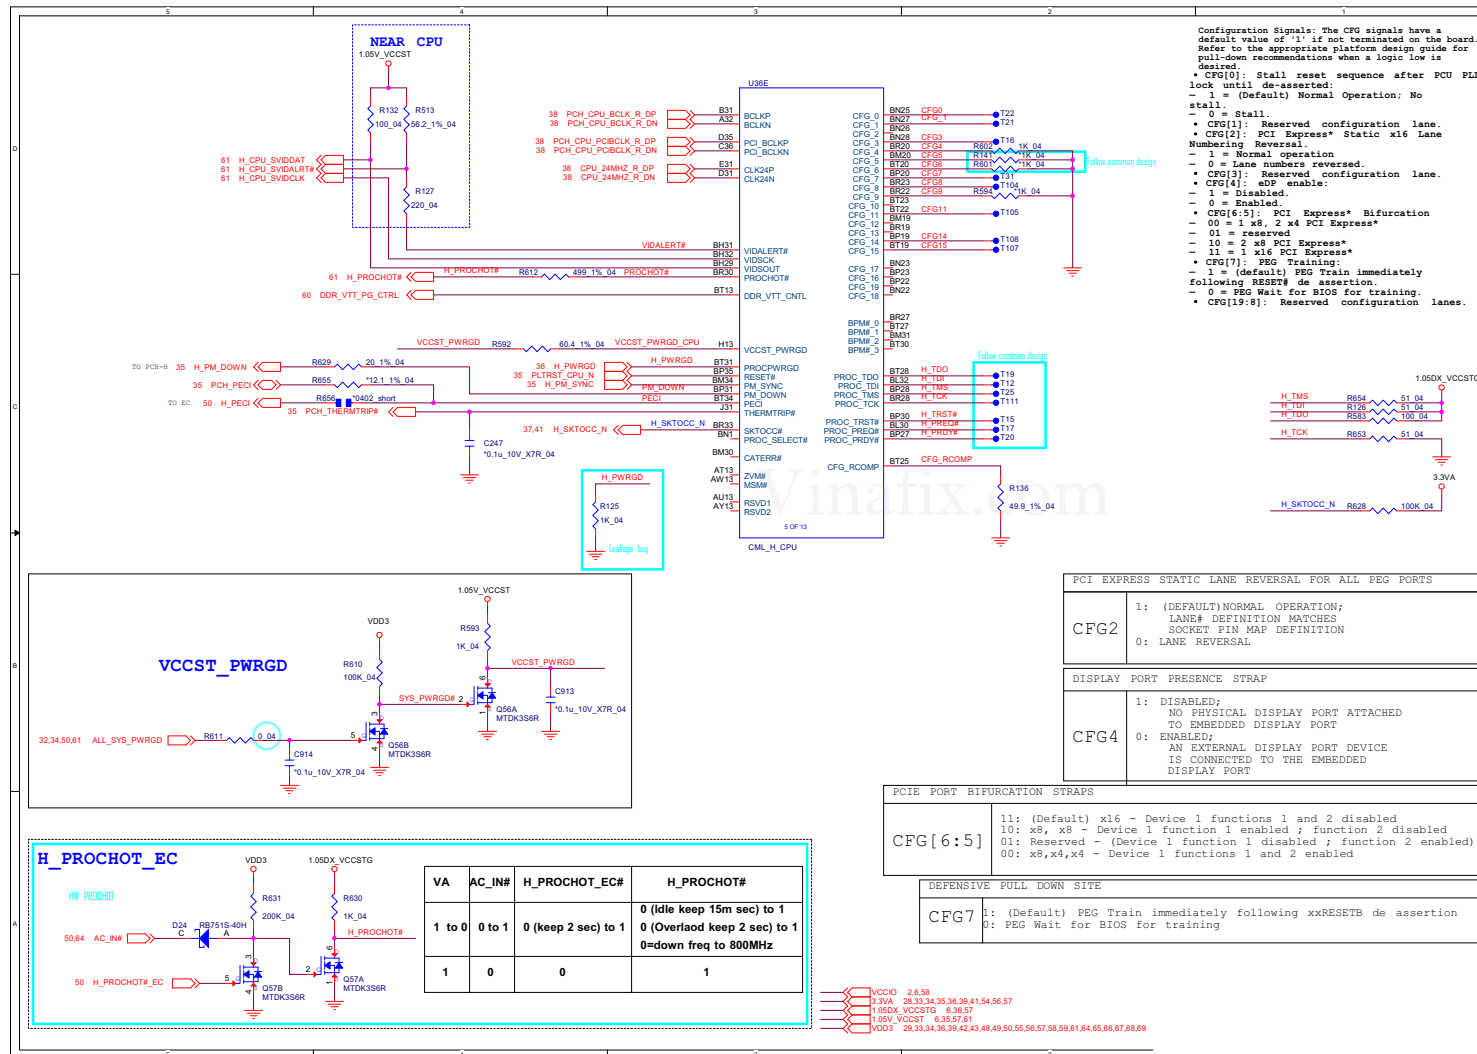

Processor 4/6


B. Schematic Diagrams

Sheet 5 of 74
Processor 4/6

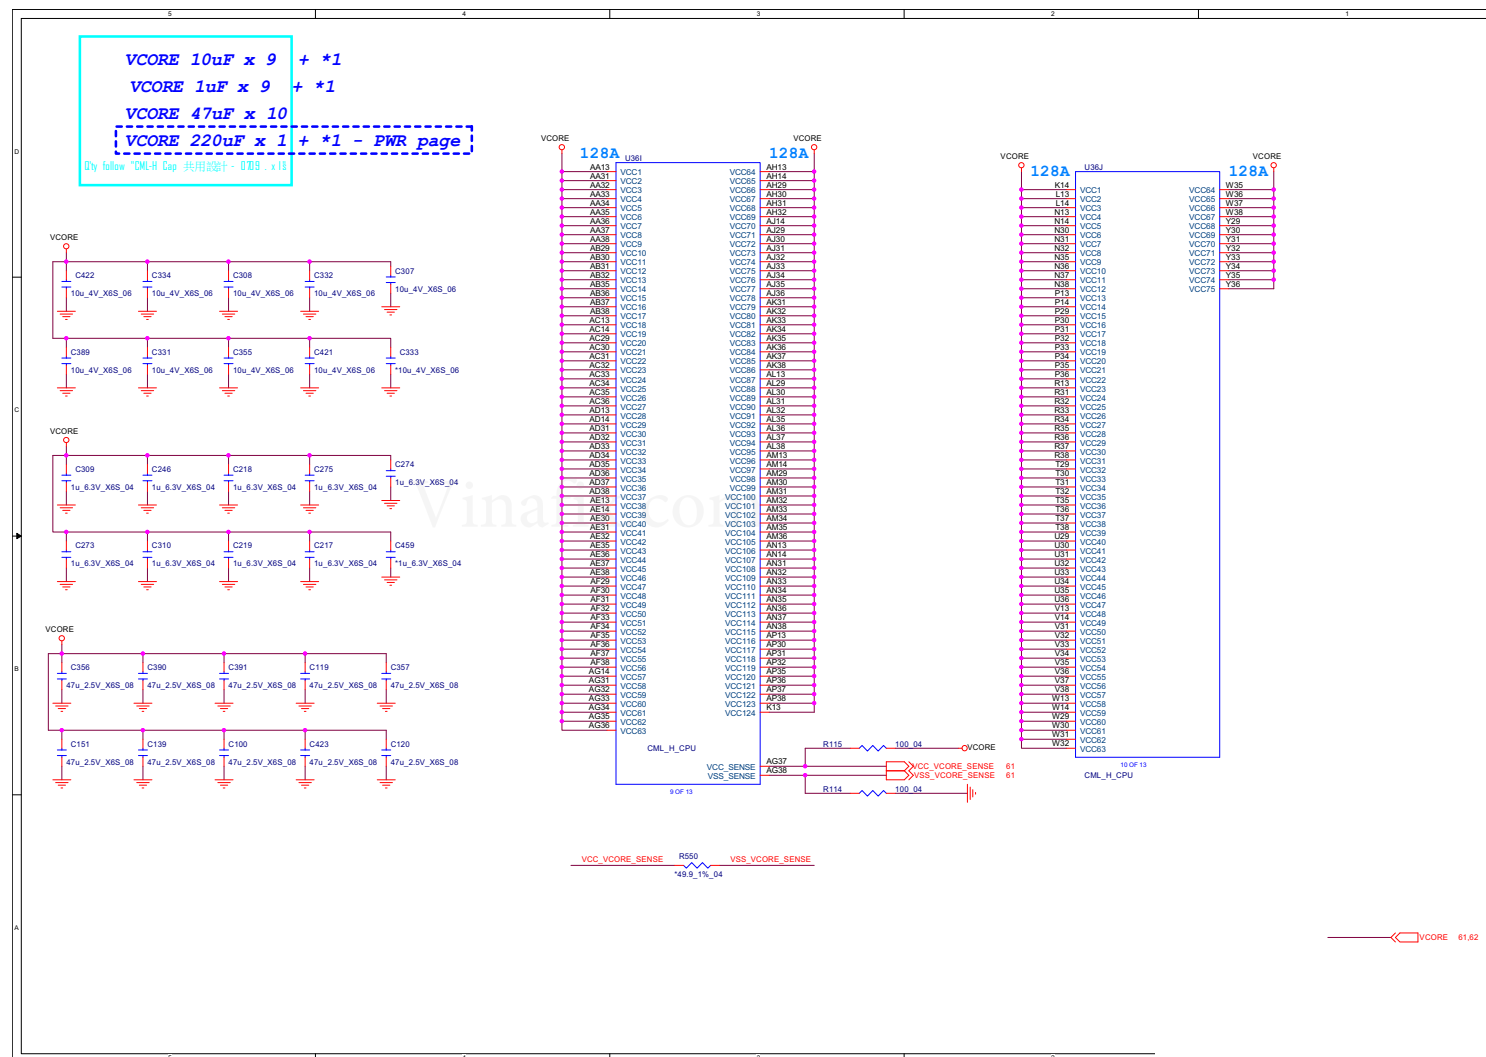


Processor 5/6 B - 7

B.Schematic Diagrams

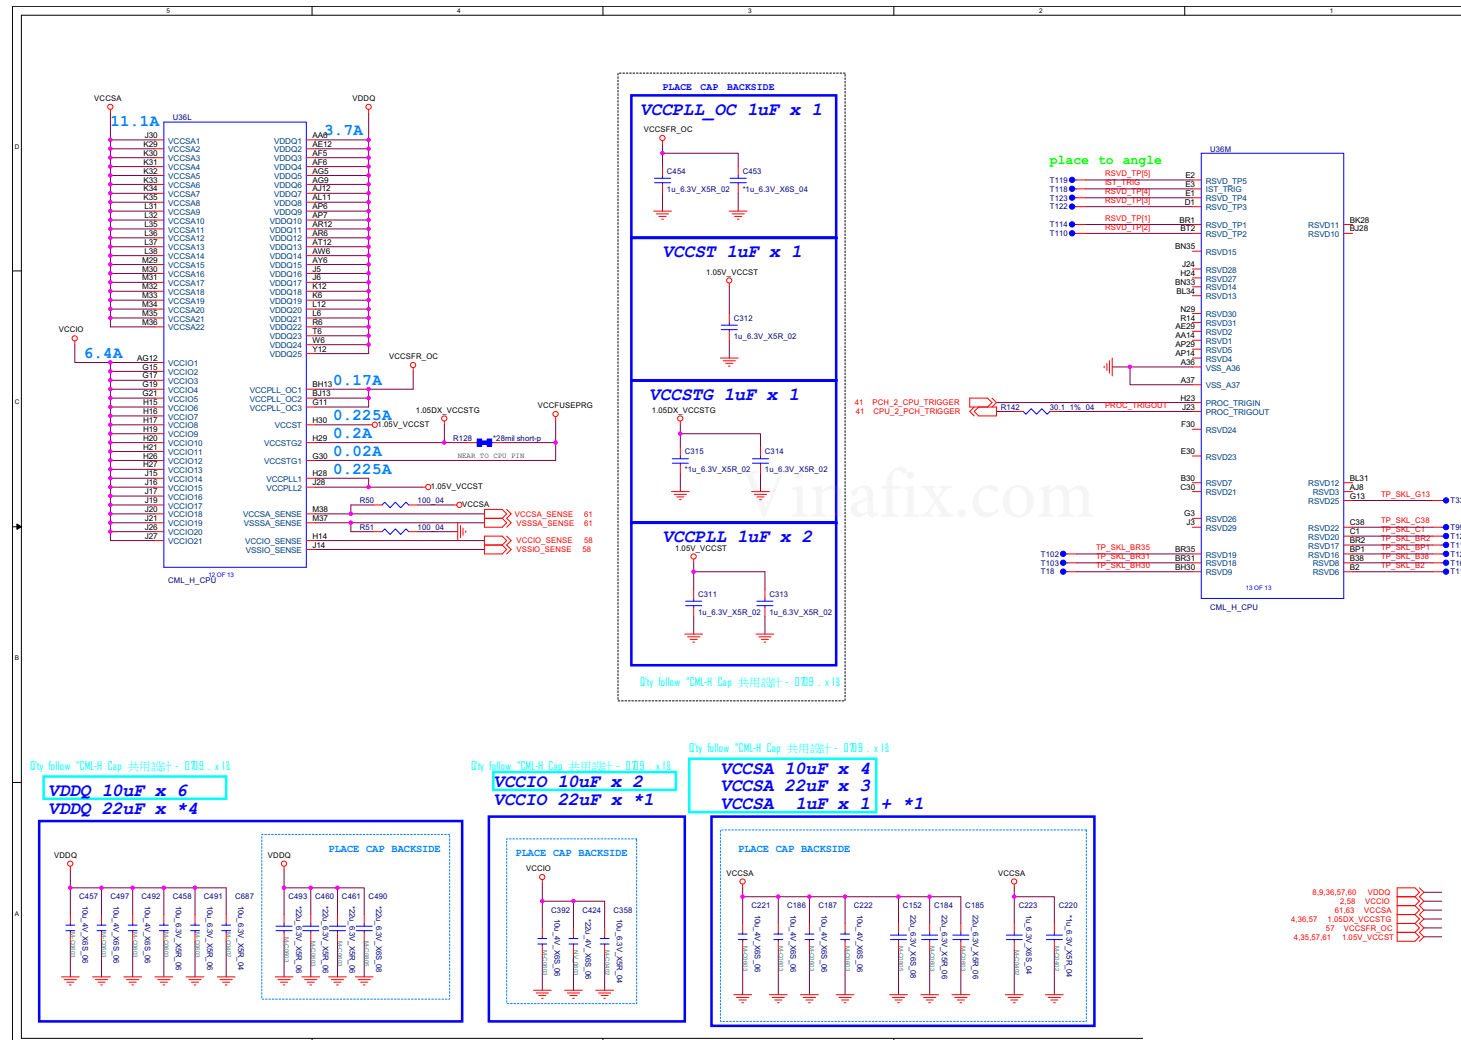


Processor 6/6

Sheet 7 of 74
Processor 6/6

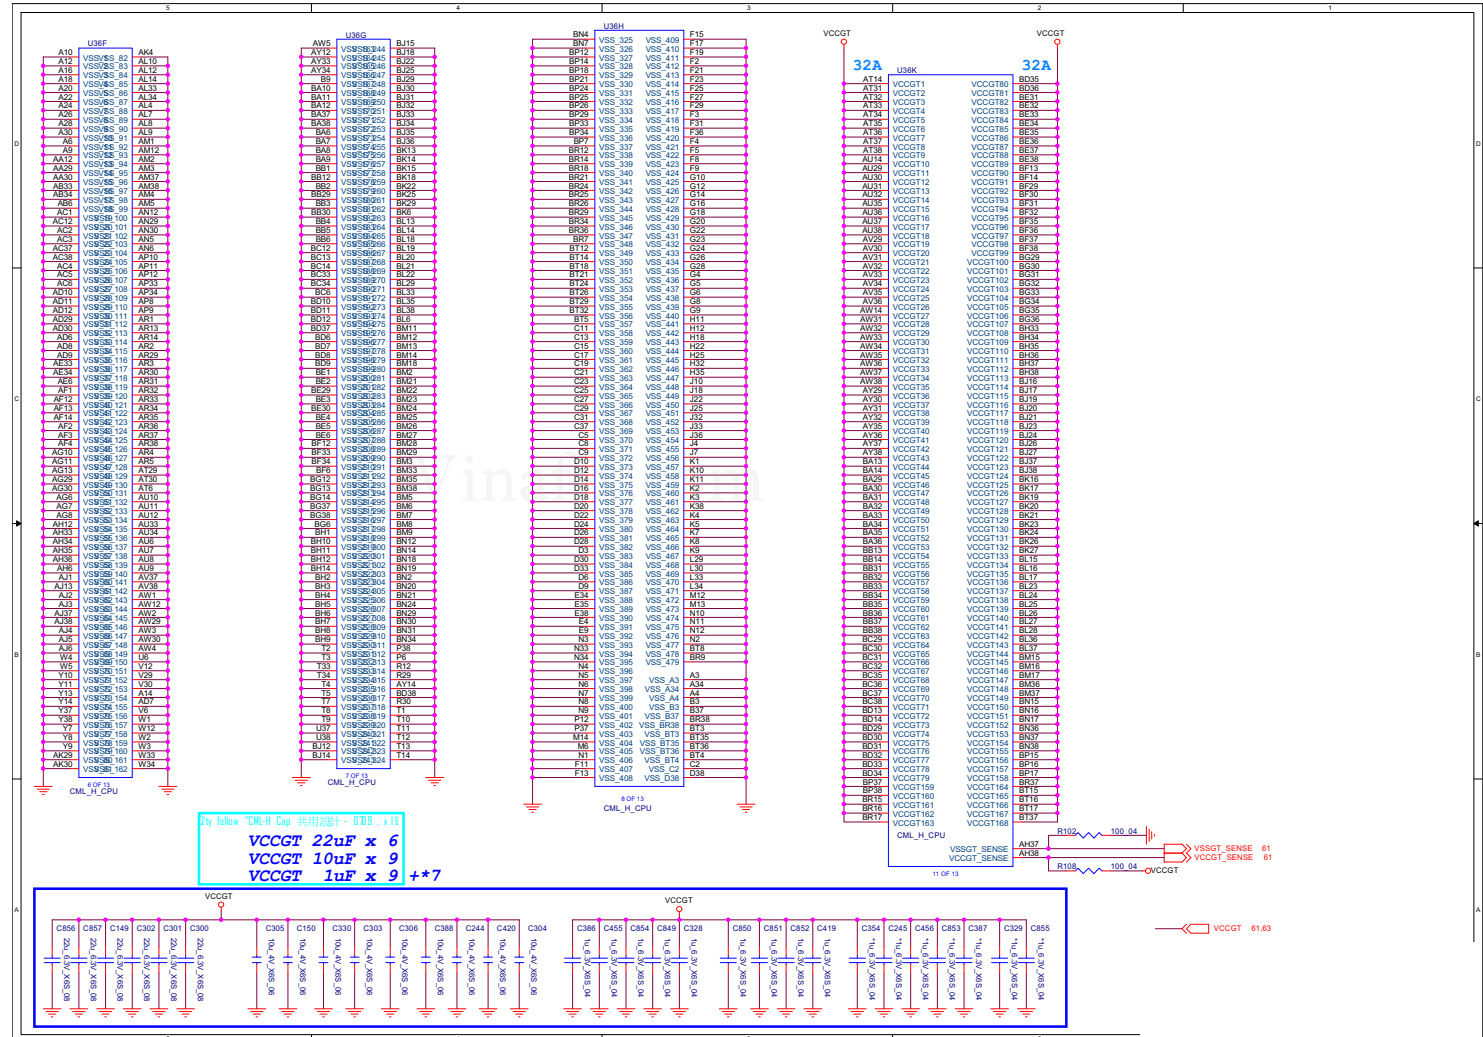


DDR4 CHB SO-DIMM


Sheet 9 of 74
DDR4 CHB SO-
DIMM

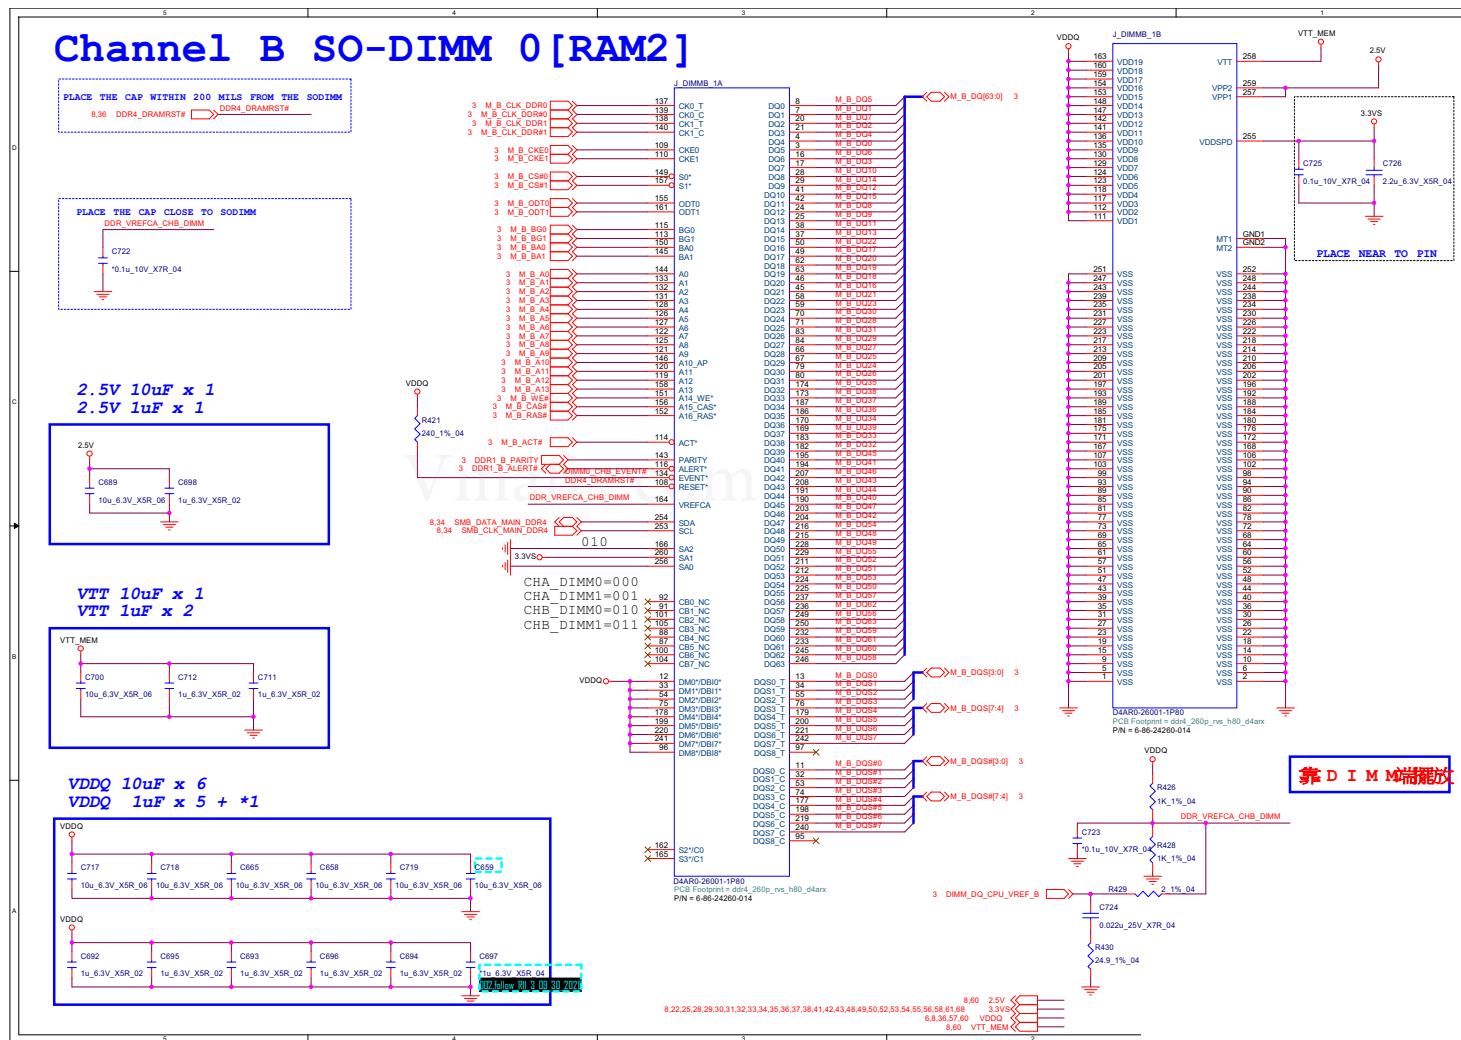


VGA PCI Express B - 11

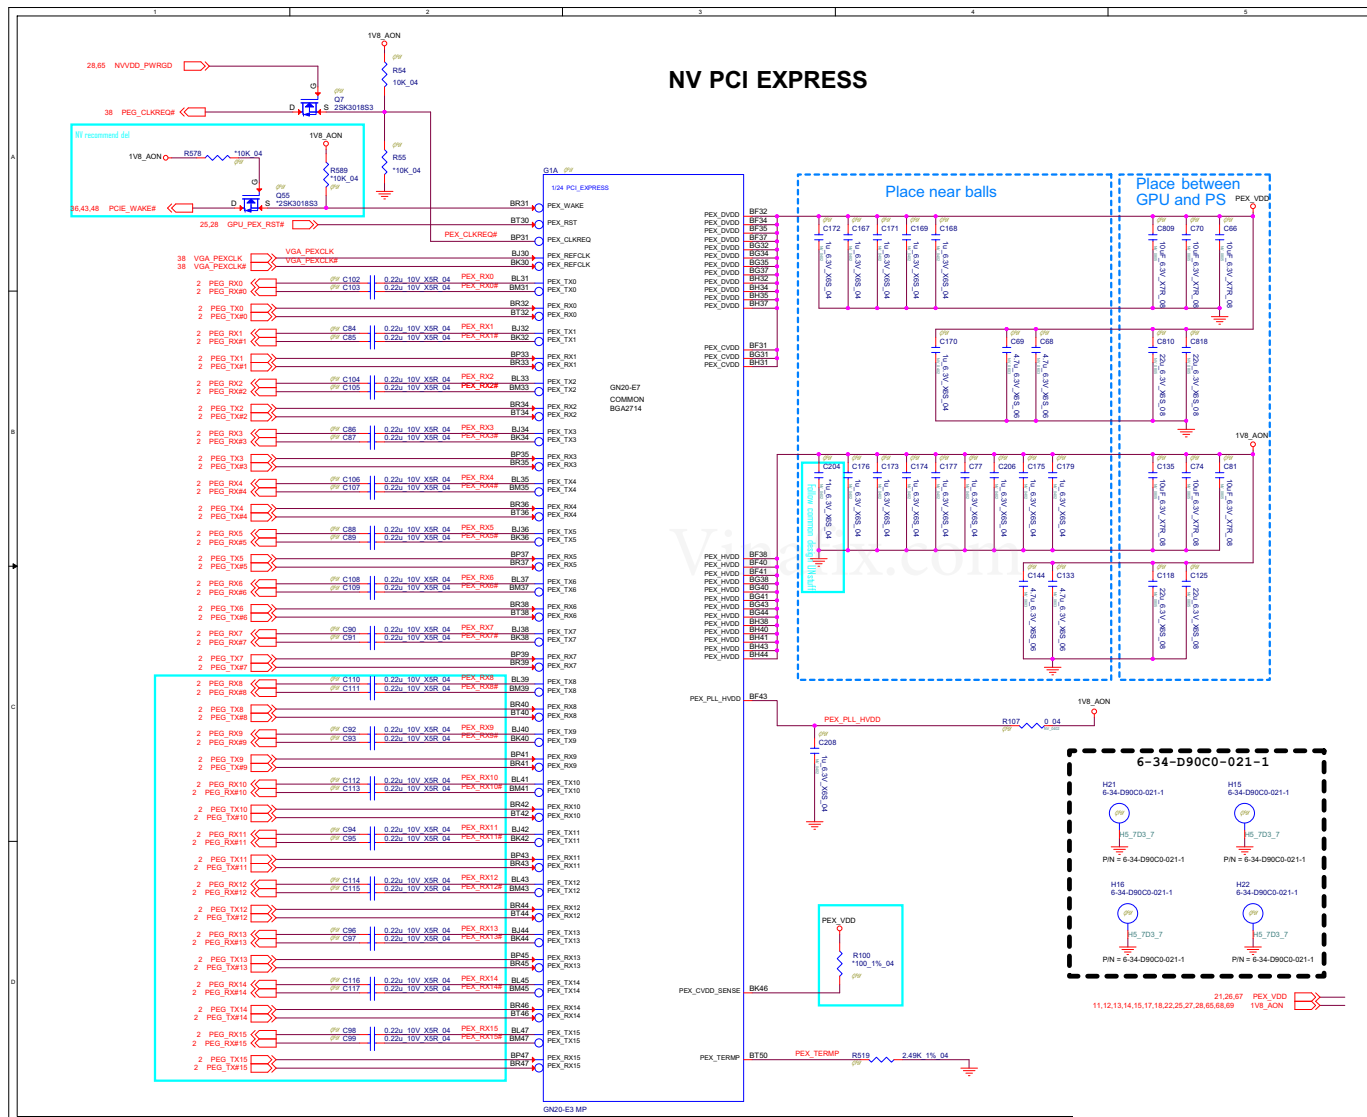

B - 12 GPU Frame Buffer A/B

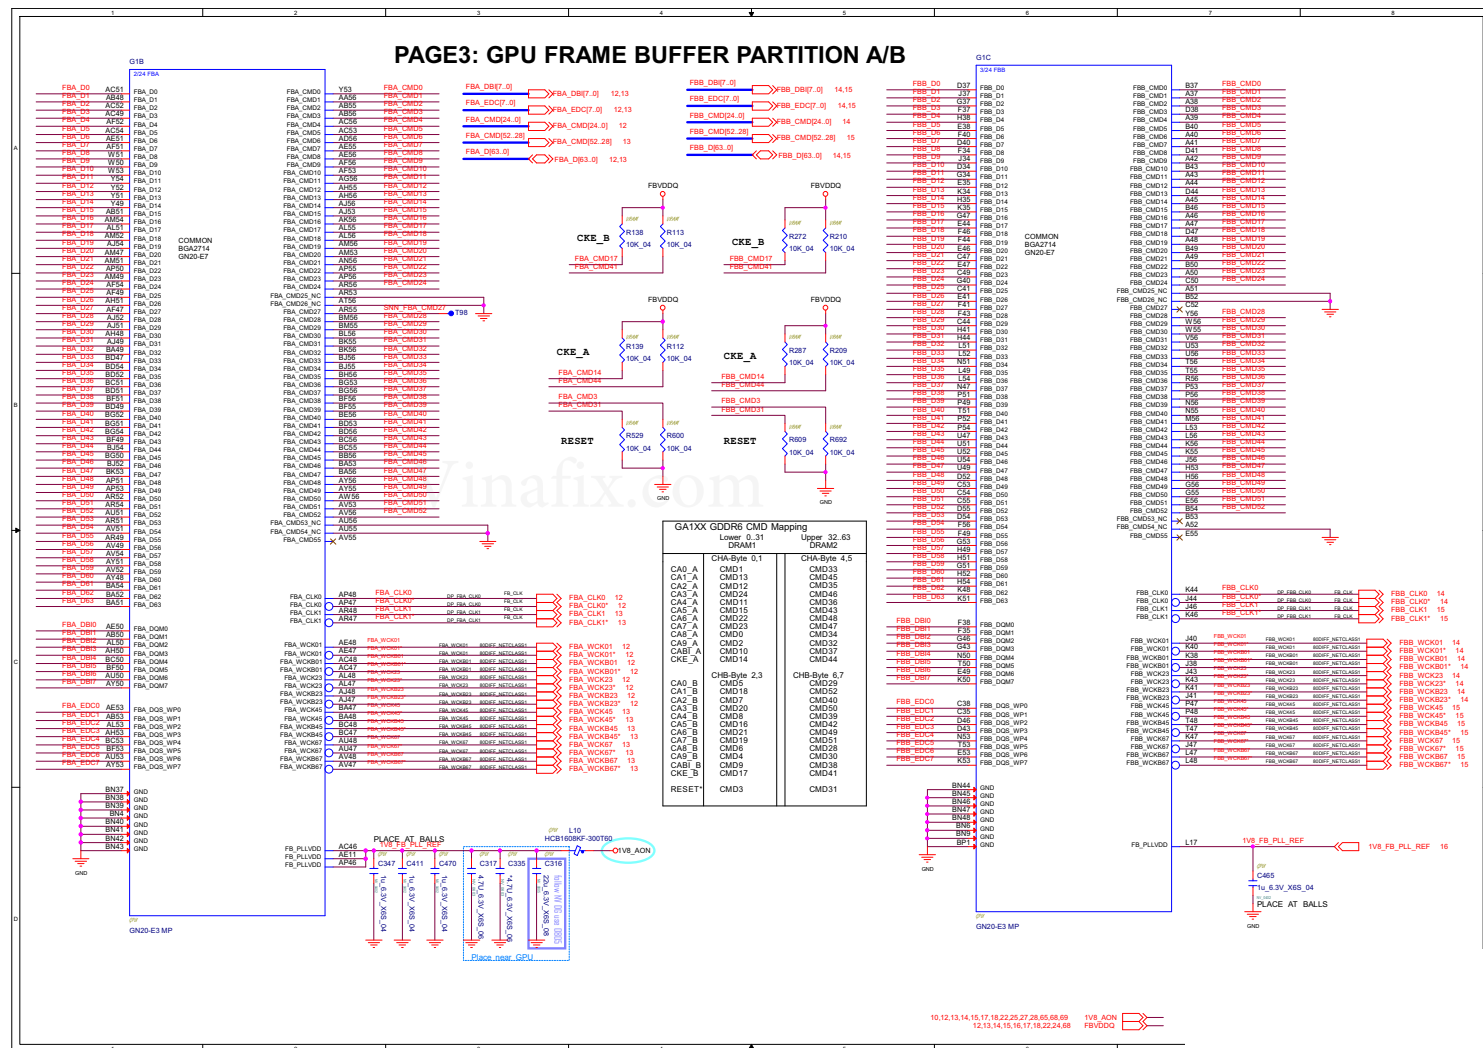

Frame Buffer A

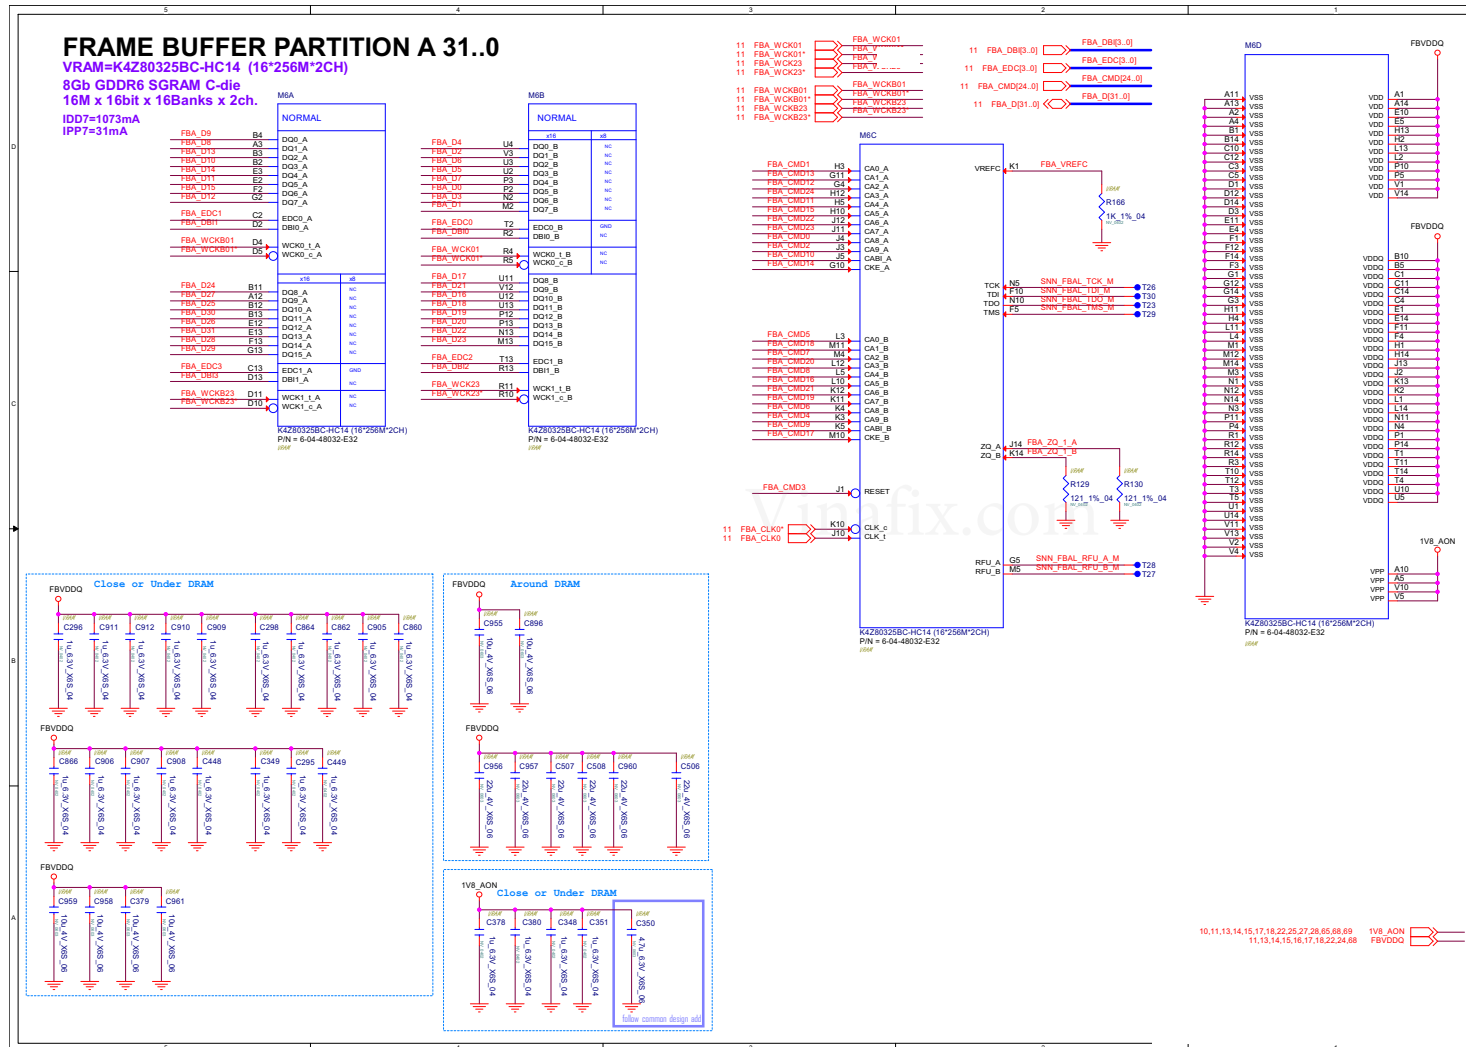
Sheet 12 of 74
Frame Buffer A

Frame Buffer A

B.Schematic Diagrams

Sheet 13 of 74
Frame Buffer A

Vinafix.com

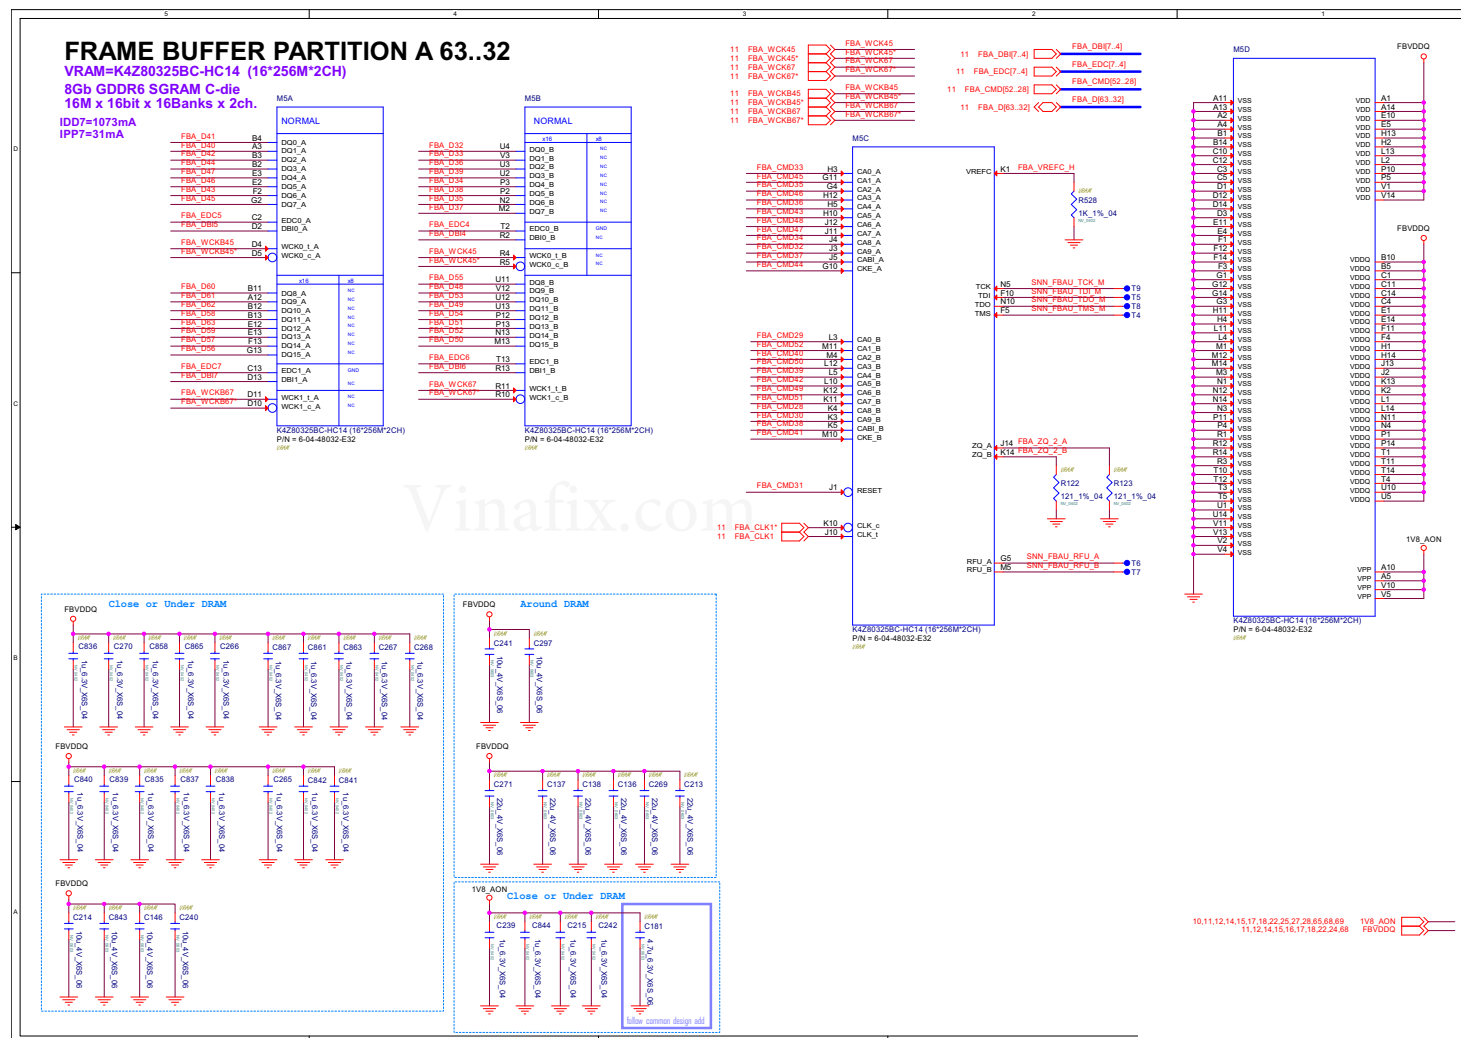


Frame Buffer B B - 15




Frame Buffer B

Sheet 15 of 74
Frame Buffer B

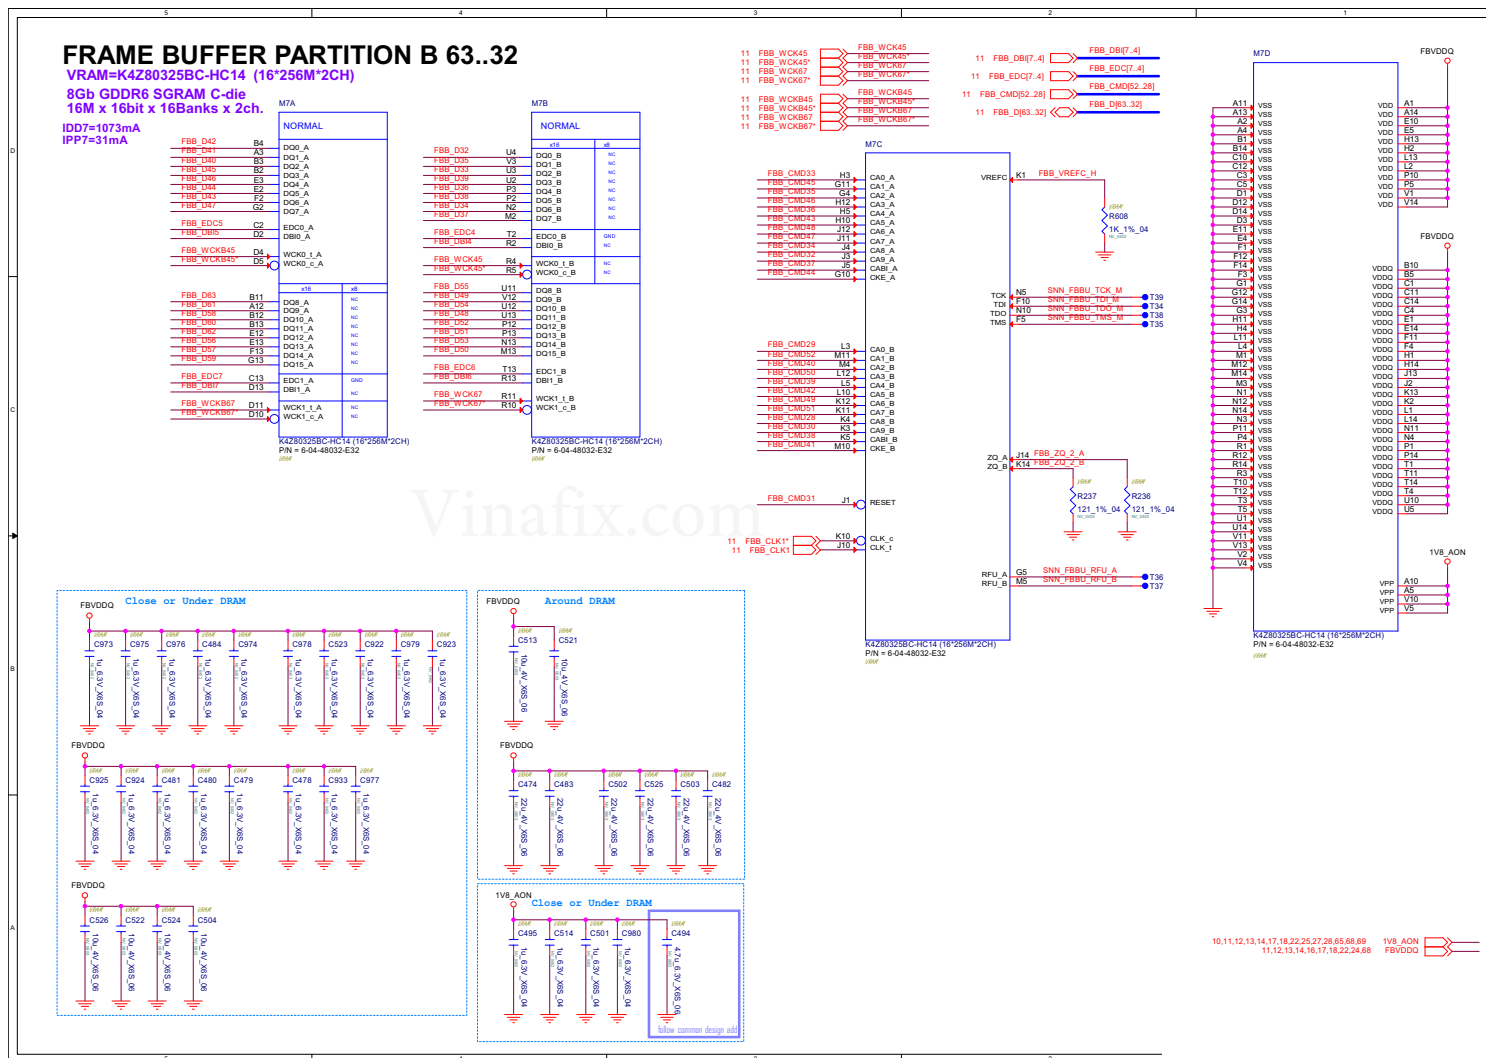


Frame Buffer C


Sheet 17 of 74
Frame Buffer C

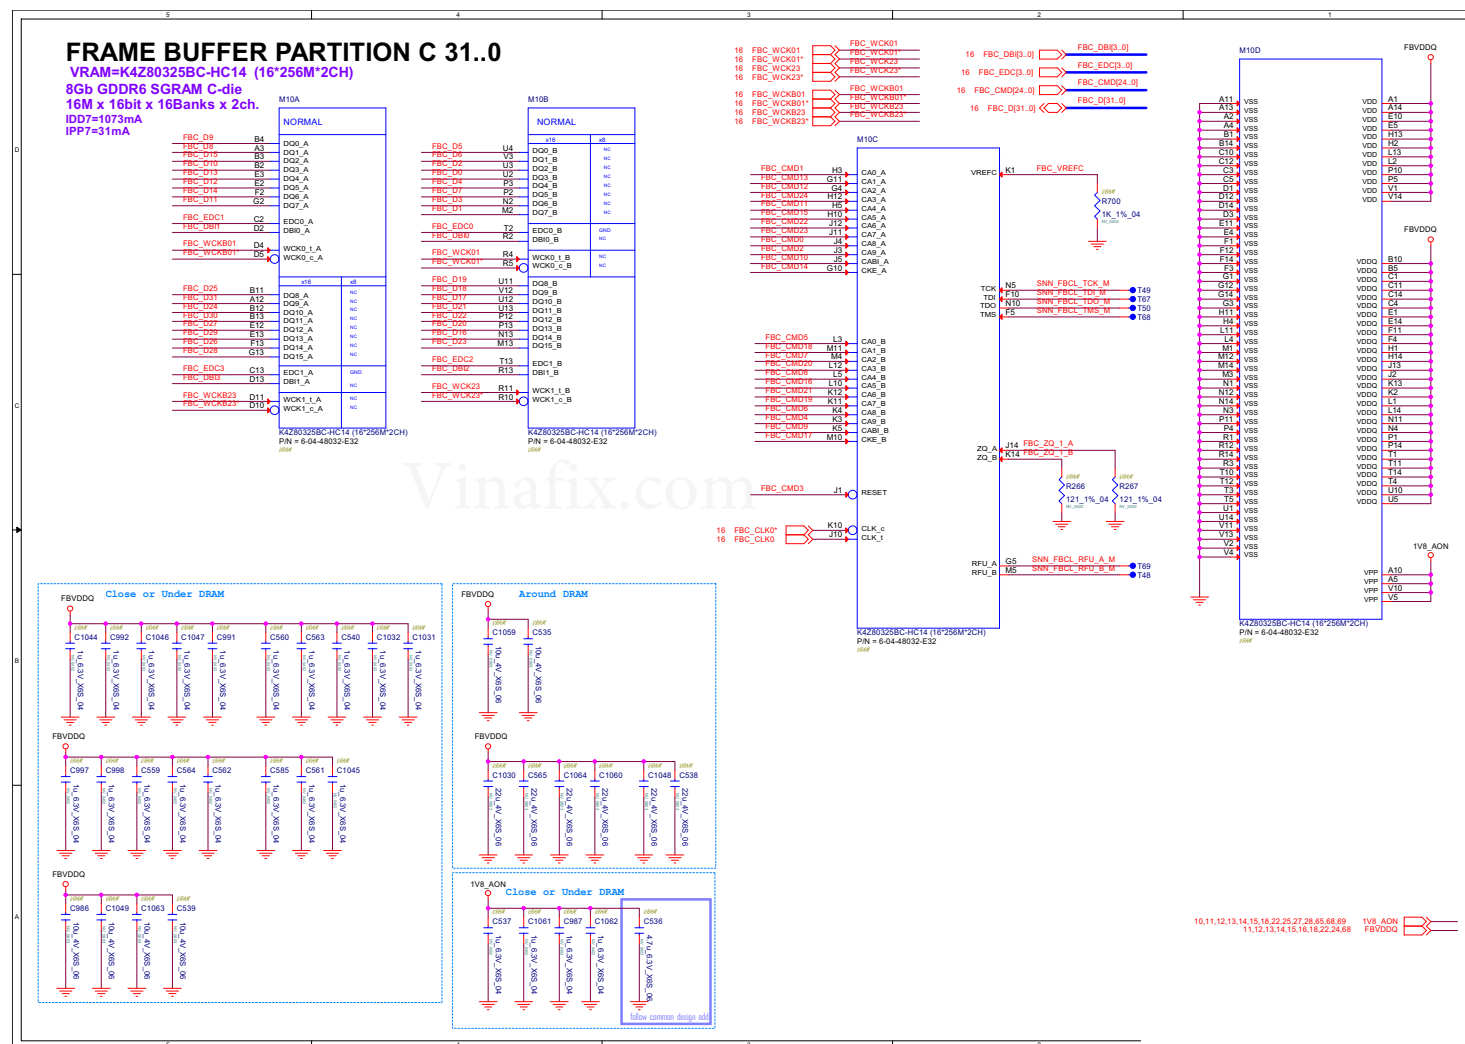

Frame Buffer C B - 19

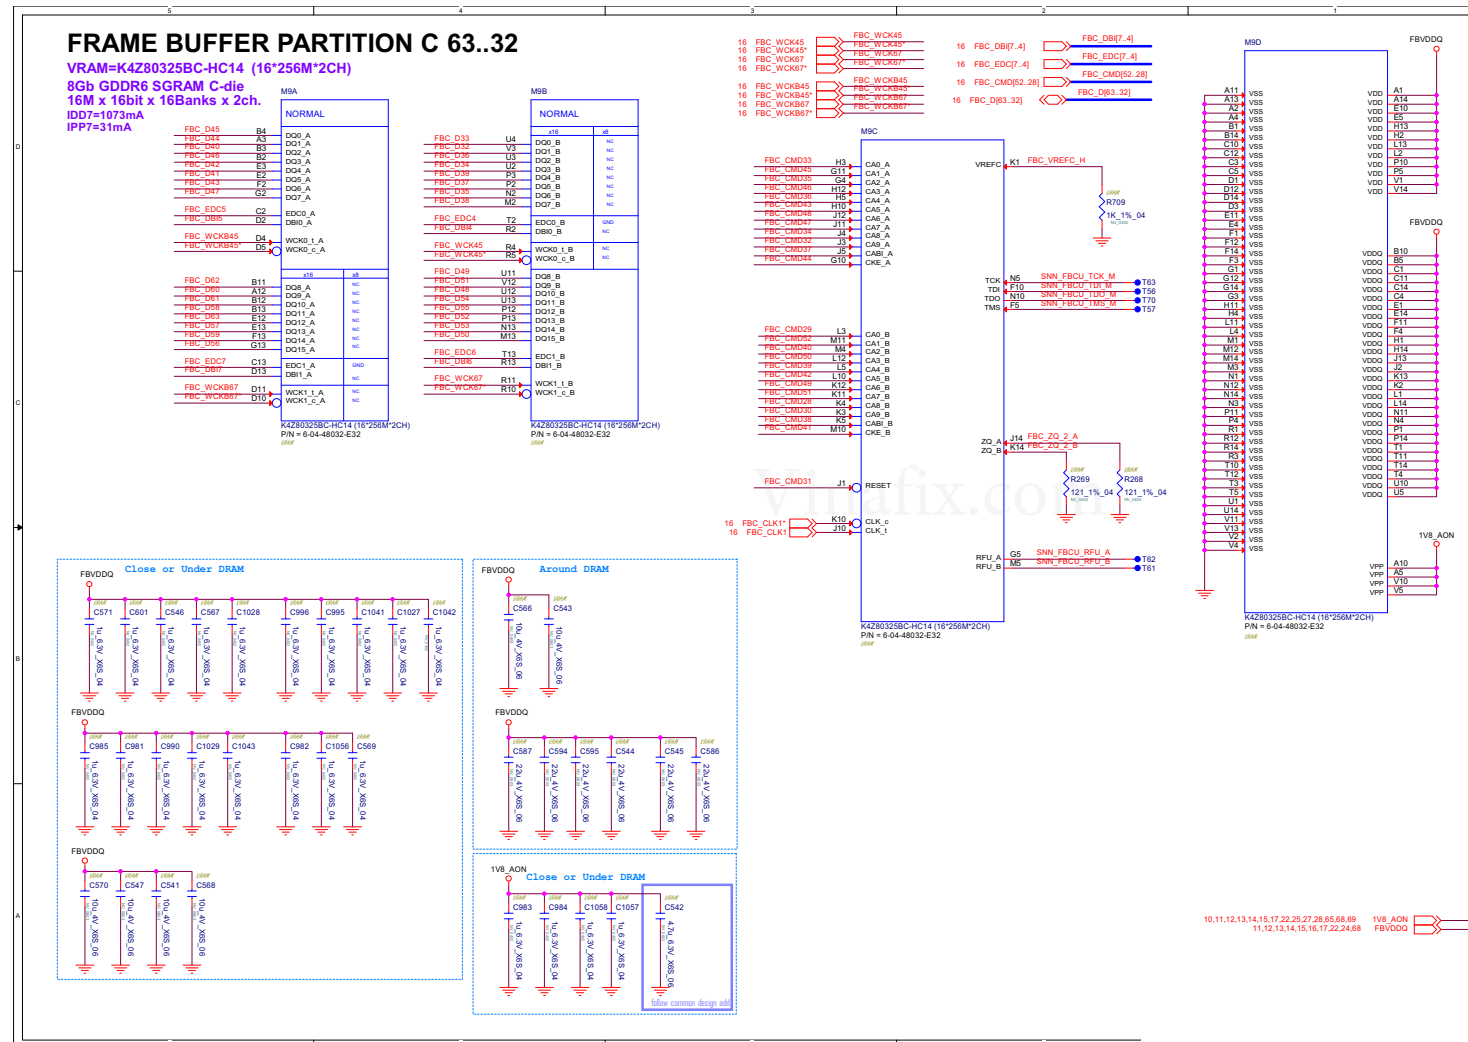


GPU GND

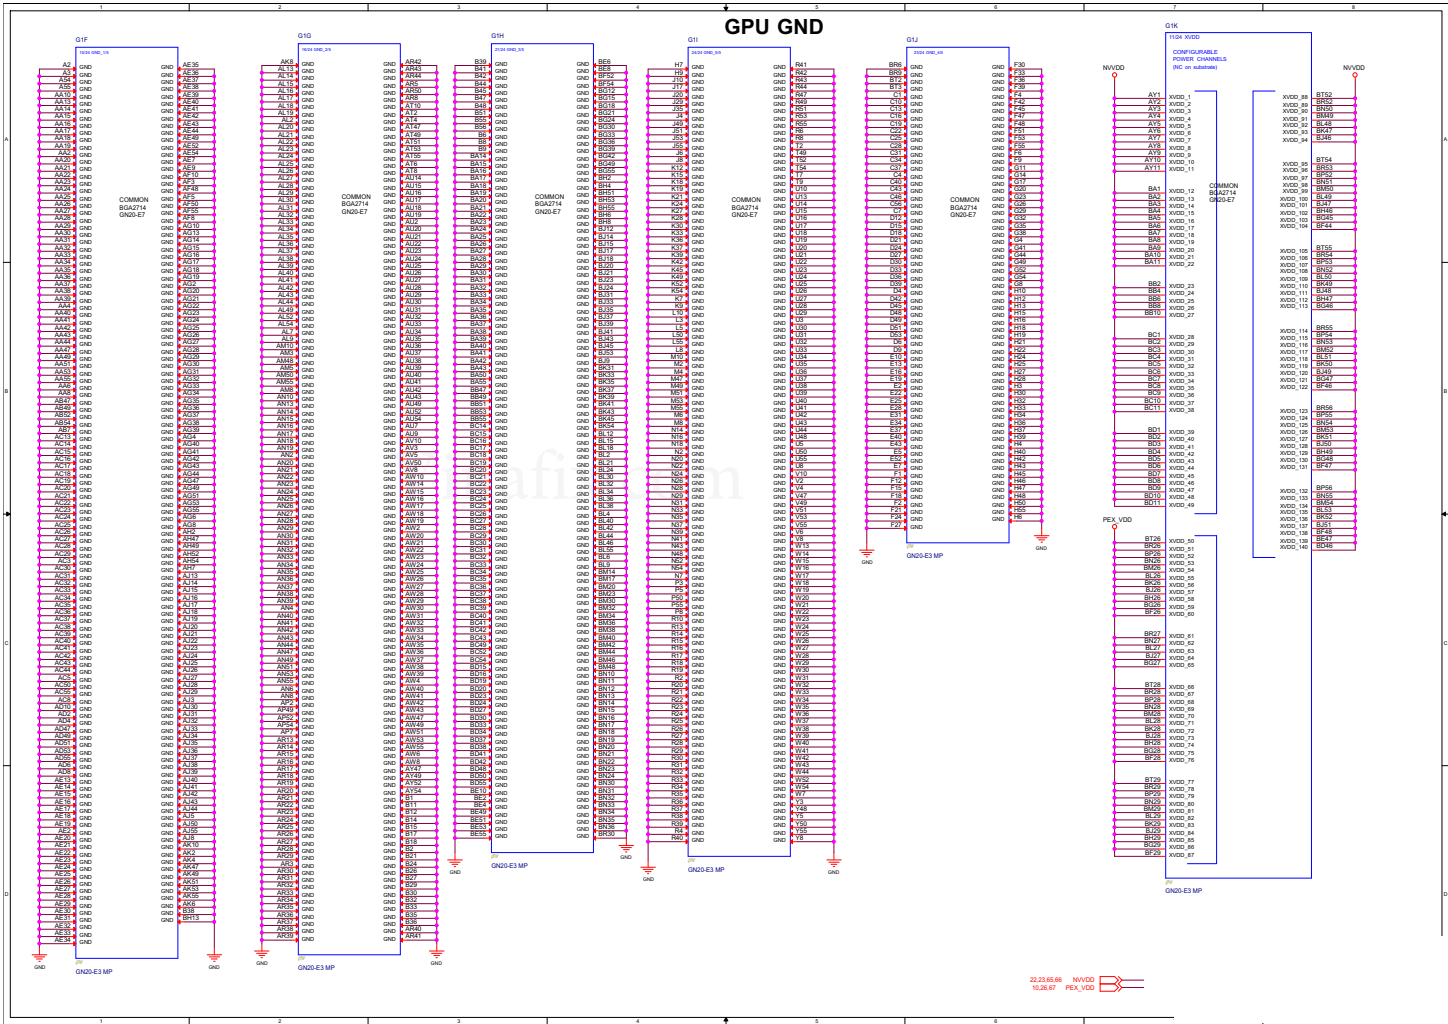


Schematic Diagrams

GPU Decoupling 1

Sheet 21 of 74
GPU Decoupling 1

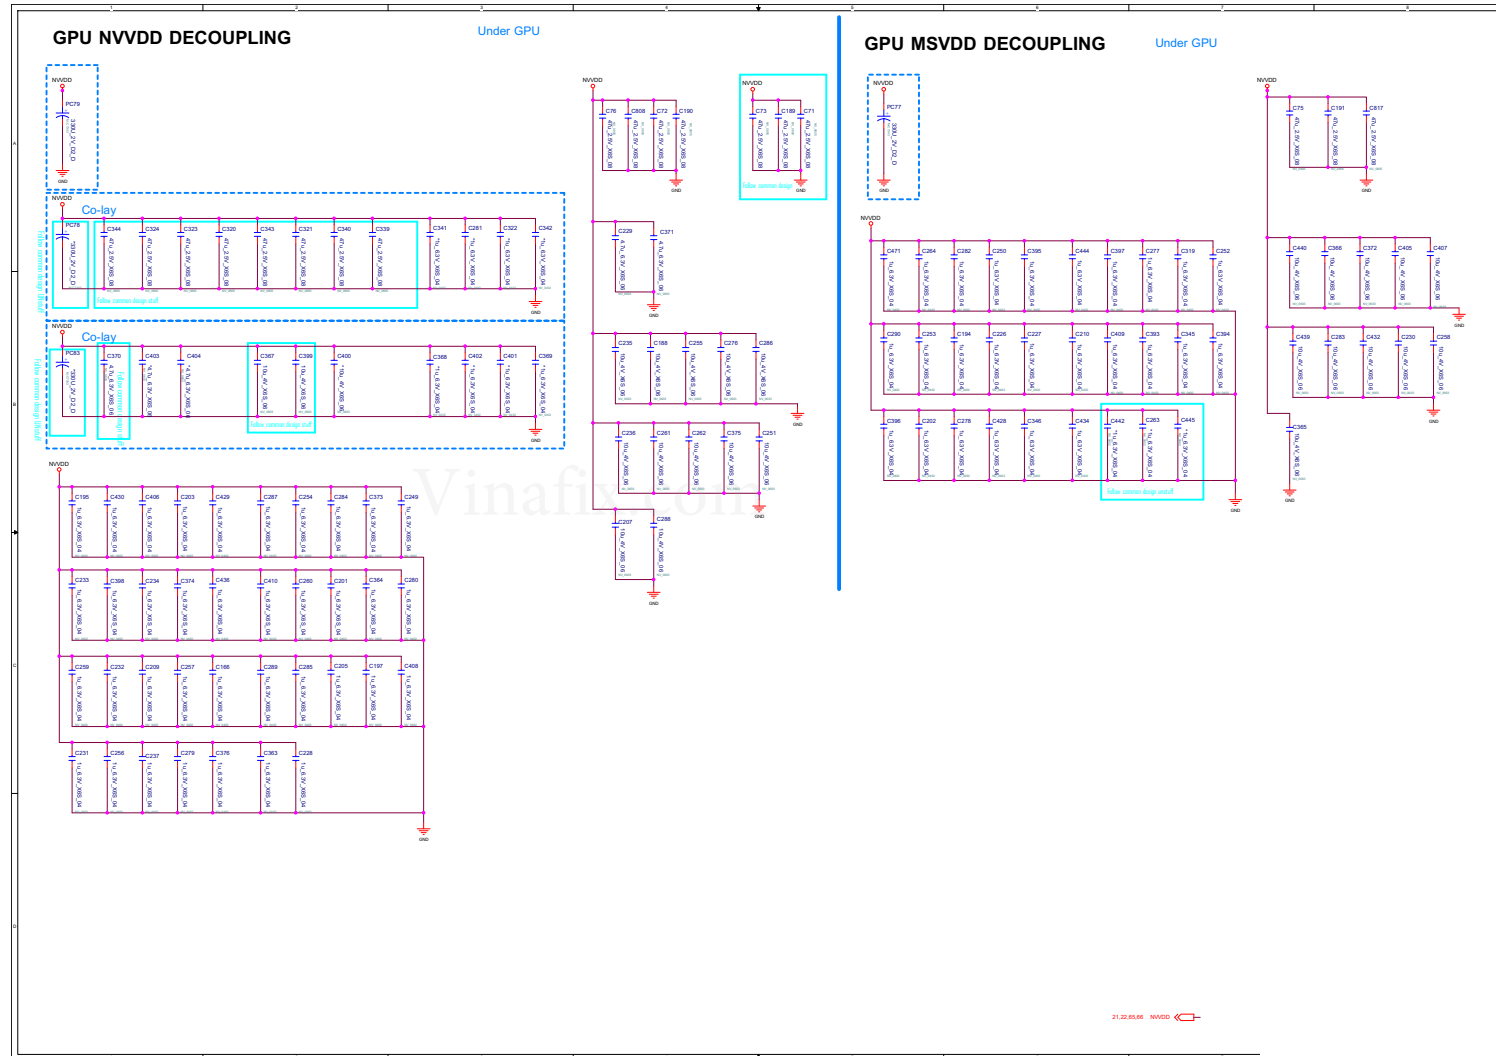


GPU Decoupling 2

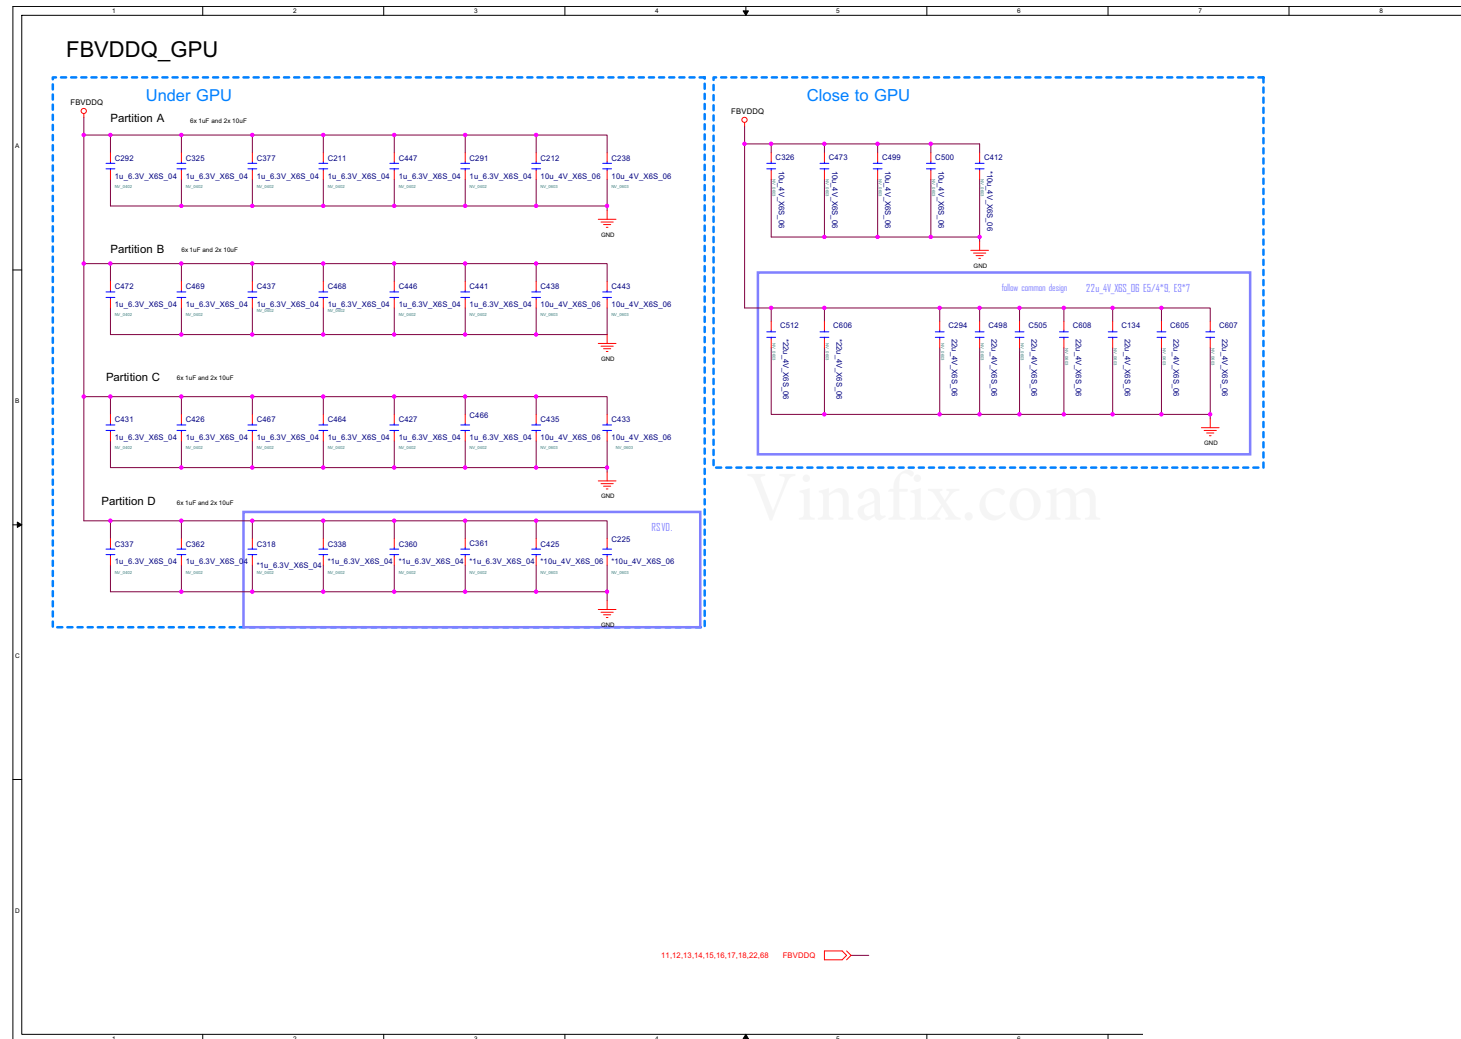


Sheet 22 of 74
GPU Decoupling 2


Misc - GPIO, I2C and ROM

Sheet 23 of 74
Misc - GPIO, I2C,
and ROM

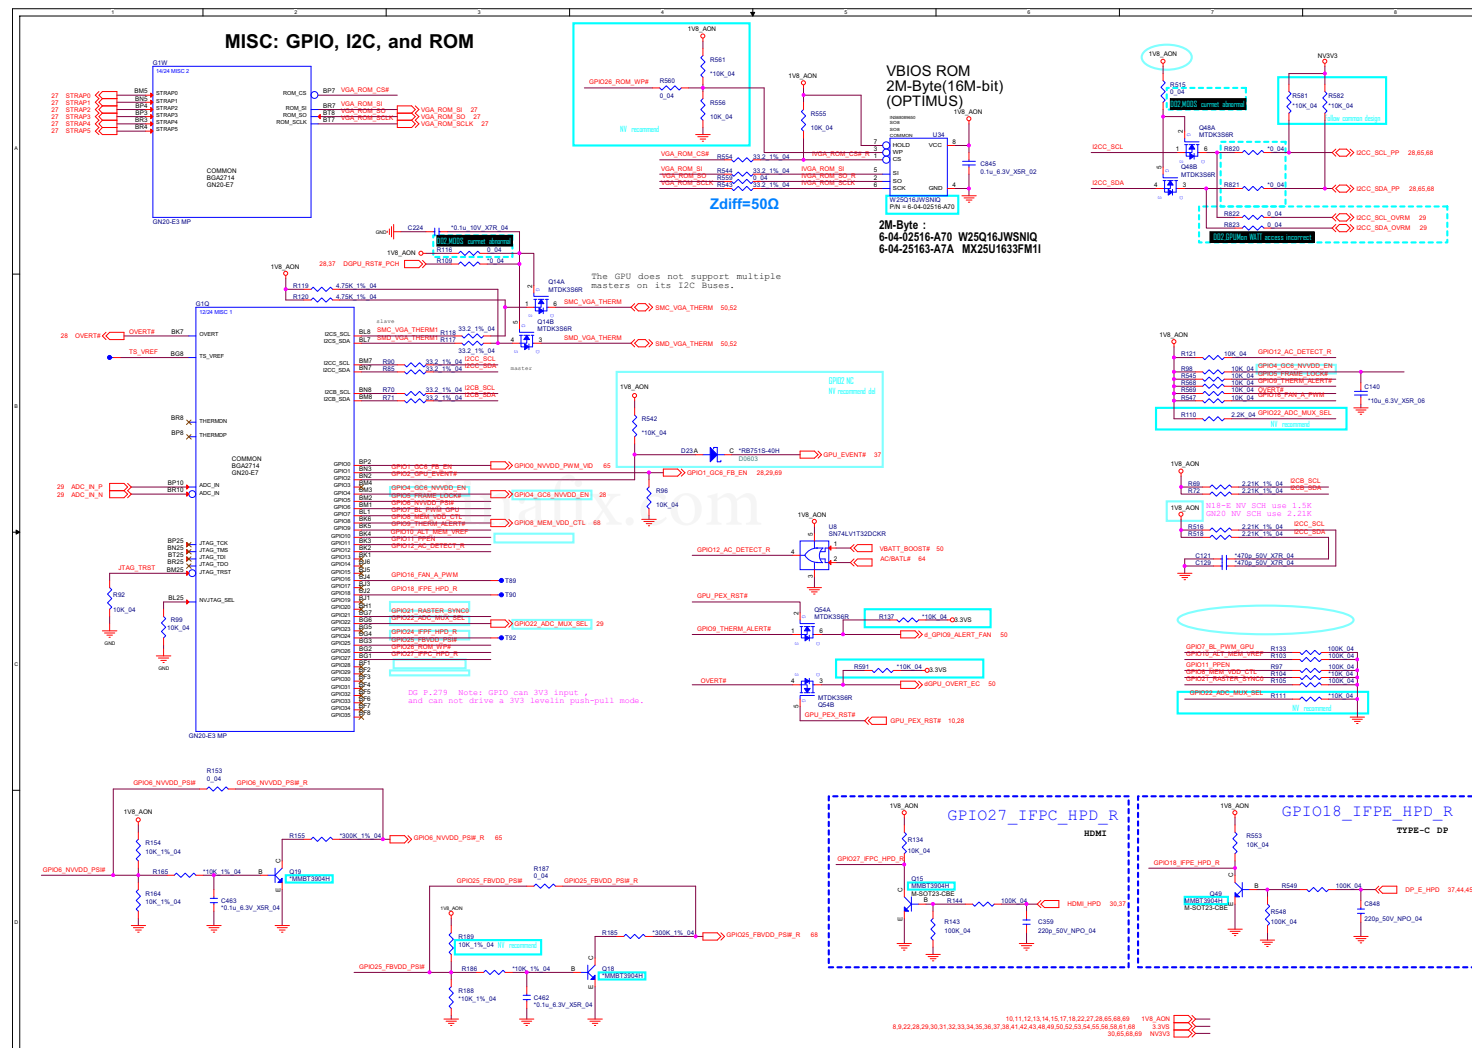


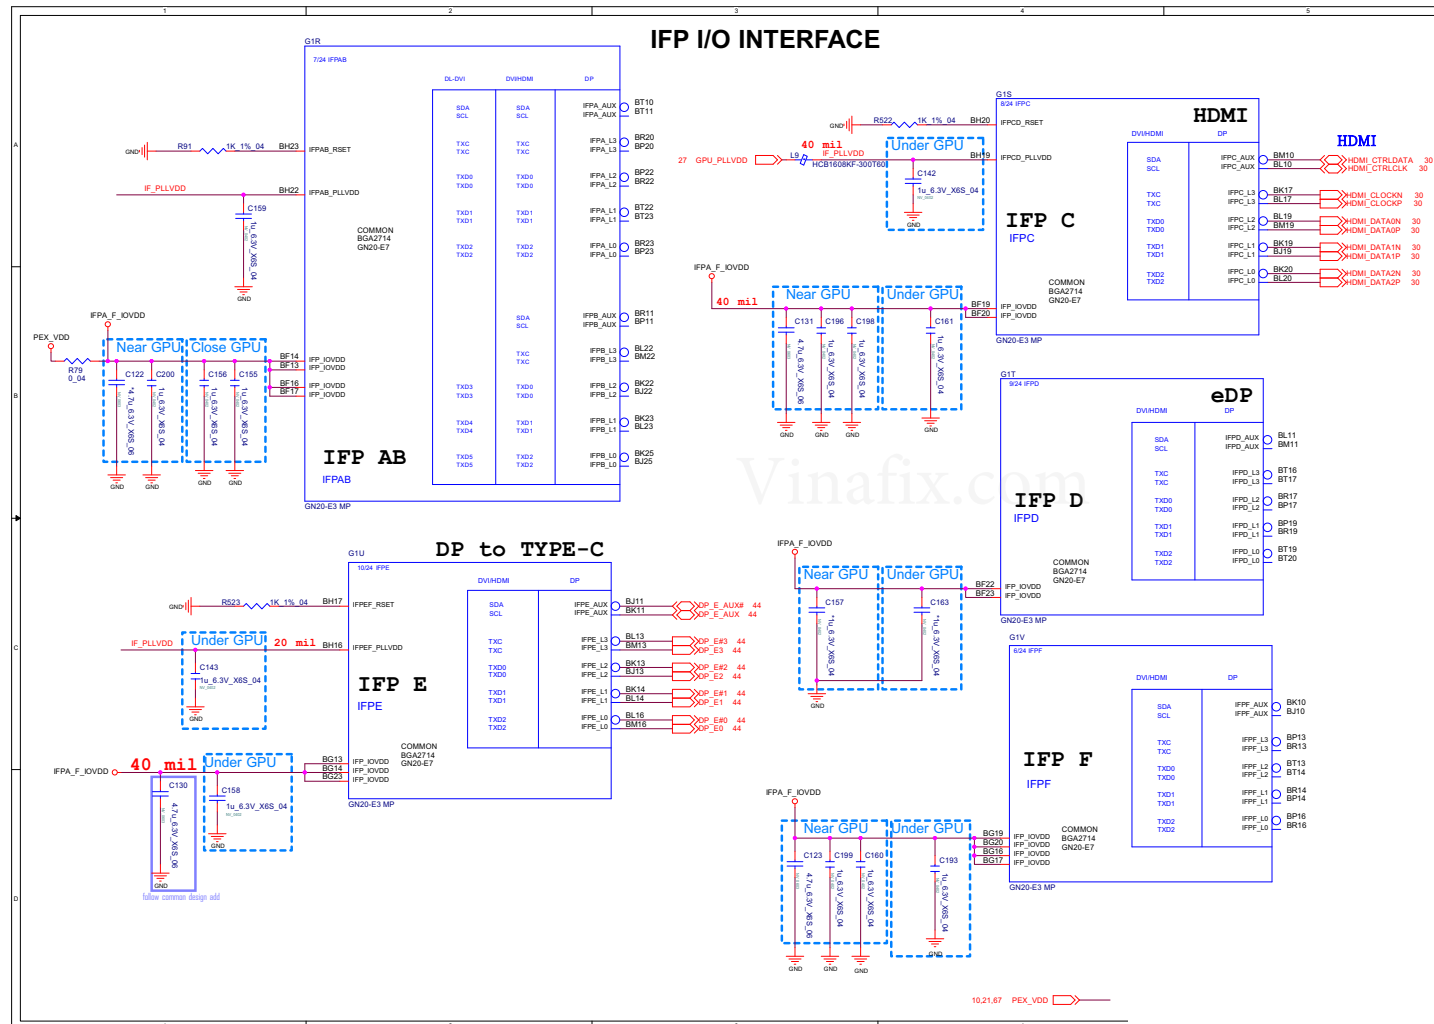IFP I/O Interface B - 25

Straps and XTAL

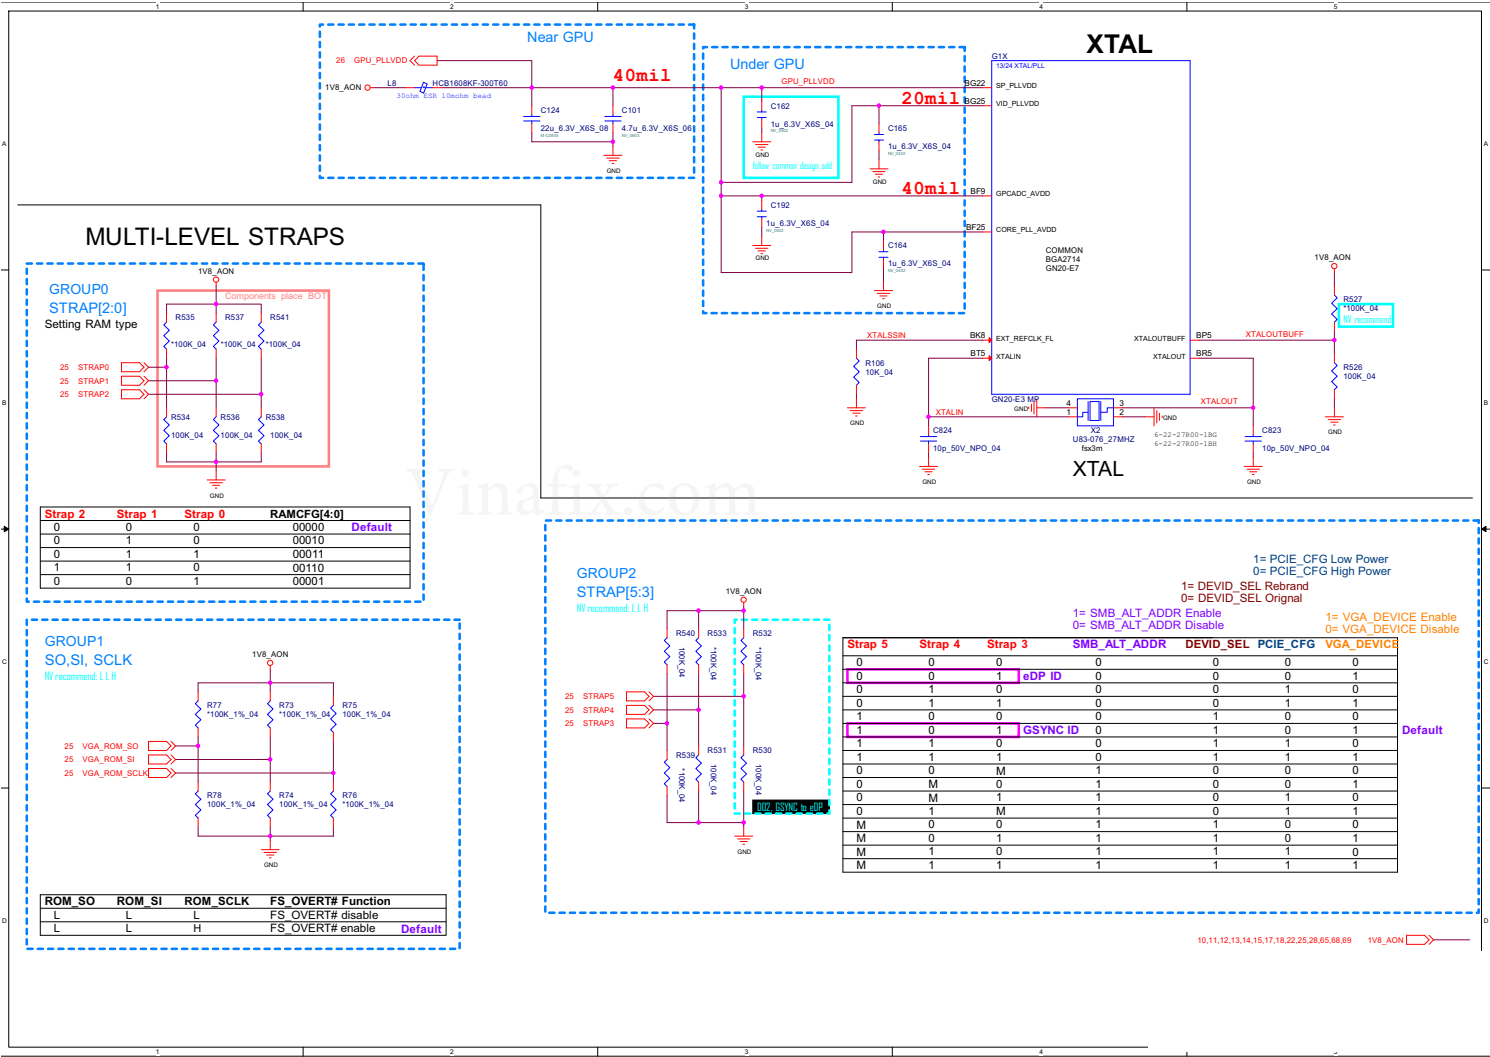


NVIDIA Power Sequence

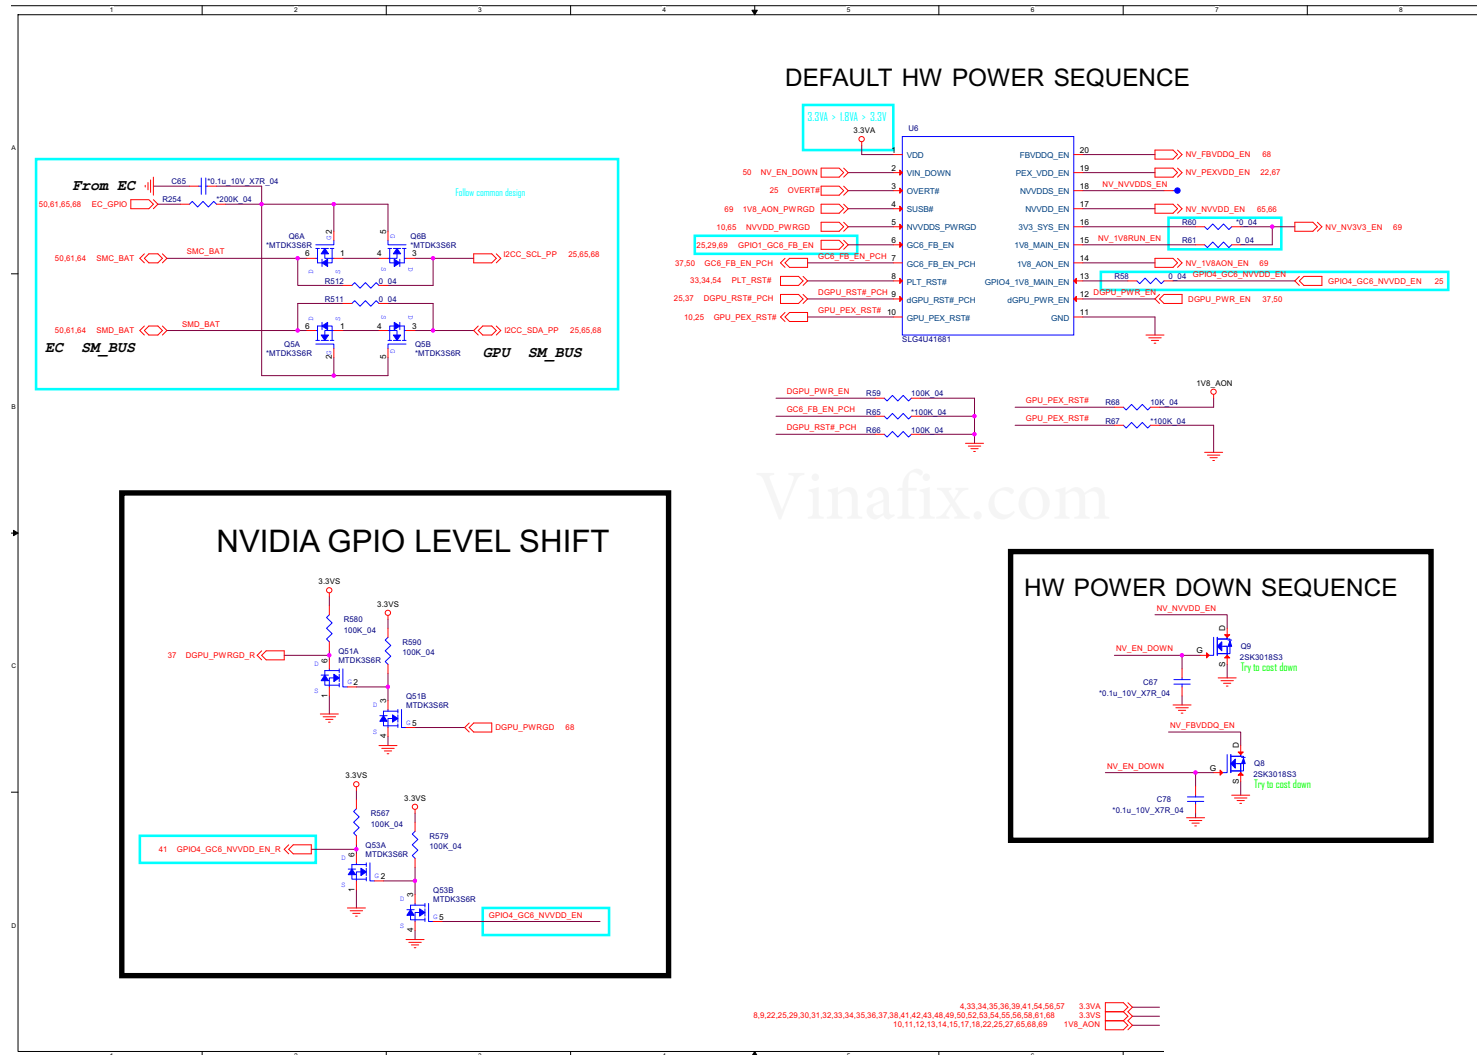

Sheet 26 of 74
NVIDIA Power
Sequence


DGPU Power Measurement

Sheet 27 of 74
DGPU Power
Measurement

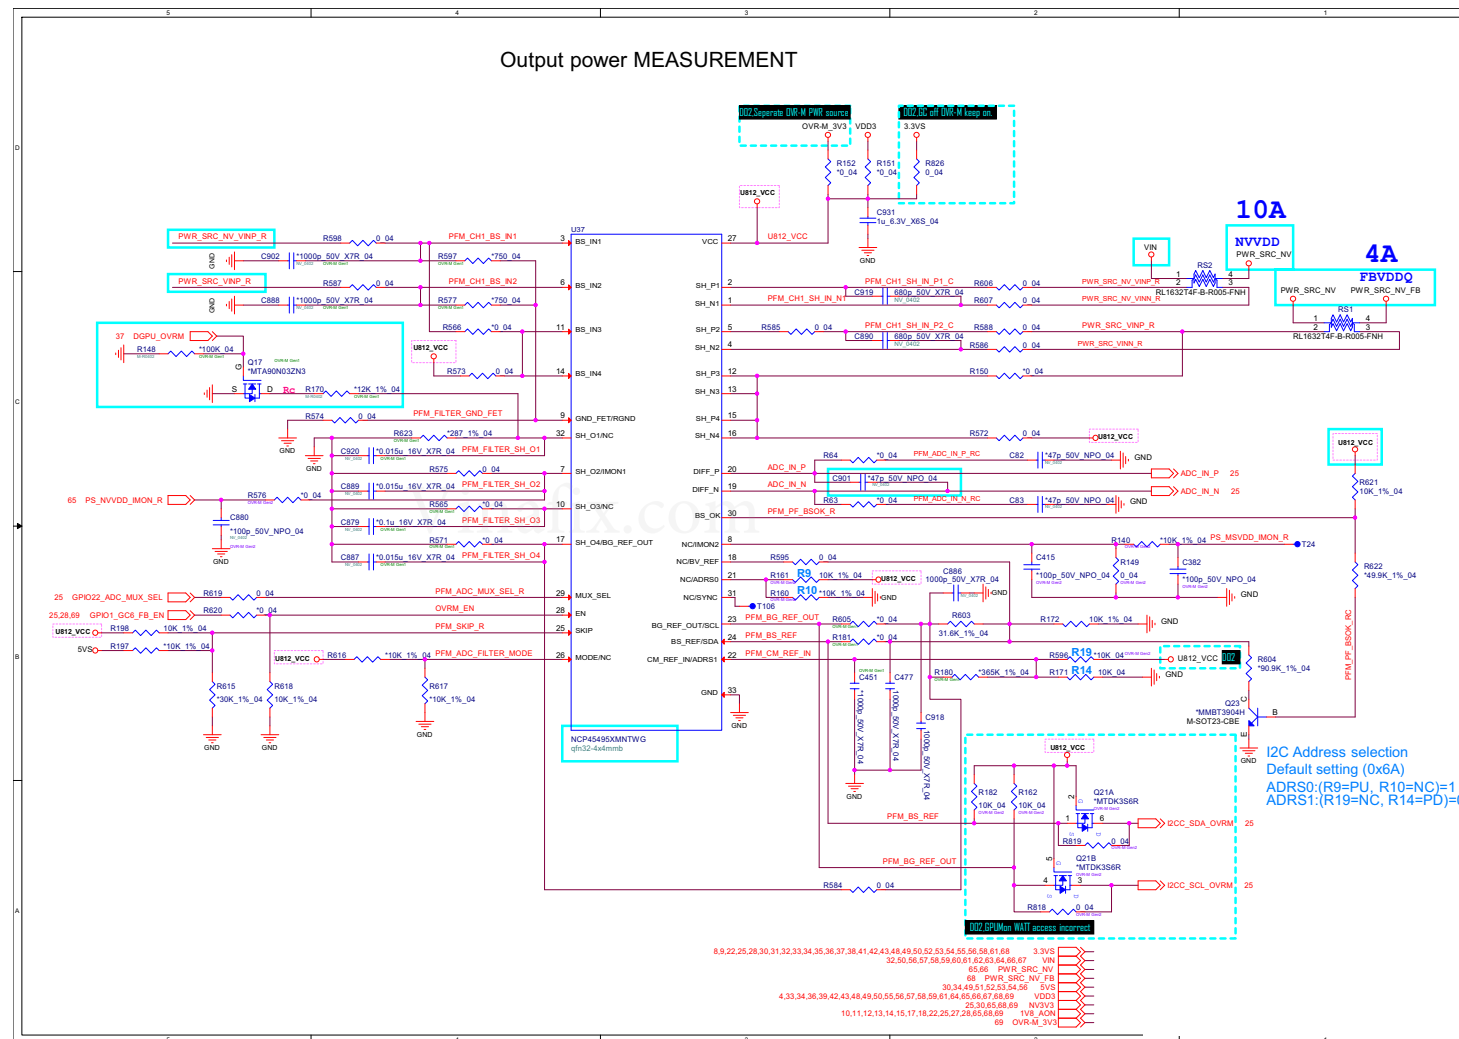

Schematic Diagrams


HDMI

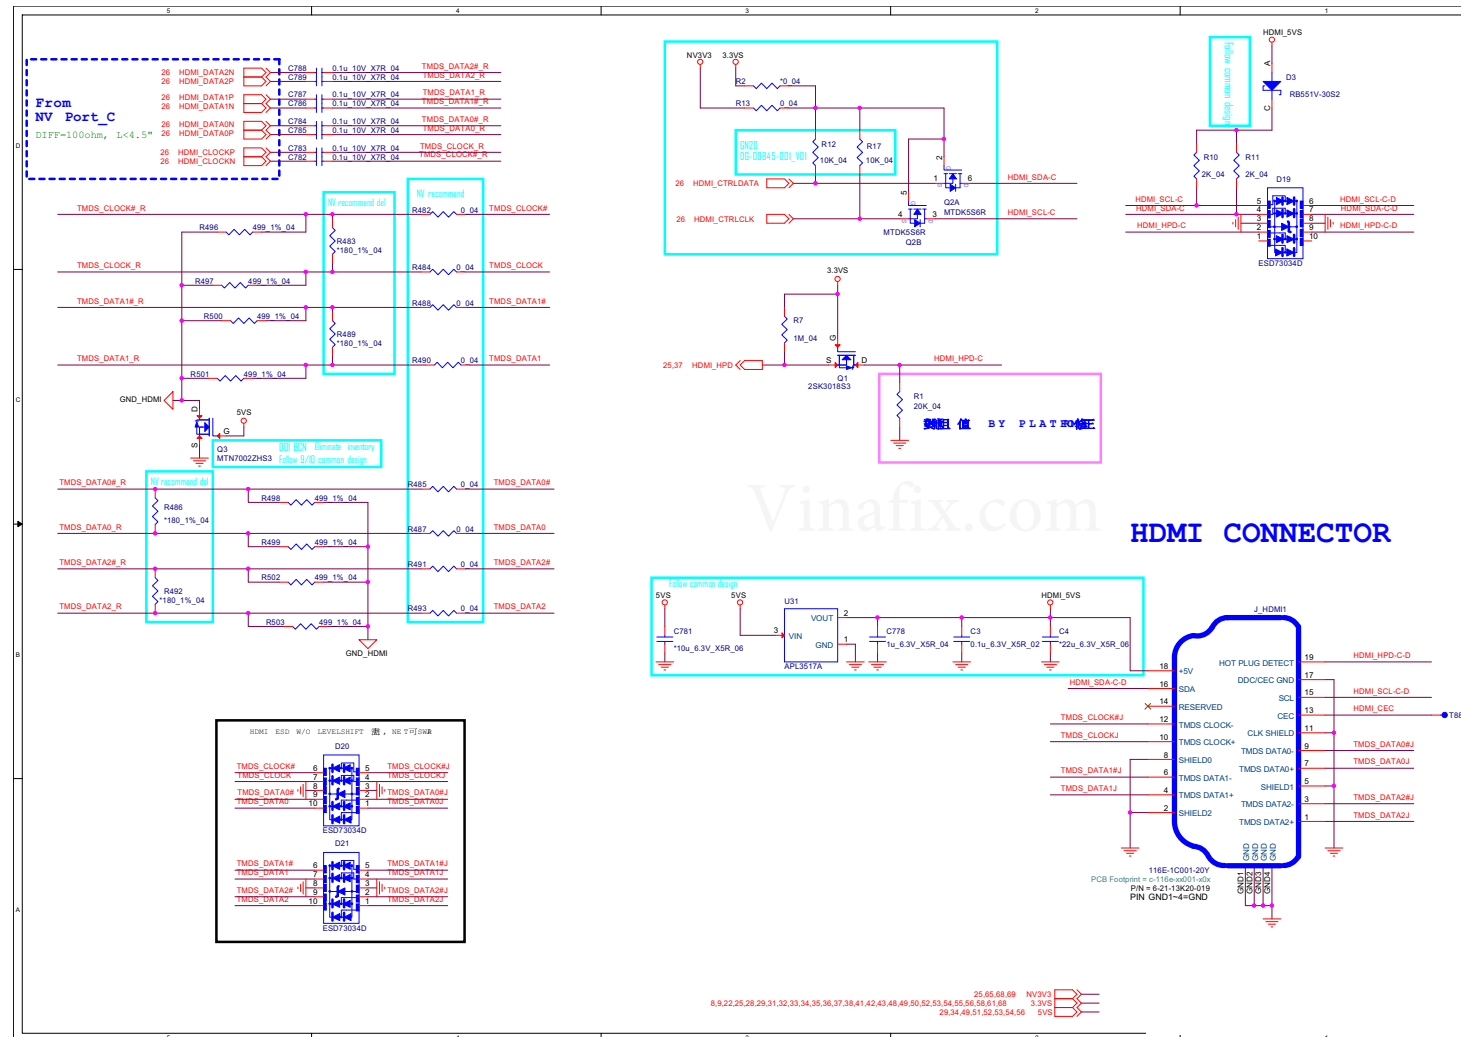


B.Schematic Diagrams

Sheet 28 of 74
HDMI

Sheet 29 of 74
mDP

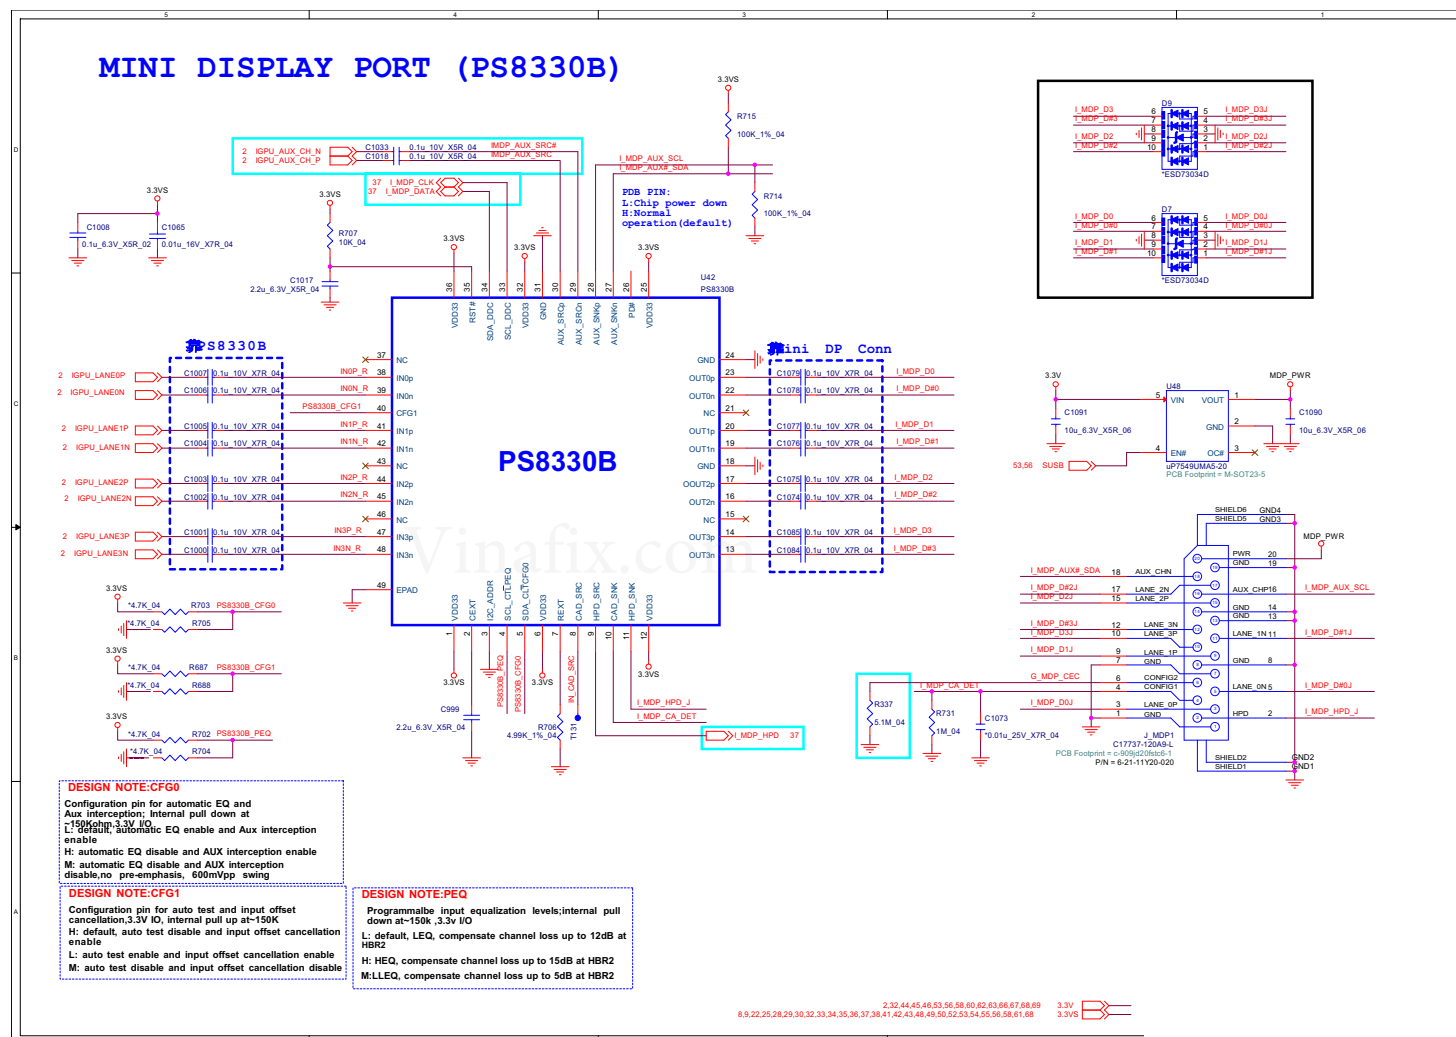


Panel, Inverter B - 31

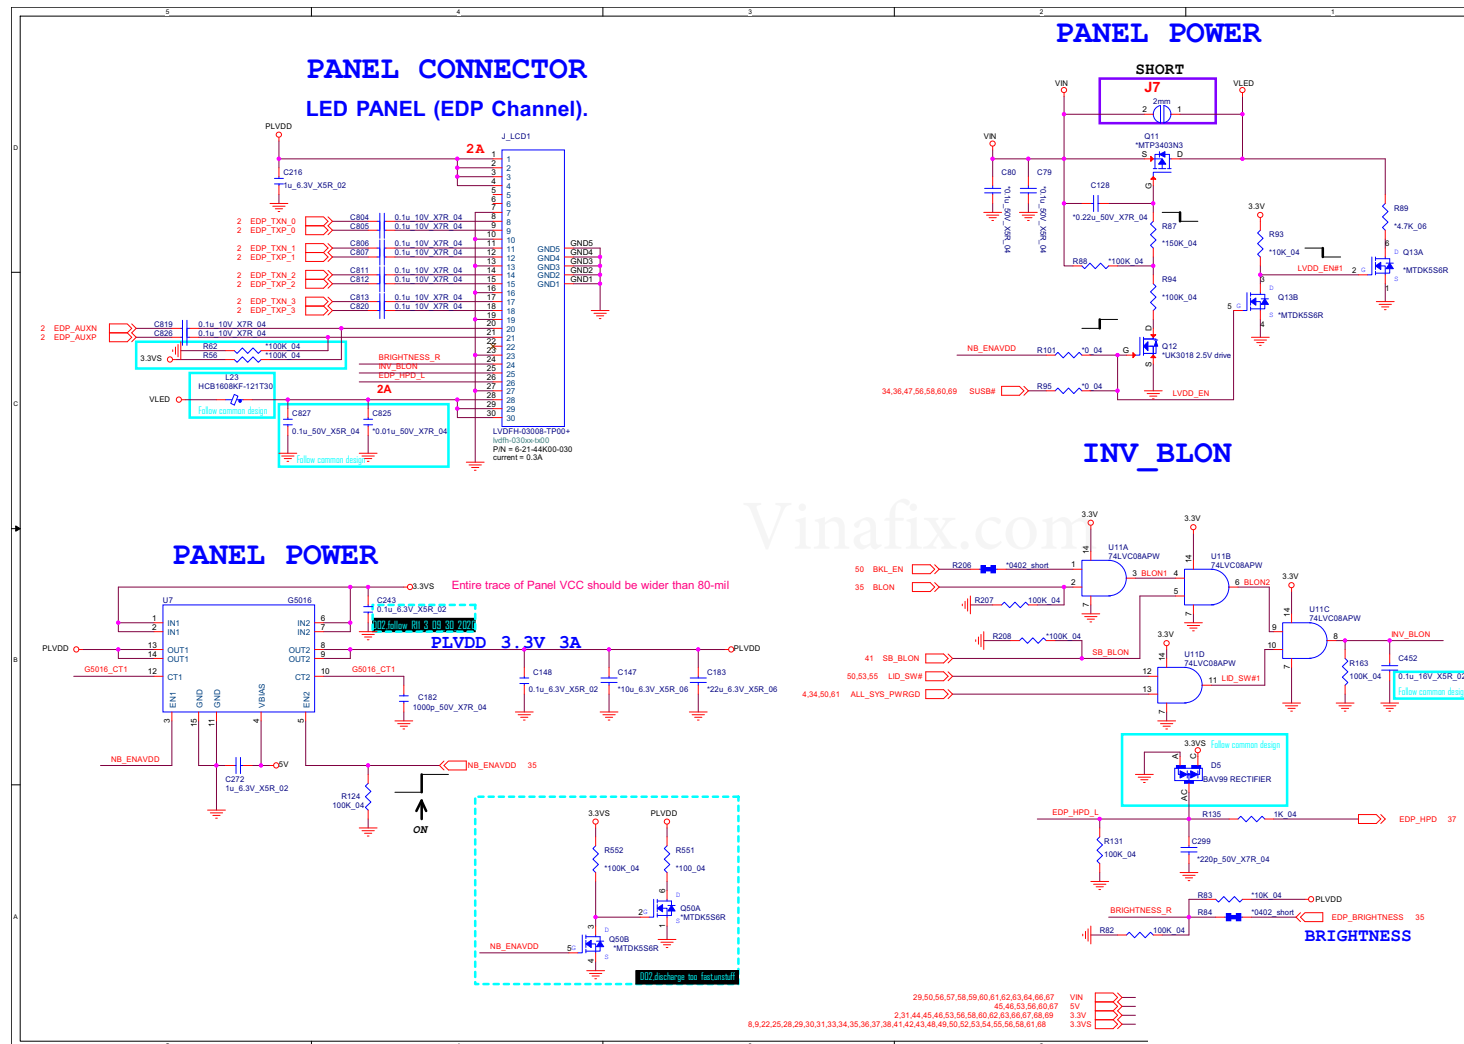


B. Schematic Diagrams

Sheet 31 of 74
PCH 1/9

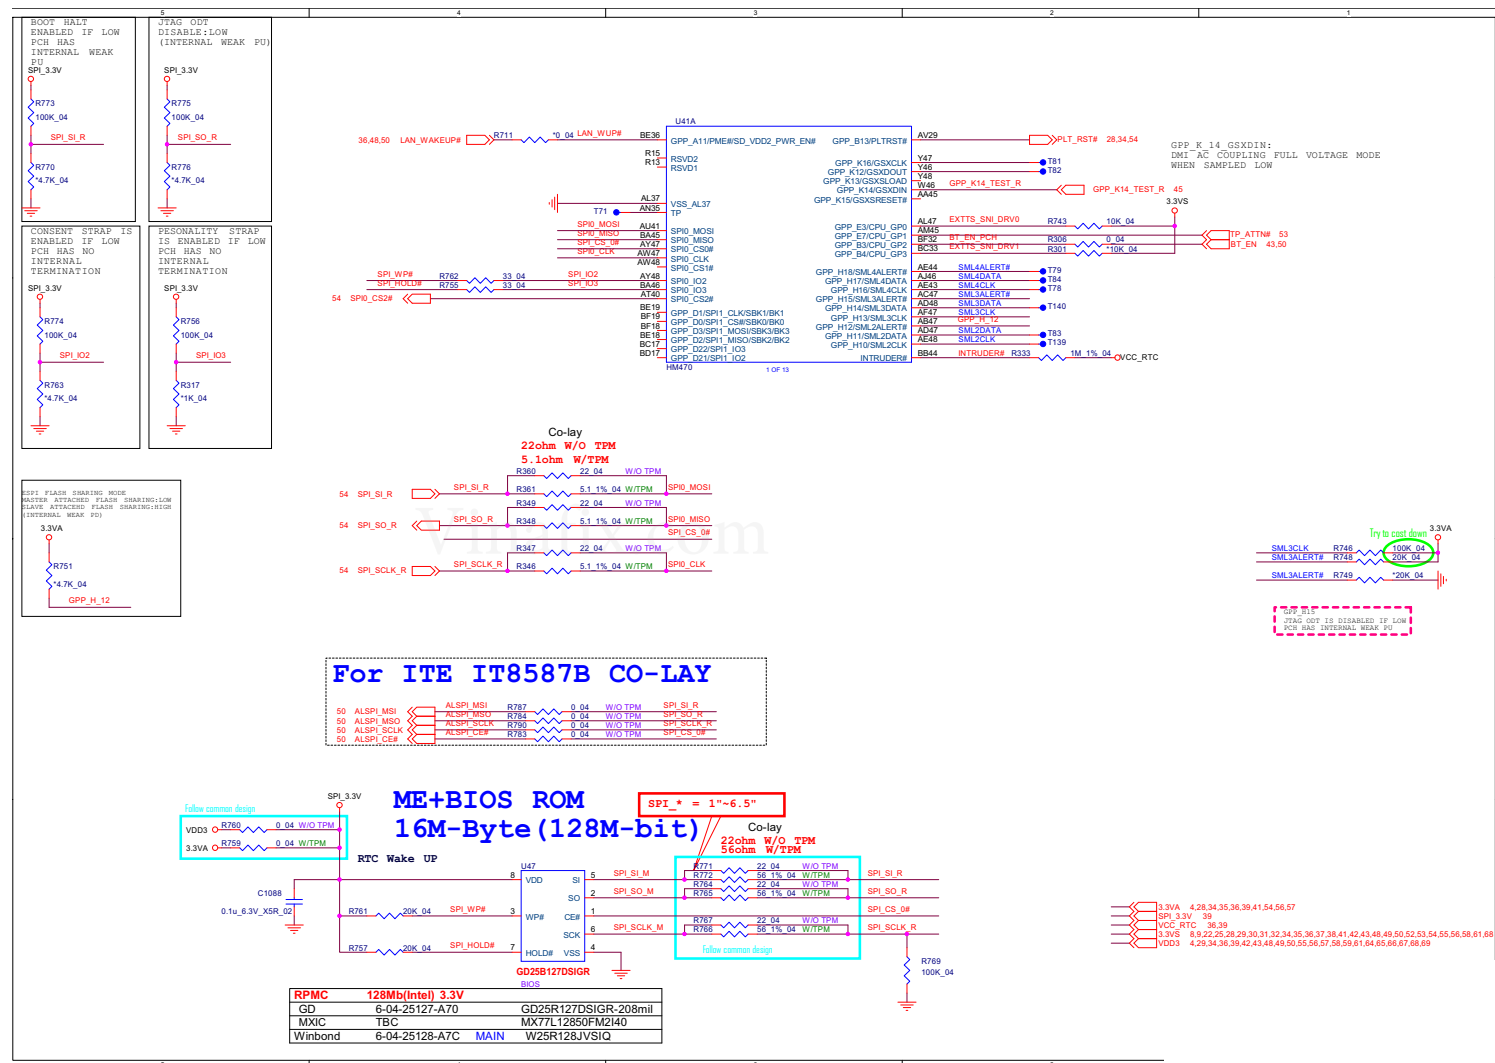


B.Schematic Diagrams

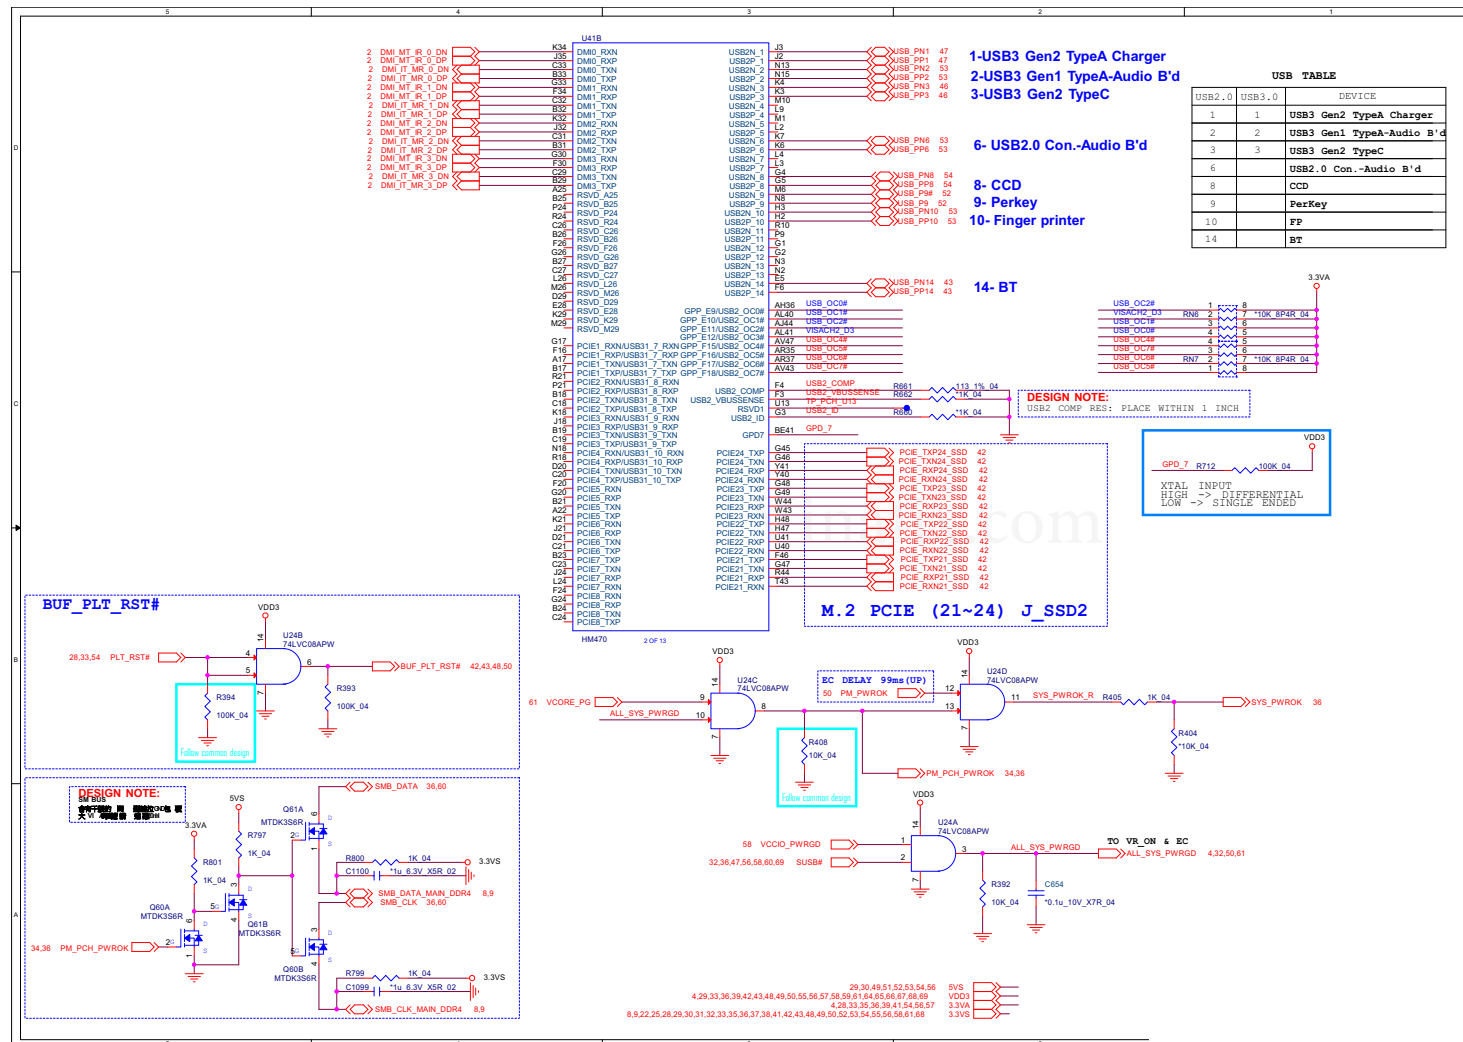


PCH 3/9

Sheet 33 of 74
PCH 3/9

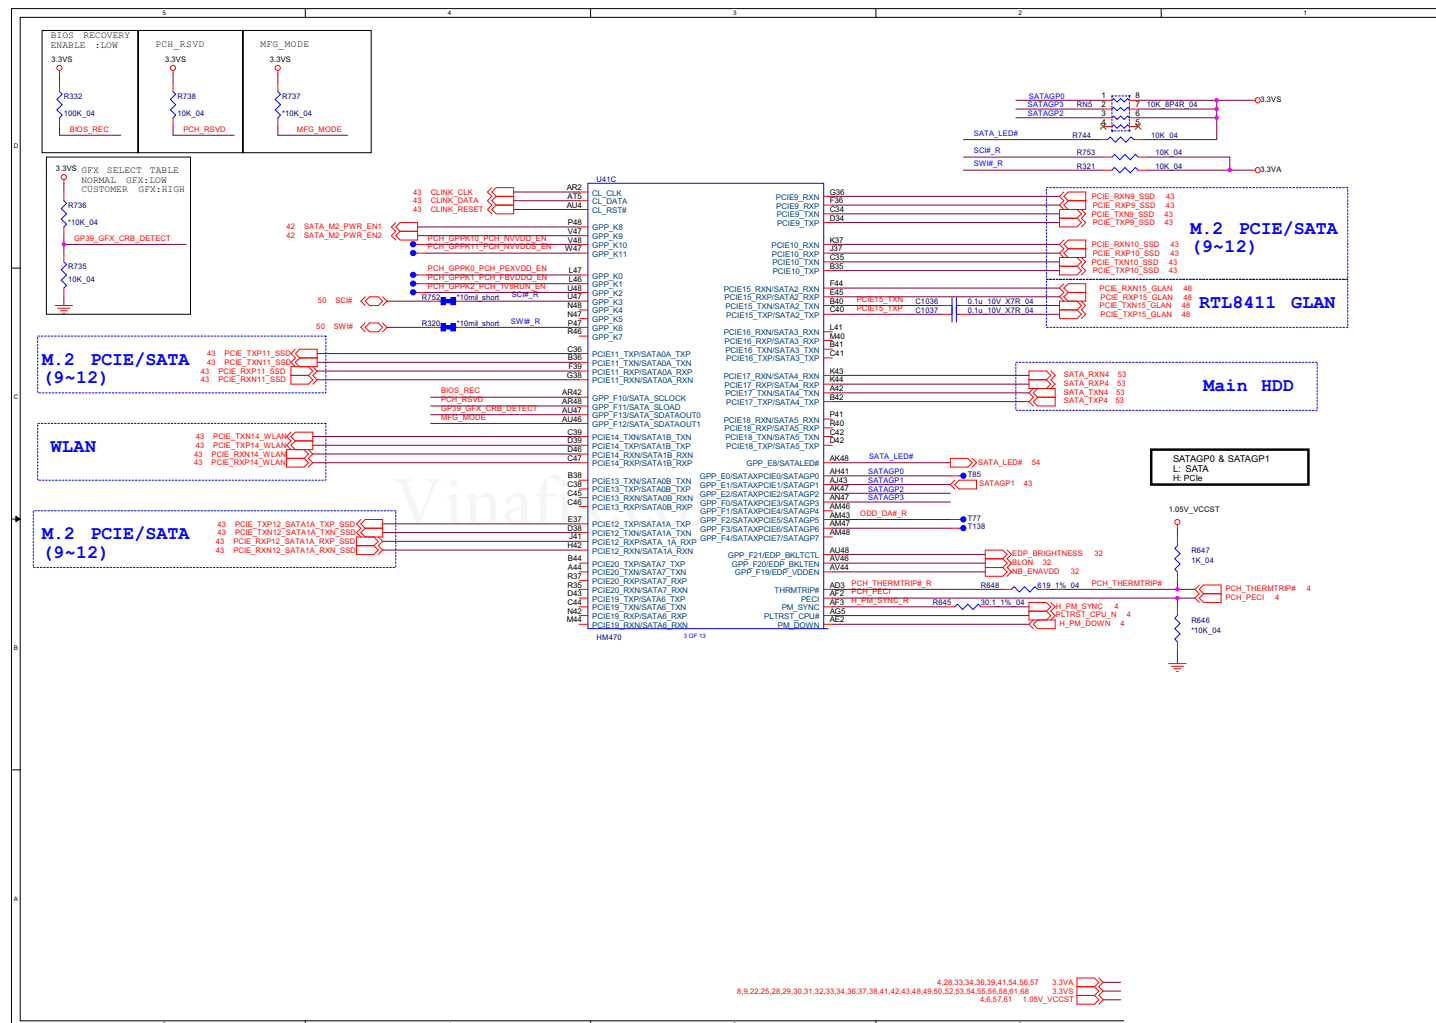


B.Schematic Diagrams

PCH 4/9 B - 35

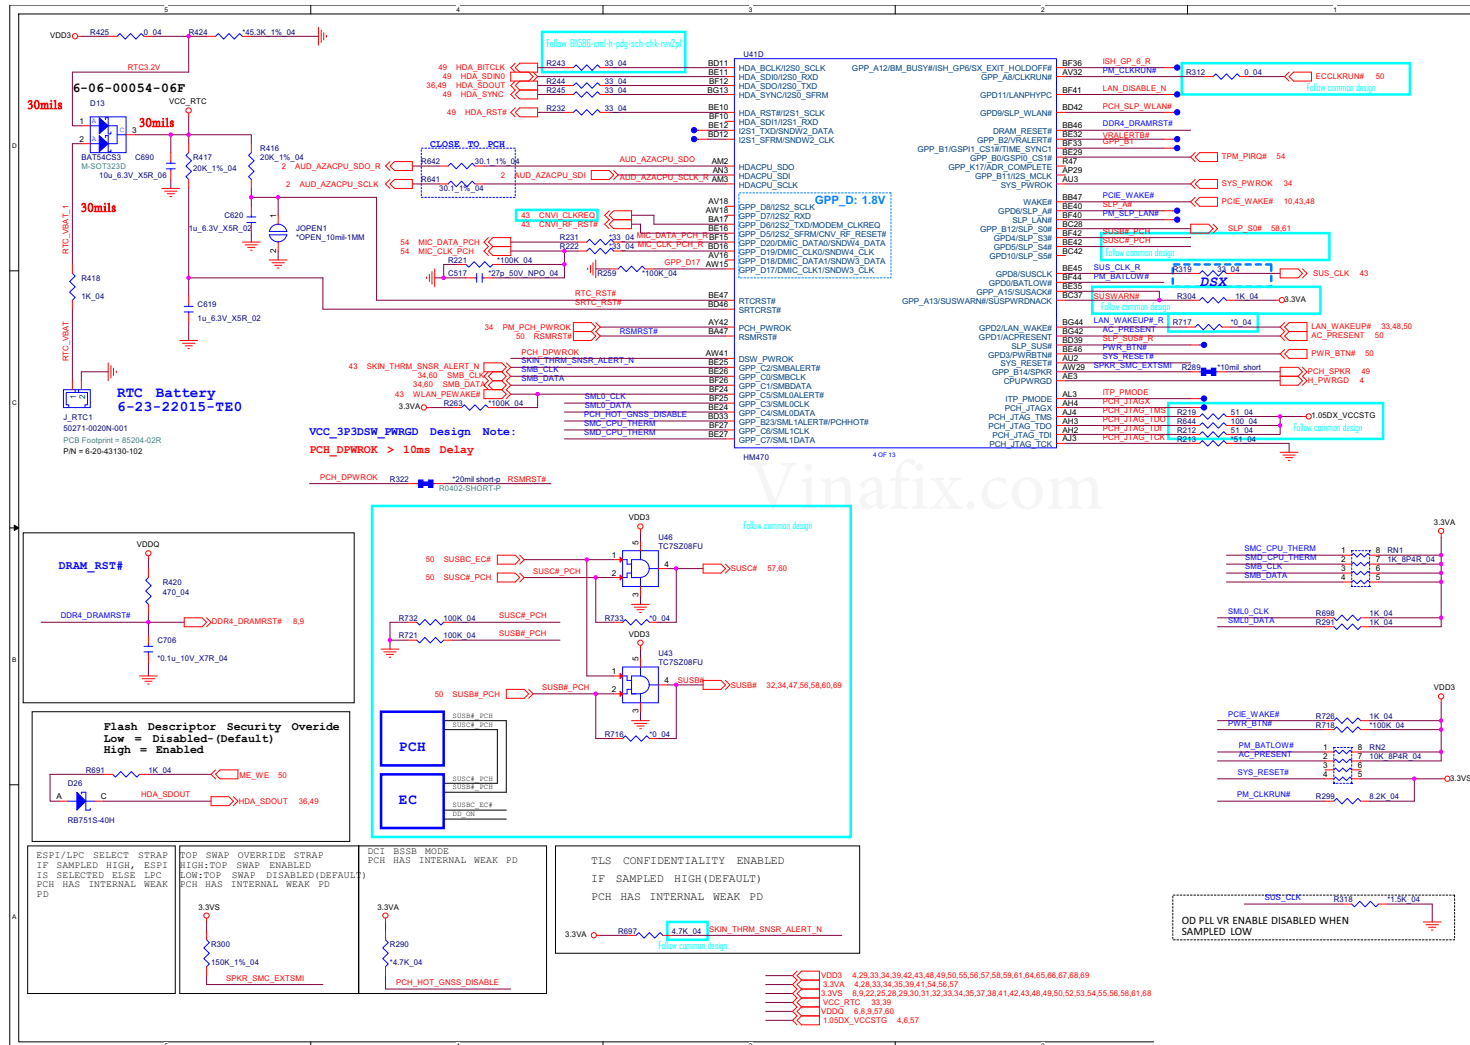


PCH 5/9

Sheet 35 of 74
PCH 5/9

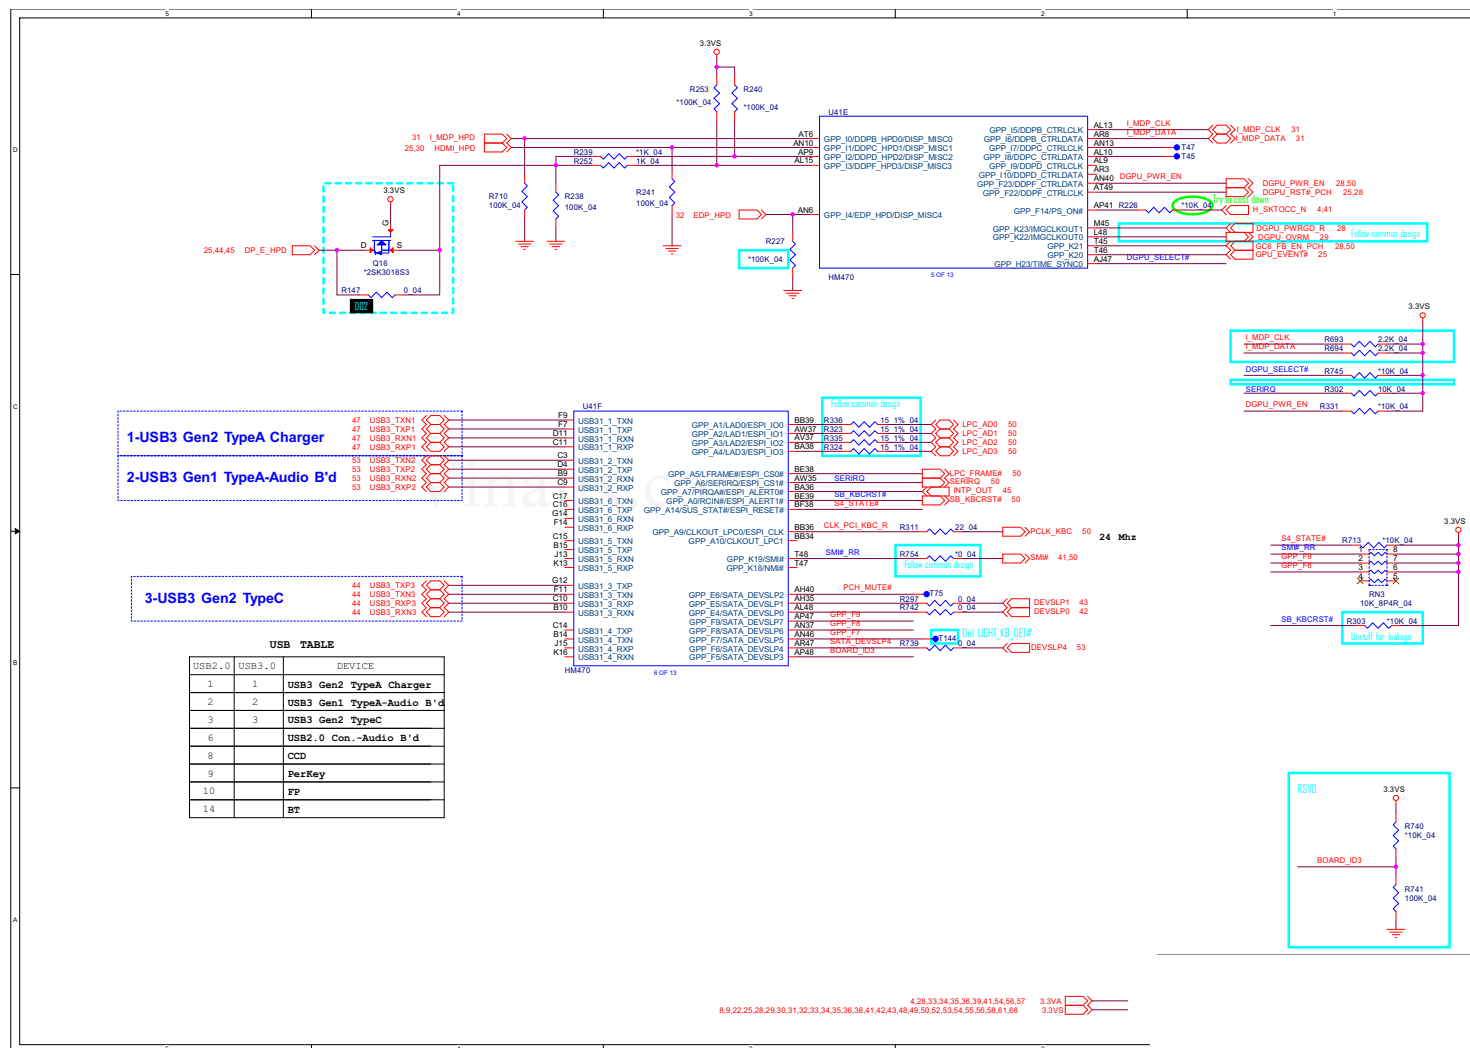


PCH 6/9 B - 37

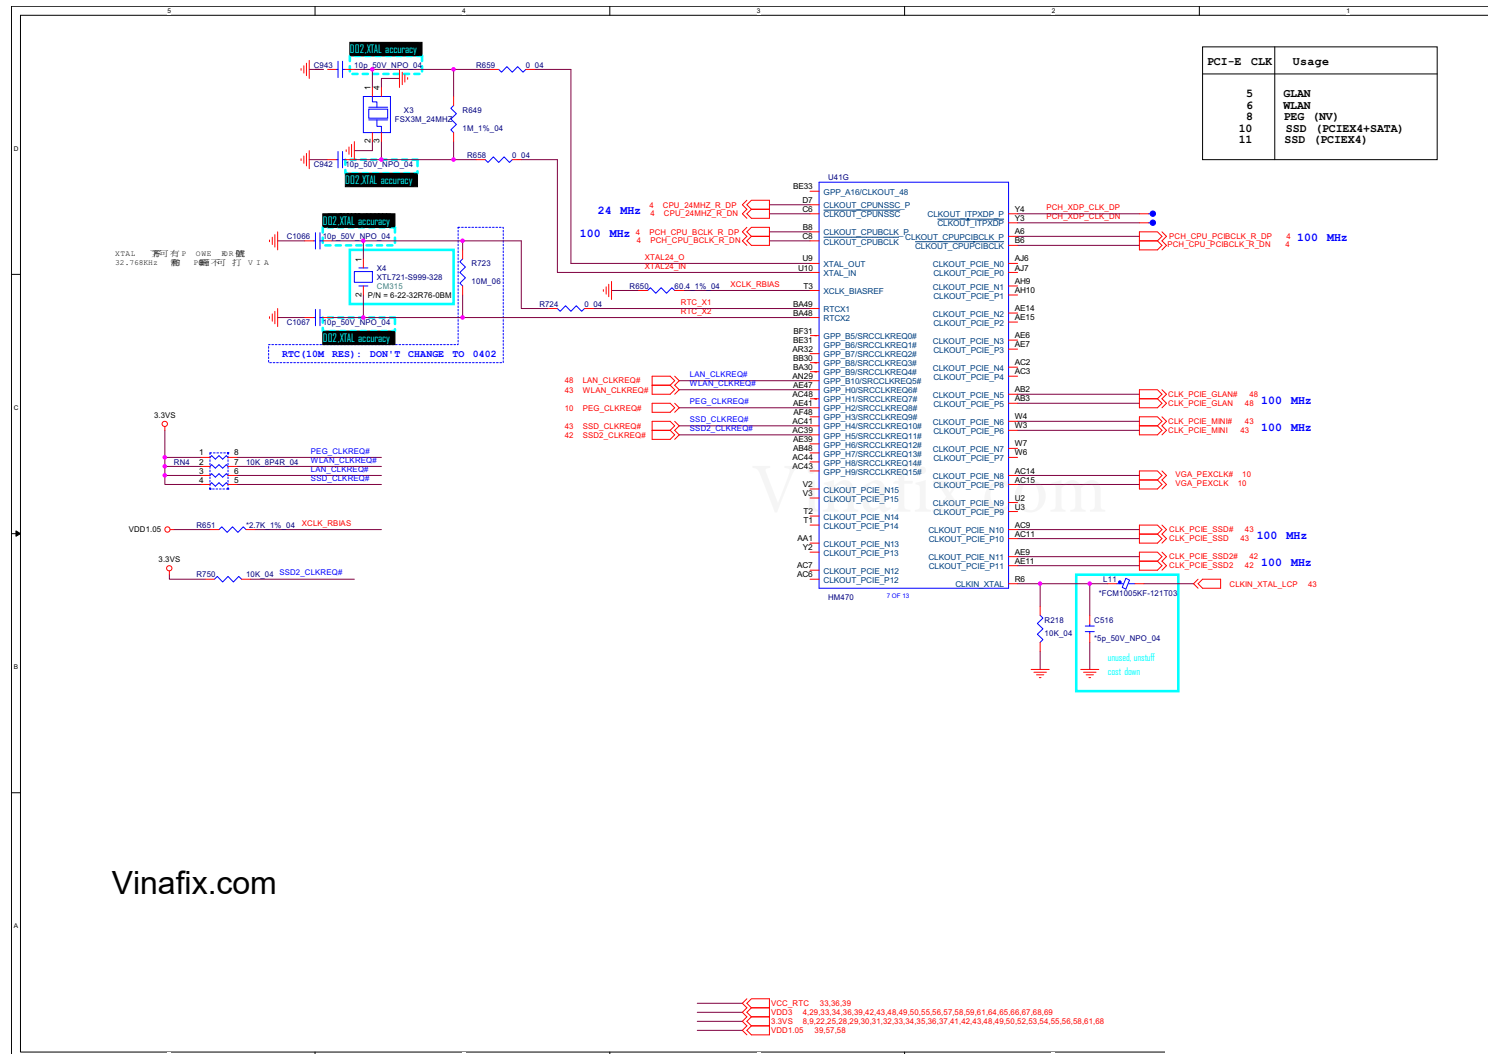


PCH 7/9

Sheet 37 of 74
PCH 7/9

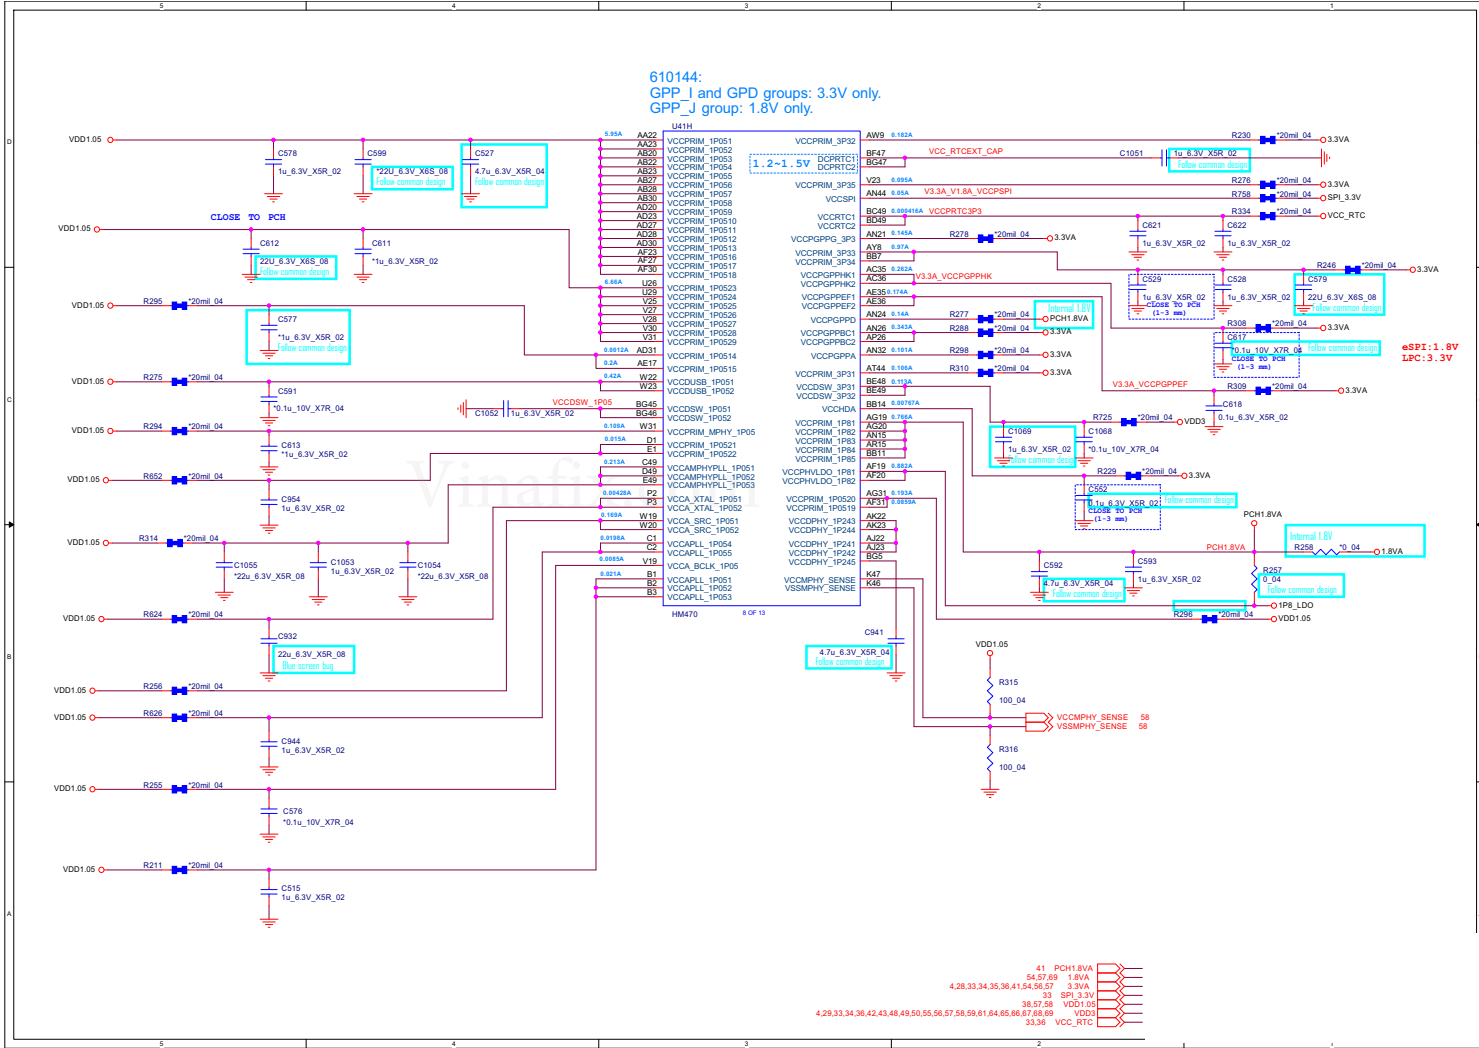


PCH 8/9

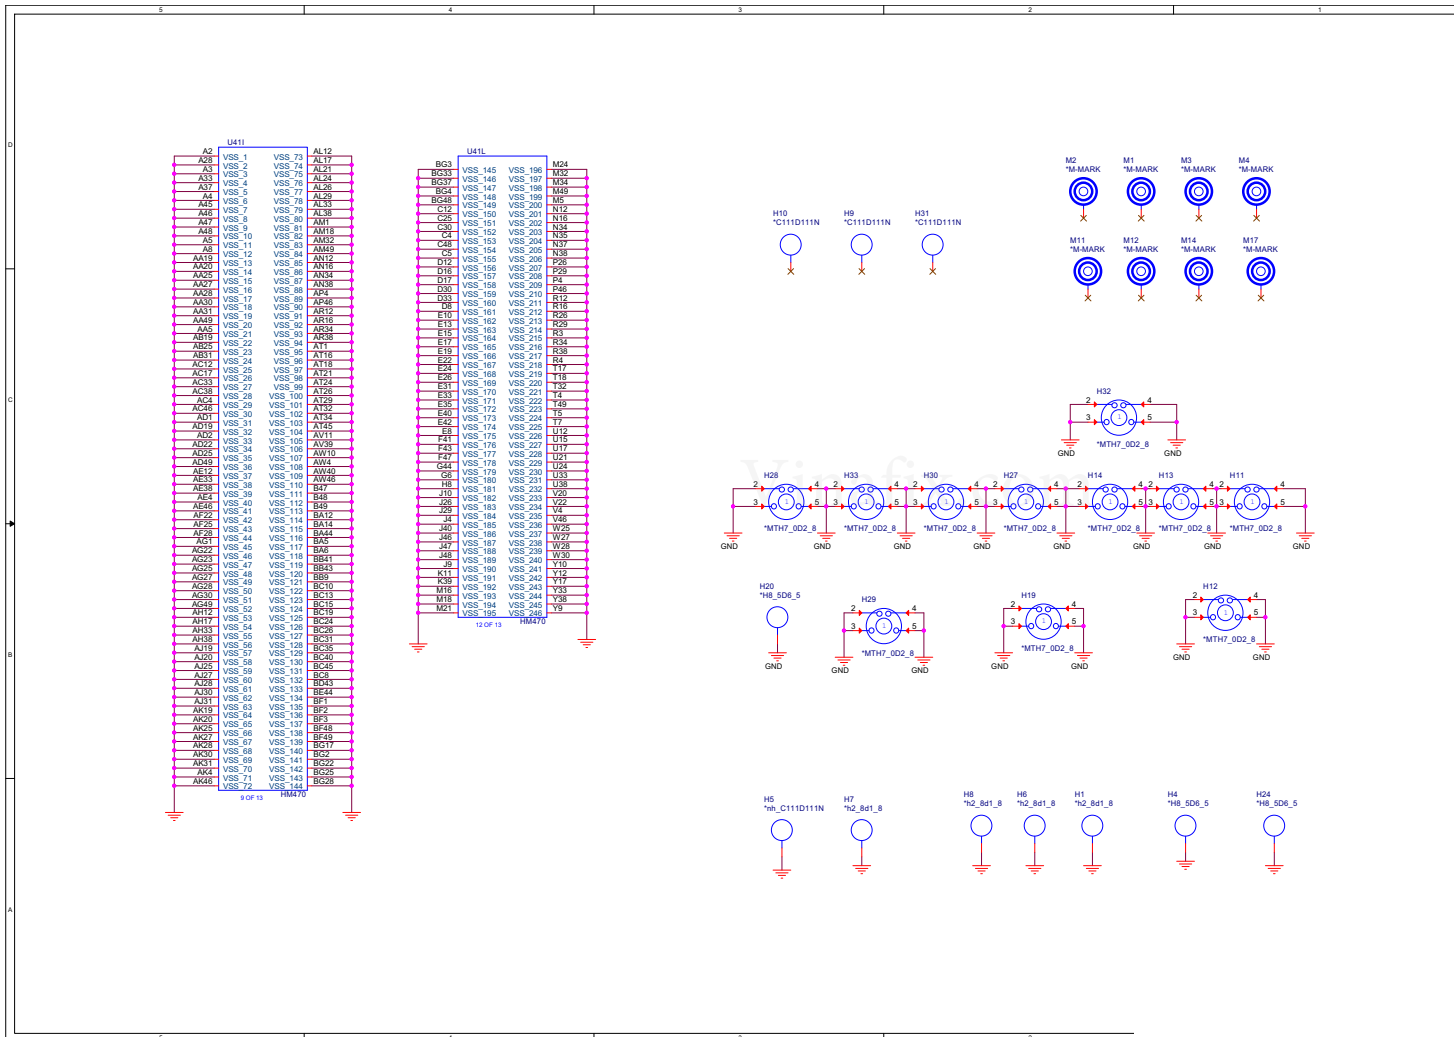Sheet 38 of 74
PCH 8/9


Schematic Diagrams

PCH 9/9

Sheet 39 of 74
PCH 9/9

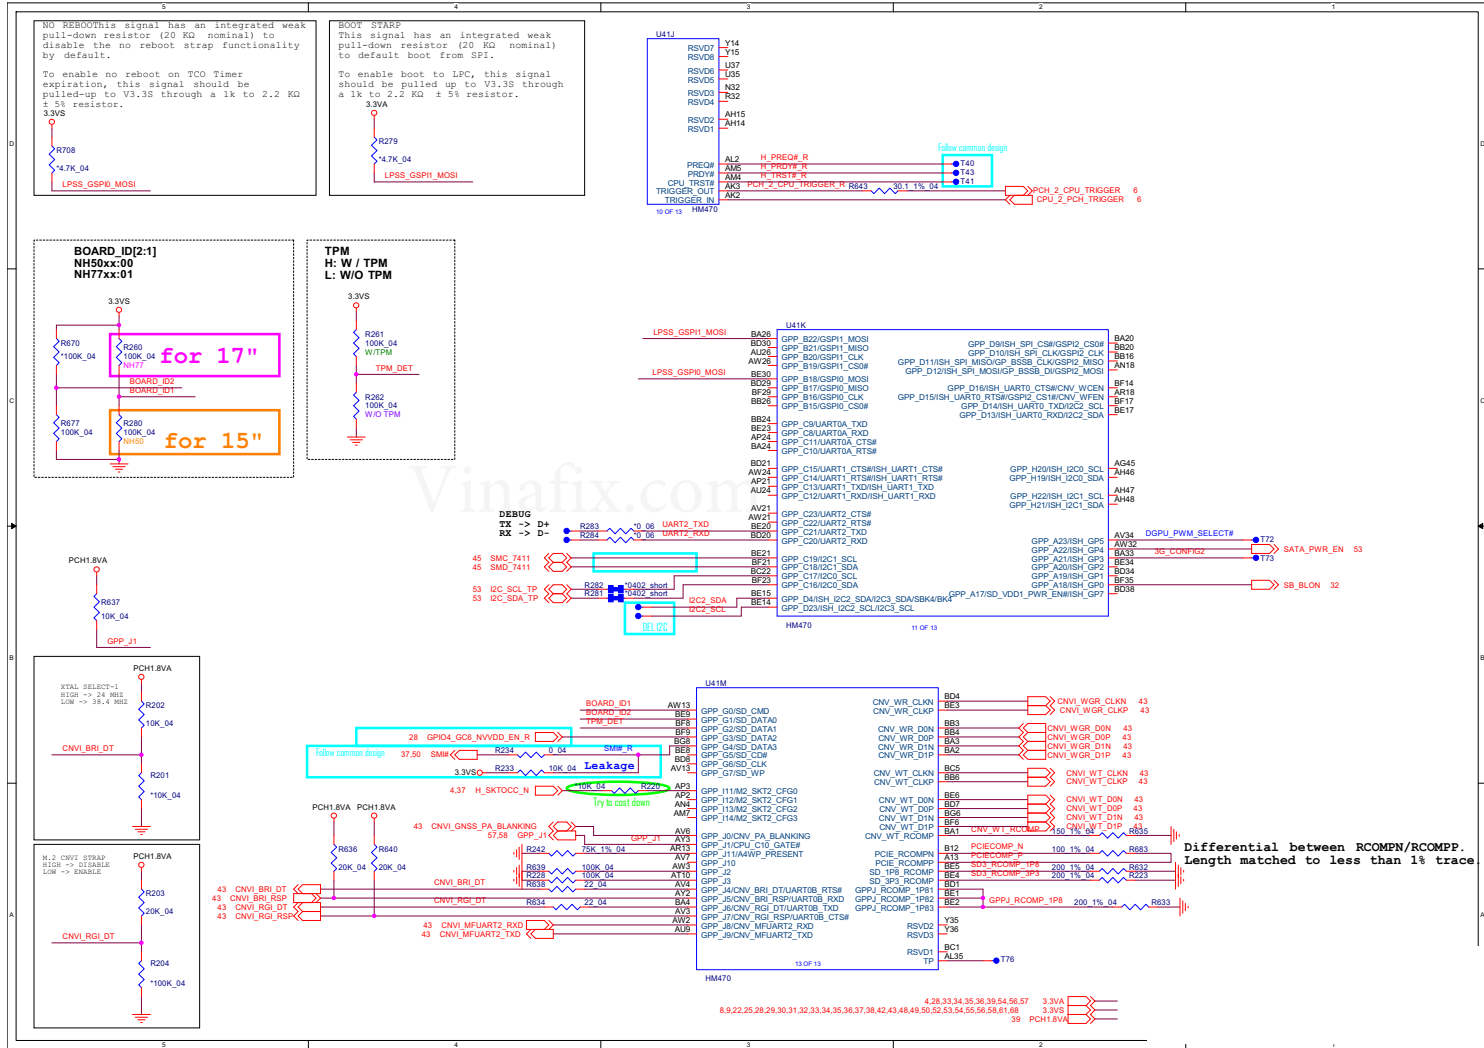


M.2 PCIE 4X SSD B - 41

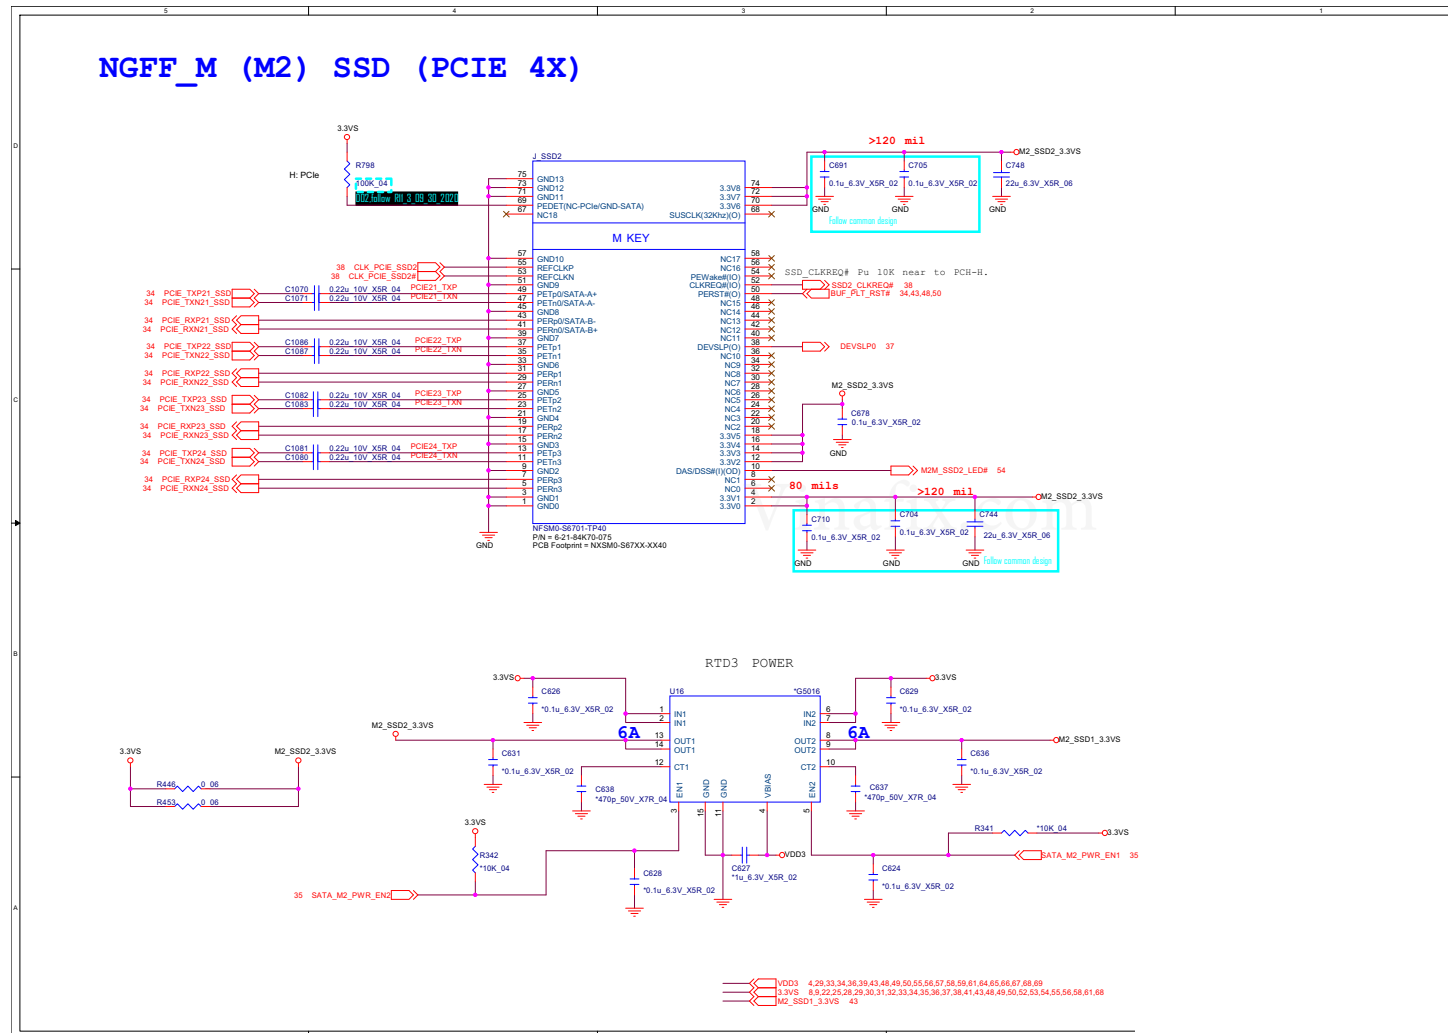


B.Schematic Diagrams

Sheet 41 of 74
M.2 WLAN+BT,
PCIE 4X SSD

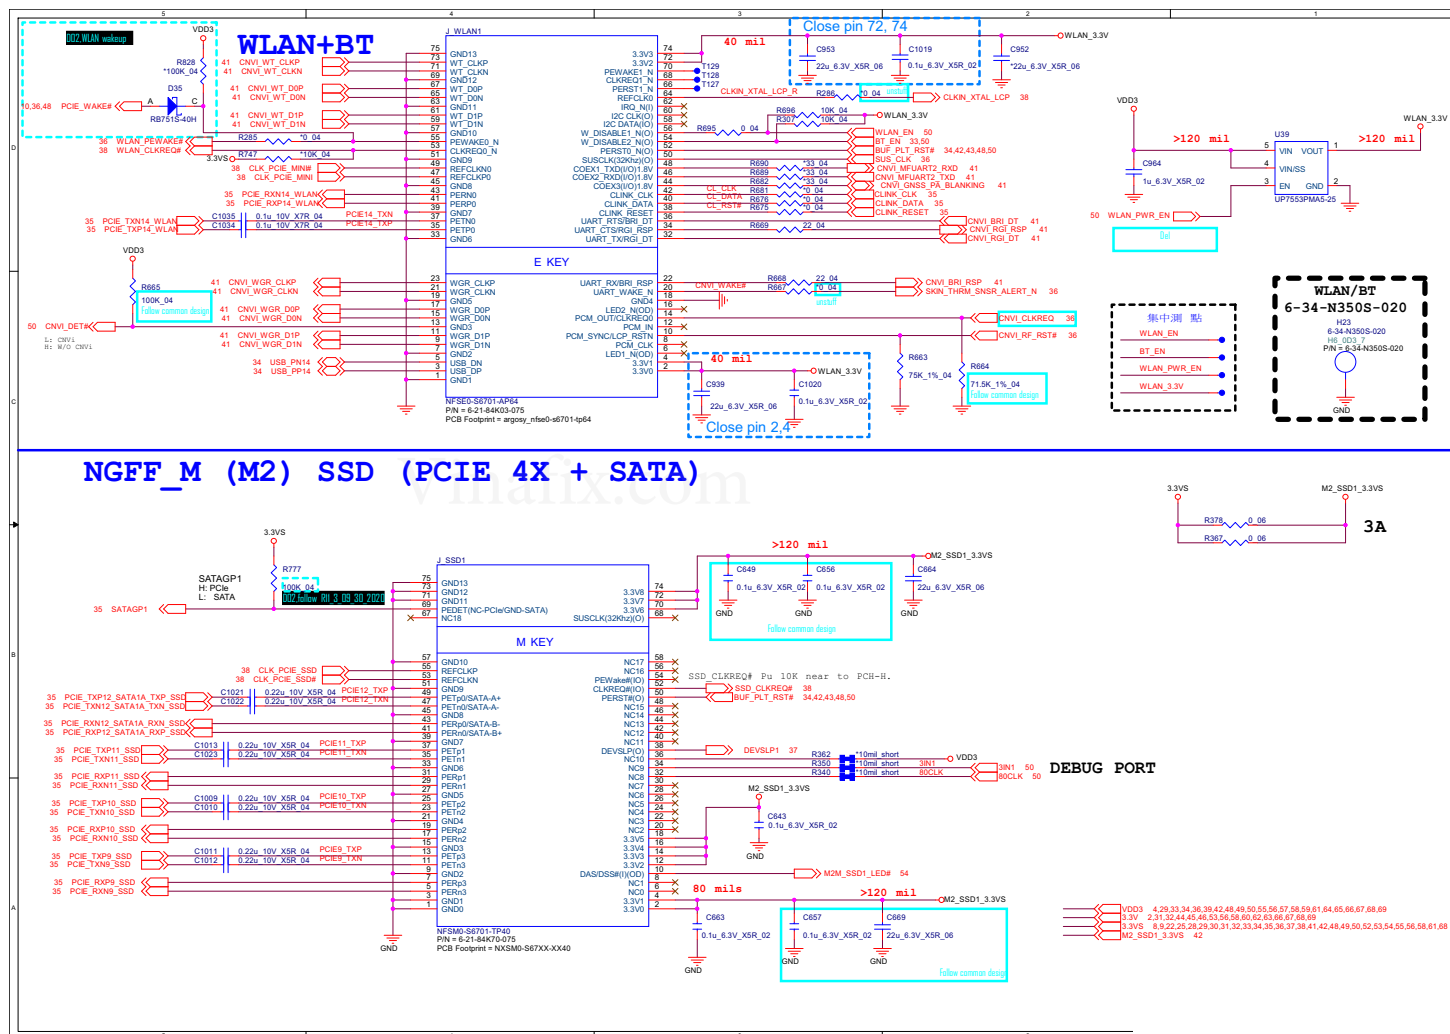


USB Type-C B - 43

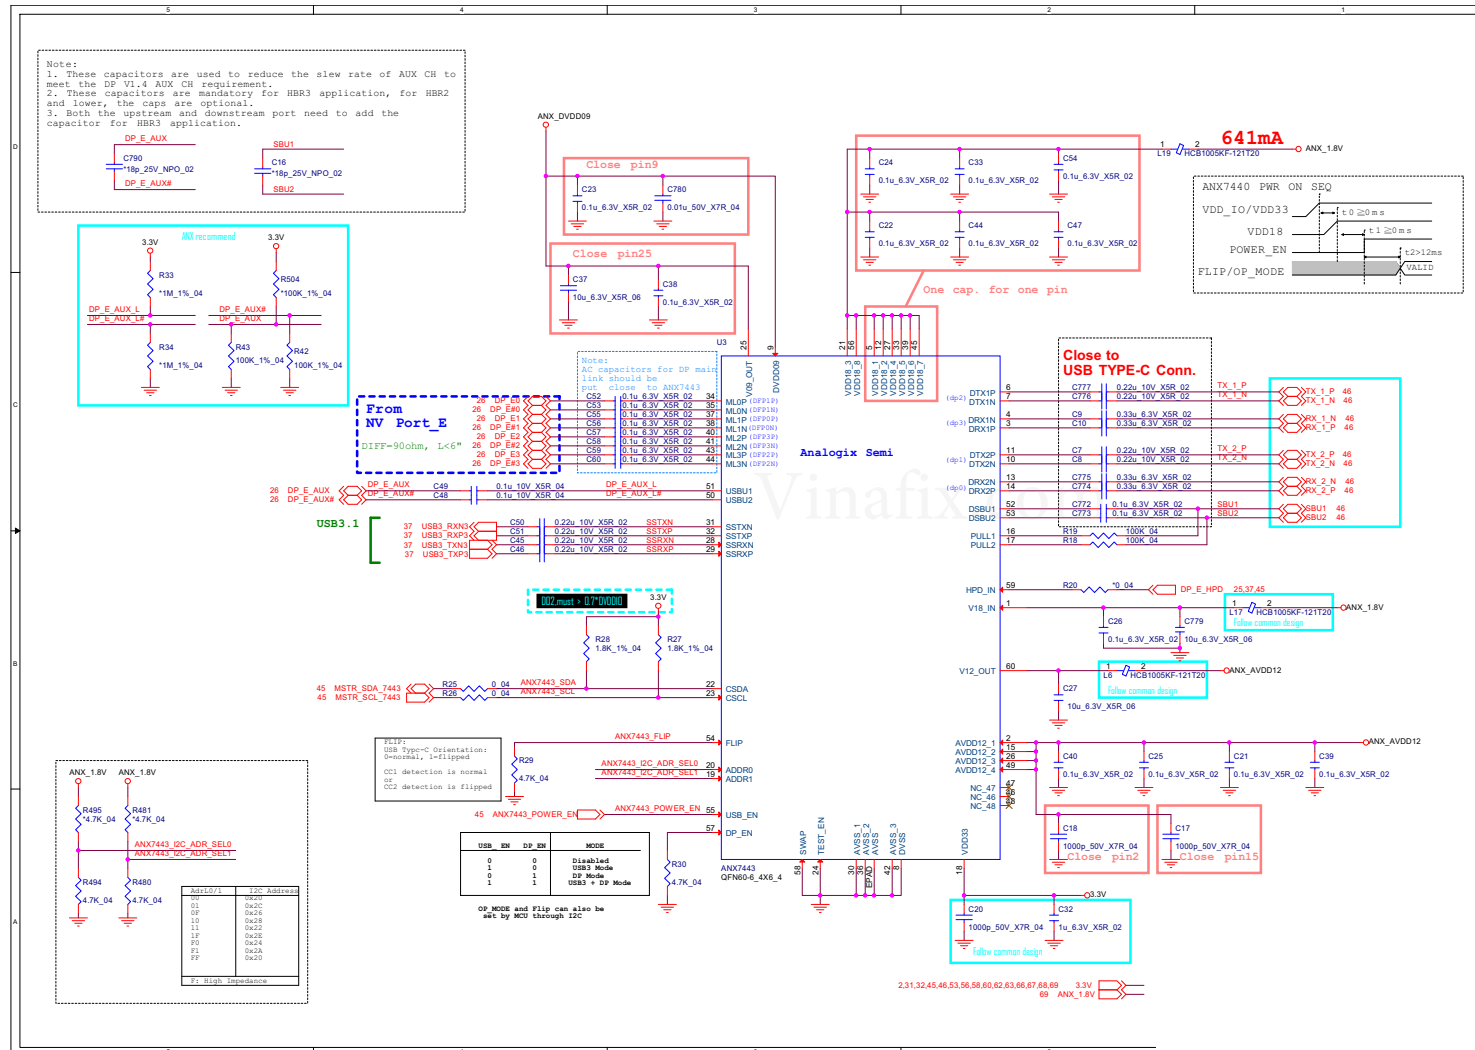

Schematic Diagrams


PD Controller ANX7411

Sheet 43 of 74
PD Controller
ANX7411

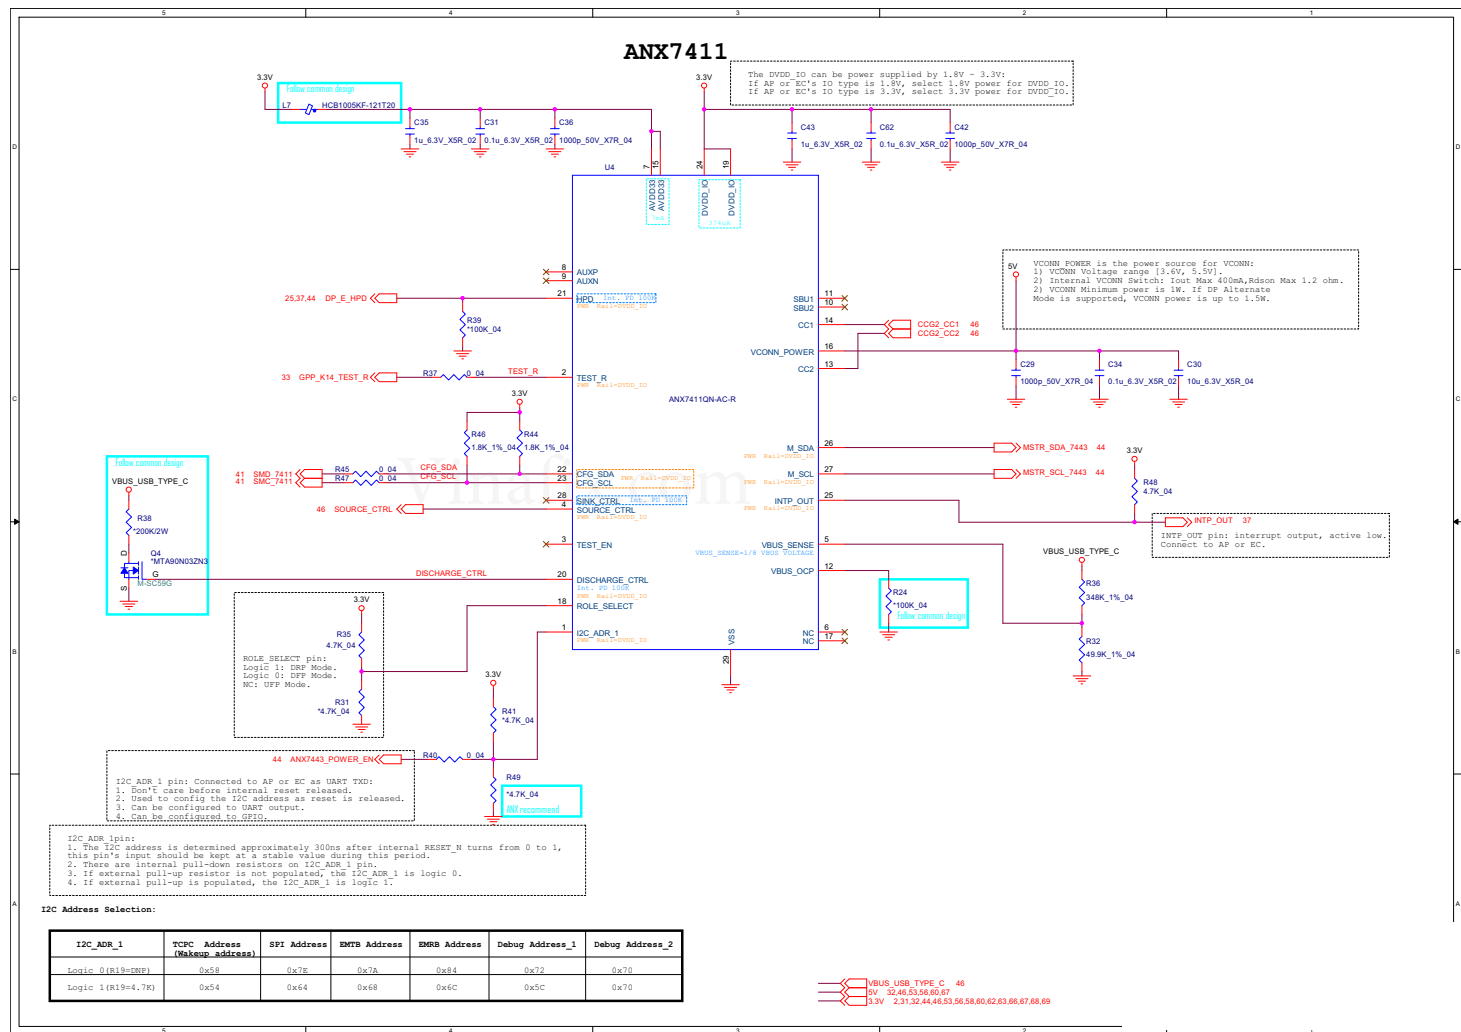

Schematic Diagrams


Type-C

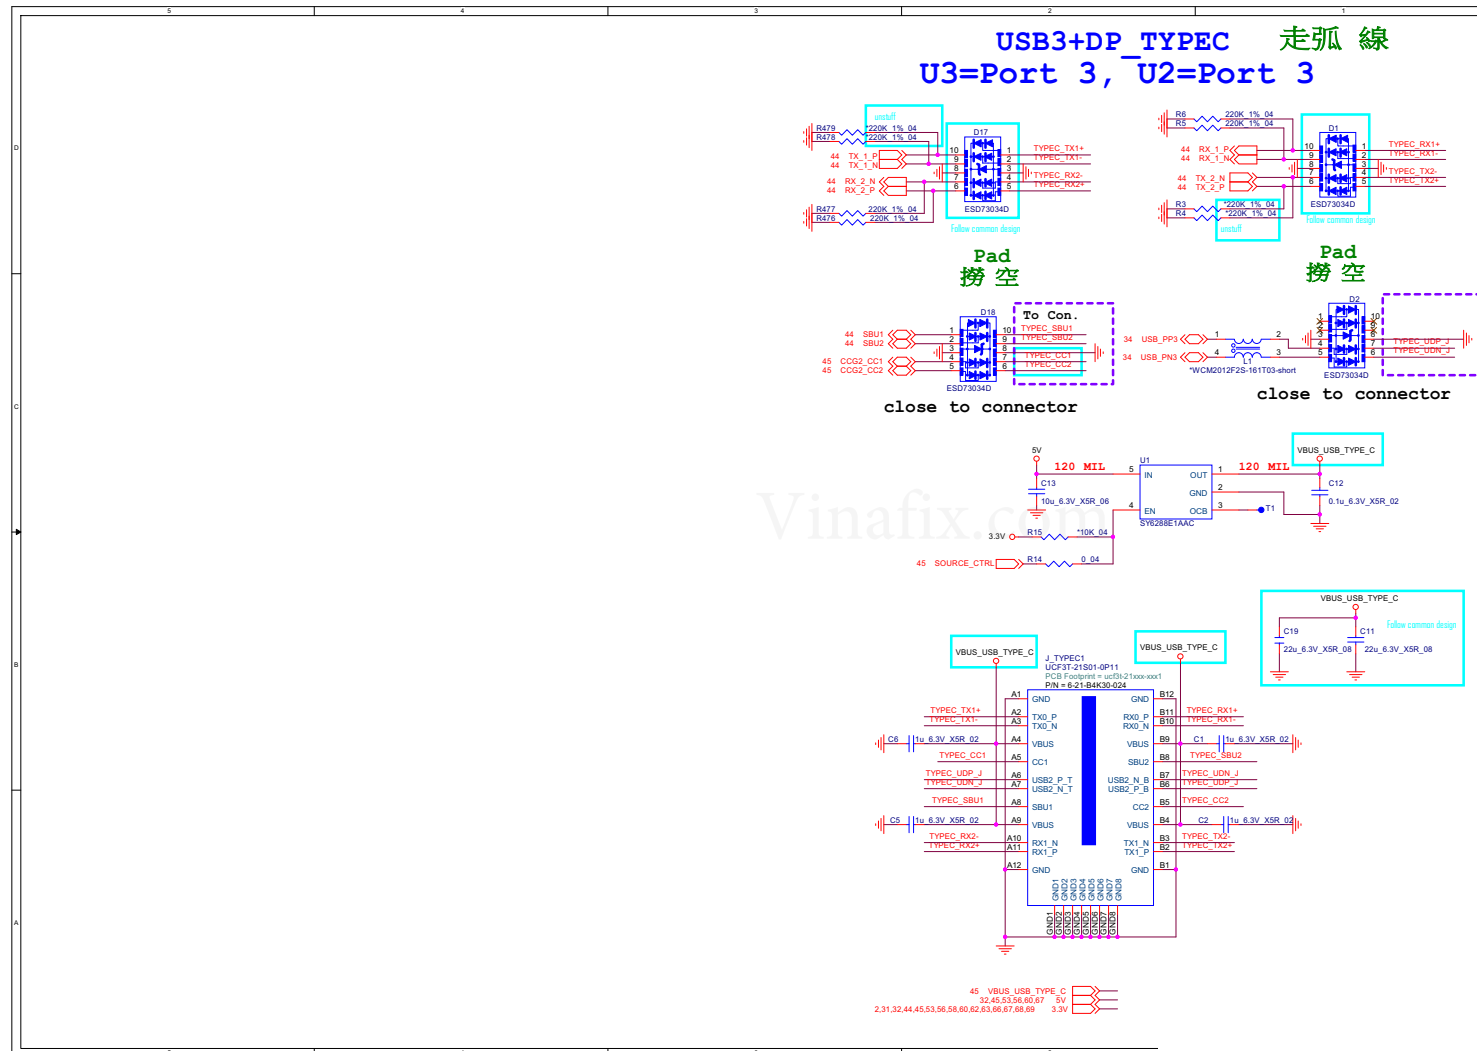

Sheet 44 of 74
Type-C

B.Schematic Diagrams


USB Type-A

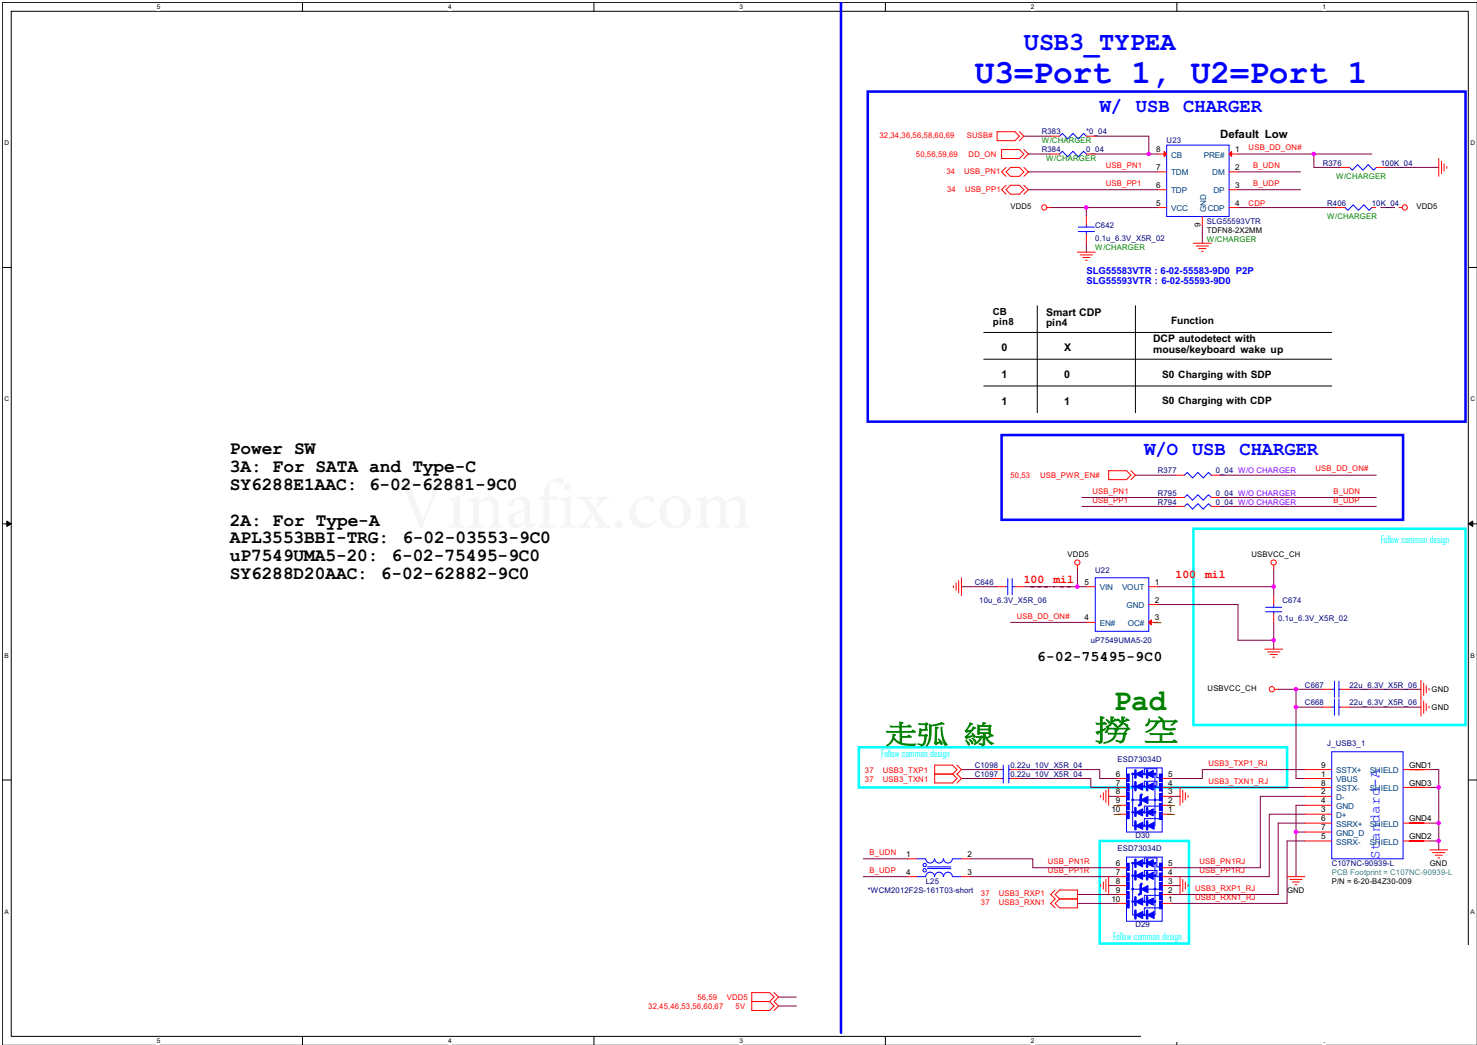

Sheet 45 of 74
USB Type-A

Power SW
3A: For SATA and Type-C
SY6288E1AAC: 6-02-62881-9C0
2A: For Type-A
APL3553BBI-TRG: 6-02-03553-9C0
uP7549UMA5-20: 6-02-75495-9C0
SY6288D20AAC: 6-02-62882-9C0


Card Reader / LAN RTL8411B

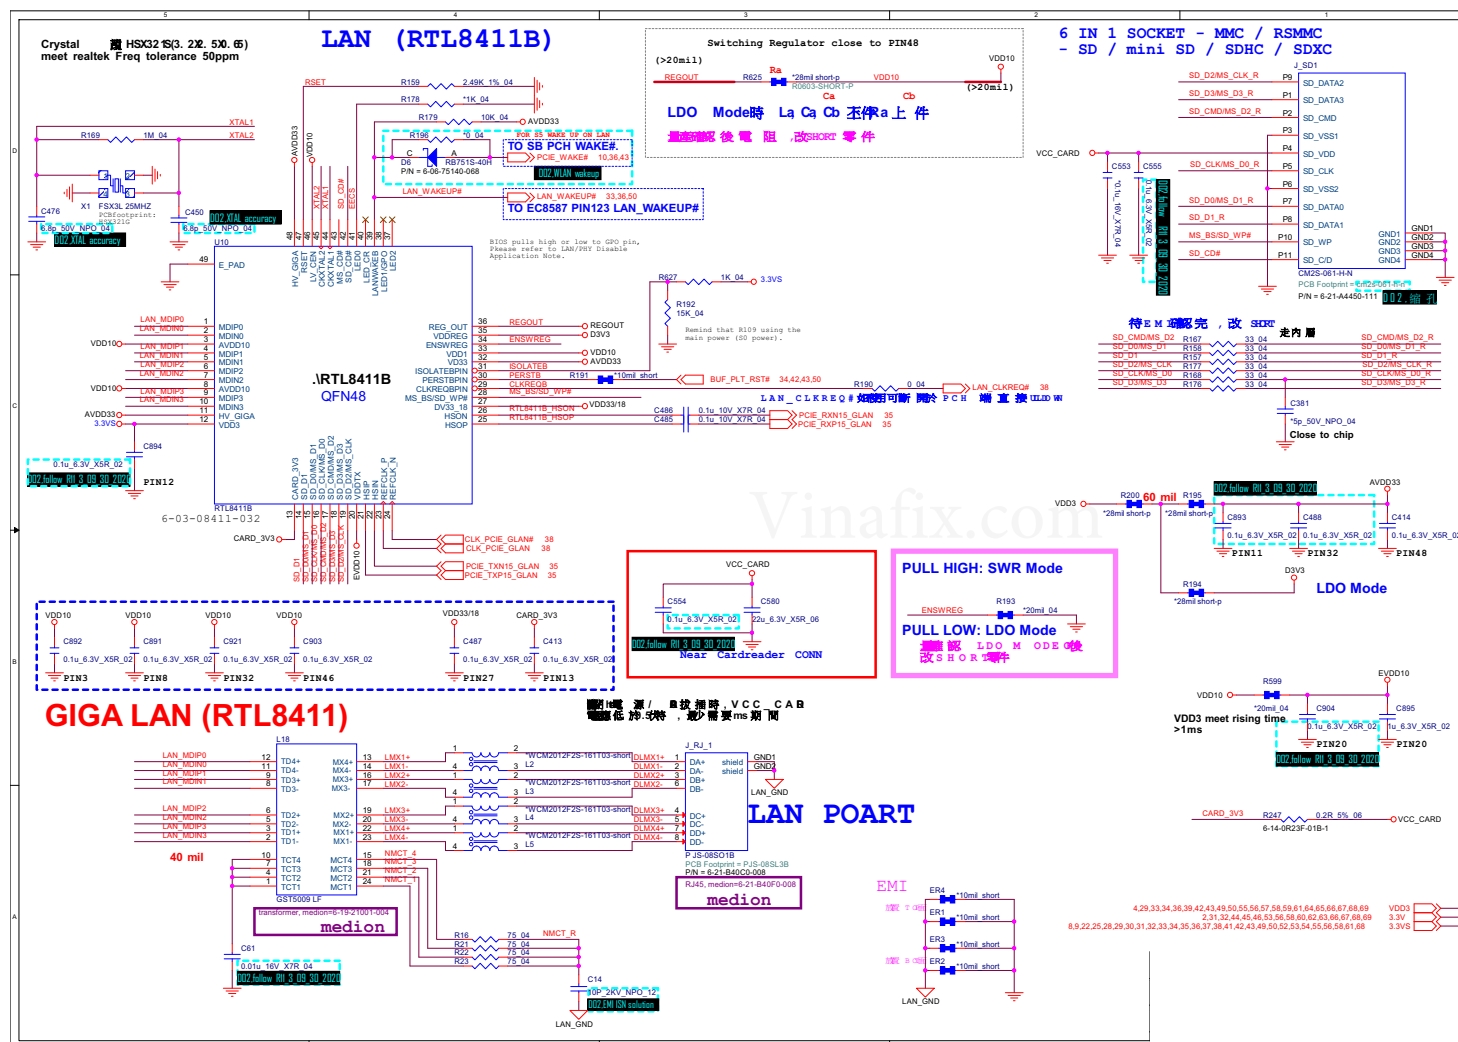


B. Schematic Diagrams

[illegible]

KBC-ITE IT5570 B - 49

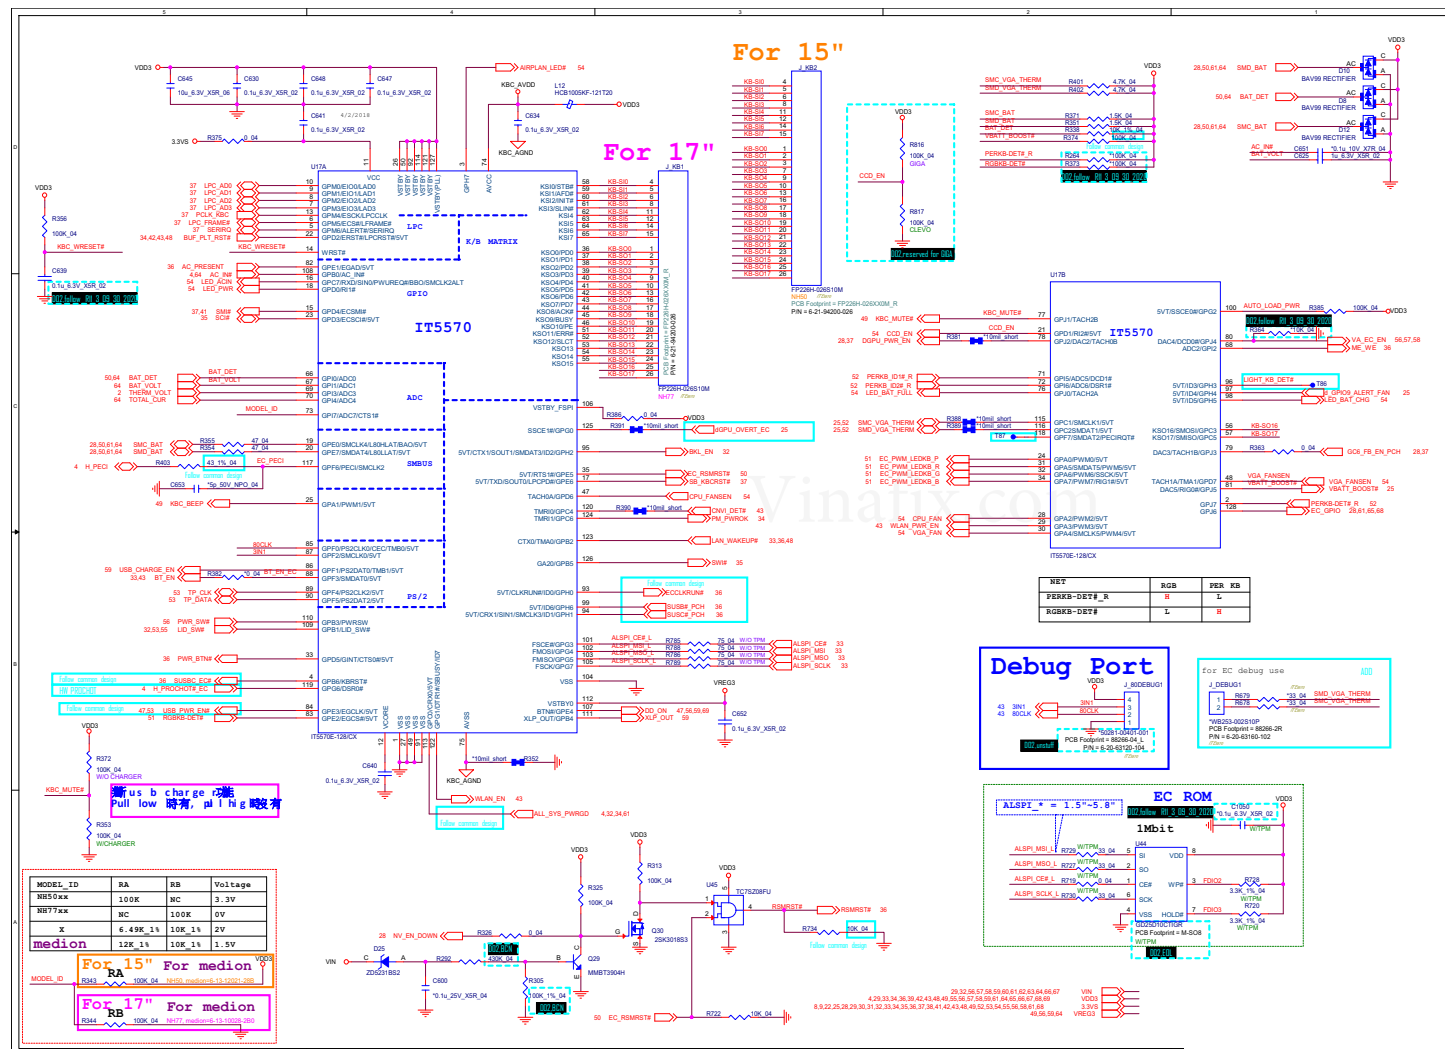


Sheet 49 of 74
RGB KB

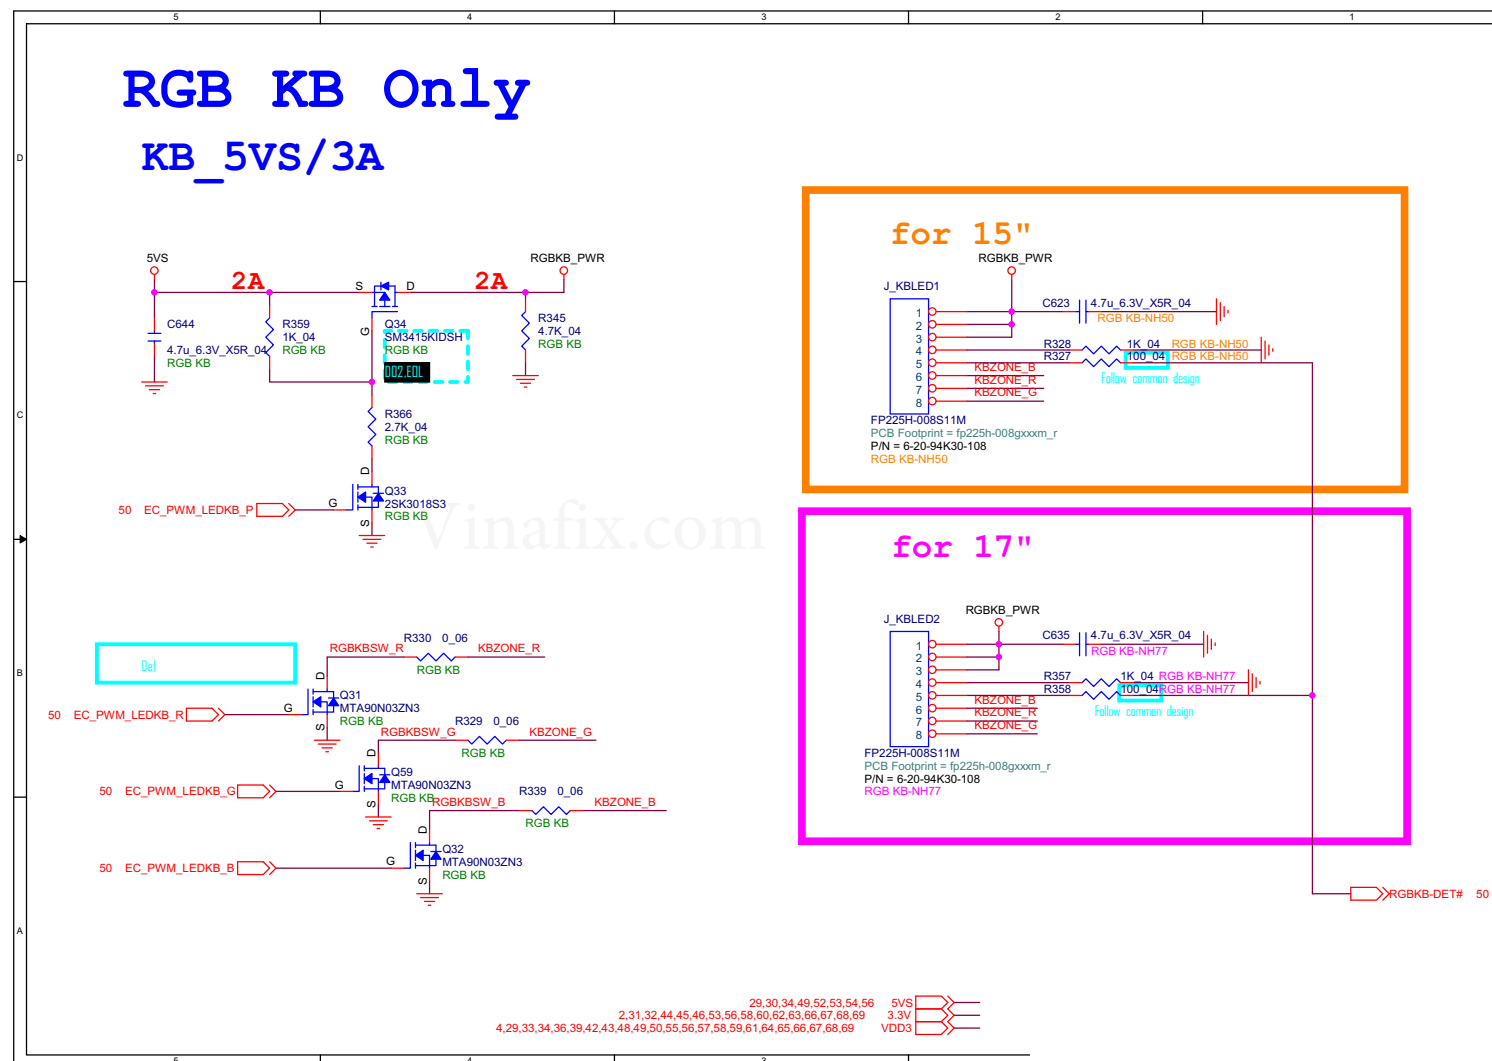

Schematic Diagrams

HDD, Click TP, Audio, FP

Sheet 51 of 74
HDD, Click TP,
Audio, FP

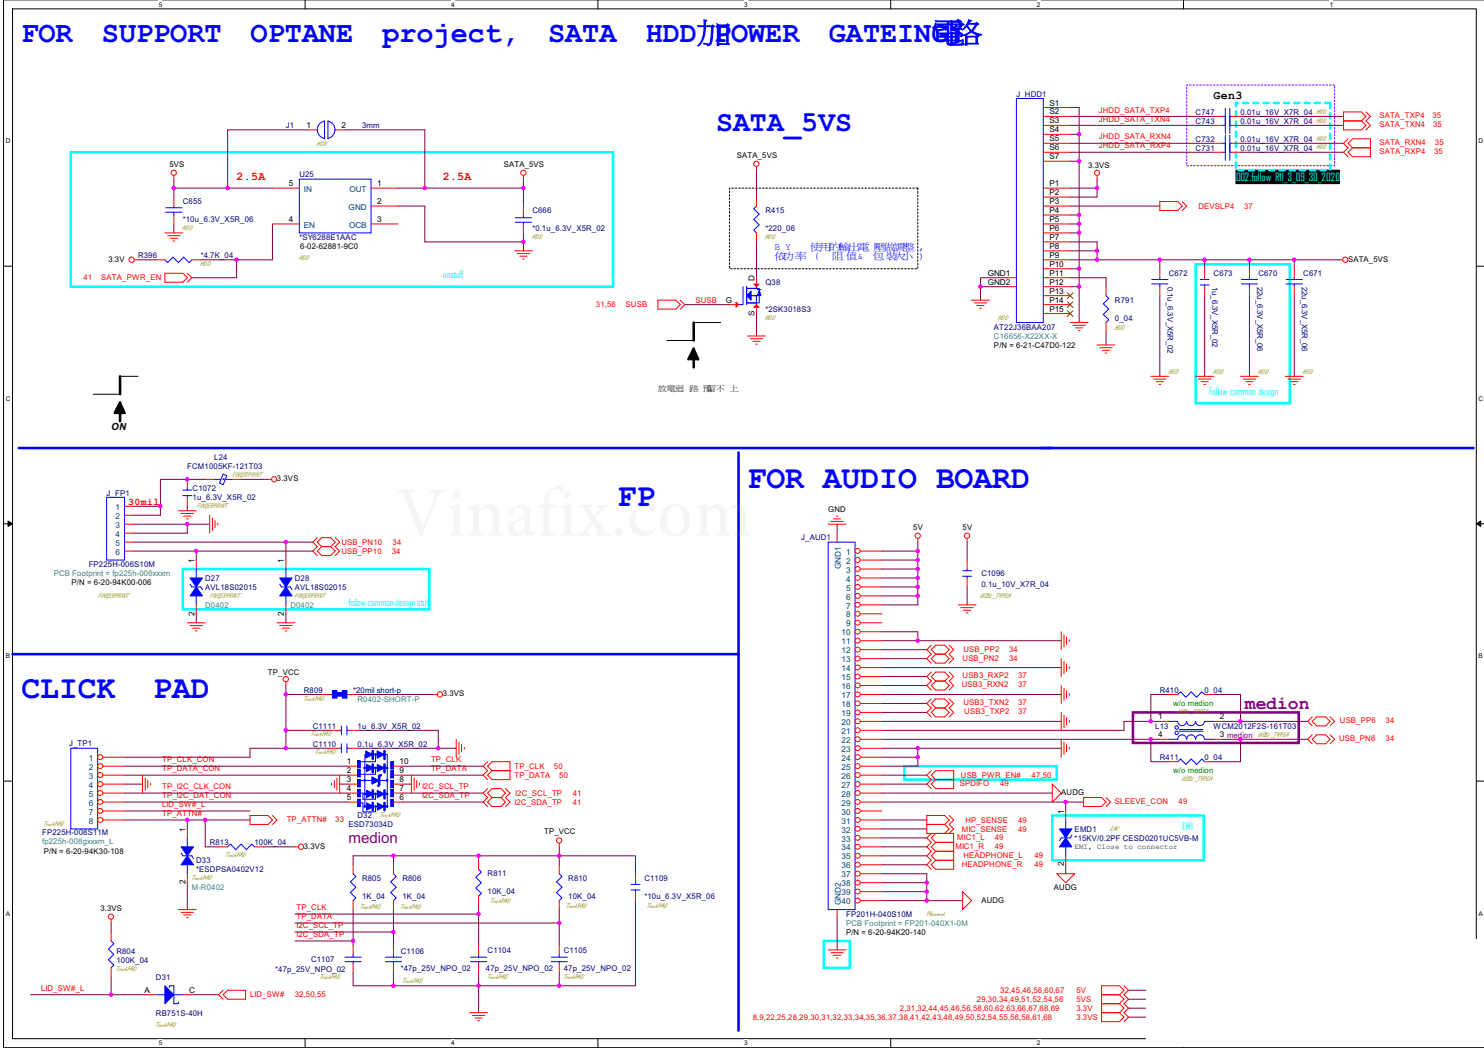

LED BOARD

3.3VS
U21 TC7S208FU
LED_HDD# 4
SATA_LED# 35
R365 100K_04
3.3VS
M0M_SSD2_LED# 42
M0M_SSD1_LED# 43
DIT R87512-40H

接 PC PIN24 接 出接 S.B
LED 燈 的 自 己 造 造 P 通 和 I/O S 各 各 各 各 各

如 PCIE SSD LED 定 義 同 S.B
LED 動 作 時，請 用 此 線 路

50 AIRPLAN_LED#
50 LED_BAT_FUL1
50 LED_BAT_CHG
50 LED_PWR#
50 LED_ACIN

LED_HDD#
LED_BAT_FUL1
LED_BAT_CHG
LED_PWR#
LED_ACIN

3.3VS
EMC8
0.01u_50V_XTR_04
GND, Close to connector
GND

NC2
NC1
GND
3.3VS

FP225H272S10M
PCB Footprint = 85205-0400M
PIN = 6-20-84K50-012

WLAN LED	
Windows 7	WLAN ON 亮
Windows 7	WLAN OFF 不亮
Windows 8	Airplane ON 亮
Windows 8	Airplane OFF 不亮

CPU FAN CONTROL

3VS
C385 10u_6.3V_XSR_06
C418 10u_6.3V_XSR_06
50773-0400N-001
PCB Footprint = 85205-0400M
PIN = 6-20-44100-004

3VS
R546 4.7K_04
C846 100p_25V_NPO_02
C847 100p_25V_NPO_02

50 CPU_FANSEN#
50 CPU_FAN

VGA FAN CONTROL

3VS
C327 10u_6.3V_XSR_06
C352 10u_6.3V_XSR_06
50773-0400N-001
PCB Footprint = 85205-0400M
PIN = 6-20-44100-004

3VS
R558 4.7K_04
C859 100p_25V_NPO_02
C861 100p_25V_NPO_02

50 VGA_FANSEN#
50 VGA_FAN

CCD+DMIC

3VS
R507 0.04
1.8VAO R505 0.04
C791 1u_6.3V_XSR_02
U32
VIN
VOUT
EN
GND
C792 2.2u_6.3V_XSR_04
C793 100p_25V_NPO_02
C794 47p_25V_NPO_02
C795 47p_25V_NPO_02

1A
1A
48 mll
CCD_PWR

DMIC_PWR
DMIC_DATA_C
DMIC_DATA_R
DMIC_CLK_C
DMIC_CLK_R

FCM1005KF-121T03
FCM1005KF-121T03

WCM2012F23-181T03-short
0.02 mmm

50773-0400N-001
PCB Footprint = 50207-012000-112

如 CCD 5V 2 兩 兩 兩 兩 兩
M: G5243A --- 6-02-05243-9C0
S: AP2821KTR-G1 6-02-02821-9C0

DMIC_PWR
DMIC_DATA_C
DMIC_DATA_R
DMIC_CLK_C
DMIC_CLK_R

50773-0400N-001
PCB Footprint = 50207-012000-112

如 AUDIO SOURCE 到此 I.C (在 Solution) 則不加 (信號直接到 CONNECT)


TPM

3VS
R782 4.7K_04
R783 4.7K_04
R784 4.7K_04
R785 4.7K_04
R786 4.7K_04
R787 4.7K_04
R788 4.7K_04
R789 4.7K_04
R790 4.7K_04
R791 4.7K_04
R792 4.7K_04
R793 4.7K_04
R794 4.7K_04
R795 4.7K_04
R796 4.7K_04
R797 4.7K_04
R798 4.7K_04
R799 4.7K_04
R800 4.7K_04
R801 4.7K_04
R802 4.7K_04
R803 4.7K_04
R804 4.7K_04
R805 4.7K_04
R806 4.7K_04
R807 4.7K_04
R808 4.7K_04
R809 4.7K_04
R810 4.7K_04
R811 4.7K_04
R812 4.7K_04
R813 4.7K_04
R814 4.7K_04
R815 4.7K_04
R816 4.7K_04
R817 4.7K_04
R818 4.7K_04
R819 4.7K_04
R820 4.7K_04
R821 4.7K_04
R822 4.7K_04
R823 4.7K_04
R824 4.7K_04
R825 4.7K_04
R826 4.7K_04
R827 4.7K_04
R828 4.7K_04
R829 4.7K_04
R830 4.7K_04
R831 4.7K_04
R832 4.7K_04
R833 4.7K_04
R834 4.7K_04
R835 4.7K_04
R836 4.7K_04
R837 4.7K_04
R838 4.7K_04
R839 4.7K_04
R840 4.7K_04
R841 4.7K_04
R842 4.7K_04
R843 4.7K_04
R844 4.7K_04
R845 4.7K_04
R846 4.7K_04
R847 4.7K_04
R848 4.7K_04
R849 4.7K_04
R850 4.7K_04
R851 4.7K_04
R852 4.7K_04
R853 4.7K_04
R854 4.7K_04
R855 4.7K_04
R856 4.7K_04
R857 4.7K_04
R858 4.7K_04
R859 4.7K_04
R860 4.7K_04
R861 4.7K_04
R862 4.7K_04
R863 4.7K_04
R864 4.7K_04
R865 4.7K_04
R866 4.7K_04
R867 4.7K_04
R868 4.7K_04
R869 4.7K_04
R870 4.7K_04
R871 4.7K_04
R872 4.7K_04
R873 4.7K_04
R874 4.7K_04
R875 4.7K_04
R876 4.7K_04
R877 4.7K_04
R878 4.7K_04
R879 4.7K_04
R880 4.7K_04
R881 4.7K_04
R882 4.7K_04
R883 4.7K_04
R884 4.7K_04
R885 4.7K_04
R886 4.7K_04
R887 4.7K_04
R888 4.7K_04
R889 4.7K_04
R890 4.7K_04
R891 4.7K_04
R892 4.7K_04
R893 4.7K_04
R894 4.7K_04
R895 4.7K_04
R896 4.7K_04
R897 4.7K_04
R898 4.7K_04
R899 4.7K_04
R900 4.7K_04
R901 4.7K_04
R902 4.7K_04
R903 4.7K_04
R904 4.7K_04
R905 4.7K_04
R906 4.7K_04
R907 4.7K_04
R908 4.7K_04
R909 4.7K_04
R910 4.7K_04
R911 4.7K_04
R912 4.7K_04
R913 4.7K_04
R914 4.7K_04
R915 4.7K_04
R916 4.7K_04
R917 4.7K_04
R918 4.7K_04
R919 4.7K_04
R920 4.7K_04
R921 4.7K_04
R922 4.7K_04
R923 4.7K_04
R924 4.7K_04
R925 4.7K_04
R926 4.7K_04
R927 4.7K_04
R928 4.7K_04
R929 4.7K_04
R930 4.7K_04
R931 4.7K_04
R932 4.7K_04
R933 4.7K_04
R934 4.7K_04
R935 4.7K_04
R936 4.7K_04
R937 4.7K_04
R938 4.7K_04
R939 4.7K_04
R940 4.7K_04
R941 4.7K_04
R942 4.7K_04
R943 4.7K_04
R944 4.7K_04
R945 4.7K_04
R946 4.7K_04
R947 4.7K_04
R948 4.7K_04
R949 4.7K_04
R950 4.7K_04
R951 4.7K_04
R952 4.7K_04
R953 4.7K_04
R954 4.7K_04
R955 4.7K_04
R956 4.7K_04
R957 4.7K_04
R958 4.7K_04
R959 4.7K_04
R960 4.7K_04
R961 4.7K_04
R962 4.7K_04
R963 4.7K_04
R964 4.7K_04
R965 4.7K_04
R966 4.7K_04
R967 4.7K_04
R968 4.7


Schematic Diagrams

LID, PWR SW Board

Sheet 53 of 74
LID, PWR SW
Board

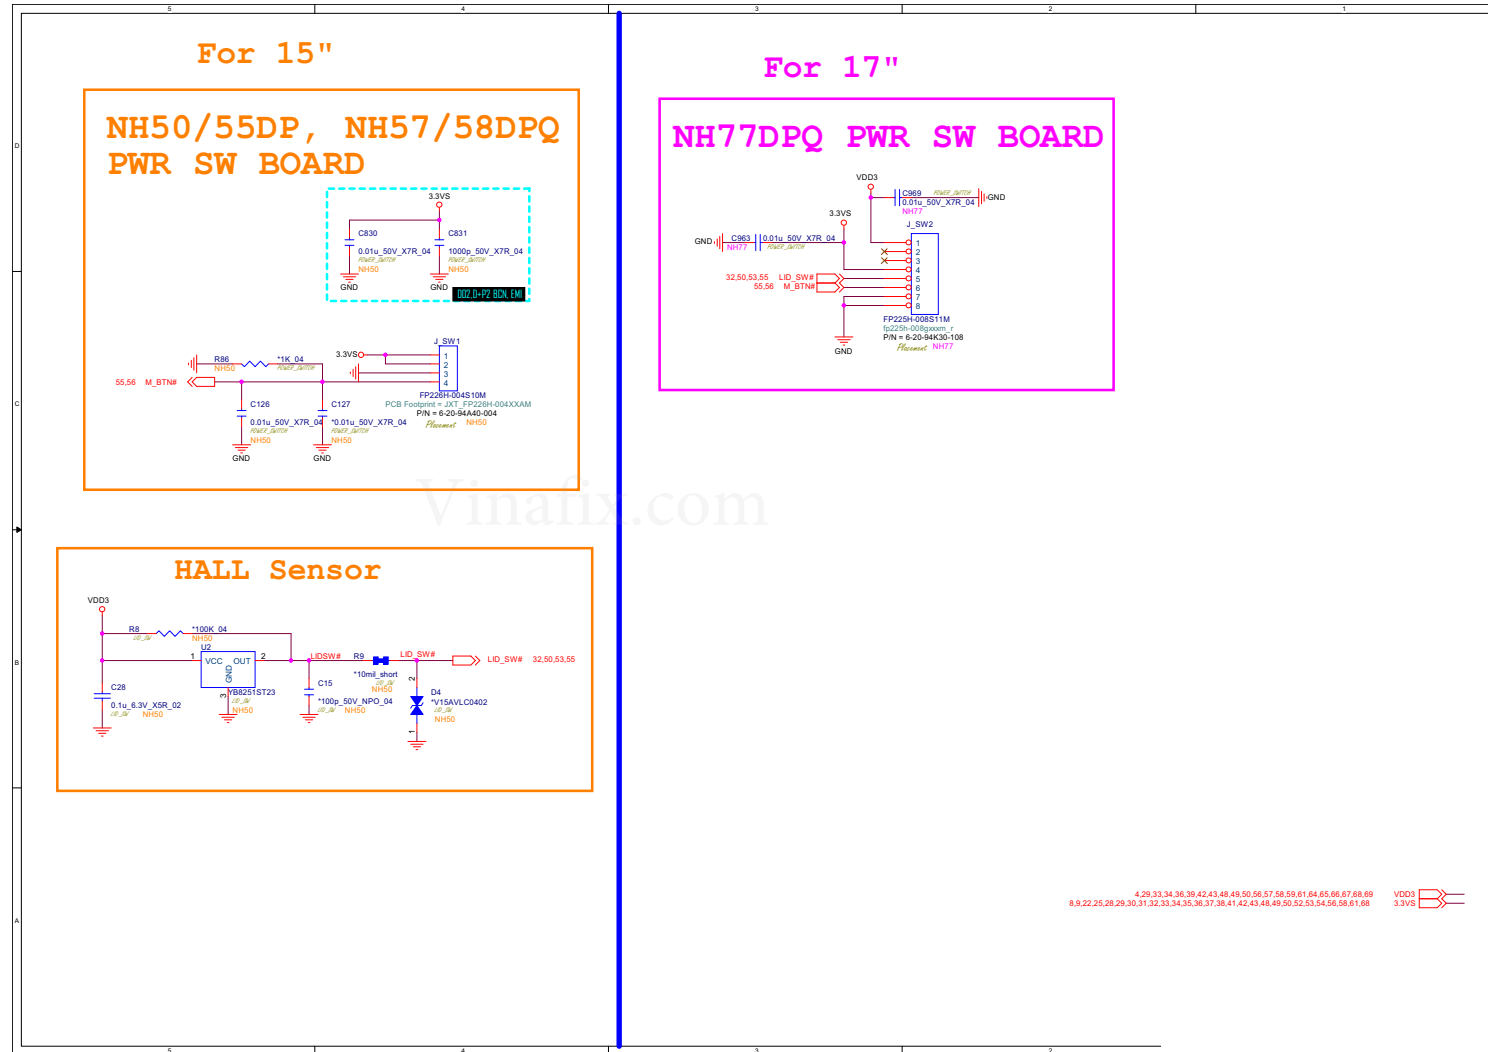

5V, 5VS, 3.3V, 3.3VS, 3.3VA

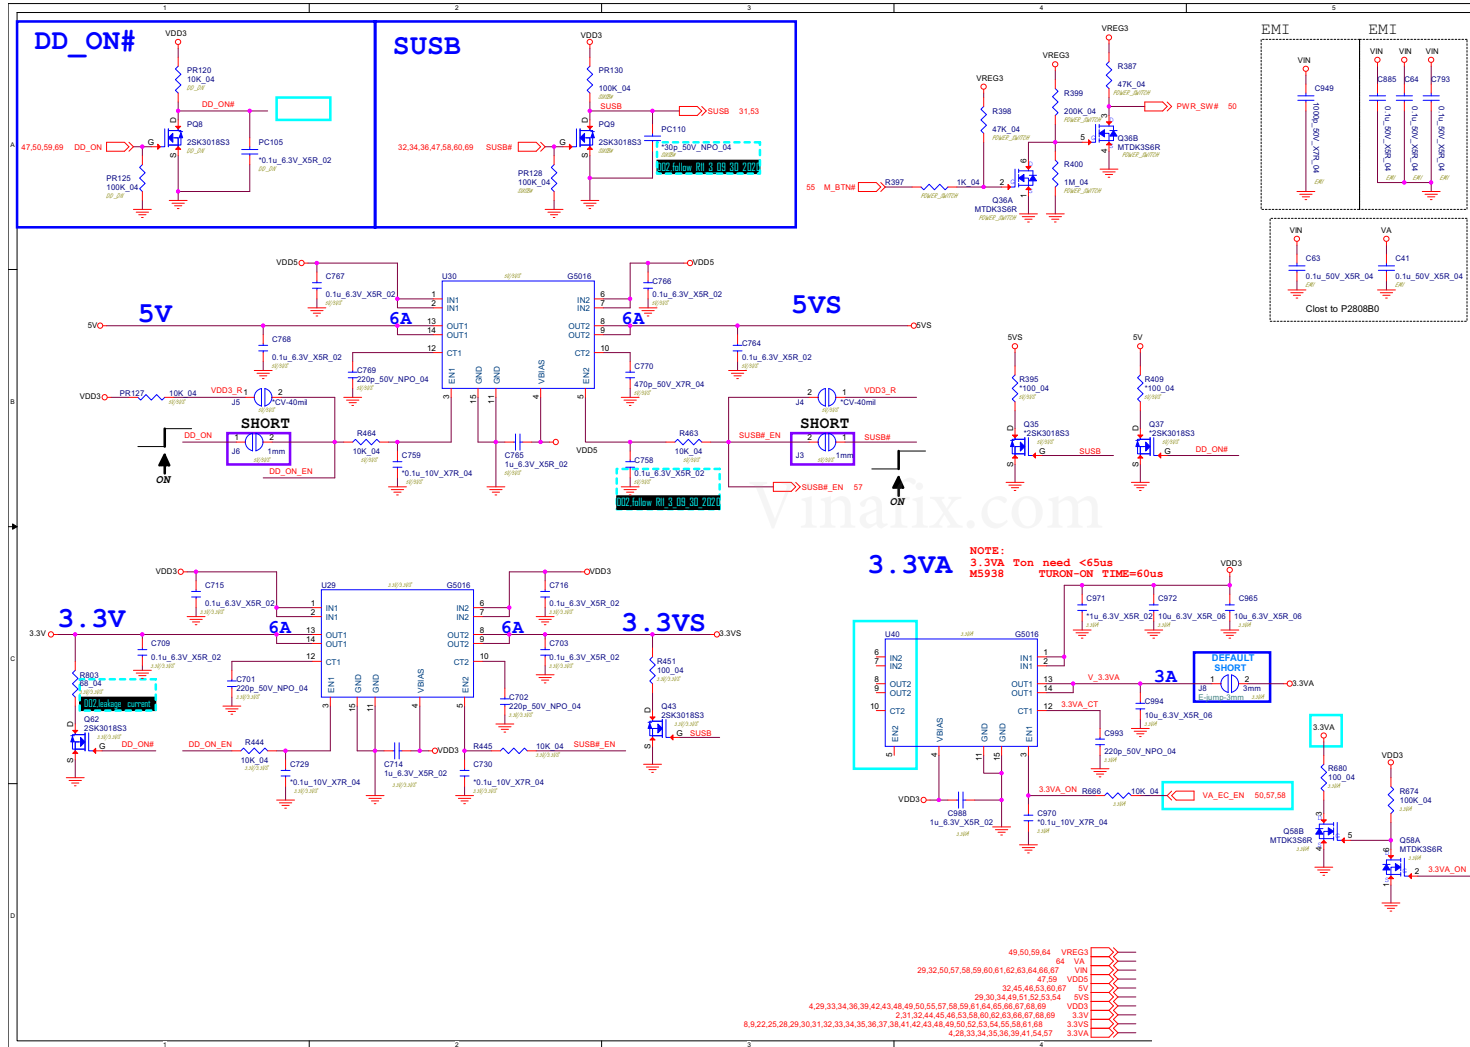


Sheet 54 of 74
5V, 5VS, 3.3V,
3.3VS, 3.3VA

Schematic Diagrams

VCCST, STG, SFR_OC, 1.8VA

Sheet 55 of 74
VCCST, STG,
SFR_OC, 1.8VA

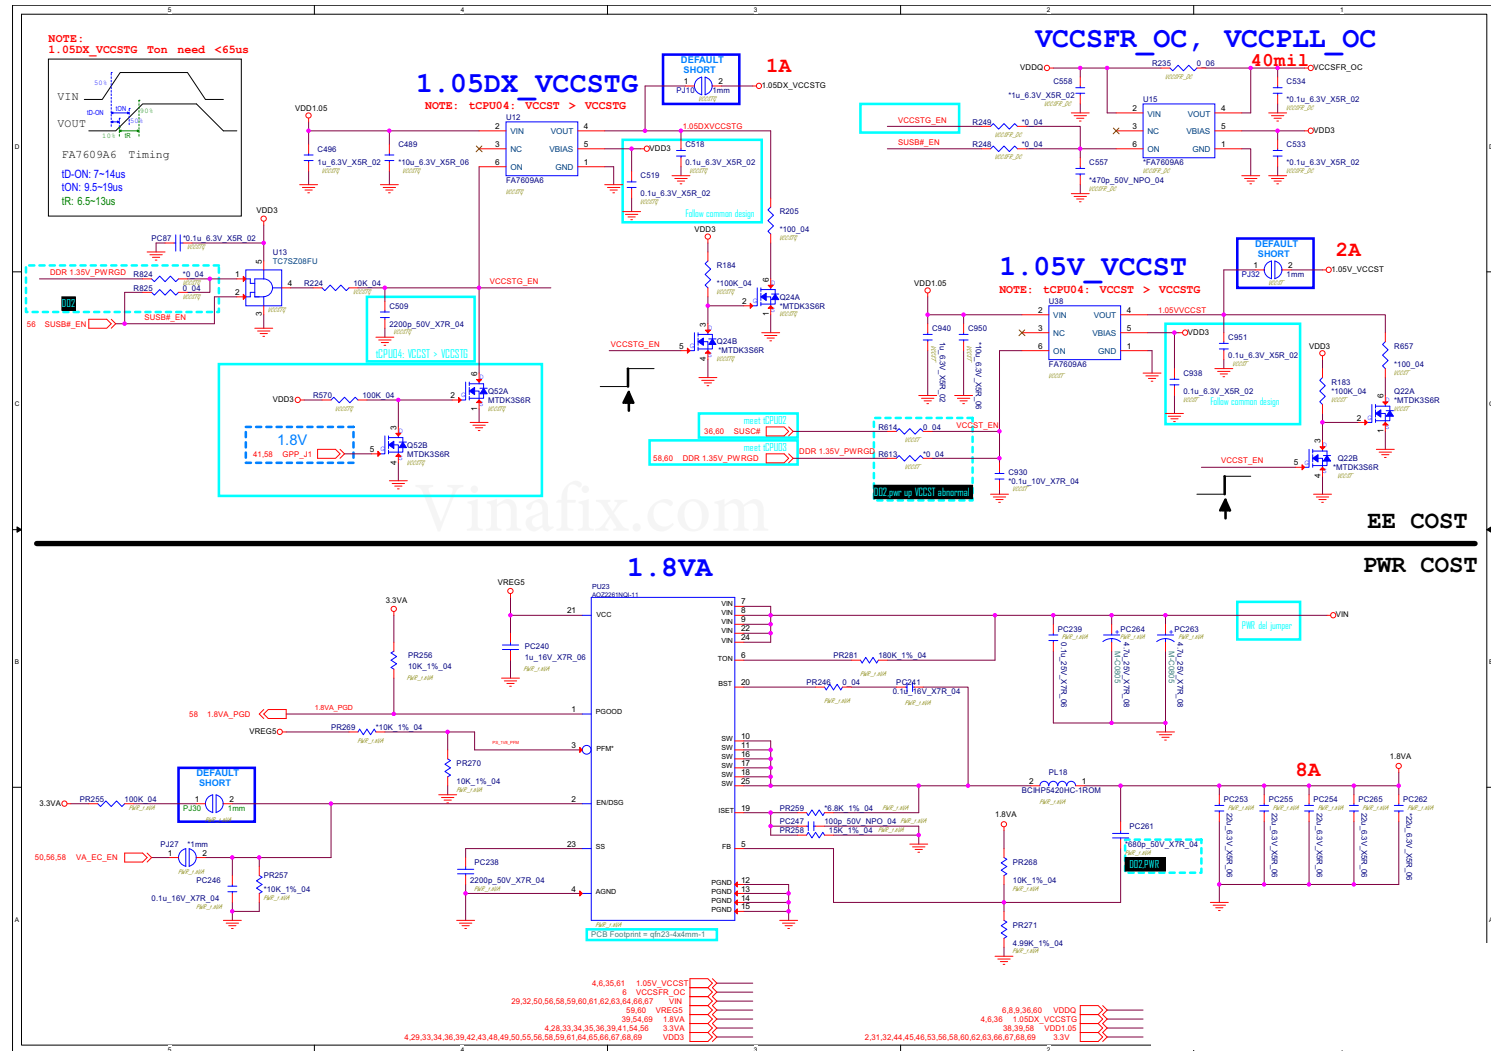


[illegible]

VDD1.05V, VCCIO B - 57

VDD3, VDD5

Sheet 57 of 74
VDD3, VDD5

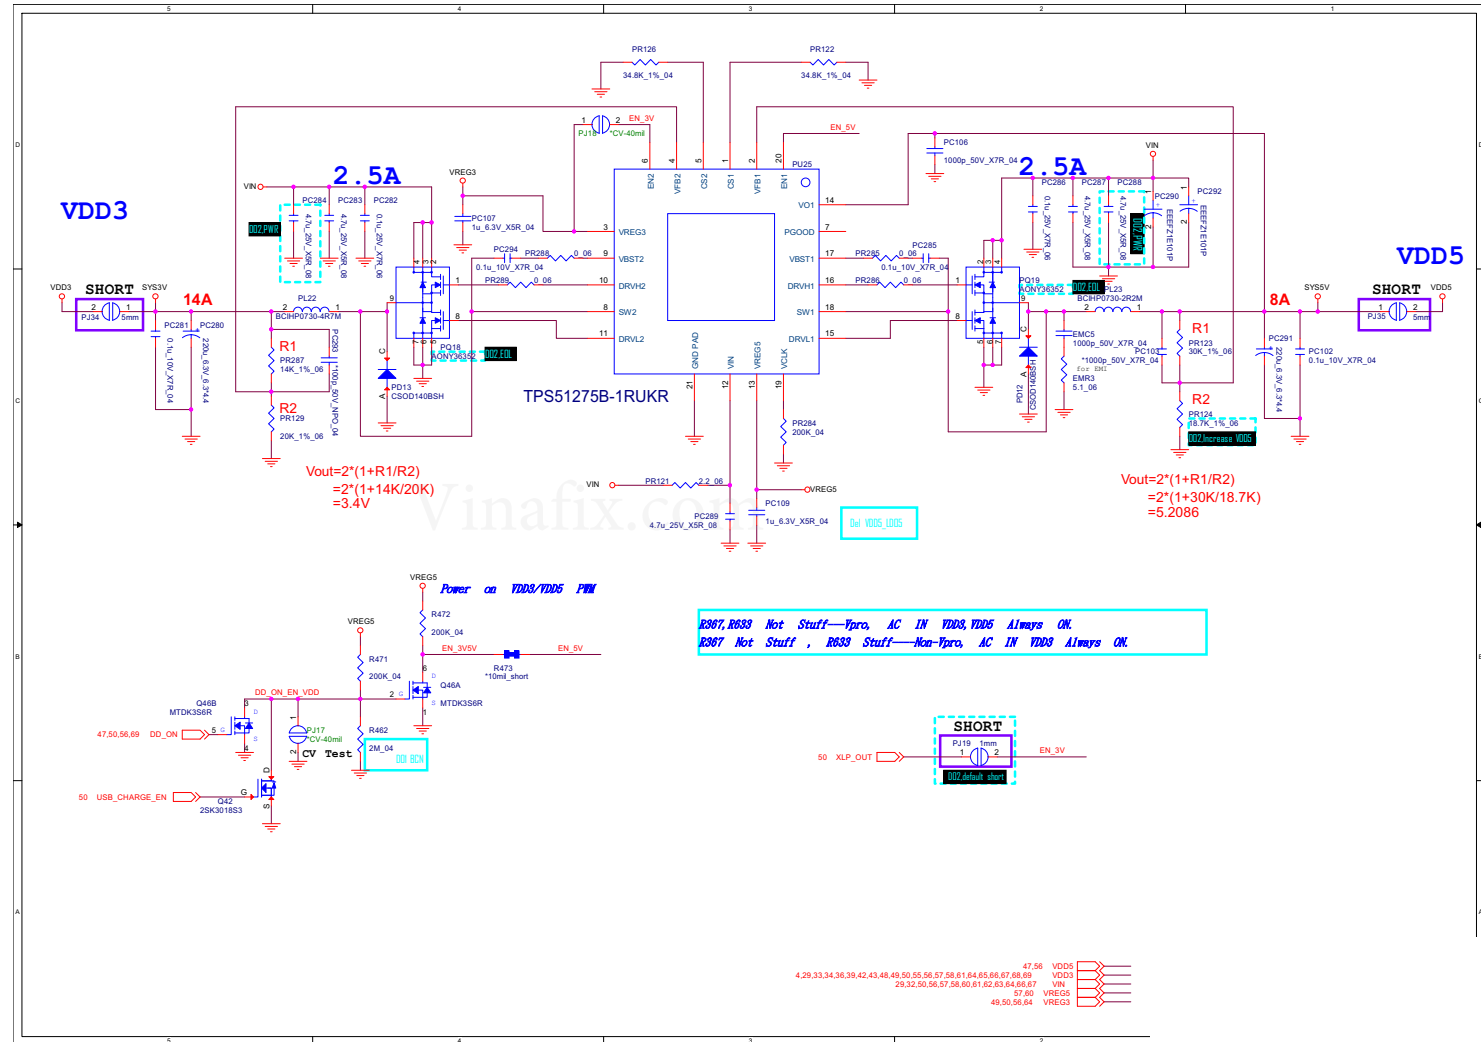


Sheet 58 of 74
DDR 1.2V / 0.6VS,
2.5V




VCC_Core, VCCGT, VCCSA

Sheet 59 of 74
VCC_Core, VCCGT,
VCCSA

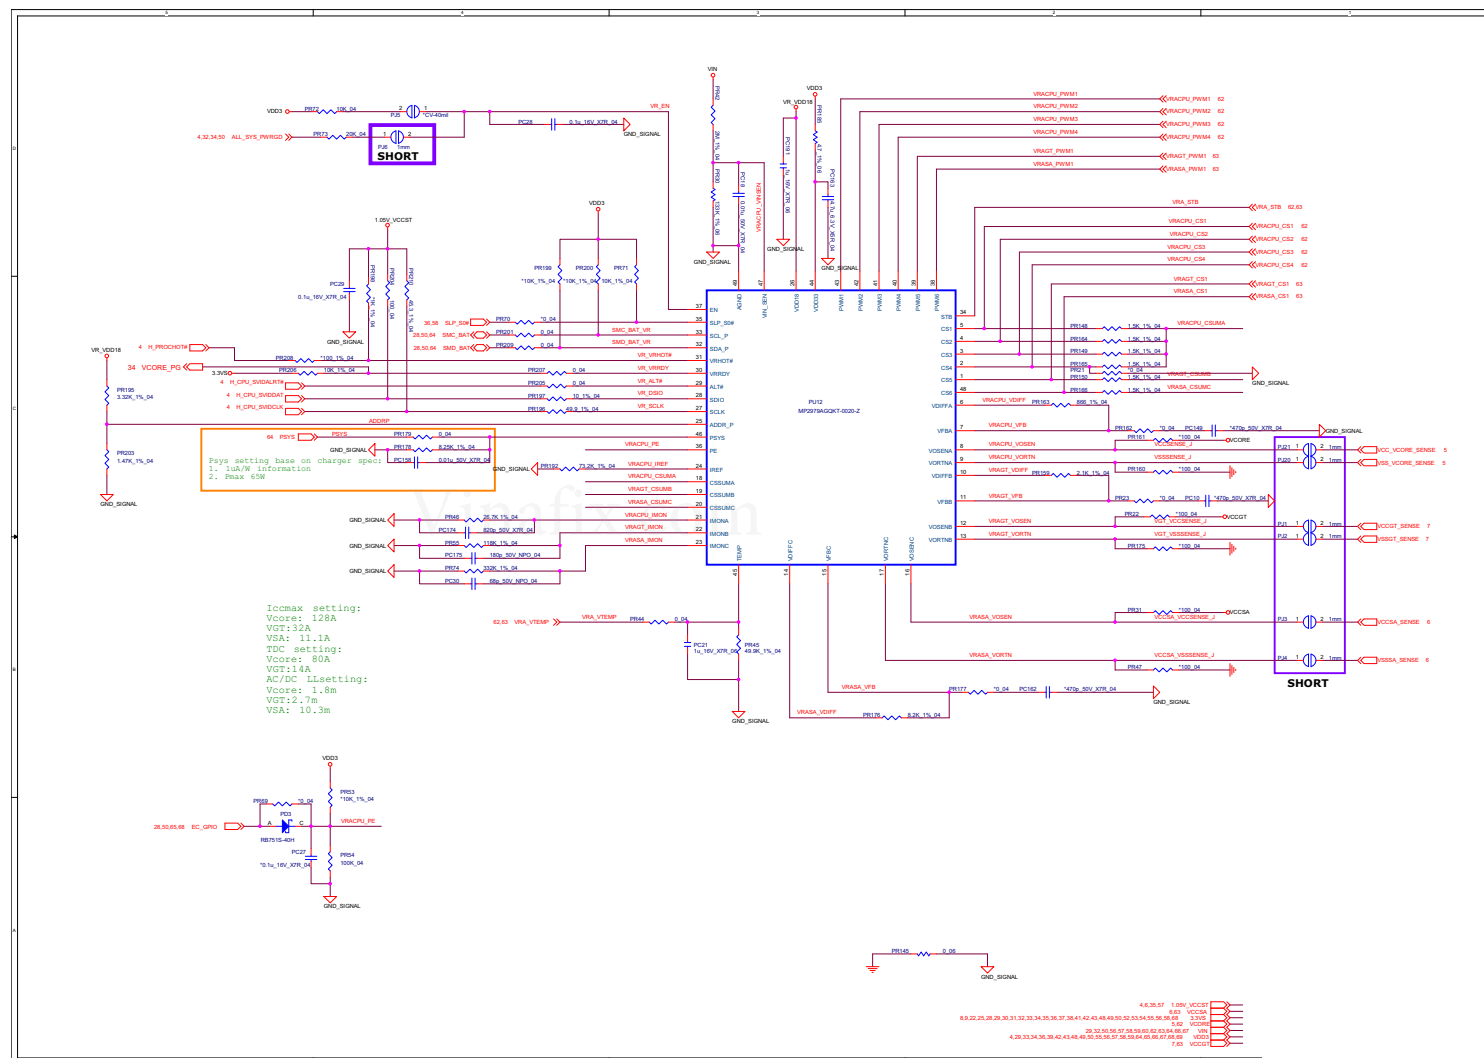

VCore Output Stage

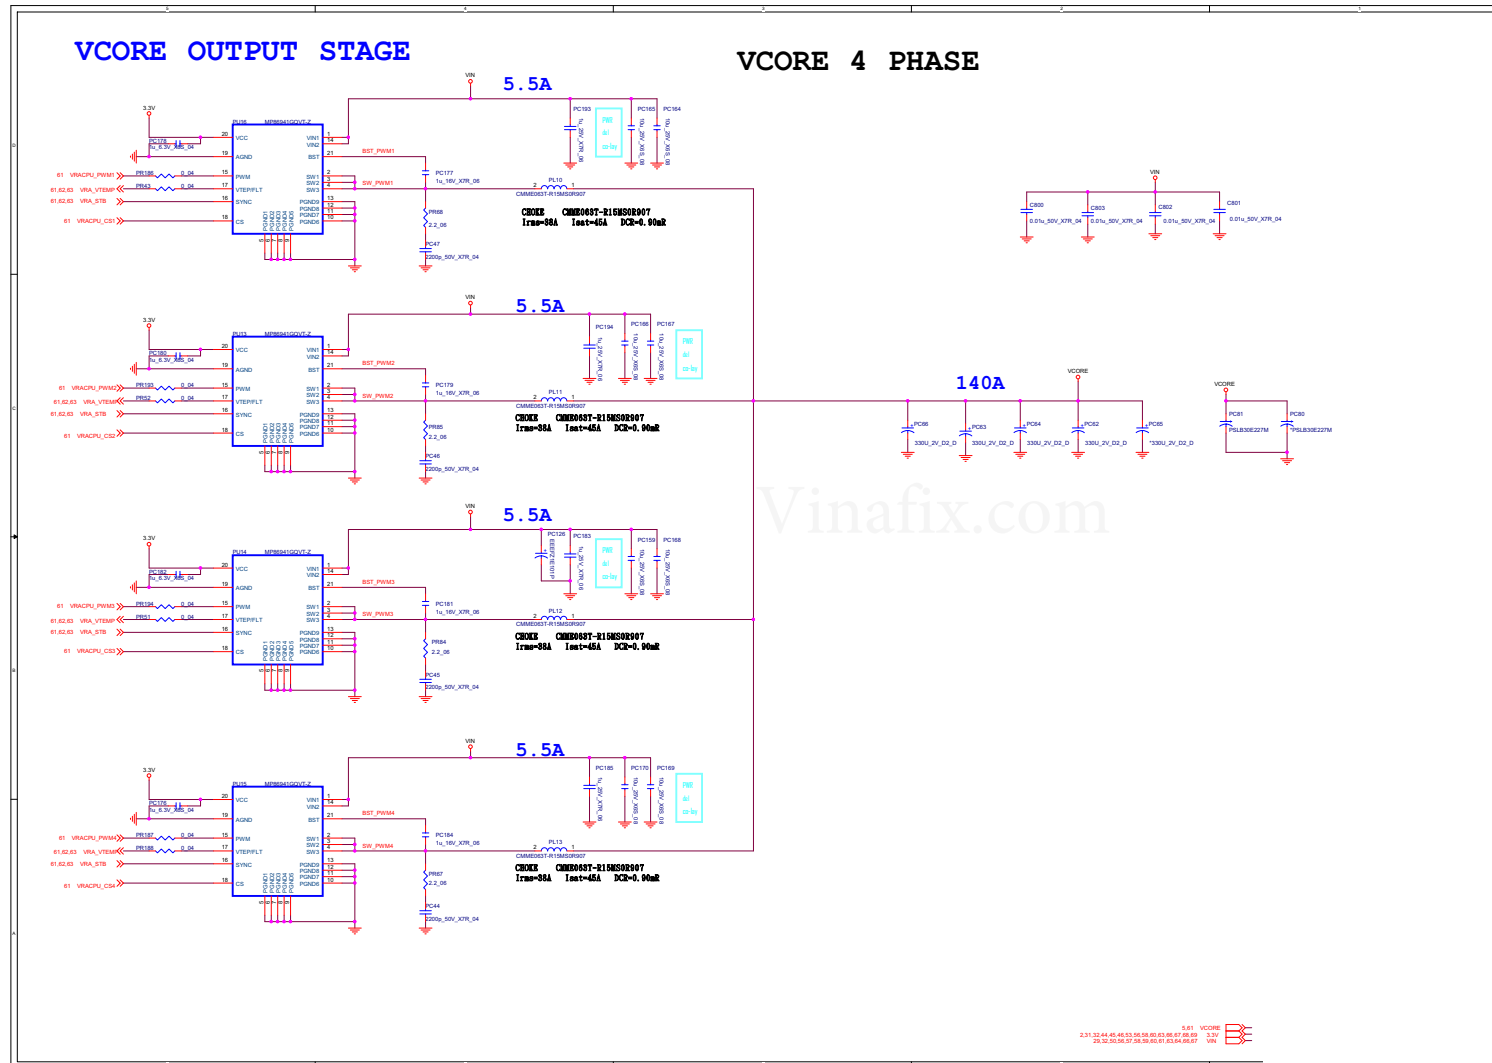


Sheet 60 of 74
VCore Output
Stage


Schematic Diagrams

VCCGT & VCCSA Output Stage

Sheet 61 of 74
VCCGT & VCCSA
Output Stage

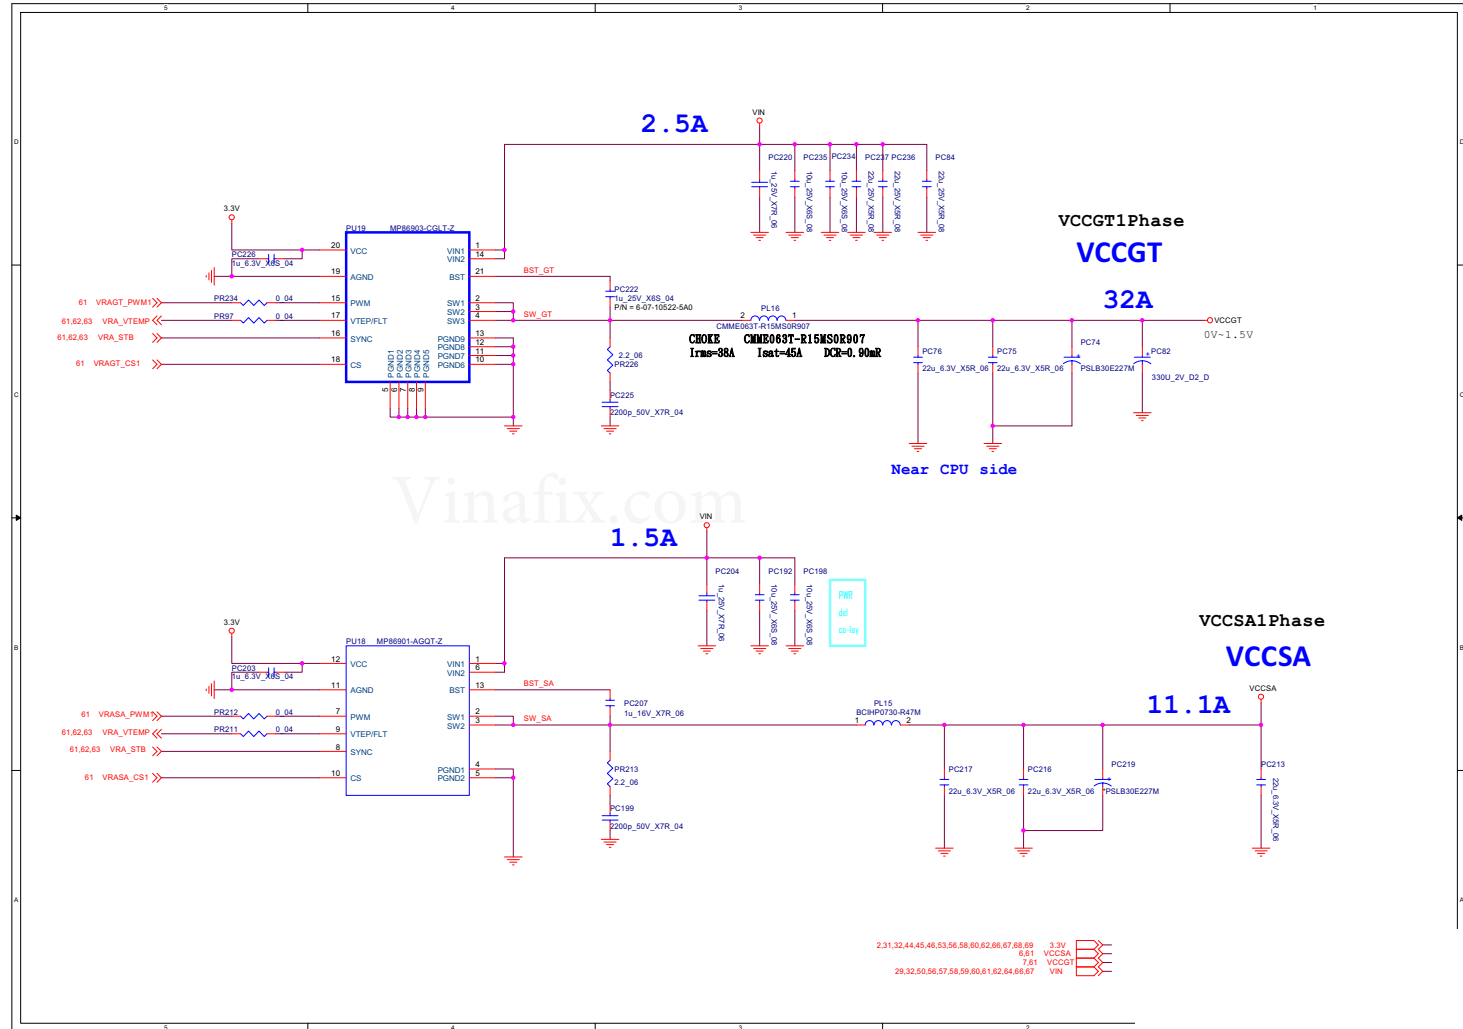


AC_In, Charger B - 63

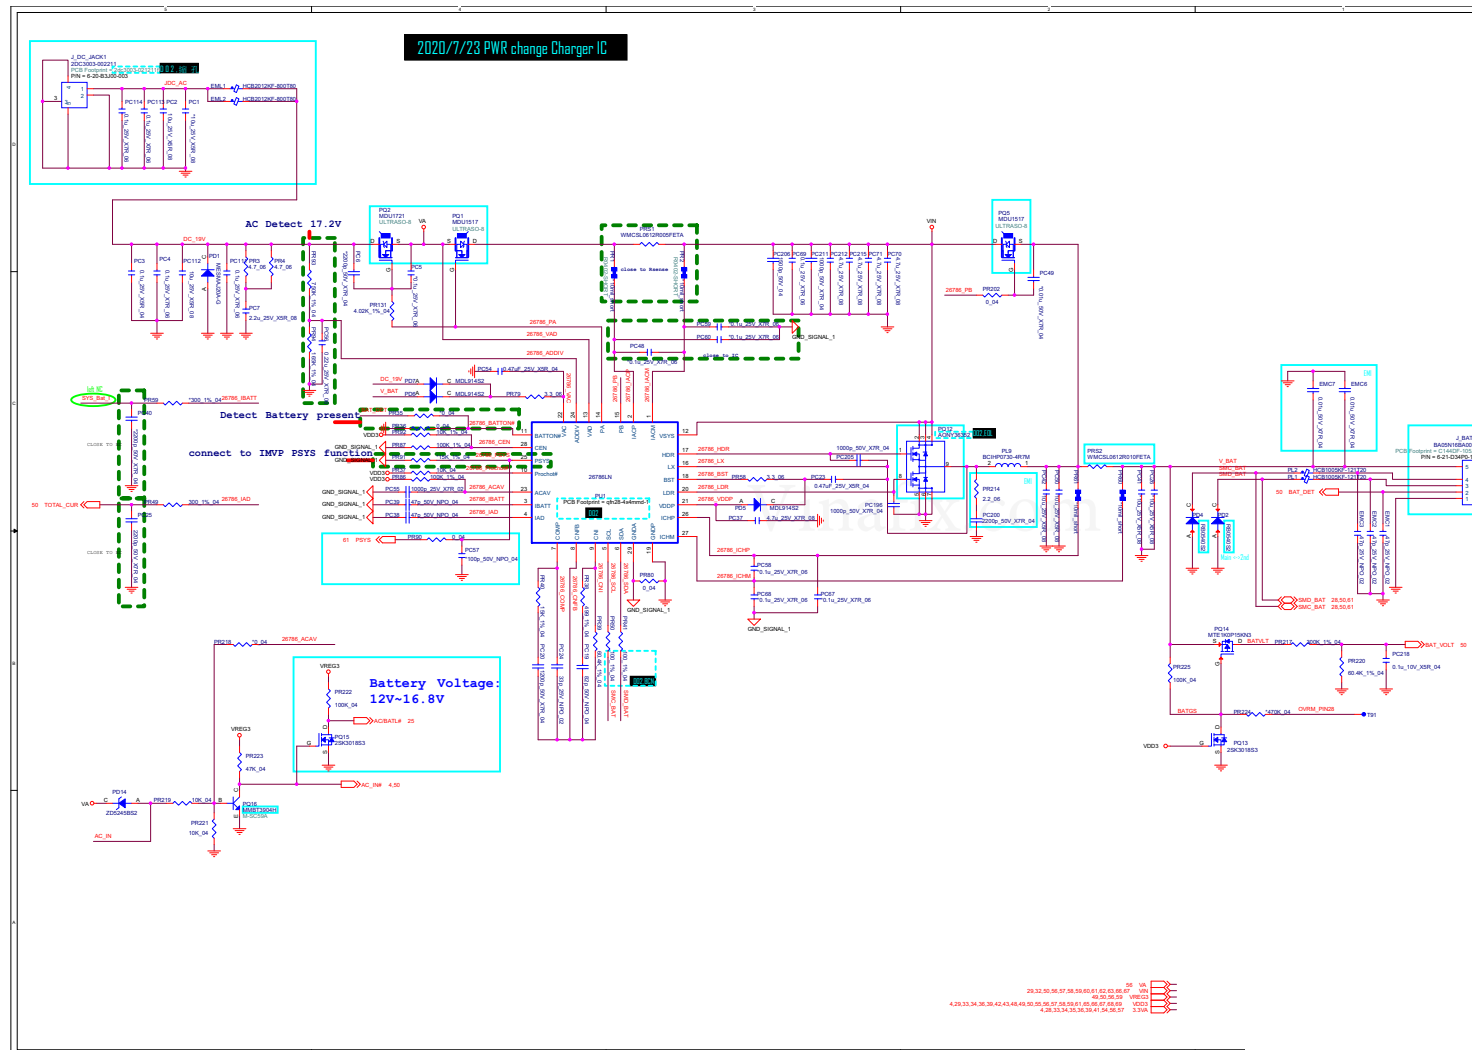


Sheet 62 of 74
AC_In, Charger

NVVDD1

Sheet 63 of 74
NVVDD1

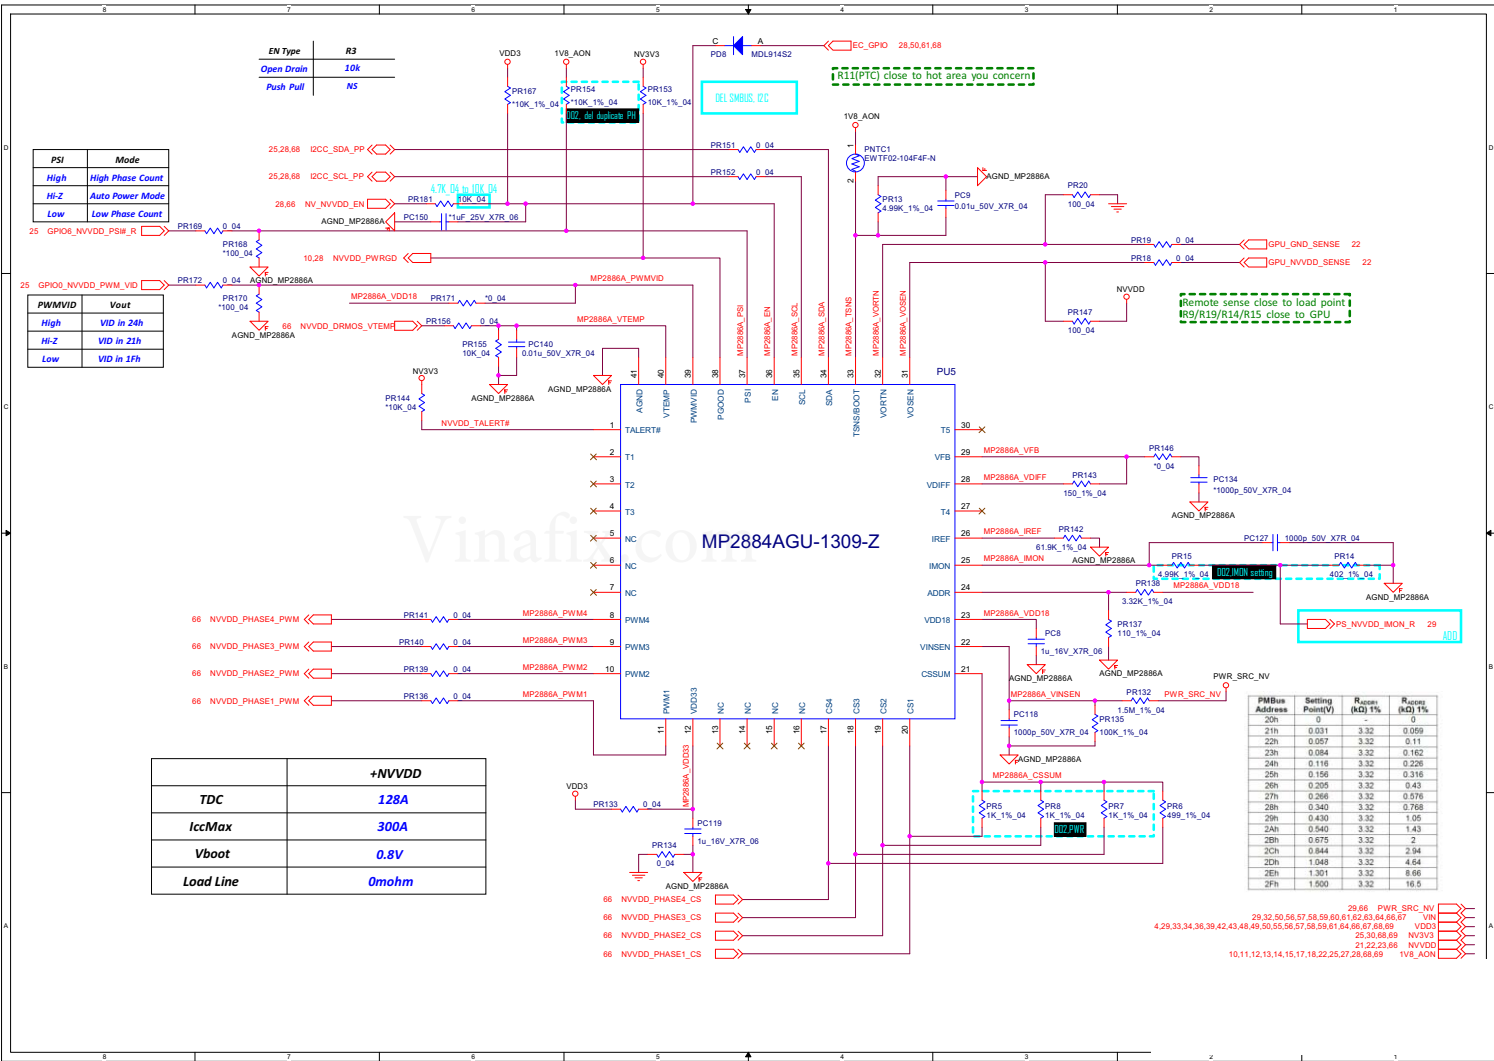


NVVDD2

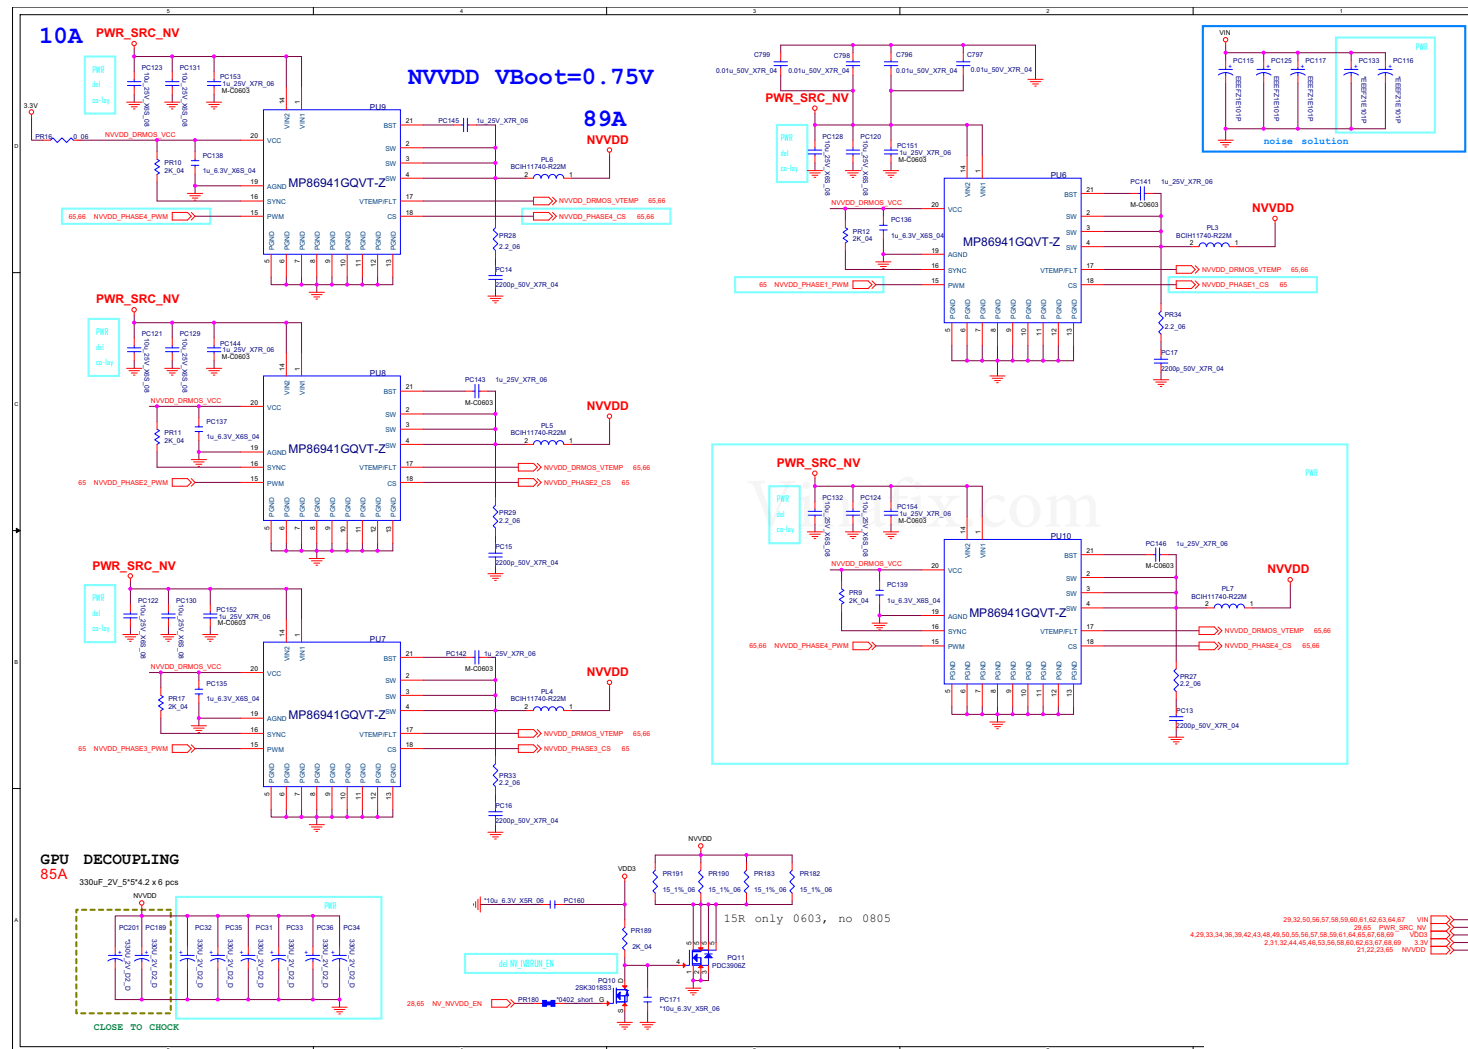Sheet 64 of 74
NVVDD2

PEX_VDD


Cold boot/Optimus: 1V8_AON & VPP > NV3V3 > NVVDD > PEX_VDD > FBVDDQ
Power down: NV3V3 > PEX_VDD > NVVDD > FBVDDQ > 1V8_AON

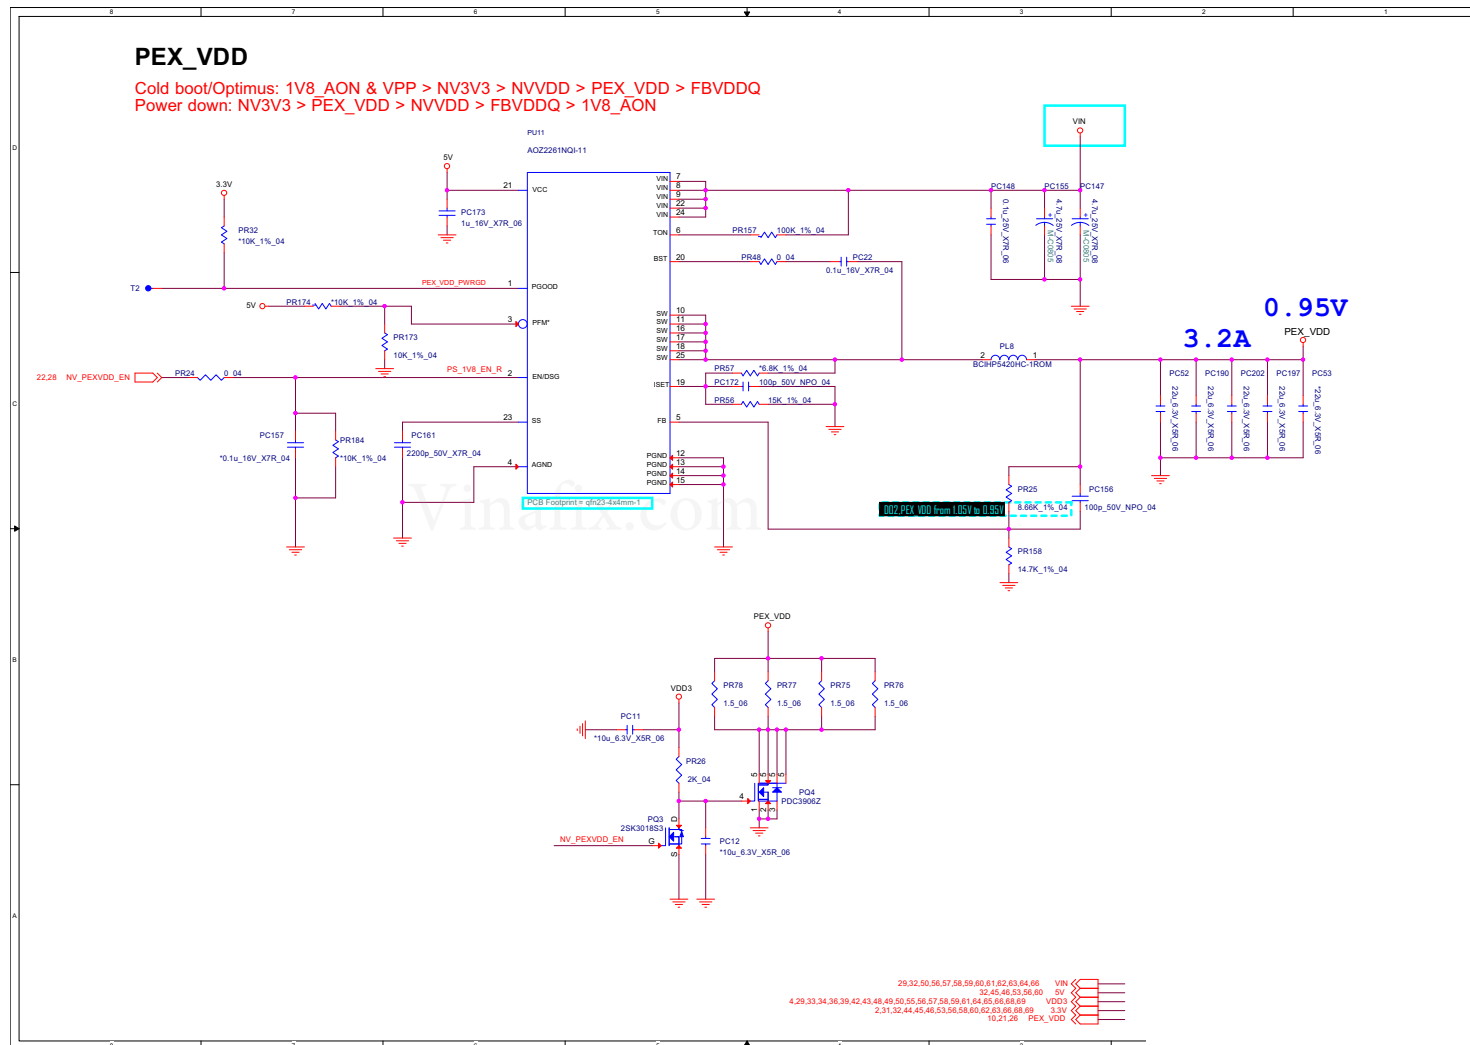

[illegible]

B. Schematic Diagrams

Sheet 67 of 74
1V8_AON, NV3V3,
1.5VS

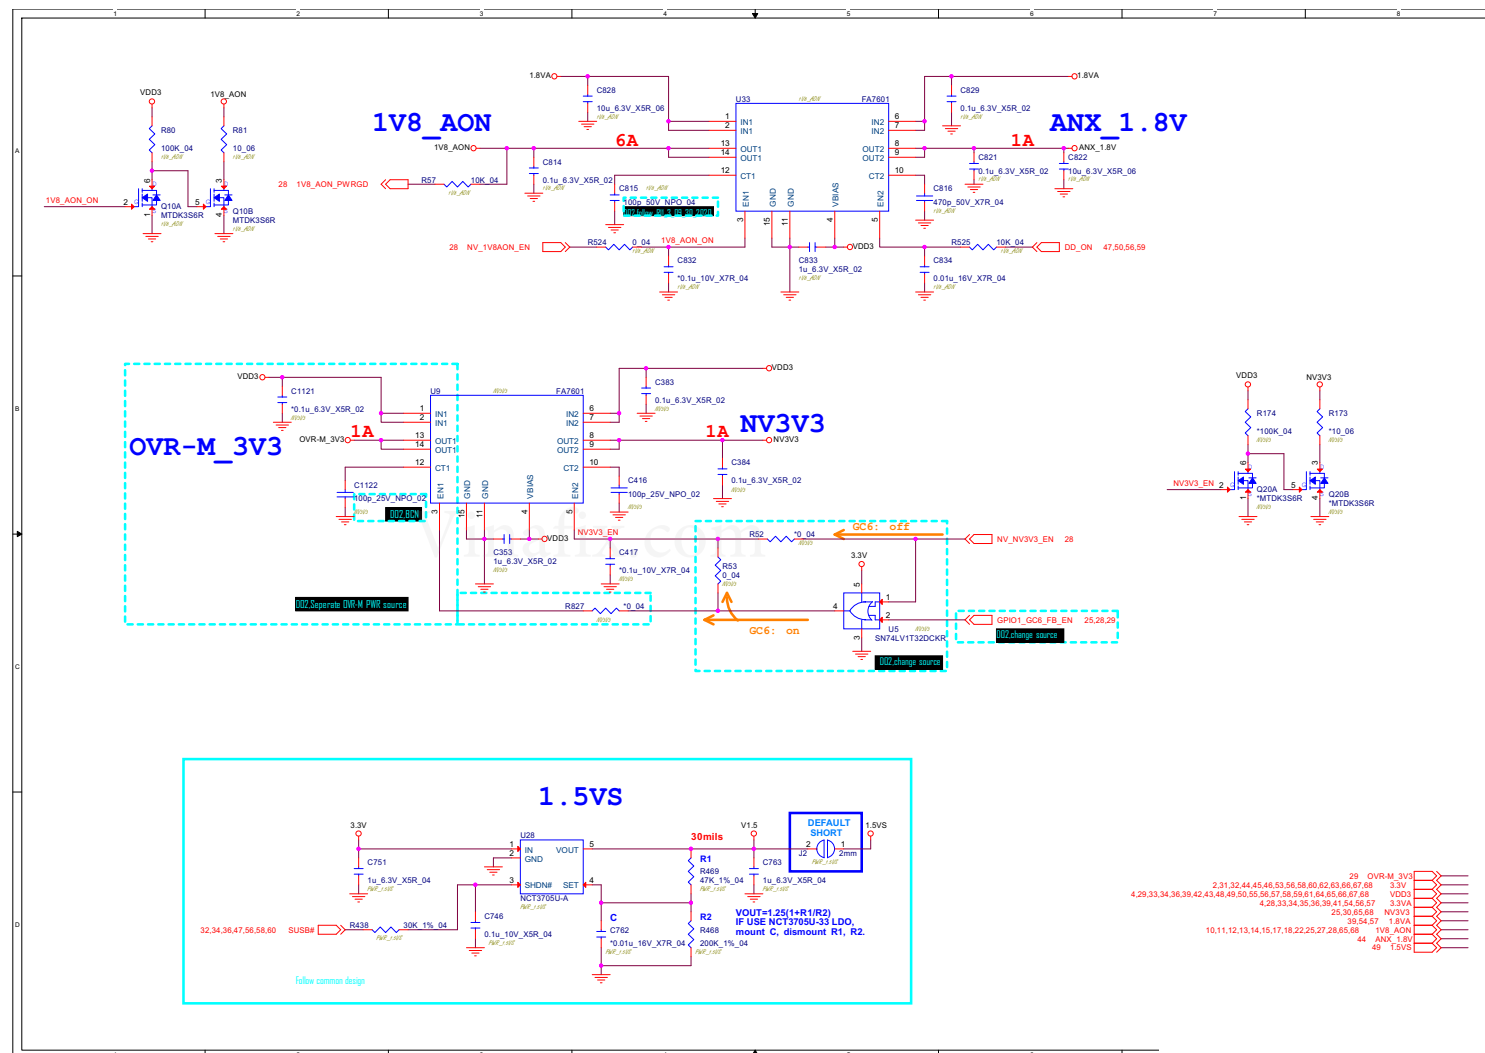


Audio Board B - 69




Schematic Diagrams

Audio Board

Sheet 69 of 74
Audio Board

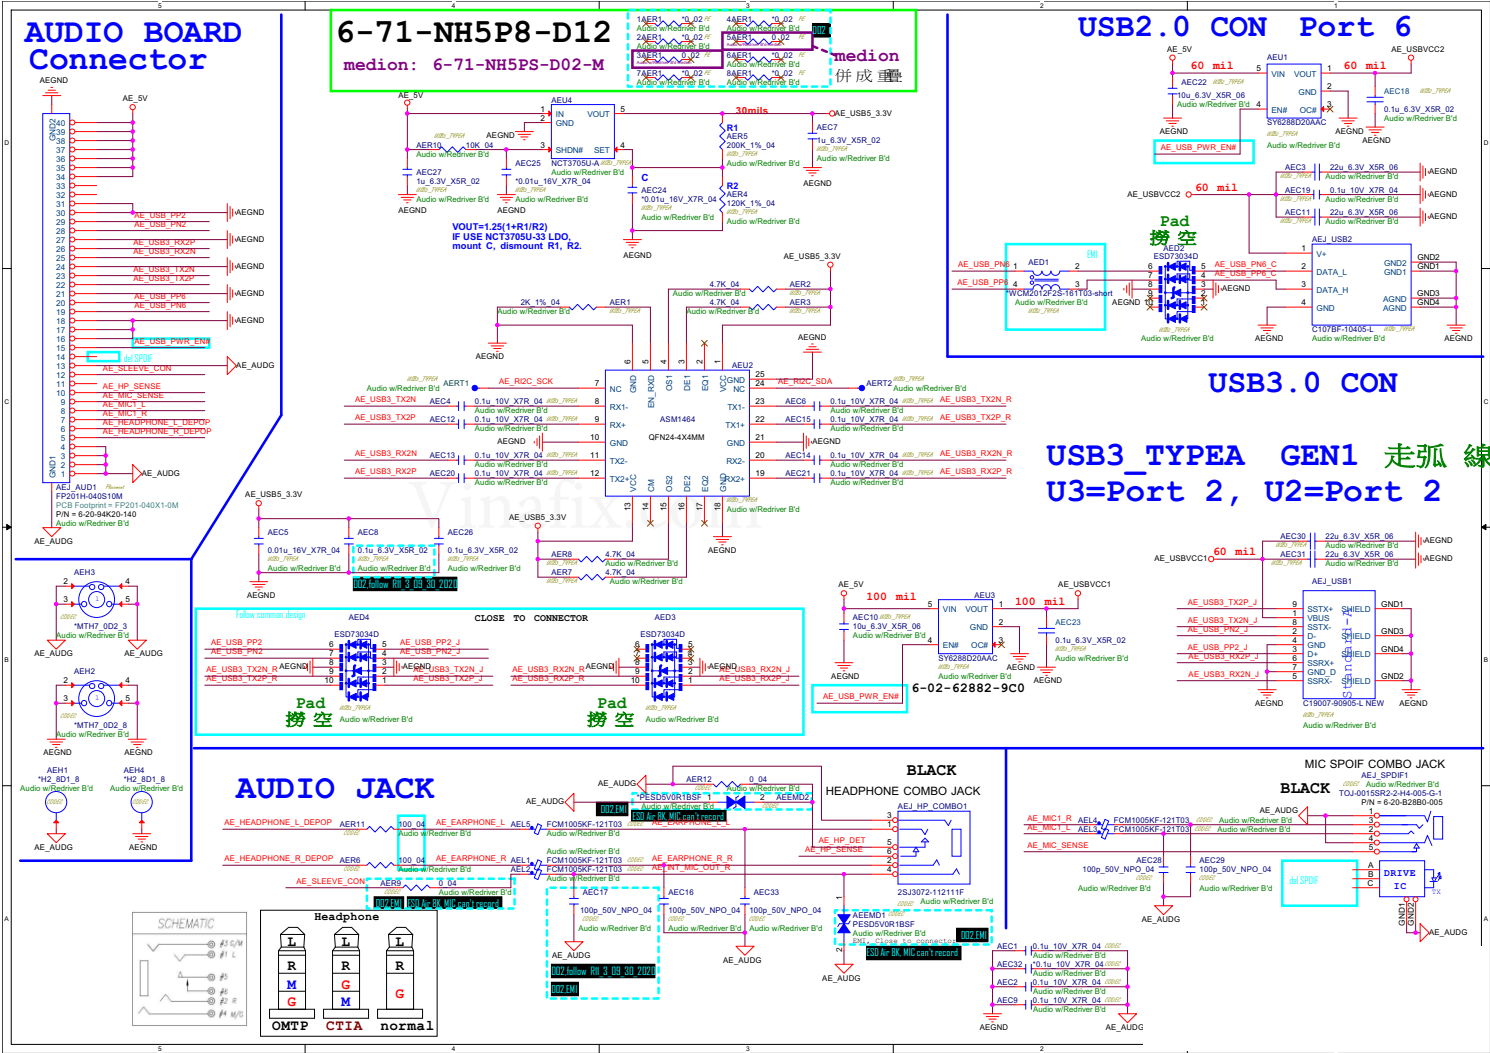


Click Board

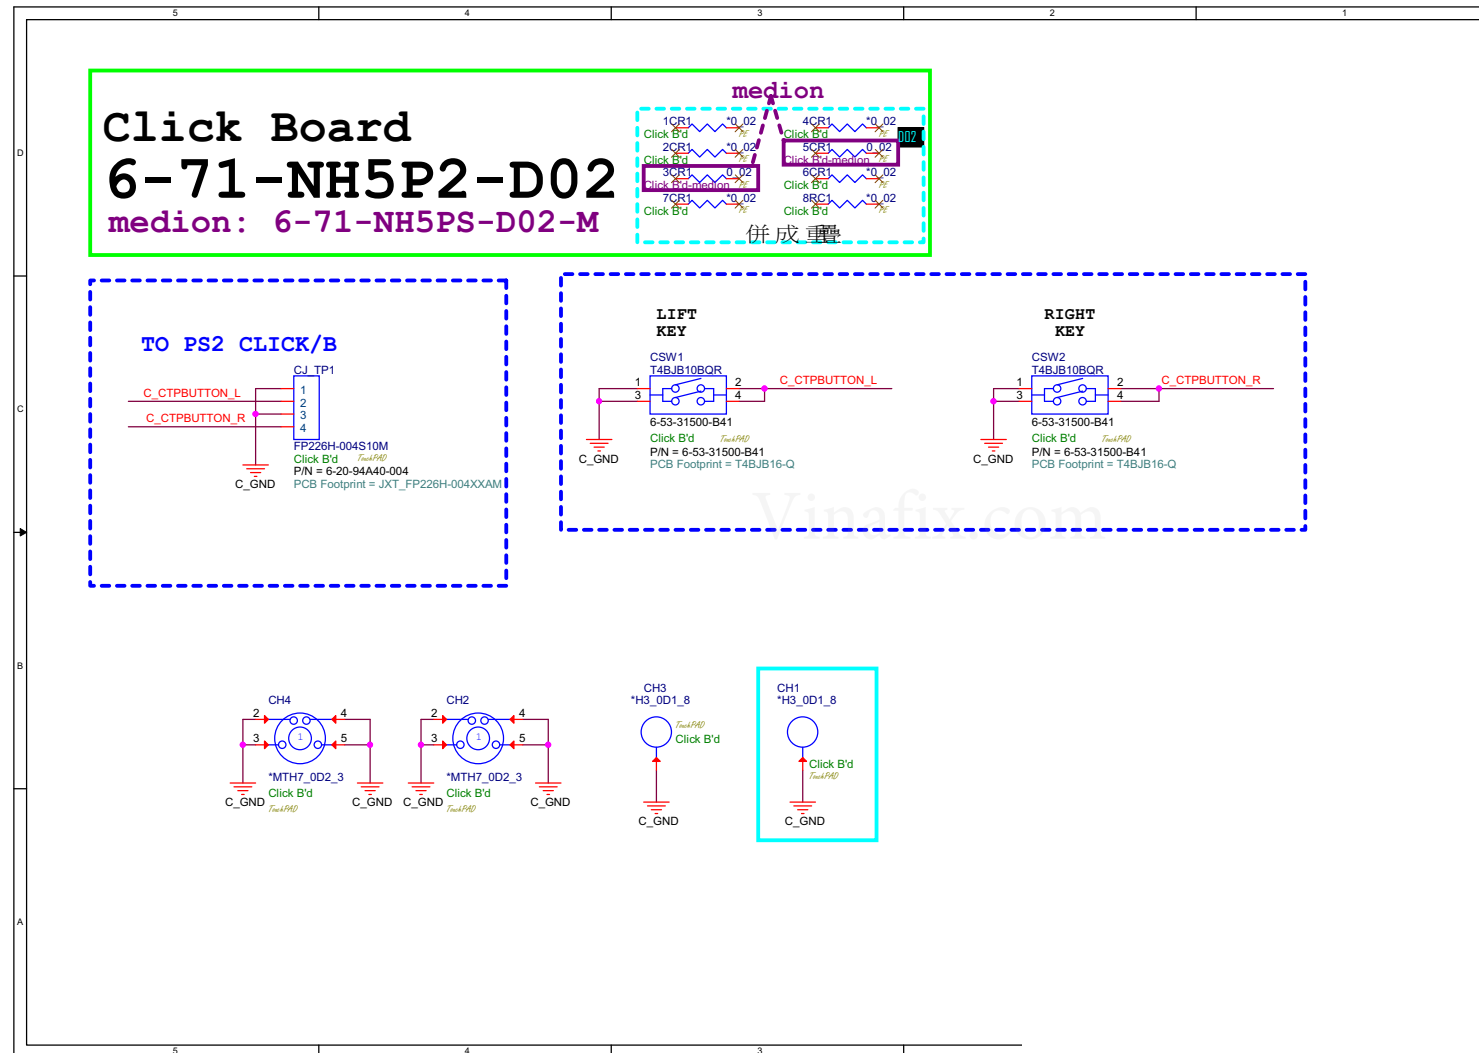Sheet 70 of 74
Click Board


Schematic Diagrams

PW Board (NH50, 57)

Sheet 71 of 74
PW Board

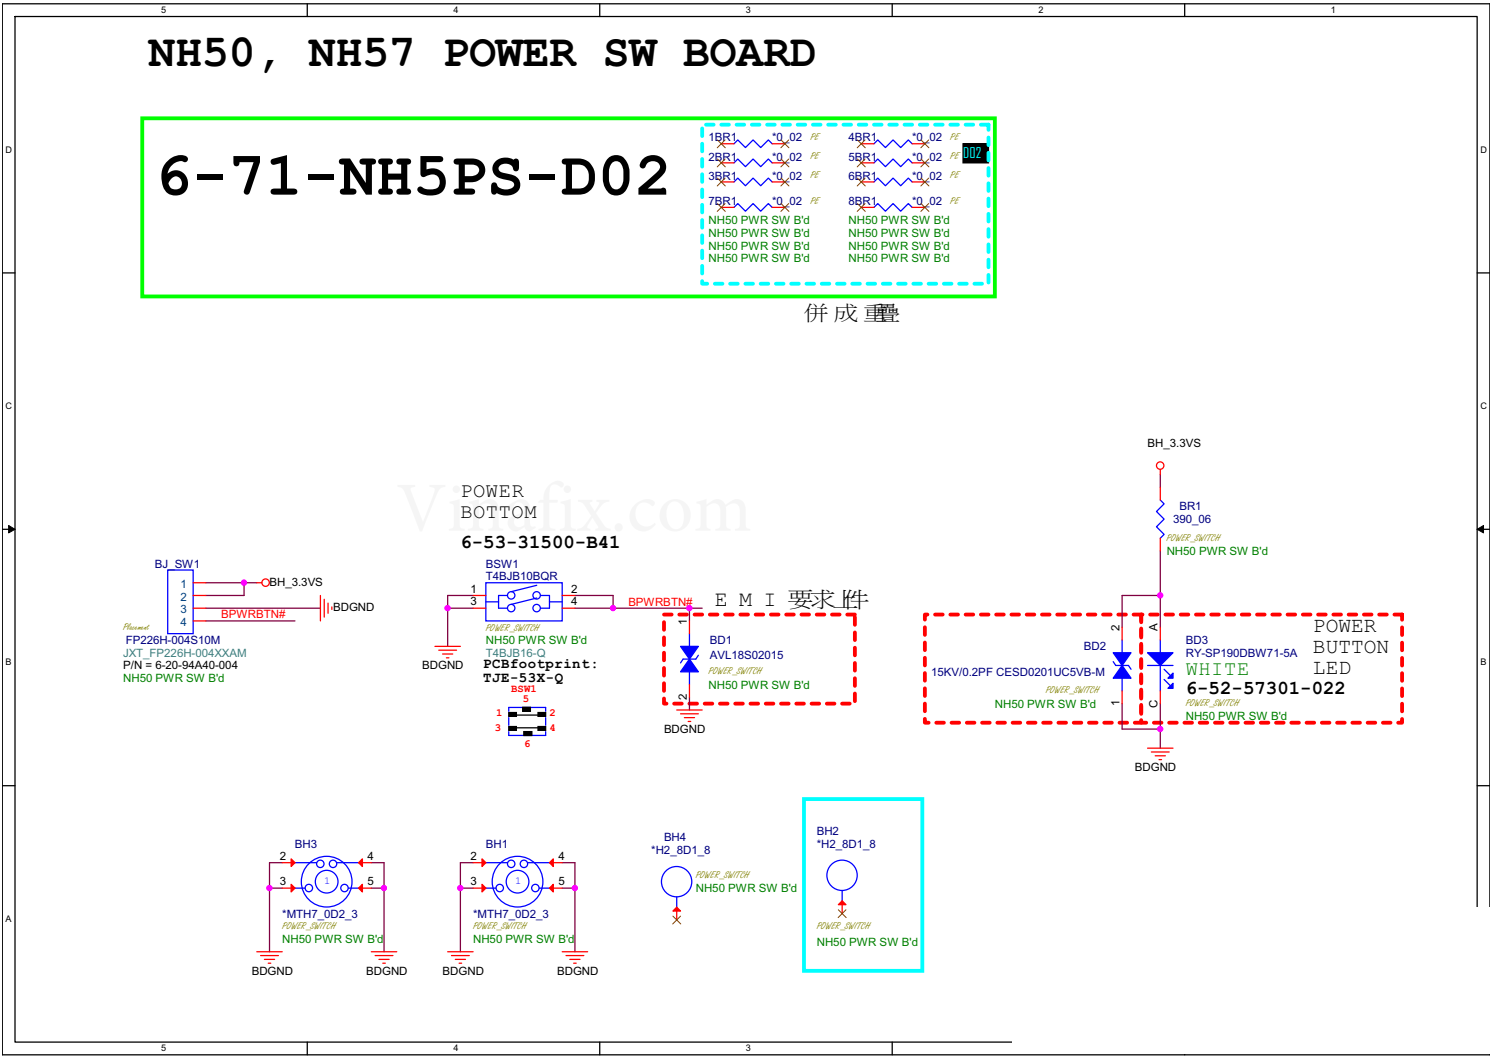


PW Board (NH55, 58)

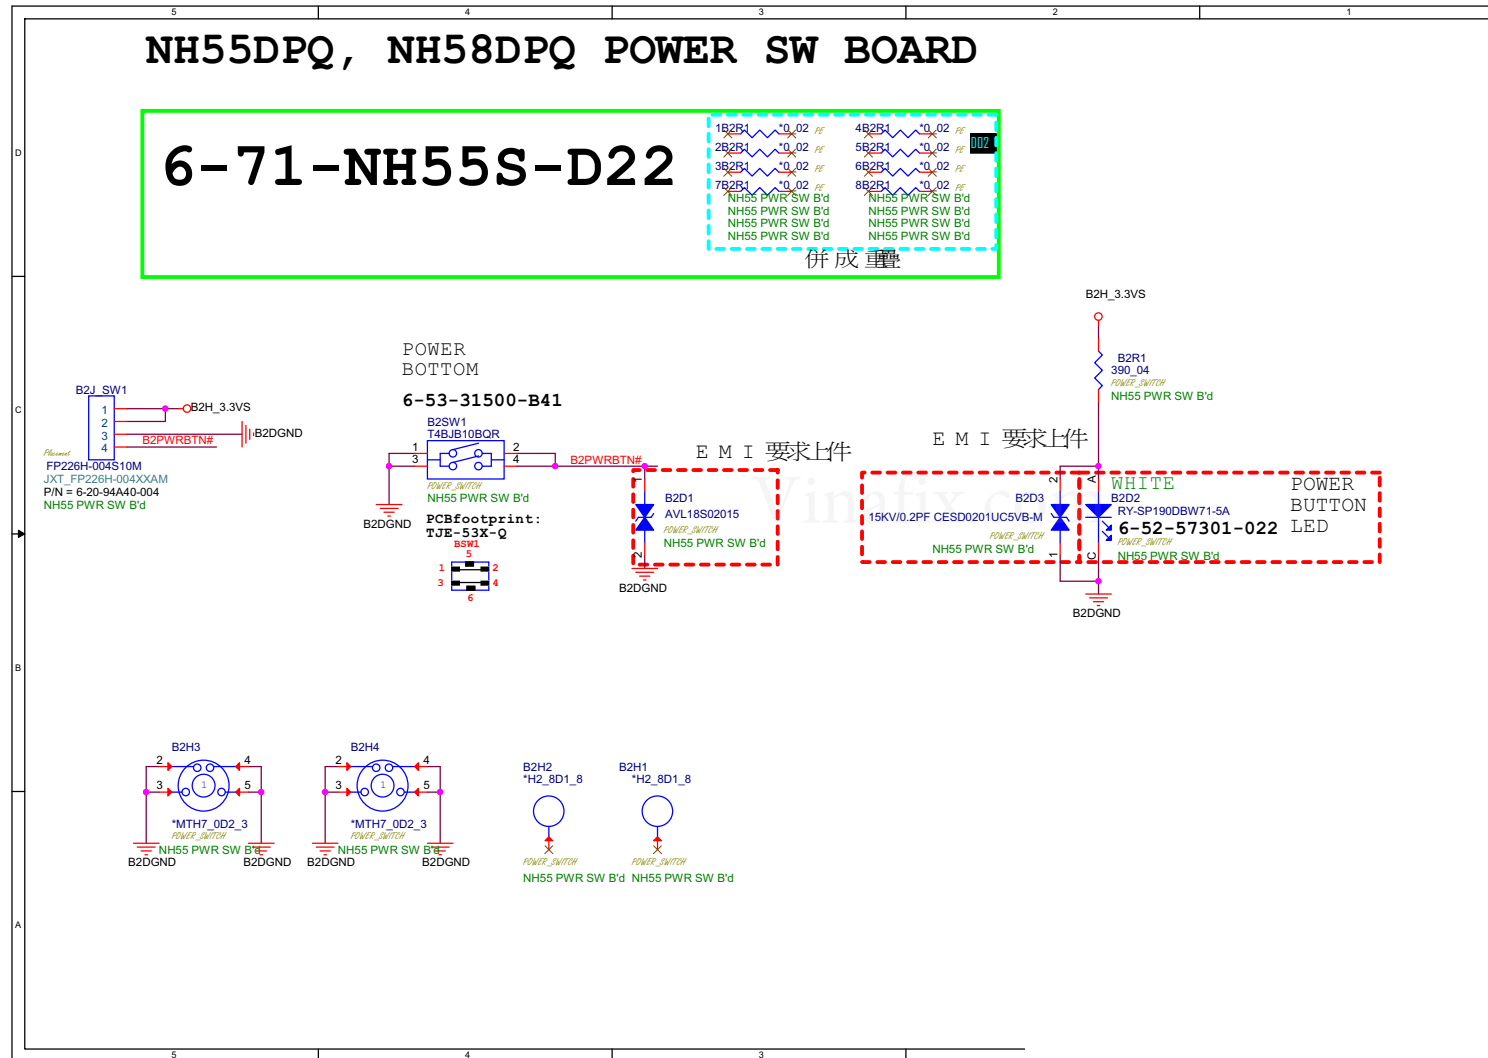
Sheet 72 of 74
PW Board

NH77DPQ HALL SENSOR & POWER SW BOARD

6-71-NH771-D12
medion: 6-71-NH771-D12-M

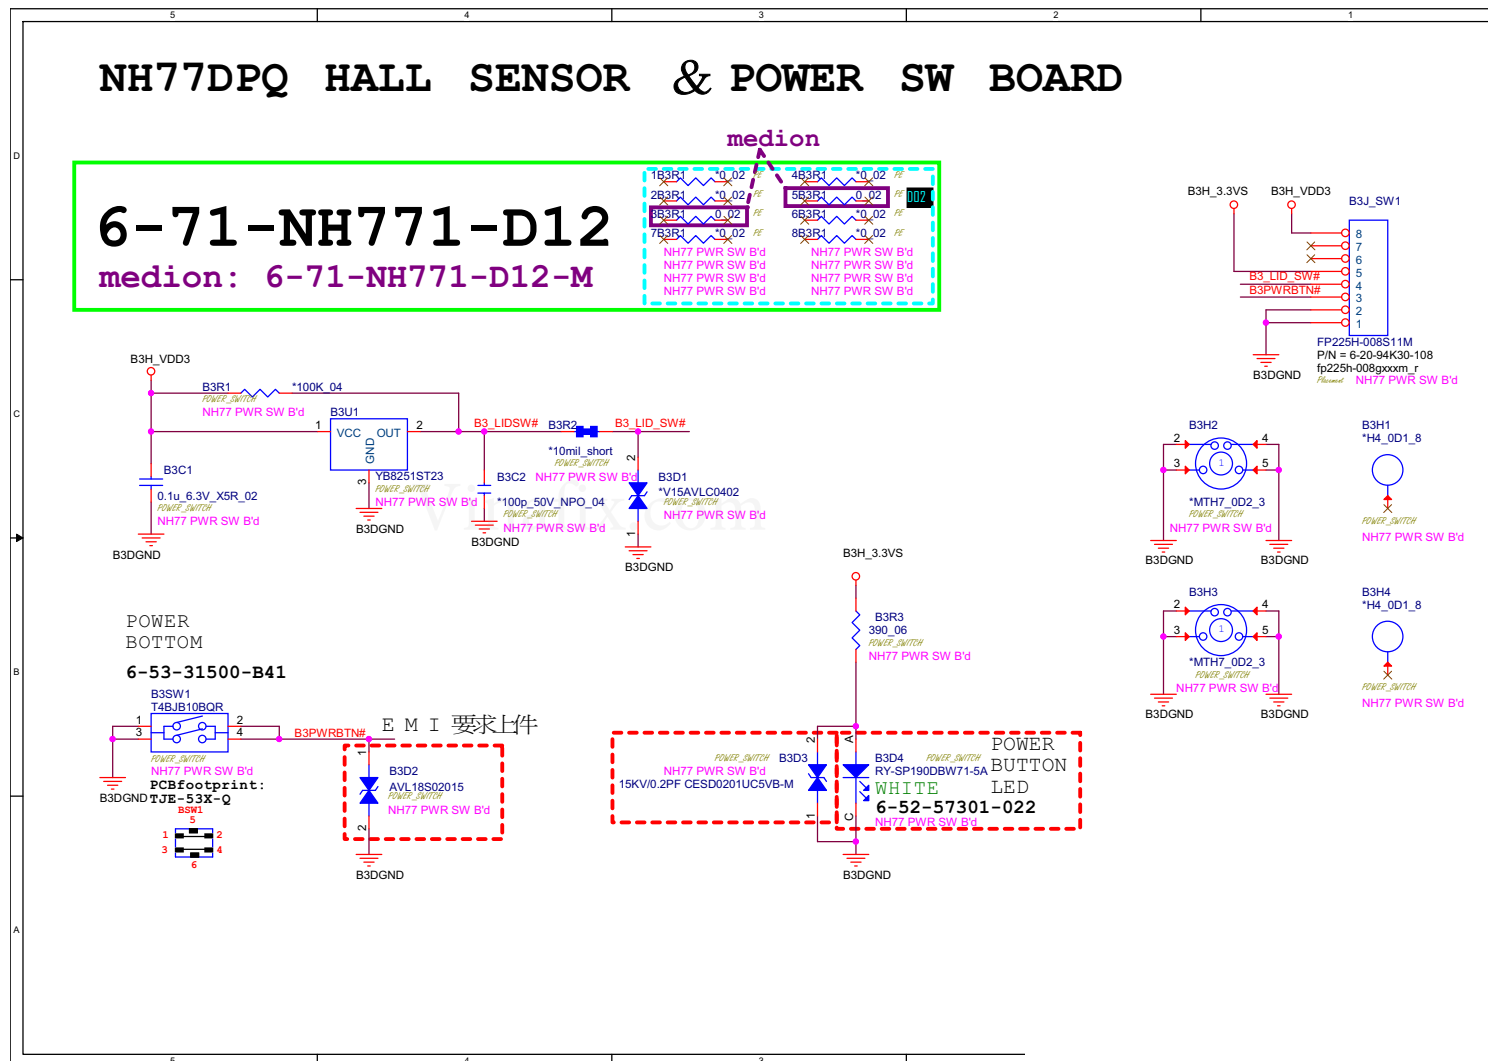

LED Board

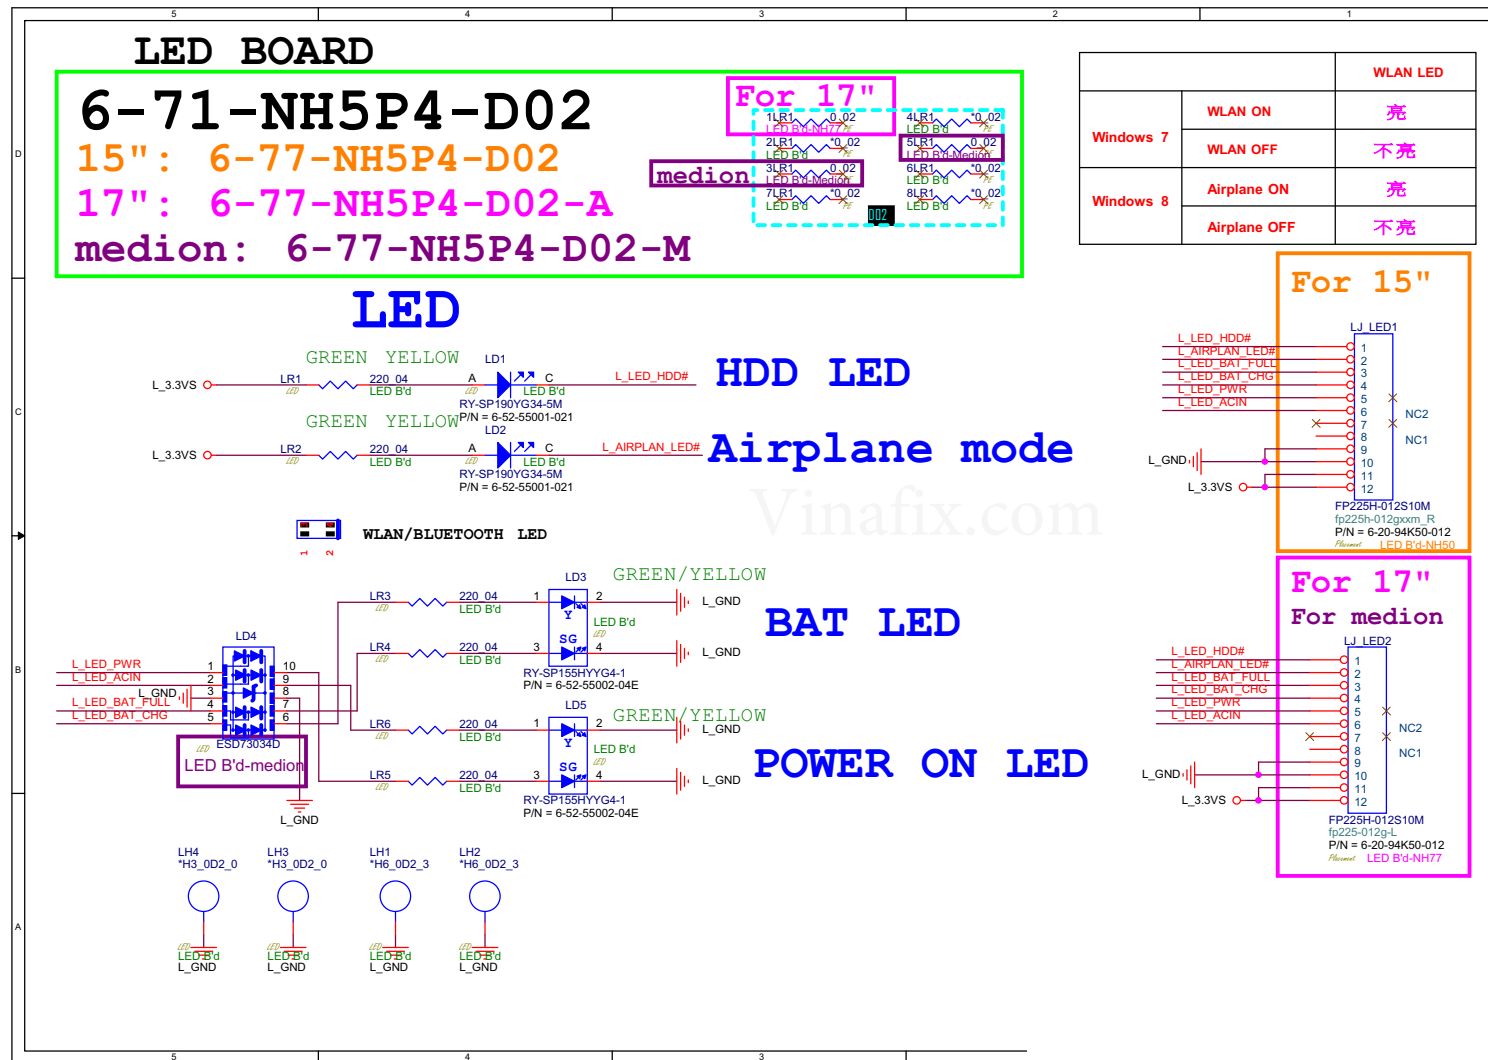

Vinafix.com