


SERVICE MANUAL

W240HU/W241HUQ/W245HUQ/W249HUQ Series

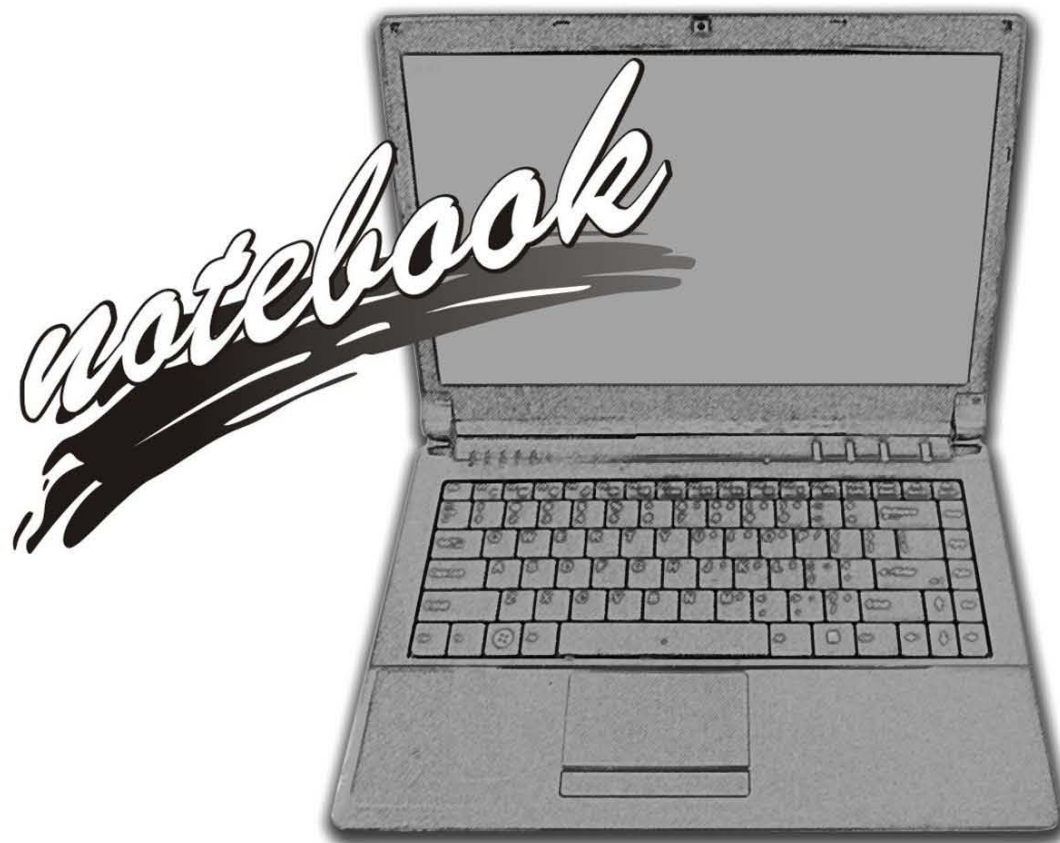

Notebook Computer

W240HU/W241HUQ/W245HUQ/W249HUQ

Service Manual

Notice

The company reserves the right to revise this publication or to change its contents without notice. Information contained herein is for reference only and does not constitute a commitment on the part of the manufacturer or any subsequent vendor. They assume no responsibility or liability for any errors or inaccuracies that may appear in this publication nor are they in anyway responsible for any loss or damage resulting from the use (or misuse) of this publication.

This publication and any accompanying software may not, in whole or in part, be reproduced, translated, transmitted or reduced to any machine readable form without prior consent from the vendor, manufacturer or creators of this publication, except for copies kept by the user for backup purposes.

Brand and product names mentioned in this publication may or may not be copyrights and/or registered trademarks of their respective companies. They are mentioned for identification purposes only and are not intended as an endorsement of that product or its manufacturer.

Version 1.0

March 2011

Trademarks

Intel and Intel Core are trademarks of Intel Corporation.

Windows[®] is a registered trademark of Microsoft Corporation.

Other brand and product names are trademarks and /or registered trademarks of their respective companies.

About this Manual

This manual is intended for service personnel who have completed sufficient training to undertake the maintenance and inspection of personal computers.

It is organized to allow you to look up basic information for servicing and/or upgrading components of the **W240HU/W241HUQ/W245HUQ/W249HUQ** series notebook PC.

The following information is included:

Chapter 1, Introduction, provides general information about the location of system elements and their specifications.
Chapter 2, Disassembly, provides step-by-step instructions for disassembling parts and subsystems and how to upgrade elements of the system.

Appendix A, Part Lists

Appendix B, Schematic Diagrams

Appendix C, Updating the FLASH ROM BIOS

Preface

IMPORTANT SAFETY INSTRUCTIONS

Follow basic safety precautions, including those listed below, to reduce the risk of fire, electric shock and injury to persons when using any electrical equipment:

1. Do not use this product near water, for example near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electrical shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
5. This product is intended to be supplied by a Listed Power Unit with an AC Input of 100 - 240V, 50 - 60Hz, DC Output of 19V, 3.42A or 18.5V, 3.5A (**65W**) minimum AC/DC Adapter.

CAUTION

This Computer's Optical Device is a Laser Class 1 Product

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference.

This device must accept any interference received, including interference that may cause undesired operation.


Instructions for Care and Operation

The notebook computer is quite rugged, but it can be damaged. To prevent this, follow these suggestions:


1. **Don't drop it, or expose it to shock.** If the computer falls, the case and the components could be damaged.



2. **Keep it dry, and don't overheat it.** Keep the computer and power supply away from any kind of heating element. This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.

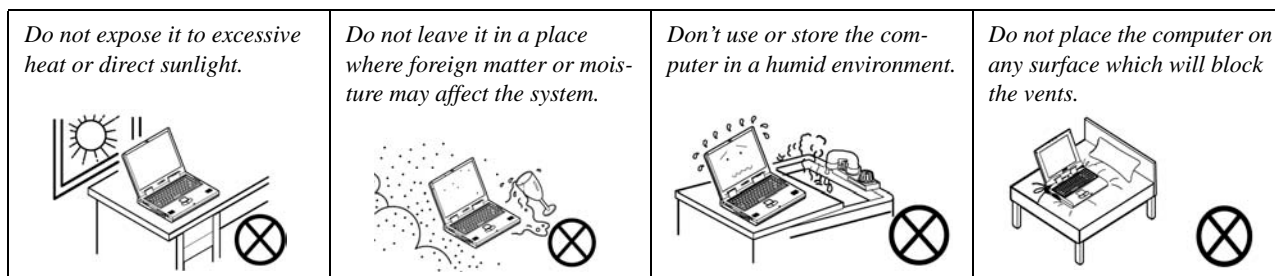


3. **Follow the proper working procedures for the computer.** Shut the computer down properly and don't forget to save your work. Remember to periodically save your data as data may be lost if the battery is depleted.

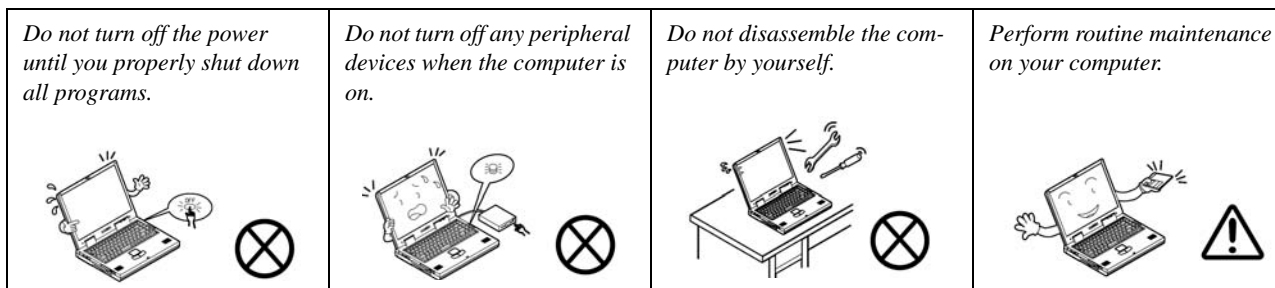

Preface


4. **Avoid interference.** Keep the computer away from high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage your data.
5. **Take care when using peripheral devices.**

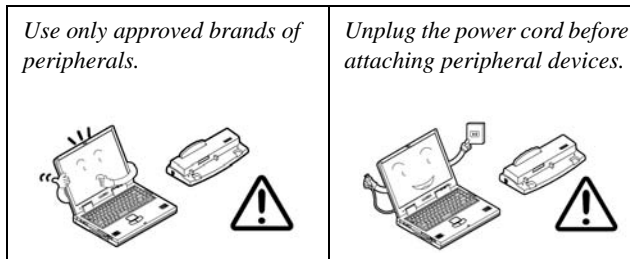

Power Safety

The computer has specific power requirements:

- Only use a power adapter approved for use with this computer.
- Your AC adapter may be designed for international travel but it still requires a steady, uninterrupted power supply. If you are unsure of your local power specifications, consult your service representative or local power company.
- The power adapter may have either a 2-prong or a 3-prong grounded plug. The third prong is an important safety feature; do not defeat its purpose. If you do not have access to a compatible outlet, have a qualified electrician install one.
- When you want to unplug the power cord, be sure to disconnect it by the plug head, not by its wire.
- Make sure the socket and any extension cord(s) you use can support the total current load of all the connected devices.
- Before cleaning the computer, make sure it is disconnected from any external power supplies.

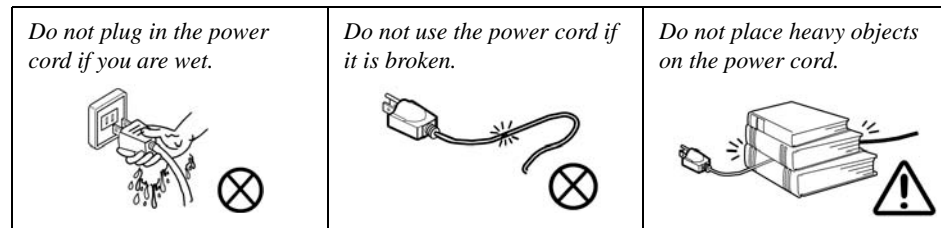

Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

Battery Precautions

- Only use batteries designed for this computer. The wrong battery type may explode, leak or damage the computer.
- Do not continue to use a battery that has been dropped, or that appears damaged (e.g. bent or twisted) in any way. Even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire.
- Recharge the batteries using the notebook's system. Incorrect recharging may make the battery explode.
- Do not try to repair a battery pack. Refer any battery pack repair or replacement to your service representative or qualified service personnel.
- Keep children away from, and promptly dispose of a damaged battery. Always dispose of batteries carefully. Batteries may explode or leak if exposed to fire, or improperly handled or discarded.
- Keep the battery away from metal appliances.
- Affix tape to the battery contacts before disposing of the battery.
- Do not touch the battery contacts with your hands or metal objects.

Battery Guidelines

The following can also apply to any backup batteries you may have.

- If you do not use the battery for an extended period, then remove the battery from the computer for storage.
- Before removing the battery for storage charge it to 60% - 70%.
- Check stored batteries at least every 3 months and charge them to 60% - 70%.




Battery Disposal

The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

Caution

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.

Battery Level

Click the battery icon  in the taskbar to see the current battery level and charge status. A battery that drops below a level of 10% will not allow the computer to boot up. Make sure that any battery that drops below 10% is recharged within one week.

Preface

Related Documents

You may also need to consult the following manual for additional information:

User's Manual on CD/DVD

This describes the notebook PC's features and the procedures for operating the computer and its ROM-based setup program. It also describes the installation and operation of the utility programs provided with the notebook PC.

System Startup

1. Remove all packing materials.
2. Place the computer on a stable surface.
3. Insert the battery and make sure it is locked in position.
4. Securely attach any peripherals you want to use with the computer (e.g. keyboard and mouse) to their ports.
5. Attach the AC/DC adapter to the DC-In jack at the rear of the computer, then plug the AC power cord into an outlet, and connect the AC power cord to the AC/DC adapter.
6. Use one hand to raise the lid/LCD to a comfortable viewing angle (do not exceed 130 degrees); use the other hand (as illustrated in [Figure 1](#)) to support the base of the computer (**Note: Never** lift the computer by the lid/LCD).
7. Press the power button to turn the computer "on".

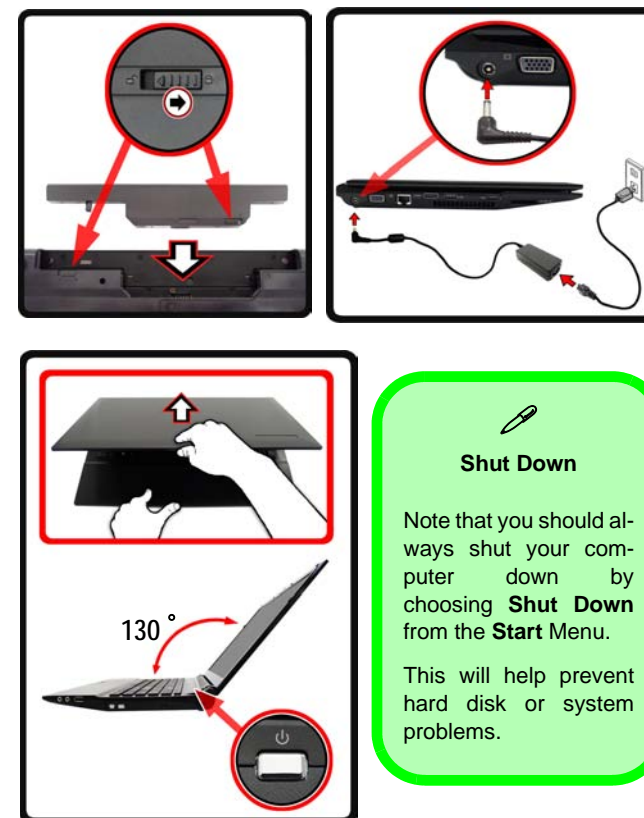


Figure 1
Opening the Lid/LCD/
Computer with AC/DC
Adapter Plugged-In

Contents

Introduction1-1

Overview	1-1
Specifications	1-2
External Locator - Top View with LCD Panel Open	1-4
External Locator - Front & Right Side Views	1-5
External Locator - Left Side & Rear View	1-6
External Locator - Bottom View	1-7
Mainboard Overview - Top (Key Parts)	1-8
Mainboard Overview - Bottom (Key Parts)	1-9
Mainboard Overview - Top (Connectors)	1-10
Mainboard Overview - Bottom (Connectors)	1-11

Disassembly2-1

Overview	2-1
Maintenance Tools	2-2
Connections	2-2
Maintenance Precautions	2-3
Disassembly Steps	2-4
Removing the Battery	2-5
Removing the Hard Disk Drive	2-6
Removing the Optical (CD/DVD) Device	2-8
Removing the System Memory (RAM)	2-9
Removing and Installing a Processor	2-11
Removing the Wireless LAN Module	2-14
Removing the Keyboard	2-15

Part ListsA-1

Part List Illustration Location	A-2
Top (W240HU/W241HUQ Series)	A-3
Top (W245HUQ Series)	A-4
Top (W249HUQ Series)	A-5

Bottom with SIM (W240HU/W241HUQ/W245HUQ Series)	A-6
Bottom without SIM (W240HU/W241HUQ/W245HUQ Series)	A-7
Bottom without SIM (W249HUQ Series)	A-8
Combo (W249HUQ Series)	A-9
DVD (W240HU/W241HUQ/W245HUQ Series)	A-10
DVD (W249HUQ Series)	A-11
LCD (W240HU/W241HUQ Series)	A-12
LCD (W245HUQ Series)	A-13
LCD (W249HUQ Series)	A-14

Schematic Diagrams.....B-1

System Block Diagram	B-2
CPU 1/7 (DMI, PEG, FDI)	B-3
CPU 2/7 (CLK, MISC, JTAG)	B-4
CPU 3/7 (DDR3)	B-5
CPU 4/7 (Power)	B-6
CPU 5/7 (Graphics Power)	B-7
CPU 6/7 (GND)	B-8
CPU 7/7 (RESERVED)	B-9
DDR3 SO-DIMM_0	B-10
DDR3 SO-DIMM_1	B-11
LVDS, Inverter	B-12
HDMI, CRT	B-13
CougarPoint - M 1/9	B-14
CougarPoint - M 2/9	B-15
CougarPoint - M 3/9	B-16
CougarPoint - M 4/9	B-17
CougarPoint - M 5/9	B-18
CougarPoint - M 6/9	B-19
CougarPoint - M 7/9	B-20
CougarPoint - M 8/9	B-21

Preface

CougarPoint - M 9/9	B-22
New Card, Mini PCIE	B-23
CCD, 3G, TPM	B-24
Card Reader/LAN JMC251C	B-25
LAN (JMC251C), SATA HDD, ODD	B-26
USB 3.0 NEC, USB Charger	B-27
KBC-ITE IT8518	B-28
LED, MDC, BT	B-29
Audio Codec ALC269	B-30
USB, Fan, TP, Multi-Conn	B-31
5VS, 3VS, 1.05VS, 1.5VS_CPU	B-32
VDD3, VDD5	B-33
Power 1.5V/0.75V/1.8VS	B-34
Power 1.05VS	B-35
Power 0.85VS	B-36
Power V-Core1	B-37
Power V-Core2	B-38
Charger, DC In	B-39
Click Board	B-40
Audio Board/USB	B-41
Power Switch & LID Board	B-42

Updating the FLASH ROM BIOS..... C-1

To update the FLASH ROM BIOS you must: C-1

Download the BIOS	C-1
Unzip the downloaded files to a bootable CD/DVD/ or USB Flash drive	C-1
Set the computer to boot from the external drive	C-1
Use the flash tools to update the BIOS	C-2
Restart the computer (booting from the HDD)	C-2

Chapter 1: Introduction

Overview

This manual covers the information you need to service or upgrade the **W240HU/W241HUQ/W245HUQ/W249HUQ** series notebook computer. Information about operating the computer (e.g. getting started, and the *Setup* utility) is in the *User's Manual*. Information about drivers (e.g. VGA & audio) is also found in the *User's Manual*. The manual is shipped with the computer.

Operating systems (e.g. *Windows Vista/ Window 7*, etc.) have their own manuals as do application softwares (e.g. word processing and database programs). If you have questions about those programs, you should consult those manuals.

The **W240HU/W241HUQ/W245HUQ/W249HUQ** series notebook is designed to be upgradeable. See [Disassembly on page 2 - 1](#) for a detailed description of the upgrade procedures for each specific component. Please take note of the warning and safety information indicated by the “⚠” symbol.

The balance of this chapter reviews the computer's technical specifications and features.

Introduction

Specifications



Latest Specification Information

The specifications listed here are correct at the time of sending them to the press. Certain items (particularly processor types/speeds) may be changed, delayed or updated due to the manufacturer's release schedule. Check with your service center for more details.



CPU

The CPU is not a user serviceable part. Accessing the CPU in any way may violate your warranty.

Processor Options

Intel® Core™ i7 Processor

i7-2620M (2.70GHz)

4MB L3 Cache, 32nm, DDR3-1333MHz, TDP 35W

Intel® Core™ i5 Processor

i5-2540M (2.60GHz), i5-2520M (2.50GHz),

i5-2410M (2.30GHz)

3MB L3 Cache, 32nm, DDR3-1333MHz, TDP 35W

Intel® Core™ i3 Processor

i3-2310M (2.10GHz)

3MB L3 Cache, 32nm, DDR3-1333MHz, TDP 35W

Core Logic

Intel® HM65 Chipset

LCD

14" (35.56cm) HD TFT LCD

Memory

Two 204 Pin SO-DIMM Sockets Supporting **DDR3 1066/1333MHz** Memory

Memory Expandable up to 8GB

Video Adapter

Intel® HM65 Integrated Video

Shared Memory Architecture of up to **1748MB**

MS DirectX® 10 compatible

BIOS

One 32Mb SPI Flash ROM

AMI BIOS

Security

Security (Kensington® Type) Lock Slot

BIOS Password

Storage

(**Factory Option**) One Changeable 12.7mm(h) Optical Device Type Drive (Super Multi Drive Module or Blu-Ray Combo Drive Module)

One Changeable 2.5" 9.5 mm (h) SATA HDD

Audio

High Definition Audio Compliant Interface

2 * Built-In Speakers

Built-In Microphone

Communication

Built-In Gigabit Ethernet LAN

(**Factory Option**) 300K/1.3M Pixel USB PC Camera Module

(**Factory Option**) 3.75G/HSPA Mini-Card Module

WLAN/ Bluetooth Half Mini-Card Modules:

(**Factory Option**) Intel® Centrino® Wireless-N 100 (**802.11b/g/n**)

(**Factory Option**) Intel® Centrino® Wireless-N 130 Wireless LAN (**802.11b/g/n**) + Bluetooth 3.0

(**Factory Option**) Intel® Centrino® Wireless-N 1030 Wireless LAN (**802.11b/g/n**) + Bluetooth 3.0

(**Factory Option**) Third-Party Wireless LAN (**802.11b/g/n**)

(**Factory Option**) Third-Party Wireless LAN (**802.11b/g/n**) + Bluetooth 3.0

Keyboard

"WinKey" keyboard (with embedded numeric keypad)

Pointing Device

Built-in Touchpad

Mini Card Slots

Slot 1 for **WLAN** Module or Combo **WLAN and Bluetooth** Module

(**Factory Option**) Slot 2 for **3.75G/HSPA** Module

Interface

Three USB 2.0 Ports
One HDMI-Out Port
One Headphone-Out Jack
One Microphone-In Jack
One RJ-45 LAN Jack
One DC-in Jack
One External Monitor Port

Card Reader

Embedded Multi-In-1 Card Reader
MMC (MultiMedia Card) / RS MMC
SD (Secure Digital) / Mini SD / SDHC/ SDXC
MS (Memory Stick) / MS Pro / MS Duo

Power

6 Cell Smart Lithium-Ion Battery Pack, 48.84WH
(Factory Option) 6 Cell Smart Lithium-Ion Battery Pack,
62.16WH
(Factory Option) 4 Cell Smart Lithium-Ion Battery Pack,
32.56WH

Full Range AC/DC Adapter
AC Input: 100 - 240V, 50 - 60Hz
DC Output: 19V, 3.42A or 18.5V, 3.5A **(65W)**

Energy Star 5.0 Compliant

Environmental Spec

Temperature

Operating: 5°C - 35°C
Non-Operating: -20°C - 60°C

Relative Humidity

Operating: 20% - 80%
Non-Operating: 10% - 90%

Dimensions & Weight


340mm (w) * 238mm (d) * 13.9 - 31.8mm (h)
2.2 kg (with 48.84WH Battery and ODD)
Or
341mm (w) * 238.5mm (d) * 16 - 34mm (h)
2.2 kg (with 48.84WH Battery and ODD)

Introduction

Figure 1
Top View

1. PC Camera
(Optional)
2. LCD
3. Power Button
4. Hot-Key Buttons
(Design 1 only)
5. LED Status Indicators
6. Keyboard
7. Built-In Microphone
8. Touchpad & Buttons

External Locator - Top View with LCD Panel Open

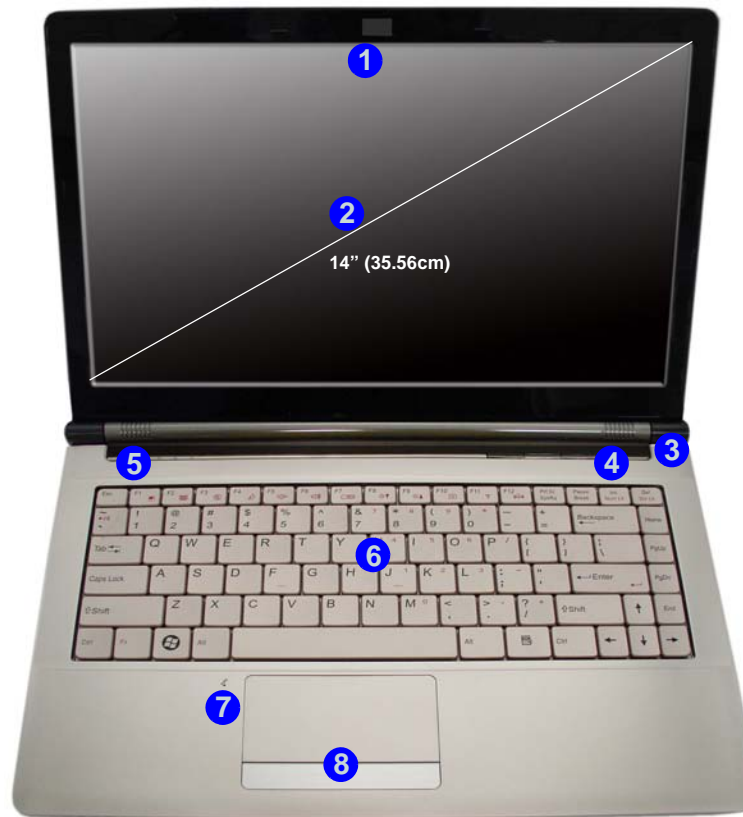

Design I



Design II

External Locator - Front & Right Side Views

FRONT VIEW



Figure 2
Front View

1. LED Power Indicators

RIGHT SIDE VIEW



Figure 3
Right Side View

1. Microphone-In Jack
2. Headphone-Out Jack
3. USB 2.0 Port
4. Optical Device Drive Bay
5. Emergency Eject Hole
6. Security Lock Slot

Introduction

External Locator - Left Side & Rear View

Figure 4
Left Side View

1. DC-In Jack
2. External Monitor Port
3. RJ-45 LAN Jack
4. HDMI-Out Port
5. USB 2.0 Port
6. Vent
7. USB 2.0 Port
8. Multi-in-1 Card Reader

LEFT SIDE VIEW



Figure 5
Rear View

1. Battery

REAR VIEW



External Locator - Bottom View

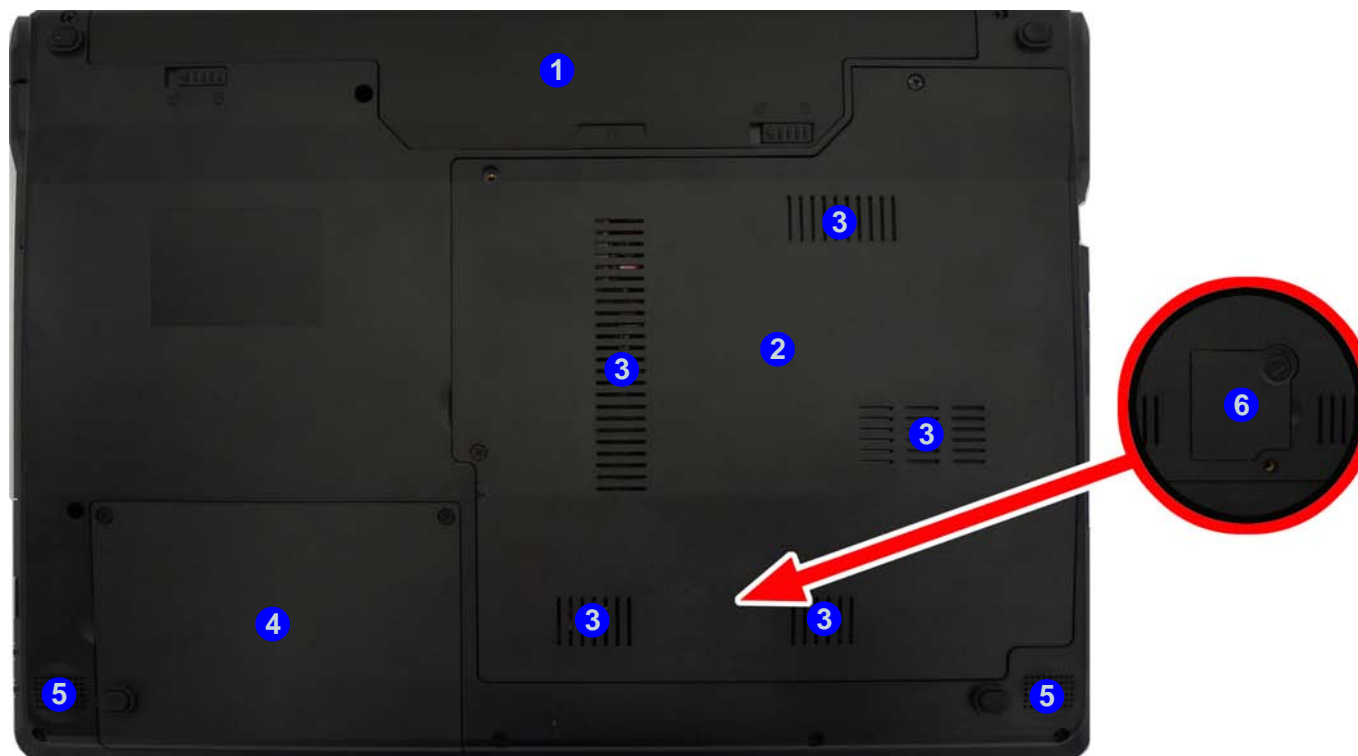


Figure 6
Bottom View

1. Battery
2. Component Bay Cover
3. Vent
4. Hard Disk Bay Cover
5. Speakers
6. USIM Card Cover



Overheating


To prevent your computer from overheating, make sure nothing blocks any vent while the computer is in use.

Introduction

Figure 7
**Mainboard Top
Key Parts**

1. KBC-ITE IT8518
2. Audio Codec
ALC269

Mainboard Overview - Top (Key Parts)

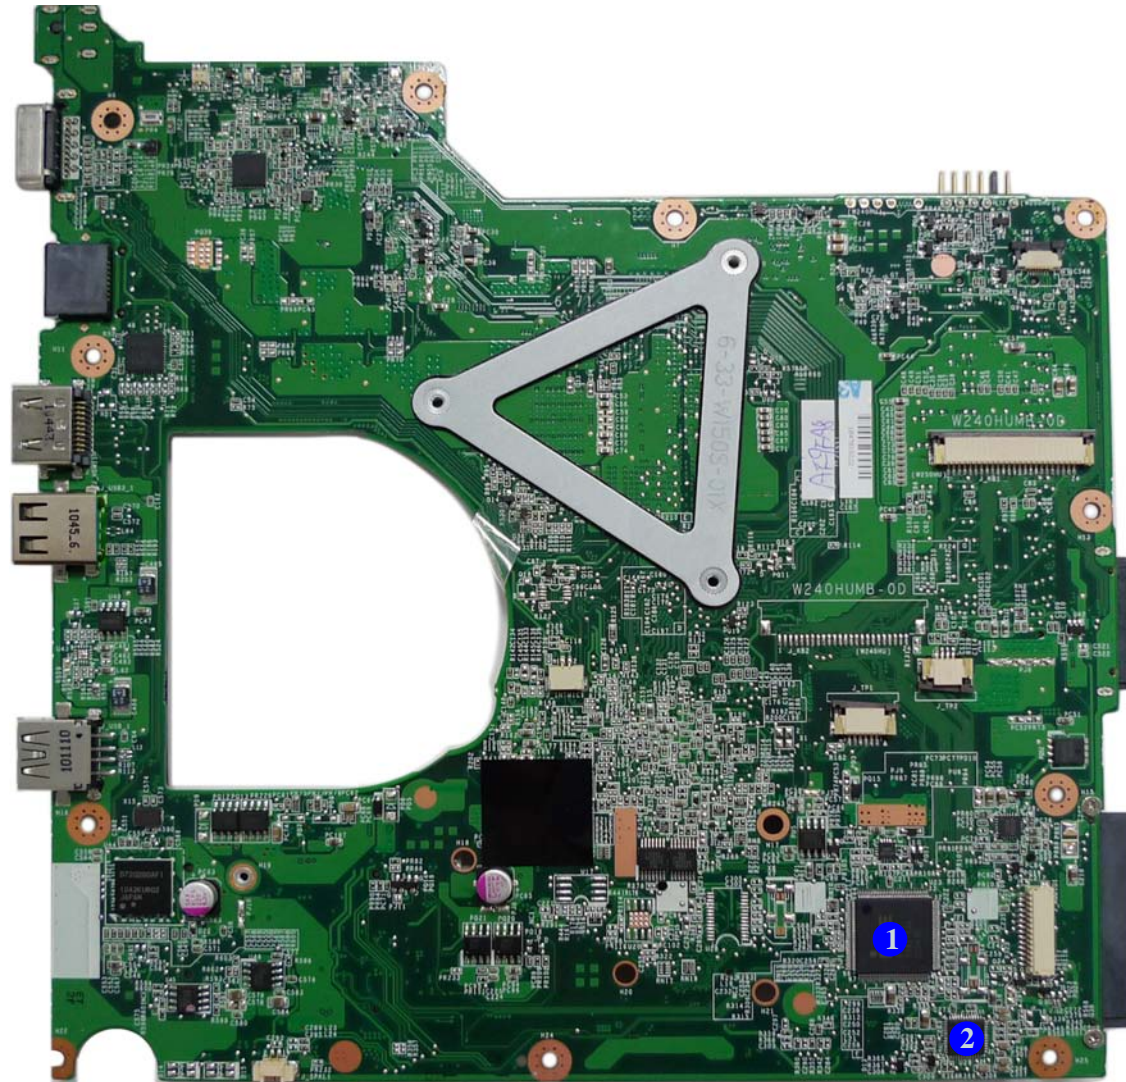

Mainboard Overview - Bottom (Key Parts)

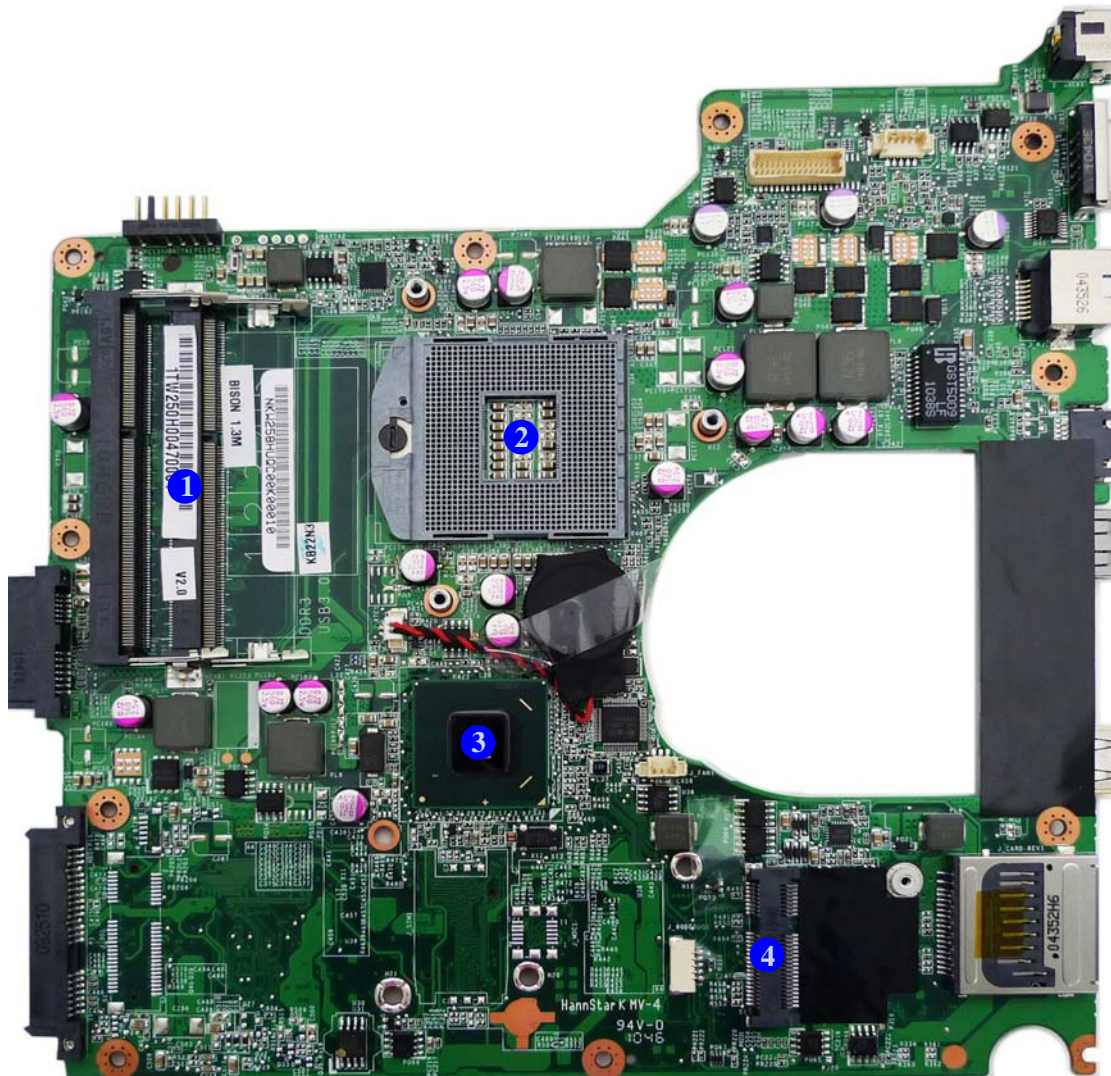


Figure 8
**Mainboard Bottom
Key Parts**


1. Memory Slots
DDR3 SO-DIMM
2. CPU Socket (no
CPU installed)
3. Platform Controller
Hub
4. Mini-Card
Connector (WLAN
Module)

Introduction

Figure 9
**Mainboard Top
Connectors**

1. HDMI-Out Port
2. USB Port 2.0
3. USB 2.0 Port
4. Speaker Cable Connector
5. Microphone Cable Connector
6. Audio Board Connector
7. TouchPad Cable Connector 1
8. TouchPad Cable Connector 2
9. Keyboard Cable Connector
10. Switch Board Cable Connector

Mainboard Overview - Top (Connectors)

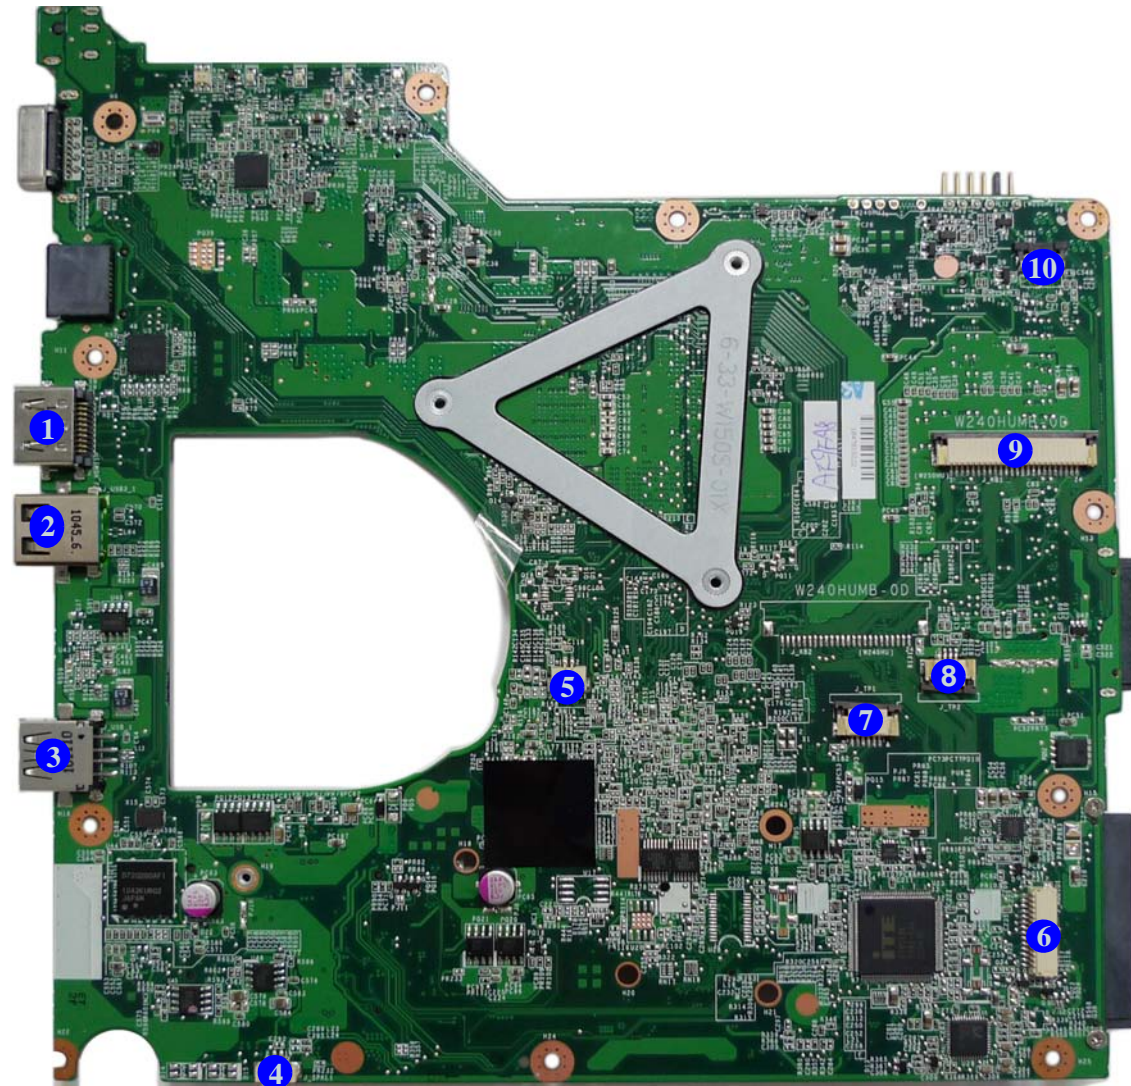

Mainboard Overview - Bottom (Connectors)

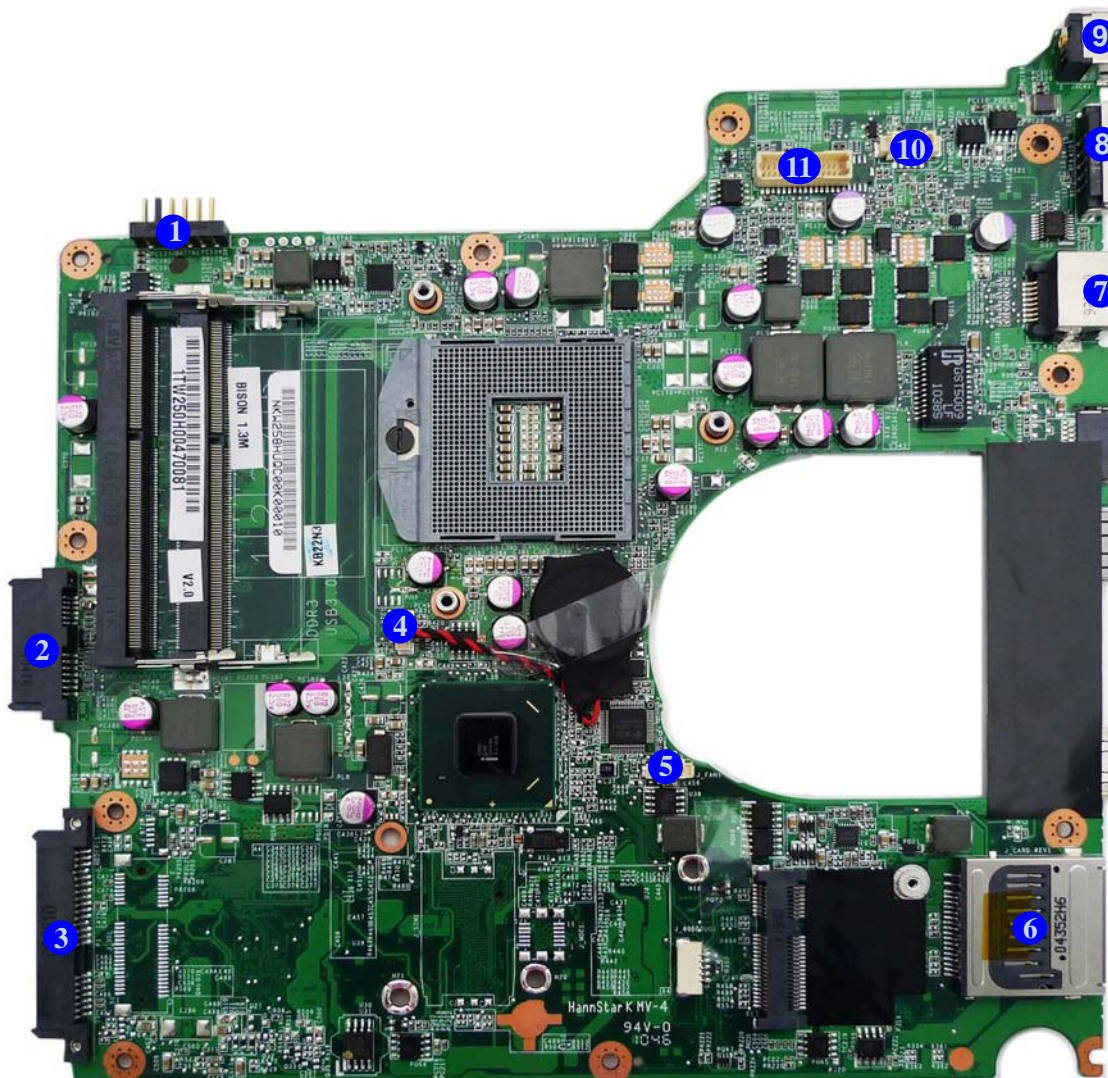


Figure 10
**Mainboard Bottom
Connectors**

1. Battery Connector
2. ODD Connector
3. HDD Connector
4. CMOS Battery Connector
5. CPU Fan Cable Connector
6. Multi-in-1 Card Reader
7. RJ-45 LAN Jack
8. External Monitor Port
9. DC-In Jack
10. CCD Cable Connector
11. LCD Cable Connector


Chapter 2: Disassembly



Overview

This chapter provides step-by-step instructions for disassembling the **W240HU/W241HUQ/W245HUQ/W249HUQ** series notebook's parts and subsystems. When it comes to reassembly, reverse the procedures (unless otherwise indicated).

We suggest you completely review any procedure before you take the computer apart.

Procedures such as upgrading/replacing the RAM, optical device and hard disk are included in the User's Manual but are repeated here for your convenience.

To make the disassembly process easier each section may have a box in the page margin. Information contained under the figure # will give a synopsis of the sequence of procedures involved in the disassembly procedure. A box with a  lists the relevant parts you will have after the disassembly process is complete. **Note:** The parts listed will be for the disassembly procedure listed ONLY, and not any previous disassembly step(s) required. Refer to the part list for the previous disassembly procedure. The amount of screws you should be left with will be listed here also.

A box with a  will also provide any possible helpful information. A box with a  contains warnings.

An example of these types of boxes are shown in the sidebar.


Information

Warning

Disassembly

NOTE: All disassembly procedures assume that the system is turned **OFF**, and disconnected from any power supply (the battery is removed too).

Maintenance Tools

The following tools are recommended when working on the notebook PC:

- M3 Philips-head screwdriver
- M2.5 Philips-head screwdriver (magnetized)
- M2 Philips-head screwdriver
- Small flat-head screwdriver
- Pair of needle-nose pliers
- Anti-static wrist-strap

Connections

Connections within the computer are one of four types:

Locking collar sockets for ribbon connectors	To release these connectors, use a small flat-head screwdriver to gently pry the locking collar away from its base. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Pressure sockets for multi-wire connectors	To release this connector type, grasp it at its head and gently rock it from side to side as you pull it out. Do not pull on the wires themselves. When replacing the connection, do not try to force it. The socket only fits one way.
Pressure sockets for ribbon connectors	To release these connectors, use a small pair of needle-nose pliers to gently lift the connector away from its socket. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Board-to-board or multi-pin sockets	To separate the boards, gently rock them from side to side as you pull them apart. If the connection is very tight, use a small flat-head screwdriver - use just enough force to start.

Maintenance Precautions

The following precautions are a reminder. To avoid personal injury or damage to the computer while performing a removal and/or replacement job, take the following precautions:

1. **Don't drop it.** Perform your repairs and/or upgrades on a stable surface. If the computer falls, the case and other components could be damaged.
2. **Don't overheat it.** Note the proximity of any heating elements. Keep the computer out of direct sunlight.
3. **Avoid interference.** Note the proximity of any high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage components and/or data. You should also monitor the position of magnetized tools (i.e. screwdrivers).
4. **Keep it dry.** This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.
5. **Be careful with power.** Avoid accidental shocks, discharges or explosions.
 - Before removing or servicing any part from the computer, turn the computer off and detach any power supplies.
 - When you want to unplug the power cord or any cable/wire, be sure to disconnect it by the plug head. Do not pull on the wire.
6. **Peripherals** – Turn off and detach any peripherals.
7. **Beware of static discharge.** ICs, such as the CPU and main support chips, are vulnerable to static electricity. Before handling any part in the computer, discharge any static electricity inside the computer. When handling a printed circuit board, do not use gloves or other materials which allow static electricity buildup. We suggest that you use an anti-static wrist strap instead.
8. **Beware of corrosion.** As you perform your job, avoid touching any connector leads. Even the cleanest hands produce oils which can attract corrosive elements.
9. **Keep your work environment clean.** Tobacco smoke, dust or other air-born particulate matter is often attracted to charged surfaces, reducing performance.
10. **Keep track of the components.** When removing or replacing any part, be careful not to leave small parts, such as screws, loose inside the computer.

Cleaning

Do not apply cleaner directly to the computer, use a soft clean cloth.

Do not use volatile (petroleum distillates) or abrasive cleaners on any part of the computer.



Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

Disassembly Steps

The following table lists the disassembly steps, and on which page to find the related information. **PLEASE PERFORM THE DISASSEMBLY STEPS IN THE ORDER INDICATED.**

To remove the Battery:

1. Remove the battery *page 2 - 5*

To remove the HDD:

1. Remove the battery *page 2 - 5*
2. Remove the HDD *page 2 - 6*

To remove the Optical Device:

1. Remove the battery *page 2 - 5*
2. Remove the Optical device *page 2 - 8*

To remove the System Memory:

1. Remove the battery *page 2 - 5*
2. Remove the system memory *page 2 - 9*

To remove and install a Processor:

1. Remove the battery *page 2 - 5*
2. Remove the processor *page 2 - 11*
3. Install the processor *page 2 - 13*

To remove the Wireless LAN Module:

1. Remove the battery *page 2 - 5*
2. Remove the WLAN module *page 2 - 14*

To remove the Keyboard:




1. Remove the battery *page 2 - 5*
2. Remove the keyboard *page 2 - 15*

Removing the Battery

1. Turn the computer **off**, and turn it over.
2. Slide the latch ① in the direction of the arrow (*Figure 1a*).
3. Slide the latch ② in the direction of the arrow, and hold it in place (*Figure 1a*).
4. Slide the battery ③ in the direction of the arrow ④ (*Figure 1b*).

Figure 1
Battery Removal

- a. Slide the latch and hold it in place.
- b. Slide the battery in the direction of the arrow.

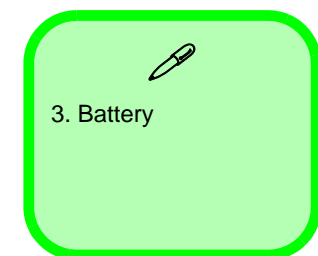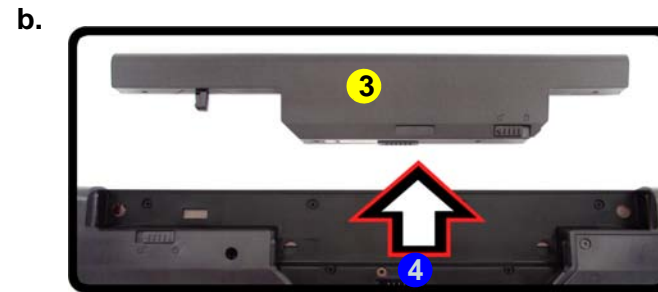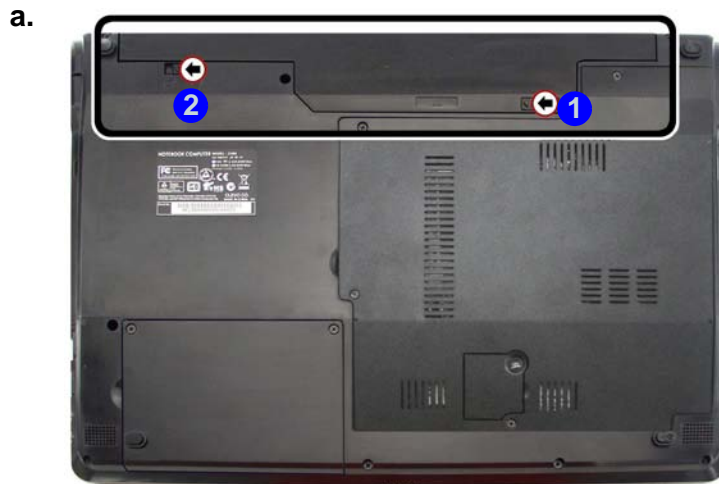

Disassembly

Figure 2
**HDD Assembly
Removal**

Removing the Hard Disk Drive

The hard disk drive can be taken out to accommodate other 2.5" serial (SATA) hard disk drives with a height of 9.5mm (h). Follow your operating system's installation instructions, and install all necessary drivers and utilities (as outlined in **Chapter 4 of the User's Manual**) when setting up a new hard disk.

- a. Locate the HDD bay cover and remove the screws.

Hard Disk Upgrade Process

1. Turn **off** the computer, and remove the battery ([page 2 - 5](#)).
2. Locate the hard disk bay cover and remove screws **1** & **2** ([Figure 2a](#)).

a.



- 2 Screws



HDD System Warning

New HDD's are blank. Before you begin make sure:





You have backed up any data you want to keep from your old HDD.

You have all the CD-ROMs and FDDs required to install your operating system and programs.

If you have access to the internet, download the latest application and hardware driver updates for the operating system you plan to install. Copy these to a removable medium.

Figure 3
**HDD Assembly
Removal (cont'd.)**

- b. Remove the HDD bay cover.
- c. Grip the tab and slide the HDD in the direction of the arrow.
- d. Lift the HDD assembly out of the bay.
- e. Remove the screws and mylar cover.

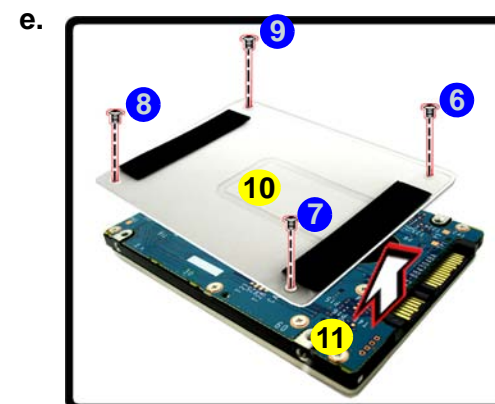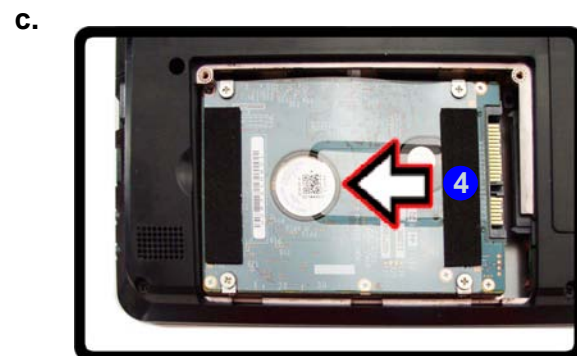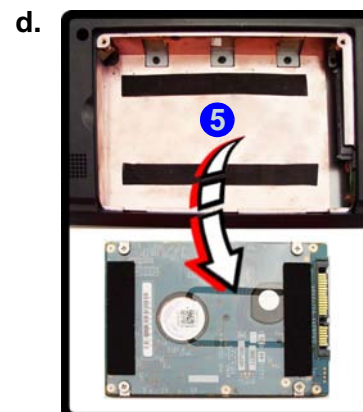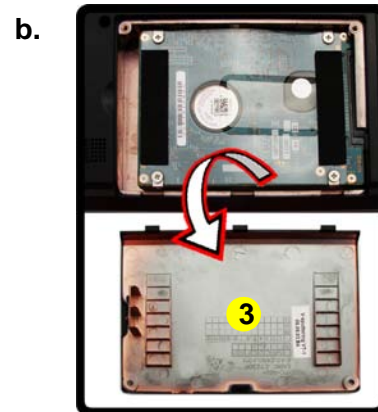

3. HDD Bay Cover
10. Mylar Cover
11. HDD

- 4 Screws


Disassembly

Figure 4
**Optical Device
Removal**

- a. Remove the screws.
- b. Remove the cover.
- c. Remove the screw and push the optical device out off the computer at point 8.

Removing the Optical (CD/DVD) Device

1. Turn **off** the computer, and remove the battery ([page 2 - 5](#)).
2. Locate the RAM & CPU bay cover **1**, and remove screws **2** - **5** ([Figure 4a](#)).
3. Carefully (**a fan and cable are attached to the under side of the cover**) lift up the bay cover.
4. Carefully disconnect the fan cable **6**, and remove the cover **1** ([Figure 4b](#)).
5. Remove the screw at point **7**, and use a screwdriver to carefully push out the optical device **9** at point **8** ([Figure 4c](#)).
6. Insert the new device and carefully slide it into the computer (the device only fits one way. DO NOT FORCE IT; The screw holes should line up).
7. Restart the computer to allow it to automatically detect the new device.

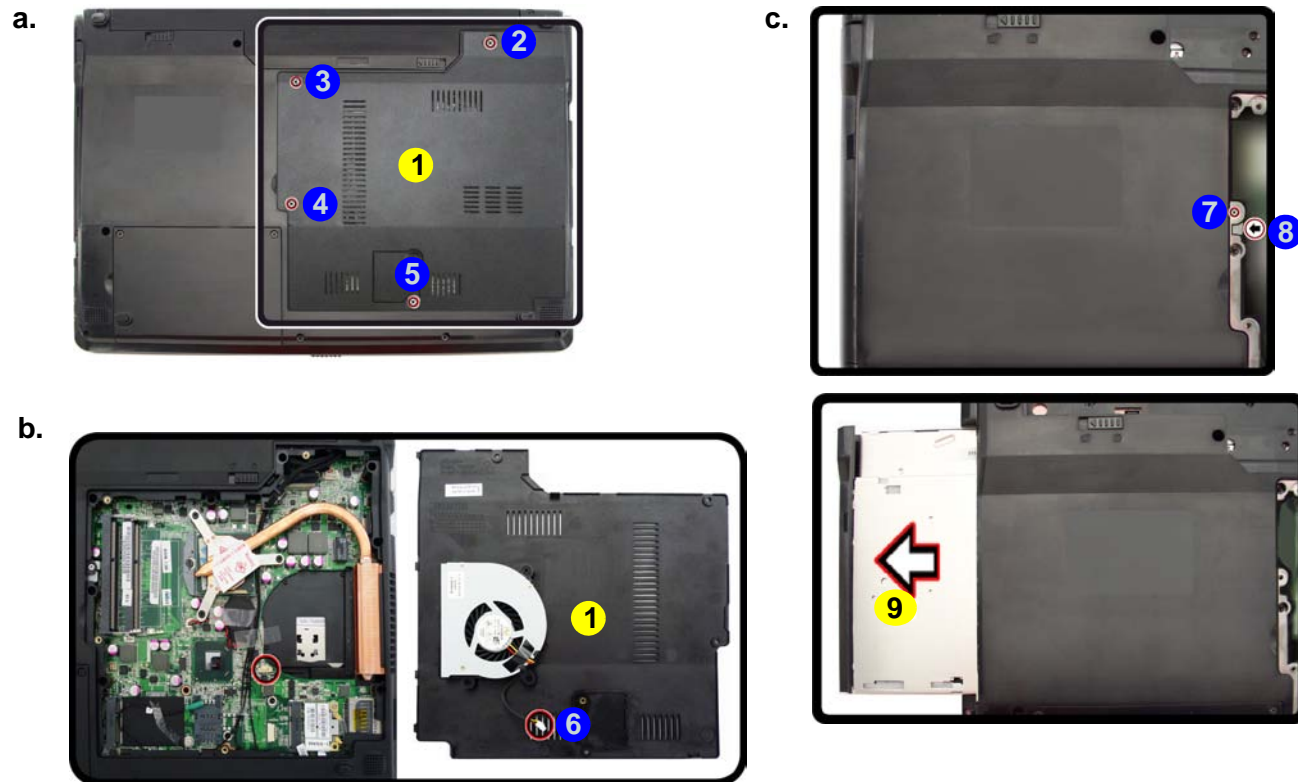


1. Component Bay Cover
 9. Optical Device
- 5 Screws

Removing the System Memory (RAM)

The computer has two memory sockets for 200 pin Small Outline Dual In-line Memory Modules (SO-DIMM) supporting **DDR3** 1066/1333MHz. The main memory can be expanded up to 8GB. The SO-DIMM modules supported are 1GB, 2GB and 4GB and **DDRIII** Modules. The total memory size is automatically detected by the POST routine once you turn on your computer.

Memory Upgrade Process

1. Turn **off** the computer, remove the battery ([page 2 - 5](#)) and the component bay cover ([page 2 - 8](#)).
2. The RAM modules will be visible at point **1** on the main board ([Figure 5a](#)).
3. Gently pull the two release latches (**2** & **3**) on the sides of the memory socket in the direction indicated by the arrows ([Figure 5b](#)).

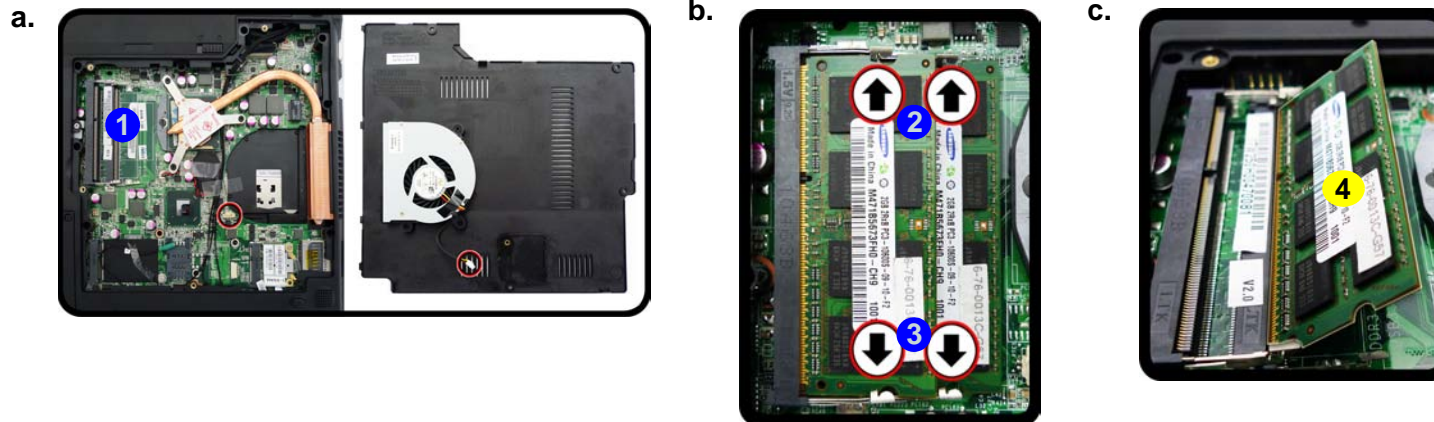

4. The RAM module **4** will pop-up ([Figure 5c](#)), and you can then remove it.
5. Pull the latches to release the second module if necessary.
6. Insert a new module holding it at about a 30° angle and fit the connectors firmly into the memory slot.
7. The module's pin alignment will allow it to only fit one way. Make sure the module is seated as far into the slot as it will go. **DO NOT FORCE** the module; it should fit without much pressure.
8. Press the module in and down towards the mainboard until the slot levers click into place to secure the module.

Figure 5
RAM Module Removal

- a. Locate the memory socket.
- b. Pull the release latches.
- c. Remove the module.



Contact Warning

Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.



4. RAM Module


Disassembly

Figure 6
**RAM Module
Removal (cont'd.)**

d. Properly re-insert the bay cover pins.

9. Replace the bay cover and screws (**make sure you reconnect the fan cable before screwing down the bay cover**).
Note that there are four ⑤ - ⑧ cover pins which need to be aligned with slots in the case, to insure a proper cover fit, before screwing down the bay cover (*Figure 6d*).

d.

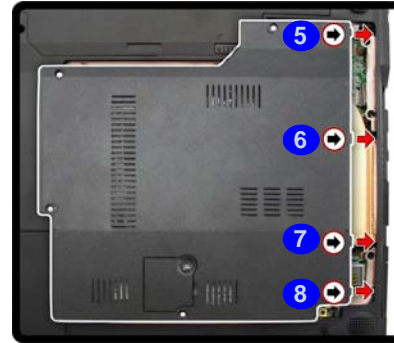


10. Restart the computer to allow the BIOS to register the new memory configuration as it starts up.

Removing and Installing a Processor

Processor Removal Procedure

1. Turn **off** the computer, turn it over, and remove the battery ([page 2 - 5](#)) and the component bay cover ([page 2 - 8](#)).
2. The CPU heat sink will be visible at point **A** ([Figure 7a](#)).
3. Loosen the CPU heat sink screws in the order **3**, **2** & **1** (the reverse order as indicated on the label [Figure 7a](#)).
4. Grip the heat sink tab and carefully lift the heat sink **4** up and off the computer ([Figure 7b](#)).

a.

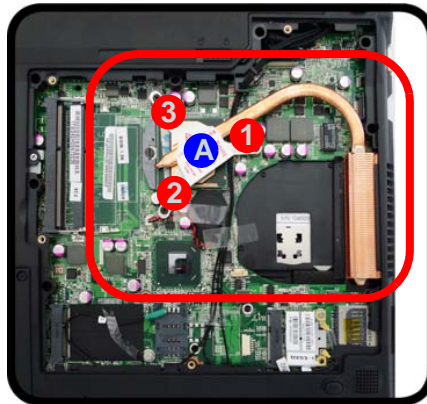

b.

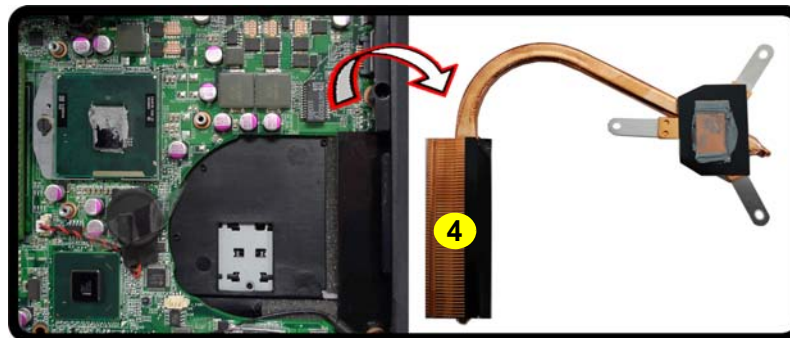


Figure 7
Processor Removal

- a. The CPU heat sink will be visible at point **A**. Remove the screws from the CPU heatsink.
- b. Grip the heat sink tab and carefully lift the heat sink up and off the computer.




4. Heat Sink

- 3 Screws

Disassembly


Figure 8
Processor Removal
(cont'd)

5. Turn the release latch **5** towards the unlock symbol  to release the CPU (*Figure 8d*).
6. Carefully (it may be hot) lift the CPU **6** up and out of the socket (*Figure 8e*).
7. Reverse the process to install a new CPU.
8. When re-inserting the CPU, pay careful attention to the pin alignment, it will fit only one way (DO NOT FORCE IT!).


c. Turn the release latch to unlock the CPU.

d. Lift the CPU out of the socket.

c.

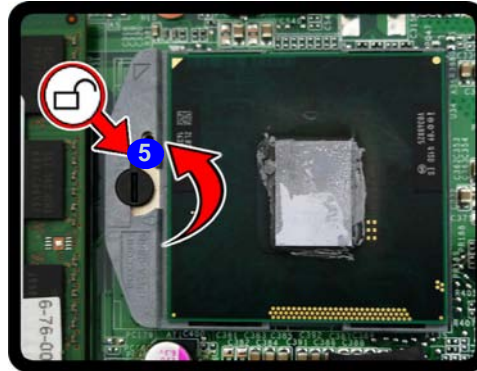


Unlock

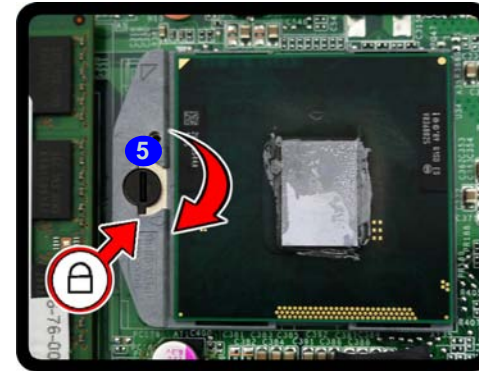

Lock

d.

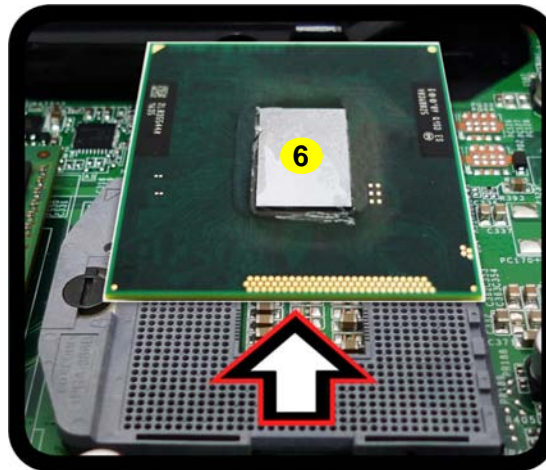



Caution

The heat sink, and CPU area in general, contains parts which are subject to high temperatures. Allow the area time to cool before removing these parts.

6. CPU

Processor Installation Procedure

1. Insert the CPU **A** (**Figure 9a**), pay careful attention to the pin alignment, it will fit only one way (DO NOT FORCE IT!), and turn the release latch **B** towards the lock symbol  (**Figure 9b**).
2. **Remove the sticker** **C** (**Figure 9c**) from the heat sink.
3. Insert the heat sink **D** as indicated in **Figure 9d**.
4. Tighten the CPU heat sink screws in the order **1**, **2** & **3** (the order as indicated on the label and **Figure 9d**).
5. Replace the component bay cover (don't forget to replace the fan cable) and tighten the screws (**page 2 - 9**).

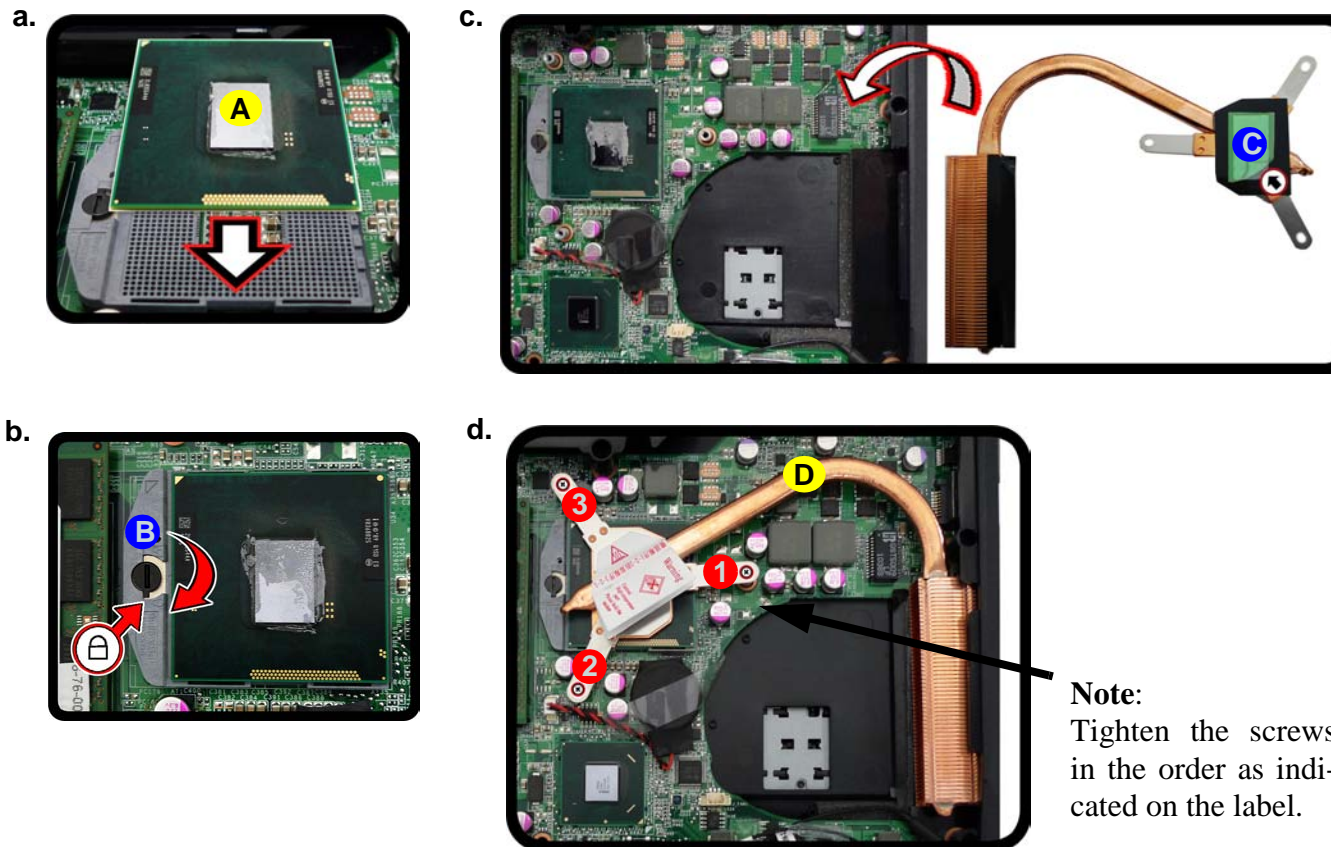

Note:
Tighten the screws
in the order as indi-
cated on the label.

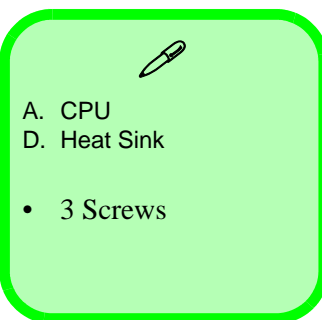


Figure 9
**Processor
Installation**

- a. Insert the CPU.
- b. Turn the release latch to-
wards the lock symbol.
- c. Remove the sticker from
the heat sink and insert
the heat sink.
- d. Tighten the screws.

Disassembly




Figure 10
**Wireless LAN
Module Removal**

- Locate the WLAN.
- Disconnect the cable and remove the screw.
- The WLAN module will pop up.
- Remove the Wireless LAN module.

Note: Make sure you reconnect the antenna cable to the “1 + 2” socket (*Figure 10b*).

Removing the Wireless LAN Module

- Turn **off** the computer, turn it over, and remove the battery (*page 2 - 5*) and the component bay cover (*page 2 - 9*).
- The Wireless LAN module will be visible at point **1** on the mainboard (*Figure 10a*).
- Carefully disconnect the cable **2**, and then remove the screw **3** (*Figure 10b*).
- The Wireless LAN module **4** (*Figure 10c*) will pop-up, and you can remove it from the computer (*Figure 10d*).

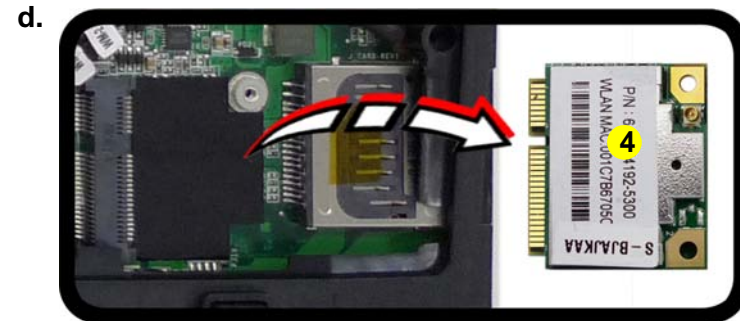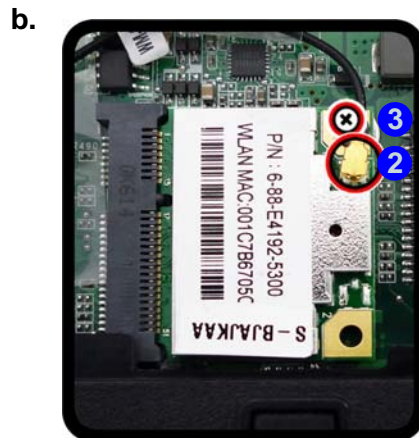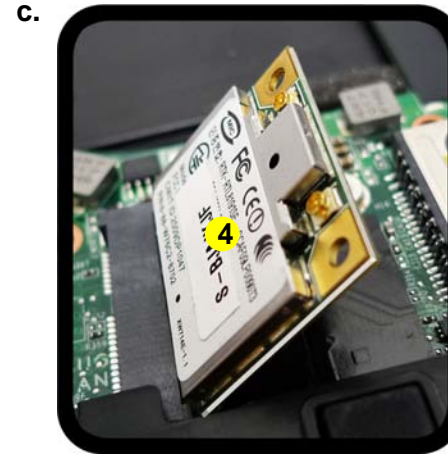

4. Wireless LAN Module

- 1 Screw

Removing the Keyboard

1. Turn **off** the computer, and remove the battery ([page 2 - 5](#)).
2. Remove screws **1** - **4** from the bottom of the computer. Press at points **5** to unsnap the LED cover module **6** (use the Eject Pin Tool to do this ([Figure 11a](#))).
3. Remove the LED cover module **6** and screws **7** - **11** from the keyboard ([Figure 11b](#)).
4. Carefully lift the keyboard up, being careful not to bend the keyboard ribbon cable **12**. Disconnect the keyboard ribbon cable **12** from the locking collar socket **13** ([Figure 11c](#)).
5. Carefully lift up the keyboard **14** ([Figure 11d](#)) off the computer.


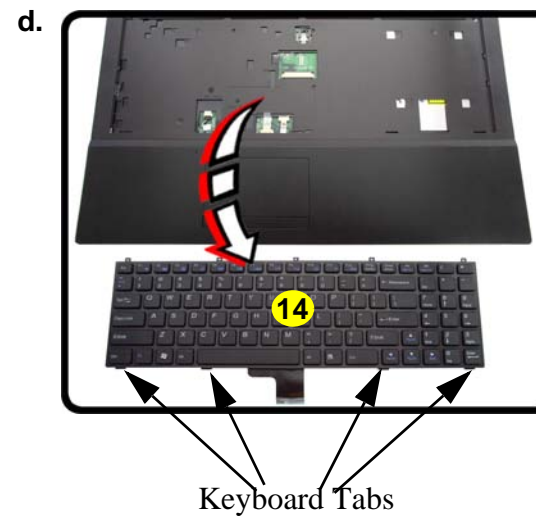


Figure 11
Keyboard Removal

- a. Remove screws from the bottom of the computer. Press at points **5** to unsnap the LED cover module.
- b. Remove the LED cover module and screws from the keyboard.
- c. Carefully lift the keyboard up and disconnect the keyboard ribbon cable from the locking collar socket.
- d. Remove the keyboard.

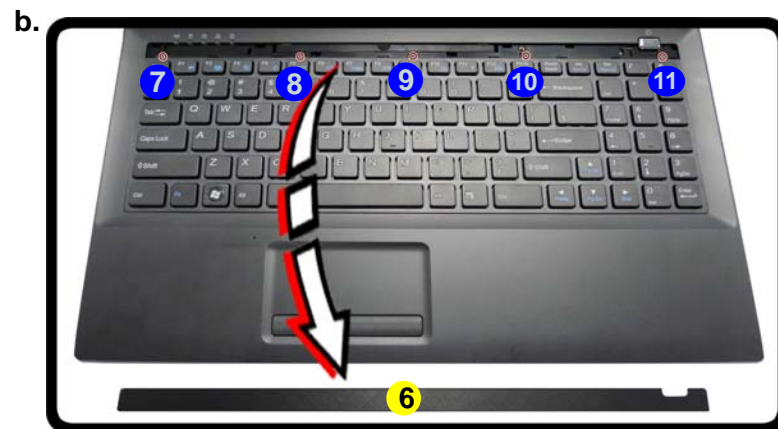

Re-Inserting the Keyboard

When re-inserting the keyboard firstly align the **four** keyboard tabs at the bottom ([Figure 11c](#)) at the bottom of the keyboard with the slots in the case.



6. LED Cover Module
14. Keyboard

- 9 Screws

Appendix A:Part Lists

This appendix breaks down the *W240HU/W241HUQ/W245HUQ/W249HUQ* series notebook's construction into a series of illustrations. The component part numbers are indicated in the tables opposite the drawings.

Note: This section indicates the *manufacturer's* part numbers. Your organization may use a different system, so be sure to cross-check any relevant documentation.

Note: Some assemblies may have parts in common (especially screws). However, the part lists DO NOT indicate the total number of duplicated parts used.

Note: Be sure to check any update notices. The parts shown in these illustrations are appropriate for the system at the time of publication. Over the product life, some parts may be improved or re-configured, resulting in *new* part numbers.

Part List Illustration Location

The following table indicates where to find the appropriate part list illustration.

Table A - 1
**Part List Illustration
Location**

Part	W240HU/W241HUQ	W245HUQ	W249HUQ
Top	<i>page A - 3</i>	<i>page A - 4</i>	<i>page A - 5</i>
Bottom (w/ SIM)	<i>page A - 6</i>		N/A
Bottom (w/o SIM)	<i>page A - 7</i>		<i>page A - 8</i>
Combo	N/A		<i>page A - 9</i>
DVD Dual Drive	<i>page A - 10</i>		<i>page A - 11</i>
LCD	<i>page A - 12</i>	<i>page A - 13</i>	<i>page A - 14</i>

Top (W240HU/W241HUQ Series)


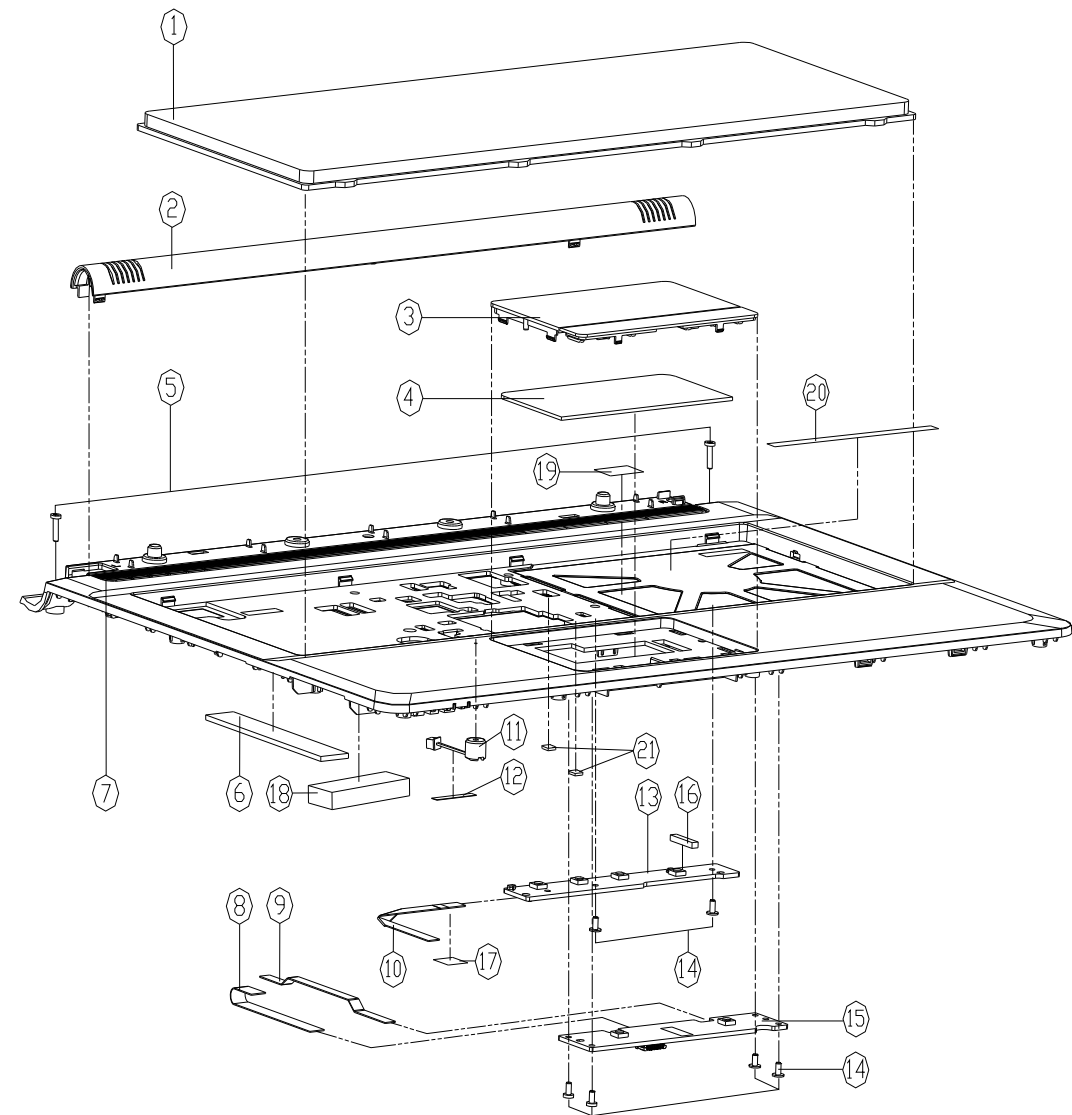


Figure A - 1
Top (W240HU/
W241HUQ Series)

ITEM	PART NAME	PART NO	REMARK
1	K/B USA W/00200-430 W/00100-000 WITH VISTA KEY	6-80-W84T0-011-1	
2	HINGE COVER (PC+ABS) C4501	6-42-C4512-031	
3	TP COVER MODULE (MATT UV PAINT) C4501	6-42-C4512-101	
4	TOUCH PAD SYNAPTICS TM-01146-003 C4800	6-49-C4802-010	
5	SCREW M2.5*8L K1 BK/Z NY ICT	6-35-B6125-8R0	
6	SPONGE FOR TOP CASE (5*6*2) (SMS) SONY G400	6-47-0019A-570	
7	TOP CASE MODULE C4500	6-39-C4502-014	
7	TOP CASE MODULE C501-C (G/00100-000) C4501	6-39-C4512-014-C	
8	FFC CABLE FOR TOUCH PAD 6PIN C4500	6-43-C4502-010	
9	FFC CABLE FOR W/B TO CLICK BOARD C4500	6-43-C4500-022	
10	FFC CABLE FOR W/B TO POWER BOARD C4500	6-43-C4500-031	
11	TOP CASE MODULE C501-C (G/00100-000) C4501	6-23-EM54G-012	
12	TAPE MYLAR (B) MYLAR M550J	6-40-M55J2-020	
13	POWER SWITCH BOARD V2.0 C4509	6-77-E510S-D02-A	
14	W/00100-000 W/00100-000 K1 NY ICT GY-PATCH	6-35-B1120-3RE	
15	CLICK BOARD V1.0 W240BU	6-77-W2402-D01	
16	POWER BOARD SPONGE (SMS) SONY G400 C4500	6-47-C4502-021	
17	TOP CASE FFC MYLAR (PET) 3M 467 C4500	6-40-C4502-030	
18	SPONGE (SMS) (3*6*25*75) FOR TOP CASE C4120	6-47-0019A-390	
19	CONDUCTIVE CLOTH (25*5*0.5) FOR TOP CASE C4120	6-47-E4122-010	
20	TOP CASE (G/00100-000) C4500 (J/00100-000)	6-47-C4502-030-1	
21	RUBBER (55*4*15) SILICON 70 (M6) 750	6-47-M67U1-040	

Top (W245HUQ Series)

Figure A - 2
Top (W245HUQ Series)

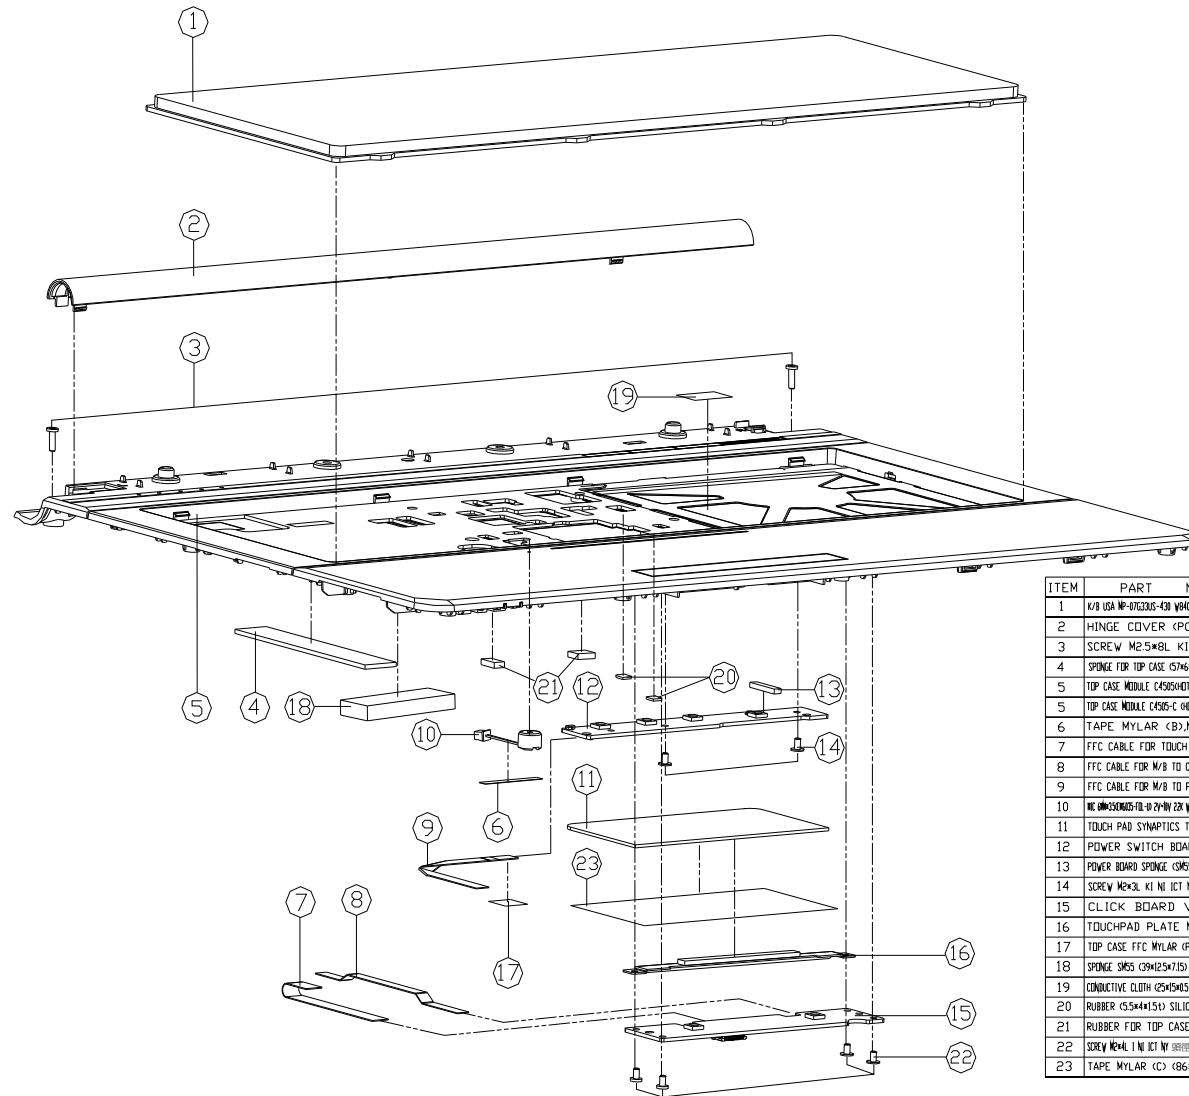

ITEM	PART NAME	PART NO	REMARK
1	K/B USA W-8030305-400 W/400 WITH VISTA KEY	6-80-W8410-011-1	
2	HINGE COVER (PC+ABS) C4505	6-42-C4552-031	
3	SCREW M2.5*8L KI BK/Z NY ICT	6-35-B6125-8R0	
4	SPONGE FOR TOP CASE (57*62) (SM5+SONY G400)	6-47-0019A-570	
5	TOP CASE MODULE C4505 (KEY BUTTON CHANGE)	6-39-C4552-014 FOR W245HUQ	
6	TAPE MYLAR (B) MYLAR M550J	6-40-M55J2-020	
7	FFC CABLE FOR TOUCH PAD 6PIN C4500	6-43-C4502-010	
8	FFC CABLE FOR W/B TO CLICK BOARD C4500	6-43-C4500-022	
9	FFC CABLE FOR W/B TO POWER BOARD C4500	6-43-C4500-031	
10	NE (0.35*0.35) 0.25*20 NY 28 VIOLE (0.35) 1.4*0.6	6-23-EM54G-012	
11	TOUCH PAD SYNAPTICS TM-01146-003 C4800	6-49-C4802-010	
12	POWER SWITCH BOARD V2.0 C4509	6-77-E510S-D02-A	
13	POWER BOARD SPONGE (SM5+SONY G400) C4500	6-47-C4502-021	
14	SCREW M2*3L KI NI ICT NY (00-#45,01-#4)	6-35-B1120-3RE	
15	CLICK BOARD V1.0 W240BU	6-77-W2402-001	
16	TOUCHPAD PLATE MODULE C4505	6-33-C4552-101	
17	TOP CASE FFC MYLAR (PET+3M 467) C4500	6-40-C4502-030	
18	SPONGE SM5 (39*25*7.5) FOR TOP CASE E420	6-47-0019A-390	
19	CONDUCTIVE CLOTH (25*54*0.5) FOR TOP CASE E420	6-47-E4122-010	
20	RUBBER (5.5*44*1.5) SILICON TO M6780U 黑色	6-47-M67U1-040	
21	RUBBER FOR TOP CASE (11*61*5) C4505	6-47-C4552-030	
22	SCREW M2*1.1 NI ICT NY (00-#35,01-#3) 0.8	6-35-C1120-4RB	
23	TAPE MYLAR (C) (86*38.80MM) C4105	6-40-00150-861	

Top (W249HUQ Series)


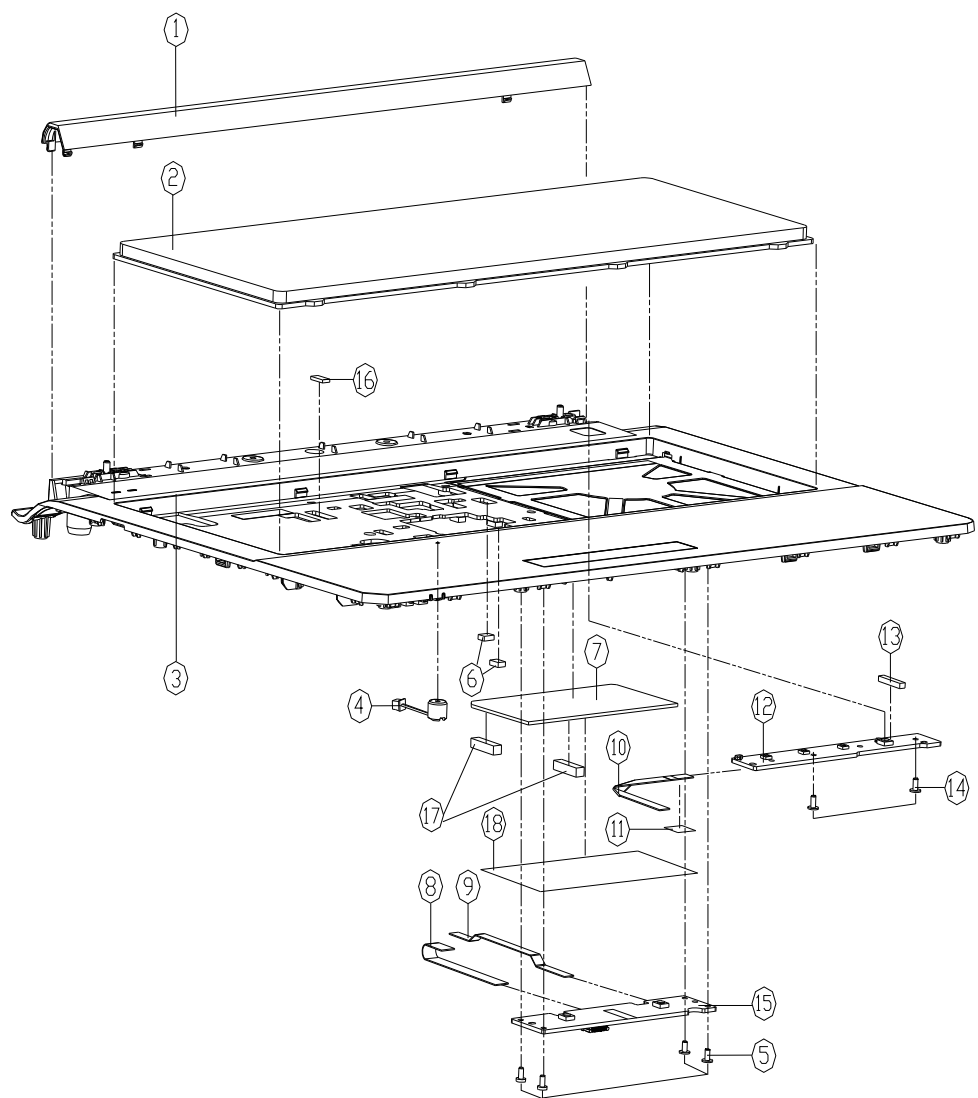


Figure A - 3
Top (W249HUQ Series)

ITEM	PART NAME	PART NO	REMARK
1	TOP CASE HINGE COVER MODULE E4128	6-42-E4182-102	
2	K/R USA W-0703005-400 V8401 WITH VISTA KEY	6-80-W8410-011-1	
3	TOP CASE MODULE E4129Q-C	6-39-E4192-011-C	
4	ME 0003005-400 V8401 WITH VISTA KEY	6-23-EM546-012-2	
5	SONY P4111010 W-0703005-400 V8401	6-35-C1120-4RB	
6	RUBBER (55x44x54) SILICON 70 10067050	6-47-M67U1-040	
7	TOUCH PAD SYNAPTICS TM-01146-003 C4800	6-49-C4802-010	
8	FFC CABLE FOR TOUCH PAD 6PIN C4500 (4P)	6-43-C4502-010-1	
9	FFC CABLE FOR W/B TO CLICK BOARD C4500 (4P)	6-43-C4500-022-1	
10	FFC CABLE FOR W/B TO POWER BOARD C4500 (4P)	6-43-C4500-031-1	
11	TOP CASE FFC MYLAR (PET+3M 467) C4500	6-40-C4502-030	
12	POWER SWITCH BOARD V2.0 C4509	6-77-E510S-D02-A	
13	POWER BOARD SPONGE (SM55+SONY G4000) C4500	6-47-C4502-021	
14	(3)PHS000SCREW M2x3.0 K1 NI ICT G1Y-PATCH	6-35-B1120-3RE	
15	CLICK BOARD V1.0 W240BU	6-77-W2402-D01	
16	GASKET (11x61x5) W/B HEAT PIPE ON VGA TOP AREA M50X	6-47-00190-10E	
17	RUBBER FOR TOP CASE (11x61x5) C4505	6-47-C4552-030	
18	TAPE MYLAR (C) (86x38.80MM) C4105	6-40-00150-861	


Bottom with SIM (W240HU/W241HUQ/W245HUQ Series)

Figure A - 4
Bottom with SIM
(W240HU/
W241HUQ/
W245HUQ Series)

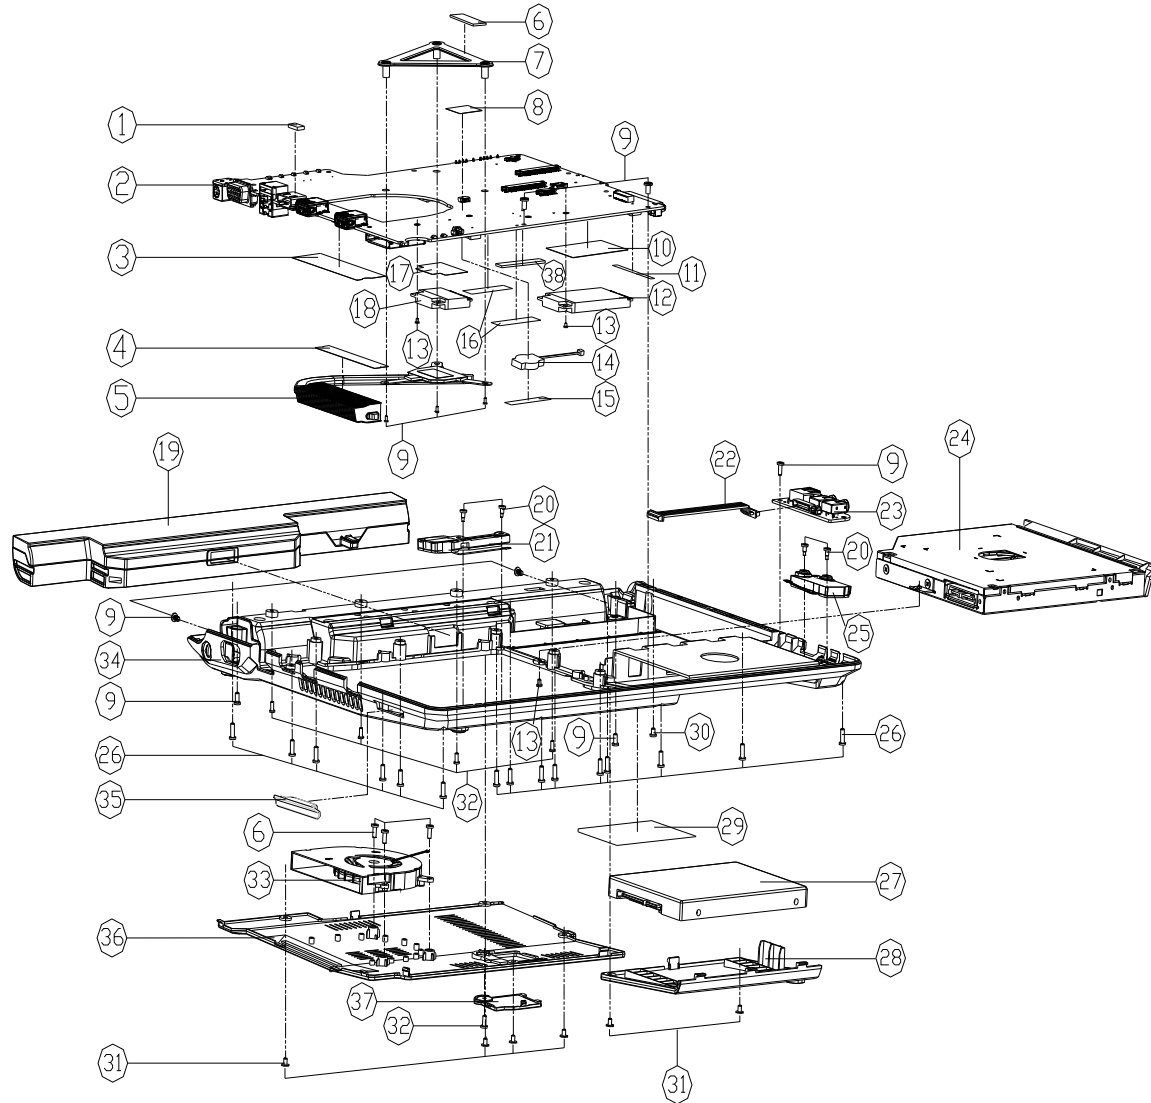

ITEM	PART NAME	PART NO	REMARK
1	GASKET (L)W/SH/ES FOR USB 1890W	6-47-00190-1A9	
2	MAIN BOARD V2.0 (W/3D) W240HU	6-77-W24HD-002	
3	MYLAR FOR M/B FIN C4500	6-40-C450S-010	
4	AIRDUCT MYLAR DF117 W240HU	6-40-W24HD-011	
5	CPU HEATSINK MODULE W240HU	6-31-W24HN-101	
6	M/B TOP RUBBER CUSHION M/B SILICONE E4120	6-47-E412S-010	
7	CPU SUPPORTER FOR HUAN RIVER SOC W240HU	6-33-W150S-011	
8	AUDIO BOARD FOR W240HU (L)W/SH/ES FOR USB 1890W	6-40-C450S-030	
9	SCREW M2.5X3L KI BK/2 ICT NY-	6-35-B612S-5RA	
10	MYLAR 40X40X1.1 (F80) X 30-40T M7351	6-40-M7351-020	
11	TAPE MYLAR (B)MYLAR M550J	6-40-M55J2-020	
12	MYLAR 40X40X1.1 (F80) X 30-40T M7351	6-40-M7351-020	
13	SCREW M2.5X3L KI BK/2 ICT NY-	6-35-B612S-5RA	
14	MYLAR 40X40X1.1 (F80) X 30-40T M7351	6-40-M7351-020	
15	TAPE MYLAR (B)MYLAR M550J	6-40-M55J2-010	
16	TAPE MYLAR (C)MYLAR M550J	6-40-M55J2-030	
17	36 HALF CARD MYLAR PET (C4500) E4120	6-40-E412S-010	
18	MYLAR 40X40X1.1 (F80) X 30-40T M7351	6-40-M7351-020	
19	MYLAR 40X40X1.1 (F80) X 30-40T M7351	6-40-M7351-020	
20	MYLAR 40X40X1.1 (F80) X 30-40T M7351	6-40-M7351-020	
21	MYLAR 40X40X1.1 (F80) X 30-40T M7351	6-40-M7351-020	
22	MYLAR 40X40X1.1 (F80) X 30-40T M7351	6-40-M7351-020	
23	MYLAR 40X40X1.1 (F80) X 30-40T M7351	6-40-M7351-020	
24	MYLAR 40X40X1.1 (F80) X 30-40T M7351	6-40-M7351-020	
25	MYLAR 40X40X1.1 (F80) X 30-40T M7351	6-40-M7351-020	
26	MYLAR 40X40X1.1 (F80) X 30-40T M7351	6-40-M7351-020	
27	MYLAR 40X40X1.1 (F80) X 30-40T M7351	6-40-M7351-020	
28	MYLAR 40X40X1.1 (F80) X 30-40T M7351	6-40-M7351-020	
29	MYLAR 40X40X1.1 (F80) X 30-40T M7351	6-40-M7351-020	
30	MYLAR 40X40X1.1 (F80) X 30-40T M7351	6-40-M7351-020	
31	MYLAR 40X40X1.1 (F80) X 30-40T M7351	6-40-M7351-020	
32	MYLAR 40X40X1.1 (F80) X 30-40T M7351	6-40-M7351-020	
33	MYLAR 40X40X1.1 (F80) X 30-40T M7351	6-40-M7351-020	
34	MYLAR 40X40X1.1 (F80) X 30-40T M7351	6-40-M7351-020	
35	MYLAR 40X40X1.1 (F80) X 30-40T M7351	6-40-M7351-020	
36	MYLAR 40X40X1.1 (F80) X 30-40T M7351	6-40-M7351-020	
37	MYLAR 40X40X1.1 (F80) X 30-40T M7351	6-40-M7351-020	
38	MYLAR 40X40X1.1 (F80) X 30-40T M7351	6-40-M7351-020	

A - 6 Bottom with SIM (W240HU/W241HUQ/W245HUQ Series)

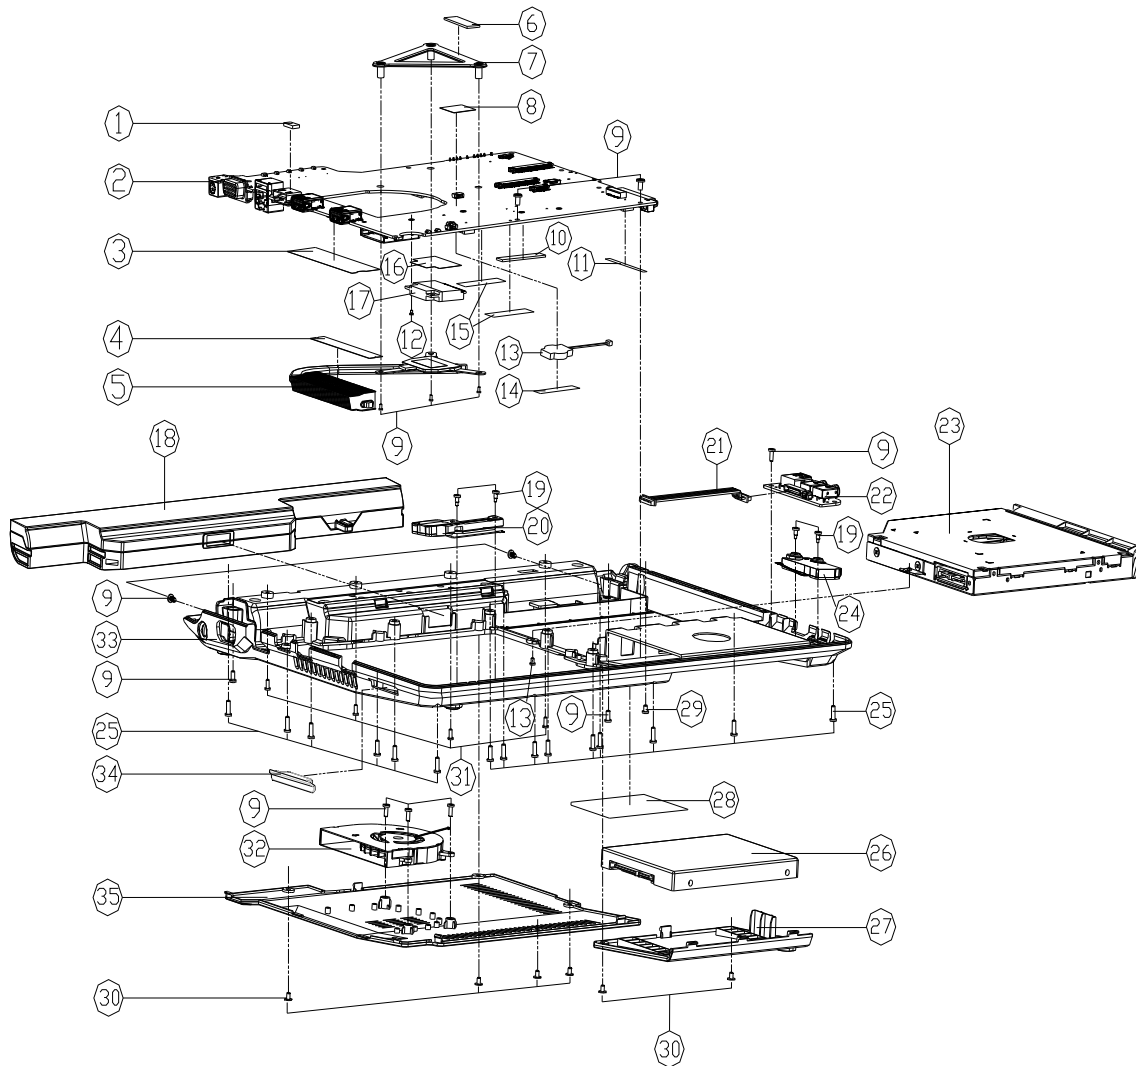


ITEM	PART	NAME	PART NO	REMARK
1	GASLET (LOWPRESS) FOR USB 1098H		6-47-00190-1A9	
2	MAIN BOARD V28 (V4/D 30) W240H		6-77-W2400-102-I	
3	MYLAR FOR M/B FIN C4500		6-40-C4500-010	
4	AIRCRAFT MYLAR DBF17 W240H		6-40-W240H-011	
5	CPU HEATSINK MODULE W240H		6-31-W240H-101	
6	W/B TOP RUBBER COUPLER WITH SLIDE LOCK		6-47-E4125-010	
7	TOP SUPPORTER FOR HEAT SINK C25 W240H		6-33-W1505-011	
8	MAIN BOARD MYLAR (DBF17) C4500		6-40-C4500-030	
9	SCREW M2X5H L1 8/17 ZT NYT		6-35-B6125-58A	
10	SPRINGS (6X25) C855-C900 C4500		6-47-0019A-610	FOR W240H D30
11	TAPE MYLAR (B) MYLAR M550 L		6-40-M55J5-020	
12	SCREW M2X4 L1 8/17 NYT NYO (H401) 480		6-35-B1120-38D	
13	W/B (W/B) FOR MAIN BOARD C4500		6-23-22015-00P	
14	TAPE MYLAR (C) MYLAR M550 L		6-40-M55J2-010	
15	TAPE MYLAR (C) MYLAR M550 L		6-40-M55J5-030	
16	36 WALT CORD MYLAR P202402401 C450		6-40-E4125-010	
17	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-W762Z-7001	
18	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-E4125-5300	
19	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-7001	
20	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-5300	
21	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-W762Z-7800	
22	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-W762Z-4200	
23	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-W762Z-7001	
24	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
25	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-W762Z-7001	
26	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
27	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
28	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
29	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
30	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
31	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
32	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
33	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
34	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
35	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
36	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
37	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
38	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
39	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
40	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
41	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
42	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
43	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
44	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
45	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
46	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
47	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
48	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
49	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
50	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
51	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
52	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
53	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
54	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
55	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
56	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
57	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
58	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
59	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
60	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
61	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
62	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
63	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
64	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
65	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
66	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
67	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
68	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
69	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
70	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
71	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
72	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
73	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
74	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
75	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
76	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
77	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
78	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
79	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
80	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
81	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
82	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
83	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
84	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
85	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
86	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
87	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
88	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
89	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
90	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
91	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
92	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
93	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
94	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
95	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
96	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
97	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
98	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
99	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	
100	W/B AIRSUCKER (W/B) MYLAR (H401) W/B C450		6-88-C555F-4200	

Figure A - 5
**Bottom without
SIM (W240HU/
W241HUQ/
W245HUQ Series)**

Bottom without SIM (W249HUQ Series)

Figure A - 6
Bottom without
SIM (W249HUQ Series)

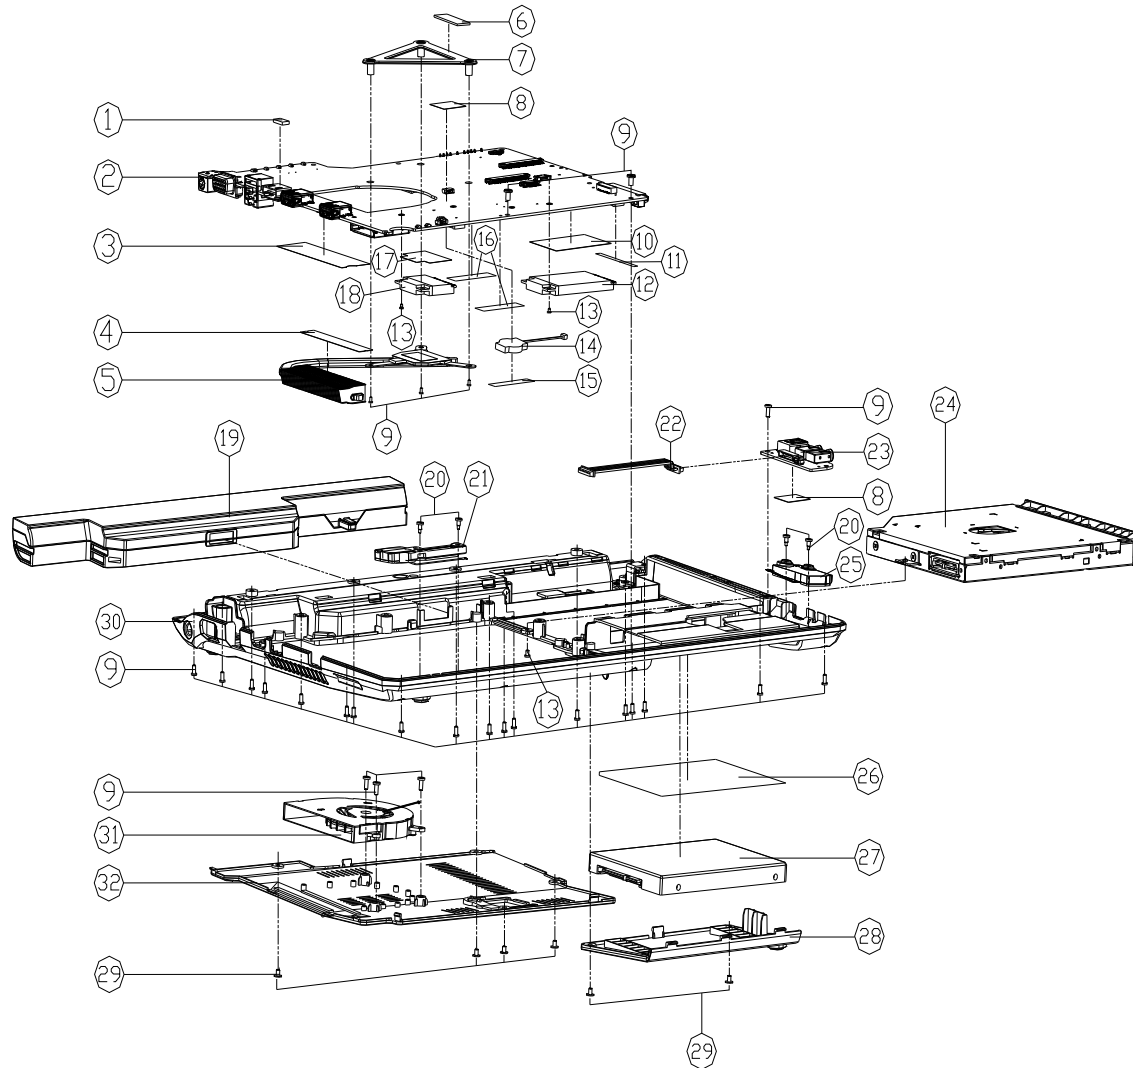

ITEM	PART NAME	PART NO	REMARK
1	GASKET (10x10x0.5) FOR USB 1890M	6-47-00190-1A9	
2	MAIN BOARD V2.0 (W/3D) W249HUQ-C	6-77-W249U-002	
3	MYLAR FOR M/B FIN C4500	6-40-C450S-010	
4	AIRDUCT MYLAR DFR117 W249HU	6-40-W24H8-011	
5	CPU HEATSINK MODULE W249HU	6-31-W24H4-100	
6	M/B TOP RUBBER COATING (NO SILICONE) E420	6-47-E412S-010	
7	CPU SUPPORTER FOR HUBBARD SEC W249HU	6-33-W150S-011	
8	AUDIO BOARD (20x20x0.5) (1.0) W249HU C4500	6-40-C450S-030	
9	SCREW M2.5xSL KI BK/2 ICT NY-	6-35-B612S-58A	
10	MYLAR 40x20x0.1 (FR3) + 3M-467 W251	6-40-M7351-020	ONLY FOR W/3D
11	TAPE MYLAR (B) MYLAR M550J	6-40-M55J2-020	
12	MYLAR 40x20x0.1 (FR3) + 3M-467 W251	6-40-M7351-020	ONLY FOR W/3D
13	SCREW M2.5xSL KI M ICT NY (10x10x0.5)	6-35-B1120-3RD	
14	SCREW M2.5xSL KI M ICT NY (10x10x0.5)	6-35-B1120-3RD	
15	TAPE MYLAR (A) MYLAR M550J	6-40-M55J2-010	
16	TAPE MYLAR (C) MYLAR M550J	6-40-M55J2-030	
17	3D HALF CARD MYLAR PET (20x20x0.1) E420	6-40-E412S-010	
18	MYLAR 40x20x0.1 (FR3) + 3M-467 W251	6-40-M7351-020	
19	MYLAR 40x20x0.1 (FR3) + 3M-467 W251	6-40-M7351-020	
20	MYLAR 40x20x0.1 (FR3) + 3M-467 W251	6-40-M7351-020	
21	MYLAR 40x20x0.1 (FR3) + 3M-467 W251	6-40-M7351-020	
22	MYLAR 40x20x0.1 (FR3) + 3M-467 W251	6-40-M7351-020	
23	AUDIO BOARD V3.0 C4500	6-77-C450B-003	
24	SATA DVD SUPER MULTI ASSY (OPTION)	6-79-E412900-010	
25	SATA DVD SUPER MULTI ASSY (OPTION)	6-79-E412900-010	
26	W/D HDD ASSY E41290	6-79-E412900-000	
27	W/D HDD ASSY E41290	6-79-E412900-000	
28	W/D HDD ASSY E41290	6-79-E412900-000	
29	W/D HDD ASSY E41290	6-79-E412900-000	
30	W/D HDD ASSY E41290	6-79-E412900-000	
31	W/D HDD ASSY E41290	6-79-E412900-000	
32	W/D HDD ASSY E41290	6-79-E412900-000	




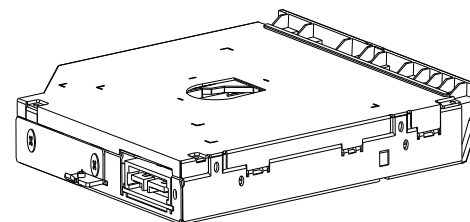


Figure 7
**Combo (W249HUQ
Series)**

ITEM	PART NAME	PART NO	REMARK
1	ODD BRACKET SECC C4500	6-35-B1120-3RD	
2	ODD BRACKET SECC C4500	6-33-C450Z-010	
3	ODD BRACKET SECC C4500	6-85-B076X-511	FOR HLDS
3	ODD BRACKET SECC C4500	6-85-B076X-P10	FOR PANASONIC
3	ODD BRACKET SECC C4500	6-85-B076X-512	FOR HLDS
4	ODD BEZEL MODULE E4128	6-42-E418Z-101	
5	BLU-RAY ODD BEZEL LABEL	6-45-E4120W-010	

DVD (W240HU/W241HUQ/W245HUQ Series)

Figure A - 8
DVD (W240HU/
W241HUQ/
W245HUQ Series)

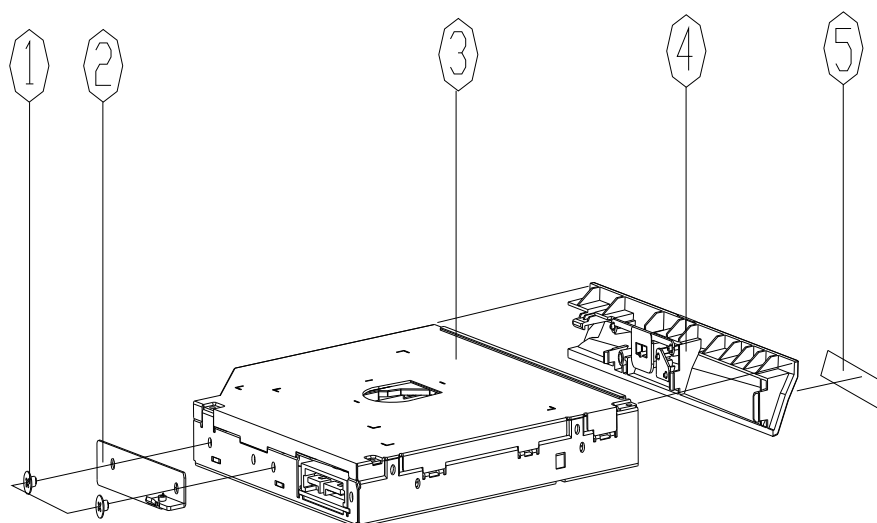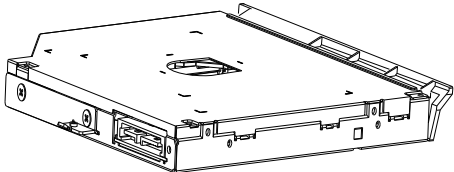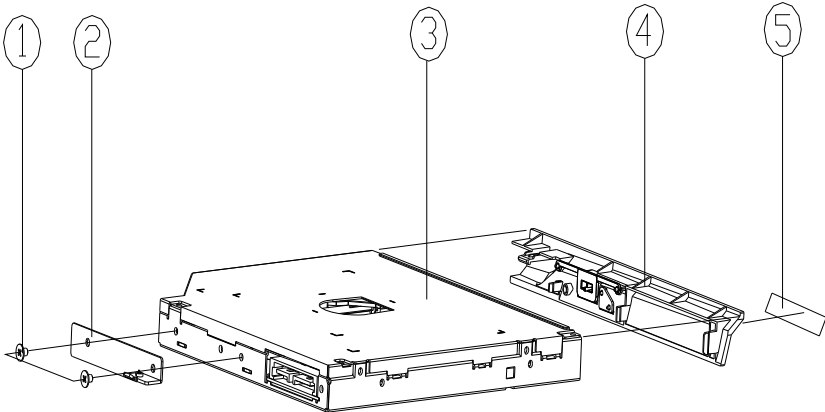

ITEM	PART NAME	PART NO	REMARK
1	BEZEL MODULE (DVD) AT NO. 101 (DVD) (DVD) (DVD) (DVD)	6-35-B1120-3RD	
2	ODD BRACKET SECC C4500	6-33-C450Z-010	
3	ODD BEZEL MODULE (DVD) AT NO. 101 (DVD) (DVD) (DVD) (DVD)	6-85-A078X-508	FOR HLDS
3	ODD BEZEL MODULE (DVD) AT NO. 101 (DVD) (DVD) (DVD) (DVD)	6-85-A078X-T09	FOR TSST
4	ODD BEZEL MODULE C4500	6-42-C450Z-102	
5	ODD BEZEL LABEL (SUPER MULTI) C4500	6-45-C450Z-011	

DVD (W249HUQ Series)



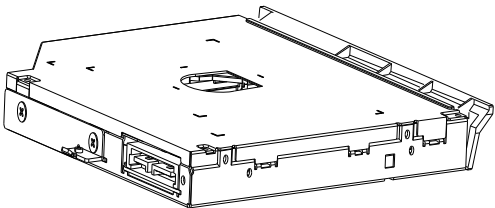


Figure A - 9
DVD (W249HUQ
Series)

ITEM	PART NAME	PART NO	REMARK
1	ODD BRACKET SECC C4500	6-35-B1120-3RD	
2	ODD BRACKET SECC C4500	6-33-C450Z-010	
3	ODD BRACKET SECC C4500	6-85-A078X-507	FOR HLDS
3	ODD BRACKET SECC C4500	6-85-A078X-T09	FOR TSST
4	ODD BEZEL MODULE E4128Q	6-42-E418Z-101	
5	ODD BEZEL LABEL (SUPER MULTI) (SIZE CHANGED) C4500	6-45-C450Z-011	

LCD (W240HU/W241HUQ Series)

Figure A - 10
LCD (W240HU/
W241HUQ Series)

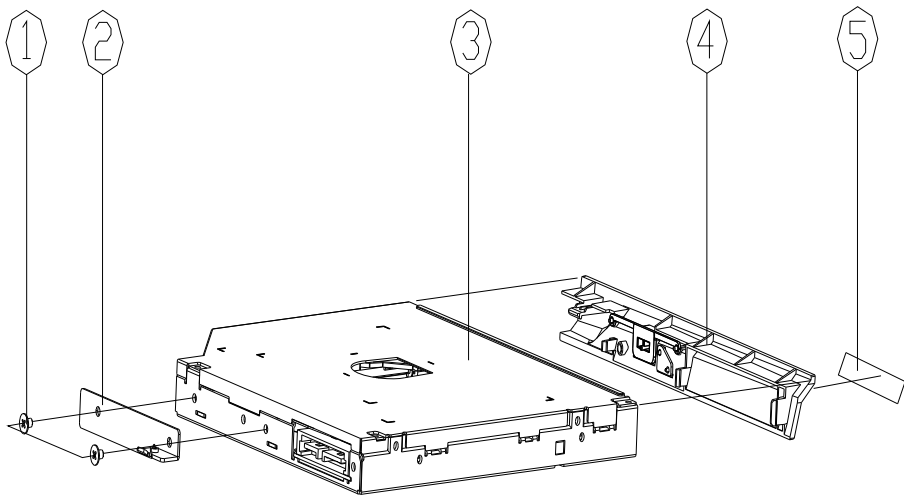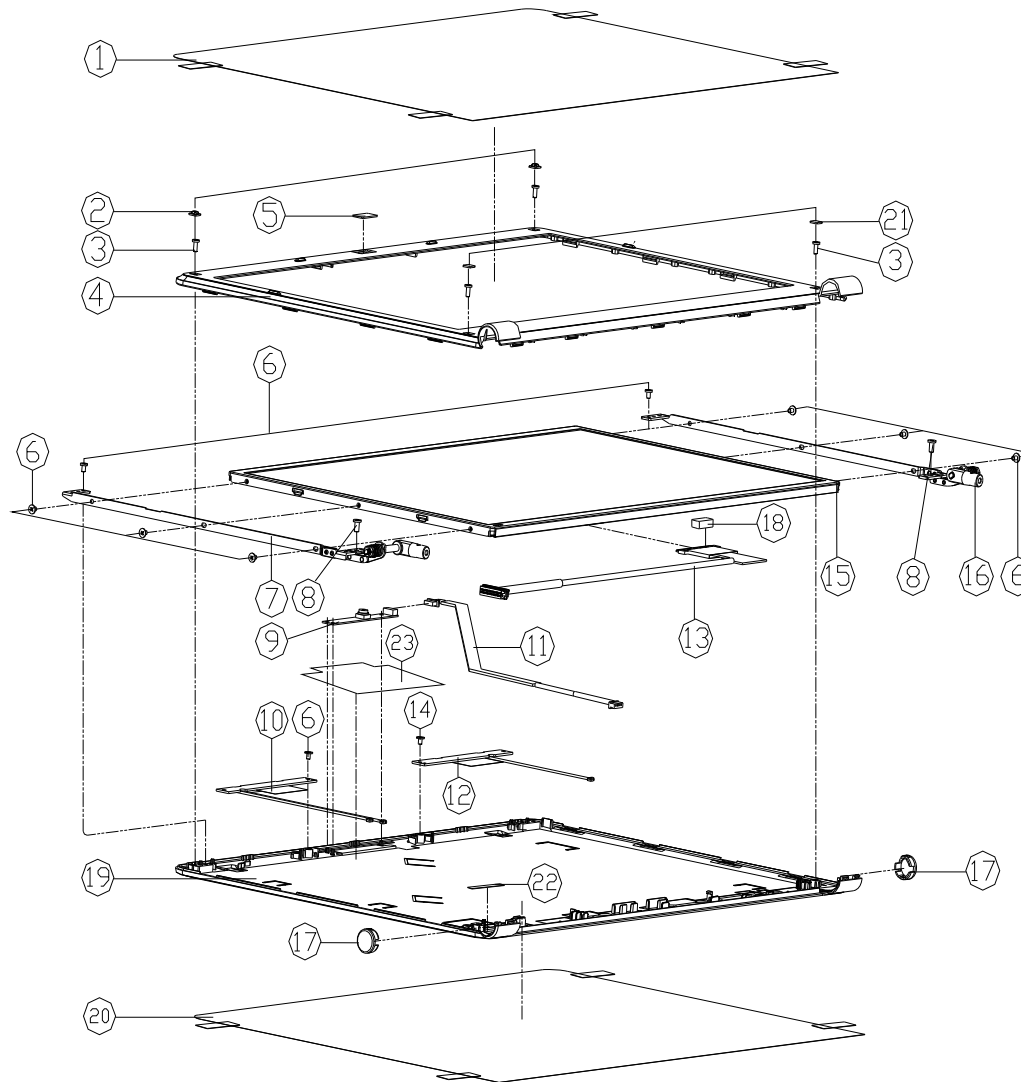

ITEM	PART NAME	PART NO	REMARK
1	LCD FRONT COVER PROTECTION MYLAR PET-3000S C450	6-40-C4501-011	
2	LCD FRONT COVER SCREW RUBBER SILICON C4500	6-47-C4501-031	
3	SCREW M2xL K1T-08 D-4.0 BK/Z ICT NY	6-35-B6120-5R0	
4	LCD FRONT COVER MODULE C4500	6-39-C4501-012	
5	CCD 2/3" PMMA M810L	6-42-M8101-011	
5	W/D CCD LENS PMMA 0.5T C4800	6-42-C4801-010	
6	SCREW M2xL K1 NI ICT NY (00=44.0T=08)	6-35-B1120-3RD	
7	LCD HINGE-L SECC C4500	6-33-C4501-011	
8	SCREW M2.5x5L K1 BK/Z ICT NY-	6-35-B6125-5RA	
9	UVC CAMERA CHOCLET FIX CH4709 L3M 6AA V1500M	6-88-V150C-5100	OPTION
9	UVC CAMERA HOUSING FIX BNC6502-001 V15 L3M 6AA C5000	6-88-E510C-4900	OPTION
10	ANTENNA CABLE FOR 240/241 LCD (00=100M) 30050M 1100M	6-23-7C450-032-1	
11	WIRE CABLE FOR CCD SP 31050M C4500	6-43-C4501-011	
12	ANTENNA WCDMA PCB 3G 850M 1100M E4120	6-23-7E412-010	
13	WIRE CABLE FOR LVDS 290M 0.010 C020454-040 C500	6-43-E5101-011-A	
14	SCREW M2xL K1 NI ICT NY (00=44.5,0T=04)	6-35-B1120-3RE	
15	LCD HAP HD CHART M800-L02 GLARE TYPE LED 55W	6-50-J8152-D00	
15	LCD HAP HD HD M800-L02 GLARE TYPE LED 55W	6-50-J8152-B01	
15	LCD HAP HD LG LPM800-L04 GLARE TYPE LED 55W	6-50-J8152-L03	
16	LCD HINGE-R SECC C4500	6-33-C4501-021	
17	HINGE COSMETIC RING ABS PA727 C4501	6-42-C4518-011	
18	GASKET (00=45) FOR TV CONAL TOP CASE M57010	6-47-00190-102	
19	LCD BACK COVER MODULE (MR C4800-C	6-39-C4511-021-C	
20	BACK COVER PROTECTION MYLAR PET-3000S C450	6-40-C4511-010	
21	FRONT COVER PC FOR SCREW C4500	6-40-C4501-071	
22	TAPE MYLAR (B) MYLAR M550J	6-40-M55J2-020	
23	CCD AL FOIL GAL FOIL MYLAR-011 W240HU	6-47-W24H1-010	

LCD (W245HUQ Series)


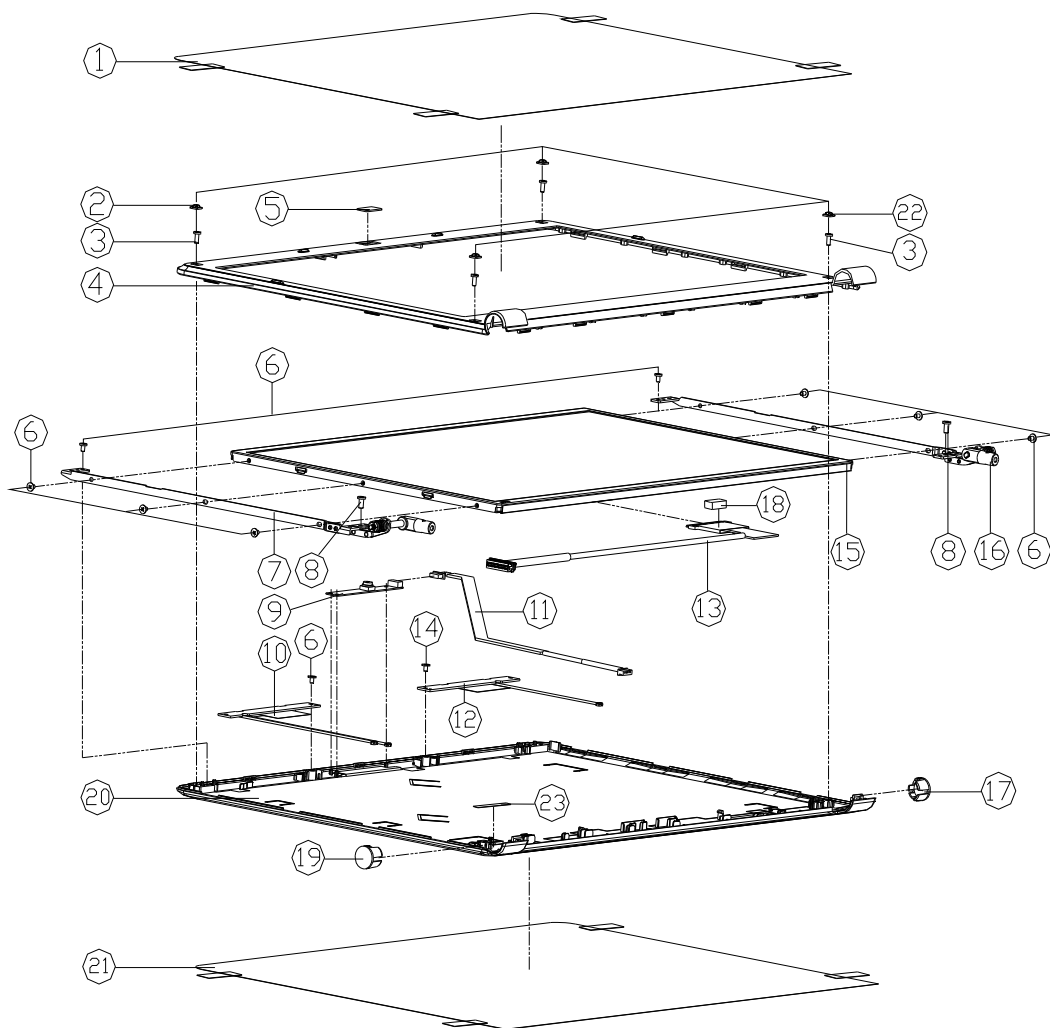


Figure A - 11
LCD (W245HUQ Series)

ITEM	PART NAME	PART NO	REMARK
1	LCD FRONT COVER PROTECTION MYLAR (PETI-3005) C450	6-40-C4501-011	
2	LCD FRONT COVER SCREW RUBBER SILICON C4500	6-47-C4501-031	
3	SCREW M2xSL KI NI ICT NY (D0=4.0) BK/Z ICT NY	6-35-B6120-5R0	
4	LCD FRONT COVER MODULE C4500	6-39-C4501-012	
5	CCD 8800 PMMA M810L	6-42-M8101-011	
5	W/D CCD LENS PMMA 0.5T C4800	6-42-C480T-010	
6	SCREW M2xSL KI NI ICT NY (D0=4.0,DT=0.8)	6-35-B1120-3R0	
7	LCD HINGE-L SECC C4500	6-33-C4501-011	
8	SCREW M2.5xSL KI BK/Z ICT NY-	6-35-B6125-5RA	
9	OVC CAMERA CHOCOMY FIX CFWA79 1.5W 6AA W250MM	6-B8-W150C-S100	OPTION
9	OVC CAMERA HOSON FIX IN200MS2-000 YIS 1.5W 6AA C5200	6-B8-E510C-4900	OPTION
10	ANTENNA CORD TYPE 240X240X100 CORD 10M PRE-50MM PRE-50MM	6-23-7C450-032-1	
11	WIRE CABLE FOR CCD SP 310.5MM C4500	6-43-C450T-011	
12	ANTENNA WCDMA PCB 3G 860MM 100MM E4120	6-23-7E412-010	
13	WIRE CABLE FOR LVDS 25MM 0.170 CDR2054-M00 C5200	6-43-E5101-011-A	
14	SCREW M2xSL KI NI ICT NY (D0=4.5,DT=0.4)	6-35-B1120-3RE	
15	LCD HAP HD CHROME W/400-L2E GLASS TYPE ALED 52MM	6-50-J8152-D00	
15	LCD HAP HD IVO W/400-L2E GLASS TYPE BLED 52MM	6-50-J8152-B01	
15	LCD HAP HD LG UP/400-L2E GLASS TYPE BLEDSM	6-50-J8152-L03	
16	LCD HINGE-R SECC C4500	6-33-C4501-021	
17	HINGE COSMETIC RING R (CM6140) C4505	6-42-C4558-011	
18	GASKET (00464) FOR TV CONN. TOP CASE M5701U	6-47-00190-102	
19	HINGE COSMETIC RING L (CM6140) C4505	6-42-C4558-021	
20	LCD BACK COVER IMR MODULE (CHANGE) C4505	6-39-C4551-022	FOR W245HUQ
20	LCD BACK COVER IMR MODULE (CHANGE) C4505-C	6-39-C4551-022-C	FOR W245HUQ-C
21	BACK COVER PROTECTION MYLAR(B25-30015) C450	6-40-C4501-020	
22	FRONT COVER PC FOR SCREW C4500	6-40-C4501-071	
23	TAPE MYLAR (B)MYLAR M550J	6-40-M55J2-020	

LCD (W249HUQ Series)

Figure A - 12
LCD (W249HUQ
Series)

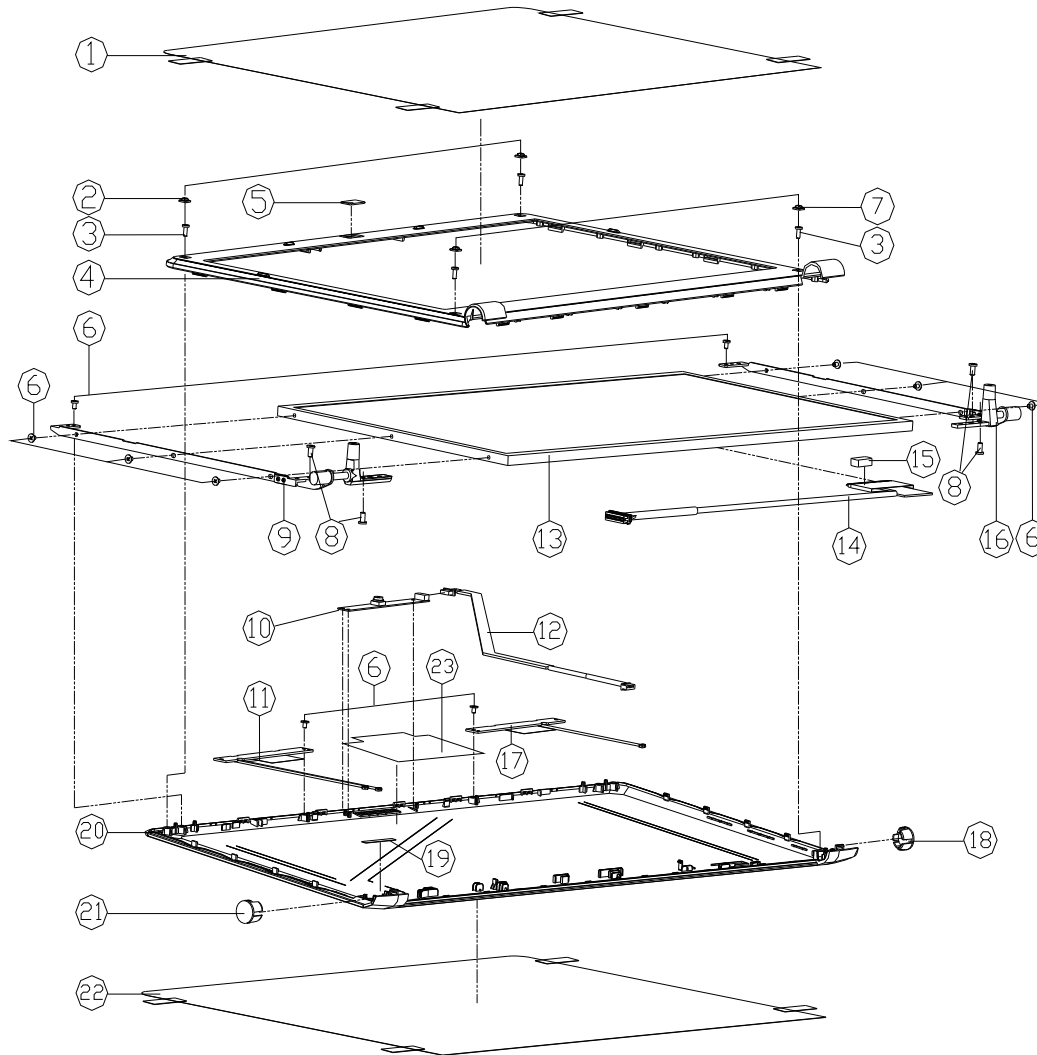

ITEM	PART NAME	PART NO	REMARK
1	LCD FRONT COVER PROTECTION MYLAR (PET-3095) C450	6-40-C4501-011	
2	LCD FRONT COVER SCREW RUBBER SILICON C450	6-47-C4501-031	
3	SCREW M2.5xL K1T-08 B-4.0 BK/Z ICT NY	6-35-B6120-SR0	
4	LCD FRONT COVER MODULE C4500	6-39-C4501-012	
5	CCD 880x660 PMMA M810L	6-42-M8101-011	
6	W/O CCD LENS PMMA 0.5T C4800	6-42-C480T-010	
7	SCREW M2xL K1 NI ICT NY (00-84.0.DT-08)	6-35-B1120-3RD	
8	FRONT COVER PC FOR SCREW C4500	6-40-C4501-071	
9	SCREW M2.5xL K1 BK/Z ICT NY	6-35-B6125-SRA	
10	LCD HINGE L SECC E41280	6-33-E4181-021	
11	UVC CAMERA HISION FIX (0806352-00) VIO L3M 6AA C5200	6-88-E510C-4900	OPTION
12	UVC CAMERA CHECKING FIX (0806352-00) VIO L3M 6AA C5200	6-88-W150C-5100	OPTION
13	WIRE CABLE FOR CCD 5P 310.5MM C4500	6-23-7C450-032-1	
14	LCD HINGE R SECC E41280	6-43-C450T-011	
15	LCD HINGE R SECC E41280	6-50-J8152-D00	
16	LCD HINGE R SECC E41280	6-50-J8152-B01	
17	LCD HINGE R SECC E41280	6-50-J8152-L03	
18	WIRE CABLE FOR LVDS 29PIN (0806352-00) VIO L3M 6AA C5200	6-43-E5101-011-A	
19	GASKET (080646) FOR TV CONN. TOP CASE M57010	6-47-00190-102	
20	LCD HINGE R SECC E41280	6-33-E4181-011	
21	HINGE COSMETIC RING R (C6140) C4505	6-23-7E412-010	
22	HINGE COSMETIC RING L (C6140) C4505	6-42-C4558-011	
23	TAPE MYLAR (B) MYLAR M550J	6-40-M55J2-020	
24	LCD BACK COVER (MR MODULE E41290-C	6-39-E4191-022-C	
25	HINGE COSMETIC RING L (C6140) C4505	6-42-C4558-021	
26	BACK COVER PROTECTION MYLAR (PET-3095) C450	6-40-C4501-020	
27	CCD AL FOIL (AL FOIL MYLAR-011) W240H1	6-47-W24H1-010	

Appendix B: Schematic Diagrams

This appendix has circuit diagrams of the **W240HU/W241HUQ/W245HUQ/W249HUQ** notebook's PCB's. The following table indicates where to find the appropriate schematic diagram.

Diagram - Page	Diagram - Page	Diagram - Page
<i>System Block Diagram - Page B - 2</i>	<i>CougarPoint - M 6/9 - Page B - 19</i>	<i>Power 0.85VS - Page B - 36</i>
<i>CPU 1/7 (DMI, PEG, FDI) - Page B - 3</i>	<i>CougarPoint - M 7/9 - Page B - 20</i>	<i>Power V-Core1 - Page B - 37</i>
<i>CPU 2/7 (CLK, MISC, JTAG) - Page B - 4</i>	<i>CougarPoint - M 8/9 - Page B - 21</i>	<i>Power V-Core2 - Page B - 38</i>
<i>CPU 3/7 (DDR3) - Page B - 5</i>	<i>CougarPoint - M 9/9 - Page B - 22</i>	<i>Charger, DC In - Page B - 39</i>
<i>CPU 4/7 (Power) - Page B - 6</i>	<i>New Card, Mini PCIE - Page B - 23</i>	<i>Click Board - Page B - 40</i>
<i>CPU 5/7 (Graphics Power) - Page B - 7</i>	<i>CCD, 3G, TPM - Page B - 24</i>	<i>Audio Board/USB - Page B - 41</i>
<i>CPU 6/7 (GND) - Page B - 8</i>	<i>Card Reader/LAN JMC251C - Page B - 25</i>	<i>Power Switch & LID Board - Page B - 42</i>
<i>CPU 7/7 (RESERVED) - Page B - 9</i>	<i>LAN (JMC251C), SATA HDD, ODD - Page B - 26</i>	
<i>DDR3 SO-DIMM_0 - Page B - 10</i>	<i>USB 2.0 Connector - Page B - 27</i>	
<i>DDR3 SO-DIMM_1 - Page B - 11</i>	<i>KBC-ITE IT8518 - Page B - 28</i>	
<i>LVDS, Inverter - Page B - 12</i>	<i>LED, MDC, BT - Page B - 29</i>	
<i>HDMI, CRT - Page B - 13</i>	<i>Audio Codec ALC269 - Page B - 30</i>	
<i>CougarPoint - M 1/9 - Page B - 14</i>	<i>USB, Fan, TP, Multi-Conn - Page B - 31</i>	
<i>CougarPoint - M 2/9 - Page B - 15</i>	<i>5VS, 3VS, 1.05VS, 1.5VS_CPU - Page B - 32</i>	
<i>CougarPoint - M 3/9 - Page B - 16</i>	<i>VDD3, VDD5 - Page B - 33</i>	
<i>CougarPoint - M 4/9 - Page B - 17</i>	<i>Power 1.5V/0.75V/1.8VS - Page B - 34</i>	
<i>CougarPoint - M 5/9 - Page B - 18</i>	<i>Power 1.05VS - Page B - 35</i>	

Table B - 1
**SCHEMATIC
DIAGRAMS**




Version Note


The schematic diagrams in this chapter are based upon version 6-7P-W24H5-002. If your mainboard (or other boards) are a later version, please check with the Service Center for updated diagrams (if required).

System Block Diagram

Sheet 1 of 43
System Block
Diagram

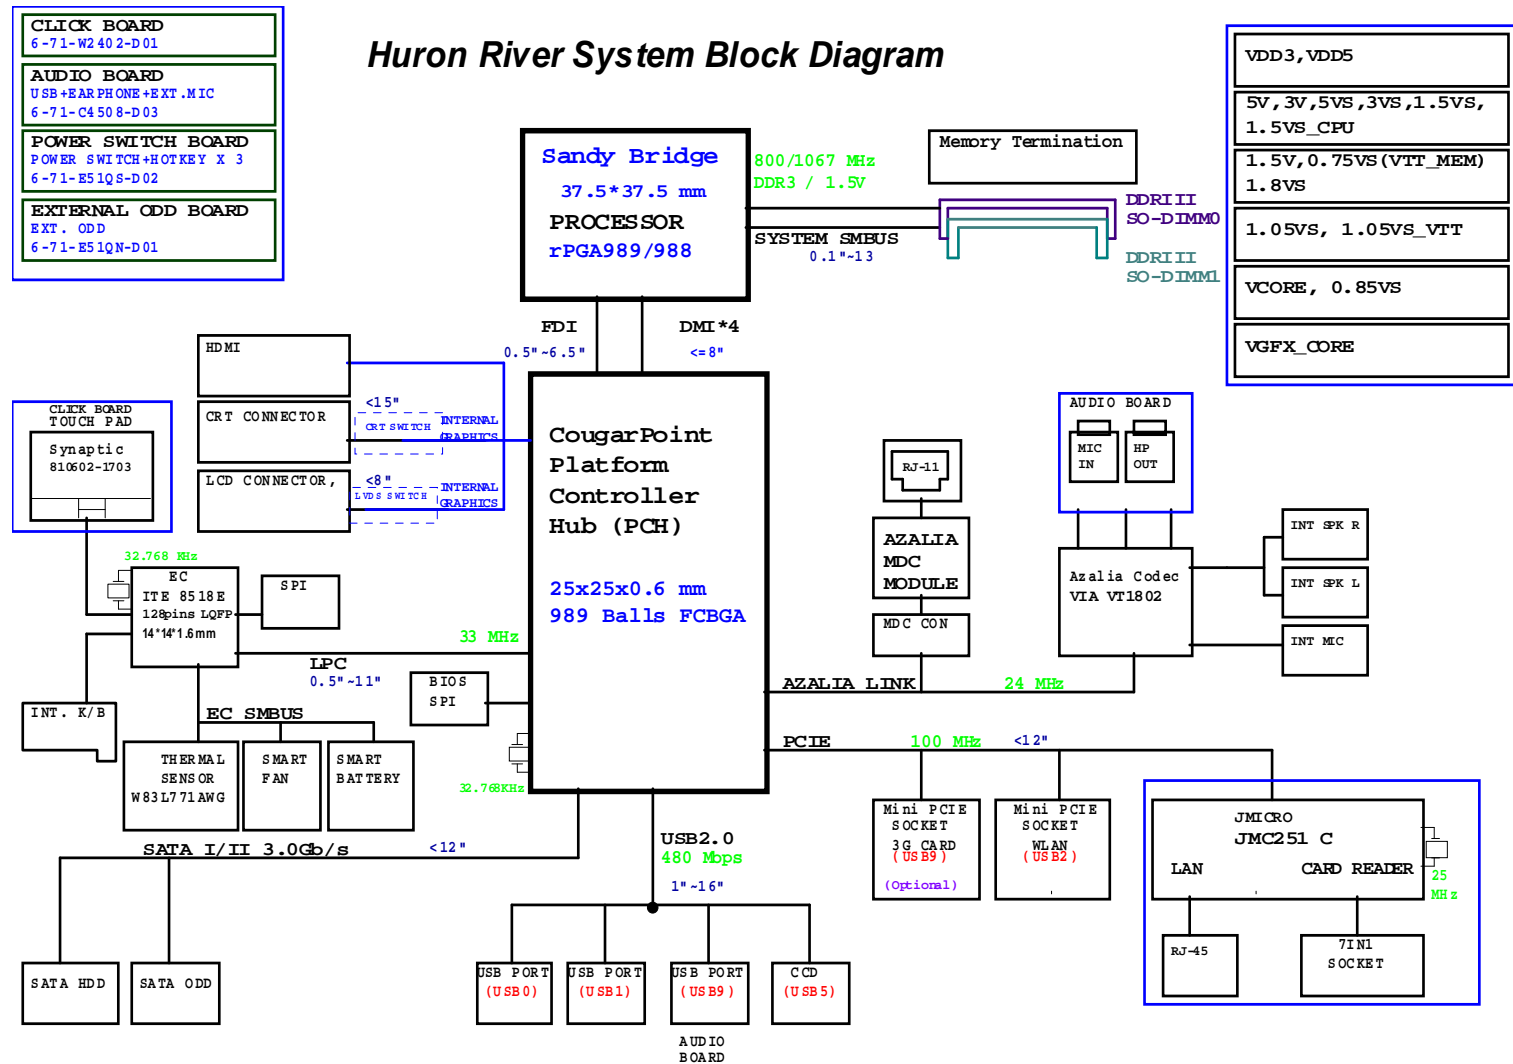

Sandy Bridge Processor 1/7
(DMI,PEG,FDI)

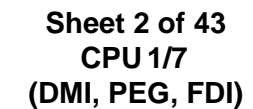

FU/PD for JTAG signals

1.05VSV_VTT

R 40.5 C 51.00 X0 P_7MS

R 10.0 C 51.00 X0 P_10.1

R 33.0 C 51.00 X0 P_P40V

R 10.0 C 51.00 X0 P_10.0

R 40.4 C 51.00 X0 P_10.4

R 10.0 C 51.00 X0 P_W STP

3.3/S

R 40.7 C 1K_04 X0 P_DBR_R

1.05V_VTT

H_PUPWRGD_R R412 10K 0.4

X78 0.1u 10V X78 0.4

11/03


[illegible]

The schematic diagram illustrates the electrical connections for the RAM module. A 16M00ZCH33 chip (Q8) is shown with its pins connected to a 1.5V supply, resistors (R45, R46, R47), capacitors (C22), and signals (CPUD RAM RST#, D DR 3, D RAM RST#, D RAM RST_CN RL [8..9]).

B - 4 CPU 2/7 (CLK, MISC, JTAG)

CPU 3/7 (DDR3)


Sandy Bridge Processor 3/7 (DDR3)

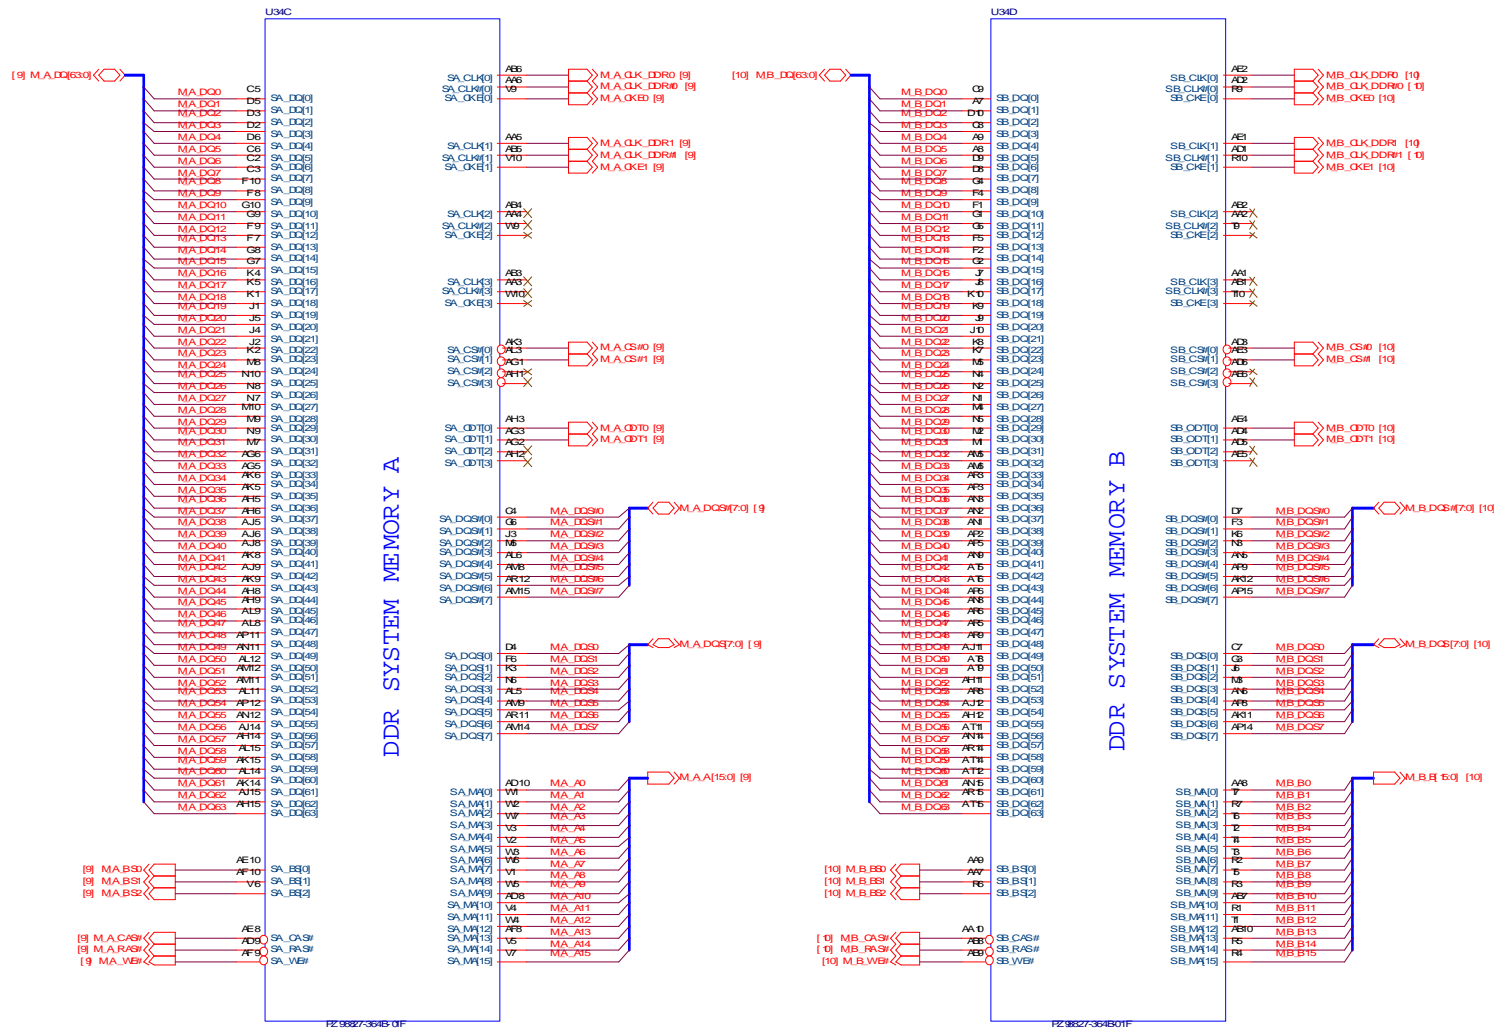


B.Schematic Diagrams

Sandy Bridge Processor 4/7

POWER

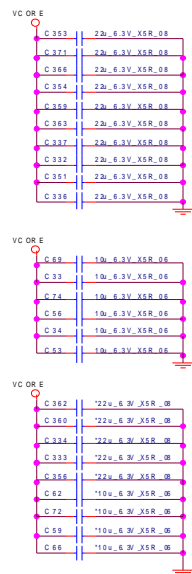


Sheet 5 of 43
CPU 4/7
(Power)

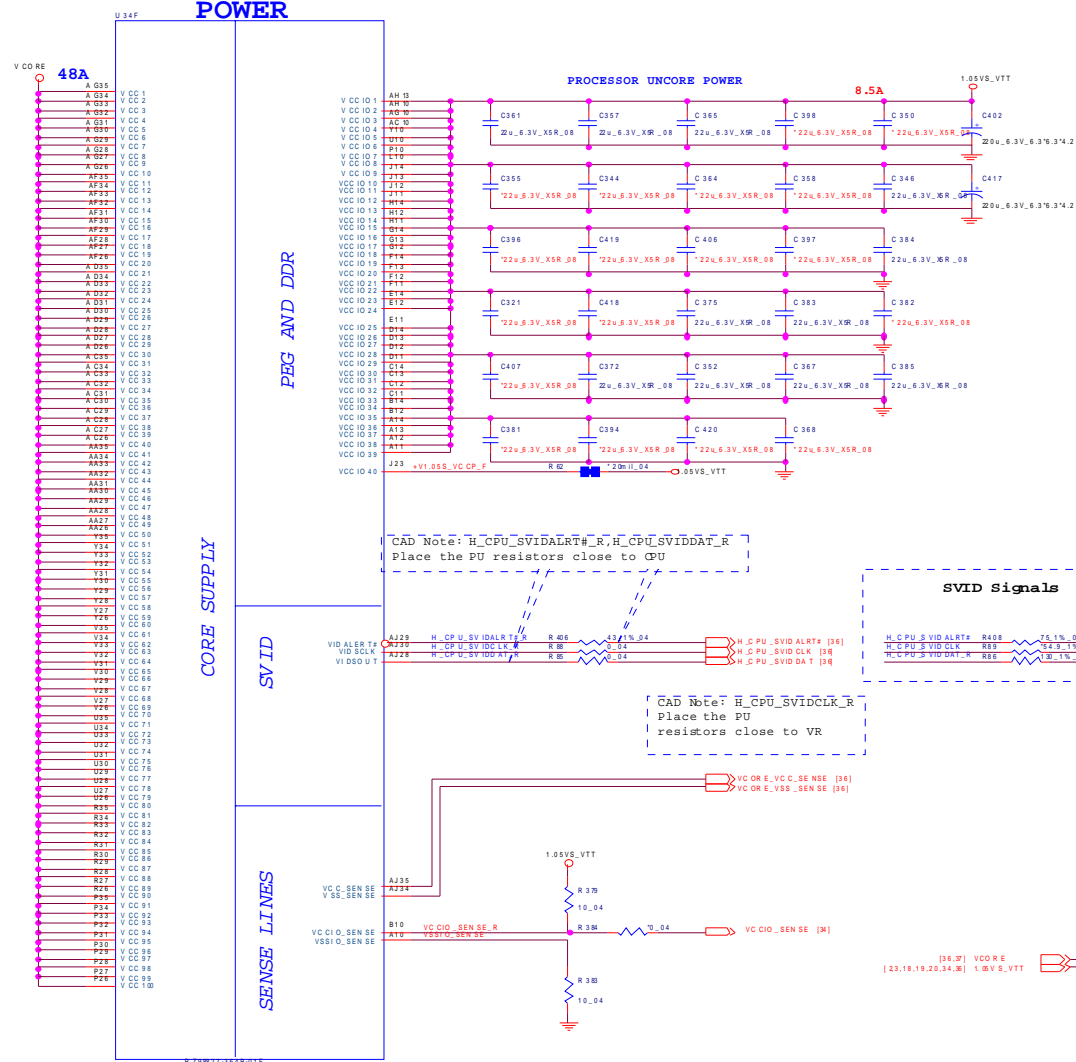



CPU 5/7 (Graphics Power)

Sandy Bridge Processor 5/7 (GRAPHICS POWER)

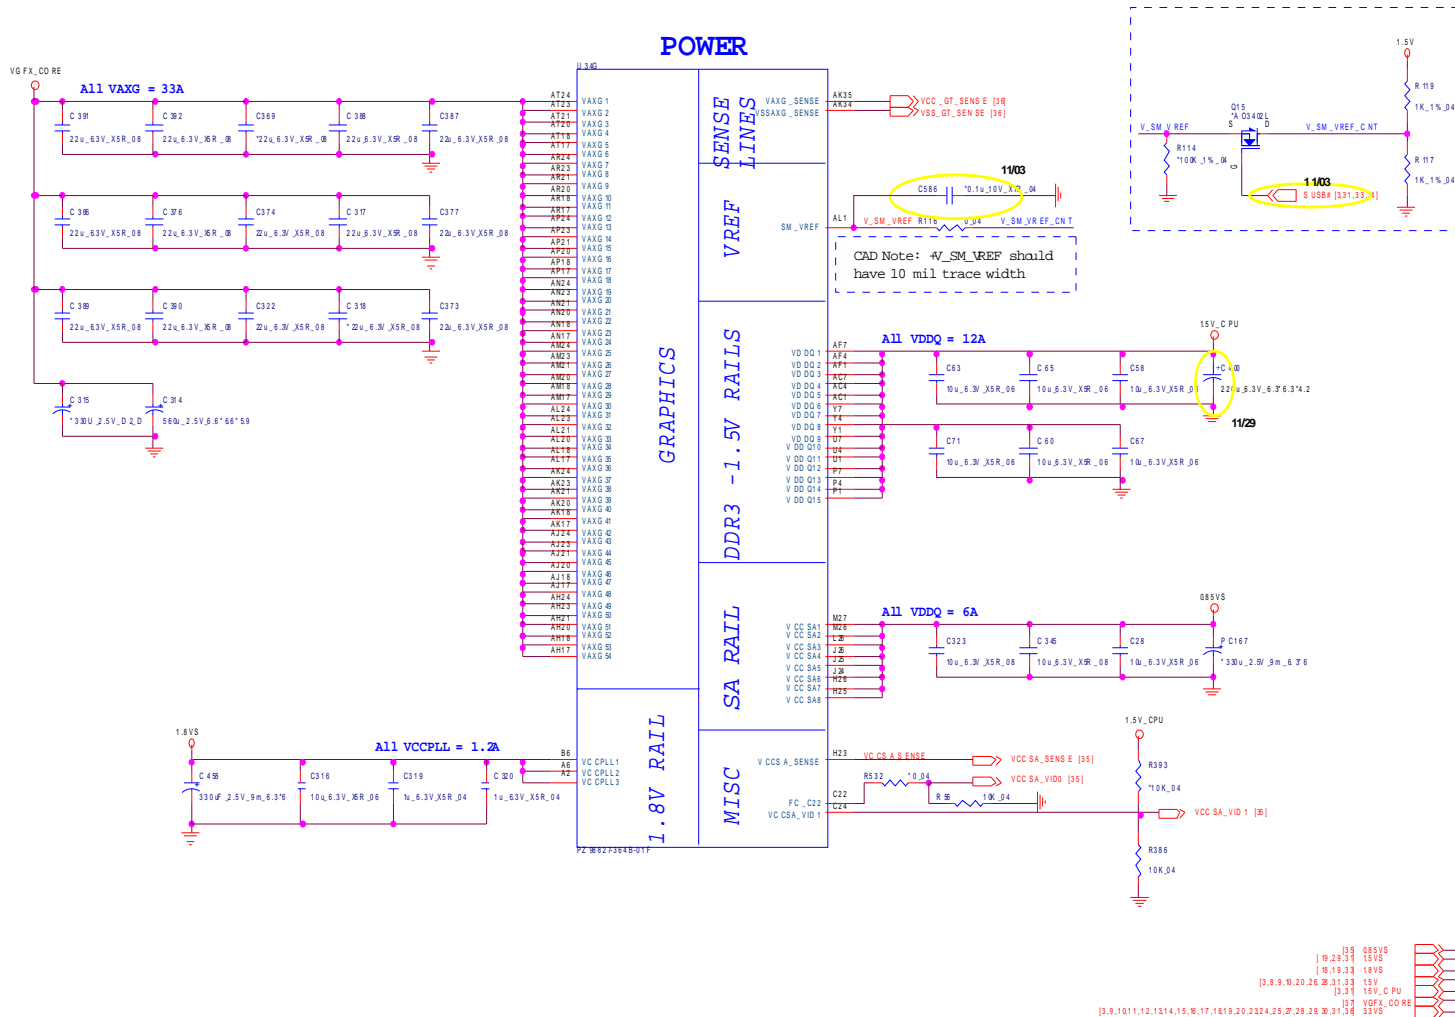

Sheet 6 of 43
CPU 5/7
(Graphics Power)

Sandy Bridge Processor 6/7 (GND)

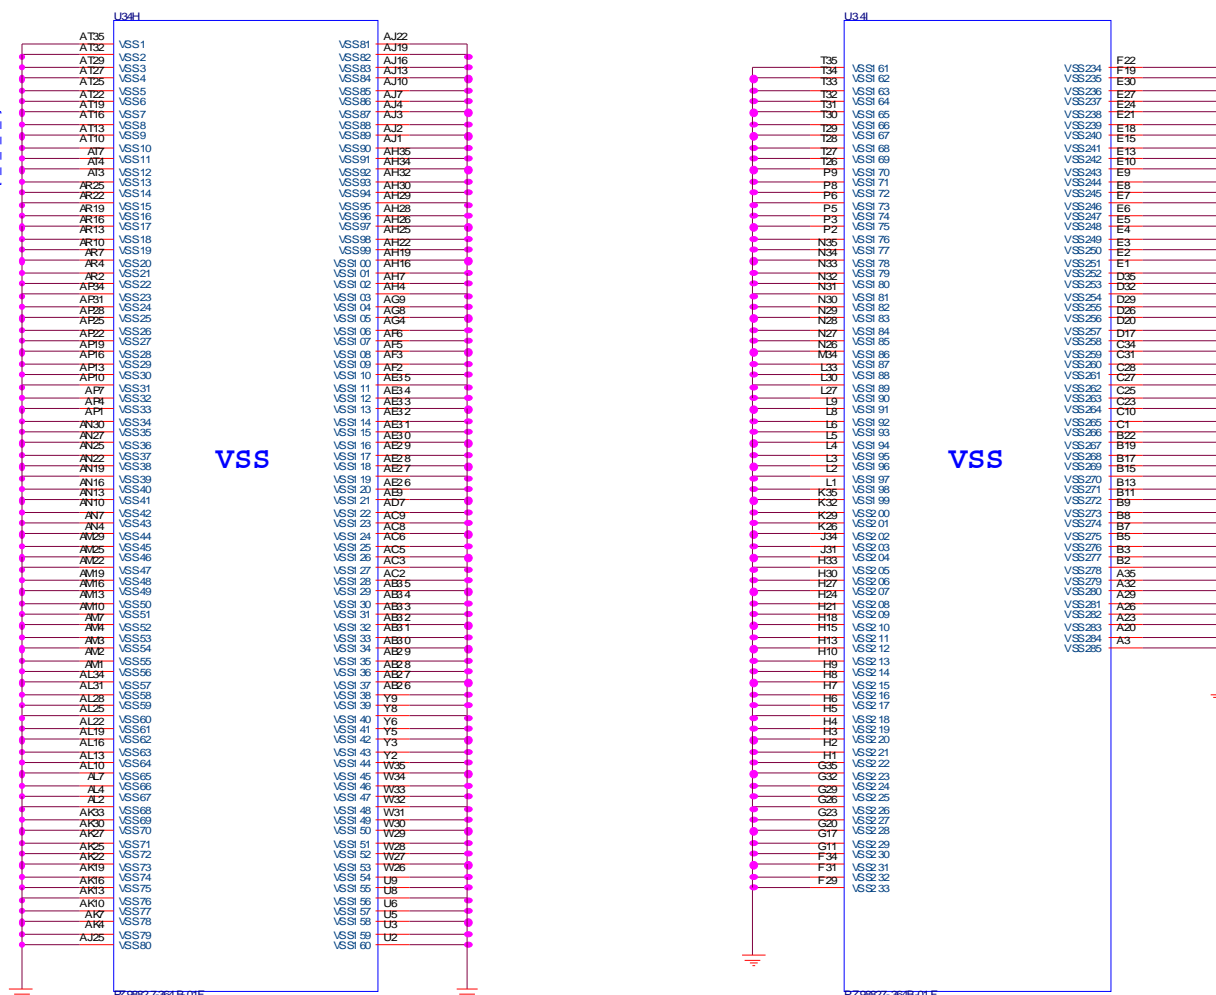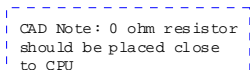

CPU 7/7 (RESERVED)

Sandy Bridge Processor 7/7
(RESERVED)

CFG Straps for Processor

PEG Static Lane Reversal - CFG2 is for the 16x

CFG2	1:(Default) Normal Operation/ Lane # definition matches socket pin map definition 0:Lane Reversed
------	--

CFG2 R111 1K,04

Display Port Presence Strap

CFG4	1:(Default) Disabled; No Physical Display Port attached to Embedded Display Port 0:Enabled; An external Display Port device is connected to the Embedded Display Port
------	--

CFG4 R110 1K,04

PCIe Port Bifurcation Straps

CFG[6:5]	11: (Default) x16 - Device 1 functions 1 and 2 disabled 10: x8, x8 - Device 1 function 1 enabled ; function 2 disabled 01: Reserved - (Device 1 function 1 disabled ; function 2 enabled) 00: x8,x4,x4 - Device 1 functions 1 and 2 enabled
----------	--


CFG5 R88 1K,04

CFG6 R89 1K,04

PEG DEFER TRAINING

CFG7	1: (Default) PEG Train immediately following xxRESETB de assertion 0: PEG Wait for BIOS for training
------	---

CFG7 R87 1K,04

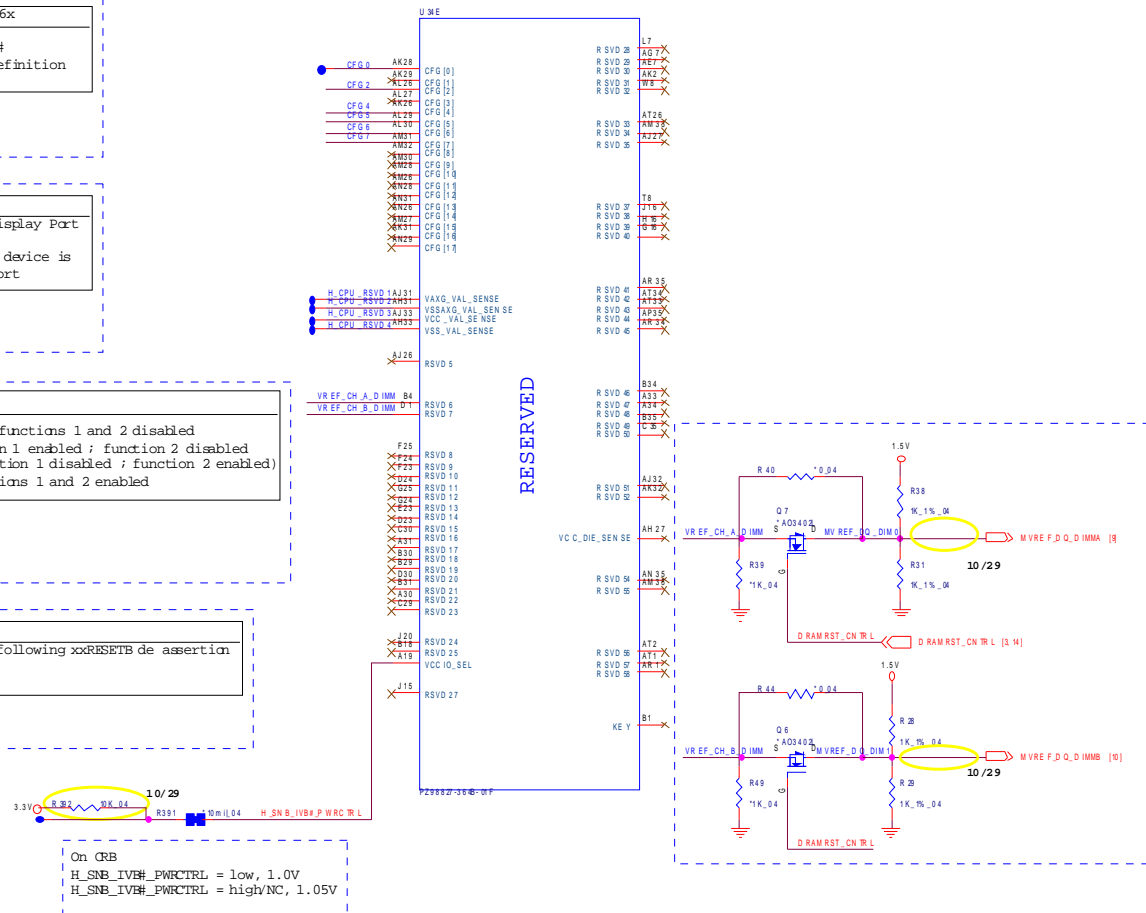
Sheet 8 of 43
CPU 7/7
(RESERVED)

DDR3 SO-DIMM_0

SO-DIMM A

CHANGE TO STANDARD


Sheet 9 of 43
DDR3 SO-DIMM_0

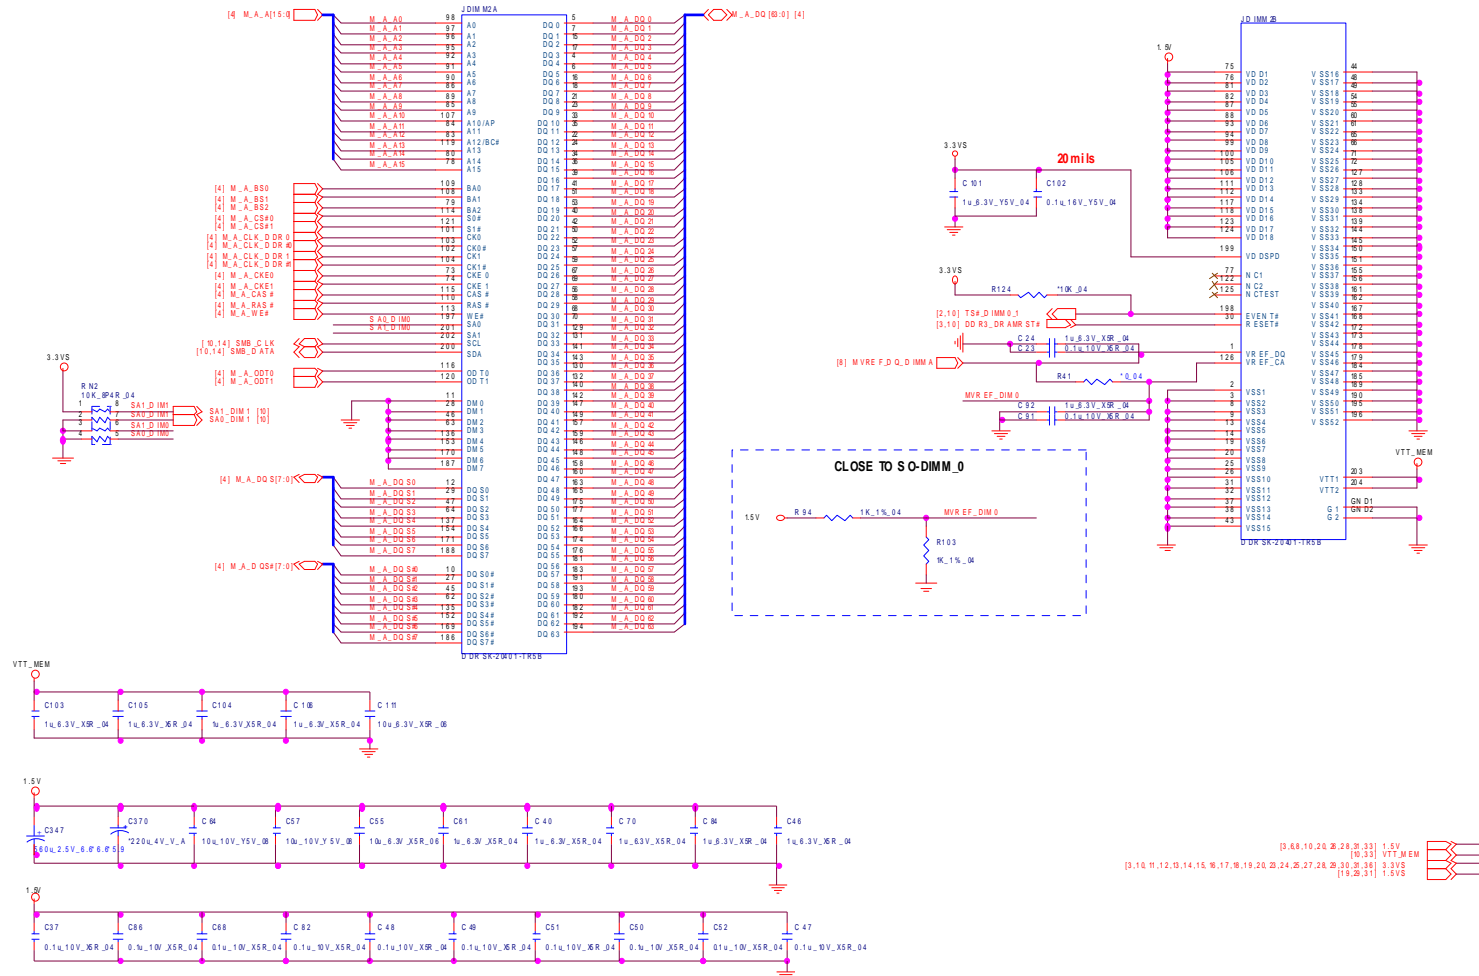

DDR3 SO-DIMM_1

SO-DIMM B

CHANGE TO STANDARD

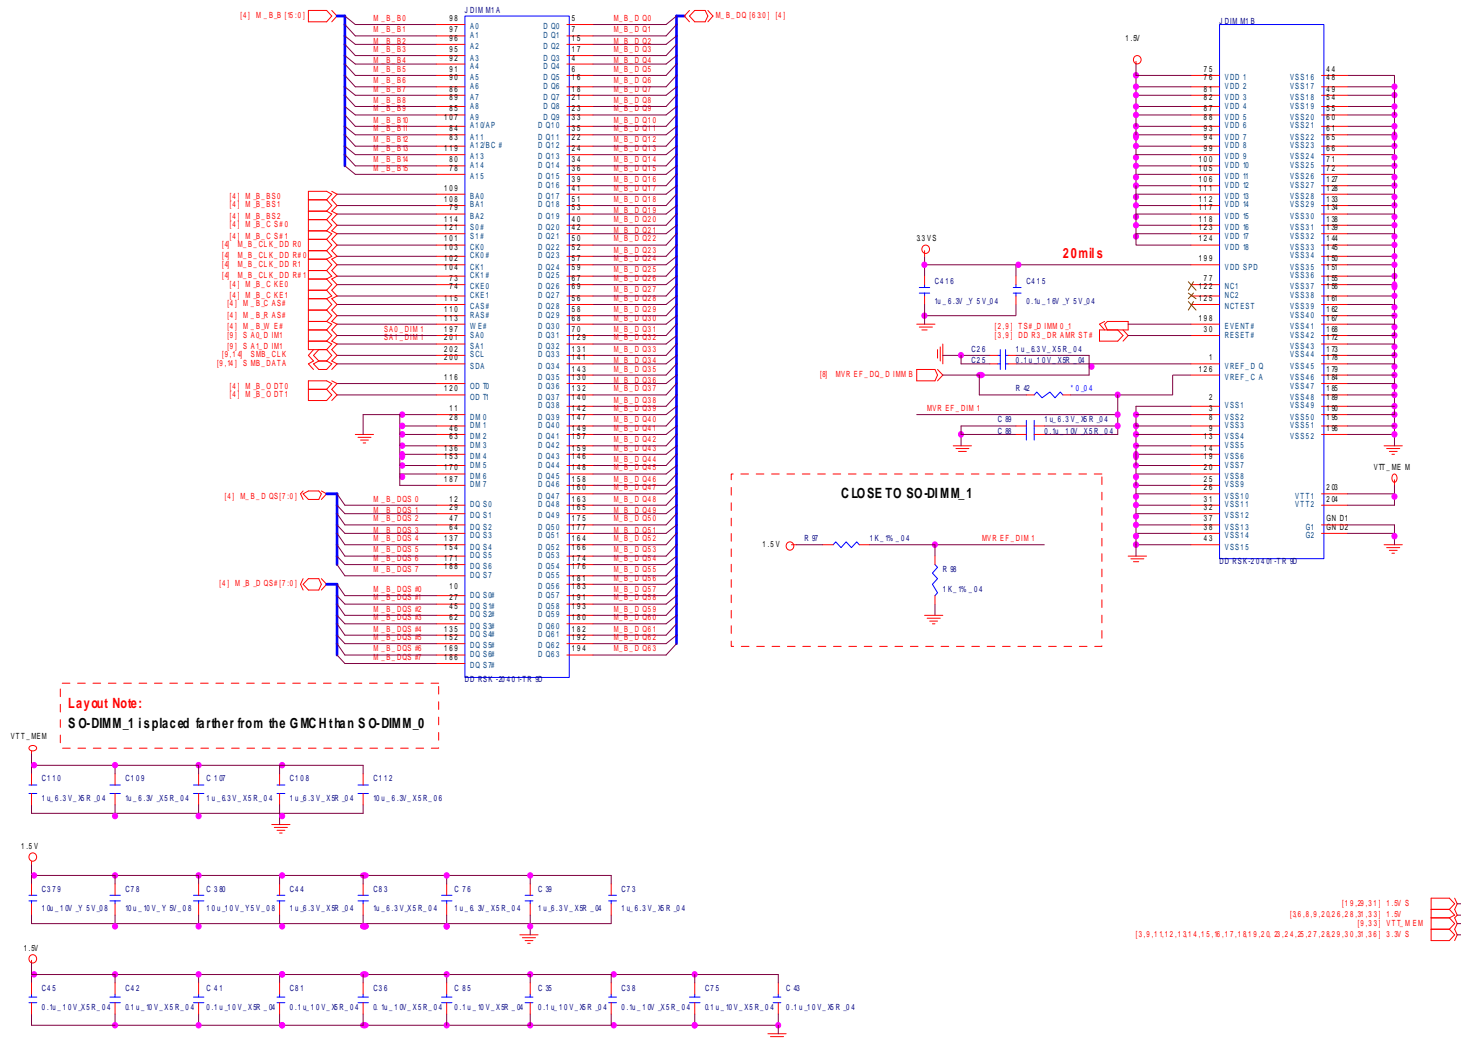


Schematic Diagrams


LVDS, Inverter

Sheet 11 of 43
LVDS, Inverter


PANEL CONNECTOR

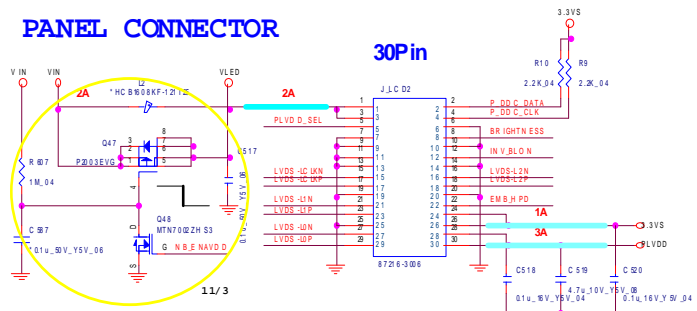


30Pin & 40 Pin Co-layer--LED PANEL.

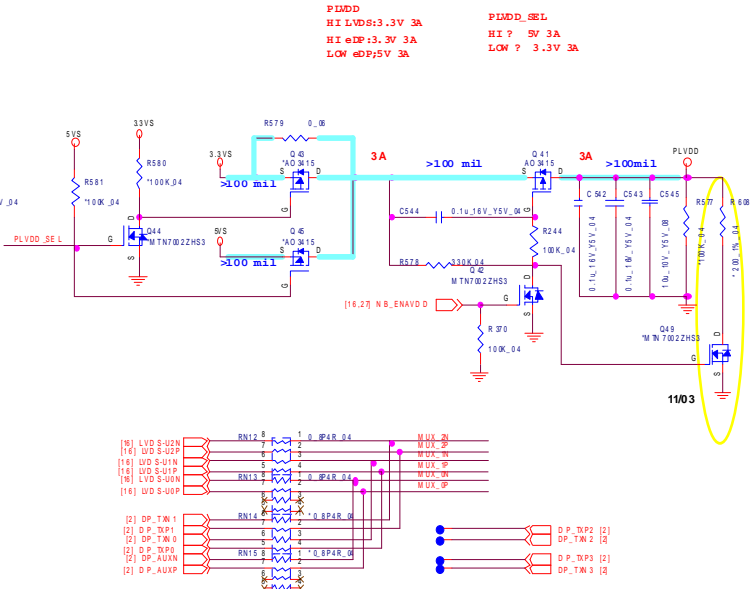


INVERTER CONNECTOR

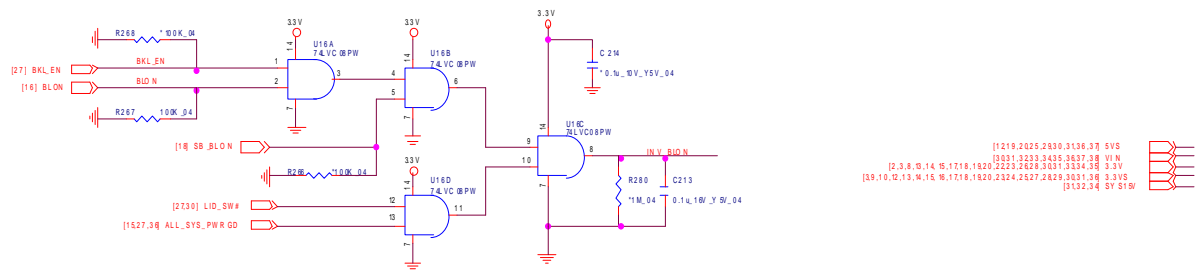

HDMI PORT

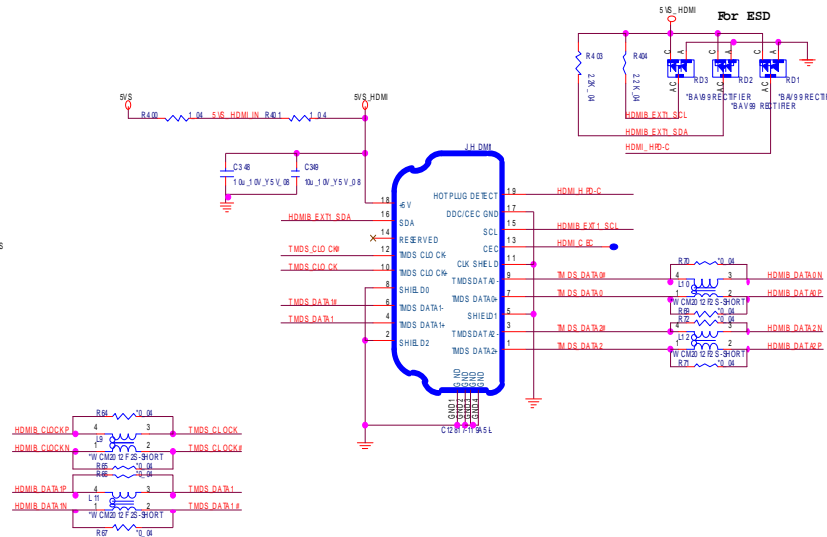


CRT PORT

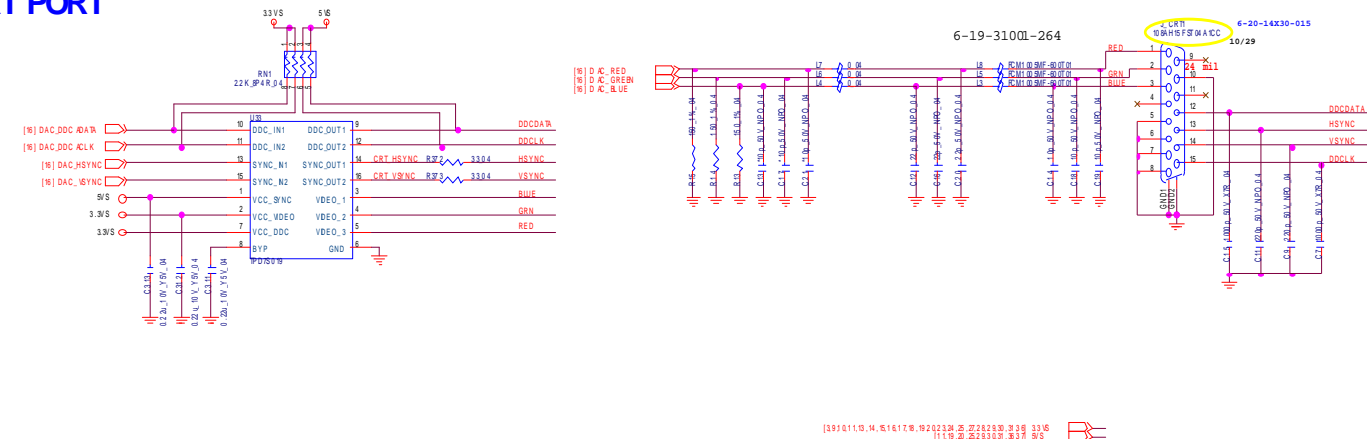


CougarPoint - M 1/9


Sheet 13 of 43
CougarPoint - M 1/9

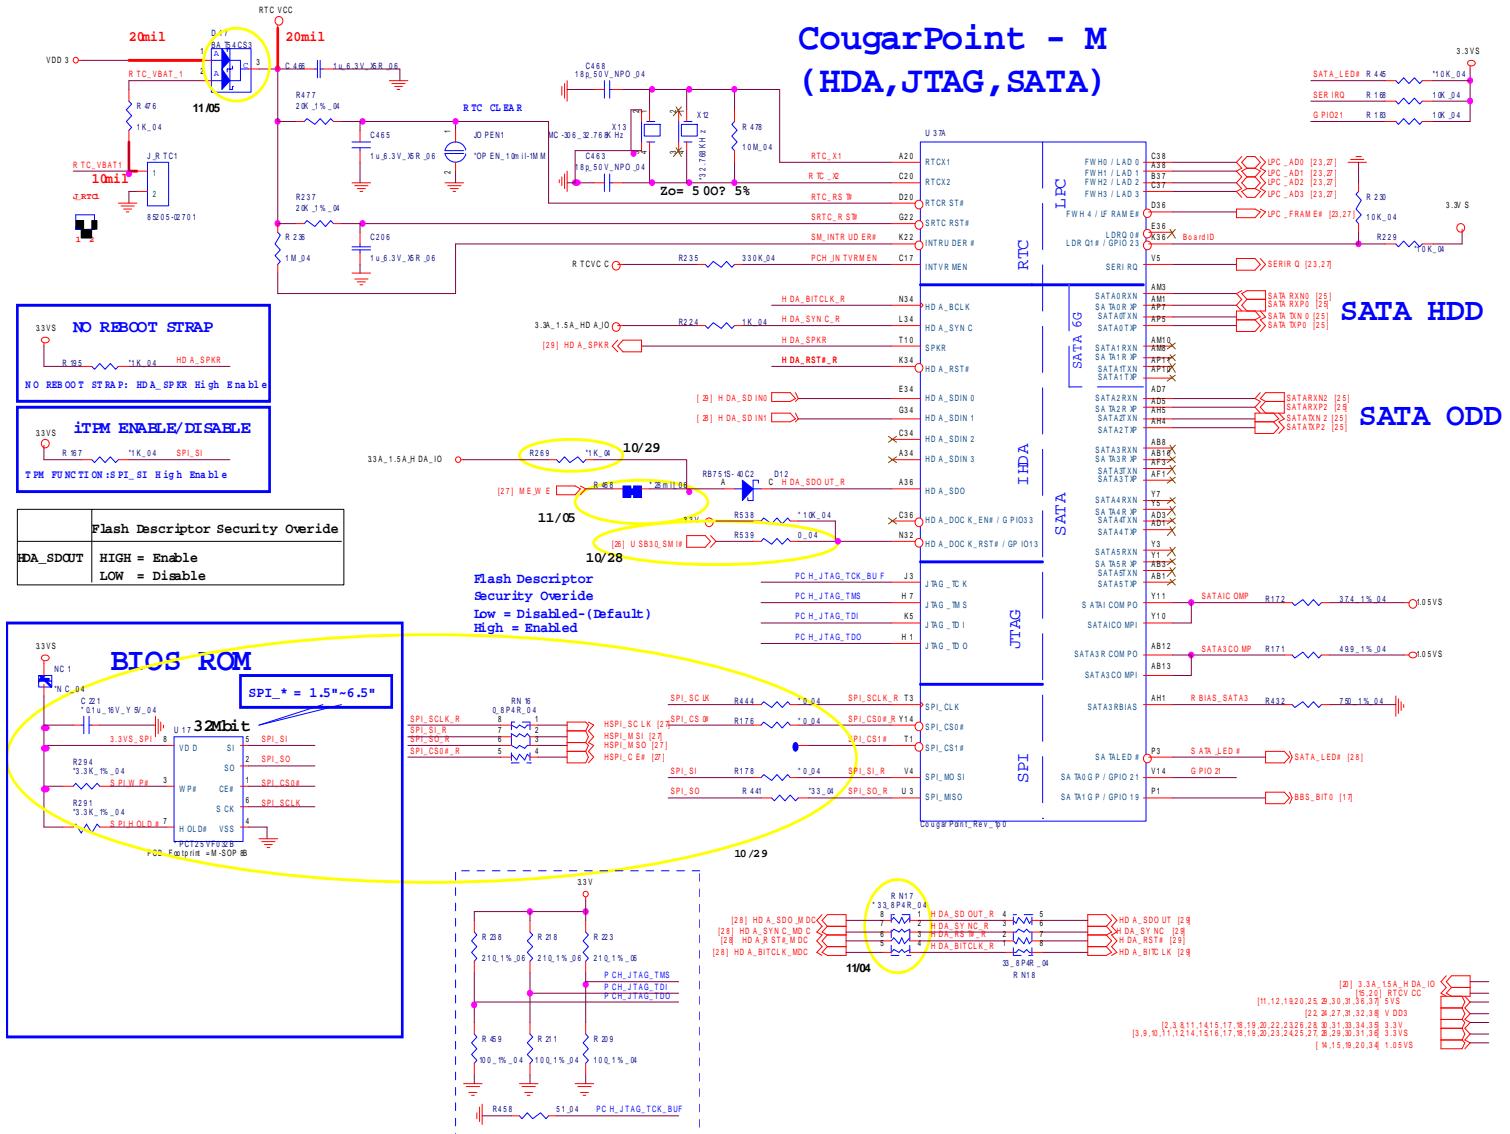

CougarPoint - M (PCI-E,SMBUS,CLK)

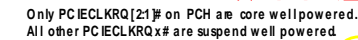





B.Schematic Diagrams

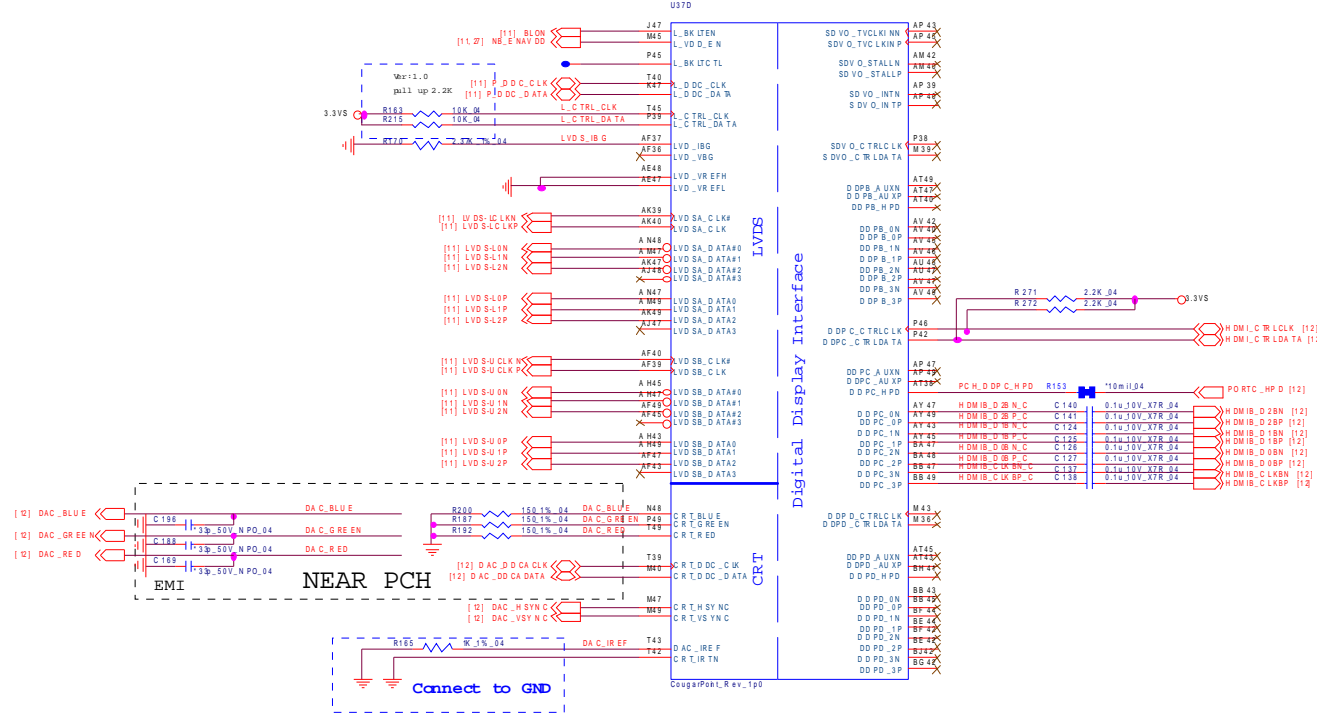

[3,9,10,11,12,13,14,15,17,18,19,20,23,24,25,27,28,29,30,31,36] 3.3V

CougarPoint -M (PCI,USB,NVRAM)

B - 18 CougarPoint - M 5/9

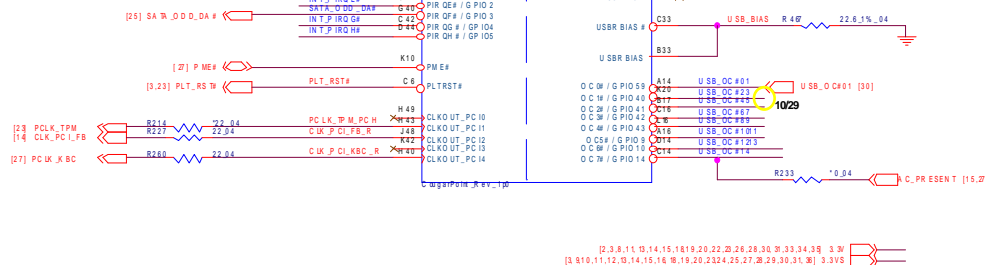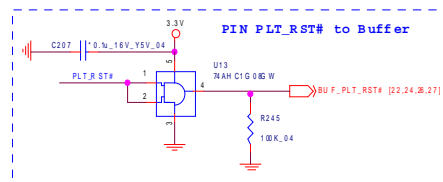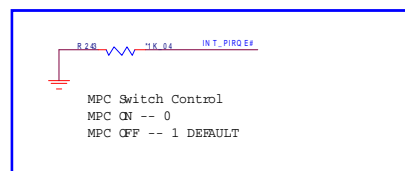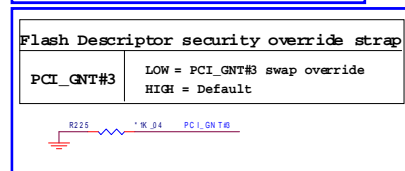

BIOS RECOVERY
DISABLE -- R349 NO STUFF (DEFAULT)
ENABLE -- R349 STUFF

Internal GFX: Low (Default)
External GFX: High

INTEGRATE CLOCK
DISABLE -- R465 NO STUFF (DEFAULT)
ENABLE -- R465 STUFF

33V

R450 10K_04 BIOS_RE_C

R451 10K_04 GFX_CR_B_DET

33V

R484 10K_04

R465 1K_04 ICC_ENW

33V

R482 1K_04 HOST_ALERT#1

R481 10K_04 HOST_ALERT#2

R483 10K_04 HOST_PWD#

10/28

33V5

R_N8 10K_SPM_04

1 1 5 SC_IH

2 1 7 SWIF

4 1 3 KB_C_RS_W

R_17S 10K_04 S_GPIO

R_56 22K_04 SATA_00_DP_PRT#

R_24 10K_04 DG_PU_H_PD_IN_T#

R_10 1K_04 SATA_00_DP_WRT#

R_65 10K_04 GPIO34

R_66 10K_04 CR_1_TEMP_REF#

R_48 10K_04 DG_PU_PW_RD#

R_62 10K_04 SATA_DET#

R_194 1K_04 PLL_00_VR_EN


R_201 100K_04 FDI_OVR_VLTO

[illegible]

[2,35,19,20,34,36] 1.05VS_VTT
[6,19,33] 1.6VS
[2,3,8,11,13,14,15,17,19,20,22,23,26,28,30,31,33,34,35] 3.3V
[3,9,10,11,12,13,14,15,16,17,19,20,23,24,25,27,28,29,30,31,36] 3.3VS

CougarPoint - M 7/9


CougarPoint -M (POWER)

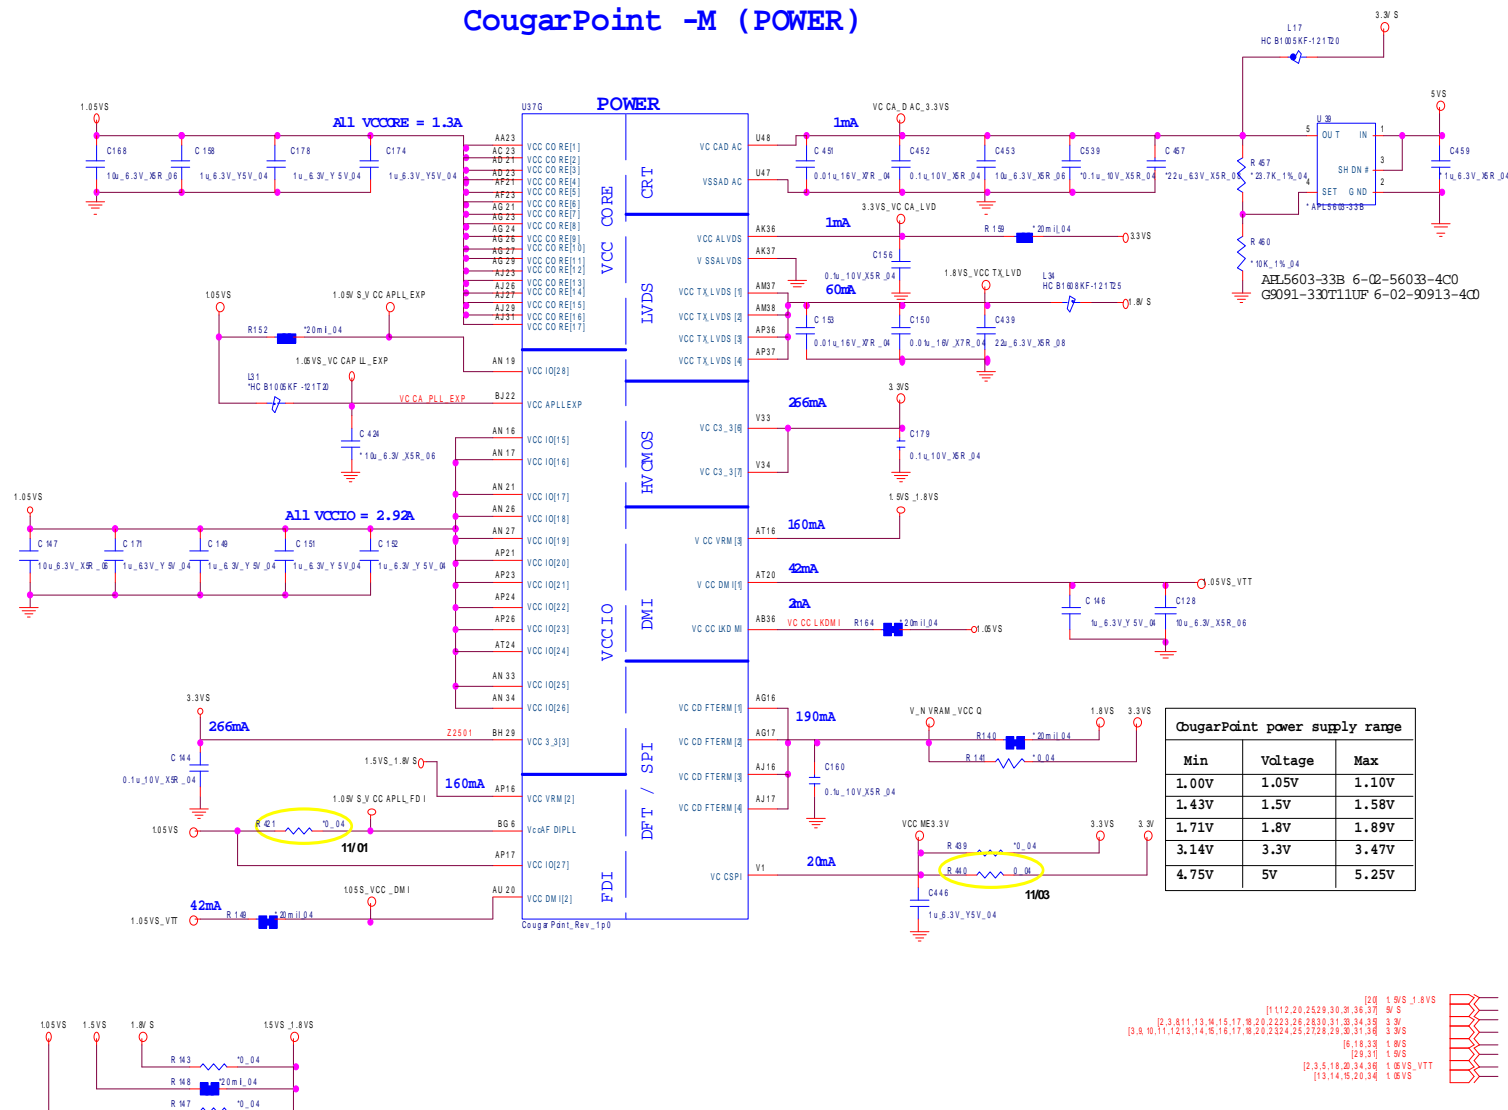

CougarPoint - M 8/9

CougarPoint power supply range		
Min	Voltage	Max
1.00V	1.05V	1.10V
1.43V	1.5V	1.58V
1.71V	1.8V	1.89V
3.14V	3.3V	3.47V
4.75V	5V	5.25V

CougarPoint - M (POWER)

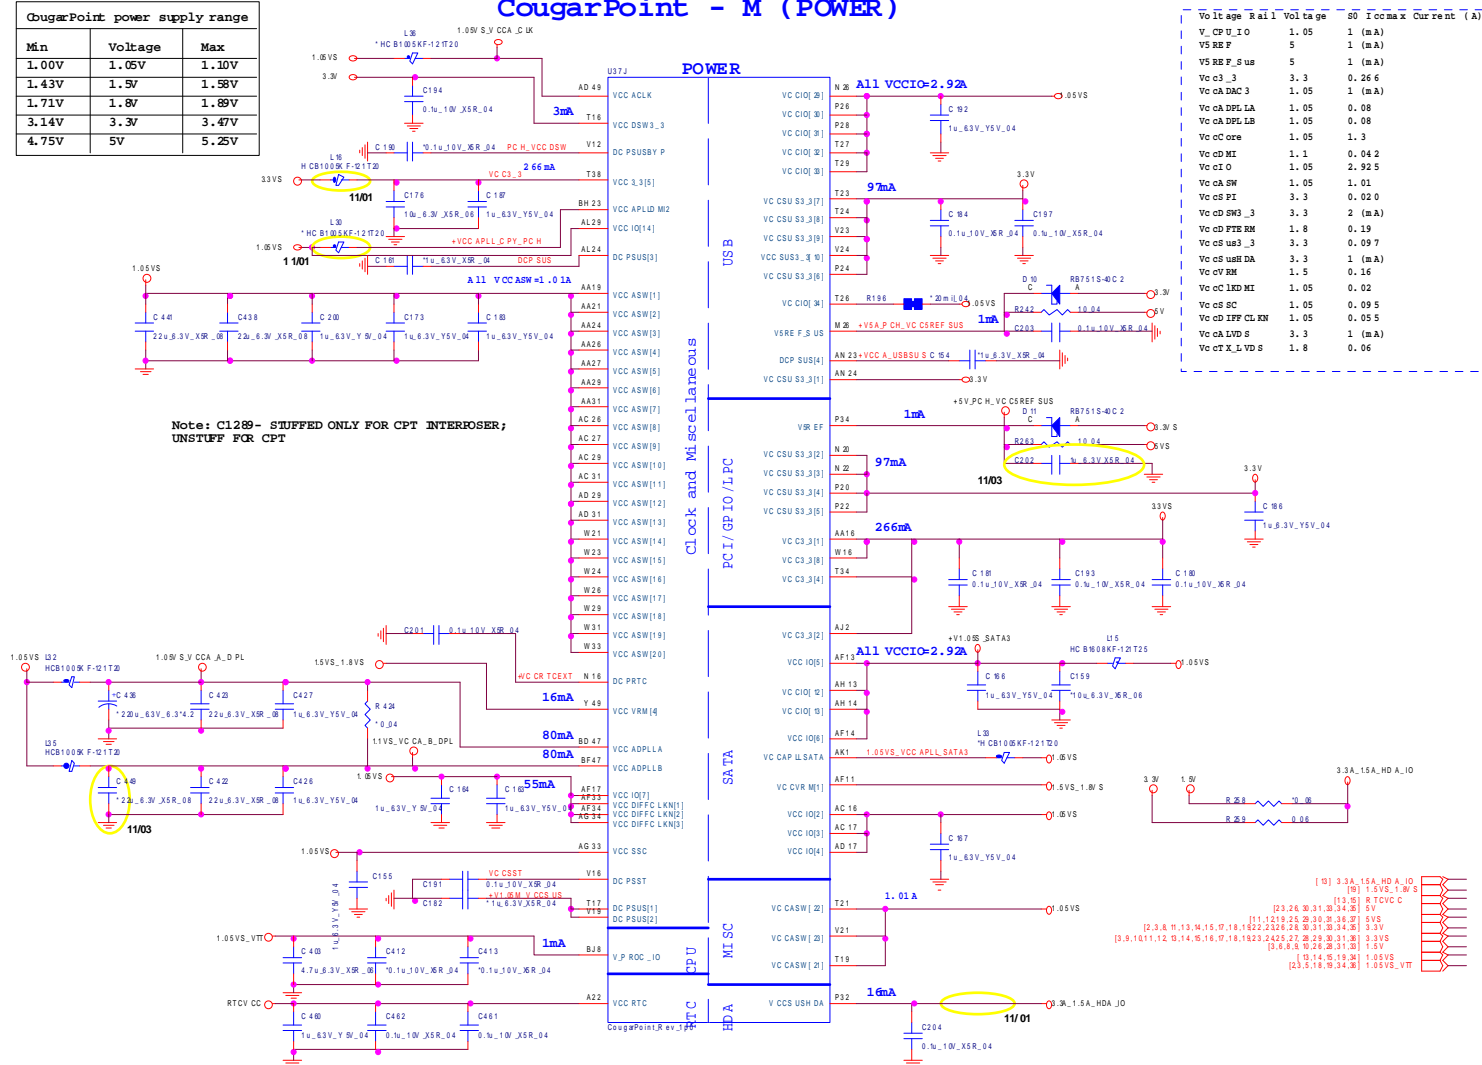


Sheet 20 of 43
CougarPoint - M 8/9

CougarPoint - M 9/9


CougarPoint -M (GND)

Sheet 21 of 43
CougarPoint - M 9/9

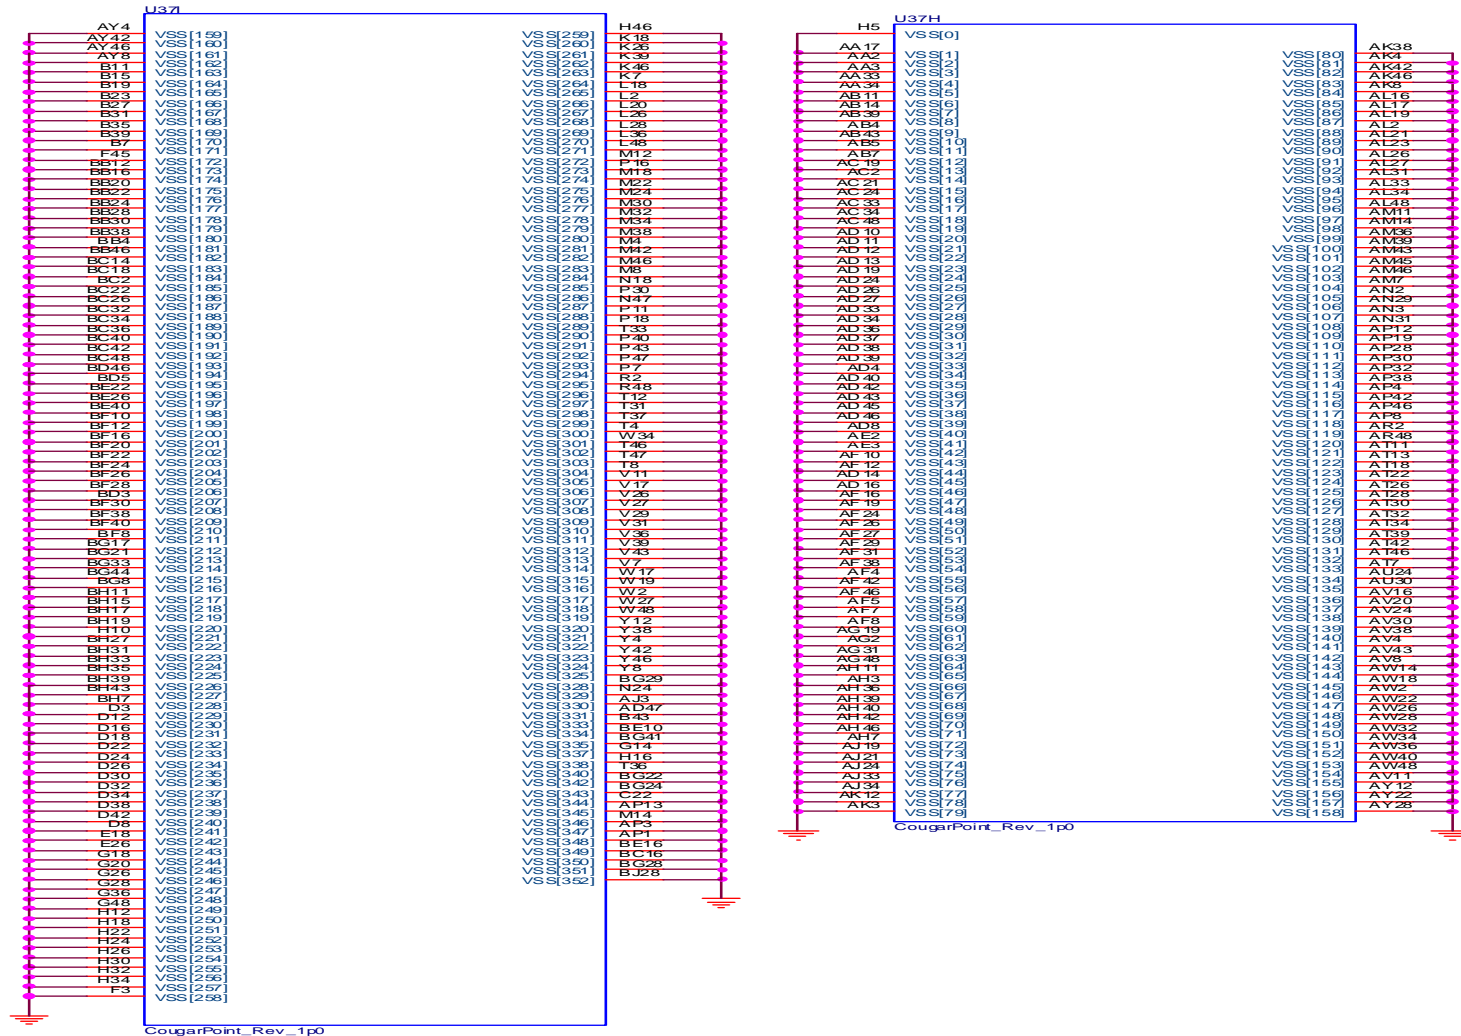

New Card, Mini PCIE


NEW CARD(Port 3)

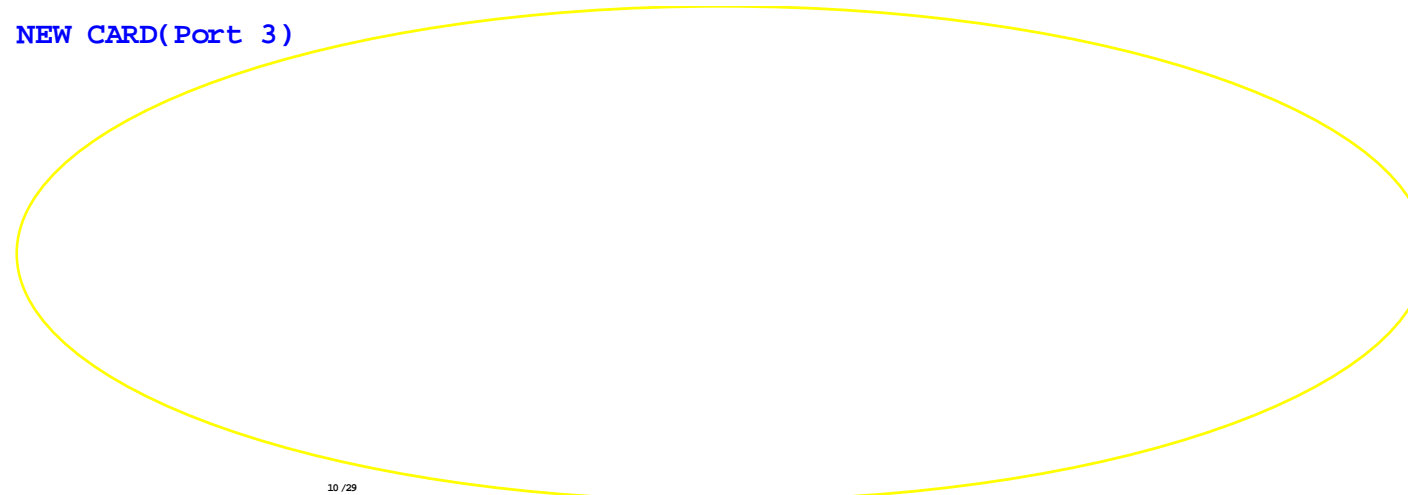

10/29

Sheet 22 of 43
New Card, Mini
PCIE


MINI CARD WLAN

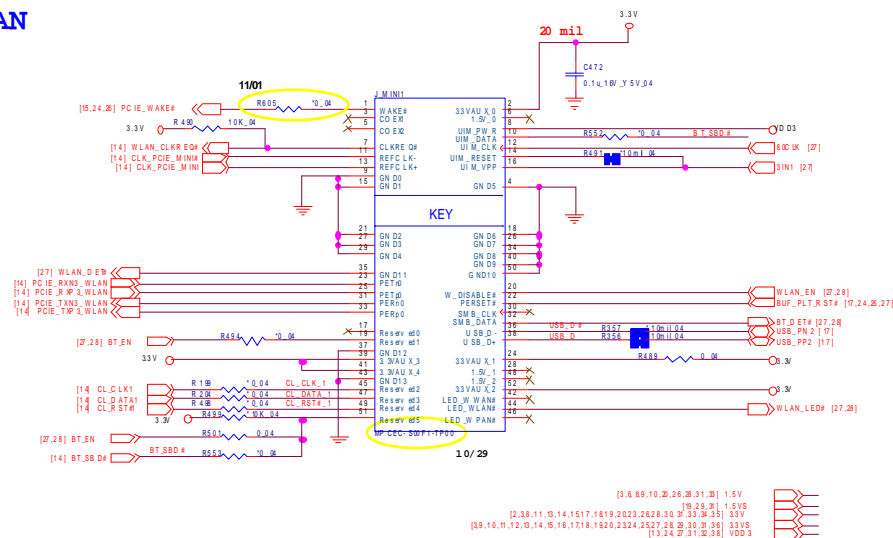


10/29

CCD, 3G, TPM


MINI CARD 3G (Port 6)

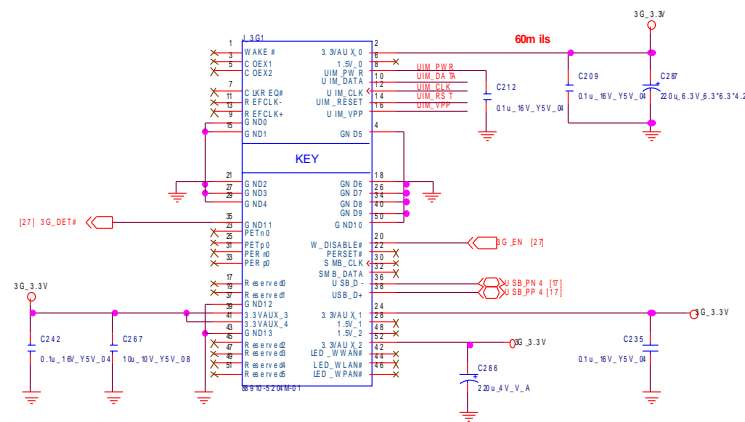

3G POWER

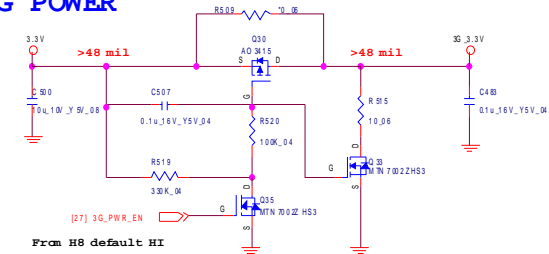

SIM CONN

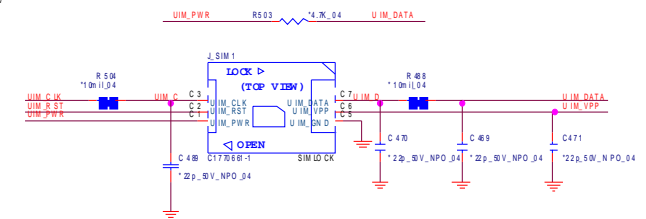


TPM 1.2


Asserted before entering S3

LPC reset timing:

LPCPD# inactive to LRST# inactive 32~96us

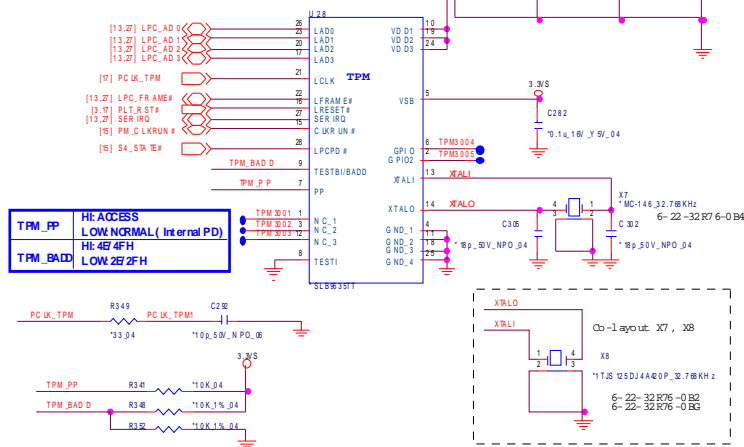

CCD

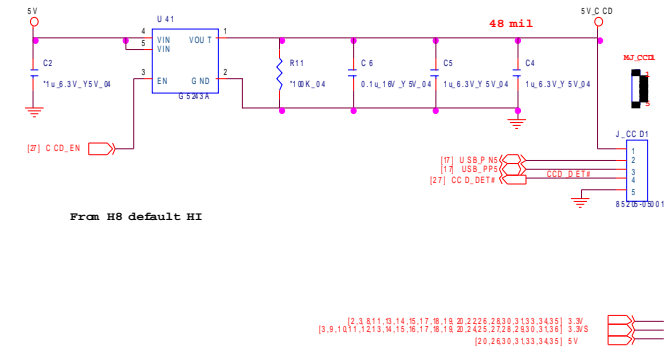


JMC251C





B.Schematic Diagrams

GIGA LAN (JMC251C)

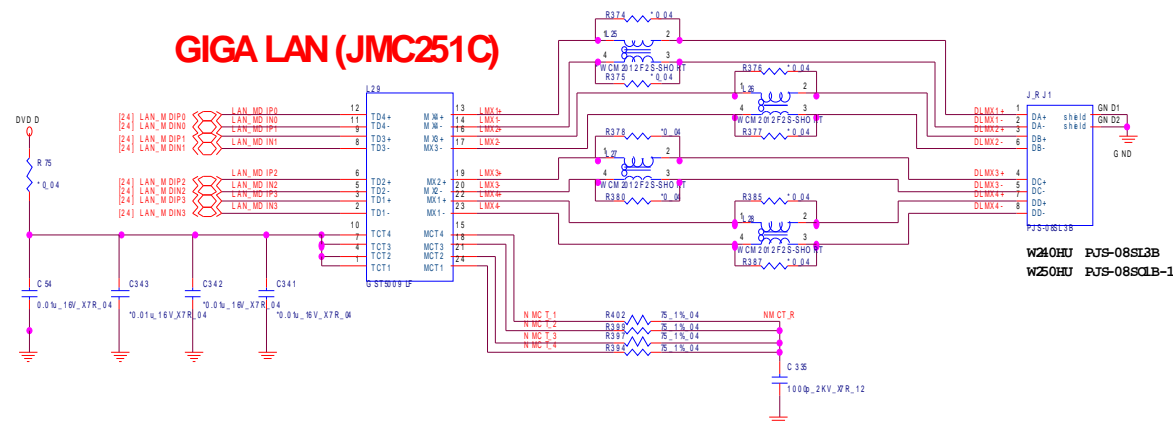


Sheet 25 of 43
LAN(JMC251C),
SATA HDD, ODD

SATA ODD

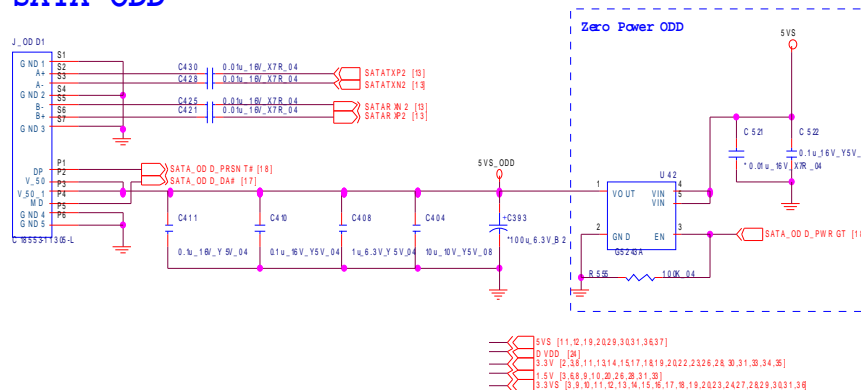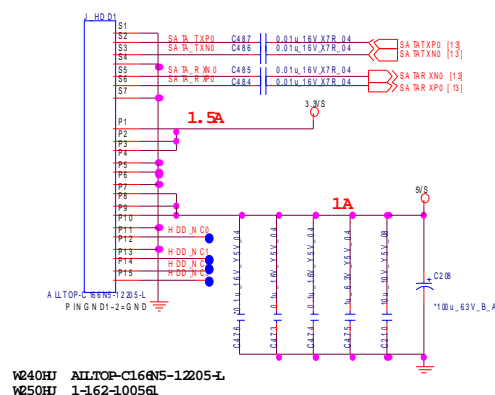

USB 2.0 Connector

PCH USB 2.0 Coonnector

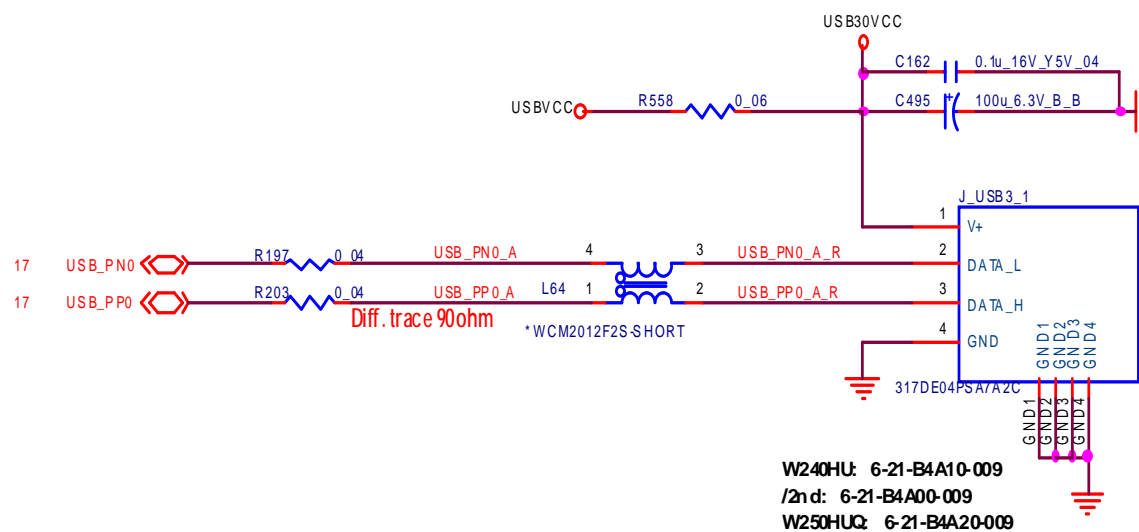

Sheet 26 of 43
USB 2.0 Connector


B.Schematic Diagrams

30 USBVCC


Schematic Diagrams

KBC-ITE IT8518


Sheet 27 of 43
KBC-ITE IT8518

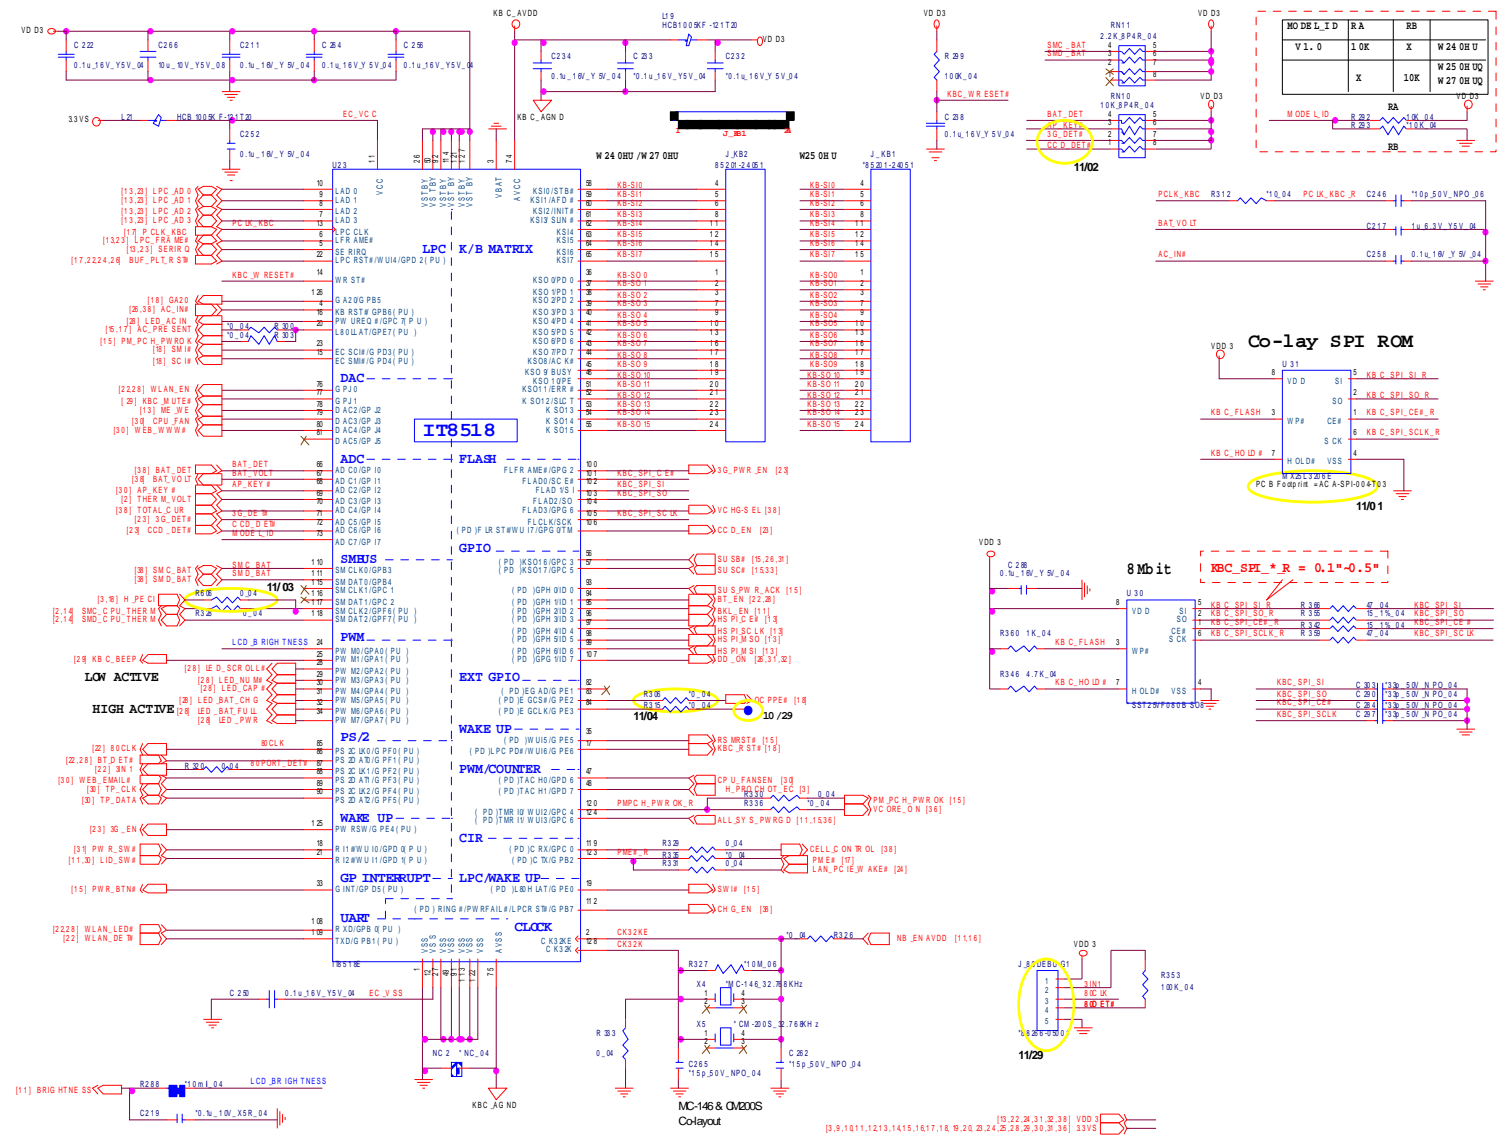




LED, MDC, BT

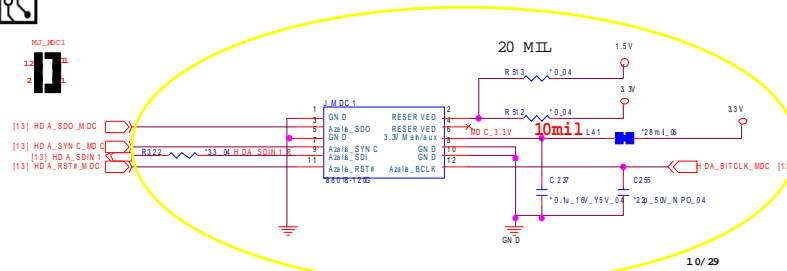

Bluetooth(Port8)

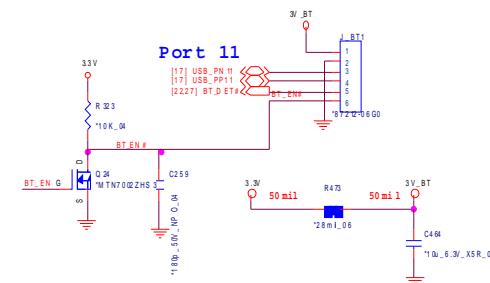

Sheet 28 of 43
LED, MDC, BT

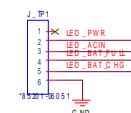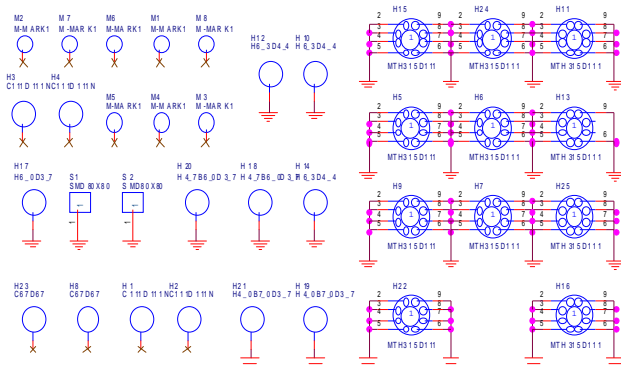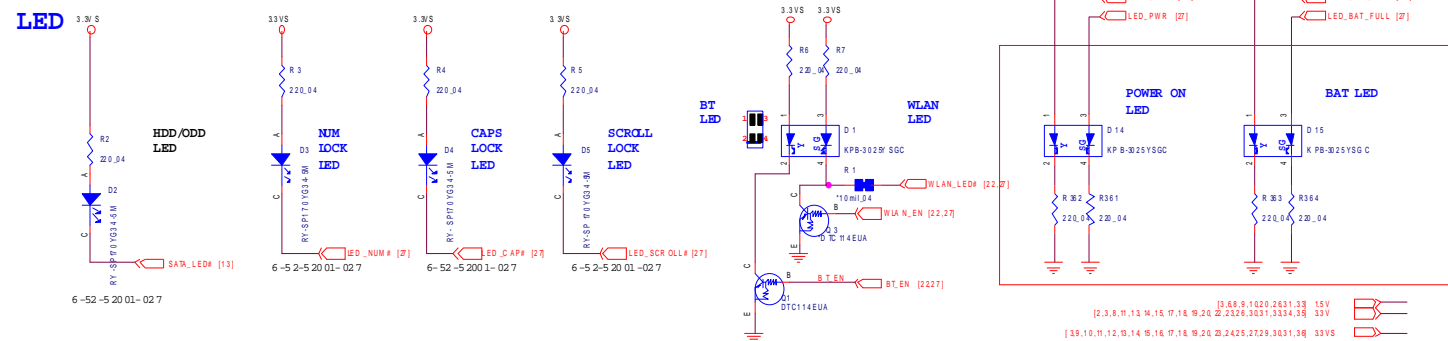


Schematic Diagrams

Audio Codec ALC269

AUDIO CODEC
ALC269 VB
VT1802P

75 Component.

Sheet 29 of 43
Audio Codec
ALC269

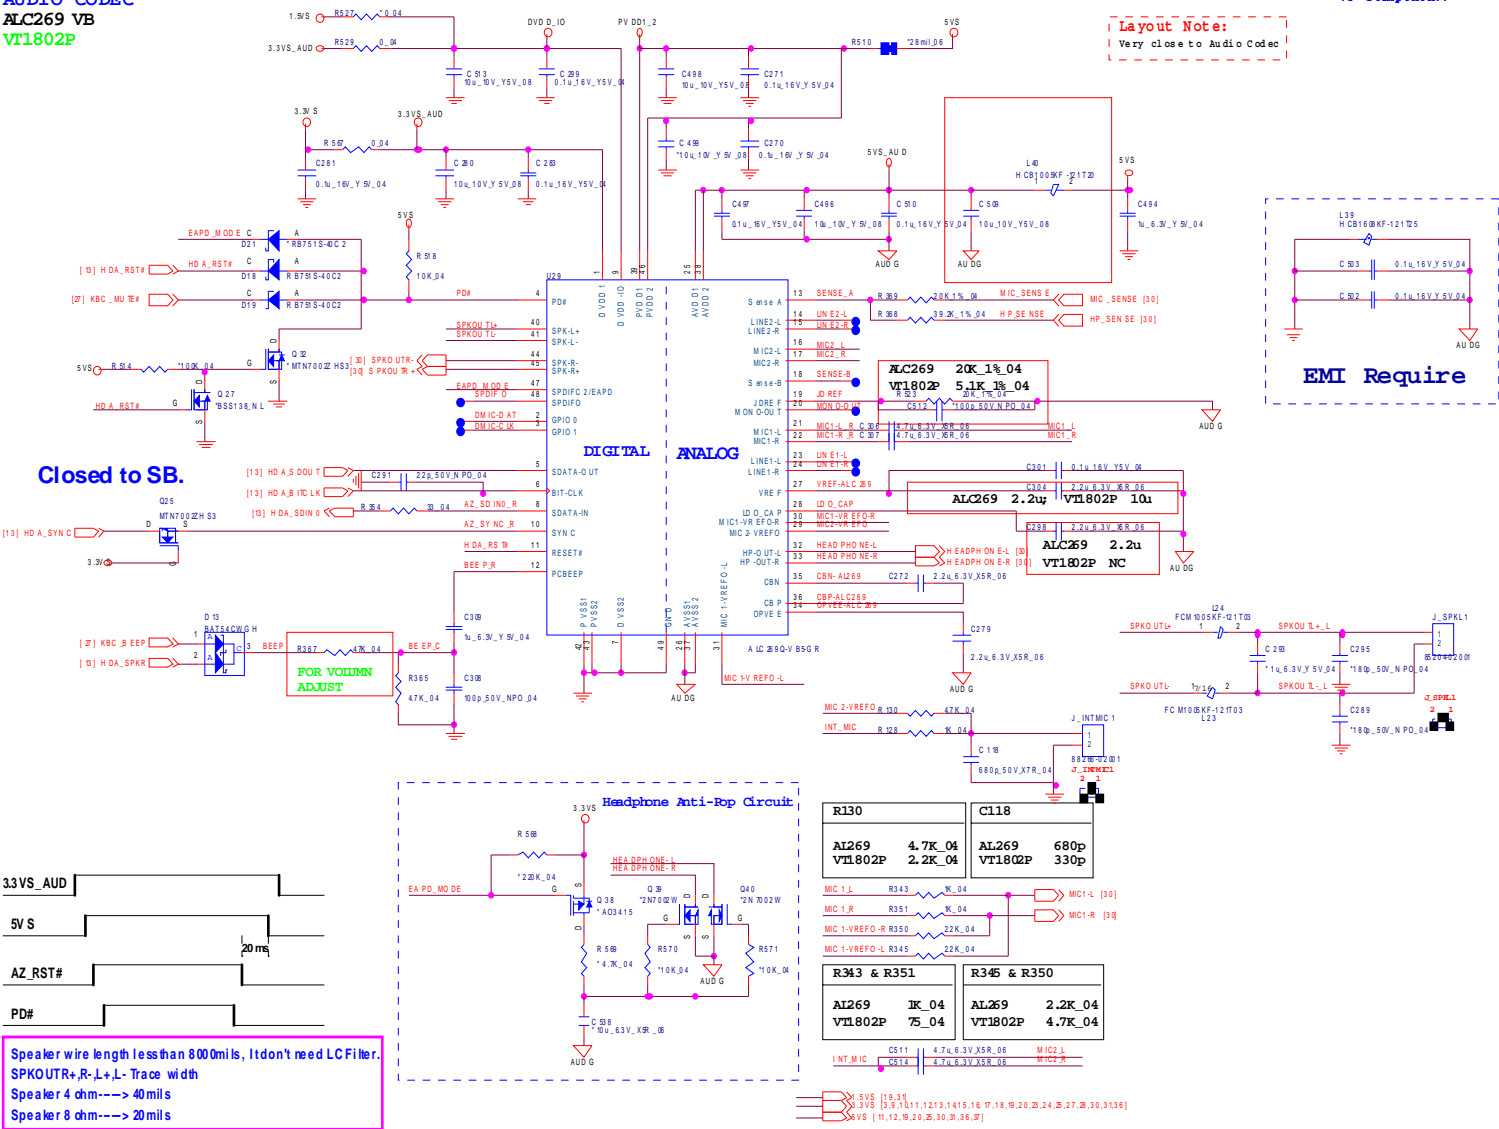

USB 2.0




W240HU 317DE04PSA7A2C
W250HU 1-284-800281-1



POWER SWITCH B'd CONN


[illegible]

CLOSE TO J_SW1

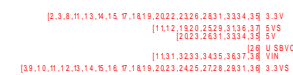

B.Schematic Diagrams

Sheet 31 of 43
5VS, 3VS, 1.05VS,
1.5VS CPU

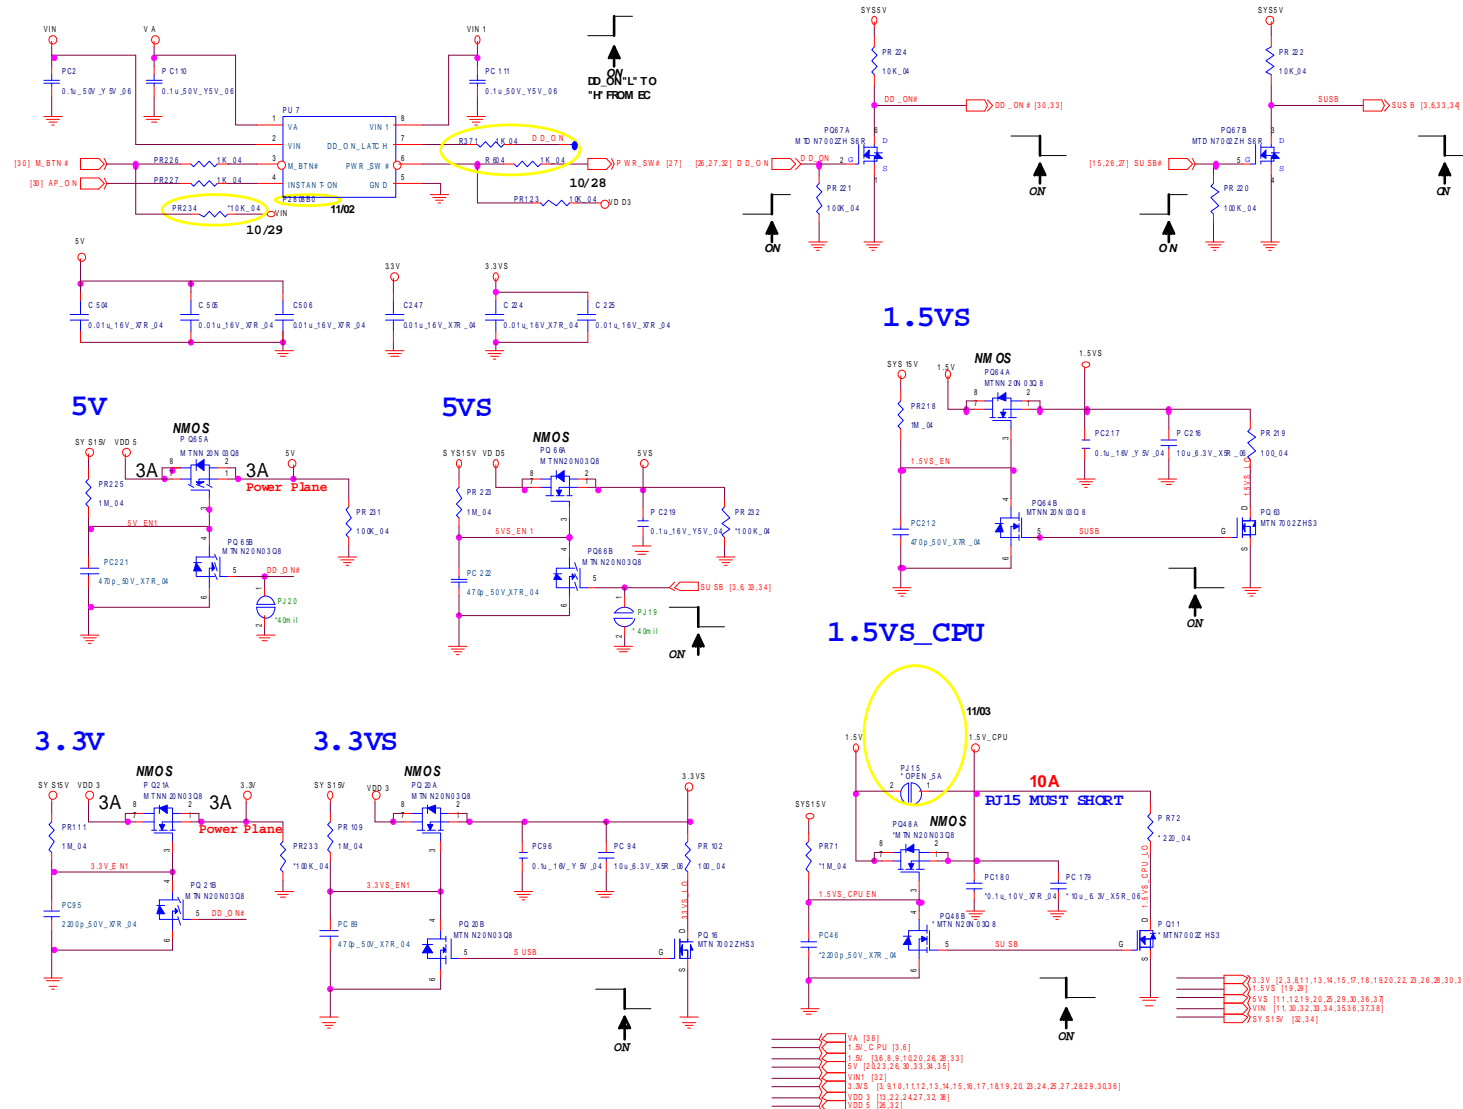


Sheet 32 of 43
VDD3, VDD5




B.Schematic Diagrams


Sheet 33 of 43
Power 1.5V/0.75V/
1.8VS

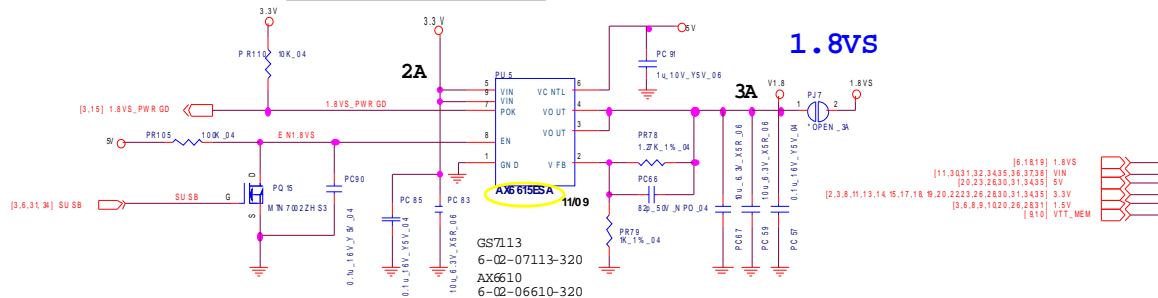


Power 1.05VS

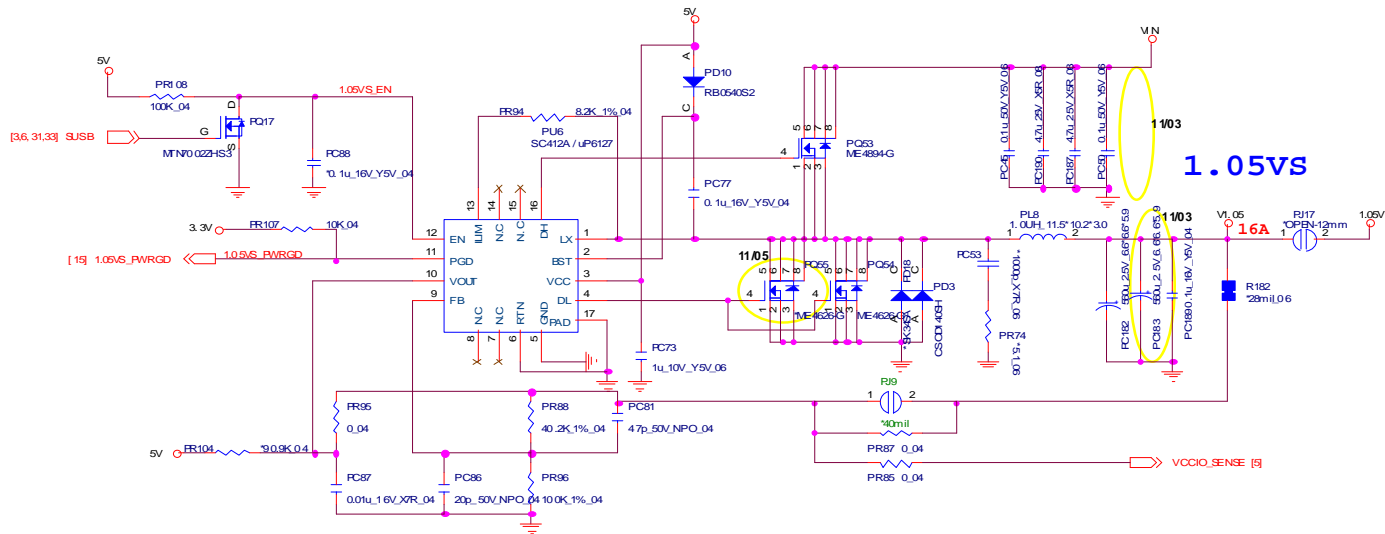

1.05VS_VTT

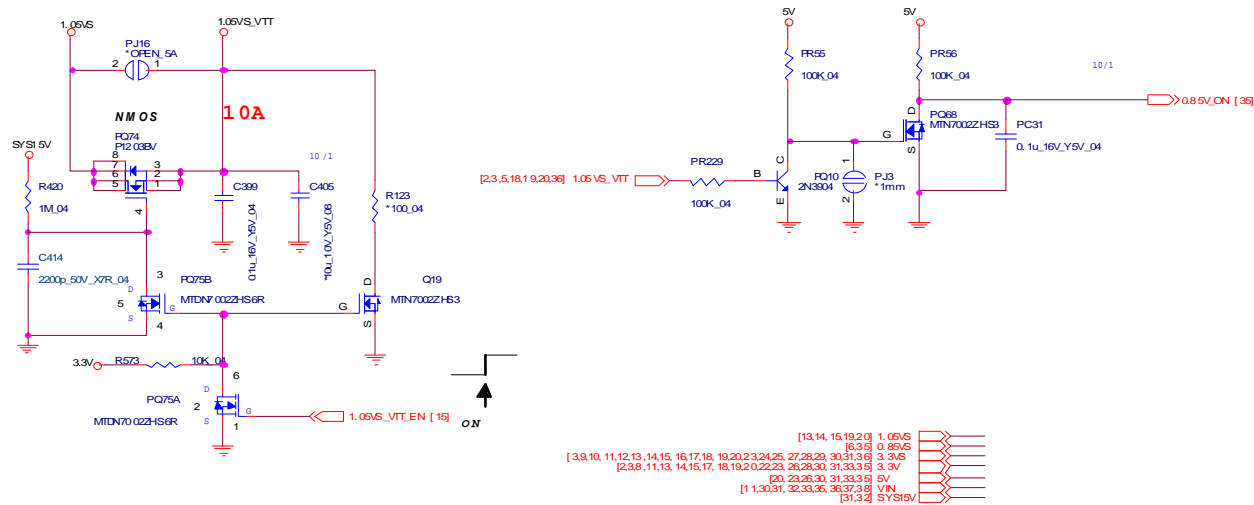

Sheet 35 of 43
Power 0.85VS

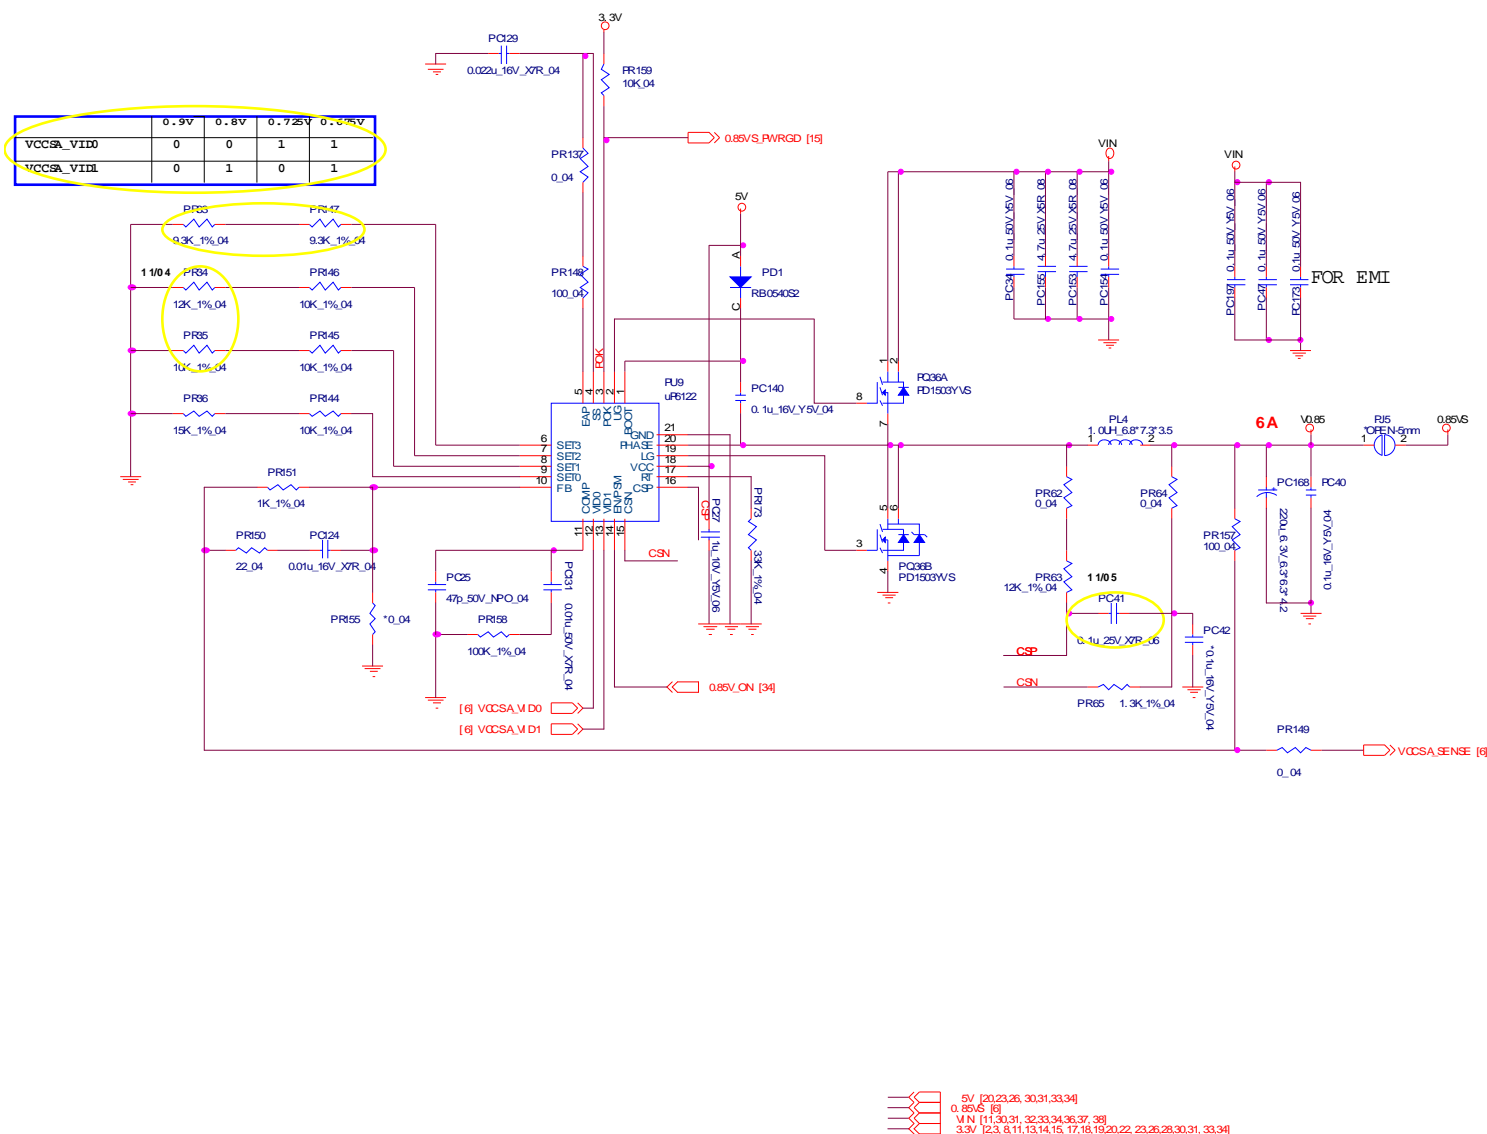


VCORE_1



Schematic Diagrams


Power V-Core2

Sheet 37 of 43
Power V-Core2

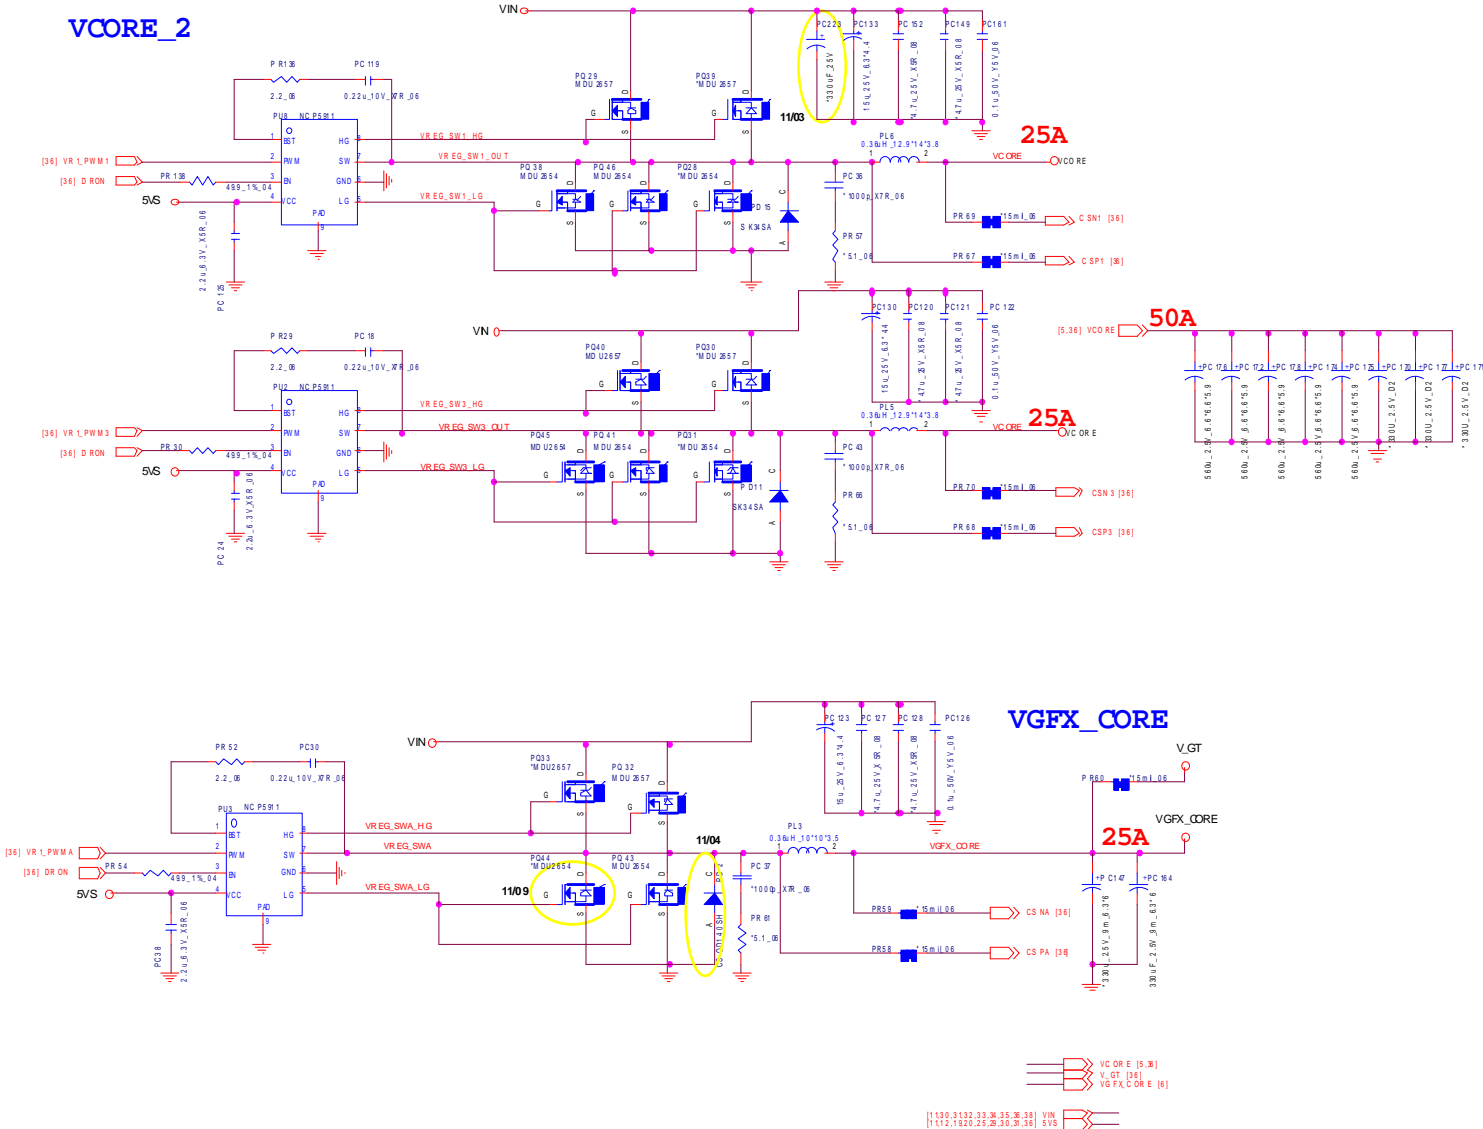

Charger, DC In

CHARGER

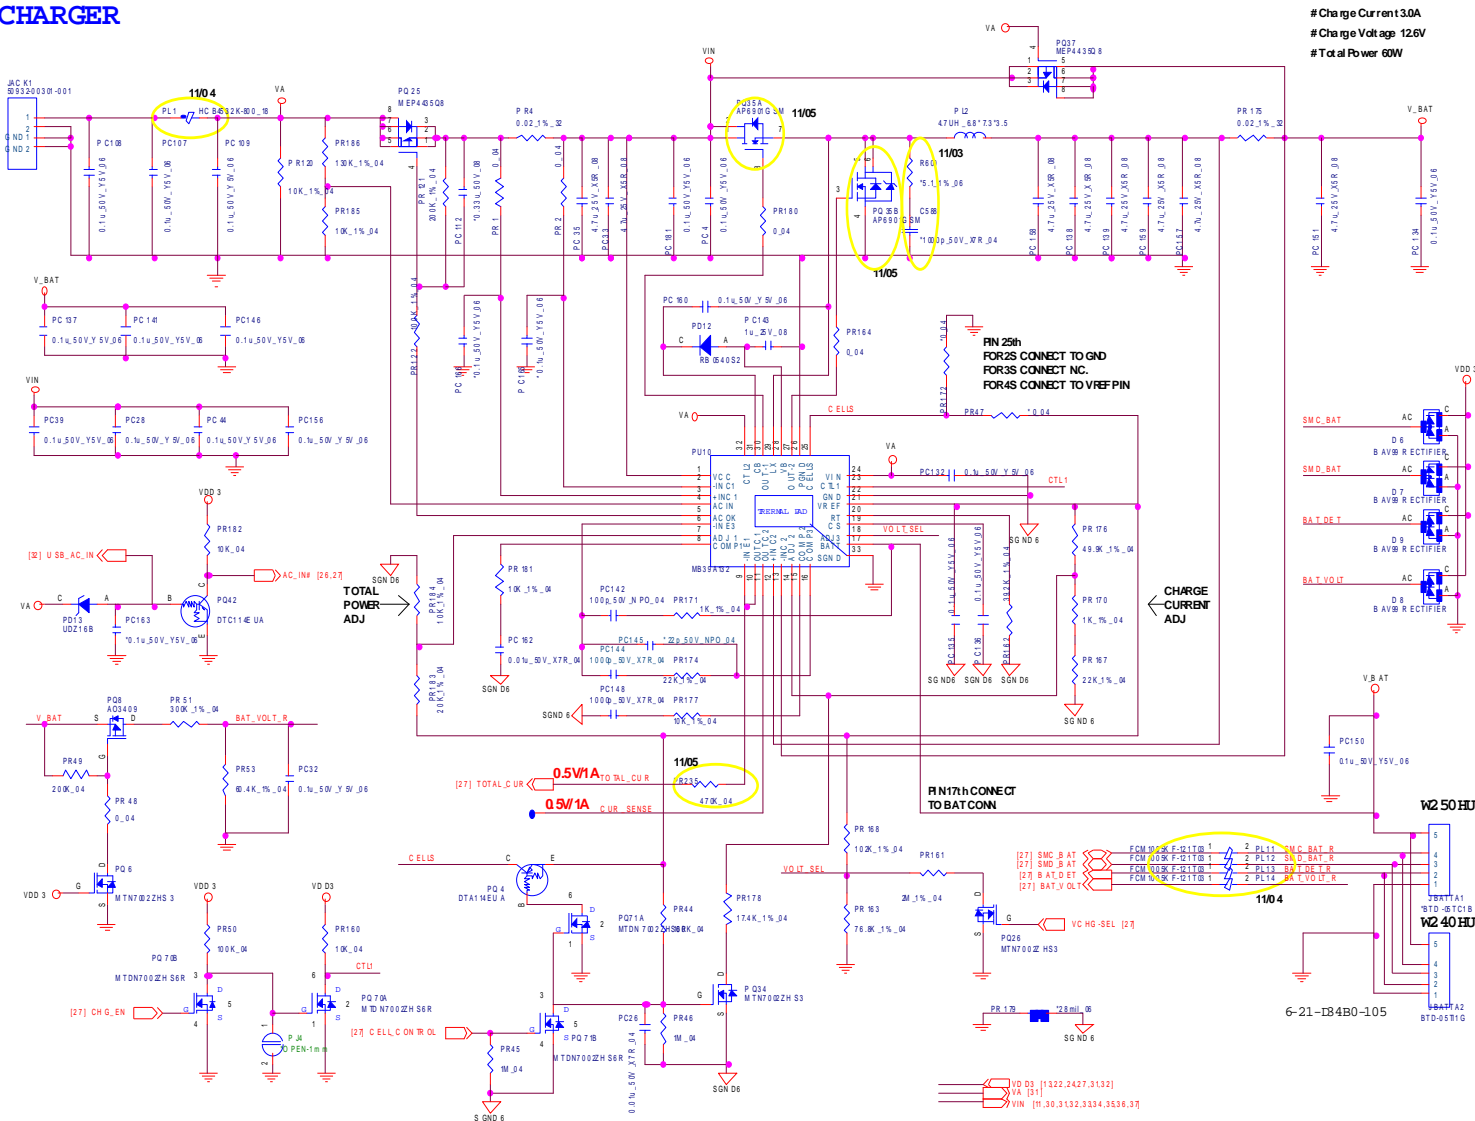

Sheet 38 of 43
Charger, DC In










B.Schematic Diagrams

Schematic Diagrams

Click Board



CLICK BOARD

Sheet 39 of 43
Click Board

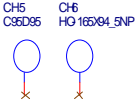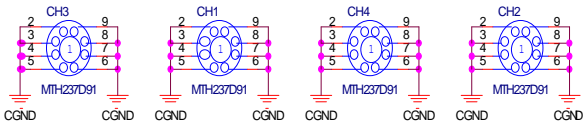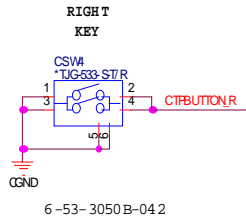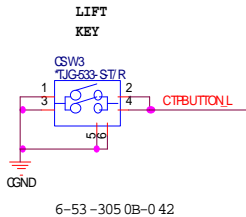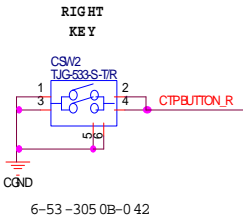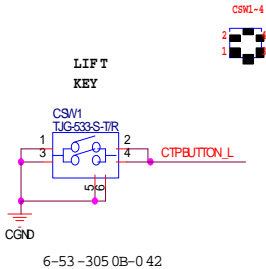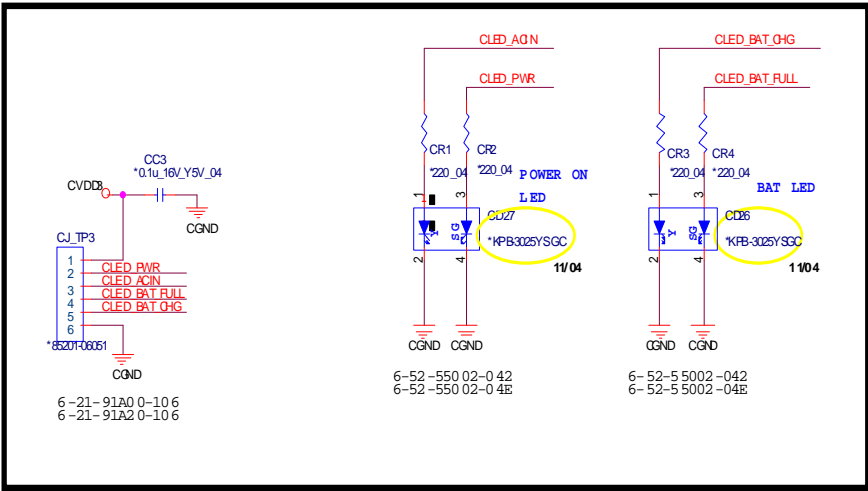
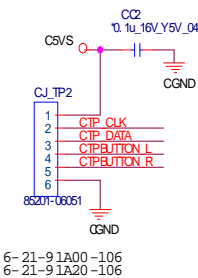
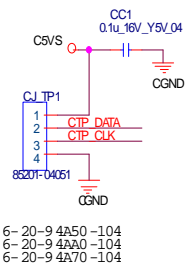


Audio Board/USB



USB PORT

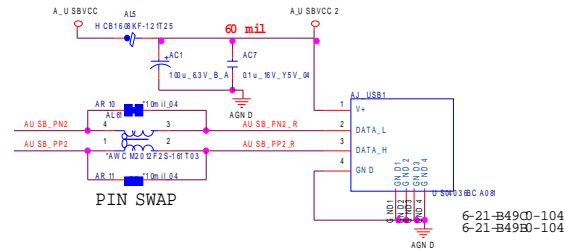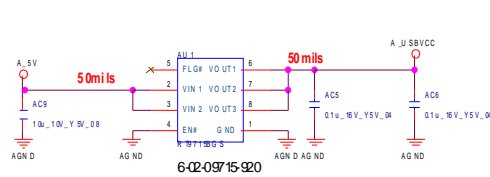

TO M/B

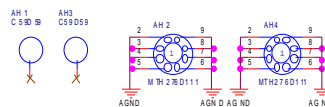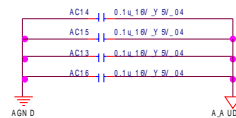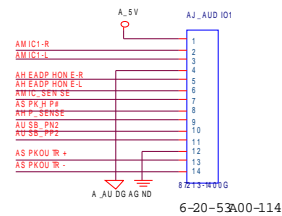

AUDIO JACK

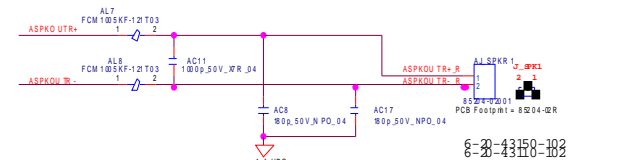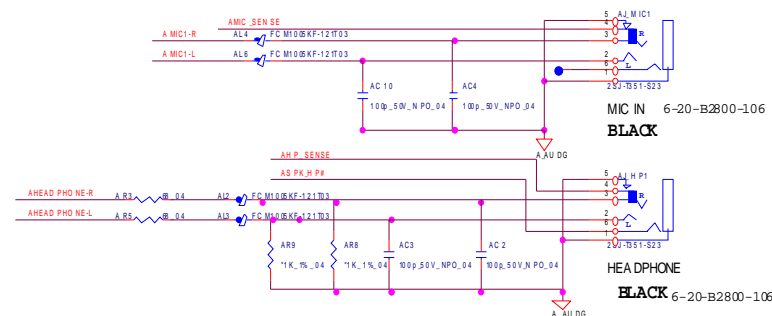

Sheet 40 of 43
Audio Board/USB


B.Schematic Diagrams

Schematic Diagrams


Power Switch & LID Board

POWER SW & LED & HOT KEY

Sheet 41 of 43
Power Switch & LID Board

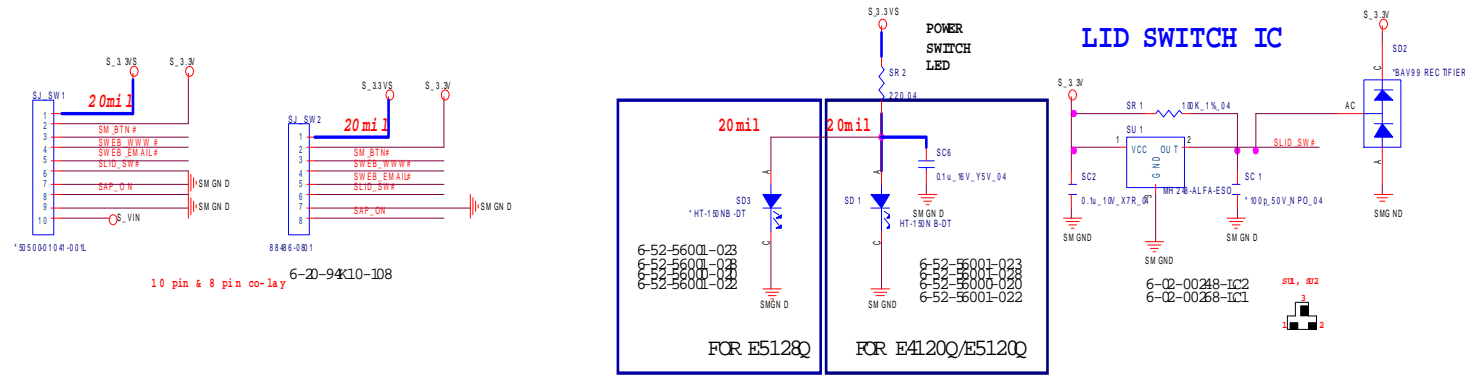

HOT KEY

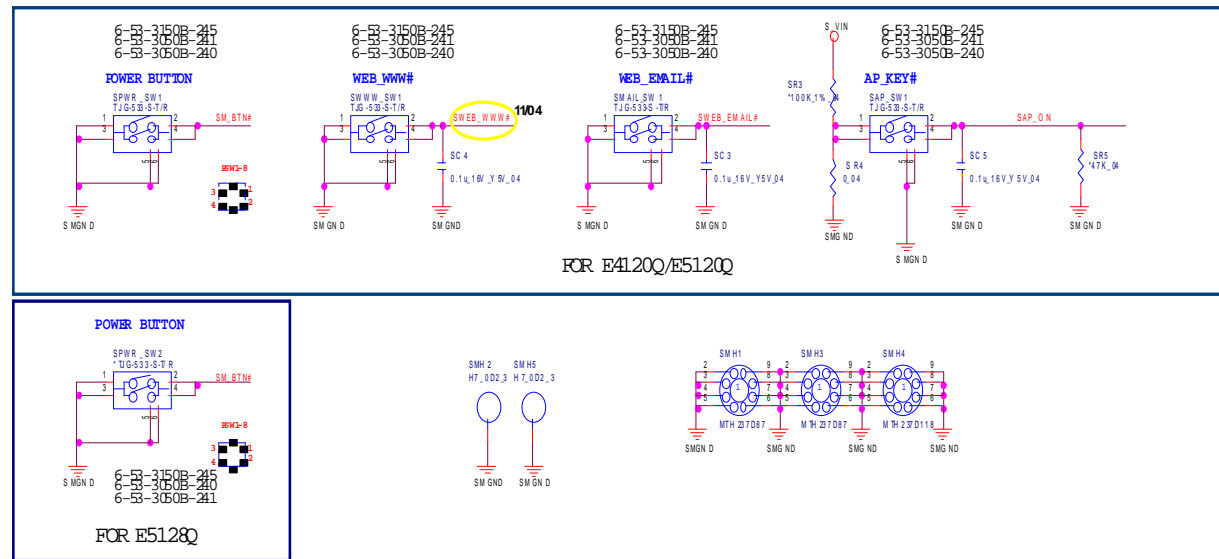

Appendix C: Updating the FLASH ROM BIOS

To update the FLASH ROM BIOS you must:

- Download the BIOS update from the web site.
- Unzip the files onto a bootable CD/DVD/USB Flash Drive.
- Reboot your computer from an external CD/DVD/USB Flash Drive.
- Use the flash tools to update the flash BIOS using the commands indicated below.
- Restart the computer booting from the HDD and press **F2** at startup enter the BIOS.
- Load setup defaults from the BIOS and save the default settings and exit the BIOS to restart the computer.
- After rebooting the computer you may restart the computer again and make any required changes to the default BIOS settings.

Download the BIOS

1. Go to www.clevo.com.tw and point to **E-Services** and click **E-Channel**.
2. Use your user ID and password to access the appropriate download area (BIOS), and download the latest BIOS files (the BIOS file will be contained in a batch file that may be run directly once unzipped) for your computer model (see sidebar for important information on BIOS versions).

Unzip the downloaded files to a bootable CD/DVD/ or USB Flash drive

1. Insert a bootable CD/DVD/USB flash drive into the CD/DVD drive/USB port of the computer containing the downloaded files.
2. Use a tool such as Winzip or Winrar to unzip all the BIOS files and refresh tools to your bootable CD/DVD/USB flash drive (you may need to create a bootable CD/DVD with the files using a 3rd party software).

Set the computer to boot from the external drive

1. With the bootable CD/DVD/USB flash drive containing the BIOS files in your CD/DVD drive/USB port, restart the computer and press **F2** (in most cases) to enter the BIOS.
2. Use the arrow keys to highlight the **Boot** menu.
3. Use the “+” and “-” keys to move boot devices up and down the priority order.
4. Make sure that the CD/DVD drive/USB flash drive is set first in the boot priority of the BIOS.
5. Press **F10** to save any changes you have made and exit the BIOS to restart the computer.



BIOS Version

Make sure you download the latest correct version of the BIOS appropriate for the computer model you are working on.

You should only download BIOS versions that are V1.01.XX or higher as appropriate for your computer model.

Note that BIOS versions are not backward compatible and therefore **you may not downgrade your BIOS to an older version** after upgrading to a later version (e.g if you upgrade a BIOS to ver 1.01.05, you **MAY NOT** then go back and flash the BIOS to ver 1.01.04).

BIOS Update

Use the flash tools to update the BIOS

1. Make sure you are not loading any memory management programs such as HIMEM by holding the **F8** key as you see the message “**Starting MS-DOS**”. You will then be prompted to give “**Y**” or “**N**” responses to the programs being loaded by DOS. Choose “**N**” for any memory management programs.
2. You should now be at the DOS prompt e.g: `DISK C:\>` (C is the designated drive letter for the CD/DVD drive/USB flash drive).
3. **Type the following command** at the DOS prompt:

C:\> Flash.bat

4. The utility will then proceed to flash the BIOS.
5. You should then be prompted to press any key to restart the system or turn the power off, and then on again but make sure you remove the CD/DVD/USB flash drive from the CD/DVD drive/USB port before the computer restarts.

Restart the computer (booting from the HDD)

1. With the CD/DVD/USB flash drive removed from the CD/DVD drive/USB port the computer should restart from the HDD.
2. Press **F2** as the computer restarts to enter the BIOS.
3. Use the arrow keys to highlight the **Exit** menu.
4. Select **Load Setup Defaults** (or press **F9**) and select “**Yes**” to confirm the selection.
5. Press **F10** to save any changes you have made and exit the BIOS to restart the computer.

Your computer is now running normally with the updated BIOS

You may now enter the BIOS and make any changes you require to the default settings.